



imagination at work

GE Digital Camera

E Series : E1480W



User Manual

Getting Started

Basic operation

Camera function controls

Playback

Using the Menus

Camera connectivity

Appendix

WARNING

Do not expose the camera battery pack or other accessories to rain or humidity to prevent fire hazard or electric shock.

For customers in the U.S.A.

Tested To Comply With FCC Standards FOR HOME OR OFFICE USE

FCC Statement

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

For customers in Europe



"CE" mark indicates that this product complies with the European requirements for safety, health, environment and customer protection. "CE" marked cameras are intended for sales in Europe.



This symbol [crossed-out wheeled bin WEEE Annex IV] indicates separate collection of electrical and electronic waste in the European countries. Please do not throw the equipment into the waste. Please recycle and dispose of properly.

Declaration of Conformity

Model Name: E1480W

Trade Name: GE

Responsible Party: General Imaging Co.

Address: 1411 W. 190th Street, Suite 550, Gardena,
CA 90248, U.S.A.

Customer Service Telephone Number:
+1-800-730-6597

(Outside U.S. & Canada: +1-310-755-6857)

Conforms to the following Standards:

EMC: EN 55022:1998/A1:2000/A2:2003 Class B
EN 55024:1998/A1:2001/A2:2003
EN 61000-3-2:2000/A1:2001
EN 61000-3-3:1995/A1:2001

following the provision of the EMC Directive (89/336/EEC,
2004/108/EEC)

SAFETY PRECAUTIONS

Camera notes:

- ❗ Do not store or use the camera in the following environments:
 - In the rain, and in humid or dusty environments.
 - In a place where the camera can be exposed directly to the sunlight or subject to high temperature, e.g. Inside a closed car in summer.
 - In a place where the camera is subject to a high magnetic field, e.g. near motors, transformers or magnets.
- ❗ Do not place the camera on a wet surface or places where dripping water or sand may come in contact with the camera.
- ❗ If the camera will not be used for a long period of time, remove the battery and the memory card from the camera and store them in dry environment.
- ❗ If you carry the camera suddenly from a cold location to a warm place, moisture may condense inside the camera. It is suggested that you wait for a while before turning on the camera.
- ❗ The warranty does not cover any type of data loss or corruption.

Battery notes:

- ❗ Incorrect use of the batteries may cause them to leak, become hot, ignite or burst. Always observe the following precautions.

- Do not expose the batteries to water, and take particular care to keep the terminals dry.
- Do not heat the batteries or throw them into a fire.
- Do not attempt to deform, disassemble or modify the batteries.

- ❗ Keep the batteries out of reach of babies and small children.
- ❗ In cold locations, battery performance deteriorates and battery life is significantly shortened.

Memory card notes:

- ❗ When using a new memory card, be sure to format the card with your digital camera before using it.
- ❗ Do not change or delete the folder names or file names in the memory card from your PC, the camera will not be able to display those edited files on the its LCD screen. To edit image data, copy the image data to the PC's hard disk first.
- ❗ The photos taken by this camera are stored in the auto-generated folder in SD card. Please do not store photos that are not taken by this model of camera, as this may make it impossible to recognize the picture when the camera is in playback mode.

BEFORE YOU START

Preface

Thank you for purchasing this GE digital camera. Please read this manual carefully and keep it in a safe place for future reference.

Copyright

© Copyright 2010 General Imaging Company All rights reserved.

No part of this publication may be reproduced, transmitted, transcribed, stored in a retrieval system, or translated into any language or computer language, in any form, by any means, without the prior written permission of General Imaging Company.

Trademarks

All trademarks mentioned in this manual are used for identification purposes only and are properties of their respective owners.

Safety Information

Please read the following important information carefully before using the product.

- Do not take apart or attempt to service the camera yourself.
- Do not drop or knock the camera. Improper handling may damage the product.
- Turn off the camera before inserting or removing the battery and memory card.
- Use only the type of battery that comes with the camera. Using other types of batteries may damage the camera and void the warranty.
- Do not touch the camera lens.
- Please not expose the camera to harsh environments such as moisture, or extreme temperatures, which may shorten the life of your camera or damage the batteries.
- Do not operate or store the camera in dusty, dirty, or sandy environments.

- Do not expose the lens to direct sunlight for extended periods.
- Download all pictures and remove the batteries from the camera if you are going to store the camera for long periods of time.
- Do not use abrasive cleansers, alcohol-based, or solvent-based cleansers to clean the camera. To clean, wipe the camera with a slightly damp soft cloth.

About This Manual

This manual provides you with instructions on how to use your GE digital camera. Every effort has been made to ensure that the contents of this manual are accurate, however General Imaging Company reserves the right to make changes without notice.

Symbols used in this manual

Throughout this manual, the following symbols are used to help you locate information quickly and easily:



Indicates the useful information to know.



Indicates precautions to be taken while operating the camera.

CONTENTS

WARNING	i	Turning On and Off	13
SAFETY PRECAUTIONS	ii	Using the Mode Button	14
BEFORE YOU START	1	Setting Date/Time and Language	15
Preface	1	Setting the Date and Time	15
Copyright	1	Setting the Language	16
Trademarks	1	About the LCD Screen	17
Safety information	1	BASIC OPERATION	18
About this manual	2	Shooting in Auto Mode	18
Symbols used in this manual	2	Using the Zoom Function	18
CONTENTS	3	Basic Functions Menu	19
GETTING READY	7	Flash	19
Unpacking	7	Self-timer/Continuous Capture	20
Camera Views	8	Macro Mode	20
Charging the Battery	10	Exposure Compensation	20
Insert the Battery and SD/SDHC Card (Not included)	11	Advanced Functions Menu	21
		WB (White Balance)	22
		ISO	22

Quality	23	Manual Scene Mode (SCN)	32
Size	23	Sport	32
Color	24	Indoor	32
USING THE MODES	25	Snow	33
LCD Screen Display	25	Fireworks	33
Still Picture Mode Display	25	Museum	33
Video Shooting Mode Display	27	Night Landscape	33
Playback Mode Display	28	Children	33
Auto Scene Mode (ASCN)	29	Leaf	33
Landscape	29	Sunset	33
Portrait	29	Glass	33
Night Portrait	30	Landscape	33
Backlit Portrait	30	Night Portrait	33
Night Landscape	30	Face Detection	35
Macro	30	Smile Detection	36
Auto	30	Blink Detection	37
Panorama	30		

PLAYBACK	38	OIS Stabilization	48
Viewing Photos and Videos	38	Movie Menu	49
Thumbnail View	39	Continuous AF	50
Using Zoom on Playback (for still pictures only)	40	Expo Metering (Exposure Metering)	50
Using the Delete Button	41	Playback Menu	51
USING THE MENUS	42	Protect	51
Still Menu	42	Delete	52
AF Mode (Auto-Focus mode)	43	DPOF (Digital Print Order Format)	53
AF-assist Beam	43	Trim	54
Continuous AF	44	HDR-High Dynamic Range.....	54
Expo Metering (Exposure Metering)	44	Resize	55
Continuous Shot	45	Rotate	55
Date Imprint	46	Red-eye Reduction	56
Quick Review	46	Display Setup	56
Digital Zoom	47	Slideshow	57
Slow Shutter	47	Wallpaper Settings	57
Blink Detection	48	Menu Wallpaper.....	58
		Startup Screen.....	58

Back To Default	59	Connecting to a PC	68
Setup Menu	60	Setting the USB Mode	68
Beep	61	Transferring Files to your PC	68
LCD Brightness	61	Connecting to a PictBridge Compatible Printer	70
Power Saver	62	Setting the USB Mode	70
Zone	62	Connecting the Camera and Printer	71
Date/Time	63	Using the PictBridge Menu	72
Language	63	Print with Date	72
File and Software	63	Print without Date	73
Format Memory.....	63	Print Index	74
File Numbering	64	Print DPOF	75
Copy to Card (Copy internal memory to memory card)	64	Exit	75
Reset Settings	65	APPENDICES	76
FW Version (Firmware version)	65	Specifications : E1480W	76
Transmission.....	66	Error Messages	80
Video System	66	Troubleshooting	82
Connecting Your Camera to a HDMI TV to View Videos..	67		

 
GETTING READY

Unpacking

Your package should contain the camera model you purchased along with the following items. If anything is missing or appears to be damaged, please contact General Imaging.




Warranty Card



CD-ROM



 
Wrist Strap



USB Cable



 
Rechargeable Lithium-ion battery




Battery charger

Camera Views



Front View

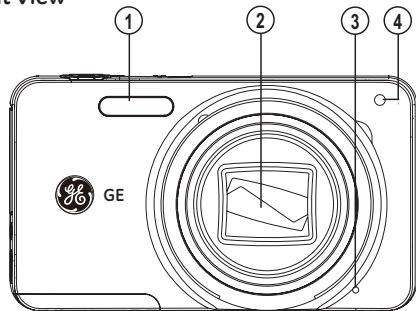


Back View

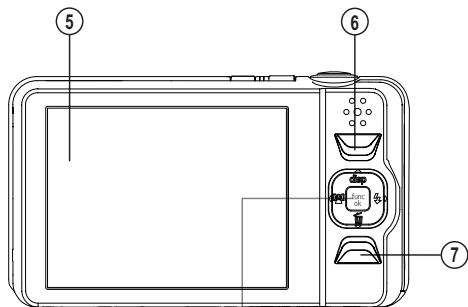


Right View

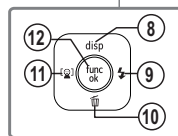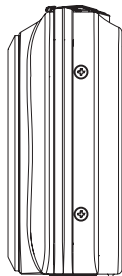


Top View

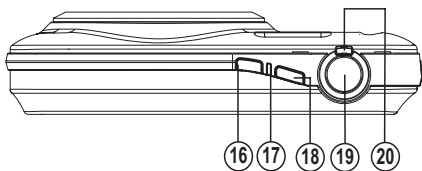

Bottom View

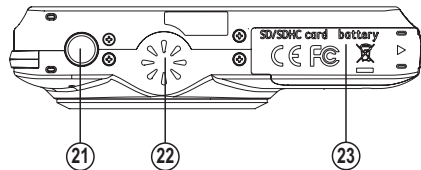


Left View

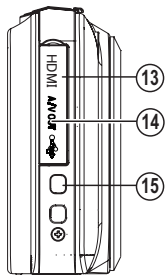



1	Flash	13	HDMI Port
2	Lens	14	USB/AV Port
3	Mic	15	Wrist Strap Mount
4	AF assist beam/Timer indicator	16	Power Button
5	LCD Screen	17	Power Indicator
6	Mode Selection Button	18	Playback Button
7	Menu Button	19	Shutter Button
8	Disp/Up Button	20	Zoom Wheel
9	Flash Mode/Right Button	21	Tripod Mount Point
10	Delete Button/Down Button	22	Speaker
11	Face Detection/Left button	23	Memory Card/Battery Compartment
12	Function/OK Button		

Charging the Battery

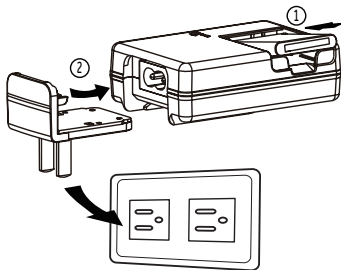1. Place the battery into the charger as shown.
2. Plug the one end of the connecting cable (plug adapter) into the charger base.
3. Plug the other end of the connecting cable into a wall outlet.





 Leave the battery to charge until the charger light turns green. (To maximize battery life, the first charge should be at least 4 hours)



 The charger is for indoor use only.

Insert the Battery and SD/SDHC Card (Not included)



1. Open the battery compartment.

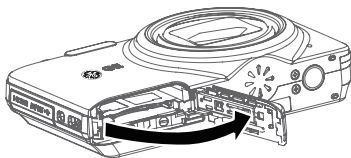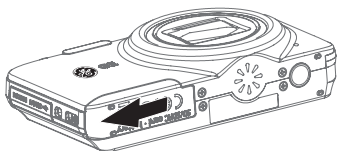



2. Insert the battery while observing the correct polarity. Use the side of battery to press down the stopper as shown, allowing the battery to lock into place properly.

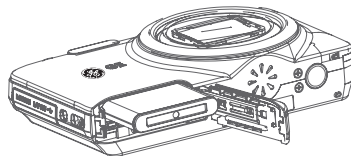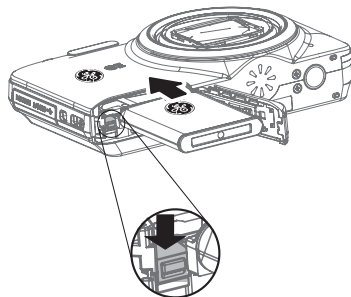

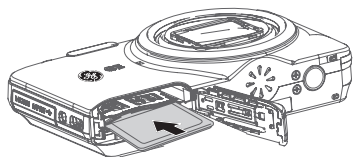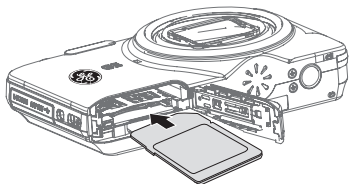

3. Insert an SD/SDHC card (not included) into the memory card slot as shown.

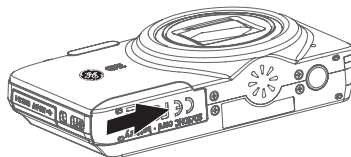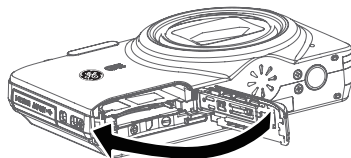

4. Close the battery compartment.




 Optional SD/SDHC cards are not included. The use of 64 MB to 16 GB memory cards from recognized manufacturers such as SanDisk, Panasonic and Toshiba is recommended for reliable data storage.

 To remove the SD/SDHC card, open the battery compartment and gently push the card to release it. Pull the card out carefully.

Turning On and Off

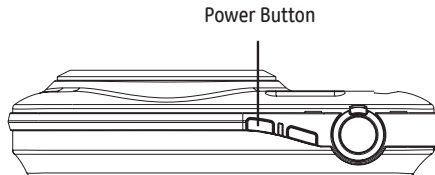


 


Press the Power button to turn the camera on. To turn off the camera, press the Power button again.



When the camera is turned on, it will be at the same shooting mode based on the last use. You can use the Mode button on the back to change modes. When using the camera for the first-time, the language setup page will appear. Please see page 15 or the Quick Start Guide in the package for details.

Using the Mode Button



The GE camera provides a convenient Mode Button that allows you to switch between different modes easily. After pressing the mode button to enter mode selection menu, press Left/Right button to choose the mode, press func_{ok} to select. All the available modes are listed as follows:

Mode Name	Icon	Description
Auto mode		The camera sets all the settings automatically.
Manual mode		Switch to take still pictures in manual mode, where many camera settings can be configured. (Recommended for advanced users only)
Panorama mode		Switch to capture three shots and stitch them together into a panoramic photo.
Scene mode	SCN	Switch to take still pictures in 12 different scene types by your choice.
Movie mode		Switch to record videos.
ASCN mod		Switch to have the camera automatically select the best scene type for still pictures.
Portrait		Switch to take portrait pictures.

Setting Date/Time and Language

Setting the Date and Time

1. Press the menu button. Scroll over to the General Setup menu indicated by a wrench icon. Use the **Up/Down** button to select **Date/Time**. Then press the **Right** button to enter the setting.
2. Press the **Left/Right** to highlight each field and use the **Up/Down** to adjust the value.
3. Press the **func_{ok}** button to confirm the setting.

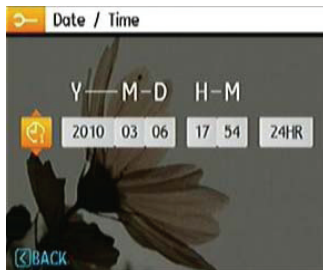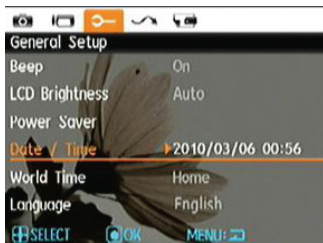

Setting the Language

1. Press the menu button. Scroll over to the General Setup menu indicated by a wrench icon. Use the **Up/Down button** to go to the **Language**. Then press the **Right button** to enter the setting.
2. Use the Left/Right buttons to select the desired language.
3. Press the **func**
ok button to confirm the setting.



The Date/Time and Language setup will automatically appear when the camera is turned on the first time.

About the LCD Screen

When you turn the camera on, various icons are shown on the LCD screen to indicate the current camera settings and status. To learn more about the displayed icons, see “LCD Screen display” on page 25.

LCD Screen notes:

Extremely high-precision technology has been used to manufacture the LCD screen so that most of the pixels are operational for use. However, there may be some minute points (black, white, red, blue or green) that constantly appear on the LCD screen. These points are normal in the manufacturing process and the recording is not affected in any way.



Avoid exposing the LCD screen to water; please remove any moisture on the LCD screen with a soft dry cleaning cloth.



If the LCD monitor is damaged, take particular care with the liquid crystal in the monitor. If any of the following situations arise, take the recommended immediate action indicated below:


- If liquid crystal comes in contact with your skin, wipe the area with a cloth and then wash thoroughly with soap and running water.
- If liquid crystal gets into your eye, flush the affected eye with clean water for at least 15 minutes and then seek medical assistance.
- If liquid crystal is swallowed, flush your mouth thoroughly with water. Drink large quantities of water and induce vomiting. Then seek medical assistance immediately.

BASIC OPERATION

Shooting in Auto Mode


 
Auto mode is the easiest mode to take photos. While operating in this mode, the camera automatically optimizes your photos for best results.

To start shooting, do the following:

1. Press **Power** to turn the camera on.
2. In the **Mode** menu, select the **Auto** mode ().
3. Compose your picture on the LCD screen and press the **Shutter** button halfway to focus on the subject.
4. The focus frame in the middle of the LCD will turn to green when the subject is properly in focus.
5. Press **Shutter** fully to capture the image.

Using the Zoom Function

Your camera is equipped with two types of zoom: optical zoom and digital zoom. Use zoom control at the top of the camera to zoom in or out on your subject while taking pictures.

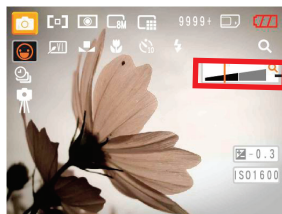

Zoom indicator (See "Digital Zoom" on page 47)


When the optical factor reaches its maximum value, it stops momentarily. Release and push the zoom wheel again, and the optical zoom will switch over to digital zoom automatically. After the adjustment, the zoom indication scale hides immediately, and the current zoom status is indicated by the following symbol **TQ**.

Basic Functions Menu


The Basic Function Menus of the camera include Flash, Self-timer, Macro Capture, and Exposure Compensation.

Set the basic functions as per the following steps:

1. Pull up the Basic Function Menus by pressing Right/Flash button.

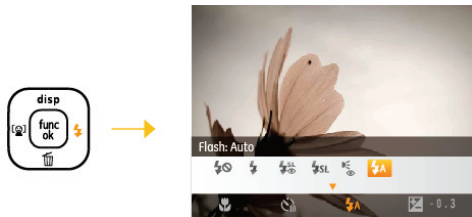



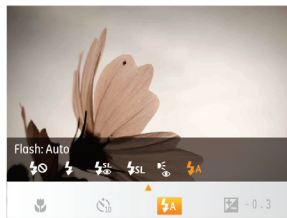

2. Press Left/Right button to select the settings of the required function.
3. Press **func ok** button to confirm the settings and exit the menu, or press Down button to enter the selection screen of Basic Function.






4. Press Left/Right button to select the basic functions required to set, press Up button to enter the setting screen for selecting basic functions, or press **func ok** button to confirm the settings and exit the screen.


Flash

- **⚡A** Flash: Auto
Camera flash fires if camera determines it is needed.
- **👁️** Flash: Red-eye reduction
Red eye is caused by the subject looking directly at the flash and the resulting light reflecting off of the retina of the eye. Red eye is eliminated by firing a smaller initial flash prior to the main flash to cause the subject not to look directly at the flash.



-  Flash: Forced flash
Flash always fires.
-  Flash: Forced off
Flash is turned off.
-  Flash: Slow Synchro
This allows you to take pictures of people at night that clearly show the subject. The shutter is held open longer to allow more light to the image sensor.
-  Flash: Red-Eye+Slow Synchro
Using this mode for slow synchro shots with red-eye reduction.

Self-timer/Continuous Capture

-  Self-timer: 2 sec
A single picture is shot 2 seconds after the Shutter button is pressed.
-  Self-timer: 10 sec
A single picture is shot 10 seconds after the Shutter button is pressed.
-  Self-timer: Unlimited
Pictures are shot continuously when the Shutter button is pressed down based on the Continuous Shot settings in the menu. (See "Continuous Shot" on page 45).


-  Self-timer: Off
Disables the self-timer.

Macro Mode

-  Macro: On
Select this to focus on subjects 5cm from the lens.
-  Macro: Off
Select this option to disable Macro.

Exposure Compensation

The exposure compensation allows you to adjust the light exposure value and shoot the best photo.

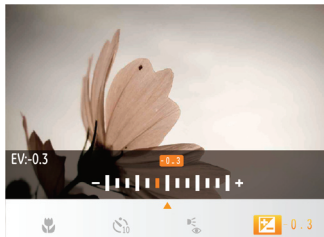


The adjustable range of exposure value is from EV -2.0 to EV+2.0.

Advanced Functions Menu

The Advanced Functions Menu of the camera include Image Size, Image Quality, White Balance, Image Color and ISO.

Set the advanced functions as follows.

1. Pull up the Advanced Function Menu by pressing **func ok** button.

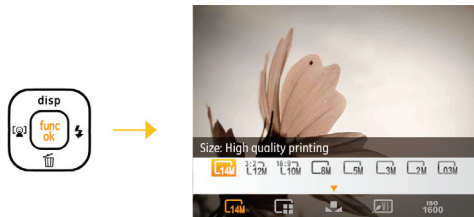

2. Press Left/Right button to select the settings of the required function.
3. Press **func ok** button to confirm the settings and exit the menu, or press Down button to enter the selection screen of Advanced Functions.










4. Press Left/Right button to select the advanced functions required to set, press Up button to enter the setting screen for selecting advanced functions, or press **func ok** button to confirm the settings and exit the screen

WB (White Balance)

The White Balance allows you to adjust the color temperature under different lighting conditions. (The WB setting is only available when the camera is in the **M** Manual mode).



The options of White Balance include:

-  WB: Auto
-  WB: Daylight
-  WB: Cloudy
-  WB: Fluorescent
-  WB: Fluorescent CWF
-  WB: Incandescent
-  WB: Manual(Press the shutter button to set WB.)

ISO

The ISO function allows you to set the sensitivity of the camera sensor to light. To improve the performance in darker environments, a higher ISO value is required. On the other hand, a lower ISO value is needed when in bright conditions. (The ISO setting is only available when the camera is in the **M** Manual mode).

Pictures at higher ISO will naturally have more noise than those at lower ISO.



The options of ISO include automatic, 80, 100, 200, 400, 800, 1600 and 3200.



The available ISO values vary on different camera models.

Quality

The quality setting determines how much the camera compresses the photo files. The higher the compression, the smaller the file size will be, but the quality will decrease. The lower the compression, the larger the file size, but the better the quality.



The three levels of compression are:

-  : Quality: Best
-  : Quality: Fine
-  : Quality: Normal

Size

The size setting refers to the image resolution in pixels. A higher image resolution allows you to print that image in larger sizes without degrading the image quality.





The larger the pictures are, the bigger the file sizes are and the less pictures you can store on a memory card.

Color

The color setting allows you to add artistic effects directly when taking pictures. You can try different color tones to alter the mood of your pictures. (The Color setting is only available when the camera is in the **M** Manual mode).



The color options include:



-  Color: Auto
-  Color: Vivid
-  Color: Black & White
-  Color: Sepia

USING THE MODES

LCD Screen Display

Still Picture Mode Display

Mode:

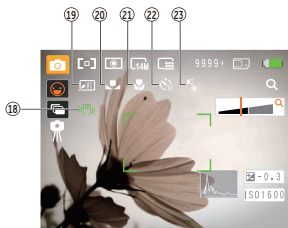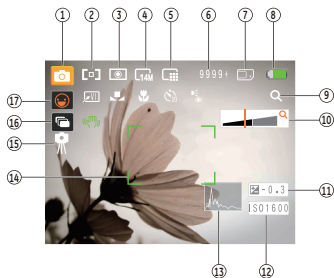

1 Shooting Mode Icons

- | | | | |
|--|---------------|--|-------------|
| | Auto mode | | Manual mode |
| | ASCN mode | | Scene mode |
| | Panorama Mode | | Portrait |

2 AF Mode


 



- Single-AF
- Multi-AF

3 Expo Metering



- Spot
- Center
- AiAE

4 Image Size







5 Image Quality

- 6 Remaining number of pictures
- 7 Memory card/built-in memory
- 8 Battery Status
- 9 WT Ratio (Displayed only when zoom is activated)
- 10 Zoom
- 11 Exposure
- 12 ISO Value (Adjustable only in  Manual Mode)
- 13 Histogram
- 14 Focus Frame
- 15 Slow Shutter Warning
- 16 Continuous Shot
- 17 Face Detection
- 18 OIS
 -  Continuous ON
 -  In shooting
- 19 Picture Color (Adjustable only in  Manual Mode)
- 20 White Balance (Adjustable only in  Manual Mode)
- 21 Macro Mode

22 Self-timer


-  Self-timer: 2 sec
-  Self-timer: 10 sec

23 Flash Mode

-  Flash: Auto
-  Flash: Red-eye reduction
-  Flash: Forced flash
-  Flash: Forced off
-  Flash: Slow Synchro
-  Flash: Red-eye+Slow Synchro

Video Shooting Mode Display

Mode : 

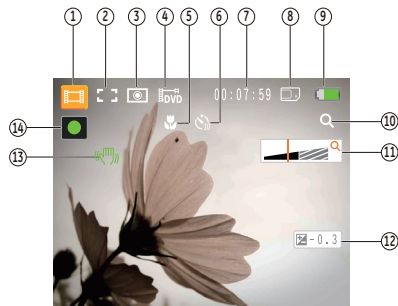

1 Video Mode icon

2 Continuous AF

3 Metering



Spot



Center



AiAE

4 Image Size

5 Focus Frame

6 Self-timer



Self-timer: 2 sec



Self-timer: 10 sec

7 Remaining Time for Video Recording

8 Memory Card/Built-in Memory

9 Battery Status

10 WT Ratio (Displayed only when zoom is activated)

11 Zoom

12 Exposure

13 OIS



Continuous ON



In shooting

14 Recording Status Icon



Recording standby



Recording




In order to shoot video, it is recommended that an SD card be used.



When shooting video, the optical zoom is disabled.

Playback Mode Display

Mode: ▶

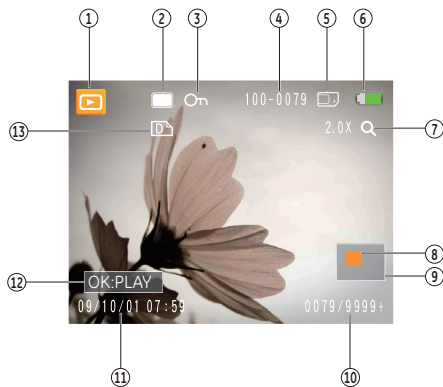

1. Play Mode icon
2. Picture File
3. File protection
4. Picture Number
5. Memory Card/Built-in Memory
6. Battery Status
7. Image Zoom
8. The current display area
9. Zoom area shown
10. Memory Space (this picture/Total number of pictures)
11. Recording Date and Time
12. OK:PLAY
13. DPOF file

Auto Scene Mode (ASCN)

In the "ASCN" mode, different conditions are detected intelligently and the most suitable settings will be automatically selected.

To use "ASCN":

1. Press Mode Selection button to select ASCN mode, LCD screen will be shown as follows.



2. Hold the camera steadily and aim at the subject. The optimum scene mode will be identified automatically.
3. Press the Shutter button halfway down to focus.
4. Press the Shutter button all the way down to take the picture.

Icon	Mode name	Icon	Mode name
	Landscape Mode		Night Landscape Mode
	Portrait Mode		Macro Mode
	Night Portrait		Auto Mode
	Backlit Portrait		

Landscape Mode

For landscapes, ASCN will automatically adjust the exposure to match the background.

Portrait Mode

For portraits, ASCN will automatically adjust the exposure and skin tones to give clear pictures.

Night Portrait

When you shoot portraits at night, or in low light conditions, ASCN will automatically adjust the exposure for people and night scenes.

Backlit Portrait

When the sun or any other light source is behind you, ASCN will automatically adjust the foreground exposure to produce good pictures.

Night Landscape Mode

For night scenes, ASCN will automatically increase the ISO value to compensate for low light.

Macro Mode

To capture object detail for close-ups, ASCN will automatically adjust the focus.


Auto Mode


The camera automatically adjusts the exposure and focus to ensure good pictures.




Panorama

Panorama Mode allows you to create a panoramic picture by stitching together several pictures.

Follow these steps to create a panoramic picture:

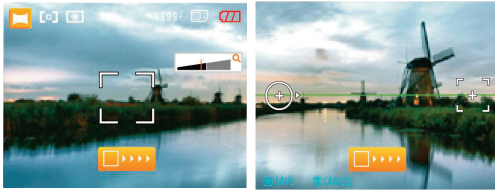1. Press Mode Selection button to select Panorama Synthesis mode 
2. Use the **Left/Right** buttons to specify the direction of picture taking, if no choice is made in 2 seconds the panoramic sequence will commence automatically.
3. Compose the first view of the panoramic picture on the LCD screen and press the Shutter button to capture.
4. After the first shot is taken, two target icons will appear on the left and right side of the LCD screen. Pan the camera in the specified direction and the circle will move towards the square frame icon. When the circle icon and square frame overlap they will become green and the camera will capture the next picture automatically.




5. The camera will then stitch the pictures automatically.
 6. Press the playback button to enter Playback mode and review the result.
-  After taking a Panoramic picture press the func/ok button to save and exit or press the Delete button to cancel and exit.
 -  Pictures cannot be deleted, nor the zoom adjusted until the series is finalized.
 -  Panorama Mode can stitch 4 maximum pictures.







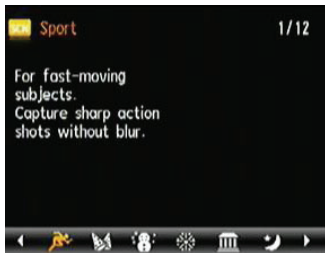





Manual Scene Mode (SCN)

In **Manual Scene** mode, you can select from a total of 12 scene types to match your needs. You just need to select the right scene for the occasion and the camera will automatically adjust to the optimal settings for you.

Press the **mode** button, select "ASCN" with the Left/Right button, and the LCD screen will show the figures as below.



Select a scene using the Left/Right button and press the **func** **ok** button.

Icon	Mode Name	Icon	Mode Name
	Sport		Indoor
	Snow		Fireworks
	Museum		Night Landscape
	Children		Leaf
	Sunset		Glass
	Landscape		Night Portrait

Sport

For fast-moving subjects. Capture sharp action shots without blur.

Indoor

For indoors. Reduce blur and improve color accuracy.

Snow

For snow scenes. Reproduce natural and clear white scenes.

Fireworks

For fireworks at night. Slow shutter speed adjusted for brilliant images.

Museum

For museum or flash-free area. Retain color and reduce blur.

Night Landscape

For night scenes. Use of tripod is recommended.

Children

For kids and pets. Flash is disabled for eye protection.

Leaf

For plants. Capture brilliant shots of greenery and blossoms.

Sunset

For sunsets. Capture subjects in strong sunlight.

Glass

For objects behind transparent glass.

Landscape

For landscapes. Vivid reproduction of green and blue.

Night Portrait

For portraits against night time scenery.

 




1. After selecting the scene type, press the **func**/**ok** button to select.
2. To select a different scene type, press the **func**/**ok** button to enter the main function menu. Then press it again to return to the to Scene selection menu.

The main function menu also allows you to adjust the image quality and image size. Please refer to the "**Advanced Functions Menu**" section on page 21 for detailed instructions.

Face Detection


The Face Detection mode will detect and enhance facial features.


1. In Shooting Mode, press the Left/Face Detection button to turn on the Face Detection and an icon () appears on the LCD.
2. Hold the camera securely, and point the camera towards the subject to start the face detection process. When the camera detects a face, a white rectangular frame will be drawn around the face. (Note: For best results, the face of the subject should be relatively large on the LCD screen, and the subject should be facing the camera as front on as possible.)
3. Press **Shutter** halfway to focus on the subject.
4. Press **Shutter** fully to capture the image.
5. Press the Left/Face Detection button to turn off Face Detection.

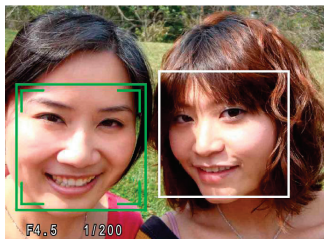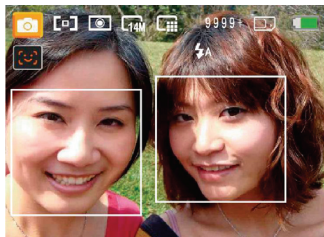


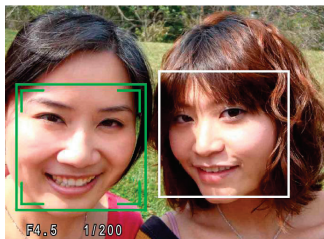
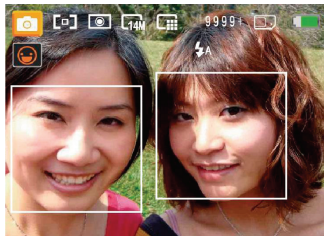
Smile Detection

With the "Smile Detection" feature, the camera automatically detects and captures a person smiling.

1. In Shooting Mode, press the Left/Face Detection button to turn on Smile Detection and an icon () appears on the LCD.
2. Point the camera at the subject until the subject's face is detected and bracketed by a square box. Press the Shutter button all the way down and release the Shutter button. The camera will now 'wait' for the subject to smile.
3. When the subject smiles, the camera will automatically release the shutter and capture the photo.
4. To disable Smile Detection function, please press Left or Shutter button.

 A face must be detected by the camera in order for smile detection to function correctly.

 For optimal detection results, the subject should be framed to occupy most of the screen space.



Blink Detection

The Blink Detection feature is on by default, and after taking each photo, a warning message will pop up if a blink has been detected in the photo.


1. In any Still Shooting modes, press the menu button to enter the photo menu.
2. Switch between different Photo Setup menus and Camera Setup menus using the Left/Right button, and select the "Blink Detection" setting using the Up/Down button.
3. Use the Right navigation buttons to enter the submenu, and select "On" option.
4. Press the func_{ok} button to confirm the setting and exit the menu.
5. Press the Shutter button fully to capture the image. A warning message will be shown on the LCD immediately after detecting someone has blinked in the picture.



A face must be detected by the camera in order for smile detection to function correctly.



For optimal detection results, the subject should be framed to occupy most of the screen space.


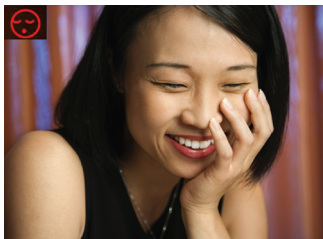


Viewing Photos and Videos

To view the captured photos and video clips on the LCD screen:

1. Press **[▶]** button to go to the **Playback** mode. The last recorded photo or video clip is displayed.
2. Use the **Left/Right** navigation buttons to scroll through the photos or video clips stored in the internal memory or memory card.
3. To play a selected video clip, press the **func**/**ok** button to enter the movie playback mode.


During video playback, the operating instructions will appear on the screen. Press the **Left/Right** button, and press the **func**/**ok** button for confirmation.

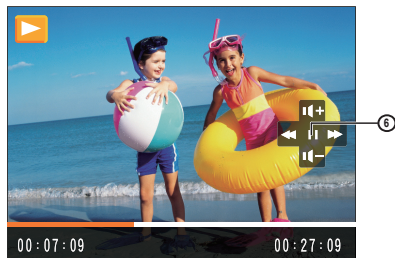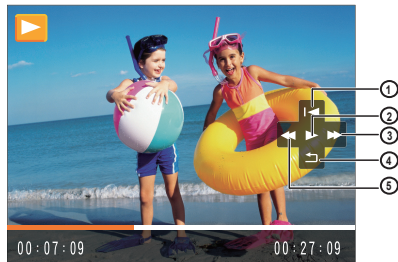

The operating instruction icons are as follows.

- | | | | |
|---|--------------|---|--------|
| 1 | First Frame | 4 | Back |
| 2 | Play | 5 | Rewind |
| 3 | Fast Forward | 6 | Pause |

During video playback, you can press the Up/Down button to adjust the volume.

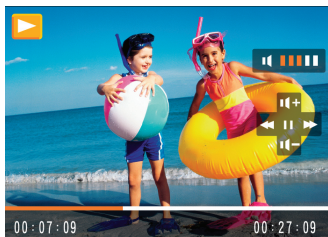


Thumbnail View

In Playback mode, turn the zoom control to display thumbnails of pictures and video clips on the LCD screen.

1. Display thumbnail with 2x2, 3x3 and 4x4 by switching the Zoom lever.
2. Use **Up/Down/Left/Right** to select a photo or video clip to view.





If the  indicator appears on the LCD, then a movie file is currently being displayed.



Press the **func**/**ok** button to restore a preview icon to its original image size.

Using Zoom Playback (for still pictures only)

When playing photo, you can also use zoom lever to zoom in it (2~8) times.

1. Press  button to go to the **Playback** mode.
2. Use the **Left/Right** navigation buttons to select a photo to magnify.
3. Adjust the Zoom lever to the side **T**  to zoom in the photo.
4. Use the Zoom Wheel to enlarge the image. The zoom indication area will be shown by the icons in the lower right corner of the display screen.



5. Use the navigation buttons to pan across the image.
6. Press the **func**/**ok** button to return the image to its original scale.




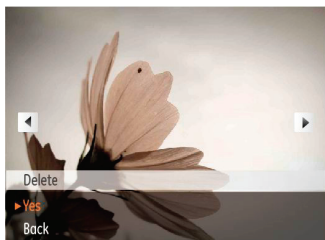
Movie images cannot be magnified.

Using the Delete Button

In Playback Mode, you can press the Down/Delete button to delete pictures or videos.

To delete pictures or videos:

1. Press  button to go to the Playback Mode.
2. Select a picture or video clip you want to delete with the Left/Right button.
3. Press the Down/Delete button and the delete screen appears.



4. Select Yes or Back with Up/Down button and press the ^{func}ok button for confirmation.



Erased photos/video clips cannot be recovered.



Please refer to page 52 for instructions on the Delete Menu options.

USING THE MENUS

Still Menu

Mode:    SCN 


In any of the above Still Picture Modes, press the menu button to go to the Still Picture menu.

To adjust each setting:

1. In the Still Picture menu, switch between different Photo Setup or Camera Setup pages using the Left/Right button, to select the page with the function you want to adjust and press the Down button.



2. Press the Up/Down buttons to select the function.
3. Press the Right button to go to the submenu.

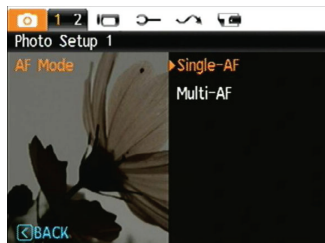

4. Press Up/Down button to select an option or press the Left or menu button to return to the menu.
5. Press the func / ok button for confirmation and exit the menu.




After selecting a function, you can press the Up button to return to the Still Picture menu for other Photo Setup or Camera Setup pages. Or you can press the Down button several times to move to the next setup menu page.

Refer to the following pages for more details about each setting.

AF Mode (Auto-Focus mode)

Use this setting to control the auto-focus mechanism while taking pictures.

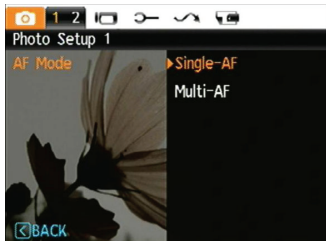


Two options are available:

- **Single-AF:** The focus frame appears on the center of the LCD screen to focus on the subject.
- **Multi-AF:** The camera uses multiple parts of the picture to correctly focus.


AF-assist Beam

This option can turn on or turn off AF assist lamp. The AF assist lamp assists the camera in focusing correctly in low light conditions. It is not recommended that this be turned off or the camera may not focus correctly.

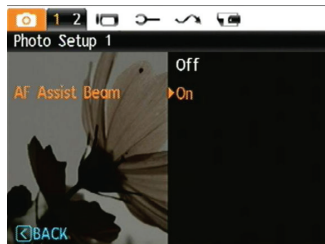

Continuous AF

The camera continuously focuses as the subject moves such as a sports player.

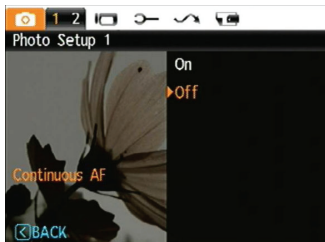

Expo Metering (Exposure Metering)

This setting determines what part of the picture the camera uses to determine the correct exposure for the whole picture.



Three options are available:

- Spot
- Center-Weight
- AiAE (Artificial Intelligence AE)


Continuous Shot


Use this setting to perform continuous shooting. Once in this mode, you must continuously hold down the Shutter button to take multiple frames.



Four options are available:


- **Continuous shooting:** Press and hold the shutter to shoot continuously until you release the shutter or when the memory card has run out of space.
- **3 shot:** Capture up to 3 consecutive pictures.
- **3 shots (Last):** Capture pictures continuously until the Shutter button is released but only the last 3 shots are recorded.
- **Time-Lapse:** Automatically capture pictures in a pre-defined interval.

 The flash is designed not to work in this mode in order to enable quick succession of shots.

 Continuous Shot can only be selected in Self-timer Mode.

Date Imprint


Include a Date/Time stamp in the photo image.

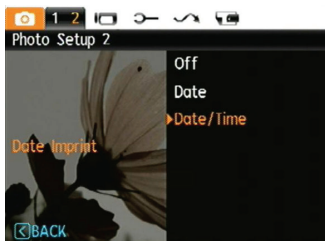

- Off
- Date
- Date and Time

Quick Review

This setting refers to the quick photo review immediately after taking a picture. The picture stays on the LCD screen for an adjustable period of time.

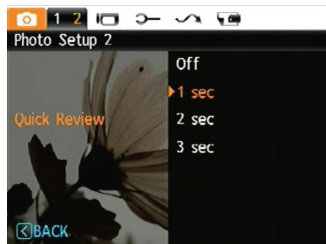


Four options are available:

- Off
- 1 sec
- 2 sec
- 3 sec


Digital Zoom

Use this setting to enable or disable the digital zoom function. When disabled, only the optical zoom is enabled.

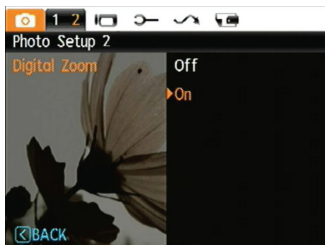

Slow Shutter

In Slow shutter mode, the shutter will remain open as long as the Shutter button is pressed. This gives you complete control over the duration of exposure. (The slow shutter mode is available only in **M** manual mode.)

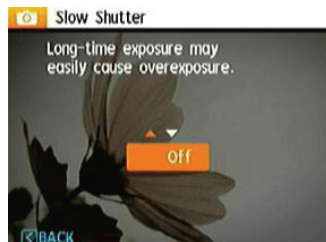


- **Manual** : To set a long exposure time between 2~30 sec.



The use of tripod is recommended for prolonged exposure.

Blink Detection


The Blink Detection feature is on by default, and after taking each photo, a warning message will pop up if a blink was detected in the photo.

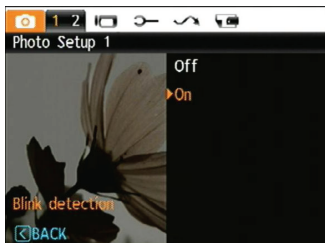

- Off
- On

OIS Stabilization

Turning on the OIS Stabilization will avoid blurred images caused by hand shake and deliver sharper photos. (This function is not available in panorama mode.)

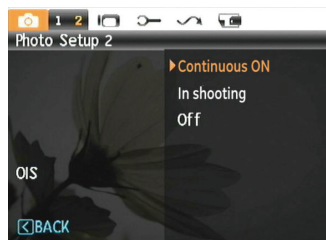


- Continuous ON
- In shooting
- OFF



Shooting in a windy or unstable environment (such as moving vehicle) may cause blurred images.


Movie Menu

Mode: 


In the Movie Mode, press the menu button to go to the corresponding Movie menu.

To configure each setting:

1. In the Movie menu, switch between the Movie Setup or different Camera Setup pages using the Left/Right button, select the page with the function you want to adjust and press the Down button.

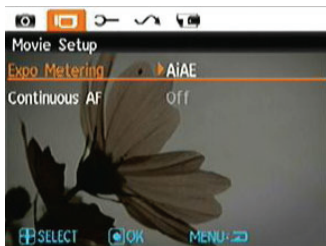

2. Press the Up/Down button to select the function and press the Right button to go to the submenu.

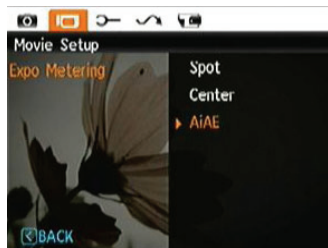


3. Press the Up/Down button to select an option or the Left or menu button to return to the menu.
4. Press the func_{ok} button for confirmation and exit the menu.

Refer to the following pages for more details about each setting.


Continuous AF

The camera continuously focuses as the subject moves such as a sports player.

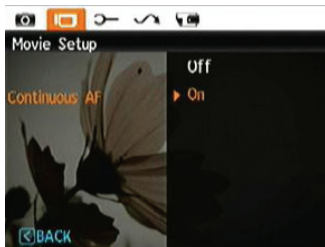

Expo Metering (Exposure Metering)

This setting determines what part of the picture the camera uses to determine the correct exposure for the whole picture.

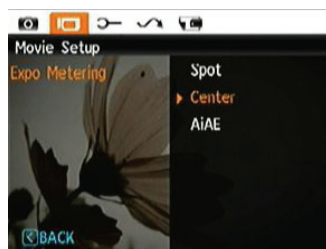


Three options are available:

- Spot
- Center
- AiAE (Artificial Intelligence AE)

Playback Menu

Mode : 


In Playback mode, press the **menu** button to enter the **Playback** menu.

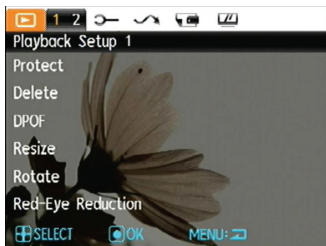


Please refer to the following sections for detailed instructions on the various menu options.


Protect

To prevent any pictures or videos from being accidentally erased, use this setting to lock one or all of the files.

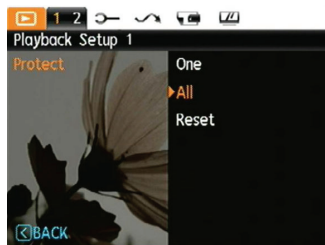

 
To protect/unprotect a picture or video:

1. Press  button and find the picture or video you want to protect by using Left/Right button. Once it is displayed on the screen, go to the Playback menu, select Protect settings and press the Up/Down button to make your selection.
2. Press the Up/Down button to select the protection setting option and press the Right button to go to the submenu.

- Use the **Up/Down** navigation buttons to select **One** to protect this picture/video, or select **All** to protect all pictures/videos in the internal memory or memory card. Then press the **Right** navigation button to enter the submenu.
- Press the **func ok** button to select **Yes** to lock. For locked picture/video, use **Unlock** option to unlock it.
- A key () icon will appear on the top of the screen to indicate that the picture/video is protected.
- Select **Reset** on the Protection setting to remove protection for all files that have been placed in the protected mode.

Delete

There are two ways to delete files.

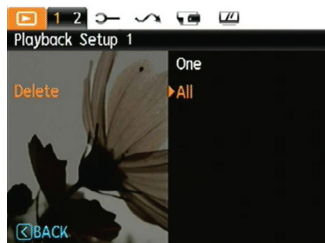

• Delete One:

- On the **Delete** setting, select **Delete One** and then press the **Right** button.
- Using the **Left/Right** buttons, locate the photo or movie file to be deleted. Select **Yes** (to delete file) or **No** (to return to the previous menu) using the **Up/Down** buttons, then press the **func ok** button to confirm.

- **Delete All:**

1. On the Delete setting, select **Delete All** and then press the **Right** button.
2. Using the **Up/Down** buttons, select **Yes** (to delete all files) or **No** (to cancel and return to the previous menu).



The “🔒” indicator means a file is protected. File protection must be removed first before a file can be deleted.



Deleting files will cause DPOF settings to be reset.

DPOF (Digital Print Order Format)


DPOF allows you to record your selection of pictures that you would like to print, and will save your selection in the memory card, so that you can simply hand your memory card to a photo kiosk without having to tell them in person which photos you would like to print.




Trim

The Trim setting allows you select an area of the photo you want to keep and then save it as a new photo.

To trim a picture:

1. Select the **Trim** setting from the  menu.
2. Using the **Left/Right** buttons, locate the photo that you want to crop and have it displayed on the LCD.
3. Use the zoom buttons and navigation buttons to adjust the trimming box to fit the location and size of the new picture.

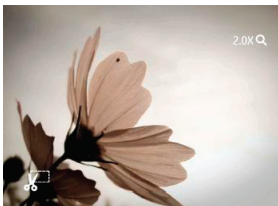


4. Press the **Shutter** button to save what you see on the LCD screen as a new picture, or the **menu** button to cancel and return to the **Playback** menu.




The image can not be cropped again when it is cropped to 640X480.

HDR-High Dynamic Range

With the HDR function, pictures that may be overexposed may be corrected to optimize the highlights and lowlights captured to more accurately represent the real scene.

1. Select HDR setting in  menu as described previously.
2. Press Left and Right button to find picture you want to optimize and then select Confirm to perform HDR optimization or select Return to go back to Playback menu.

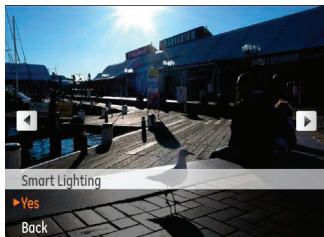

3. After using HDR function, the image will be saved as a new file, and the original file is still stored in the memory.

Resize

This setting allows you to resize a picture to a specified resolution, and saves it as a new picture.

1. Select the **Resize** setting from the **Playback** menu as described previously.



2. Use the **Left/Right** navigation buttons to select a picture to resize.
3. Use the **Up/Down** navigation buttons to select a resolution (1024X768 or 640X480) to resize the image or **Back** to cancel and return to the **Playback** menu.
4. Press the **func**/**ok** button to confirm the setting.




Resizing an image creates a new file that contains the image in the size you select. The file with the original image also remains in memory.

Rotate

You can use this setting to change the picture orientation of the picture.

1. Select the **Rotate** setting from the **Playback** menu as described previously.
2. Use the **Left/Right** navigation buttons to select a picture to rotate.
3. Use the **Up/Down** navigation buttons to select the direction for rotation or **Back** to cancel and return to the **Playback** menu.

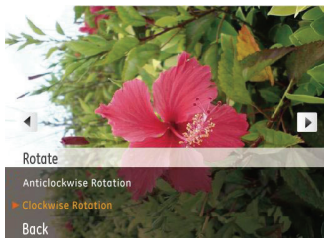

4. Press the **func**/**ok** button to confirm the setting.

Red-eye Reduction

Use this setting to remove red eye in your photos.

1. Select the **Red-eye Reduction** in **Playback** menu as described previously.
2. Use the **Left/Right** button to select the picture from which the red eye needs to be removed.
3. Use the **Up/Down** navigation buttons to select **Yes** to fix the selected image or **Back** to cancel and return to the **Playback** menu.



4. Press the **func/ok** button to confirm the setting.




For best results, the face of the subject should be relatively large on the LCD screen, the subject should be facing the camera as front on as possible, and the red eyes should be as large as possible.

Display Setup

Mode: 

Press **menu** button in **Playback** mode to enter **Display Setup** menu.

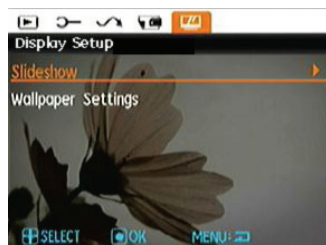


Refer to the following sections for details of every setting.

Slideshow

This setting allows you to view all the stored pictures as a slideshow.

1. Select the slideshow menu, press the right button to enter the options menu.
2. Use the Up/Down navigation buttons to select Effect, Interval time, or Repeat and use the Left / Right navigation buttons to adjust the setting.

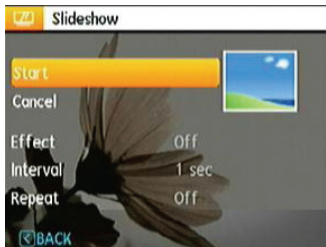


3. Use the Up/Down navigation buttons to select Start to run the slideshow or Cancel to return to the Playback menu.
4. Press the func_{ok} button to confirm the setting.


Wallpaper Settings

Use this setting to select your favorite picture to use as a background on the LCD screen.

1. Press Down button to select the Wallpaper Setting menu.

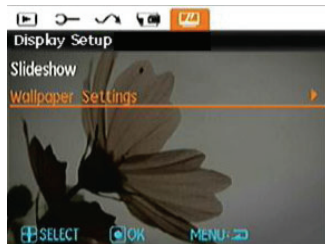


2. Press Right button, and the camera will enter the Wallpaper Setting interface.

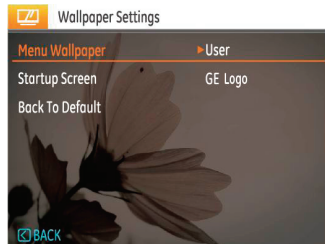

Menu Wallpaper:


Use Up/Down button to select the Menu Wallpaper option, press **func** button to confirm or press Left button to return to last page, and press **menu** to exit the menu.

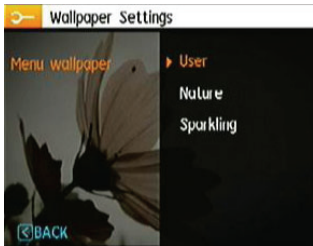

- User
- Nature
- Sparkling

Startup Screen:


Use Up/Down button to select the Startup Screen option, press **func** button to confirm or press Left button to return to last page, and press **menu** to exit the menu.

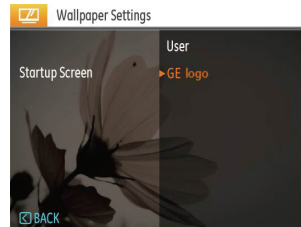

- User
- GE logo

Back To Default:

Use Up/Down button to select Back To Default, press ^{func}ok to confirm or press Left button to return to last page, and press ^{menu} to exit the menu.

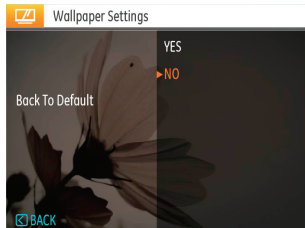


- Yes
- No

Setup Menu

Mode :        

The Setup menu for the camera is available in all modes. Each menu page can be selected by pressing the **menu** button and switching between menus with the Left/Right button.

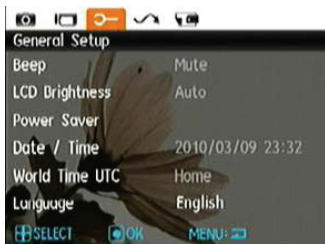

To adjust the settings:

1. Select the menu page with the function you want to adjust and press the Down button.

2. Switch between different functions with the Up/Down button.
3. Press the **Right** button to enter the submenu.



After selecting a function option, you can press the Up button to return to the menu for other Camera Setup pages. Or you can press the Down button to switch to the next menu page.


Refer to the following pages for more details about each setting.

Beep

Use this setting to adjust the volume of beep when buttons are pressed and change the tones for Shutter button, self-timer, and power-on/power-off.

To change this setting:

1. Select the **Beep** setting from the **Setup** menu as described previously.
2. Use the **Up/Down** navigation buttons to switch between volume, shutter tone, key tone, self-timer tone, and power tone fields.

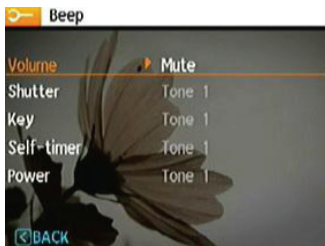


3. Press the Right button, press the Up/Down button to adjust volume and change tone, and press the **func**/**ok** button to confirm setting.

LCD Brightness

Use this setting to adjust the brightness of your LCD screen.


1. Select the **LCD Brightness** setting from the **Setup** menu as described previously.
2. Select auto or adjust the brightness level using the Left/Right button, and press the **func**/**ok** button to confirm the setting.

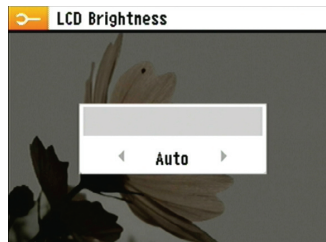

Power Saver

This setting allows you to save power and get the maximum possible running time for your battery. Follow the steps below to turn off the LCD screen and camera automatically after a period of inactivity.

1. Select the **Power Saver** setting from the **Setup** menu as described previously.
2. Press the Up/Down button to select the power items for the screen and camera and press the Right button.

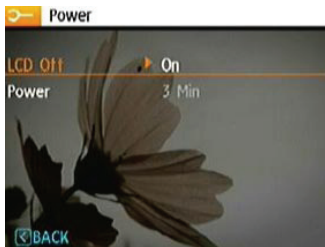



3. Press the Up/Down button to adjust the selected item. Both items have the following options:

- Turn off the LCD:
30 sec, 1 min, 2 min, and off.
 - Turn off the camera:
3 min, 5 min, 10 min, and off.
4. Press the func_{ok} button to confirm.

Zone

The Zone setting is a useful function on your overseas trips. This feature enables you to display the local time on the LCD screen while you are overseas.

1. Select the **Zone** setting from the **Setup** menu as described previously. The world time screen appears.
2. Use the Up/Down navigation buttons to switch between the hometown () and travel destination () fields.
3. Use the Left/Right navigation buttons to select a city close to the desired time zone. Then press the func_{ok} button to confirm.



Date/Time

See "Setting the Date and Time" section on page 15.

Language

See "Setting the Language" section on page 16.


File and Software

Format Memory

Please note: formatting enables you to delete all contents in the memory card and built-in memory, including protected photo and movie files.

To use this setting:

1. Select the Format in File and Software menu.
2. Use the Up/Down navigation buttons to select Yes or No. Then press the func_{ok} button to confirm.

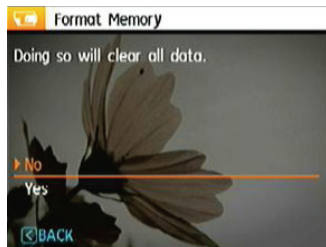


3. The current media is formatted.

File Numbering

After you take a picture or video clip, the camera will save it as file that ends with a serial number. You can use this item to choose whether the file is consecutively numbered or begins with 1 and is saved in another folder on the memory card.

1. Select the File Name in File and Software menu.
2. Select the option with the Up/Down button and press the **func**
ok button for confirmation.

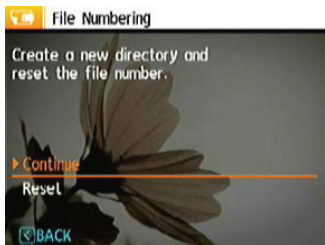

Copy to Card (Copy internal memory to memory card)

Use this setting to copy the files stored in the internal memory to the memory card.

1. Select the **Copy to memory card** in File and Software menu.
2. Use the **Up/Down** navigation buttons to select **Yes** or **No**. Then press the **func**
ok button to confirm.



Reset Settings

Use this setting to restore the camera to its default settings.

1. Select the **Reset** setting in File and Software menu.
2. Use the **Up/Down** navigation buttons to select **Yes** or **No**. Then press the **func**/**ok** button to confirm.



FW Version (Firmware Version)

Use this setting to view the current camera firmware version.

1. Select the **FW Version** in File and Software menu.
2. If SD card contains a new version of firmware, please upgrade accordingly as necessary.




To update to the latest firmware version, you can go to the following website: www.ge.com/digitalcameras and look under Support.

Transmission

Video System

Use this setting to determine your video system in the current area.

1. Select the **Video System** in **Connection Setup** menu.
2. Use the **Up/Down** navigation buttons to select **NTSC** or **PAL**. Then press the **func** button to confirm.

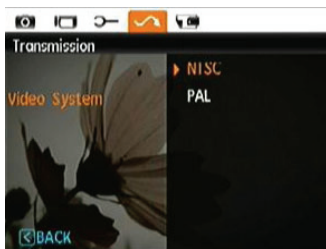

The video output signal can be switched to NTSC or PAL to accommodate different regional standards. The appropriate setting will vary between regions.

NTSC: USA, Canada, Taiwan, Japan, etc.


PAL: Europe, Asia (excluding Taiwan), Oceania, etc.

Note: The TV output will not display properly if an incorrect video system is selected.

Connect Your Camera to a HDMI TV to View Videos

HDMI (High Definition Multimedia Interface), is a fully digital audio/video transmission interface, through which uncompressed audio and video signals are transmitted.

Direct transmission of digital video signals to your TV reduces conversion loss and improves image viewing quality.

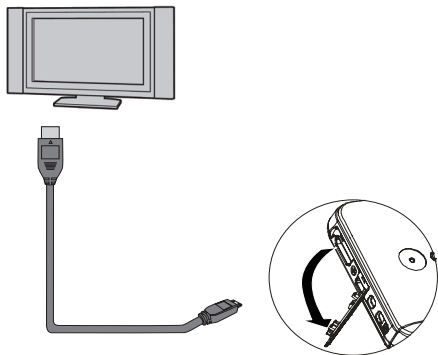

Connect the camera to a HDMI TV

1. Select [NTSC] or [PAL] based on the TV video format (see page 66) and turn off your camera.
2. Use a high-definition output terminal cable (optional) to connect your camera to an HDMI compliant TV.
3. The camera will automatically determine if the connected display supports 1080i resolution. If the display supports the resolution, select the resolution you prefer on the menu shown on the camera and the display will display the images at the specified resolution. If the display does not support the resolution, it will automatically display images at the highest resolution possible.
4. Once an output format is selected, the LCD screen on the camera will go blank (although it is still on) and your TV will then display the images and menus.

- ⓘ Note that your camera and TV should be turned off before connecting them.
- ⓘ When the resolution is set to 1920 x 1080i, you can playback pictures only, and video playback is not possible. The maximum TV resolution for video playback is 1280 x 720P.
- ⓘ Refer to your TV instruction manual for information on what resolution sizes it will support. The resolution and output formats that are not supported will be grayed out on the camera's LCD screen.


Connecting to a PC

Use the USB cable supplied with your camera to copy (transfer) pictures to a computer.

Setting the USB Mode

Since the camera's USB port can be set to connect with either a PC or a Printer, the following steps will allow you to ensure that the camera is correctly configured to connect with a PC. The USB mode is set to PC by default.

1. Go to the camera setting menu, select USB connection with the Up/Down button, and press the Right button.
2. Use the Up/Down navigation buttons to select PC.
3. Press the **func**/**ok** button to confirm the setting.

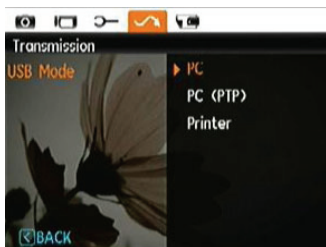


Transferring Files to Your PC

The computer will automatically detect the camera as a removable drive. Double-click **My Computer** icon on the desktop to locate the removable drive and to copy the folders and files in the drive to a directory on your PC as you would copy any other folder or file.

By using the USB cable, you can transfer the captured photos and videos to a PC. Follow the steps below to connect the camera to a PC.

1. Make sure both the camera and PC are turned on.
2. Connect one end of the supplied USB cable to the USB/AV OUT port on your camera.
3. Connect the other end of the cable to an available USB port on your PC.

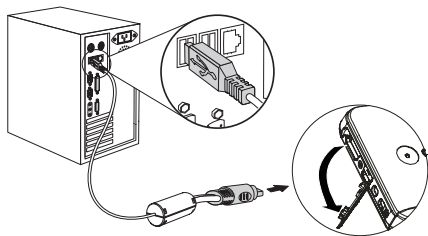

4. Disconnect the camera once transfer is completed.

If the USB option is set to [PC] :

 
Turn the camera off and disconnect the USB cable.

If the USB option is set to [PC (PTP)] :

Remove the camera from the system as described below before turning the camera off and disconnecting the USB cable.


Windows operating system (Windows 2000, Windows XP, Windows Vista, Windows 7.)

Click the [Safely remove the hardware] icon and remove the USB connector according to the appeared menu.



Macintosh

Drag the untitled icon to the Trash. ("Untitled")

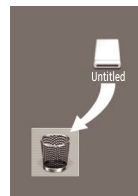

Connecting to a PictBridge Compatible Printer



PictBridge allows printing images from a memory card in a digital camera directly to a printer, regardless of brand. To find out if a printer is PictBridge compatible, simply look for the PictBridge logo on the packaging or


check the printer manual. With the PictBridge function on your camera, you can print the captured photos directly with a PictBridge compatible printer using the supplied USB cable, without the need for a PC.

Setting the USB Mode

Since the camera's USB port can be set to connect with either a PC or a Printer, the following steps will allow you to ensure that the camera is correctly configured to connect with a Printer.

1. Go to the camera setting menu, select USB connection with the Up/Down button, and press the Right button.
2. Use Up/Down to select Printer.


3. Press the **func**/**ok** button to confirm the setting.

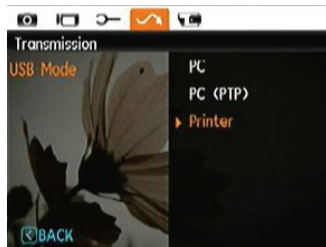


-  After the camera is reset, it will switch to PC mode automatically from USB mode.


Connecting the Camera and Printer.

1. Make sure both the camera and printer are turned on.
2. Connect one end of the supplied USB cable to the USB port on your camera.
3. Connect the other end of the cable to the USB port on the printer.

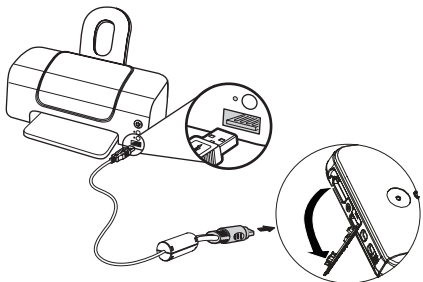


If the camera is not connected to a PictBridge compatible printer, the following error message appears on the LCD screen.

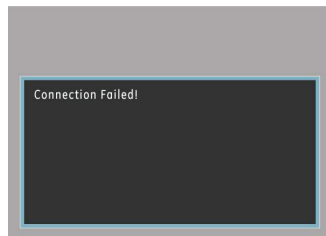

-  The above error message would also appear if the USB mode were set incorrectly, in which case you should disconnect the USB cable, check the USB mode settings, ensure that the Printer is turned on, and then try connecting the USB cable again.

Using the PictBridge Menu

After setting the USB mode to Printer, the **PictBridge** menu appears.

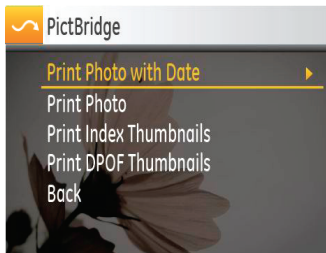


Select a menu item with the Up/Down button and press the Right button or **func**/**ok** button to enter the item.

Refer to the following sections for more detailed information on each setting.

Print with Date

If you have set the date and time of your camera, the date and time will be recorded and saved with each photo you take.

1. Select **Print with date** from the **PictBridge** menu. The following screen appears.

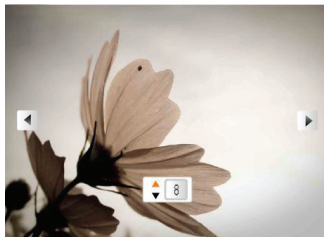

2. Use the **Left/Right** navigation buttons to scroll through the photos.

- Use the **Up/Down** navigation buttons to select the number of prints for the current displayed photo.
- Press the **func**/**ok** button and the following screen appears.




- Select **Yes** to confirm the printing, or **Cancel**. Then press the **func**/**ok** button.


Print without Date

Use this setting to print the photos without dates on them.

- Select **Print without date** from the **PictBridge** menu. The following screen appears.

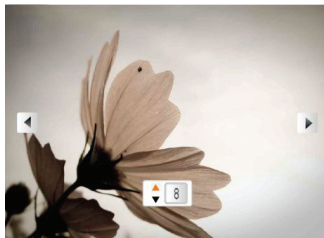

- Use the **Left/Right** navigation buttons to scroll through the images.
- Use the **Up/Down** navigation buttons to select the number of prints for the current displayed image.
- Press the **func**/**ok** button and the following screen appears.

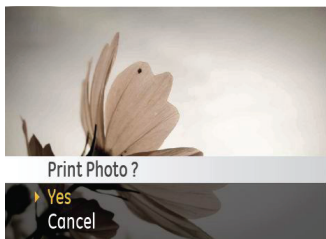


5. Select **Yes** to confirm the printing, or **Cancel**. Then press the **func** button.

Print Index

You can use this setting to print all indexes to show all the photos currently in your camera.

1. Select **Print index** from the **PictBridge** menu. The following screen appears.

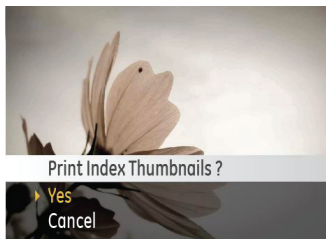


2. Select **Yes** to confirm the printing, or **Cancel**. Then press the **func** button.

Print DPOF (Digital Print Order Format)

To use DPOF printing, you must make the selection of photos for printing using the DPOF settings before hand. See “DPOF” section on page 53.


1. Select **Print DPOF** from the **PictBridge** menu. The following screen appears.

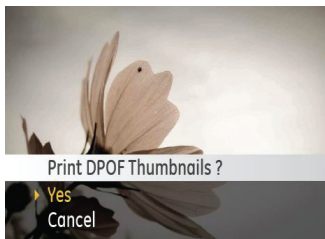

2. Select **Yes** to confirm the printing, or **Cancel**. Then press the **func** button.
ok

Exit

To exit the **PictBridge** menu, select **Exit**. The “Remove USB cable” message will be displayed.

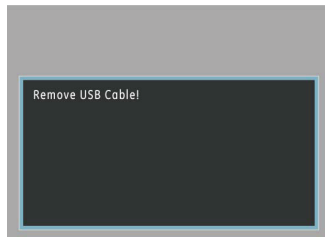

Disconnect the USB cable from the camera and printer.

APPENDICES

Specifications : E1480W



Design and specifications are subject to change without notice.

Effective Image Sensor Pixels		14.1 Megapixels
Image Sensor		14.2 Megapixels [1/2.3" (CCD)]
Lens	Focal Length F =	5.1mm (Wide) ~ 40.8mm (Tele)
	35mm film equivalent	28mm (Wide) ~ 224mm (Tele)
	F number	F3.3 (Wide) ~ F5.8 (Tele)
	Construction	12 elements in 8 groups
	Optical Zoom	8X
	Focusing Range	Normal: (Wide) 60cm ~ ∞, (Tele) 100cm ~ ∞; Macro: (Wide) 5cm ~ 100cm, (Tele) 100cm ~ ∞
Anti-Handshake		OIS
Digital Zoom		6X digital zoom (Combined Zoom: 48X)

Number of Recording Pixels	Still Image	14MP, 12MP(3:2), 10MP(16:9), 8MP, 5MP, 3MP, 2MP, 0.3MP
	Movie	1280x720pixels: 30fps/15fps, 640x480pixels: 30fps/15fps, 320x240pixels: 30fps/15fps
Image Compression		Best, Fine, Normal
DCF, DPOF (Ver1.1) Support		Yes
File Format	Still Image	Exif 2.2 (JPEG)
	Movie	MPEG-4/H.264, Audio: G.711 [Monaural]]
Shooting Modes		Auto, Manual, Auto-Scene, Scene (Sport, Indoor, Snow, Fireworks, Museum, Night Landscape, Children, Leaf, Sunset, Glass, Landscape, Night Portrait), Portrait, Panorama, Video
Smile Detection		Yes
Blink Detection		Yes
Face-Detection		Yes
Red-eye Removal		Yes

Pan-Capture Panorama	Yes
LCD Display	3.0 inch (230,400 pixels) LTPS (low-temperature polycrystalline silicon) TFT color LCD
ISO Sensitivity	Auto, ISO 80/100/200/400/800/1600/3200
AF Method	Single AF, Multi-AF (TTL 9-point), AF Assist Light (On/Off)
Light Metering Method	Artificial Intelligence AE (AiAE), Center-weighted Average, Spot (Fixed to center of frame)
Exposure Control Method	ProgramAE (AE-lock available)
Exposure Compensation	±2 EV in 1/3 Step increments
Shutter Speed	4 ~ 1/2000 second (Manual 30 s)
Continuous Shooting	Approx. 1.39 fps (Large/Fine mode)
Playback Modes	Single Photo, Index (4/9/16 thumbnails), Slide Show, Movie (Slow-Motion possible), Zoom (Approx. 2X~8X), Audio, Histogram Display
White Balance Control	Auto (AWB), Daylight, Cloudy, Fluorescent , Fluorescent CWF, Incandescent, Manual


Internal Flash (Shooting Range)	Auto/Red-Eye Reduction/Forced Flash/No Flash/Slow Synchro/Red-Eye Reduction+Slow Synchro
	Shooting Range Wide: Approx. 0.3m~5.1m / Tele: Approx. 1.0m ~ 2.8m (ISO 800)
Recording Media	Internal Memory: 12MB
	SD Card/SDHC Card (Up to 16GB support)
Other Features	PictBridge, ExifPrint Support, Multi-language Support
Jacks	USB2.0/AV-OUT (Integrated Proprietary Connector)
Power	Rechargeable Lithium-ion Battery GB-10 (D016), 3.7V 700mAh
Shooting Capability (Battery Performance)	Approx. 180 shots (based on CIPA Standards)
Operation Environment	Temperature: 0~40°C, Humidity: 0~90%
Dimensions (W x H x D)	98.3mm x 56.8mm x (19.5~24.4) mm
Mass	Approx. 135g (Body only)

Error messages

Messages	Explanation
No card	<ul style="list-style-type: none">• The memory card is not inserted.
Card error	<ul style="list-style-type: none">• The memory card is not formatted.
Card full	<ul style="list-style-type: none">• The memory card is full and cannot store any new images.
Write protect	<ul style="list-style-type: none">• The memory card is write-protected.
Picture error	<ul style="list-style-type: none">• The picture is not captured correctly.• The picture is corrupted.
No picture	<ul style="list-style-type: none">• There are no images in the memory card or in the internal memory.
Lens error	<ul style="list-style-type: none">• The lens is probably stuck and the camera will power off automatically.
System error	<ul style="list-style-type: none">• Unexpected error encountered.
Image cannot be saved	<ul style="list-style-type: none">• The write protection switch in the memory card is set to the "LOCK" position.
Out of the range	<ul style="list-style-type: none">• When pictures were taken in Panorama mode, the direction of movement was incorrect.

Messages	Explanation
When the camera is used for longer than the specified time it may be damaged.	<ul style="list-style-type: none"> • During underwater recording or shooting, the camera was kept under water longer than the specified time.
Card is not formatted, format?	<ul style="list-style-type: none"> • Confirm whether the memory card should be formatted.
This image cannot be deleted	<ul style="list-style-type: none"> • The picture or video you are trying to delete is protected.
Cannot record movie	<ul style="list-style-type: none"> • The write protection switch in the memory card is set to the "LOCK" position.
Warning!! Camera recording, please wait.	<ul style="list-style-type: none"> • No other actions allowed to perform during video/audio recording.
Warning!! Battery exhausted.	<ul style="list-style-type: none"> • The battery is drained.
This file cannot be played back	<ul style="list-style-type: none"> • The picture format cannot be recognized by the camera.
No connection	<ul style="list-style-type: none"> • The camera is not connected to the printer correctly.
Print error	<ul style="list-style-type: none"> • There is a problem with camera or printer.
Cannot print	<ul style="list-style-type: none"> • Check that the printer is out of paper or out of ink. • Check if the printer has a paper jam.

Troubleshooting

Problem	Possible causes	Solution
Camera does not turn on.	<ul style="list-style-type: none">• The battery has run out.• The battery is not inserted correctly.	<ul style="list-style-type: none">• Replace with a fully charged battery.
Camera turns off suddenly during operation.	<ul style="list-style-type: none">• The battery has run out.	<ul style="list-style-type: none">• Replace with a fully charged battery.
The picture is blurred.	<ul style="list-style-type: none">• The lens is dirty.•  appears when taking pictures.	<ul style="list-style-type: none">• Use a soft cloth to clean the lens on your camera• Use the Image Stabilization mode.
Images and video files cannot be saved.	<ul style="list-style-type: none">• The memory card is full.	<ul style="list-style-type: none">• Replace the memory card with a new one.• Delete unwanted images.• Unlock the memory card.

Problem	Possible causes	Solution
No picture is taken when pressing the Shutter button.	<ul style="list-style-type: none"> • The memory card is full. • No available space to store the files. • The mode dial is in Playback mode. 	<ul style="list-style-type: none"> • Replace the memory card with a new one or clean off current memory card. • Delete unwanted images. • The memory card is locked.
Images cannot print from the connected printer.	<ul style="list-style-type: none"> • The camera is not connected to the printer correctly. • The printer is not PictBridge compatible. • The printer is out of paper or out of ink. • The paper is jammed. 	<ul style="list-style-type: none"> • Check the connection between the camera and printer. • Use a PictBridge compatible printer. • Load some paper in the printer. • Replace the ink cartridge in the printer. • Remove the jammed paper.

<http://www.ge.com/digitalcameras>

