

minoHD

USER GUIDE



flip
video™

Consult Safety Instructions Before Use.

Get Started

Welcome to Flip MinoHD™

- 1 Press power button to turn on. Video camera setup appears automatically the first time you power on.

Note: The battery pack is shipped partially charged. For best results, fully charge before use. Simply follow steps in the Recharge Battery section.

Set Language

- Use + and - to select your language.

Set Date

- Use + and - to adjust current setting.
- Use < and > to select month/day/year.

Set Time

- Use + and - to adjust current setting.
- Use < and > to select hour/minute/AM/PM.

Turn Off Tones

- Use < and > to turn the tones on and off.

Turn Off Recording Light

- Use < and > to turn the recording light on and off.

To Return to Video Camera Setup Later

Starting with the video camera OFF:

- 1 Press power button to turn on.
- 2 When MinoHD logo appears, press and hold record button until SET LANGUAGE appears.



Record and Play

Touch-Sensitive Buttons

Gently touch lighted icons with your finger to activate the controls on the back panel.

Record Videos

- 1 Press ● to start/stop recording.
- 2 Press and hold + and - to zoom in/out during recording.

Play Videos

- 1 Press ▶ to play/pause.
- 2 Press and hold + and - to increase/decrease volume.
- 3 Press < and > to view previous/next video. *Note: Press and hold < and > during playback to rewind/fast-forward.*

Delete Videos

- 1 Press ❌ button. Select YES to confirm. *Note: Delete button is locked the first time you power on. To unlock, press and hold delete button.*



Connect to Computer

- 1 Slide USB latch down. USB arm flips up automatically.
- 2 Connect USB arm to computer's USB port.
- 3 Your video camera will begin recharging and you can install the pre-loaded FlipShare™ software on your computer.

Recharge Battery

- 1 Slide USB latch down. USB arm flips up automatically.
 - 2 Connect USB arm to computer's USB port.
 - 3 Recording light turns on to indicate charging. When charged, the recording light turns off.
- The video camera uses a sealed, rechargeable battery.
 - Fully recharging the battery can take up to four hours.
 - The video camera may remain connected to your computer after it is fully charged, but disconnecting it will help preserve the battery's lifespan and performance.
 - The battery is not user removable. Please contact Flip Video Support for any battery issues.

Note: Your computer must be powered on for the video camera to charge.



Organize, Create and Share

flipshare™

Pre-loaded FlipShare software makes editing and sharing your videos easy. Just plug in your video camera, open FLIPVIDEO and launch Setup FlipShare (PC) or Start FlipShare (Mac).

FlipShare Features

- Save videos to your computer.
- Organize your videos.
- Capture snapshots from your videos.
- Create custom movies and greeting cards.
- Share videos by uploading directly to:



Visit the FlipShare software HELP section for detailed instructions on all features.

600-0191-100 / 3250-00209 B

View On HD Television

- 1 Power off video camera and television.
- 2 Connect video camera to television with optional HDMI Cable from Flip Video (sold separately).
- 3 Power on video camera and television.
 - Video camera screen will be off when connected to television.
- 4 Switch your television to the appropriate VIDEO input.
 - See television manual for instructions.
- 5 Press play button to start/pause playback.



HDMI™
HIGH-DEFINITION MULTIMEDIA INTERFACE

Note: You can use any brand of HDMI Cable that has an HDMI Connector (for the HDTV) on one end and HDMI Mini Connector (for the video camera) on the other end.

Video Camera Features



1 Power Button	Press to turn on/off.
2 Wrist Strap Hook	Attach wrist strap (included in package).
3 HDMI Mini Port	Connect HDMI cable accessory to your HDTV.
4 Tripod Mount	Attach a tripod or a Flip Video accessory.
5 Recording Light	Red light turns on during recording or charging. Built-in stereo microphone is also located here.
6 USB Arm	Connect to a PC or Mac USB port.
7 USB Latch	Slide down to release USB arm.
8 Screen	Recording viewfinder/playback screen.
9 Recording Controls	Touch buttons to record and preview videos.
Record Button	● Touch to start/stop recording. <i>During Power On:</i> Hold to return to video camera setup.
Play Button	▶ Touch to play/pause playback. Touch and hold to play all videos.
Delete Button	❌ Touch to delete. Touch and hold to lock/unlock the delete button.
Up/Down Buttons	+ - <i>While recording:</i> touch and hold to zoom in/out. <i>During playback:</i> touch and hold to increase/decrease volume.
Left/Right Buttons	< > <i>While paused:</i> touch to skip to previous/next video. <i>During playback:</i> touch and hold to rewind/fast-forward.

Extend the fun with Flip Video Accessories. Learn more at www.theflip.com/accessories.

Included In This Box:

- Flip MinoHD Video Camera
- User Guide
- Wrist Strap
- Safety Instructions
- Soft Case
- Warranty Information

Flip Video Support:
www.theflip.com/support

To Reset Camera:

- Hold down the power button on the video camera for 10 seconds

This symbol on a Cisco product, battery or packaging means that the product and/or battery should not be disposed of with your household waste. It is your responsibility to dispose of your waste equipment and batteries separately from your household waste and in accordance with local laws and regulations. The correct disposal of your old equipment and batteries will help prevent potential negative consequences for the environment and human health. Please use the nearest waste collection facility as directed by your municipality or your retailer.

Cisco, the Cisco Logo, Flip MinoHD, FlipShare, Flip Video and Flip Video logo are trademarks or registered trademarks of Cisco Systems, Inc. and/or its affiliates in the U.S. and other countries. A listing of Cisco's trademarks can be found at www.cisco.com/go/trademarks. The HDMI Logo and High-Definition Multimedia Interface are trademarks or registered trademarks of HDMI Licensing LLC. Third-party trademarks mentioned are the property of their respective owners.
© 2009-2010 Cisco and/or its affiliates. All rights reserved.

CISCO™