


# getting to know your kindle

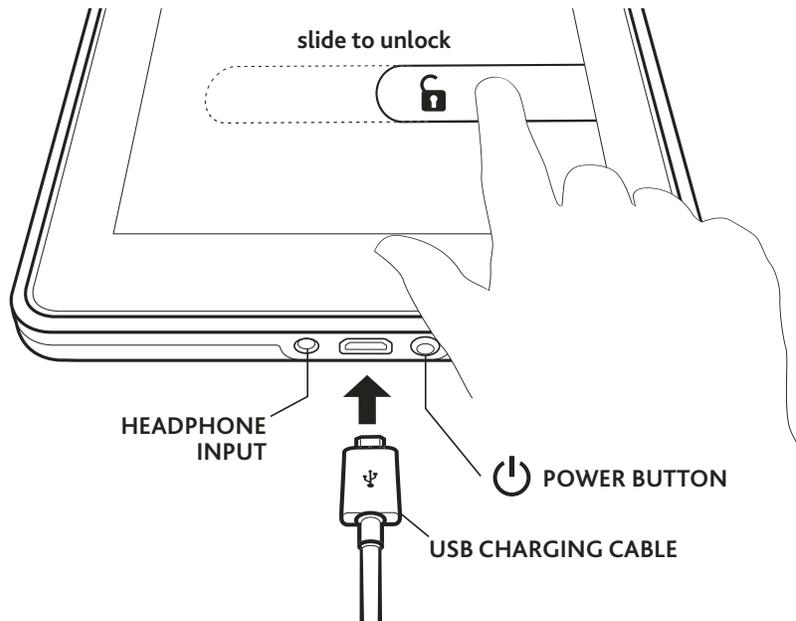

To charge your Kindle, connect it to the USB charging cable as shown. Connect the opposite end of the USB charging cable to a Kindle PowerFast accelerated charging accessory (sold separately), or other USB power adapter. To learn more about charging accessories, visit [www.kindle.com/support/charging](http://www.kindle.com/support/charging).

To start your Kindle, press the power button. To unlock your Kindle, touch the lock icon and drag the shaded bar across the screen to the left. To learn more about your Kindle, open the Help & Feedback app.

For Kindle customer support, visit [www.kindle.com/support](http://www.kindle.com/support).

# important product information

Safety, compliance, recycling, and other important information regarding your Kindle, can be found in the Legal & Compliance section of the Settings menu on your Kindle. For additional help, please visit [www.kindle.com/support](http://www.kindle.com/support).

## Amazon Terms and Policies

Before using the Kindle device, please read the terms located at [www.amazon.com/kindlefireterms](http://www.amazon.com/kindlefireterms) and all rules and policies for the Kindle device and services related to the device (including, but not limited to, the Amazon privacy notice located at [www.amazon.com/privacy](http://www.amazon.com/privacy) and any rules or usage provisions specified on the [www.amazon.com](http://www.amazon.com) website or the Kindle Store) (collectively, the "Agreements"). By using the Kindle device you agree to be bound by the terms of the Agreements.

Your Kindle is covered by a One-Year Limited Warranty. Details are available at [www.amazon.com/kindlewarranty](http://www.amazon.com/kindlewarranty).