



Mobile Projector

- Operating instructions
- Manual de instrucciones
- Instruções de operação
- 使用説明書
- تعليمات التشغيل

1. Press and quickly release the **(power button)** [w] (within 1 second)

When the power is on, each time the **(power button)** [w] is pressed (and quickly released within 1 second), the sound and picture mode changes and the corresponding marks appear on the screen as follows:

- When the content of the connected device is not projected (or no device is connected to the HDMI/MHL IN jack):
 - Standard picture, muted → **(dynamic picture, unmuted)** → **(dynamic picture, muted)** → **(standard picture, unmuted)**
 - When the content of the connected device is projected:
 - Dynamic picture → (standard picture)
 - Currently appearing on screen mode **(unmuted)** or **(muted)** does not change.

2. Supplying Power from the Projector to Another Device

- Connect a device to the USB OUT Jack [p] using an optional USB cable.
- The **(charge lamp)** [n] lights up (green).

Tips

- Supplying power to another device is possible even when the projector is being used.
- While supplying power to another device, you can charge the projector through the HDMI/MHL IN jack or the power supply from the USB OUT [j] jack [p] steps.
- When the remaining battery power of the projector is low, the **(charge lamp)** [n] (or lens blinks orange) until recharging is complete. The **(charge lamp)** [n] can only be used to supply power to your device and cannot be used to charge the projector. To charge the projector, use the USB-C IN jack [c].
- The USB OUT Jack [p] is not output only. Do not connect the USB OUT Jack to a USB device. (See the manual for details.)

Notes

- When an MHL-compatible smartphone or tablet is connected to the HDMI/MHL IN jack [j], the power is supplied to the connected MHL-compatible device through the HDMI/MHL IN jack and the power supply from the USB OUT [j] jack [p] steps.
- When the remaining battery power of the projector is low, the **(charge lamp)** [n] (or lens blinks orange) until recharging is complete. The **(charge lamp)** [n] can only be used to supply power to your device and cannot be used to charge the projector. To charge the projector, use the USB-C IN jack [c].
- The USB OUT Jack [p] is not output only. Do not connect the USB OUT Jack to a USB device. (See the manual for details.)

Troubleshooting

The power does not turn on.

- If the remaining battery power is low or insufficient, charge the battery.
- Use the projector in a location with an ambient temperature between 0°C and 35°C.
- Try turning the projector on and off again.

The projector does not charge.

- The USB OUT Jack can only be used to supply power to another projector and cannot be used to charge the projector. To charge the projector, use the USB-C IN Jack.

The projector automatically shuts down during use.

- The remaining battery power is low. Charge the battery.
- The projector automatically shuts down when it overheats. Let it cool down before you operate it again.
- When the projector is in use, connected via MHL and powered by adapter, the rate of power consumption may be more than the rate of charge. Depending on the remaining battery power, the projector may shut down. If this happens, disconnect the MHL connection and charge the projector.

The (power) lamp (white) and the (charge) lamp (red) blink at the same time.

- An internal error may have occurred. Try turning the power off and on again.

The (charge) lamp is blinking (orange).

- The remaining battery power is low. Charge the battery.

No images are projected.

- Check that the cable, connector and/or adapter are connected correctly.
- Some image formats may not be available depending on the connected device or the connection method.

There is no sound.

- Check the volume level of the connected device.
- Some sounds cannot be reproduced depending on the connected device or the connection method.

The (charge) lamp blinks (red) while the projector is supplying power to another device via the USB OUT Jack.

- The USB cable (supplied) may not be connected correctly. Disconnect it and reconnect.

The image is a trapezoidal shape.

- The projector automatically corrects the vertically distorted image. However, if the distortion is too large, this function may not work sufficiently. Also, the horizontal distortion cannot be corrected. In such cases, move the projector to adjust the projection angle.

The projected image is unclear.

- Adjust the focus using the focus adjuster. The screen size of which the focus is adjustable is from 20 inches to 120 inches.
- The fan has started making loud noise.

Stop use when connected to your Sony dealer or authorized Sony service agent.

- All video devices have HDMI connectivity or MHL connectivity. To see if your video device has any of these capabilities, check its specifications or contact the manufacturer.

The projector stops responding.

- Press the power button for more than 10 seconds. Do this operation only when the projector freezes. Do not use this operation under normal circumstances.

Specifications

Design and specifications are subject to change without notice.

Dimensions: Approx. 83.0 mm x 16.0 mm x 150.0 mm (3.3 inches x 2.125 inches x 6 inches) (WxHxD) (without protrusions)

Weight: Approx. 280 g (9.9 oz)

Operating Temperature: 0°C to 35°C (32°F to 95°F)

Output Resolution: 93.5 Audio Jack

Speaker output: 1.0 W

HDMI/MHL Input: 1.4 (4K/60), 1.4 (HDR/4)

Projected image size: 60 inches at projection distance of 115.5 (3.77 ft)/120 inches at 60 inches (1.92 m)

Brightness: ANSI 800 lumens

Color reproducibility: Full color (16,700,000 colors)

Approximate projecting time: Approx. 120 minutes (when fully charged and without power input)

High Power: Approx. 50,000 hours

Input: DC 5 V/3.0 A

Charging time: Approx. 2.5 hours (from CP-AD3 (sold separately))

Output: DC 5 V/1.5 A (port)

Notes on Use

When using the projector out of the carrying pouch. When taking out, hold the projector firmly.

Do not operate the unit if it has been wet or damaged. Otherwise, it can lead to electric shock, explosion or fire.

When using a TV, radio or stereo, interference may occur. Do not set up the projector in close proximity to get wet with fresh water, sea water, milk, soft drinks or soap water. Do not use the projector while wet.

Do not use or store the projector in a place where the temperature is extremely high, such as near a fire, under direct sunlight or in a car parked in the sun.

Do not use the projector in a place with poor ventilation, such as walls wrapped in a wall-to-wall carpet.

Do not use the projector as a support. Avoid hitting it with a hammer, putting any heavy object on top, stepping on it or dropping it.

Avoid contact between the skin and the projector and avoid touching it during use. Doing so may cause a low-temperature burn injury. Be careful of heat generated from the front of the projector and the power cord.

When connecting a portable device to the projector, attach the portable device's battery pack. Connecting the projector to a device whose battery is removed may cause loss of data or damage to the portable device.

Do not touch or stick your finger into the connection parts.

Refer also to the manual for details on use in conjunction with the projector as you may need to operate the device in order to use the projector.

Do not project light of the projector in a direction where it may cause a fire or damage to property.

Do not place the projector close to credit cards or other cards. Doing so may result in the loss of stored data.

If the projection lens is not clean, wipe it with a soft cloth such as an eyeglass cleaning cloth.

Do not place the projector in a humid or dusty place.

Do not connect the projector to a device that is not MHL-compatible.

Remove cables from the projector after use or while not in use, or other accidental or unavoidable damage.

Do not connect the projector to a device that is not MHL-compatible.

Children should only use the projector under adult supervision. Keep the projector out of reach of children.

It is recommended that you maintain a distance of more than 1.5 times the diagonal projection screen size from the projector when projecting for a long time, your eyesight may become worse.

HL (Hearing aid magnetic field): 3.17 HD (Hearing device field): 0.6 m

Do not project light of the projector in a direction where it may cause a fire or damage to property.

Do not touch or stick your finger into the connection parts.

Refer also to the manual for details on use in conjunction with the projector as you may need to operate the device in order to use the projector.

Do not place the projector close to credit cards or other cards. Doing so may result in the loss of stored data.

If the projection lens is not clean, wipe it with a soft cloth such as an eyeglass cleaning cloth.

Do not place the projector in a humid or dusty place.

Do not connect the projector to a device that is not MHL-compatible.

Remove cables from the projector after use or while not in use, or other accidental or unavoidable damage.

Do not connect the projector to a device that is not MHL-compatible.

Children should only use the projector under adult supervision. Keep the projector out of reach of children.

It is recommended that you maintain a distance of more than 1.5 times the diagonal projection screen size from the projector when projecting for a long time, your eyesight may become worse.

HL (Hearing aid magnetic field): 3.17 HD (Hearing device field): 0.6 m

Do not project light of the projector in a direction where it may cause a fire or damage to property.

Do not touch or stick your finger into the connection parts.

Refer also to the manual for details on use in conjunction with the projector as you may need to operate the device in order to use the projector.

Do not place the projector close to credit cards or other cards. Doing so may result in the loss of stored data.

If the projection lens is not clean, wipe it with a soft cloth such as an eyeglass cleaning cloth.

Do not place the projector in a humid or dusty place.

Do not connect the projector to a device that is not MHL-compatible.

Remove cables from the projector after use or while not in use, or other accidental or unavoidable damage.

Do not connect the projector to a device that is not MHL-compatible.

Children should only use the projector under adult supervision. Keep the projector out of reach of children.

It is recommended that you maintain a distance of more than 1.5 times the diagonal projection screen size from the projector when projecting for a long time, your eyesight may become worse.

HL (Hearing aid magnetic field): 3.17 HD (Hearing device field): 0.6 m

Do not project light of the projector in a direction where it may cause a fire or damage to property.

Do not touch or stick your finger into the connection parts.

Refer also to the manual for details on use in conjunction with the projector as you may need to operate the device in order to use the projector.

Do not place the projector close to credit cards or other cards. Doing so may result in the loss of stored data.

If the projection lens is not clean, wipe it with a soft cloth such as an eyeglass cleaning cloth.

Do not place the projector in a humid or dusty place.

Do not connect the projector to a device that is not MHL-compatible.

Remove cables from the projector after use or while not in use, or other accidental or unavoidable damage.

Do not connect the projector to a device that is not MHL-compatible.

Children should only use the projector under adult supervision. Keep the projector out of reach of children.

It is recommended that you maintain a distance of more than 1.5 times the diagonal projection screen size from the projector when projecting for a long time, your eyesight may become worse.

HL (Hearing aid magnetic field): 3.17 HD (Hearing device field): 0.6 m

Do not project light of the projector in a direction where it may cause a fire or damage to property.

Do not touch or stick your finger into the connection parts.

Refer also to the manual for details on use in conjunction with the projector as you may need to operate the device in order to use the projector.

Do not place the projector close to credit cards or other cards. Doing so may result in the loss of stored data.

If the projection lens is not clean, wipe it with a soft cloth such as an eyeglass cleaning cloth.

Do not place the projector in a humid or dusty place.

Do not connect the projector to a device that is not MHL-compatible.

Remove cables from the projector after use or while not in use, or other accidental or unavoidable damage.

Do not connect the projector to a device that is not MHL-compatible.

Children should only use the projector under adult supervision. Keep the projector out of reach of children.

It is recommended that you maintain a distance of more than 1.5 times the diagonal projection screen size from the projector when projecting for a long time, your eyesight may become worse.

HL (Hearing aid magnetic field): 3.17 HD (Hearing device field): 0.6 m

Do not project light of the projector in a direction where it may cause a fire or damage to property.

Do not touch or stick your finger into the connection parts.

Refer also to the manual for details on use in conjunction with the projector as you may need to operate the device in order to use the projector.

Do not place the projector close to credit cards or other cards. Doing so may result in the loss of stored data.

If the projection lens is not clean, wipe it with a soft cloth such as an eyeglass cleaning cloth.

Do not place the projector in a humid or dusty place.

Do not connect the projector to a device that is not MHL-compatible.

Remove cables from the projector after use or while not in use, or other accidental or unavoidable damage.

Do not connect the projector to a device that is not MHL-compatible.

Children should only use the projector under adult supervision. Keep the projector out of reach of children.

It is recommended that you maintain a distance of more than 1.5 times the diagonal projection screen size from the projector when projecting for a long time, your eyesight may become worse.

HL (Hearing aid magnetic field): 3.17 HD (Hearing device field): 0.6 m

Do not project light of the projector in a direction where it may cause a fire or damage to property.

Do not touch or stick your finger into the connection parts.

Refer also to the manual for details on use in conjunction with the projector as you may need to operate the device in order to use the projector.

Do not place the projector close to credit cards or other cards. Doing so may result in the loss of stored data.

If the projection lens is not clean, wipe it with a soft cloth such as an eyeglass cleaning cloth.

Do not place the projector in a humid or dusty place.

Do not connect the projector to a device that is not MHL-compatible.

Remove cables from the projector after use or while not in use, or other accidental or unavoidable damage.

Do not connect the projector to a device that is not MHL-compatible.

Children should only use the projector under adult supervision. Keep the projector out of reach of children.

It is recommended that you maintain a distance of more than 1.5 times the diagonal projection screen size from the projector when projecting for a long time, your eyesight may become worse.

HL (Hearing aid magnetic field): 3.17 HD (Hearing device field): 0.6 m

Do not project light of the projector in a direction where it may cause a fire or damage to property.

Do not touch or stick your finger into the connection parts.

Refer also to the manual for details on use in conjunction with the projector as you may need to operate the device in order to use the projector.

Do not place the projector close to credit cards or other cards. Doing so may result in the loss of stored data.

If the projection lens is not clean, wipe it with a soft cloth such as an eyeglass cleaning cloth.

Do not place the projector in a humid or dusty place.

Do not connect the projector to a device that is not MHL-compatible.

Remove cables from the projector after use or while not in use, or other accidental or unavoidable damage.

Do not connect the projector to a device that is not MHL-compatible.

Children should only use the projector under adult supervision. Keep the projector out of reach of children.

It is recommended that you maintain a distance of more than 1.5 times the diagonal projection screen size from the projector when projecting for a long time, your eyesight may become worse.

HL (Hearing aid magnetic field): 3.17 HD (Hearing device field): 0.6 m

Do not project light of the projector in a direction where it may cause a fire or damage to property.

Do not touch or stick your finger into the connection parts.

Refer also to the manual for details on use in conjunction with the projector as you may need to operate the device in order to use the projector.

Do not place the projector close to credit cards or other cards. Doing so may result in the loss of stored data.

If the projection lens is not clean, wipe it with a soft cloth such as an eyeglass cleaning cloth.

Do not place the projector in a humid or dusty place.

Do not connect the projector to a device that is not MHL-compatible.

Remove cables from the projector after use or while not in use, or other accidental or unavoidable damage.

Do not connect the projector to a device that is not MHL-compatible.

Children should only use the projector under adult supervision. Keep the projector out of reach of children.

It is recommended that you maintain a distance of more than 1.5 times the diagonal projection screen size from the projector when projecting for a long time, your eyesight may become worse.

HL (Hearing aid magnetic field): 3.17 HD (Hearing device field): 0.6 m

Do not project light of the projector in a direction where it may cause a fire or damage to property.

Do not touch or stick your finger into the connection parts.

Refer also to the manual for details on use in conjunction with the projector as you may need to operate the device in order to use the projector.

Do not place the projector close to credit cards or other cards. Doing so may result in the loss of stored data.

If the projection lens is not clean, wipe it with a soft cloth such as an eyeglass cleaning cloth.

Do not place the projector in a humid or dusty place.

Do not connect the projector to a device that is not MHL-compatible.

Remove cables from the projector after use or while not in use, or other accidental or unavoidable damage.

Do not connect the projector to a device that is not MHL-compatible.

Children should only use the projector under adult supervision. Keep the projector out of reach of children.

It is recommended that you maintain a distance of more than 1.5 times the diagonal projection screen size from the projector when projecting for a long time, your eyesight may become worse.

HL (Hearing aid magnetic field): 3.17 HD (Hearing device field): 0.6 m

Do not project light of the projector in a direction where it may cause a fire or damage to property.

Do not touch or stick your finger into the connection parts.

Refer also to the manual for details on use in conjunction with the projector as you may need to operate the device in order to use the projector.

Do not place the projector close to credit cards or other cards. Doing so may result in the loss of stored data.

If the projection lens is not clean, wipe it with a soft cloth such as an eyeglass cleaning cloth.

Do not place the projector in a humid or dusty place.

Do not connect the projector to a device that is not MHL-compatible.

Remove cables from the projector after use or while not in use, or other accidental or unavoidable damage.

Do not connect the projector to a device that is not MHL-compatible.

Children should only use the projector under adult supervision. Keep the projector out of reach of children.

It is recommended that you maintain a distance of more than 1.5 times the diagonal projection screen size from the projector when projecting for a long time, your eyesight may become worse.

HL (Hearing aid magnetic field): 3.17 HD (Hearing device field): 0.6 m

Do not project light of the projector in a direction where it may cause a fire or damage to property.

Do not touch or stick your finger into the connection parts.

Refer also to the manual for details on use in conjunction with the projector as you may need to operate the device in order to use the projector.

Do not place the projector close to credit cards or other cards. Doing so may result in the loss of stored data.

If the projection lens is not clean, wipe it with a soft cloth such as an eyeglass cleaning cloth.

Do not place the projector in a humid or dusty place.

Do not connect the projector to a device that is not MHL-compatible.

Remove cables from the projector after use or while not in use, or other accidental or unavoidable damage.

Do not connect the projector to a device that is not MHL-compatible.

Children should only use the projector under adult supervision. Keep the projector out of reach of children.

It is recommended that you maintain a distance of more than 1.5 times the diagonal projection screen size from the projector when projecting for a long time, your eyesight may become worse.

HL (Hearing aid magnetic field): 3.17 HD (Hearing device field): 0.6 m

Do not project light of the projector in a direction where it may cause a fire or damage to property.

Do not touch or stick your finger into the connection parts.

Refer also to the manual for details on use in conjunction with the projector as you may need to operate the device in order to use the projector.

Do not place the projector close to credit cards or other cards. Doing so may result in the loss of stored data.

If the projection lens is not clean, wipe it with a soft cloth such as an eyeglass cleaning cloth.

