

# aigo



**MP5 Player MP5910A**  
**User Manual**  
*(Version 1.0)*

## Important Notice

Congratulations on purchasing your aigo MP5 Player MP5910A. Please read this user manual carefully before using your aigo product.

## Warranty Registration

Register your aigo product online to enjoy warranty, member's perks and more, please visit [www.aigo.com.sg](http://www.aigo.com.sg)

## Need Help Fast?

Read your User Manual first for quick tips. After you have read the instructions and still need assistance, you may access our online help at [www.aigo.com.sg](http://www.aigo.com.sg) or call +65 6333 6388 with your product's model and serial number.

## Obtaining Warranty Service

Please review the User's Manual troubleshooting resources and online help resources before seeking warranty service. If the product is still not functioning properly after making use of these resources, access the online website: [www.aigo.com.sg](http://www.aigo.com.sg) for instructions on how to obtain warranty service.

## Copyrights/ Trademarks Information

- aigo logo is registered trademark of Beijing Huaqi Information & Digital Technology Co., Ltd.
- Microsoft, MS-DOS, Windows and the Windows logo are registered trademarks of Microsoft Corporation.
- Intel and Pentium are registered trademarks of Intel Corporation.
- SRS WOW is the registered trademark of SRS Labs, Inc.
- All other products are trademarks or registered trademarks of their respective owners and are hereby recognized as such.
- The information on this manual is prepared with the current player specifications. aigo reserves the right to make design and specification changes for product improvement without prior notice. Actual contents may differ slightly from those pictured.
- Unauthorized duplication of any recordings downloaded from the internet or made from audio CDs is a violation of copyright laws and international treaties.

## Always Keep a Copy of Your Original Data

Before you deliver your product for warranty services please backup all data, including all software programs. You will be responsible for reinstalling all data. Data recovery is not included in the warranty service and aigo is not responsible for data that may be lost or damaged during transit or a repair.

## Safety Instructions


- Do not expose to extreme temperatures.
- Do not allow any liquid form into the device.
- Do not apply or subject the player to excessive pressure.
- Do not expose to direct sunlight or heat sources.
- Do not try to disassemble and repair the device yourself.
- Do not expose device to chemicals such as benzene or thinner.
- Do not store device in dusty or damp area.
- aigo will claim no responsibility for any damage on data loss due to breakdown, repair or other causes.

## Contents

<b>IMPORTANT NOTICE .....</b>	<b>1</b>
<b>COMPONENTS OVERVIEW .....</b>	<b>5</b>
<b>KEY DESCRIPTION .....</b>	<b>8</b>
<b>BASIC OPERATION.....</b>	<b>10</b>
<b>MORE OPERATION .....</b>	<b>12</b>
<b>1. MUSIC .....</b>	<b>13</b>
<b>2. VIDEO .....</b>	<b>18</b>
<b>3. PHOTO .....</b>	<b>20</b>
<b>4. EBOOK.....</b>	<b>23</b>
<b>5. RADIO .....</b>	<b>25</b>
<b>6. OTHER FUN.....</b>	<b>27</b>
<b>7. SETTING.....</b>	<b>29</b>
<b>8. RECORD.....</b>	<b>31</b>
<b>TECHNICAL SPECIFICATIONS .....</b>	<b>33</b>
<b>PACKAGE CONTENTS .....</b>	<b>34</b>


## Components Overview

### Front view

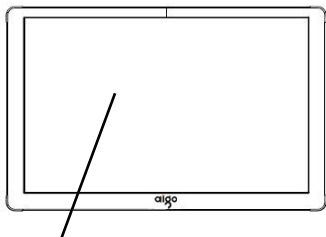

LCD Screen


### Top View

 

## Bottom View



## Back View

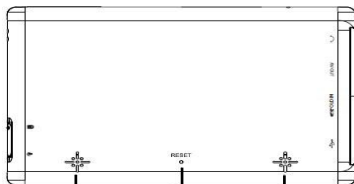


Speaker

Reset





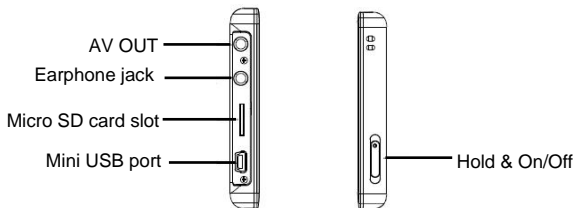



Speaker







## Left side and right side view





## Key Description

Key	Function	Key	Function
	Back		Enter
	Delete		Switch wall paper
	Save		Last (In sub menu)  Last page (In ebook mode)
	Next (In sub menu)  Next page (In ebook mode)		Play

	Last music or video		Next music or video
	Full screen		Volume
	Volume down (Video mode)		Volume up (Video mode)

## Basic Operation

### 1. Power on/off

Power on:

Push down on/off button for 3 seconds, the player will be powered on.

Power off:

Push down on/off button for 3 seconds during the player is powered on.

### 2. A-B Repeat

During music playing back, press "A" to active A-B repeat function. "A" is the beginning point, press "A" again, the end point "B" will be appeared, press "A-B" again to close A-B repeat.

 

### 3. Reset

Restart by press reset button when the player hangs up.

### 4. Connect to PC and files transferred

Connect to computer by USB cable, no driver needed unfer Windows 2000, XP, Vista or above operation system.


## 5. Volume adjustment

Press  or  icon during music or video play back to adjust the volume up or down.


## More operation

### Main Menu


The main menu will come out when the player is powered on. There are nine options can be selected by touch the corresponding icon: "Music", "Video", "Photo", "eBook", "Radio", "Other Fun", "Explorer", "Setting" and "Record".

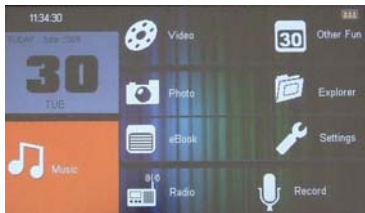

## 1. Music

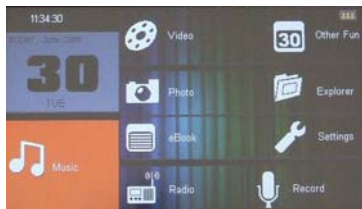

Touch the music icon to go into music mode, as shown below:

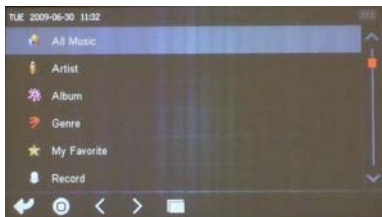

**Current Play:** Go into the interface that the current music is playing back.

**Resume Play:** Resume play back from the music stopped last time.

**All Music:** Go into the music play back list.

**Artist:** Assort and browse the music by artist.

**Album:** Assort and browse the music by album.

**Genre:** Assort and browse the music by genre.

**My Favorite:** List the music that add into the favorite folder.

**Record:** List the voice record files.

**Dir List:** Enter and browse all the files in the disk.








**MediaLib Update:** Update the music list, the music playing back currently will be stopped.

**Hold Recollection:** Continue to play the music that stopped last time.

## Music play back interface



 

### Key description under music mode:


1. Short press  icon: Play last music.
2. Short press  icon: Play next music.
3. Press and hold  icon: Fast backward.
4. Press and hold  icon: Fast forward.
5. Short press  icon: Pause, and the icon will change to .
6. Short press  icon: Resume playing and the icon will change








back to .



7. Short press  icon: Playing sequence (In Order and Shuffle), double click to select.


8. Short press  icon: Repeat mode selection (Once, Repeat, All, All Repeat and Intro), double click to select.

9. Short press  icon: Microsoft sound effect selection (3D, Bass and LEQ), double click to select.


10. Short press  icon: Equalizer selection (Normal, MSEQ, Rock, Pop, Classical, Bass and Jazz), double click to select.


11. Short press  icon: Set start point of A-B repeat, and the icon will change to , short press  icon to set the end point, the icon will change to , the selection part will be repeated to play.

Short press  again to stop A-B repeat, the icon will change back to .


12. Short press  icon: Switch the wall paper.

13. Short press  icon: Adjust volume up.

14. Short press  icon: Adjust volume down.

15. Short press  icon: Back to the last directory.

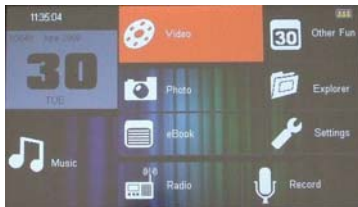


 

 





## 2. Video



### Video play back interface



**Key description under video mode:**

1. Short press  icon: Pause, and the icon will change to .
2. Short press  icon: Resume playing and the icon will change back to .
3. Short press  icon: Play last video.
4. Short press  icon: Play next video.
5. Short press  icon: Switch the display mode (Normal and Full screen).
6. Short press  icon: Switch the display to TV (AV cable must be connect to TV), short push down on/off button to resume.
7. Short press  icon: Volume up adjustment.
9. Short press  icon: Volume down adjustment.
10. Short press  icon: Back to the last directory.


### 3. Photo




 

 






### Photo play back interface



**Key description under photo mode:**


Short press  icon in the photo list mode to switch the browsing mode (List and Thumbnails).

1. Short press  icon: Anti-clockwise rotate 90 degree.
2. Short press  icon: Clockwise rotate 90 degree.
3. Short press  icon: Zoom in. Scroll screen to move the photo, long time press the center of the screen to resume.
4. Short press  icon: Zoom out.
5. Short press  icon: Enable photo side show (Turn Off, 5 Sec, 8 Sec and 10 Sec). Press  icon to start, the icon will change to , press  to stop. Note: It is NOT able to press  icon when turn off is selected.
6. Short press  icon: Set the current photo as a wall paper.

**Note: Under photo browsing mode, to view last photo by touch left side of the screen, to view next photo by touch right side of the screen.**

**The pictures that loaded into the player can not be higher than 10.0 mega pixels, please convert to lower resolutions by computer before the pictures loaded into the player.**

## 4. eBook

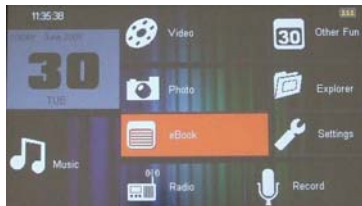


### eBook play back interface






**Key description under ebook mode:**


1. Short press  icon: Set font size (Font Small, Font Mid and Font Big).
2. Short press  icon: Set font colour (White, Green and Red).
3. Short press  icon: Save bookmark.
4. Short press  icon: Delete bookmark.
5. Short press  icon: Load bookmark.
6. Short press  icon: Page jump, press  or  icon to increase or decrease the page number.
7. Short press  icon: Goto last page.
8. Short press  icon: Goto next page.
9. Short press  icon: Switch the wall paper.

**Note: This player ONLY supports ANSI code txt files.**



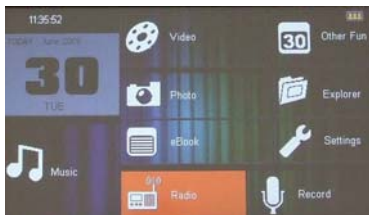



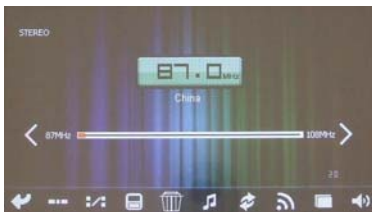





## 5. Radio



Touch the radio icon from the main menu; go into the radio interface as shown below:




**Key description under radio mode:**



1. Short press  icon: Select the search mode (auto search and Manual search). Press  and  icons to adjust the frequency if manual search is selected.
2. Short press  icon: Preset channel. Press  and  icons to change the channel.
3. Short press  icon: Save channel.
4. Short press  icon: Delete channel.
5. Short press  icon: Switch stereo on and off.
6. Short press  icon: Region selection (China, Japan, USA, Europe and Campus Radio).
7. Short press  icon: FM record.
8. Short press  icon: Adjust the volume up and down.

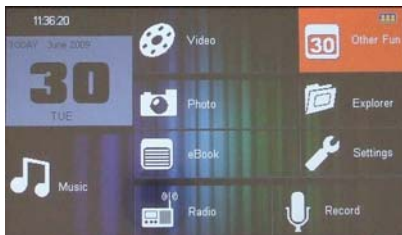

**Note: The earphone must be connected under the radio mode.**

## 6. Other Fun



### Stop Watch



Short press  icon: Start, the icon will change to .

Short press  icon: Pause, the icon will change back to .

Short press  icon: Reset.

Short press  icon: Exit.

## Calendar


Short press  and  icons: Change the year and month.

Short press  icon: Exit.

## Rectification

Exactly touch “+” cursor on the screen to rectify the screen.

## 7. Setting

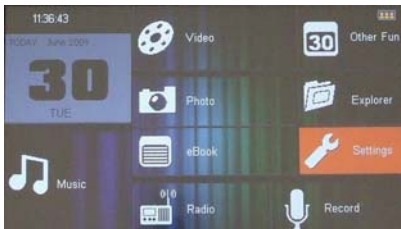

### Display Setting

Light Time: 5 Seconds, 10 Seconds, 15 Seconds, 20 Seconds, 30 Seconds and Always On.

Brightness: One, Two, Three, Four and Five.

Light Mode: All Dark and Penumbra

Display Status: Hide and Display.

### System Setting

Upgrade: Upgrade the firmware.

System restore: Recover the system as default setting.

### **DeskTop**

There are 8 desktop styles.

### **Time Setting**

Time: Set system time.

Date: Set system date.

### **Language**

English, Simplified Chinese, Tradational Chinese, Japanese, Korean  
French, Spanish, Italian, Portuguese, and so on.

### **System Information**

Display the details of the player.

### **AutoShut Time**

2 Minutes, 5 Minutes, 10 Minutes, 30 Minutes, 60 Minutes, and No  
automatic shutdown.

### **TV Setting**

PAL50, PAL60, NTSC.









## 8. Record



Touch the record icon from the main menu; go into the record interface as shown below:



**Key description under record mode:**

1. Short press  icon: Start to record, the icon will change to .
2. Short press  icon: Pause, the icon will change back to .
3. Short press  icon: Save the recording file.
4. Short press  icon: Select record volume.
5. Short press  icon: Select record quality (Low rate and High rate).
6. Short press  icon: Switch the wall paper.

## Technical Specifications

Indicators	Parameters
Dimension	114mmx73mmx10.7mm
Weight	180g
Language	Chinese/English
LCD screen	4.3 inch TFT LCD; 480x272 pixels
Capacity	8GB, 16GB
Power supply	3.7V
Charging time	About 4 hours (use power adapter in the state of shut down)
Playback time	Video playback time is about 3 hours
	Audio playback time is about 7 hours (With LCD off)
Battery	Rechargeable Li-Polymer battery, 1400mAh
Transmission interface	Mini USB2.0
Video output	Composite video output format: PAL, NTSC
Temperature range	Operating temperature: 5°C~40°C
System requirements	Computer configuration: Windows ME/2000/XP and above.

## Package Contents

<b>Items</b>	<b>Quantity</b>
Main unit	1
Earphone	1
USB Cable	1
AV Cable	1
User Manual	1
Pouch	1