

User's manual
Digitales TV module for NAVIGON 8410
English (United Kingdom)

August 2009



The crossed-out wheeled bin means that within the European Union the product must be taken to separate collection at the product end-of-life. This applies to your device but also to any enhancements marked with this symbol. Do not dispose of these products as unsorted municipal waste.

Imprint

NAVIGON AG
Schottmüllerstraße 20A
D-20251 Hamburg

The information contained herein may be changed at any time without prior notification. Neither this manual nor any parts thereof may be reproduced for any purpose whatsoever without the express written consent of NAVIGON AG, nor may they be transmitted in any form either electronically or mechanically, including photocopying and recording. All technical specifications, drawings etc are subject to copyright law.

© 2009, NAVIGON AG

All rights reserved.

Table of contents

1	Introduction	4
1.1	About this manual	4
1.2	Legal notice.....	4
1.2.1	Liability	4
1.2.2	Trademarks	4
1.3	Questions about the product.....	4
2	Before you begin.....	5
2.1	Important safety information.....	5
2.2	Scope of Delivery	5
2.3	Connecting the TV module.....	6
2.4	Information	6
3	Starting the TV module.....	7
4	Operating the TV module	8
4.1	Selecting a channel.....	8
4.2	Adjusting the volume.....	9
4.3	Adding a channel to the Favourites	9
4.4	Electronic program guide (EPG)	9
4.5	Showing information about the current broadcast	10
5	Configuring the TV module.....	11
5.1	Channel.....	11
5.2	General	11
5.3	Ending the configuration	12
6	Closing the TV module	12
7	The window of the TV module	12
7.1	The window TV	12
7.2	Electronic program guide (EPG): General	14
7.3	Electronic program guide (EPG): Details	15
7.4	Info	16
8	Appendix	17
8.1	Technical data.....	17
8.2	Declaration of Conformity.....	17
9	Index	18

1 Introduction

1.1 About this manual

For better legibility and clarification, the following styles are used in this manual:

<i>Bold and italics:</i>	Names of products
SMALL CAPITALS:	Names of windows and dialogue boxes
Bold:	Highlighting of important parts in the text
<u>Underlined:</u>	Descriptions of buttons, input boxes and other elements on the user interface



This symbol draws attention to tips on how to use the software.

1.2 Legal notice

1.2.1 Liability

The software and manual are subject to change without notice. NAVIGON AG is not liable for the accuracy of the information contained in this manual or for damages resulting from the use of this manual. Suggestions for improvements and information regarding errors are always welcome so that we can supply you with even better products in the future.

1.2.2 Trademarks

All brand and trade marks mentioned in this document and registered by third parties are subject without reservation to copyright law and the proprietary rights of their respective owners. All trade marks, trade names and company names used in this document are or may be trade marks or registered trademarks of their respective owners. All rights reserved except those explicitly granted.

The absence of the explicit labelling of registered trademarks used in this manual does not imply that the brand is not subject to the rights of a third party.

- ▶ NAVIGON is a registered trade mark of NAVIGON AG.

1.3 Questions about the product

You have a question concerning your product? Then visit our website www.navigon.com and click on "Support". There you will find an area

with frequently asked questions (FAQ Center) along with details of how to contact us by phone or e-mail.

2 Before you begin

The TV module transforms your **NAVIGON 8410** into a fully fledged DVB-T television for when you are on a journey. Simply connect the module to the navigation device and you will never miss an important broadcast again!

2.1 Important safety information

In your own interest, please read the following notices and safety information carefully before starting up the TV module.



Caution! Do not watch any picture shows, videos or television programmes while you are driving! Inform yourself about the regulations in force in the country in which you are travelling. The use of these functions may be generally prohibited during the journey.



Caution! Before setting off, slide the antenna together and fold it against the device. This will reduce the risk of injury during emergency braking or in an accident.



Note: In many countries you have to pay a fee for using a television. Check whether such a fee is payable for using the TV module.


2.2 Scope of Delivery

Please check that the contents are complete. If anything is missing, get in touch immediately with the dealer who sold you the product.

The purchased product includes the following:

- ▶ TV module for **NAVIGON 8410**
- ▶ Antenna for plugging into the TV module (already plugged in)

2.3 Connecting the TV module

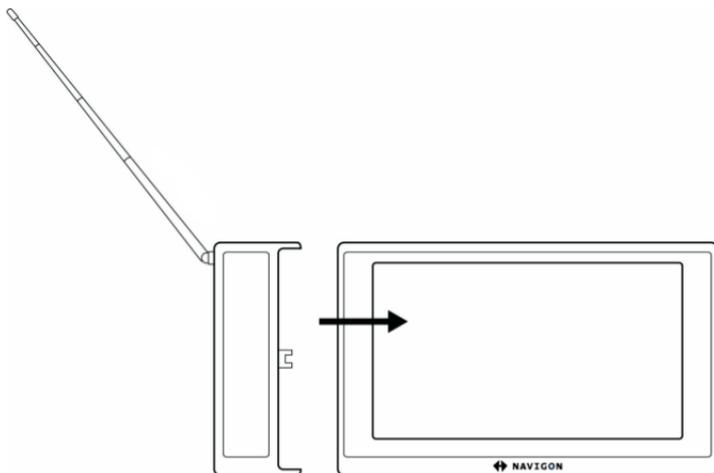

The navigation device is switched off.

- or -

The **START** window of the navigation system is open.

- ▶ If an application (Navigation, Phone, Media Player) is open, close it.
- 1. Plug in the TV module on the left side of the navigation device. (Refer to the illustration.)
- 2. Switch on the navigation device if necessary.

The  (TV) button in the **START** window of the navigation system is now active.



Note: The antenna should remain plugged in the TV module at all times. If ever it becomes disconnected, you can plug it back into its socket without difficulty. (Refer to the illustration.)

2.4 Information

Various information symbols are located at the top of many windows.

Energy

The Energy symbol can indicate the following states of the integrated battery:



The device is being supplied by an external power source. The battery is fully charged.

- or -

The battery cannot be charged because its temperature is too high or too low.



The device is being supplied by an external power source. The battery is being charged.



The device is being supplied by its internal battery. The battery charge is sufficient.



The device is being supplied by its internal battery. The battery charge is low.

Signal Strength

The Signal Strength icon indicates the quality of TV reception:



The more vertical bars alongside the symbol, the better the reception quality.

3 Starting the TV module

You have connected the TV module to the navigation device. The navigation device is switched on. The **START** window is open.

1. Extend the antenna to its maximum length.
2. Tap on the  (TV) button.
The following message appears:
"Caution! Do not watch any picture shows, videos or television programmes while you are driving! Inform yourself about the regulations in force in the country in which you are travelling. The use of these functions may be generally prohibited during the journey."
3. After you have read and fully understood the message, tap on **OK**.
If you do not accept the content of the message, tap on **Cancel** in order to close the TV application again.

Starting for the first time

When you start the TV module for the first time, the **CHANNEL SEARCH** window will open. (Refer to "Channel search (Tuning)" on page 11)

- ▶ Tap on Channel search to start the tuning now.
- or -
- ▶ Tap on  (Back) if you want to carry out the tuning later. The **TV** window opens.

4 Operating the TV module

4.1 Selecting a channel

The **TV** window is open. The last selected channel is set.

- ▶ Tap on the  (Up) or  (Down) button in order to set a different channel.

The name of the selected channel is shown at the top left edge of the display.

The programme of the selected channel is shown on the display.

- ▶ Tap on the TV picture in order to switch to full screen mode.
- ▶ Tap on the TV picture again in order to close full screen mode again.

Note: Which programme list you are moving through with the buttons can be seen on the List button:



- ▶  (All TV Channels): All TV programmes found
- ▶  (All Radio Channels): All radio programmes found
- ▶  (Favourites): Only your preferred programmes (refer to "Adding a channel to the Favourites" on page 9, next chapter)

Tap on this button to select the alternative setting.



Note: You can also select the channel in the **ELECTRONIC PROGRAM GUIDE (EPG)** window. There you can also see the programme list. (Refer to "Electronic program guide (EPG)" on page 9)

4.2 Adjusting the volume

- ▶ In the **TV** window tap on  (Louder) or  (Quieter) in order to adjust the volume to your liking.
- ▶ In the **TV** window tap on  (Mute) in order to mute the device. Tapping on this button again will switch the sound back on.

4.3 Adding a channel to the Favourites

You can add your preferred channels to the **FAVOURITES** list. These channels are marked by an asterisk in orange.

Proceed as follows:

1. In the **TV** window tap on  (Electronic program guide (EPG))
The **ELECTRONIC PROGRAM GUIDE (EPG): GENERAL** window opens. (Refer to "Electronic program guide (EPG): General" on page 14)
2. Tap on  (All TV Channels) or  (All Radio Channels).
All channels of the selected category are listed in the channels list.
3. Tap on the asterisk alongside the channel you want to add to the **FAVOURITES** list.
The asterisk is now shown in orange.
The channel is saved in the **FAVOURITES** list.
 - ▶ Tap again on the asterisk if you want to remove the channel from the **FAVOURITES** list. The asterisk is then shown in grey.
 - ▶ Tap on  (Favourites) in order to show the **FAVOURITES** list.

4.4 Electronic program guide (EPG)

Many channels also broadcast an electronic programme guide (EPG). Whether programme information is available, and if so how detailed this information is, depends on the channel in question.

As a rule, programme information is available for the next 14 days. No information is provided any longer for programmes after they have been broadcast.

1. In the **TV** window tap on the  Electronic program guide (EPG) button.
The **ELECTRONIC PROGRAM GUIDE (EPG): GENERAL** window opens. (Refer to "Electronic program guide (EPG): General" on page 14)

2. Select which channels are to be displayed:



All TV Channels



All Radio Channels



Favourites

The selected channels are listed on the right-hand side of the window. Under the channel list you will see the date for which the programme guide is shown.

3. Use the  (To the Left) and  (To the Right) buttons to select the date for which you want to view the programme guide.
4. Tap on the name of the channel whose programme guide you want to see.

The programme of the selected channel will be shown underneath the TV picture.

If you would like to see detailed information about a certain broadcast:

5. Tap on the  (Info) button alongside the name of the broadcast in which you are interested.
The **ELECTRONIC PROGRAM GUIDE (EPG): DETAILS** window opens.
The programme guide of the selected channel is shown in a list.
The current broadcast is highlighted by a border in orange.
6. Tap on the name of the broadcast in which you are interested.
The name of the selected broadcast is shown in orange.
The information available for this broadcast is displayed underneath the TV picture.

4.5 Showing information about the current broadcast

You can have all the information available for the current channel and its current broadcast shown at any time.

- ▶ In the **TV** window tap on  (Info).
The **INFO** window opens. All the available information is displayed.
(Refer to "Info" on page 16)
- ▶ Tap on OK in order to return to the **TV** window.

5 Configuring the TV module

You can configure the TV module in the **SETTINGS** window.

1. Tap on  (Settings)

The **SETTINGS** window opens.

5.1 Channel

- ▶ In the **SETTINGS** window tap on Channel.

Channel search (Tuning)

1. Tap on Channel search.
A progress bar appears. Found channels are listed.
 - ▶ Tap on Cancel in order to cancel the tuning and delete the channels found so far.
 - ▶ Tap on Stop in order to cancel the tuning but keep the list of channels found so far.
 - ▶ Tap on OK when the tuning is completed.

Region

The Region setting defines the channel standard on which the tuning is based. As a rule it does not have to be changed.

5.2 General

1. In the **SETTINGS** window tap on General.

Show

Select whether you want encrypted programmes to be found as well (All but encrypted, All stations).

Aspect ratio

Select how you want to display broadcasts with a picture format that does not correspond to the format of the screen (Stretched, Letter box, Cropped).

- ▶ Tap on the  (Open List) button alongside the setting which you want to change and select the desired picture format.

5.3 Ending the configuration

You have completed all the configuration tasks.


- ▶ Tap on OK to save your changes.
 - or -
- ▶ Tap on Reset in order to reset the settings to the standard settings.
 - or -
- ▶ Tap on  (Back) in order to discard the changes you have made.

6 Closing the TV module

1. In the **TV** window tap on  (Close).
The **START** window of the navigation system opens.
2. Slide the antenna together and fold it against the device.

7 The window of the TV module

7.1 The window TV

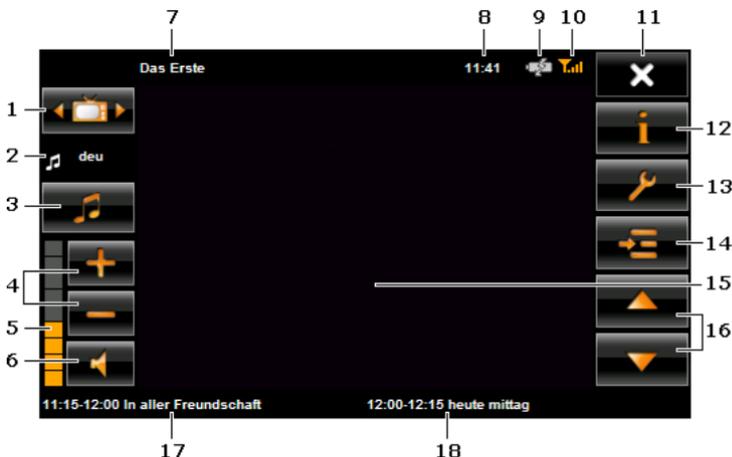

- 1 The List button shows the programme list on which channel selection with the  (Up) and  (Down) buttons is based.
 (All TV Channels): All TV programmes found




(All Radio Channels): All radio programmes found



(Favourites): Only your preferred programmes (refer to "Adding a channel to the Favourites" on page 9).

- ▶ Tap on the button to select the next alternative programme list.
- 2 Indicates the language (for multi-channel sound)
- 3 Change language (only for channels with multi-channel sound)
- 4 Louder / Quieter
- 5 Volume
- 6 Mute / Unmute
- 7 Current channel
- 8 Current time
- 9 Indicates the battery charge level (refer to "Energy" on page 7)
- 10 Indicates the signal strength (refer to "Signal Strength" on page 7)
- 11 Closes the TV module and opens the **START** window of the navigation system.
- 12 Opens the **INFO** window. Here you are provided with information about the current channel and about the current broadcast. (Refer to "Showing information about the current broadcast" on page 10)
- 13 Opens the **SETTINGS** window. Here you can configure the TV module. (Refer to "Configuring the TV module" on page 11)
- 14 Opens the **ELECTRONIC PROGRAM GUIDE (EPG)** window. Here you are provided with a programme guide for the selected channel and information about the individual broadcasts. (Refer to "Electronic program guide (EPG)" on page 9)
- 15 Indicates the current broadcast in the selected programme.
 - ▶ Tap on the TV picture in order to switch to full screen mode.
 - ▶ Tap on the TV picture again in order to close full screen mode again.
- 16 With the  (Up) and  (Up) buttons you can select the next / previous channel from the current programme list. (Refer to the illustration, point 1)
- 17 Broadcasting time and title of the current broadcast.
- 18 Broadcasting time and title of the following broadcast.

7.2 Electronic program guide (EPG): General

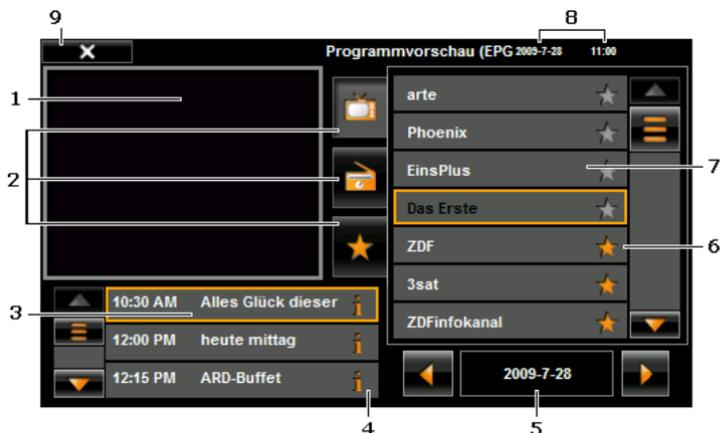

- 1 Programme of the selected channel.
- 2 Selection of channels in the channel list.



All TV Channels



All Radio Channels




Favourites

The button of the current selection has a "pressed" look.

- 3 Shows the programme guide for the current channel and the selected date. The current broadcast is highlighted by a border in orange. For each broadcast you are shown the broadcasting time and title.
 - ▶ You can use the (Up) button and the (Down) button to move through the list.
- 4 **Info** button: Shows detailed information about the selected broadcast. (Refer to "Electronic program guide (EPG)" on page 9)
- 5 Indicates the date for which the programme guide is shown.
 - ▶ Using the (To the Left) and (To the Right) buttons you can have the programme guide for another day shown.
- 6 **Favourites**: The asterisk on the button is shown in orange if you have added the channel to the **FAVOURITES** list. (Refer to "Adding a channel to the Favourites" on page 9)

- 7 Channel list (depending on selection, refer to point 1)
 - ▶ The currently selected channel is highlighted by a border in orange.
 - ▶ Tap on the title of the broadcast for which you would like to receive more details.
 - ▶ You can use the  (Up) button and the  (Down) button to move through the list.
- 8 Current time / current date
- 9 Closing the programme guide

7.3 Electronic program guide (EPG): Details

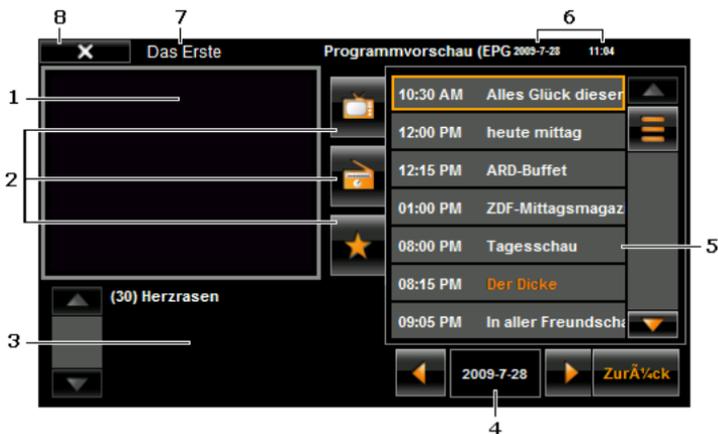

- 1 Programme of the selected channel. Tap on the TV picture in order to return to the **TV** window.
- 2 Selection of channels in the channel list.



- 3 Shows all the information available for the selected broadcast
- 4 Indicates the date for which the programme guide is shown.

- ▶ Using the  (To the Left) and  (To the Right) buttons you can have the programme guide for another day shown.

- 5 Programme list for the selected channel on the selected date
 - ▶ The current broadcast is highlighted by a border in orange.
 - ▶ The title of the broadcast for which details are shown is highlighted in orange.
 - ▶ Tap on the title of the broadcast for which you would like to receive more details.
 - ▶ You can use the  (Up) button and the  (Down) button to move through the list.
- 6 Current time / current date
- 7 Currently selected channel
- 8 Back: Re-opens the **ELECTRONIC PROGRAM GUIDE (EPG): GENERAL** window.

7.4 Info



- 1 All the information available for the currently running broadcast is shown here.
- 2 Technical information
- 3 TV picture
- 4 OK: Closes the **INFO** window.

8 Appendix

8.1 Technical data

Dimensions		28 x 87 x 14 mm
Weight		approx. 17.2 g
Operating conditions	Operating temperature	-10°C to 70°C (14°F to 158°F)
	Storage temperature	-30°C to 80°C (-22°F to 176°F)
CPU		Siano SMS1150
Antenna		Telescopic antenna with MCX connection (50 Ω)
Power supply		Via USB
TV	Bandwidth	VHF: 174 ~ 240 MHz UHF: 470 ~ 862 MHz
	Supported modulations	COFDM (16QAM, 64QAM, QPSK)
	Demodulation conform with	ETSI 300-744
	Supported TV resolution	720x576
	Supported TV compression	MPEG-2

8.2 Declaration of Conformity

The **NAVIGON 8410 TV Module** described in this manual bears the CE label among others.

Products with the CE marking comply with Radio & Telecommunication Terminal Equipment Directive (R&TTE) (1999/5/ECC), the Electromagnetic Compatibility Directive (89/336/ECC) and the Low Voltage Directive (73/23/ECC) – as amended by Directive 93/68/ECC – issued by the European Community Commission.

Compliance with these directives implies conformity with the following European Standards:

EN 55013: 2001 + A1: 2003 + A2: 2006, EN 55020: 2007,
EN 55022: 2006 + A1: 2007, EN 55024: 1998 + A1: 2001 + A2: 2003

The manufacturer is not liable for modifications made by the user which may alter the device's conformity with the applicable directives and standards, nor for the consequences thereof.

9 Index

C

Channel	
Select.....	8
Channel search	11
Configuration	11
Conventions followed in this manual.....	4

E

Electronic program guide (EPG)	
Details.....	16
General.....	15
Electronic program guide (EPG)	9
Energy	7

F

Favourites.....	9
-----------------	---

H

Hotline	4
---------------	---

I

Info	11, 17
Installation	6

M

Manual	
Conventions.....	4
Symbols.....	4

S

Safety information	5
Scope of Delivery	5
Service	4
Settings	11
Start.....	7
Support.....	4
Symbols used in this manual	4

T

Trade marks.....	4
TV.....	13

V

Volume.....	9
-------------	---

W

Warranty.....	4
---------------	---