 


Headphones



 
USB Cable

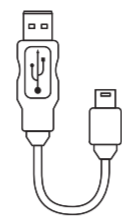

User Guide




CD

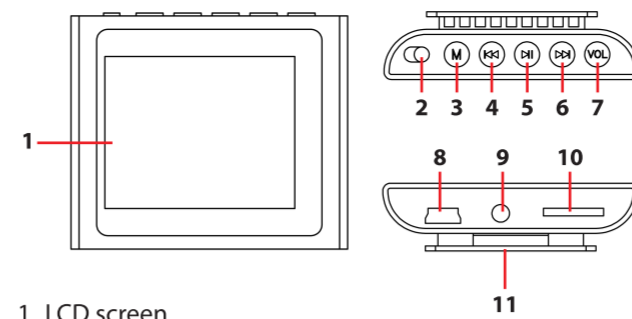

1. LCD screen
2. Power on/off switch
3. [M] button: Select / Open menus / Main menu (press and HOLD)
4. [⏪] button: Previous file / Rewind (press and HOLD) / Volume down
5. [⏩] button: Play / Pause / Power on/off (press and HOLD)
6. [⏭] button: Next file / Fast Forward (press and HOLD) / Volume up
7. [VOL] button: Open volume menu (while playing media)
8. Mini USB port
9. Headphone jack
10. MicroSD card slot
11. Clip

 1. Slide the [POWER] switch to the **ON** position.
Note: The player will not charge while the [POWER] switch is in the power OFF position.
2. Connect the player to your computer using the included USB cable.
3. Charge the battery between 3-5 hours. Do not charge for more than 8 hours.
4. The battery icon in the lower right corner of the charging screen is the charging indicator. It will move while charging and remain solid green when finished charging.

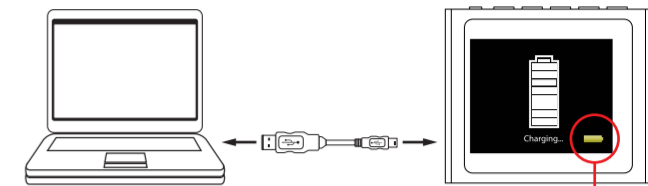

Charging Indicator

Battery level indication:

- indicates that the battery is full.
- indicates low battery; the player should be charged as soon as possible.

IMPORTANT: Charge the player for at least 8 hours before using it for the first time.

Basic operation

 
Main menu

Micro SD card

Turning on/off


Make sure the MP3 player is fully charged before turning it on.

- To turn on the player, make sure the [POWER] switch is in the "ON" position. If it is already in the "ON" position, then press and **HOLD** the [⏩] button until the display lights up.
- To turn off the player, press and **HOLD** the [⏩] button until the display shuts off or slide the [POWER] switch to the "OFF" position.

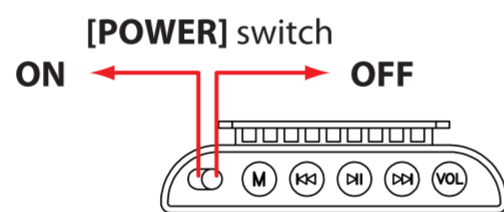

To navigate the main menu

 
- [⏪] move the selection left to the previous option
- [⏩] move the selection right to the next option
- [M] confirm the selection

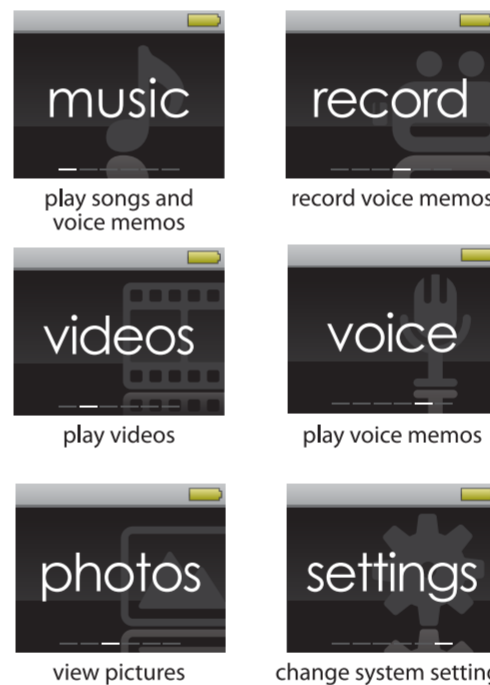

The player supports Micro SD cards (not included), which allow you to add up to 8GB of additional memory to the player.

To insert the Micro SD card:

 1. Insert the Micro SD card into the card slot with the metal contacts facing up towards the front of the player, and gently push it in until it clicks. Do not apply excessive force, as this may damage the player and Micro SD card.
2. To remove the Micro SD card, gently push it in until it pops out.

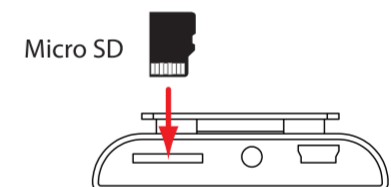


- i** Do not use force while inserting or removing the Micro SD card.
- Do not remove the card during file transfers.
- Make sure the player is turned off before inserting or taking out the card.




Transferring media files to the player

Music

 1. Find music, picture, or video files on your computer.

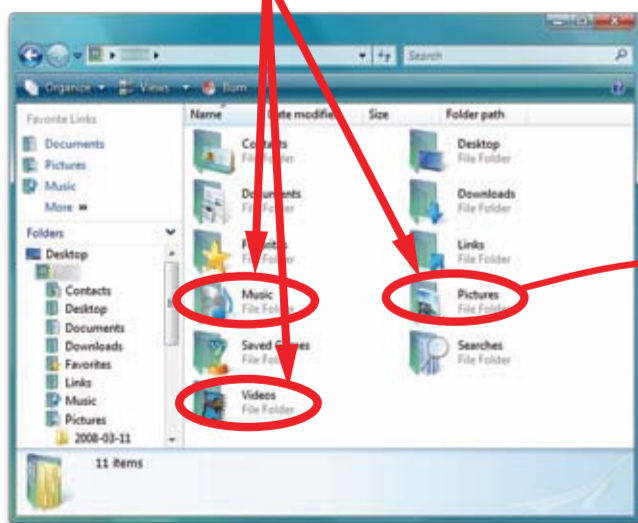

 2. Connect the MP3 Player to your computer, and locate "MP3"
3. Drag or copy the files as shown below (do not drag or copy files into the "RECORD" folder).

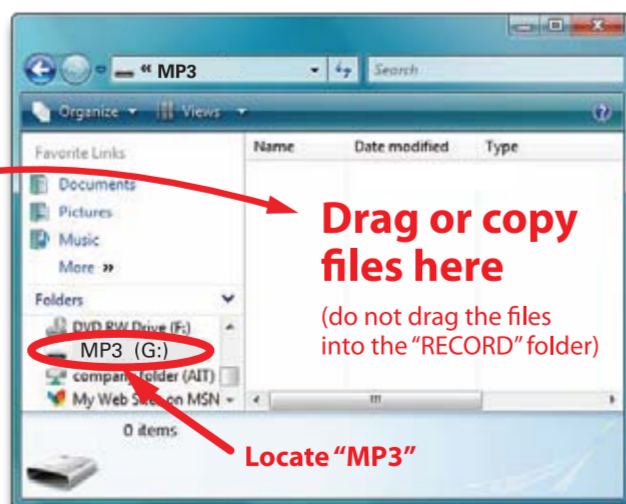

IMPORTANT: Do not disconnect the MP3 Player from the PC while transferring files as doing so will damage the MP3 Player and your files.

i It is also possible to delete files on the player while connected to the computer. Select the file and press the delete key of the computer's keyboard.

 
When you are done, disconnect your MP3 Player from the computer using the "Safe Device Removal" utility in the taskbar.

NOTE: Screenshots above may be slightly different than your computer's operating system.

1. To play music, select "music" from the main menu and press the [M] button to confirm. The music playback screen will be displayed.
2. Use the [⏪] or [⏩] button to select a track then press the [⏩] button to start playing the selected track.

i To browse music files on the player, refer to "music menu 2" - then search in **Local folder (player)** or **Card folder (Micro SD card)**.

Music controls (playback screen)



1. [M] access music menus 1 and 2 / press and HOLD for main menu / confirm volume level
2. [⏪] previous track / rewind (press and HOLD) / decrease volume
3. [⏩] play music / pause music
4. [⏭] next track / fast forward (press and HOLD) / increase volume
5. [VOL] open the volume menu

Volume

To adjust the music volume, press the [VOL] button to open the volume menu, then use the [⏪] or [⏩] buttons to adjust the volume, then press the [M] button to confirm the level and return to the music playback screen.

Music controls (menu 1 and menu 2)

- [M] confirm selection / press and HOLD for main menu
- [⏪] moves the selection up
- [⏩] return to music playback screen
- [⏭] moves the selection down

Music menu 1

1. While music is **PLAYING**, press the [M] button to access music menu 1 where you can select from the following options:

- Repeat** - track repeat options
- Equalizer** - select music type
- SRS WOW** - adjust sound field
- Replay mode** - track loop options
- Exit** - exit to music playback screen

2. Press the [M] button to confirm your choice.

Music menu 2

1. While music is **PAUSED**, press the [M] button to access music menu 2 where you can select from the following options:

 
- Local folder** - browse music files on the player
- Card folder** - browse music files on the Micro SD Card
- Delete file** - delete a single music file
- Delete all** - delete all music files
- Exit** - exit to music playback mode

2. Press the [M] button to confirm your choice.


Video converter

i Before transferring video files to the player, you must convert them to the correct format. Use the Video Converter on the provided CD to convert most video files to the correct format suitable for the player.

1. Insert the CD into the CD drive of your computer.

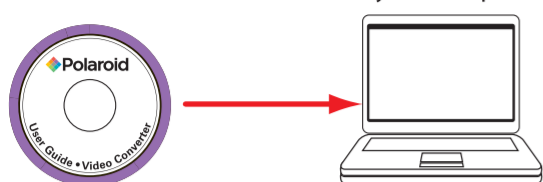

 2. Click on "User Guide".
3. Click on "View" to view instructions on installing and using the video converter.

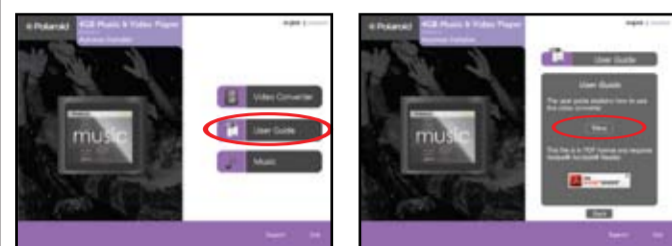

Click "User Guide"

 
Click "View"

Videos

1. To play videos, select "videos" from the main menu and press the [M] button to confirm. The video playback screen will be displayed.
2. Use the [⏮] or [⏭] button to select a video then press the [▶] button to start playing the selected video.

i To browse video files on the player, refer to "video menu" – then search in **Local folder (player)** or **Card folder (Micro SD card)**.


Video controls (playback screen)



- [⏮] previous video / rewind (press and **HOLD**) / decrease volume
- [▶] play / pause video
- [⏭] next video / fast forward (press and **HOLD**) / increase volume
- [VOL] open the volume menu (only available when video is paused)

Video controls (menu)

 - [M] confirm selection / press and **HOLD** for main menu
- [⏮] moves the selection up
- [▶] return to video playback screen
- [⏭] moves the selection down



Video menu

1. While a video is **PAUSED**, press the [M] button to access the video menu where you can select from the following options:
 - Local folder** – browse video files on the player
 - Card folder** – browse video files on the Micro SD Card
 - Delete file** – delete a single video file
 - Delete all** – delete all video files on the player
 - Repeat** – video file repeat options
 - Exit** – exit to video playback screen
2. Press the [M] button to confirm your choice.

Volume

To adjust the video volume, first pause the video, then press the [VOL] button to open the volume menu, then use the [⏮] or [⏭] buttons to adjust the volume, then press the [M] button to confirm the level and return to the video playback screen.

Voice

1. To listen to voice memos, select "voice" from the main menu and press the [M] button to confirm. The voice memo playback screen will be displayed.
2. Use the [⏮] or [⏭] button to select a recorded voice memo, then press the [▶] button to start playing the selected voice memo.

Voice menu 1

While a voice memo is **PLAYING**, press the [M] button to access voice menu 1 where you can select from the following options:

- Repeat** – voice memo repeat options
- Replay mode** – voice memo replay options
- Exit** – exit to voice memo playback screen

Voice menu 2

While a voice memo is **PAUSED**, press the [M] button to access voice menu 2 where you can select from the following options:

- Local folder** – browse voice memos
- Card folder** – browse voice memos on the Micro SD card
- Delete file** – delete a single voice memo
- Delete all** – delete all voice memos
- Exit** – exit to voice memo playback mode

Note: You can also find and play recorded voice memos in the "music" section of the player. Open "music" then open the "record" folder and search for the voice memo.

Photos

1. To view photos, select "photo" from the main menu and press the [M] button to confirm. The photo list screen will be displayed.
2. Use the [⏮] or [⏭] button to select a photo, then press the [▶] button to view the selected photo.
3. Use the [⏮] or [⏭] button to scroll through the photos manually.
4. Press [▶] to return to the photo list screen.

i To browse photo files on the player, refer to "photo menu" – then search in **Local folder (player)** or **Card folder (Micro SD card)**.

Photo menu

1. While viewing the photo list screen, press the [M] button to access the photos menu where you can select from the following options:
 - Local folder** – browse photo list on the player
 - Card folder** – browse photo list on the Micro SD card
 - Playback set** – slideshow settings
 - Delete file** – delete a single photo
 - Delete all** – delete all photos
 - Exit** – exit to photo list screen

2. Press the [M] button to confirm your choice.

Photo controls (menu)

- [M] confirm selection / press and **HOLD** for main menu
- [⏮] moves the selection up
- [▶] return to photo screen / play slideshow
- [⏭] moves the selection down

Slideshow

1. To change between manual photo viewing and slideshow mode, press the [M] button while in the picture list screen.
2. Select "Playback set" and press the [M] button to confirm.
3. Select "Auto play" and press the [M] button to confirm to enter slideshow mode.
4. Use the [⏮] or [⏭] button to adjust the time between photo slides and press the [M] button to confirm.
5. Press the [▶] button to start the slideshow.

i To switch back to manual photo viewing, press the [▶] button to pause the slideshow, then press [M] to open the photo menu, then select "Playback set", then select "Manual play".

Record

1. To record voice memos, select "record" from the main menu and press the [M] button to confirm. The voice memo record screen will be displayed.
2. Press the [▶] button to start recording a voice memo.
3. To pause the recording, press the [▶] button again.
4. To save the recording and exit to the main menu, press and **HOLD** the [M] button.

Note: You can save the recorded file while the player is recording or while it is paused by pressing and **HOLDING** the [M] button.

Record menu

1. While not recording, press the [M] button to access the recording menu where you can select from the following options:

- Local folder** – save voice memos to the player
- Card folder** – save voice memos to the Micro SD Card (if inserted)
- REC type** – Set audio quality
- Exit** – exit to record screen

2. Press the [M] button to confirm your choice.

Settings

In the settings menu you can customize various player settings such as date and time, language, display settings and more.

1. To change the player's settings, select "settings" from the main menu and press the [M] button to confirm. The setup screen will be displayed.
2. Use the [⏮] or [⏭] button to scroll to a setting, then press the [M] button to make changes to the setting.
3. Press the [M] button to confirm changes.

Settings options

- Clock** - adjust the date and time
- LCD set** - Set the LCD screen time out
- Language** - choose a language
- Clock** - adjust the date and time
- Power off** - Set a sleep timer or shutoff time
- Exit** - Exit to settings

Deleting files

1. Connect the player to your computer, and locate "MP3".
2. Open "MP3" by double clicking on it.
3. Locate the file you would like to delete and **RIGHT** click on the file.
4. Locate "Delete" and **LEFT** click on the selection.
5. Select **Yes** or **No** to confirm or deny deletion of the file.

Legal information

FCC Part 15:
This equipment has been tested and found to comply with the requirements for a Class B digital device under Part 15 of the Federal Communications Commission (FCC) rules. These requirements are intended to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Re-orient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Do not attempt to repair or modify this equipment.
Warning: Changes or modifications to this equipment not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
*This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Copyright Information:
Trademarks and trade names used in this instruction manual are owned by their respective companies or organizations.

Unauthorized duplication of any recordings whether downloaded from the Internet or made from audio CDs is a violation of copyright laws and international treaties.
The making of unauthorized copies of copy-protected material, may be an infringement of copyrights and constitute a criminal offense. This equipment should not be used for such purposes.

Troubleshooting

Can not power on

- The battery may be exhausted, please recharge the battery.
- Check that the [POWER] switch is in the **ON** position.

Files can not be transferred to the player

- Check if the driver is installed correctly in the computer by disconnecting and then reconnecting the player to the computer
- Check the connection between the player and PC, and confirm the USB cable is properly connected.
- Player not recognized by computer**
- Check the connection between the player and PC, and confirm the USB cable is properly connected.
- Check that the [POWER] switch is in the **ON** position.
- No sound from the headphones**
- Please ensure the volume is turned up, and the headphones are properly connected.
- Check if the format of music file is supported by the player.

Can not record

- Check if there is enough memory and battery capacity.
- Display is in the wrong language**
- Please ensure you selected the correct language from the "Settings" menu.

The buttons do not work

- Slide the [POWER] switch to the left to unlock the player.
- I cannot display my .jpg files**
- Many digital cameras and image editing softwares add hidden data to the .jpg files. This data can prevent the player from loading the images. Try to eliminate them by saving the file with another name.

Warranty

In the unlikely event that this product is defective, or does not perform properly, you may within ninety (90) days from your original date of purchase return it to the authorized service center for repair or exchange.

TO OBTAIN WARRANTY SERVICE:

- Provide proof of the date of purchase within the package (Dated bill of sale)
- Prepay all shipping costs to the authorized service center, and remember to insure your return.
- Include a return shipping address (no P.O. Boxes), a telephone contact number, and the defective unit within the package.
- Describe the defect or reason you are returning the product. Your product will be repaired or replaced, at our option, for the same or similar model of equal value if examination by the service center determines this product is defective. Products received damaged as a result of shipping, will require you to file a claim with the carrier.

The shipping address of the authorized service center is:

AIT, Inc.
ATTN: Customer Service (2nd floor)
14-C 53rd Street
Brooklyn NY 11232

IN NO EVENT WILL AIT, ITS MANUFACTURERS, DISTRIBUTORS OR PLR IP HOLDINGS, LLC BE LIABLE FOR ANY INCIDENTAL, DIRECT, INDIRECT, SPECIAL, PUNITIVE OR CONSEQUENTIAL DAMAGES (SUCH AS, BUT NOT LIMITED TO, DAMAGES FOR LOSS OF PROFITS, BUSINESS, SAVINGS, DATA OR RECORDS) RELATED TO THIS PRODUCT. EXCEPT AS STATED HEREIN, NO OTHER WARRANTIES SHALL APPLY.

Should you have any questions or problems concerning this product, please contact our customer service department at:

Customer Support:
☎ 1-877-768-8483 (Toll Free)
✉ polaroidsupport@southerntelecom.com

Monday - Thursday: 9AM - 5PM (EST)
Friday: 9AM - 3PM (EST)