



Nothing like Anything



Q36 User Guide

User Guide

Welcome

Thank you for purchasing the Micromax Q36. The Micromax Q36 provides you with the following rich array of exciting features:

- Tri SIM- 1 CDMA and 2 GSM cards
- 0.3 MP Camera
- Music Player and FM Radio with Recording
- Video Recorder and Player
- Sound Recorder
- Bluetooth/WAP
- Loud Speaker
- Memory Card support (up to 8 GB)
- Java Opera Mini, Facebook

Please read this manual carefully to make the full use of its features.

User Guide

Table of Contents

1 Know Your Phone.....	6
1.1 Phone Layout	6
1.2 Keys and Parts	6
1.3 Icons and Indicators	8
2 Getting Started.....	9
2.1 Remove/Insert Battery	9
2.2 Insert SIM Card	11
2.3 Insert Memory Card	12
2.4 Charge the Battery	13
3 Basic Operations	15
3.1 Switch Phone ON/OFF ..	15
3.2 Unlock SIM/UIM Card	15
3.3 Unlock SIM/UIM Card	16
3.4 Make a Call	16
3.5 Answer a Call	17
3.6 Reject a Call	18
3.7 Mute a Call	18
3.8 Hold a Call Conference ..	18
3.9 Swap a Call	19
4 Phonebook	19
4.1 Add New Contact	20
4.2 View Contact Detail	20
4.3 Send SMS Via Phonebook ..	20
4.4 Send MMS	20
4.5 Call a Contact	21
4.6 Edit a Contact	21
4.7 Delete a Contact	21
4.8 Copy a Contact	21
4.9 Move a Contact	21
4.10 Send vCard	22
4.11 Add to Blacklist	22
4.12 Mark Several	22

User Guide

4.13 Caller Groups.....22

4.14 Phonebook Settings.....23

5 Call Logs.....24

5.1 View Call Logs.....24

5.2 View Missed Calls.....25

5.3 View Dialed Calls.....25

5.4 View Received Calls.....25

5.5 Delete Call Logs.....25

6 Messaging.....26

6.1 Write Text Messages.....26

6.2 Write MMS.....27

6.3 Broadcast Messages.....28

6.4 Voicemail Server.....28

6.5 Read a Message.....29

6.6 Delete Messages.....29

6.7 Message Settings.....30

7 File Manager30

7.1 Format Memory Card.....32

7.2 Send Files.....33

8 Multimedia33

8.1 Camera.....33

8.2 Image Viewer.....35

8.3 Video Recorder.....36

8.4 Video Player.....37

8.5 Music Player.....38

8.6 Record Sounds.....39

8.7 Play FM Radio.....40

9 User Profiles42

10 Connectivity44

10.1 Access Network Services.....44

10.2 WAP Services and Settings.....44

10.3 Data Account.....44

11 Applications45

11.1 Java.....45

11.2 Fun & Games.....45

11.3 Calculator.....46

11.4 Text Reader.....46

11.5 Unit Converter.....46

User Guide

12 Organizer47

12.1 Schedule Tasks47

12.2 Schedule Alarm47

12.3 World Clock.....48

12.4 Currency Converter48

12.5 Stopwatch48

12.6 Time Mute48

13 Settings49

13.1 Reception Mode.....49

13.2 Phone Settings49

13.3 Network Settings.....51

13.4 Security Settings.....51

13.5 Restore Factory Settings52

13.6 Bluetooth54

14 Safety

Precautions56

**15 Taking Care of
Your Device59**

1 Know Your Phone

1.1 Phone Layout



1.2 Keys and Parts

Important keys and parts are listed here for you to use the phone better.

Keys	Function Description
------	----------------------







User Guide

G2 key	In idle mode, press to access SIM2 call logs. In edit screen, press to select and confirm.
Right soft key	In idle mode, press to get into Phonebook. In edit screen, press it to clear and cancel
Send key1/2	Press to make or answer a call. Show call logs for SIM 1/SIM 2.
End key	Press to end or reject a call. Press in edit screen to get back to idle mode. Hold it to turn on or off the phone
OK key	In idle mode, press to get into Main menu. Press to confirm.
Navigation keys	Press Left to access alarm. Press Right to access the Calendar. Press Up to access music player. Press Down to write SMS.
Radio	Press in idle mode to open Radio directly.
Volume keys	Volume keys are at the right side of phone. Press them in idle mode to adjust the

User Guide

	volume. Press them to adjust the volume in some interface. Press them in menu to navigate through the menus.
Camera Key	Press to access the camera

1.3 Icons and Indicators

Icons	Indication	Icons	Indication
	SIM1 network signal level.		Missed calls of slave SIM
	SIM2 network signal level.		Missed calls of CDMA.
	UIM network signal level		Alarm is set.

User Guide



Power level of
Battery



The headset is
plugged in.



Unread SMS of
master SIM



Current profile
is General.



Unread SMS of
slave SIM



Current profile
is Silent.



Unread SMS of
CDMA/UM.



Current profile
is Meeting



Missed calls of
master SIM



Current profile
is Outdoor.



Bluetooth is
powered on.



Screen is
locked.

2 Getting Started

2.1 Remove/Insert Battery

You may need to remove the battery to insert SIM cards, Memory

User Guide

 
card or for replacing the battery.

To remove the battery:

1. Invert the back of the mobile phone upward and take off the rear cover according to the following figure.



2. Take out the battery as shown in the following figure.

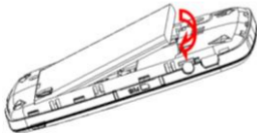

3. Finally place back the rear cover of the mobile phone after

User Guide

removing/inserting the battery as required.

Note: When inserting the battery, ensure that the metal teeth at the top of the battery comes in contact with the corresponding metal slots of the mobile phone. After this, press the battery down to insert the battery in place.

2.2 Insert SIM Card

The Q36 is a triple SIM mobile phone allowing you to use two GSM Cards and one UIM (CDMA) card. To insert the SIM card(s):

1. Switch off the mobile phone and remove the rear cover and battery.
2. Insert the SIM cards correctly in the SIM slot(s) as shown below.



3. Finally, insert the battery and replace the rear cover of the mobile phone.

2.3 Insert Memory Card

 
Use only compatible memory cards approved by Micromax. Incompatible cards may damage the slot or corrupt the data stored in the card.

To insert the memory card:

1. Switch off the phone and remove the rear cover and the battery.

User Guide

2. Open the memory card slot, and insert the memory card into the slot.

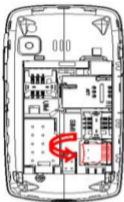

3. Close the memory card slot.
4. Finally, insert the battery and the rear cover of the mobile phone.

 
2.4 Charge the Battery

You can charge your battery via the charger or the USB cable supplied with this phone.

1. Connect the charger to the charger jack on the phone.

User Guide

2. Connect the charger to a power socket. The charging starts, with the charging icon displayed in an animated state.

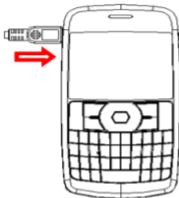

3. When the charging icon becomes static, it indicates that the battery is full.

4. Disconnect the charger from the power socket and the phone after charging.

Note: Slight heating during charging is normal. When the charging icon becomes static, it indicates that the battery is full.

3 Basic Operations

3.1 Switch Phone ON/OFF

To switch ON your phone, press and hold the **End key** for a few seconds.

To turn OFF your phone, press and hold down the **End key** for a few seconds.

3.2 Unblock SIM/UIM Card

To eliminate unauthorized usage, SIM card can be locked by adding PIN1 number in security settings. If PIN lock is activated, PIN1 must be input every time the mobile is switch on.

If PIN is input 3 consecutive times, the SIM card will be locked by the network. In this case, contact your network provider to resolve this issue.

Note: The network supplier will set a standard PIN1 (between 4 to 8 digitals) for your SIM card. Please change it to your personal pass word. For detail please see Security settings. The operations with UIM card are similar with SIM card.

User Guide

3.3 Unbck SIM/UIM Card

To eliminate unauthorized usage, your phone can be locked by adding a phone password in security settings.

If you forget the mobile phone password, please contact the local sales branch or service center to unlock the mobile phone.
(Default mobile phone password is 0000).

3.4 Make a Call

You can make a call in the following ways:

- Enter the desired number in standby mode and press the **Call key**.
- Go to **Menu> Phonebook** and then dial the desired number.
- Just press the **Call key** or the **G1** key to dial the contacts listed in Call logs.
- You can also dial a contact from the messages.
- For international calls, add the + character that replaces the international access code, and enter the

User Guide

country code, area code (omit the leading 0, if necessary), and phone number

3.5 Answer a Call

To answer a call, press the **Send** key or select **Options> Answer**.

3.5.1 Options during a Call:

When you are connected, pressing the **G2 key** gives you these options:

- **Hold Single Call:** The Caller and receiver will not hear each other. Enter **Options** again and choose **Retrieve Single Call** to go again connect with the other end.
- **End Single Call:** Choose this to end the current call.
- **New Call:** This is dependent on the network. If supported by network, you may dial another number while engaged in a call.
- **Phonebook:** While engaged in a call, you may browse the phonebook and make a new call.

User Guide

- **Messages:** While engaged in a call, you can browse and/or send/receive SMS.
- **Mute:** Your voice can not be heard at the other end if you mute the call.
- **DTMF:** the digits entered can be interpreted as a DTMF signal response at the other end. This can offer dialing to the telephone numbers with extensions or IVR(interactive voice response) systems for menu driven options.

3.6 Reject a Call

To reject a call, press the **End** key

3.7 Mute a Call

Press **Options** and then **Mute** while a call is active.

3.8 Hold a Call Conference

You can talk with more than one person at the same time through call conference.

- 1.While on a call, go to phonebook and dial a contact. Once the

User Guide

new call gets connected, the first call will be put on hold.

2. After this, press **Options** and then choose **Conference**.

Note: This is network dependent and you may need to contact your network operator for this.

3.9 Swap a Call

1. While on a call, go to phonebook and dial a contact. Once the call gets connected, the first call will be put on hold.
2. After this, press **Options** and then choose **Swap**. The active call and the call on hold will be swapped.

4 Phonebook

Your phonebook stores all your saved contacts for anytime use. Your phonebook data can be stored in your SIM card or your phone memory. You can access your phonebook by going to:

Menu > Phonebook

User Guide

4.1 Add New Contact

Menu > Phonebook

To add a new contact:

1. Select **Menu > Phonebook** and press the **Up** navigation key once. Then press the **OK** key.
2. Press **Select** and the choose storage location such as phone or SIM to store your contact.
3. Enter the desired contact name and number and press **OK** key.

4.2 View Contact Detail

Menu > Phonebook > OK Key> View

You need to highlight the contact to view its detail

4.3 Send SMS Via Phonebook

Menu > Phonebook > OK Key> Send text message

4.4 Send MMS

Menu > Phonebook > OK Key > Send multimedia message

Allows you to send a multimedia message to the desired contact.

4.5 Call a Contact

Menu > Phonebook > OK Key > Call

Allows you to make a call to the contact you are viewing. Or you can just highlight a number and press the **Call** key.

4.6 Edit a Contact

Menu > Phonebook > OK Key > Edit

Allows you to edit a highlighted contact.

4.7 Delete a Contact

Menu > Phonebook > OK Key > Delete

In the Contacts list, select the entry you want to delete.

4.8 Copy a Contact

Menu> Phonebook> OK Key > Copy

You can copy all entries stored in the SIM card to the phone memory and vice-versa.

4.9 Move a Contact

Menu > Phonebook> OK Key > Move

User Guide

Move the record from current storage to other storage.

4.10 Send vCard

Menu > Phonebook > OK Key > Send vCard

Allows you to send vCard to other numbers.

4.11 Add to Blacklist

Menu > Phonebook > OK Key > Add to Blacklist

Allows you to black list selected numbers. In this case the contact will be blocked from calling you up.

4.12 Mark Several

Menu > Phonebook > OK Key > Mark Several

Allows you to mark single or several contacts to send SMS, vCard or just delete.

4.13 Caller Groups

Menu > Phonebook > OK Key > Caller Groups

Create groups of contacts with common settings like ringtone and caller picture.

4.14 Phonebook Settings

Menu > Phonebook > OK Key > Phonebook settings

The phonebook settings provide the following options:

- **Preferred Storage:** Set the storage media as either SIM (1, 2), phone or all
- **Speed Dial:** Assign speed dial for rapid dialing to desired numbers.
- **My Number:** Add my number to the phone.
- **Extra Numbers:** Add extra numbers like Owner, Fix dial or SOS numbers:
- **Memory Status:** Check the memory status of SIM, Phone and groups.
- **Copy Contacts:** Allows you copy the contacts from phone to SIM and vice versa
- **Move Contacts:** Move contacts from Phone to SIM or vice versa.
- **Delete All Contacts:** Delete all contacts from phone or SIM.

5 Call Logs

5.1 View Call Logs

Menu > Call Logs> SIM1/SIM2/UIM Call History

The Call log lists the calls you have recently dialed, received, missed for SIM1 and SIM 2 or UIM card.

- **Missed Calls:** Allows you to view missed calls
- **Dialled Calls:** Allows you to view dialled Calls
- **Received Calls:** View received Calls.
- **All Calls:** View all the recent calls.
- **Delete Call Logs:** Lets you delete the call logs.
- **Call Timers:** View or reset call times
- **Call Cost:** View or set call cost.
- **Text Msg. Counter:** Lets you view the text message count.
- **GPRS Counter:** Lets you view or reset the GPRS usage details.

Tip: You can also directly access the call logs of SIM 1 and SIM 2

User Guide

*by directly pressing the **G1** key or the **G2** key.*

5.2 View Missed Calls

Menu > Call Logs> SIM1/SIM2/UIM Call History> SIM1/SIM2/UIM Missed Calls

View missed Calls.

5.3 View Dialed Calls

Menu > Call Logs> SIM1/SIM2/UIM Call History> SIM1/SIM2/UIM Dialed Calls.

View dialed calls

5.4 View Received Calls

Menu > Call Logs> SIM1/SIM2/UIM Call History> SIM1/SIM2/UIM Received Calls

View received calls.

5.5 Delete Call Logs

Menu > Call Logs> SIM1/SIM2/UIM Call History> Delete

SIM1/SIM2/UIM Call logs

Delete Call Logs

6 Messaging

6.1 Write Text Messages

Menu > Messages > SMS> Write Messages

You can compose and send text messages with your acquaintances using this feature. Pressing **G2 key** during/after composing the message gives you these options:

- **Send to:** Send the message.
- **Input method:** To choose a **text** input method.
- **Insert template:** You can insert an existing text template into the SMS.
- **Advanced:** You can insert number/name/bookmark into the SMS.
- **Save to drafts:** Save the message for sending at a later time.

6.2 Write MMS

Menu > Messages > MMS> Write Message

Allows you to write/compose a Multimedia message. You can fill in the recipient information such as To:, CC, BCC, and subject.

Next, just highlight the 5th option and then press OK to the compose screen. Pressing G2 key gives you these options:

- **Done:** Select this option when you want to directly go ahead with the sending of the composed MMS.
- **Input method:** To choose an available input method.
- **Add Picture/Audio/Video/Attachment:** You can insert these files for sending with your MMS.
- **Add Slide Before:** Add the slide before the current slide
- **Add Slide After:** Add the slide after the current slide
- **Add Bookmark text:** Add bookmarks to your MMS.
- **Preview:** Preview your MMS before sending.
- **Slide Times** Set the slide transition timings

6.3 Broadcast Messages

Menu > Messages > Broadcast message

Broadcast message is an information service to all users in a specific location sent by the network operator, such as weather forecast, transportation conditions and so on. You can access this feature via:

You have the following options under this feature:

- **Receive mode:** Choose whether to enable or disable cell broadcast.
- **Read Message:** Read the received message broadcast by the service provider.
- **Languages:** Choose the display language of cell broadcast.
- **Channel Settings:** Set the channel of cell broadcast.

6.4 Voicemail Server

Menu > Messages > Voicemail Server

Configure your voicemail server to leave or retrieve voicemails. Please contact your network provider for more details regarding the voicemail server number.

6.5 Read a Message

Press the **Read** option when the incoming message is highlighted on your LCD screen. You can read a message by opening the Inbox of your SMS or MMS.

When reading a message, you can select **G2 key** to access the following.

- **Reply:** Allows you to reply to the message.
- **Call sender:** Call the message sender.
- **Forward:** Forward the message
- **Delete:** Delete the message
- **Advanced:** You can use number, URL, email, USSD, Move or copy the message.

In the same way, you can view message in your draft, outbox etc.

6.6 Delete Messages

Menu > Messages

In Message, go to the desired folder and then press **Options > Delete / Delete All** for the highlighted message.

6.7 Message Settings

Menu > Messages > SMS/MMS > SMS/MMS Settings

You can set your desired parameters for Text message/Multimedia message including backups.

- **Profile setting:** Activate/edit your desired profile
- **Common Settings:** Allows you to set preferences such as delivery report, and reply path.
- **Memory Status:** View status of your phone and SIM memory.
- **Preferred Storage:** Set phone or SIM as your preferred storage location.

For MMS, you can set profiles or common settings.

7 File Manager

Menu > File Manager

Allows you to view and manage files available in the Phone or memory card.

User Guide

Menu > File Manager> Options

Depending on the type of memory you have highlighted, you have these options:

- **Open:** Open the current file or folder.
- **Format:** Format the selected memory.
- **Rename:** Rename the highlighted file (Applicable to Card memory).
- **Details:** View the details of the memory. (Applicable to Card memory).

When you open a file, depending on the folder content, pressing the **Options** allows you to view, rename, move or delete the file. In addition, you may have these options:

- **View:** View the file.
- **Send:** Send via MMS or Bluetooth.
- **Use as:** Use the file according to the given option.
- **New Folder:** Create a new folder in the current directory.
- **Rename:** Rename the current file.
- **Delete:** Delete the current file.

User Guide

- **Sort by:** Sort the file by the options listed.
- **Mark Several:** Mark several items to copy, delete, or move.
- **Copy:** Copy the current file from current location to another location (phone or memory card).
- **Move:** Move the current file from current location to another location (phone or memory card).
- **Delete all files:** Delete all the files from the current folder.
- **Details:** View details of the current file.

7.1 Format Memory Card

Menu > File Manager> Memory Card

After this, press the **Options** and select **Format** to format the memory card.

Warning: All existing files in the memory card will be erased after your format the memory card

7.2 Send Files

Menu > File Manager> Memory Card

Highlight or open the file and press **Options** key. Next, choose **Send** to send the file via MMS, or Bluetooth or according to the option provided.

8 Multimedia

8.1 Camera

Menu > Multimedia> Camera

The built-in camera allows you to take photos and adjust the camera settings. You have the following options on pressing **G2 key**:

- **Photos:** View the saved photos.
- **Camera settings:** Set relevant parameters for the camera.
- **Image settings:** Set the size and quality of photo.
- **White balance:** It can set white balance of the camera.
- **Scene mode:** Set the scene mode of photo.
- **Effect settings:** Set the different effect for display of photo.

User Guide

- **Storage:** Set the storage location for photo.
- **Restore default:** Restore camera settings to default.

Shortcut key operations:

- **OK** key or Camera key to take a photo.
- Up/Down key to adjust the focal distance.
- Left/Right key to adjust EV.
- 1 key to change image size.
- 2 key to change image quality.
- 3 key to change white balance.
- 4 key to change scene mode.
- 5 key to change delay timer.
- 6 key to change continuous shot.
- 7 key to change effect settings.
- 8 key to change banding.
- 9 key to change shutter sound.
- # key to show/hide the icons.

8.2 Image Viewer

Menu > Multimedia > Image viewer

Pressing **G2 key** on the Image viewer screen allows you to:

- **View:** To view the picture.
- **Browse Style:** Set the picture browse style such as list or matrix mode.
- **Send:** Send present image through MMS or Bluetooth.
- **Use As:** You can use the image as wallpaper, screen saver or caller picture or power on/off display.
- **Rename:** Rename the highlighted file.
- **Delete:** Delete the highlighted file.
- **Sort by:** Sort the images by desired method.
- **Delete all files:** Delete all the files from the list.
- **Storage:** Set the storage location for photos.

Shortcut key operation:

- Left/Right key or Volume keys to change the picture.
- 1 key to zoom in the picture. (only for picture size larger than

320*240).

- 2 key to zoom out the picture (only for picture size larger than 320*240).
- 3 key to rotate the picture by 90°.

8.3 Video Recorder

Menu > Multimedia > Video Recorder

Press the **OK** Key to start recording.

Pressing **G2 key** before recording allows you to access:

- **Video Recorder settings:** Set relevant parameters for video shooting.
- **Video settings:** Set relevant parameters for the video.
- **White balance:** Allows you to set white balance for the video.
- **Effect settings:** Set the different effects for the video.
- **Storage:** Set the storage location for the video file. It can be phone or memory card. You can select memory card only if you have inserted the correct memory card in the phone.
- **Restore default:** Restore video settings to default. In this case, all your video recorder settings will return to the original settings.

User Guide

Shortcut keys:

- Press OK key or Camera key to Start/Pause record.
- Press Up/Down key to adjust the focal distance.
- Press Left/Right key to adjust EV

8.4 Video Player

Menu > Multimedia > Video player

The Video Player plays all your video files stored in the Phone or card memory). The video player gives you the following options on pressing **G2 key**:

- **Play**: Enter the play mode.
- **Send**: Send current video through MMS or Bluetooth
- **Rename**: Rename the current video file.
- **Delete**: Delete the current video.
- **Delete All Files**: Delete all the files from the list.
- **Sort By**: Sort the videos by the method available under this option.
- **Storage**: Set the storage location for the video as either phone or

User Guide

memory card.

While playing the video, press the **G2 key** to pause and **Right key** to stop.

Recommendation: If you have inserted the memory card and your phone does pick up the memory card, press the Left/right key once.

Shortcut key operation:

- OK key to Start/Pause playing.
- While playing, press the Left/Right key to change videos.
- Press the Volume key to adjust volume.

8.5 Music Player

Menu > Multimedia> Music

The Micromax Q36 comes with an inbuilt music player that plays all your favorite songs stored in the phone memory or T-Flash memory card. It gives you a host of settings to make your listening experience interesting.

Menu > Multimedia> Music > List

Lists the songs or music files available in the phone or memory card.

User Guide

Menu > Multimedia> Music > List > G1 Key

Provides you the following features:

- **Play:** To start playing the music file.
- **Details:** To show the details of the selected song.
- **Add to Ringtone:** Set the highlighted song as a ringtone.
- **Add:** Add music from desired file locations.
- **Remove/Remove all:** Remove highlighted song from the music list
- **Settings:** Set some relevant parameters for the music player.

Control Keys:

Shortcut key operation:

- Press ok key to play/pause the song.
- Press up/down key to stop the song.
- Press Left/Right key to change songs.
- Press Volume keys to adjust volume.

8.6 Record Sounds

Menu >Multimedia > Sound recorder

User Guide

Pressing **Options** on the Sound Recorder screen gives you these options:

- **New Record:** Begin recording. The recordings will be saved in the Audio folder.
- **List:** List all the recorded files.
- **Settings:** Set some relevant parameters for the sound recorder.

Shortcut key operation:

- Press **Up** key to start/pause recording.
- Press **Down** key to play the record.
- Press **Left/Right** key to change files.

8.7 Play FM Radio

Menu > Multimedia > FM radio

You can listen to your favorite FM channels using the inbuilt FM receiver of your phone.

Options > Channel List

List all the current saved channels. Just perform an auto search to fill

up this list.

Options > Manual Tuning

Input the desired channel frequencies manually.

Options > Auto search

Automatically search FM channels and fill up your channel list.

Options > Settings

Select the FM Radio preferences such as background play, loudspeaker, recording format, quality, storage location and so on.

Options > Record

Record the currently playing channel. You can also press the Down navigation key to start recording.

Options > Append

Append your current recording with a previous recording to create a combined recording.

Options > File List

View the existing list of recordings.

Shortcut key operation:

User Guide

- Press Up key to On/Off search function. If enable the function, the phone will search the channel automatically when press Left/Right key.
- Press OK key to Play/Stop the program.
- Press Left/Right key to change channel
- Press Down key to Start/Pause record
- Press Volume keys to adjust volume.

9 User Profiles

Menu > User Profiles

Set your user profile as well as customize that profile to suite your requirement.

The phone provides a set of default profiles including:

- General
- Meeting
- Outdoor

User Guide

- Indoor
- Headset
- Bluetooth

In standby screen, long press # key to activate silent mode. Only when the earphone is inserted, the headset profile can be automatically activated, while all other profiles will be automatically disabled.

Highlight a profile and press the G1 key to activate, customize or restore the settings. Depending on the profile, you can set the parameters such

- **Tone settings:** set tone for incoming call, alarm, message tone and keypad tone.
- **Volume:** adjust the volume for ring tone and key tone.
- **Alert type:** select alert type. There are ring, vibration only, vibration and ring, vibration then ring.
- **Ring type:** select to single, repeat or ascending.
- **Extra tone:** set reminding sound for special case:s such as warning, error, camp on or connect.
- **Answer mode:** turn on or off the feature of answering by any key.

10 Connectivity

10.1 Access Network Services

Menu > Connectivity> Services/(Your Network) Services

Allows you to access the services offered by your service provider.

10.2 WAP Services and Settings

Menu > Connectivity> WAP

WAP setting is required for surfing the Internet with WAP. This allows you to access the already configured internet services via home page, Bookmarks, input address, Recent Pages or perform WAP settings.

10.3 Data Account

Menu > Connectivity> Data Accounts

Allows you to choose an appropriate data account as per your chosen network operator.

Please contact your network operator for the settings if the data

accounts are not listed.

11 Applications

Menu > Applications

The Q36 comes preloaded with the following useful applications

11.1 Java

Menu > Applications> Java

You can directly access and enjoy Facebook, Opera Mini 4, and also play the PACMAN game.

For each of these applications, you have the option of setting preferences, viewing details, or restore default settings.

You can also choose your Java settings, Java default security, and also choose the network for your Java applications.

11.2 Fun & Games

Menu > Applications> Fun & Games

Lets you play interesting pre-loaded games to keep you pleasantly

occupied.

11.3 Calculator

Menu > Applications> Calculator

Helps you to do complex calculations instantly.

You also have the Unit converter, and currency converter and Stop watch to help instantly with your needs.

11.4 Text Reader

Menu > Applications> Text Reader

Lets you read files with *.txt* extension.

11.5 Unit Converter

Menu > Applications > Unit Converter

Helps you convert from one unit of measurement to another.

12 Organizer

Menu > Organizer

Your phone can help you to organize your routines and tasks.

12.1 Schedule Tasks

Menu > Organizer> Tasks

Lets you **s**chedule tasks on desired dates with alarm, priority, periodicity etc. You will be reminded of the tasks on schedule.

The organizer also provides you alarm and world clock which you can use anytime.

12.2 Schedule Alarm

Menu > Organizer> Alarm

Lets you **s**chedule alarms with the required settings.

12.3 World Clock

Menu > Organizer> World Clock

View the time zones of major cities and also your current city. You can also put on/off daylight saving time.

12.4 Currency Converter

Menu > Applications > Currency Converter

Converts values from one currency to another based on rates you enter.

12.5 Stopwatch

Menu > Organizer> Stopwatch

Use the stopwatch to count time elapsed and also view previously recorded counts.

12.6 Time Mute

Menu > Organizer> Time Mute

Lets you mute your phone at a set time.

13 Settings

Menu > Settings

You can customize your mobile phone to your needs through the settings provided on the phone:

13.1 Reception Mode

Menu > Settings> Reception Mode

Using this feature, you can choose how your phone receives signals. Depending on the number of SIM and UIM cards you insert, the following options are displayed:

- Only UIM active
- Only SIM 1 active
- Only SIM 2 active

13.2 Phone Settings

Menu > Settings> Phone Settings

Allows you to configure the following settings:

User Guide

- **Time and date:** Lets you set the Time and date on the phone.
- **Schedule power on/off:** Lets you set a particular time on the phone when the phone should Power on/off itself.
- **Language:** The Micromax Q36 currently supports English.
- **Pref. input method:** This enables you to select the text input method of your choice:
- **Display:** You can set a host of display preferences of the phone.
- **Greeting text:** Lets you set your own greeting message when you power ON the phone.
- **Dedicated key:** This option helps you dedicate/map certain features of the phone with the Directional keys (UP/DOWN/LEFT/RIGHT) of the phone. At anytime, you can change the mapping and select a new feature from the features available..
- **Shortcuts:** Help you use certain key features of the phone instantly. You can choose the features at your own wish and set them in the menu. You can add new features to the list, delete, edit, disable and change the order.

User Guide

- **Auto Update of Date and time:** This feature automatically updates the date and time on the phone from the network.
- **UART Settings:** This option can be activated for either SIM1 or SIM2. With this option, you can choose the access of PC software to SIM1, SIM2 or UIM Card.
- **Smart Dialling:** Displays names of contact based on the number typed on the phone.

13.3 Network Settings

Menu > Settings> Network Settings

Allows you to set the following:

- **SIM1/SIM2 Network Settings:** Lets you select the network and associated preferences for SIM1/SIM2/UIM card.

13.4 Security Settings

Menu > Settings> Security settings

This function can prevent unauthorized use of your SIM or phone including tracking in case of theft or loss. You have the following security options:

User Guide

- **SIM1 security settings:** Lets you set up passwords against illegal use of SIM 1.
- **SIM2 security Settings:** Lets you set up passwords against illegal use of SIM 2.
- **UIM Security Setup:** Set security for UIM card.
- **Phone Lock:** Lets you lock the phone or change the password as a security measure.
- **Auto Keypad Lock:** Lets you lock the keypad automatically or set the auto-keypad lock timings.
- **Theft Tracker:** Lets you perform settings for tracking the mobile in case of theft or loss.
- **Change Password:** Lets you change your phone password. The default phone password is 0000.

13.5 Restore Factory Settings

Menu > Settings> Restore Factory Settings

Lets you restore your phone settings to the original setting when you purchased the phone:

You need to enter your phone password to restore the phone to its factory or original settings. The default phone password is 0000.

User Guide

Note: The **Power Management** option lets you view the current battery power.

13.5.1 Call Settings

Menu> Settings > Call Settings

You have the following options under call settings:

- **SIM 1/SIM 2/UM Call Settings:** Set how calls will be handled by the selected SIM.
 - **Caller ID:** Hide/unhide caller ID or as set by network.
 - **Call Waiting:** If active, incoming calls during another active call will be put on wait.
 - **Call Divert:** This feature is network dependent. You may divert incoming calls to another mobile phone or a direct line telephone, but not to any extensions of a fixed telephone.
 - **Call Barring:** This is a GSM network service and can restrict outgoing and incoming calls selectively. If you need to change the settings or restrict calls, please contact your network operator to obtain the password for opening this service.

User Guide

- **Line switching:** Allows you to switch between Line 1 and Line 2 for your outgoing and incoming calls. Press the OK key to switch the lines.

13.5.2 Advanced Settings:

Menu> Settings > Call Settings > Advanced Settings

You have the following advanced setting options.

- **Blacklist:** Blocks a list of contacts as per your choice.
- **Auto Redial:** Redials automatically when call is not answered.
- **Call time display:** Displays duration of the call on the main screen.
- **Call Time Reminder:** Lets you set the time and reminds you for call.
- **Reject by SMS:** Send an SMS to the contact immediately after rejecting a call.

13.6 Bluetooth

Menu> Bluetooth

User Guide

You can connect wirelessly to other compatible device with Bluetooth technology. Compatible devices may include computers, mobile phones. You can use Bluetooth connectivity to exchange images, music and sound clips, video clips etc.

Selecting **Menu > Connectivity> Bluetooth> Options** gives you the following options:

- **Power:** Turn Bluetooth On/Off.
- **Visibility:** Set the visibility of your device against other Bluetooth devices.
- **My Device:** Display device model when connected
- **Search Audio Devices:** Search for hands-free devices that supports Bluetooth. Pairing up with Bluetooth-enabled audio devices allows you to exchange audio or video information with such devices.
- **My Name:** View or change the name of my phone as it appears to other Bluetooth devices.
- **Advanced:** Set your Bluetooth preferences. You need to first activate Bluetooth to perform advanced settings.

14 Safety Precautions



Please read these simple guidelines. Not following them may be dangerous or illegal.

About SAR

- Your phone is a low-energy radio frequency receiver and transmitter. Upon switching on, your phone will emit low-level radio frequency (RF).
- The specific absorption rate (SAR) is a measurement unit of body-absorbed RF quantity when the phone is in use.
- The SAR value is ascertained according to the highest RF level generated during laboratory tests. The true SAR level when the phone is operated will be far lower than this level. The nearer the phone is from a base station, the lower is the RF energy emitted by the phone.
- The highest SAR value is 0.412 W/kg averaged over 10 gms of human tissue.

SAR Recommendations

User Guide

- Please keep your calls short and use SMS whenever more convenient. This advice applies especially to children, adolescents and pregnant women
- Prefer to use your cell phone when the signal quality is good.
- People having active medical implants should preferably keep the cell phone at least 15 cm away from the implant.
- Maintain a preferable distance of 15 mm from the device..

Safe Driving

- Do not use the phone while driving. When you have to use the phone, please use the personal hands-free kit.
- Please put the phone safely in the phone stand. Do not put it onto any passenger seat or any place from which it may fall down in case of vehicular collision or emergency braking

During Flight

- Flight is influenced by interference caused by the phone. It is illegal to use a phone on the airplane. Please turn off your phone during a flight

User Guide

In Hospitals

- Your Phone's radio waves may interfere with the functioning of inadequately shielded medical devices. Consult a physician or the manufacturer of the medical device to determine whether they are adequately shielded from external Radio Frequency. Switch off your device when regulations posted instruct you to do so.
- To avoid potential interference with implanted medical devices such as a pacemaker or cardioverter defibrillator:
- Always keep your phone at least 15.3 centimetres (6 inches) from the medical device.
- Do not carry the wireless device in a breast pocket.
- Turn off the phone if there is any reason to suspect that interference is taking place.
- Follow the manufacturer directions for the implanted medical device.
- If you have any questions about using your wireless device with an implanted medical device, consult your health care provider.

Unsafe Areas

- Please turn off your phone when you are close to a gas station or in

User Guide

the vicinity of any place where fuel and chemical preparations, or any other dangerous goods are stored.

15 Taking Care of Your Device



Your device is a product of superior design and craftsmanship and should be handled with care: The following suggestions will help you protect your phone:

- Keep the device dry. Precipitation, humidity, and all types of liquids or moisture can contain minerals that will rust electronic circuits. If your device does get wet, remove the battery without turning on the device, wipe it with a dry cloth and take it the service center.
- Do not store the device in high or cold temperature. High temperatures can shorten the life of electronic devices and damage batteries.
- Do not use or store the device in dusty, dirty areas. Its moving parts and electronic components can be damaged.
- Do not store the device in high or cold temperature. High temperatures can shorten the life of electronic devices and damage batteries.

User Guide

- Do not attempt to open the device other than as instructed in this guide. Repairing this phone by yourself other than our authorized service agents/centers goes against the warranty rules.
- Do not drop, knock, or shake the device. Rough handling can break internal circuit boards and fine mechanics.
- Do not use harsh chemicals, cleaning solvents, or strong detergents to clean the device. Only use a soft, clean, dry cloth to clean the surface of the device.
- Do not store your device near magnetic fields or allow your device to come in contact with magnetic fields for extended period of time.
- Use manufacturer approved batteries, chargers, accessories and supplies. Micromax will not be held responsible for user's safety when using unapproved accessories or supplies.

Disclaimers:

1. Micromax will not bear any responsibility for any incompliance with the above mentioned guidelines or improper usage of the mobile phone.
2. Please note that the accuracy of some of these functions may vary depending on the surroundings and take a while to get accurate

User Guide

results.

3. Micromax keeps the right to make modifications to any of the content in this user guide without public announcement in advance.
4. The content of this manual may vary from the actual content displayed in the mobile phone. In such a case, the latter shall govern.

Copyrights:

- All rights reserved. Reproduction, transfer, distribution or storage of part or all of the contents in this document in any form without the prior written permission of Micromax is prohibited.