

ROUTE 66 Maps

Maps and navigation. Anytime. Anywhere.



User manual

WWW.66.COM



I'M ON MY WAY

Copyright © 1993-2010 ROUTE 66.

All rights reserved. ROUTE 66 and the ROUTE 66 logo are registered trademarks. Data copyright © NAVTEQ B.V. / TELE ATLAS B.V. / Transnavicom Ltd.

IMPORTANT REMARK:

No part of this publication may be multiplied, be stored in a databank and electronically, mechanically, through photocopying, on sound carriers or in any other way be copied, without the explicit written approval of ROUTE 66. All other marks are the property of their respective owners. The information contained in this document is subject to change without prior notice.

ROUTE 66: I'M ON MY WAY!**NOTICE AND DISCLAIMER:**

Digital cartography can be inaccurate and incomplete to some extent. The availability and accuracy of GPS and related services are dependent, among other things, on wireless networks and satellite systems. They may not function in all areas or at all times. Therefore never rely solely on the aforementioned material and services e.g. for essential communications like emergencies.

This product and its contents are made for non-commercial private use only. This product should not be used by the driver of a motor vehicle while driving. Always keep your hands free to operate a vehicle while driving. Obey all local laws. Your first consideration while driving should be road safety.

To the maximum extent permitted by applicable law, ROUTE 66, its subsidiaries and licensors hereby disclaim all liability arising out of any use of this product and its contents.

www.66.com

www.66.com/legal/

15-01-2010

ROUTE 66 Maps

Do This First

1. Fully charge the battery of your device.
2. Insert the memory card into your device (if the application is installed on a memory card). If the application is installed to the internal memory of your device, skip step 2 and go directly to step 3. For internet access and data transfer, insert a SIM card; contact your network provider for configuration and fee details.
3. Power on your device, find the navigation application in your Applications list and start it.
4. Select [Go online > Allow once](#) or [Allow always](#) to use or download additional information (*online data*) only this time or each time you need it. An internet connection is established. You will need to pay network fees. The amount of online data you used or downloaded is displayed at the bottom-right area of the screen. Select [Go online > Do not allow](#) to use only the information already available on your device

(*offline data*). No internet connection is established. No additional content is downloaded.

5. If the product you purchased is pre-configured to unlock (download and activate) certain items or services, select [Yes](#) in the [Get your license keys from the server?](#) dialog. Select [No](#) to go to the next step. If you own a voucher code you can unlock items or services. Write the voucher code. You can also do this later ([Options > Extras > Enter voucher code](#)).

We advise you to use the ROUTE 66 Sync home application.

6. If the GPS signal is strong enough, your current position will be indicated on the map as a red dot.

The Map

While you browse maps, you can see the following:

- your current position (red dot);
- road networks and road codes;
- points-of-interest;

- map scale;
- hashed grey areas indicating map segments currently not available on the device. They will be automatically downloaded from the ROUTE 66 server (if you are in [Online mode](#)).

To view more or less map details, zoom in or zoom out.

Options

Open the [Options](#) menu to find the main **ROUTE 66 Maps** features.

Show shortcuts

To access application shortcuts, select [Options > Show shortcuts](#). To find a place, select [Search](#). To use bright colours or dim colours, select [Night colours](#) or [Day colours](#).

To view a classical 2D map or a panoramic 3D map, select [2D perspective](#) or [3D perspective](#). To check a travelling summary, select [Statistics](#). To view on the screen your current position, select [My position](#).

To turn on or off the voice guidance, select [Sound on](#) or [Sound off](#). To receive the latest safety camera information, select [Update safety cameras](#).

First activate the Safety Cameras service!

To avoid parts of the current route, select [Define road block](#).

This option is accessible only during navigation!

To receive the latest traffic information, select [Update traffic information](#).

First activate the Traffic information service!

To view more details on the map, select [Zoom in](#). To change the amount of on-screen data, select [Next layout](#). To view less details on the map, select [Zoom out](#).

Search

To find a place to go to, select [Options > Search](#).

Places are stored in an extensive collection of cities, addresses, house numbers, postcodes and points-of-interest. You can point to any map area or use geographical coordinates. You can even create your own list of favourite places or personal contacts.

Select [Free text](#) and use keywords to find all addresses, city names, house numbers or postcodes, history records, personal favourites and personal contacts stored on your device.

For an address search, select [Address](#). [Country/Region*](#) and [City/Postcode*](#) fields are mandatory. [Street](#) and [Number](#) fields are optional.

Hundreds of points-of-interest might be around you (or around the departure, destination, cursor position or along the route). To find what's near you and how far, select [Points-of-interest](#).

To re-use a previous destination, select [History](#). To navigate to a favourite, select [Favourites](#). At the very beginning, this list is empty. To save places as favourites, select [Save](#) from any section of the application.

To navigate to a contact, select [Contacts](#). To save a contact, select [Save as contact](#) or [Update contact](#). To find a certain location using geographic coordinates, select [Latitude / Longitude](#).

Using Search Results

To view a place on the map, select [Show on map](#).

To drive to the selected place, select [Drive to](#).

Refer to [Drive to Your Destination for details](#).

To walk to the selected place, select [Walk to](#).

Refer to [Walk to Your Destination for details](#).

To add the selected place as waypoint in your current navigation, select [Drive via](#) or [Walk via](#). To add the selected place to a route, select [Add to route](#).

To save your position, the current map view or a list item, select [Save](#). To send your position, your waypoints or a list item, select [Send](#).

To select or deselect items from a list, select [Mark/Unmark](#). To contact a place, select [Call](#).

Walk to Your Destination

The on-foot travelling support guides you in pedestrian zones, parks, small roads and pathways, avoids highways, ignores one-way streets and turn restrictions.

1. Find your destination in the [Search](#) collections or on the map.
2. To walk to your destination, select [Walk to](#). On-screen instructions are always provided.
3. View the route preview and then select [OK](#) to start walking.

To add an intermediary destination to your route in progress, select the second place and then select [Walk via](#).

To stop walking, select [Stop](#).

You can start walking only after you buy a navigation licence from the online store. Refer to the Extras > Navigation section for details.

Drive to Your Destination

The car navigation takes into account speed limits and driving restrictions, and excludes pedestrian zones, parks, and pathways from the calculated route.

1. Find your destination in the [Search](#) collections or on the map.
2. To drive to your destination, select [Drive to](#). On-screen instructions and spoken instructions are provided.

To buy and use this licence, first buy the [Drive and walk](#) licence.

3. Select the route type: [Fastest \(car\)](#) or [Shortest \(car\)](#).
4. View the route preview and then select [OK](#) and start driving.

Voice guidance and on-screen instructions are available.

To change the language of the voice guidance, select [Options > Tools > Settings > General > Voice language](#).

To adjust the volume of the voice instructions, use the buttons of the device or select [Options > Settings > General > Volume](#) and [Dynamic volume](#).

To add an intermediary destination to your navigation in progress, select the second place and then select [Drive via](#).

To avoid a route section ahead, select [Define road block](#) and specify the road length to be avoided. The route is automatically recalculated.

To change the amount of on-screen instructions, select [Options > Show shortcuts > Next layout](#).

To stop driving, select [Stop](#).

You can start driving only after you buy a navigation licence from the online store. Refer to the [Extras > Navigation](#) section for details.

Extras

To buy additional services and content, select [Options > Extras](#).

A network connection is required. To manage your network settings, select [Options > Tools > Settings > General > Go online](#).

An access point is required. To define an access point, select [Options > Tools > Settings > Extras > Access point](#).

We advise you to use the ROUTE 66 Sync home application. The transfer speed is much higher. Refer to the [Using ROUTE 66 Sync](#) section for details.

You can do the following actions:

- Download free maps.
- Activate services (navigation, traffic, global weather, safety cameras), download travel guides, languages for voice guidance, and colour schemes.
- Evaluate certain products for a limited period.

ROUTE 66 Store

There are several ways of activating extra content:

- To pay for a product with your credit card, select [Buy license > Credit card](#).
- To use a voucher code, select [Options > Extras > Options > Enter voucher code](#). ROUTE 66 Voucher codes allow you to activate Extras. A ROUTE 66 voucher code may have been included with your product.
- To "evaluate" a product for a limited period of time, free-of-charge, select [Buy license > Try for free](#). After the evaluation period, you must purchase a licence or the item will be locked.

Navigation

To buy a navigation licence, select [Options > Extras > Navigation](#).

A navigation licence entitles you to travel in a particular region and for a specified period of time.

1. Select the licence type you need:

- [Drive and walk](#): drive or walk to your destination. On-screen instructions are always provided. Spoken instructions are provided only when you drive. Use speed limits and lane information when you drive.

2. Select the country you are interested in.

3. Download the licence.

4. Select the validity period.

5. Select the payment method. Once the payment is confirmed, the licence is activated.

Maps

To buy or view additional maps, select [Options > Extras > Maps](#).

Several types of maps are compatible with your navigation application:

- [3D & Discover](#)

- 3D models of the most important landmarks of a city (tourist attractions, shopping places, sports centres)

- Downloadable

- Licence required

- [Road maps](#)

- Country maps

- Downloadable

- Free

- [Satellite imagery](#)

- Downloadable

- Licence required

In [Online](#) mode: When you navigate / browse and reach a map area not physically available on your device, that area is automatically downloaded.

In [Offline](#) mode: You can browse only the maps you already have on your device.

To download maps, do the following steps:

1. Select [Options > Extras > Maps](#).

2. Select [ROUTE 66 Store](#).

3. Select the map type:

- [3D & Discover](#)

- [Road maps](#)

- [Satellite imagery](#)

4. Identify the map you need.

5. Download the map.

Traffic Information

To activate the traffic information warning system, select [Options > Extras > Traffic information > ROUTE 66 Store](#) and buy a licence.

To receive traffic information, select [Update](#).

To receive automatic updates, select [Options > Tools > Settings > Extras > Traffic interval](#).

A traffic message indicates the road code, the major city and region, the date and time when incident was reported, the road segment, the type of incident (accidents, road works, slow traffic, bottlenecks), expected duration of incident, and driving suggestions (detours) if possible.

To view an incident on the map, select [Show on map](#).

To view the list of available countries for traffic information, visit the online store.

Safety Cameras

To activate the safety cameras service select [Options > Extras > Safety cameras](#) and buy a licence.

To receive newer information, select [Update](#).

To receive automatic updates, select [Options > Tools > Settings > Extras > Camera interval](#).

Browse the safety cameras categories and select a location.

To view a safety camera on the map, select [Show on map](#).

Traffic controls can be speed limits, speed cameras, traffic lights, bus lane sectors, pedestrian crossings.

To view the list of available countries for safety cameras, visit the online store.

Weather

To receive weather forecasts for any place worldwide, select [Options > Extras > Weather > ROUTE 66 Store](#) and buy a licence.

To add the cities (weather stations) you are interested in, select [Weather > Add city > Search](#) or [Weather > Add city > Special city](#).

To receive the latest weather reports, select [Yes](#) in the *Update weather forecast?* dialog.

To receive automatic updates, select [Options > Tools > Settings > Extras > Weather interval](#).

To view a weather forecast, select [Today](#), [Current Conditions](#), [Day list](#), [Normal Graph](#), [Extended graph](#).

Colour Schemes

To download additional colour schemes, select [Options > Extras > Colour schemes > ROUTE 66 Store](#).

To apply a different colour scheme to the map and the navigation bar, select a different item from the list.

Voices

To download additional languages, select [Options > Extras > Voices > ROUTE 66 Store](#).

The driving instructions provided during car navigation are spoken in the language you selected in [Options > Tools > Settings > General > Voice language](#).

To adjust the volume of the voice guidance, select [Options > Tools > Settings > General > Volume](#) or [Dynamic volume](#), or use the hardware buttons.

Travel Guides

To download travel guides on your device, select [Options > Extras > Travel guides > ROUTE 66 Store](#).

The *Lonely Planet*TM travel guides are available in English.

Map mode

To view different displays of the map for the same area, select [Options > Map mode > Map](#) or [Satellite](#).

This option is available only when you have the [Satellite imagery](#) license on your device ([Options > Extras > Maps](#)).

Show

To choose screen preferences or to check additional information, select [Options > Show](#).

To open your list of maps, select [3D & Discover](#).

To open your list of safety cameras, select [Safety cameras](#).

To open your list of traffic messages, select [Traffic information](#).

To open your list of weather forecasts, select [Weather](#).

To show or hide the progress bar, select [Progress bar on](#) or [Progress bar off](#).

To display the destination details, select [Destination](#).

To display the route overview, select [Route](#).

To display the route details, select [Route description](#).

To check the quality of the satellite data, select [GPS information](#).

To check the travelling summary, select [Statistics](#).

To understand the significance of map colours, select [Legend](#).

Routes

To plan new routes or to open existing routes, select [Options > Routes](#).

A route contains at least 2 locations (*departure* and *destination*).
An unlimited number of locations can be added to a route.

Plan Routes

1. Select [Options > Routes > Plan new route](#). Or, indicate a place on the map and from the contextual menu select [Add to route](#). Or, pick a place from a list and select [Options > Add to route](#).
2. Provide the route name.

3. To choose the departure, select [Set departure](#) and use the [Search](#) categories.
4. To choose the destination, select [Set destination](#) and use the [Search](#) categories.
5. If your route will contain several places, select [Add waypoint](#) and use the [Search](#) categories.
6. Select [Start driving](#) or [Start walking](#).

If you don't have the corresponding navigation licence, buy one from the online store.

7. For car navigation, select the route type: [Fastest \(car\)](#) or [Shortest \(car\)](#).
8. Select the first visit.
9. View the route preview and then select [OK](#).

Use Routes

To use a route, select [Options > Routes](#), select the route and then [Open](#).

To view on the map a route overview, select [Show route](#).

To check the route description, select [Show route details](#).

To play a demo of a route, select [Simulate route](#).

To send the route waypoints (coordinates) to other users, select [Send route](#).

To add other route stages, select [Add waypoint](#).

To replace the selected waypoint with a different place, select [Change](#).

To modify the route order, select [Move > Move up](#) or [Move down](#).

To remove the selected waypoint, select [Delete](#).

Tools

To change your settings, save or send items, or define road blocks, select [Options > Tools](#).

Go online / Go offline

Select [Tools > Go online](#) to use or download additional information (*online data*). An internet connection is established. The amount of online data you used or downloaded is displayed at the bottom-right area of the screen.

Select [Tools > Go offline](#) to use only the information already available on your device (*offline data*). No internet connection is established. No additional content is downloaded.

Send

To send a map snapshot to compatible devices, select [Map as image](#).

To send the current route's waypoints, select [Route](#).

To send the details of your current position, select [My position](#).

To send the details of the cursor, select [Cursor position](#).

Save

To save a map snapshot, select [Map as image](#).

To save the details of your current position, select [My position](#).

To save the details of the cursor, select [Cursor position](#).

Define road block

To avoid parts of the current route, select [Define road block](#).

This option is accessible only during navigation!

Turn GPS on / Turn GPS off

To enable or disable the GPS functionality, select [Options > Tools > Turn GPS on / Turn GPS off](#).

If the GPS is disabled and you intend to start a navigation, the *Turn GPS on?* message is displayed. Select [Yes](#) and start navigating. Select [No](#) and remain in the previous status.

If you select [Turn GPS off](#) during navigation, the *Stop current navigation?* message is displayed. Select [Yes](#) and interrupt the current navigation. Select [No](#) and continue the navigation.

Settings > General

To set the overall behaviour of the application, select [Options > Tools > Settings > General](#).

To set the sound intensity, select [Volume](#). To create a correlation between sound level and cruising speed, select [Dynamic volume](#).

To set the language of the application, select [Interface language](#)

To set the language of the voice guidance, select [Voice Language](#). Select a human voice or a computer (synthesized) voice.

To set the screen illumination, select [Backlight](#).

To set the system of measurement, select [Units](#).

To display or skip the legal text when you start the application, select [Show disclaimer](#).

To automatically establish an internet connection each time you start the application, select [Go online > Allow always](#).

To show or hide the online disclaimer, select [Online disclaimer](#).

To use the roaming service when visiting other networks, select [Data roaming](#).

To be warned that you will start using the roaming service, select [Roaming warning](#).

Settings > Map

To set the look and behaviour of the map, select [Options > Tools > Settings > Map](#).

To use bright or dim colours, select [Night Colours](#). Use [Automatic](#) to let the application switch automatically from day colours to night colours when sunrise or sunset occurs, or when you enter or exit a tunnel.

To choose a map theme, select [Colour scheme](#). Load additional themes from the online shop.

To change the perspective of the navigation screen, select [3D perspective](#).

To set the 3D perspective effect, select [Viewing angle](#).

To show or hide the map scale in 2D perspective, select [Show scale](#).

To keep your GPS arrow always oriented upwards, regardless of your actual travelling direction, select [Rotate map](#).

To choose a language for the current map, select [Map language](#). Choose [Automatic](#) and let the application pick the appropriate language. Choose [Native lang. names](#) to load the city names in their local language.

To display or hide favourites (landmarks) on the map, select [Show favourites](#).

To display or hide points-of-interest on the map, select [Show Points-of-Interest](#).

To allow three-dimensional artwork (3D buildings, 3D landmarks) to be displayed on the map, select [3D objects](#). You need a licence.

Settings > Navigation

To set your travelling preferences, select [Options > Tools > Settings > Navigation](#).

To choose the car type you prefer, select [Car type > Personal car](#) or [Lorry](#). For heavy vehicles, access restrictions may be imposed on certain road types or segments.

To choose your default method of navigation, select [Travel mode > Fastest \(car\)](#) or [Shortest \(car\)](#). To pick yourself the travelling method each time you start a navigation, select [Travel mode > Ask always](#).

To display more or less information, select [Navigation Bar Content](#).

To display in the navigation bar [Remaining travel time](#) or [Estimated arrival time](#), select [Time indicator](#).

To see a route preview before starting the navigation, select [Route overview](#).

To view additional information when approaching street junctions, select [Lane information](#).

To set a transparency effect for the navigation bar, select [Navigation Bar Transparency](#).

To exclude motorways, tax roads, ferryboats or water crossings from your routes, select [Avoid motorways](#), [Avoid toll roads](#), or [Avoid ferries](#).

To automatically zoom in when your cruising speed decreases, and to automatically zoom out when your cruising speed increases, select [Automatic zooming](#).

Settings > Speed

To set the speed values you prefer for all types of roads, select [Options > Tools > Settings > Speed](#). Here you can also set alarms.

View the assigned speed for all road types. If necessary, specify a different speed.

[Slider*](#) - Increase or decrease the speed of all road types.

To set your maximum cruising speed, select [Alarm speed](#) and specify a value. When you drive and reach this speed, you are warned. To choose the method of warning (acoustic / visual), select [Alarm type](#).

Settings > Alarm

To be warned in advance that you are approaching a specific location, select [Options > Tools > Settings > Alarm](#). The warning will include a suggestive icon and the remaining distance to that location.

Set warnings for a particular category, for several categories, or for all categories. To use the default alarm settings, simply select the categories you are interested in.

You can customise your own alarm settings. Select [Visual alarm](#) to display a warning icon. Select [Warning sound](#) to play a warning sound. Select [Warning distance](#) to choose the distance from you to that location when the warning is displayed. Select [Warn only along route > Yes](#) if you are interested in locations exactly near the road. [Warn only along route > No](#) if you are interested in locations in the road proximity of 50 meters / 60 yards.

To set safety camera warnings, you need a licence ([Options > Extras > Safety cameras](#)).

Settings > Extras

To configure your usage of additional services and internet connections, select [Options > Tools > Settings > Extras](#).

To select an access point, select [Access point](#).

To set the frequency of receiving traffic data, weather data, or safety cameras data, select [Traffic Interval](#), [Weather Interval](#), [Camera interval](#). These options are accessible if you have the corresponding licences.

To choose between portrait or landscape, select [Screen Orientation*](#). To reset the sensitivity of the touch-screen, select [Calibrate Screen*](#).

About

To display the copyright information and version number, select [Options > Tools > About](#).

Help

To open the contextual assistant, select [Options > Help](#).

Exit

To close the application, select [Options > Exit](#).

The Cursor Menu

The cursor menu is available when you select a location on the map.

To open the cursor menu, use the middle of the joystick or select the "cross" icon in the lower-left corner.

To move left, right, forwards, backwards, or to rotate the map, use the joystick or the touch-screen.

To zoom in and out use the * and # keys on your keyboard or use the zoom icons on the touch-screen.

To start a trip by car to the cursor position on the map, select [Drive to](#).

To start a trip by foot to the cursor position on the map, select [Walk to](#).

To visit an intermediate place before your final destination, select [Drive via](#) / [Walk via](#).

To add the selected place to a route, select [Add to route](#).

To view the cursor details, select [Show > Details](#).

To contact the selected place, select [Call](#).

To save an interesting place, select [Save cursor position](#).

To send your cursor position to other compatible devices, select [Send cursor position](#).

ROUTE 66 Sync

Use our desktop application to download and manage additional content.

Connecting Your Device to Your PC

S60 devices

1. If the navigation application on your mobile device is running, close it.
2. Connect the device to the USB port of your computer.
3. Select **Data transfer / Mass storage mode** on the device.

Windows Mobile / Windows CE devices

1. Start the navigation application.
2. Connect your mobile device to the USB port of your computer via Microsoft ActiveSync.

3. With certain Windows Mobile compatible devices, the connection can be alternatively established via **Data transfer / Mass storage mode**.

Notes:

- *Make sure the memory card is inserted into your mobile device and that the card is not write protected.*
- *With Windows Mobile / Windows CE devices, first install Microsoft ActiveSync.*
- *For first time use, start and then close the navigation application before attempting to connect your mobile device to your computer.*
- *For details regarding **Mass storage / Data transfer mode**, refer to the user manual of your device.*

How to upgrade ROUTE 66 Sync?

1. Start **ROUTE 66 Sync**.

2. **ROUTE 66 Sync** automatically checks if there is a newer version available. You can also do this manually by selecting [Help > Check for ROUTE 66 Sync update](#).
3. If a newer version of **ROUTE 66 Sync** is available, then please select [Yes](#) to install it.
4. Select [Finish](#) to finish the upgrade.

How to install ROUTE 66 Maps using ROUTE 66 Sync?

1. S60 compatible devices: Connect your device to a PC using a data cable (and select "Mass Storage / Data Transfer") or insert the memory card into a memory card reader/writer. Windows Mobile / Windows CE compatible devices: Insert the memory card into a memory card reader/writer.
2. Start **ROUTE 66 Sync**. **ROUTE 66 Sync** automatically checks if **ROUTE 66 Maps** is already installed on your device.
3. If **ROUTE 66 Maps** is not yet installed on your device or memory card, then please select [Tools > Install navigation software](#).
4. S60 compatible devices: If **ROUTE 66 Sync** automatically detects your device, then the fields [Manufacturer](#) and [Model](#) are automatically filled in. Windows Mobile / Windows CE compatible devices: You must manually fill in the fields [Manufacturer](#) and [Model](#). If **ROUTE 66 Sync** does not recognise your device, then please select Other and the appropriate Operating system.
5. Select [Yes](#) to copy **ROUTE 66 Maps** to your device and follow the on-screen instructions.
6. Please disconnect the data cable from the PC as soon as the wizard completes. Alternatively, remove the memory card from the memory card reader/writer and insert it into your device.
7. S60 compatible devices: Please locate and launch the **ROUTE 66 Maps** installer on your device. Windows Mobile / Windows CE compatible devices: The application will launch

automatically after you insert the memory card into your device.

8. When the installation is finished, then please start and immediately close **ROUTE 66 Maps**. This completes the installation process.

How to upgrade ROUTE 66 Maps using ROUTE 66 Sync?

1. Connect your device to a PC and start **ROUTE 66 Sync**. Alternatively, insert the memory card into a memory card reader/writer.
2. To check if there is a newer version of **ROUTE 66 Maps** available, then please select [Tools > Check for navigation software update](#).
3. If there is no newer version available, you will be informed that you already have the most recent version of **ROUTE 66 Maps**. If a newer version exists, then please select Yes to start the upgrade process and follow the on-screen instructions.

4. Please disconnect the data cable from the PC as soon as the wizard completes. Alternatively, remove the memory card from the memory card reader/writer and insert it into your device.

Maps

When you start moving around the map, you will always access the latest data, free-of-charge. Zoom in to street level or zoom out to view the entire globe. Switch from 2D to 3D perspective. Rotate or tilt the map. Show or hide the [Satellite imagery](#), [3D objects](#) or [Points-of-interest](#).

Moreover, you can search a departure and a destination point and then select [Show route](#) to display an overview of the route. Select the route type: [Fastest \(car\)](#) / [Shortest \(car\)](#) / [Fastest \(lorry\)](#) / [Shortest \(lorry\)](#) / [Pedestrian](#). The route description (left side of the screen) contains all travelling instructions. Select an instruction to show it on the map. Save the route.

Store

In the [Store](#) section you can buy and download additional content.

To buy additional content, create your own **ROUTE 66 Sync** account and then sign in.

My Account

Create Your Account

1. Select [Sign in > Create account](#) or [File > Create account...](#)
2. In the registration form, enter a valid e-mail address. Choose a password. Your email and password will be your personal sign-in information.
3. Fill in the other fields. Select [Continue](#).
4. You will receive a confirmation e-mail. To activate your **ROUTE 66 Sync** account, follow the [Activate ROUTE 66 account](#) link.

View or Modify Your Account

To view or edit the details of your account:

1. Sign in and select [File > View account](#)
2. Enter your password and select [View account](#).
3. You can change your personal information. You cannot change your e-mail address. To change your current password, select [Change password?](#) and type your new password.

Sign in

You must sign in to be able to buy items from the online store.

1. Enter your e-mail address and password.
2. Select [Sign in](#).
3. If you forgot or lost your login password, select [Forgot password?](#). A computer-generated password will be sent to your e-mail address.

ROUTE 66 Store

To open the [ROUTE 66 Store](#), select [Store > ROUTE 66 Store](#).

The following shopping categories are available:

- [Navigation](#)
- [Maps](#)
- [Traffic information](#)
- [Safety cameras](#)
- [Weather](#)
- [Voices](#)
- [Colour schemes](#)
- [Travel guides](#)

To identify the item you want to buy, select a shopping category and browse the available lists.

To find different items related to a particular country or region, insert a keyword in the general search field (upper-right corner). Therefore, if you type *'England'*, the list of results contains maps, traffic data, safety cameras, weather data, travel guides, voices and colour schemes.

Buy Content

Extra content may require a licence of use. Some items are free.

To buy an item select [Buy](#). To download a free item select [Get for free](#).

1. Sign in.
2. Select [Store > ROUTE 66 Store](#)
3. Identify the item.
4. Select [Buy](#) or [Get for free](#), depending on the product. Repeat steps 2 and 3 when buying several items.
5. When you added all items in the shopping cart, select [Checkout](#).

6. Enter your credit card details and select [Submit](#).
7. The content is first downloaded on your PC and then transferred to your navigation device.

To view a report concerning all the items downloaded on your device via **ROUTE 66 Sync**, select [Store > Purchased](#).

To check or remove the items you added in the shopping cart, open the shopping cart section or select [File > Open shopping cart](#).

Download Content

The Download Centre is the section where you can:

- check the progress of the current downloads;
- transfer items from your navigation device to your computer or vice versa;
- manage your downloads: interrupt, prioritize, etc.

Using Voucher Codes

A voucher code unlocks a certain item.

A voucher code can be used once on a single device.

1. Sign in.
2. Select [File > Use Voucher Code...](#)
3. Enter the voucher code. Select the + icon to add the code to your list. Repeat this step if you have several vouchers.
4. Select [OK](#) to send the voucher to the server and to start downloading the selected item(s).

My Content

To manage your content, including routes, landmarks and backups, select [My Content](#).

[My Computer](#) and [My Device](#) display the items you already have on your PC and on your device. The number of items you already have for each category is also indicated.

You may view the product information and the current status of each item.

You may (re)download items, copy items from your PC to your device, or delete items to free some space.

How to search for content updates?

1. Connect your device to a PC and start **ROUTE 66 Sync**.
2. **ROUTE 66 Sync** automatically checks if there is newer content available than the content you already have on your device. You can also do this manually by selecting [My Content > Search for content updates](#).
3. Select [Update](#). The content will first be downloaded to the PC and then transferred to your device.

How to solve content issues?

Certain content items are incompatible with your device for one of the following reasons:

- the download or update process was ended before completion.
- certain content items do not match with the hardware and software features of your device.

If some of the content on your device is incompatible with **ROUTE 66 Maps**, then **ROUTE 66 Sync** can replace this content. You can also do this manually by selecting [Tools > Repair incompatible content](#).

1. Please select [Yes](#) in the warning screen. The incompatible content will be deleted from your device.
2. The correct content is downloaded first and then transferred to your device.

Backups

A backup is a safety archive of the content you already have on your device or on your computer.

Create backups

1. Select [My Content > Backups](#).
2. In [My Device](#) window, mark the items you want to include in a new backup.
3. Select [Create backup](#) or [Backups > Create backup](#).
4. Provide a backup name (or use the pre-filled name). The new backup is then displayed in [My Computer](#) window.

Reload backups

1. Select [My Content > Backups](#).
2. In [My Computer](#) window, select the archive you want to reload to your device.
3. Select [Restore](#) or [Backups > Restore](#).
4. The content is again available on your device.

The Options Menu

File

To sign in to your account select [Sign in...](#)

To create a new account select [Create account...](#)

To view or edit your account details select [View account](#).

To activate items with voucher codes select [Use Voucher Code...](#)

To open or close the shopping cart select [Open shopping cart](#) or [Close shopping cart](#).

To remove any item from the shopping cart select [Empty shopping cart](#).

To send an order for processing select [Checkout](#).

To exit the application select [Exit](#).

My Content

To download an item select [Download](#).

To copy an item select [Copy](#).

To delete an item select [Delete](#).

To choose items select [Select](#), [Invert selection](#) or [Deselect all](#).

To check if newer content is available online for the items you already downloaded, select [Search for content updates](#).

To copy on your device the content you already have on your PC, select [Synchronise device](#).

Backups

To create a backup select [Create backup](#).

To restore a backup select [Restore](#).

To delete a backup select [Delete](#).

View

To browse maps and plan routes select [Maps](#).

To open the online store select [ROUTE 66 Store](#).

To view the report of all the items you bought select [Purchased](#).

To view the content you already have on your PC or device select [My Content](#).

Tools

To check if there is a software update for your navigation application select [Check for navigation software update](#).

To view the screen of your navigation device select [Remote control](#).

To set your preferences select [Settings...](#)

Help

To view the help topics select [ROUTE 66 Sync Help](#).

To check if there is a software update for your home application select [Check for ROUTE 66 Sync update](#).

To send a message to ROUTE 66 support team select [Generate error report...](#)

To view details concerning your desktop application select [About ROUTE 66 Sync](#).