

The environmental impacts of paper consumption are vast. Making 1kg of paper requires 98kg of other resources, uses vast amounts of energy and water and causes pollution. Almost half (42%) of all industrially logged timber is pulped to make paper products, much of it sourced from old-growth and other endangered and high conservation-value forests. The paper industry's climate change emissions, including forest impacts, production, transportation and disposal, are more than three times those of global aviation. We must use less paper. To find out more please read **United Nations Framework Convention on Climate Change** and **Montreal Protocol**.



Please visit our website at <http://www.myscihone.com> to download user manual.

Control buttons



Left button

Press Left to select the content in the lower left corner of the screen.

Right button

Press Right to select the content in the lower right corner of the screen.

Back button

Press Back to go back to the previous screen, or to dismiss a dialog box or menu.

Call button

Press Call to do one of the following, depending on the context:

- Open the log of recent calls.
- Call contact (when a contact/contact number is highlighted).

End Call button

- When on a call, press End Call to hang up.
- When not on a call and running a program, press End Call to exit the current program.
- When not on a call and not running a program, press End Call to lock the screen and put the phone to sleep.

Navigation key

Press the Navigation key up/down and left/right to navigate selectable items on the screen.

Volume controls

- Press either + or - to open the sound volume controls. Volume is controlled separately for the incoming call ringer and audio/video files:
 - If you are on a phone call when you press the volume controls, the Ringer volume slider will open.
 - If you are listening to an audio or video file when you press the volume controls, the Media volume slider will open.
- While an incoming call is ringing, press - volume control to immediately silence the phone. The caller will continue to hear the ringing until you answer the call.

Delete key

Press the Delete key to delete numbers or words you've entered.

SD Card Slot

Your phone has a slot for a microSD flash memory card. The slot is located along the right bottom edge of the battery holder.


Follow the instructions below to remove or insert a SD card:

1 If you are going to remove your SD card, first you must power off your phone.

2 Open the battery cover.

- To insert a SD card, push the card into the slot, copper contacts facing up and with the notched edge facing right. Push the card in gently until you feel it "snap" into place.

- To remove an already-installed SD card, push the card in gently, then release. The card should pop out far enough so you can remove it.

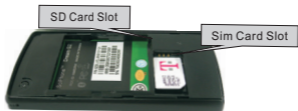

SIM Card Slot

To insert your wireless operator-provided SIM card, do the following:

1 Remove the battery cover and battery.

2 Slide the SIM card into the slot with the copper contacts face-down and with the cut corner facing away from the slot.

3 Reattach the battery cover.

To remove your SIM card, you must remove the battery cover and battery first.



Battery charging

1 Connect the AC adapter plug to an electrical outlet and connect the other end to the USB port on the bottom of the phone. To fully charge when the phone is discharged, keep connected for at least three hours.

2 To power on your phone, press & hold the End Call button.

Touch screen & Navigation key

Selection

To select an item or button on the screen, you can either:

- Press the Navigation keys to highlight the item, then click the L/R key to select the item; or
- Touch the item directly with your fingertip. You will know when an item on the screen is selected when its color changes.

Scroll

To scroll up or down in a list or page on the screen, you can press the Navigation key up/down.

Drag items on the home screen

On the home screen you can drag items with your fingertip.