

Welcome

Thank you for purchasing the Micromax X103 handset. The Micromax X103 handset provides you with the following rich array of exciting features:

- ✔ Dual SIM
- ✔ Camera
- ✔ Video Recorder
- ✔ FM Radio
- ✔ Music Player
- ✔ LED Flashlight
- ✔ Data Security
- ✔ Memory card support

Please read this manual carefully to make the full use of its features.

Contents

1	Phone layout.....	3	phonebook, call logs...14
2	Insert SIM and Memory Card.....	4	21 Fixed dialing No.15
3	Icons and Indicators.....	6	22 Choose Phone Language.....15
4	Switch Phone ON/OFF.....	8	23 Choose Bangla Input Method15
5	Make a call.....	9	Health & Safety Information.....16
6	Answer a Call	9	Taking Care of Your Device 19
7	Hold a Call Conference.....	10	
8	Swap a Call	10	
9	Record a Call.....	10	
10	Make an International Call	11	
11	Send and View Messages	11	
12	Use the LED Flashlight.....	11	
13	Listen to Music	12	
14	Listen to FM Radio.....	12	
15	Record Videos.....	13	
16	Take Photos.....	13	
17	Video Player	13	
18	Connect to Bluetooth Devices	14	
19	Secure your Phone	14	
20	Privacy for messages,		

1 Phone layout



1. Receiver

2. Screen

3. Left Key

4. SIM2 Dial Key

5. SIM 1 Dial Key

6. Number Keys

7. Right Key

8. Music Key

9. End Key

10. OK key

11. Direction Key

12. Audio Jack

13. Camera

14. Speaker

15. LED Torch


16. Pendant Socket

17. Mike

2 Insert SIM and Memory Card

You can use your phone with one or two SIM cards inserted.

- 1 Press the left and right side keys simultaneously to open the cover and remove the battery as shown below.

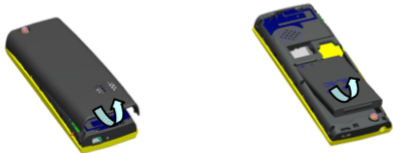

- 2 Insert the SIM card correctly in the card slot(s) as shown below.



- 3** Open the memory card slot, and insert the memory card into the slot with the gold colored contacts facing down.








Use only compatible memory cards approved by Micromax. Incompatible cards may damage the slot or corrupt the data stored in the card.




















Please charge the battery before you use the newly purchased phone. We suggest you to charge the battery for at least 4 hours continuously for the first time.

3 Icons and Indicators

Your phone displays the following status indicators on top of the screen.

Indicators	Description
	Battery charging in progress
	Signal strength of SIM1 & SIM2.
	Signal not received

	GPRS is in use
	Battery status
	Call in progress
	Unread messages
	Message full
	SIM1 message full
	SIM2 message full
	A new MMS has not read
	Download MMS
	Alarm activated
	General mode
	Silent mode

	Meeting mode
	Indoor mode
	Outdoor
	Airplane mode is ON
	Earphone

4 Switch Phone ON/OFF



- To switch ON your phone, press and hold the **End key** for a few seconds.
- To turn OFF your phone, press and hold down the **End key** for a few seconds.

If the phone lock has been activated in the phone's security settings, you need to enter the 4-digit password to unlock the phone. (The preset unlock code is 0000.)



Warning: If you enter a wrong PIN code three times in a row, the SIM card will be locked and you need to enter the PUK code to unlock it. In this case, you need to contact your network provider for the PIN and PUK code.

5 Make a call



You can make a call in the following ways:

- Enter the desired number in standby mode and press the **Call key**.
- Go to **Menu> Phonebook** and then select and dial the desired number.
- Just press the **Call1 or Call2** key in standby mode to dial the contacts listed in Call logs.
- You can also dial a contact from the messages.

6 Answer a Call

Press the **Answer** key to answer a call.

7 Hold a Call Conference

- 1 While on a call, go to phonebook and dial a contact. Once the new call gets connected, the first call will be put on hold.
- 2 After this, press **Menu** and then choose **Set up Call Conference**.

8 Swap a Call

- 1 While on a call, go to phonebook and dial a contact. Once connected, the first call will be put on hold.
- 2 After this, press **Menu** and then choose **Swap**. The active call and the call on hold will be swapped.

9 Record a Call

While on a call, press the **Menu** and then select **Start Recording** to record a call.

10 Make an International Call

- 1 Press the * key more than once till “+” appears on the screen.
- 2 Enter the country code, area code and phone number, and press the dial key.

For example, to dial a number in France, press and hold the 0 key (until the “+” sign appears), input 33 (French code) and then enter the complete phone number.

11 Send and View Messages



Menu > Messages

You can read messages and compose/send messages. You can forward, delete, back up or delete selected messages and so on. You can read messages in the Draft, outbox, sent, messages folder and so on.

12 Use the LED Flashlight

Menu > Applications> Flashlight



In standby screen, long press 0 key to turn on/off the Flashlight.

13 Listen to Music



Menu > Multimedia > Music

The Micromax X103 comes with an inbuilt music player that plays all your favorite music stored in your memory card. It gives you a host of settings to make your listening experience interesting.

Shortcut keys:

- Press **OK** key to play/pause the song
- Press Left/Right key to change songs
- Press the * and # keys to adjust volume

14 Listen to FM Radio



Menu > Multimedia > FM Radio

- Plug the headset into the phone.
- Press the * and # keys to adjust volume.

- Press the number keys on your keypad to switch between channels.
- Press the **OK** key to start or stop the radio

15 Record Videos



Menu > Multimedia > Video recorder

Shortcut keys:

- **OK** key or Camera key to take videos
- Press Left key for setting preferences.

16 Take Photos



Menu > Camera

- Press the **OK** key or Camera key to take photos.
- Press Left key for setting preferences

17 Video Player

Menu > Multimedia > Video Player

Let you play videos stored in your memory card.

Press 0 key while playing a video to display it in full screen mode.

18 Connect to Bluetooth Devices



Menu > Connectivity Bluetooth

Your phone enables you to connect the phone wirelessly to other Bluetooth devices and exchange data with them, or talk hands-free.

19 Secure your Phone

Menu > Settings> Security settings > Phone Lock

Let you lock your phone via a security password which you can change anytime.

The default security code to unlock the phone is 0000.

Note: After you activate the phone lock, you would be asked for a password when you power on your phone next time.

20 Privacy for messages, phonebook, call logs...

Menu > Settings> Security settings > Privacy Protection

a. Enter the default password 0000 to set the privacy lock.

c. Select and enable the desired objects to protect and save the choice. Each time you access the protected feature such as messages, you will be asked for the password.

Note: You can also change the default password to a password of your choice. The new password will be required to access the protected objects (messages/phonebook/call logs).

21 Fixed dialing No.

Menu > Settings> Security settings > Fixed dial No.

Outgoing calls from your phone can be restricted by making a fixed dialing list that allows only numbers on that list to be dialed from the phone.

22 Choose Phone Language

Menu > Settings> Phone Settings> Select Language

You can choose to interact with the phone using the available languages listed under the **Select Language** option.

23 Choose Bangla Input Method

Menu > Settings> Phone Settings> Input Method Settings

You can also choose Bangla input for your text input such as SMS, or other text entry from here.

Alternatively, you can short press # key 5 times in a row to enable Bangla input method.

- You can then use the keypad to enter Bangla characters.
- Use * for special symbols and Bangla joiner
- Long press # to come out of Bangla input method.



Health & Safety Information

Please read the following guidelines regarding the use of your phone. Not following them may be dangerous or illegal.



SAR Compliance

- Your phone is designed not to exceed the limits of emission of radio waves recommended by international guidelines.
- SAR (specific absorption rate) is the measurement of body-absorbed RF quantity when the phone is in use. SAR value is ascertained according to the highest RF level generated during laboratory tests.
- The SAR value of the phone may depend on factors such as

proximity to the network tower, use of accessories or other accessories.

- The highest SAR value of the device at the head and body are 0.534 W/kg and 0.687 W/kg respectively averaged over 1 gm of human tissue.



SAR Recommendations

- Use a wireless hands-free system (headphone, headset) with a low power Bluetooth emitter.
- Make sure the cell phone has a low SAR.
- Please keep your calls short and use SMS whenever more convenient. This advice applies especially to children, adolescents and pregnant women
- Prefer to use your cell phone when the signal quality is good.
- People having active medical implants should preferably keep the cell phone at least 15 cm away from the implant.
- Maintain a preferable distance of 15 mm from the device.



Safe Driving

- Do not use the phone while driving. When you have to use the phone, please use the personal hands-free kit.
- Please do not put the phone onto any passenger seat or any place from which it may fall down in case of vehicular collision or emergency braking.



During Flight

Flight is influenced by interference caused by the phone. It is illegal to use a phone on the airplane. Please turn off your phone or switch to flight mode during a flight.



In Hospitals

Your Phone's radio waves may interfere with the functioning medical devices.

- Consult a physician or the manufacturer of the medical device to determine whether they are adequately shielded from external Radio Frequency. Switch off your device when regulations posted instruct

you to do so.

- Do not carry the wireless device in a breast pocket.
- Turn off the phone if there is any reason to suspect that interference is taking place.



Unsafe Areas

- Please turn off your phone when you are close to a gas station or in the vicinity of any place where fuel and chemical preparations, or any other dangerous goods are stored.

Taking Care of Your Device

Your device is a product of superior design and craftsmanship and should be handled with care: The following suggestions will help you protect your phone:

- Keep the device dry. If your device gets wet, remove the battery without turning on the device, wipe it with a dry cloth and take it to the service center.
- Do not store the device in high or cold temperature. High temperatures can shorten the life of electronic devices and damage batteries.

- Do not use or store the device in dusty, dirty areas. Its moving parts and electronic components can be damaged.
- Do not attempt to open the device other than as instructed in this guide. Repairing the phone by yourself other than our authorized service agents/centers goes against the warranty rules.
- Do not drop, knock, or shake the device. Rough handling can break internal circuit boards and fine mechanics.
- Do not use harsh chemicals, cleaning solvents, or strong detergents to clean the device. Only use a soft, clean, dry cloth to clean the surface of the device.
- Do not store your device near magnetic fields or allow your device to come in contact with magnetic fields for extended period of time.



Battery Recommendations

- Please put the battery in a well-ventilated place out of direct sunlight. Charge the battery at room temperature range.
- If the time span of the battery after charging becomes much shorter than usual, the battery life is at an end. Replace the battery with a new battery of the same make and specification.

- Do not discard the battery with household trash. Please dispose of used battery according to your local environmental laws and guidelines.
- Use manufacturer approved batteries, chargers, accessories and supplies. Micromax will not be responsible for user's safety when using unapproved batteries or accessories.

Recycle Your Phone



The WEEE logo (shown at the left) appears on the product (battery, handset, and charger) to indicate that this product must not be disposed off or dumped with your other household wastes. You are liable to dispose of all your electronic or electrical waste equipment by relocating over to the specified collection point for recycling. of such hazardous waste.

Specified collection points for recycling of such hazardous waste. Collection and proper recovery of your electronic waste equipments at the time of disposal will allow us to help preserve the environment. Recycling of the electronic waste equipment will ensure safety of human health and environment.

Disclaimers

- The colors and specifications shown/mentioned in the user manual may differ from the actual product. Images shown are for representation purpose only. Other product logos and company names mentioned herein may be trademarks or trade names of their respective owners.
- Micromax keeps the right to make modifications to any of the content in this user guide without public announcement in advance. The content of this manual may vary from the actual content displayed in the mobile phone. In such a case, the latter shall govern..

Copyrights

- All rights reserved. Reproduction, transfer, distribution or storage of part or all of the contents in this document in any form without the prior written permission of Micromax is strictly prohibited.