



## **X1i XTRA User Guide**

# User Guide

---

## 1 Welcome

Thank you for purchasing the Micromax X1i XTRA. Your X1i XTRA is packaged with the following state of the art features:

- Dual SIM
- Expandable Memory (up to 4 GB)
- Digital Camera
- Media Player/FM Radio
- E book
- Sound and Call recording
- Bluetooth/ WAP
- LED Torch
- Phone Tracking

### **Important:**

- Please read the contents of this manual to fully utilize the features of this phone.

# User Guide

## 2 Know Your Phone

### 2.1 Keys and Parts

Important keys and parts are listed here for you to use the phone better.

















#### 1.1 Positions of Phone Keys

- |                  |                       |
|------------------|-----------------------|
| 1. Earpiece      | 8. End key/ Power key |
| 2. Screen        | 9. OK key             |
| 3. Direction key | 10. Camera            |
| 4. Left soft Key | 11. Speaker           |

# User Guide

- 5 Call key
- 6. Number keys
- 7. Right soft key
- 12. Torch
- 13. Charger and accessories connector
- 14. Audio Jack

## 2.2 Icons and Indicators

Icons	Indicators	Icons	Indicators
	Signal strength indicator		Alarm has been set
	New missed calls		Airplane mode is activated
	USB is connected		Bluetooth is on
	The headphone is being used		Battery level
	New message		A new MMS has not read
	Download MMS in		Connected to the GPRS network
	Normal mode		Silent mode

# User Guide

	Meeting mode		Indoor mode
	Outdoor mode		

## 2.3 Insert SIM Card

The X1i is a Dual SIM mobile phone allowing you to use two SIM Cards.

1. Switch off the mobile phone and remove the rear cover and battery.
2. Insert the SIM card correctly in the SIM slot(s) as shown below.



3. Finally, insert the battery and replace the rear cover of the mobile phone.

## 2.4 Insert Memory Card

1. Switch off the phone and remove the rear cover and the battery.
2. Open the memory card slot, and insert the memory card into the slot.

# User Guide



3. Close the memory card slot.

4. Finally, insert the battery and the rear cover of the mobile phone.

Note: Slot supports expandable Memory (up to 32 GB)

Use only compatible memory cards approved by Micromax.  
Incompatible cards may damage the slot or corrupt the data stored in the card.

## 3 Basic Operations

### 3.1 Switch Phone ON/OFF

To switch ON your phone, press and hold the **End key** for a few seconds.

To turn OFF your phone, press and hold down the **End key** for a few seconds.

### 3.2 Unlock the phone

If you do not use the phone for a while, the screen is replaced with a locked screen.

# User Guide

---

1. Press the Left soft Key lightly. Then press the right soft key
2. Press the Left soft Key lightly. Then press the “\*” key

## 3.3 Make a call

You can make a call in the following ways:

- Enter the desired number in standby mode and press the **Call key**, Choose SIM1 or SIM2 call.
- Go to **Menu> Phonebook** and then dial the desired number.
- Just press the **Call key** to dial the contacts listed in Call logs.
- You can also dial a contact from the messages.

## 3.4 Answer a Call

Press the **Call key** to answer a call.

## 3.5 Reject a Call

Press the **End key** to reject an incoming call.

## 3.6 Hold a Call Conference

You can talk with more than one person at the same time through call conference.

1. While on a call, dial another contact. Once the new call gets connected, the first call will be put on hold.

# User Guide

---

2. After this, press **Options** and then choose **Conference**.

Note: This is network dependent and you may need to contact your network operator to activate this feature.

## 3.7 Swap a Call

1. While on a call, go to phonebook and dial a contact. Once the call gets connected, the first call will be put on hold.
2. After this, press **Options** and then choose **Swap**. The active call and the call on hold will be interchanged.

## 3.8 Choose User Profiles

**Menu > Settings > Profiles**

You can choose your profile such as normal mode, silent, Meeting, Indoor, Outdoor etc.

# 4 Some Notable Features

## 4.1 Phone Tracker

**Menu > Settings > Security Settings > Phone tracker**

You can track your phone in case of loss or thefts by activating the Theft Tracker mode and configuring an alternate number for receiving messages from the unauthorized user.

If an illegal user is using your mobile, a SMS will be sent to the notify



# User Guide

---

number so that you can obtain the number of the illegal user.

## 4.2 Privacy Protection for Data

**Menu > Settings > Security Settings > Privacy**

You can protect your phonebook, messages, and call logs through this feature.

Note: You can also change the default password to a password of your choice. The default password to use this feature is 0000.

## 4.3 Secure your Phone

**Menu > Security Settings > Power On Password**

Lets you lock/unlock your phone via a security password which you can change anytime.

The default security code to unlock the phone is 0000.

Note: After you activate the Powe On Password, you would be asked for a password when you power on your phone next time.

## 4.4 Lock your SIM Card

**Menu > Settings > Security Settings > PIN1/PIN2**

Lets you lock your SIM card via a security password which you can change anytime.

# User Guide

---

The default security code to unlock the SIM is 0000.

Note: After you activate the PIN lock, you would be asked for a password whenever your phone or any other phone accesses the SIM card.

## 4.5 Manage Your Files

### Menu > File Manager

You can view and manage your files available in the Phone or memory card from the file Manager. You can rename, view details share, move delete files and so on via the file Manager. You can also format your phone or card memory from here.

## 4.6 Useful Applications

From the main menu, you can tap and use applications like alarm, calendar, , EBook, calculator, Tetris the game.

In addition, you can enable and use Bluetooth, WAP, STK services, Multimedia etc

## 4.7 Camera

### Menu >Multimedia > Camera

Press the **OK** Key to start capture.

- You can also choose the gallery, settings, storage, size, and so on.

## 4.8 Music

### Menu>Multimedia > Music

Lets you play songs and stored in your phones memory card.

# User Guide

---

## 4.9 Video player

**Menu>Multimedia > Video player**

Video player allows you to view videos.

Select video player submenu to access movie list and you can access.

## 4.10 Video recorder

**Menu>Multimedia > Video recorder**

Press the **OK** Key to start recording.

- You can also choose the view video directory, settings, storage , and so on.

## 4.11 FM Radio

**Menu > Multimedia > FM radio**

Your phone comes with an FM radio to let you listen to FM channels.

## 4.12 Schedule FM Radio

**Menu > Multimedia > Schedule FM radio**

You can schedule your FM from here.

# User Guide

---

## 4.13 Image Viewer

**Menu > Image Browser**

Lets you to view your saved images. You can also send the images via MMS or Bluetooth or use it as screensaver or wallpaper etc.

## 4.14 Record Sounds

**Menu > Multimedia>Sound recorder**

You can record surrounding sounds using this feature.

# 5 Phonebook Features

Your phonebook stores all your saved contacts for anytime use. Your phonebook data can be stored in your SIM card or your phone memory. You can manage your contacts from here. You can access your phonebook by going to:

**Menu >Phonebook**

## 5.1 Add New Contacts

**Menu > Phonebook>Left soft key > New**

## 5.2 Send SMS Via Phonebook

**Menu > Phonebook>Left soft key > Send text message**

## 5.3 Send MMS

**Menu > Phonebook>Left soft key > Send multimedia message**

# User Guide

---

## 5.4 Call a Contact

**Menu > Phonebook > Call Key > Call**

Allows you to make a call to the contact you are viewing. Or you can just highlight a number and press the **Call** key.

## 5.5 Move a Contact

**Menu > Phonebook>Left soft Key > Move**

Move the record from current storage to other storage.

## 5.6 Send vCard

**Menu > Phonebook> Left soft Key > Send vCard**

Allow you to send vCard to other numbers.

## 5.7 Add to Blacklist

**Menu > Phonebook>OK key > Edit > Caller Groups > Blacklist**

In this case the contact will be blocked from calling you up.

From the contact list group delete after a telephone call or contact information to function normally.

## 5.8 Mark Several

**Menu > Phonebook> Left soft Key > Mark**

Allows you to mark single or several contacts to send SMS, vCard or just delete.

# User Guide

---

## 5.9 Caller Groups

**Menu > Phonebook > OK Key > Edit > Caller Groups**

Create groups of contacts with common settings like ringtone and caller picture.

## 5.10 Contacts Backup

**Menu > Contacts > OK Key > Phonebook Backup**

Lets you back up your phonebook.

## 5.11 Phonebook Settings

**Menu > Phonebook > Left soft Key > Copy > Copy to memory Card**

The phonebook settings provide the following options:

- **Preferred Storage:** Set the storage media as either all phone or, SIM (1, 2),
- **Speed Dial:** Assign speed dial for rapid dialing to desired numbers.
- **My Number:** Add my number to the phone.
- **Extra Numbers:** Add extra numbers like Owner, Fix dial or SOS numbers:
- **Memory Status:** Check the memory status of SIM, Phone and groups.
- **Copy Contacts:** Allows you copy the contacts from phone to SIM and vice versa
- **Move Contacts:** Move contacts from Phone to SIM or vice versa.

# User Guide

---

- **Delete All Contacts:** Delete all contacts from phone or SIM

## 6 Call Logs

### 6.1 View Call Logs

#### Menu > Call Logs

The Call log lists the calls you have recently dialed, received, missed for SIM1 and SIM 2 or card.

Tip: You can also directly access the call logs of SIM 1 and SIM 2 by directly pressing the **call** key.

### 6.2 Actions from Call Logs

- Highlight an entry and then click OK key for working with that contact.
- Open a Call log entry to call the contact, send a message, save the number, or delete that contact and so on.
- Open an entry in the log and then, touch **Delete** to remove the entry from the log.
- Set the following:
  - **Call Timers:** View or reset call times
  - **Call Cost:** View or set call cost.
  - **GPRS Counter:** Lets you view or reset the GPRS usage

## 7 Messaging

### 7.1 Write Text Messages

#### **Menu > Message > Write Message**

You can compose and send SMS and MMS. Pressing the **OK Key** during/after composing the message gives you a host of messaging features.

### 7.2 Use Message Templates

#### **Menu > Messages > Write Message>new SMS> Left soft Key> Insert template**

Enter into preset message templates and use them. These preset templates can save you time if the theme of your message is the same as those existing in the template.

### 7.3 Inbox

#### **Menu > Messages > Inbox**

The inbox message's icon will express read or not  
Press left soft keystroke to enter message option list.



# User Guide

---

## 7.4 Out box

### **Menu > Messages > Out box**

The message will be store in draft box automatically when you send message fail.

## 7.5 Drafts

### **Menu > Messages > Drafts**

The messages unprepared for sending are stored in the Draft, waiting to be modified and sent.

## 7.6 Sent items

### **Menu > Messages > Sent items**

Save you send the successful text messaging and MMS

## 7.7 Broadcast Messages

### **Menu > Messages > Left soft Key > Broadcast message >**

It is a service provided by the network operator such as weather forecast, cricket scores, Traffic conditions and so on

You can enable the receiving of service messages via SIM 1 or SIM 2. You can set your preferences also.

# User Guide

Please contact your network operator for the required configuration.

## 7.8 Message Settings

**Menu> Messages > Left soft Key> Settings**

You can set your desired parameters for Text message/ Multimedia message and service messages.

For MMS, you can set the data account for GPRS connection (to access the Internet) or common settings.

*Note Please contact your network operator for the settings.*

## 8 Phone Settings

You can go to Settings to set various preferences for your phone.

Phone Settings	Set preferences such as Time & date, language, Shortcut set, Auto power on/off, Power management etc.
Display Settings	Set preferences such as wallpaper, Idle screen style, Idle display set, Contrast, Back light, keypad backlight time , Animation effect etc.
Call Settings	You can set your call settings such as dual-SIM, network selection, call waiting, set caller identity (network dependent),

# User Guide

	and any key answer and much more.
Network Settings	Use the default setting provided by the network operator.
Security settings	Set preferences such as PIN, PIN2, Privacy, Auto keypad lock, Lock screen by end-key, power-on password, Phone tracker etc.
Profiles	Choose your profiles based on your situation
Restore Settings	Restore your phone to factory settings. The default password is 0000

## 9 Health and Safety Precautions

Please read these simple guidelines. Not following them may be dangerous or illegal.

### SAR Compliance

- Your phone is designed not to exceed the limits of emission of radio waves recommended by international guidelines.
- SAR (specific absorption rate) is the measurement of body-absorbed RF quantity when the phone is in use. SAR value is ascertained according to the highest RF level generated during laboratory tests.
- The SAR value of the phone may depend on factors such as proximity to the network tower, use of accessories or other

# User Guide

---

accessories.

- The highest SAR value of the device at the head is 0.802 W/kg averaged over 1 gm of human tissue.

## SAR Recommendations

- Use a wireless hands-free system (headphone, headset) with a low power Bluetooth emitter.
- Please keep your calls short and use SMS whenever more convenient. This advice applies especially to children, adolescents and pregnant women
- Prefer to use your cell phone when the signal quality is good.
- People having active medical implants should preferably keep the cell phone at least 15 cm away from the implant.
- Maintain a preferable distance of 15 mm from the device.

## Safe Driving

- Do not use the phone while driving. When you have to use the phone, please use the personal hands-free kit.
- Please do not put the phone onto any passenger seat or any place from which it may fall down in case of vehicular collision or emergency braking.

## During Flight

- Flight is influenced by interference caused by the phone. It is illegal to use a phone on the airplane. Please turn off your phone during a flight.

# User Guide

---

## In Hospitals

- Your Phone's radio waves may interfere with the functioning of inadequately shielded medical devices. Consult a physician or the manufacturer of the medical device to determine whether they are adequately shielded from external Radio Frequency. Switch off your device when regulations posted instruct you to do so.
- To avoid potential interference with implanted medical devices such as a pacemaker or cardioverter defibrillator:
- Always keep your phone at least 15.3 centimeters (6 inches) from the medical device.
- Do not carry the wireless device in a breast pocket.
- Turn off the phone if there is any reason to suspect that interference is taking place.
- Follow the manufacturer directions for the implanted medical device.
- If you have any questions about using your wireless device with an implanted medical device, consult your health care provider.

## Unsafe Areas

- Please turn off your phone when you are close to a gas station or in the vicinity of any place where fuel and chemical preparations, or any other dangerous goods are stored.
- 

## 10 Taking Care of Your Device

Your device is a product of superior design and craftsmanship and should

# User Guide

---

be handled with care: The following suggestions will help you protect your phone:

- Keep the device dry. Precipitation, humidity, and all types of liquids or moisture can contain minerals that will rust electronic circuits. If your device does get wet, remove the battery without turning on the device, wipe it with a dry cloth and take it the service center.
- Do not store the device in high or cold temperature. High temperatures can shorten the life of electronic devices and damage batteries.
- Do not use or store the device in dusty, dirty areas. Its moving parts and electronic components can be damaged.
- Do not attempt to open the device other than as instructed in this guide. Repairing this phone by yourself other than our authorized service agents/centers goes against the warranty rules.
- Do not drop, knock, or shake the device. Rough handling can break internal circuit boards and fine mechanics.
- Do not use harsh chemicals, cleaning solvents, or strong detergents to clean the device. Only use a soft, clean, dry cloth to clean the surface of the device.
- Do not store your device near magnetic fields or allow your device to come in contact with magnetic fields for extended period of time.

## **Battery Recommendations:**

- Please put the battery in a cool and well-ventilated place out of direct sunlight. We recommend you to charge the battery at room temperature range.

# User Guide

---

- Batteries have life cycles. If the time that the battery powers equipment becomes much shorter than usual, the battery life is at an end. Replace the battery with a new battery of the same make and specification.
- Do not discard the battery with household trash. Please dispose of used battery according to your local environmental laws and guidelines.
- Use manufacturer approved batteries, chargers, accessories and supplies. Micromax will not be held responsible for user's safety when using unapproved accessories or supplies.

## Disclaimers

1. The colors and specifications shown/mentioned in the user manual may differ from the actual product. Images shown are for representation purpose only. Other product logos and company names mentioned herein may be trademarks or trade names of their respective owners.
2. Micromax keeps the right to make modifications to any of the content in this user guide without public announcement in advance. The content of this manual may vary from the actual content displayed in the mobile phone. In such a case, the latter shall govern.

## Copyrights

All rights reserved. Reproduction, transfer, distribution or storage of part or all of the contents in this document in any form without the prior written permission of Micromax is strictly prohibited.