### Welcome

### About your phone

Thank you for purchasing this Micromax mobile device. You are now the proud owner of Micromax X-222 touch phone which offers a rich array of exciting features designed to transform your mobile experience.

The X-222 offers you the following exciting features:

- □ Dual SIM Support
- 2.4 inch (6 cm) full touch screen
- ☐ Blacklist and Whitelist for contacts
- □ Multimedia Messaging
- □ Video Recorder
- □ Audio Player and Sound recorder
- ☐ FM Radio with recording
- □ Bluetooth, WAP/GPRS, and much more

#### Instructional Icons

Before you start, familiarize yourself with the following icons which will indicate certain information in this manual

Warning: Situation that could cause injury to yourself or others. Caution: Situations that could cause damage to your device or other equipments.

#### Important Notes

- ☐ Content in this manual may differ from the product or from the software provided by service providers and is subject to change without prior notice.
- ☐ The items and accessories supplied with your device may vary depending on your region or service provider.
- ☐ You can purchase additional accessories from your local Micromax dealer
- □ Accessories other than the ones supplied with the device may not be compatible with the device.
- ☐ Please read this user manual carefully to make the full use of the features in this mobile phone.

#### Copyright

This manual may not be reproduced, distributed or translated in part or in whole in any form or any means without the prior written permission of Micromax Informatics Ltd.

# Phone Layout Keys and Parts (Front and Back)



1.Receiver 2.LCD screen 3.Call kev

7.Camera 4. Navigation key

5.End/Power key

6.Speaker

## Brief Intro to the Phone

### Icons on the main screen

Icons and notifications displayed on the topmost part of the screen.

- Activate alarm
- Unread Message Battery Indicator
- Missed Calls Keypad locked
- SIM1 Line 1 SIM1 Line 2
- SIM2 Line 1 SIM2 Line 2

### **Basic Operation**

Insert SIM card, install battery, restore the battery cover, and press the power key for a few seconds to turn on your phone.

GPRS

Ring

Vibrate

Ring and vibrate

Ring after vibrate

SIM1 line 1 all calls divert

SIM1 line 2 all calls divert

Ill SIM2 line 1 all calls divert

SIM2 line 2 all calls divert

### 2. Switch off

Press the power key for a few seconds to turn off your phone.

#### Dial a call

Enter a complete phone number and then touch the dial icon or call key to dial a call.

While engaged in a call, touch the Volume icon and then choose "+/-" to adjust the volume.

Touch the "menu" icon and then choose the answer icon or press call key to answer an incoming call.

#### 6. Speed dial

While on standby mode, touch the dialer icon, then touch and hold any of the number keys from 2 to 9 to speed dial a call. For this feature to work, ensure that speed dial is already assigned to the desired phone numbers and is set to "ON".

#### Latest calls

This mobile phone can store upto 20 ast dialed calls. In standby mode, press the call key to view the latest calls.

### 8. Options during call

While engaged in a call, you can:

- a. Touch the **Menu** icon and browse the phonebook to make a new call. You can set your DTMF tone, or record your current call through this
- b. Touch the Hold icon to put the current call on hold. You can resume your call by touching the Hold icon again.
- c. Touch the **Mute** icon to mute your voice so that the phone's MIC will not transmit sound to the other end. You can resume transmiting your voice again by pressing **Mute**. By pressing the **Mute** icon again.
- d. Touch the **SPK** icon to listen to the phone via the speaker.
- e. Touch the **KPD** icon to type in specific numbers and send SMS.
- f. Touch the **Volume** icon and adjust the volume using the "+/-" icons.

www.micromaxinfo.com

#### nnect to voicemail (Network dependar

This mobile phone allows you to transfer your incoming call into voicemail and receive notices with voice messages.

Note: The number of the voice mail center must be set first.

#### Frequently Asked Questions

- 1.) How do Hock/unlock the phone?
- a. To lock: Press and hold the **Lock** icon to immediately lock the phone. b. To set auto-lock timing, go to Settings > Security settings >
- Phone Security> Auto Keypad lock and choose 5 sec, 30 sec, 1 min or 5 min as desired.
- C. To unlock, press and hold the **Lock** icon for a few seconds.
- 2.) How do I activate the silent mode?
- In the standby mode, touch the phone icon and then touch and hold the # icon until the silent mode is activated.
- 3.) How can I set WAP/GPRS to access the Internet?
- To set WAP/GPRS for Internet access:
- a. Go to Settings and tap the Connectivity icon. b. Select WAP > Settings > Data Account
- c. Select SIM1 or SIM2(applicable when two SIM cards are inserted).
- d)Next, select the profiles as listed by your service provider. Note: You may need to request for your WAP/GPRS settings from your service provider.
- 4. How can I set MMS for sending multimedia messages?
- To configure MMS setting for Multimedia messages:
- a. From the main menu, go to Settings> Messaging.
- b. Select Message settings > Multimedia message.
- c. Select SIM1 or SIM 2(applicable if both the SIMs are inserted).
- d.Select Data Account.

e. Select the MMS account listed by your network provider. 5. Is there a facility to blacklist specific numbers?

- Yes, you can blacklist a list of numbers so that you do not receive calls from them. To blacklist a number:
  - a. From the main menu, go to **Settings** and tap the **Settings** icon.
  - b. Select Call settings>Advanced Settings. c.Select Blacklist> Blacklist Numbers and add the desired
  - Note: Your blacklist status needs to be ON to block calls from
  - these numbers. 6. Is there a facility to receive calls from specific numbers only?
  - Yes, you can add a list of numbers to your whitelist so that you receive calls from these numbers only. To whitelist a number:
  - a. From the main menu, go to **Settings** and tap the **Settings** icon.
- b. Select Call settings>Advanced Settings.
- c.Select Whitelist> Whitelist Numbers and add the desired numbers.
- Note: Your whitelist status needs to be ON to receive calls from these numbers. If both your blacklist and whitelist contain the same numbers, and both are turned on, you will still receive their
- 7.) Is there a security code to lock/unlock the phone?

Password.

- Yes. The default security code to unlock the phone is 0000. To change the security code: a. Go to Settings > Security settings > Phone security> Change
- b. Input the default code (0000) and then the new code to change the security code.

#### Safety Guidelines

Please read these simple guidelines. Not following them may be dangerous or illegal.

- Your phone is designed not to exceed the limits of emission of radio waves recommended by international guidelines.
- SAR (specific absorption rate) is the unit of body-absorbed RF energy when the phone is in use.
- The Highest SAR value of the handset is 1.428 W/kg @1 g(head) and 1.310 W/kg @ 1 g (body).

#### **SAR Recommendations**

- □Please keep your calls short and use SMS whenever convenient. This advice applies especially to children, adolescents and pregnant
- Prefer to use your cell phone when the signal quality is good.
- People having active medical implants should preferably keep the cell phone at least 15 cm away from the implant.

#### Safe Driving

- Do not use the phone while driving. When you have to use the phone, please use the personal hands-free kit
- Please put the phone safely in the phone stand. Do not put it onto any passenger seat or any place from which it may fall down in case of vehicular collision or emergency braking. During Flight
- Flight is influenced by interference caused by the phone. It is illegal to use a phone on the airplane. Please turn off your phone during a flight.

8.SIM 1

9.SIM 2

Phone Layout

**Keys and Parts** 

Please turn off your phone when you are close to a gas station or in the vicinity of any place where fuel and chemical preparations, or any other dangerous goods are stored.

#### In Hospitals

- Your Phone's radio waves may interfere with the function of inadequately shielded medical devices. Consult a physician of the manufacturer of the medical device to determine whether they are adequately shielded from external RF energy. Switch off your device when regulations posted instruct you to do so.
- To avoid potential interference with implanted medical devices
- such as a pacemaker or cardioverter defibrillator: Always keep your phone at least 15.3 centimetres (6 inches) from the medical device.

Turn off the phone if there is any reason to suspect that

- Do not carry the wireless device in a breast pocket.
- interference is taking place. Follow the manufacturer directions for the implanted medical
- If you have any questions about using your wireless device with an implanted medical device, consult your health care provider. Please read these simple guidelines. Not following them may be dangerous

### Taking Care of Your Device

UKeep the device dry. Precipitation, humidity, and all types of liquids or moisture can contain minerals that will rust electronic circuits.

#### Do not use or store the device in dusty, dirty areas. Its moving parts and electronic components mey get damaged.

Do not store the device in high or cold temperature. High

- temperatures can shorten the life of electronic devices and damage Do not attempt to open the device other than as instructed in this guide. Repairing this phone by yourself other than our authorized
- service agents/centers goes against the warranty rules. Do not drop, knock, or shake the device. Rough handling can break internal circuit boards and fine mechanics.
- Do not use harsh chemicals, cleaning solvents, or strong detergents to clean the device. Only use a soft, clean, dry cloth to clean the surface of the device.
- Do not store your device near magnetic fields or allow your device to come in contact with magnetic fields for extended period of time. Use manufacturer approved batteries, chargers, accessories and
- supplies. Micromax will not be held responsible for user's safety when using unapproved accessories or supplies.

Micromax will not bear any responsibility for any non-compliance with the above mentioned guidelines or improper usage of the mobile phone. Micromax keeps the right to make modifications to any of the content here in this User Guide without public announcement in advance. The content of this manual may vary from the actual content displayed in the mobile phone. In such a case, the latter shall govern.



10

11

12