
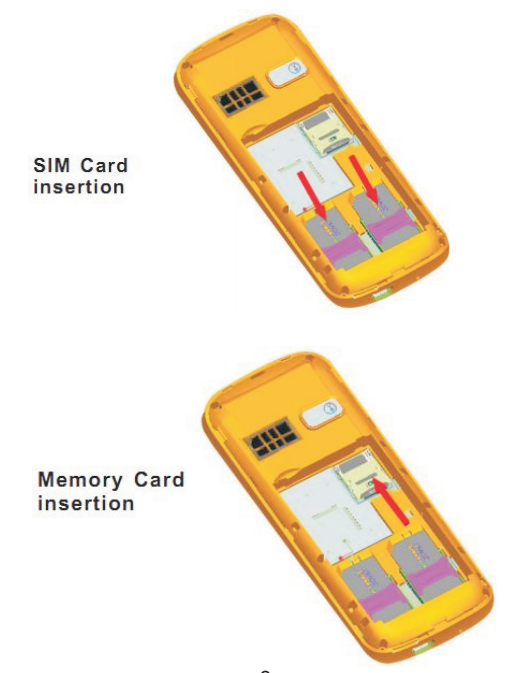



<p>Welcome</p> <p>About your phone</p> <p>Thank you for purchasing this Micromax mobile device. You are now the proud owner of Micromax X269 which offers you the following rich array of exciting features and much more:</p> <ul style="list-style-type: none"> □ Dual SIM □ FM Radio □ Digital Camera □ Video Player □ Music Player □ Image Viewer □ LED Torch □ SIM Security □ Bluetooth <p>Copyright This manual may not be reproduced, distributed or translated in part or in whole in any form or any means without the prior written permission of Micromax Informatics Ltd.</p> <p>Disclaimer The colors and specifications shown/mentioned in the user manual may differ from the actual product. Images shown are for representation purpose only. Other product logos and company names mentioned herein may be trademarks or trade names of their respective owners.</p> <p style="text-align: center;">1</p>	<p>Phone Layout</p> <p>Keys and Parts (Front and Back)</p>  <p>1 Receiver 2 Display screen 3. Left key 4. Right key 5. Call key 6. End key 7. Number key 8. "*" key 9. "#" key 10. Speaker 11. Camera</p> <p style="text-align: center;">2</p>	<p>Phone Layout</p> <p>SIM Card/Memory Card Insertion</p>  <p>SIM Card insertion</p> <p>Memory Card insertion</p> <p style="text-align: center;">3</p>	<p>Brief Intro to the Phone</p> <p>Icons on the main screen</p> <p>Basic Operation</p> <p>1.Switch on/Off Insert SIM card, battery, restore the battery cover and press the End/Power key for a few seconds to turn on your phone.</p> <p>Press the End/power key for a few seconds to turn off your device.</p> <p>3.Dial a call Enter a complete phone number, or access the desired contact number from the Phonebook, press call key to dial.</p> <p>To make an international call, tap "*" key twice till "+*" displays on the screen. Next add the country prefix "+*" e.g. + 62 represents Indonesia. Enter the desired phone number, and press the call key.</p> <p>4.Adjust Call volume When engaged in a call, you can press Right or Left key to adjust the volume.</p> <p>5. Answer a call Press call key to answer an incoming call; press End/Power key to reject the call.</p> <p>6.Dual SIM Setting Menu> Settings> Dual SIM Setting Choose either SIM 1 or SIM 2 or both for incoming and outgoing calls.</p> <p style="text-align: center;">4</p>	<p style="text-align: center;">www.micromaxinfo.com</p>
--	--	---	--	---

<p>7. Lock Your phone from Unauthorized Use The mobile phone allows you to lock your phone from unauthorized use.</p> <p>A. Go to Settings > Security settings > Phone security > SIM1/SIM2 Security> Phone lock.</p> <p>B. Set the Phone lock status to ON.</p> <p>C. Change the Phone lock password by providing the correct old password and the desired new password.</p> <p>Each time you switch on the mobile, you need to provide the password you had set. The default password to use this feature is 0000 (You can change this as required).</p> <p>8.Lock your SIM Card Menu> Settings> Security Settings>SIM 1/SIM 2 Security Let you lock your SIM card via a security password which you can change anytime. You need to activate PIN lock to use this feature by going to Menu > Settings> Security > PIN Lock. The default security code to unlock the SIM is 0000. Note: After you activate the PIN lock, you need to enter a password whenever your phone or any other phone accesses the SIM card.</p> <p>9. Connect to Internet You can connect to the Internet via GPRS connection. For this you need to set up a data connection.</p> <p>A. Go to Settings> Connectivity> Data account.</p> <p>B. Select from the list of data accounts listed by the network provider's SIM.</p> <p>By Default, your network provider sends the data account and WAP settings via SMS which you need to install, or it comes with your SIM card. You can thus choose from the listed data accounts. If the data accounts are not listed by default, please contact your network provider for the same.</p> <p style="text-align: center;">5</p>	<p>Frequently Asked Questions</p> <p>1.How do I unlock the phone's keypad?</p> <p>a. Press the Left key and then "*" key to unlock the phone. b. To set auto lock timing, go to Settings > Security settings > Auto Keypad lock and choose the timings or On/Off as desired.</p> <p>2.How do I activate the Silent mode? In standby mode, press and hold "#" key until silent mode is activated; press and hold "*" key again to activate the previous mode.</p> <p>3. Is there a security code to lock/unlock your Phone? Yes. The default security code to unlock the phone is 0000.</p> <p>4.How can I use single key press to quickly dial specific numbers? a) Select Phonebook> Options> Phonebook Settings> Speed Dial. b)Set the status to On and then Set the numbers.</p> <p>5.Change the phone preferred storage for data: a) Select Phonebook> Options> Phonebook Settings>Preferred Storage. b)Choose the desired location such as SIM, Phone or Both.</p> <p>6. How can I Manage my files in the phone? You can view and manage your files available in the phone or memory card using the File Manager.You can format, rename, view details, share, move, or delete files and so on.</p> <p>7. How can I put on/off the LED torch? a. Press and hold the 0 key to switch on the LED torch. b. Press and hold the 0 key again to switch off the LED torch.</p> <p style="text-align: center;">6</p>	<p>Safety Guidelines</p> <p>Safe Driving</p> <ul style="list-style-type: none"> □ Do not use the phone while driving. When you have to use the phone, please use the personal hands-free kit. <p>During Flight</p> <ul style="list-style-type: none"> □ Flight is influenced by interference caused by the phone. It is illegal to use a phone on the airplane. Please turn off your phone during flight. <p>In Hospitals</p> <ul style="list-style-type: none"> □ Your Phone's radio waves may interfere with the function of inadequately shielded medical devices. Consult a physician or the manufacturer of the medical device to determine whether they are adequately shielded from external RF energy. Switch off your device when regulations posted instruct you to do so. □ To avoid potential interference with implanted medical devices such as a pacemaker or cardioverter defibrillator: <ul style="list-style-type: none"> □ Always keep your phone at least 15.3 centimetres (6 inches) from the medical device □ Do not carry the wireless device in a breast pocket. □ Turn off the phone if there is any reason to suspect that interference is taking place. □ Follow the manufacturer directions for the implanted medical device. <p>Unsafe Areas</p> <ul style="list-style-type: none"> □ Please turn off your phone when you are close to a gas station or in the vicinity of any place where fuel and chemical preparations, or any other dangerous goods are stored. <p style="text-align: center;">7</p>	<p>Taking Care of Your Device</p> <ul style="list-style-type: none"> □ Keep the device dry. Precipitation, humidity, and all types of liquids or moisture can rust electronic circuits. □ Do not use or store the device in dusty, dirty areas. Its moving parts and electronic components may get damaged. □ Do not store the device in high or cold temperature as it can shorten the life of electronic devices and damage batteries. □ Do not attempt to repair the phone by yourself other than our authorized service agents/center as this goes against the warranty rules. □ Do not drop, knock, or shake the device. Rough handling can break internal circuit boards and fine mechanics. □ Do not use harsh chemicals, cleaning solvents, or strong detergents to clean the device. Only use a soft, clean, dry cloth to clean the surface of the device. □ Do not store your device near magnetic fields for extended period of time. □ Use manufacturer approved batteries, chargers, accessories and supplies. Micromax will not be held responsible for user's safety when using unapproved accessories or supplies. <p>Disclaimer Micromax keeps the right to make modifications to any of the content here in this User Guide without prior notice. The content of this manual may vary from the actual content displayed in the mobile phone. In such a case, the latter shall govern.</p> <p style="text-align: center;">8</p>	 <p style="text-align: center;">X269 User Guide</p>
---	---	--	--	--