



Package

90x110mm用200G双铜正反打样。

修改信息	版本	描述	修改人	时间

<p>Welcome About your phone</p> <p>Thank you for purchasing the Micromax X320 handset. You have now joined the millions of satisfied Micromax customers around the globe. Your Micromax X320 provides you with the following features:</p> <ul style="list-style-type: none"> ● 2.8 inch screen ● 0.3 MP camera ● Mp3 Player ● Video Player/Recorder ● Sound Recorder ● Support for 4 GB memory Card ● Hindi Support <p>1</p>	<p>Instructional Icons Before you start, familiarize yourself with the following icons which will indicate certain information in this manual.</p> <p>Warning: Situation that could cause injury to yourself or others. Caution: Situations that could cause damage to your device or other equipments.</p> <p>Important Notes</p> <ul style="list-style-type: none"> □ Content in this manual may differ from the product or from the software provided by service providers and is subject to change without prior notice. □ The items and accessories supplied with your device may vary depending on your region or service provider. □ You can purchase additional accessories from your local Micromax dealer. □ Accessories other than the ones supplied with the device may not be compatible with the device. □ Please read this user manual carefully to make the full use of the features in this mobile phone. <p>Copyright This manual may not be reproduced, distributed or translated in part or in whole in any form or any means without the prior written permission of Micromax Informatics Ltd.</p> <p>2</p>	<p>Phone Layout Keys and Parts (Front and Back)</p> <p>1. Headset 2. USB socket 3. Power Key 4. LED 5. Receiver</p> <p>6. Display 7. Call Key 8. Camera Lens 9. Speaker</p> <p>3</p>	<p>Phone Layout Keys and Parts</p> <p>Insert SIM Card The X320 is a Dual SIM mobile phone allowing you to use two SIM Cards. 1. Switch off the mobile phone and remove the rear cover and battery. 2. Insert the SIM card correctly in the SIM slots (as shown below).</p> <p>3. Finally, insert the battery and replace the rear cover of the mobile phone.</p> <p>Insert Memory Card 1. Switch off the phone and remove the rear cover and the battery. 2. Open the memory card slot, and insert the memory card into the slot.</p> <p>3. Close the memory card slot. 4. Finally, insert the battery and the rear cover of the mobile phone.</p> <p>4</p>	<p>Brief Intro to the Phone Icons on the main screen</p> <p>Icons and notifications displayed on the topmost part of the screen.</p> <ul style="list-style-type: none"> Network signal strength Battery charging in progress USB is connected Airplane mode is ON Alarm clock is active Call on hold Signal weakness Bluetooth is activated Missed call New message Song is playing <p>Basic Operation</p> <p>1. Hold a Call Conference You can talk with more than one person at the same time through call conference. 1. While on a call, dial another contact. Once the new call gets connected, the first call will be put on hold. 2. After this, press Options and then choose Conference. Note: This is network dependent and you may need to contact your network operator to activate this feature.</p> <p>2. Secure your Phone Menu> Settings> Security Settings> Theft Tracker You can track your phone in case of loss by activating Theft Tracker mode and then providing an alternate number. The default password to use this feature is 0000</p> <p>5</p>	<p>3. Secure your Phone Menu> Settings> Security Settings> Phone Security> Phone Lock lets you lock your phone via security password. The default security code to unlock the phone is 0000. Note: After you activate the phone lock, you would be asked for a password when you power on your phone next time.</p> <p>4. Privacy for messages, phonebook and call logs a. Go to Menu> Settings> Security Settings> Privacy Protection b. Enter the default password 0000 to set the privacy lock. c. Select and enable the desired objects to protect and save the choice. Each time you access the protected feature such as messages, you will be asked for the password. Note: You can also change the default password to a password of your choice. The new password will be required to access the protected objects (messages/phonebook/call logs).</p> <p>5. Lock your SIM card Menu> Settings> Security Settings> SIM1/SIM2 Security> PIN Lock Let you lock your SIM card via a security password which you can change anytime. You need to activate PIN lock to use this feature by going to Menu > Settings> Security> PIN Lock. The default security code to unlock the SIM is 0000. Note: After you activate the PIN lock, you would be asked for a password whenever your phone or any other phone accesses the SIM card.</p> <p>6. Activate Bluetooth Menu>Settings>Connectivity> Bluetooth You can use bluetooth to exchange multimedia or other information with other bluetooth enabled devices.</p> <p>6</p>	<p>www.micromaxinfo.com</p>
<p>7. Manage Your Files Menu> Multimedia> File Manager You can view and manage your files available in the phone or memory card using the File Manager. You can rename, view details, share, move, or delete files, format etc.</p> <p>8. Blacklist Menu> Call Center> Call Settings> Advanced Settings> Blacklist You can blacklist a list of numbers and prevent these numbers from calling you.</p> <p>9. Change Phone Language Menu> Settings> Phone Settings> Language You can change the display language of your phone through this option.</p> <p>10. Mi Zone You can access a host of entertaining information and latest interesting updates from here.</p> <p>11. Messaging You can send and receive text or multimedia messages with friends. You can also set your SMS preferences from here.</p> <p>7</p>	<p>12. Camera Your handset comes with a 0.3 MP camera which lets you capture snapshots as per your desire. You will need to insert a memory card to listen to capture and store photos and videos</p> <p>13. Audio Player You can listen to your music files via the music player. You will need to insert a memory card to listen to the music.</p> <p>14. Restore Factory Settings Menu > Settings> Restore Factory Settings Lets you restore your phone settings to the original setting when you purchased the phone. You need to enter your phone password (0000) to restore the phone to its factory or original settings.</p> <p>8</p>	<p>Safety Guidelines Please read these simple guidelines. Not following them may be dangerous or illegal.</p> <p>SAR Information</p> <ul style="list-style-type: none"> □ Your phone is designed not to exceed the limits of emission of radio waves recommended by international guidelines. □ SAR (specific absorption rate) is the unit of body-absorbed RF energy when the phone is in use. □ The Highest SAR value of the handset is 0.765 W/kg @ 1 gm (head) and 1.482 W/kg @ 1 gm (body). <p>SAR Recommendations</p> <ul style="list-style-type: none"> □ Use a wireless hands-free system (headphone, headset) with a low power Bluetooth emitter. □ Please keep your calls short and use SMS whenever convenient. This advice applies especially to children, adolescents and pregnant women. □ Prefer to use your cell phone when the signal quality is good. □ People having active medical implants should preferably keep the cell phone at least 15 cm away from the implant. <p>Safe Driving</p> <ul style="list-style-type: none"> □ Do not use the phone while driving. When you have to use the phone, please use the personal hands-free kit. □ Please put the phone safely in the phone stand. Do not put it onto any passenger seat or any place from which it may fall down in case of vehicular collision or emergency braking. <p>Unsafe Areas Please turn off your phone when you are close to a gas station or</p> <p>9</p>	<p>During Flight</p> <ul style="list-style-type: none"> □ Flight is influenced by interference caused by the phone. It is illegal to use a phone on the airplane. Please turn off your phone during a flight. <p>In Hospitals</p> <ul style="list-style-type: none"> □ Your Phone's radio waves may interfere with the function of inadequately shielded medical devices. Consult a physician or the manufacturer of the medical device to determine whether they are adequately shielded from external RF energy. Switch off your device when regulations posted instruct you to do so. □ To avoid potential interference with implanted medical devices such as a pacemaker or cardioverter defibrillator: □ Always keep your phone at least 15.3 centimetres (6 inches) from the medical device. □ Do not carry the wireless device in a breast pocket. □ Turn off the phone if there is any reason to suspect that interference is taking place. □ Follow the manufacturer directions for the implanted medical device. □ If you have any questions about using your wireless device with a implanted medical device, consult your health care provider. <p>10</p>	<p>Taking Care of Your Device</p> <ul style="list-style-type: none"> □ Keep the device dry. Precipitation, humidity, and all types of liquids or moisture can contain minerals that will rust electronic circuits. If your device does get wet, remove the battery without turning on the device, wipe it with a dry cloth and take it to the service center. □ Do not use or store the device in dusty, dirty areas. Its moving parts and electronic components may get damaged. □ Do not store the device in high or cold temperature. High temperatures can shorten the life of electronic devices and damage batteries. □ Do not attempt to open the device other than as instructed in this guide. Repairing this phone by yourself other than our authorized service agents/centers goes against the warranty rules. □ Do not drop, knock, or shake the device. Rough handling can break internal circuit boards and fine mechanics. □ Do not use harsh chemicals, cleaning solvents, or strong detergents to clean the device. Only use a soft, clean, dry cloth to clean the surface of the device. □ Do not store your device near magnetic fields or allow your device to come in contact with magnetic fields for extended period of time. □ Use manufacturer approved batteries, chargers, accessories and supplies. Micromax will not be held responsible for user's safety when using unapproved accessories or supplies. <p>11</p>	<p>Disclaimer Micromax keeps the right to make modifications to any of the content here in this User Guide without prior notice. The content of this manual may vary from the actual content displayed in the mobile phone. In such a case, the latter shall govern.</p> <p>12</p>	<p> micromax Having the best thing</p> <p>X320 User Guide</p>

供应商代码：
自行添加供应商代码后四位位于包材隐蔽处，以便识别。

标识内容：
需要标注包装材料、材料加工工艺、设计尺寸。