

Welcome About your phone Thank you for purchasing this Micromax mobile device. You are now the proud owner of Micromax X-335 touch phone which offers a rich array of exciting features designed to transform your mobile experience. The X-335 offers you the following exciting features: Dual SIM Support 0.3 MP Digital Camera Video Recorder/Player Music Player and sound recorder FM Radio Expandable Memory(upto 4 GB) Theft Tracker Bluetooth, WAP and much more 1	Instructional Icons Before you start, familiarize yourself with the following icons which will indicate certain information in this manual. Warning: Situation that could cause injury to yourself or others. Caution: Situations that could cause damage to your device or other equipments. Important Notes Content in this manual may differ from the product or from the software provided and is subject to change without prior notice. Accessories other than the ones supplied with the device may not be compatible with the device. Please read this manual carefully to make the full use of the features in this mobile phone. Copyright This manual may not be reproduced, distributed or translated in part or in whole in any form or any means without the prior written permission of Micromax Informatics Ltd. Disclaimer Micromax will not bear any responsibility for any non-compliance with micromax guidelines or improper usage of the mobile phone. Micromax keeps the right to make modifications to any of the content in this User Guide without prior public announcement. The content of this manual may vary from the actual content displayed in the mobile phone. In such a case, the latter shall govern.
--	--

2

Frequently Asked Questions 1.) How do I lock /unlock the phone? a.To lock: Press and hold the Lock icon to immediately lock the phone. b.To set auto-lock timing, go to Settings> Security settings> Phone Security> Auto Keypad lock and choose 5 sec, 30 sec, 1 min or 5 mins as desired. c. To unlock, press and hold the Lock icon for a few seconds. 2.) How do I activate the silent mode? Go to User Profile and then tap the Silent option to activate the silent mode. 3.) How can I set WAP/GPRS to access the Internet? To set WAP/GPRS for Internet access: a. Go to Connectivity and tap the Data Account icon. b. Select the desired Data account or add new account from Options. c. Select SIM1 or SIM2(applicable when two SIM cards are inserted). d)Next, go to Connectivity> Internet Services> Settings and set the homepage and other preferences for Net browsing. 4. How can I set MMS for sending multimedia messages? To configure MMS setting for Multimedia messages: a. From the main menu, go to Messages>Message Settings. b. Select Multimedia message. c. Select SIM1 or SIM 2(applicable if both the SIMs are inserted). d. Select Data Account. e. Select the MMS profiles listed by your network provider. 7	5. Is there a facility to blacklist specific numbers? Yes, you can blacklist a list of numbers so that you do not receive calls from them. a. From the main menu, go to Settings. b. Select Call settings> Advanced Settings. c. Select Blacklist> Blacklist Numbers and add the desired numbers. Note: Your blacklist status needs to be ON to block calls from these numbers. 6. Is there a facility to receive calls from specific numbers only? Yes, you can add a list of numbers to your whitelist so that you receive calls from these numbers only. To whitelist a number: a. From the main menu, go to Settings. b. Select Call settings> Advanced Settings. c. Select Advanced Settings> Whitelist and add the desired numbers. Note: Your whitelist status needs to be ON to receive calls from these numbers. If both your blacklist and whitelist contain the same numbers, and both are turned on, you will still receive their calls). 7.) Is there a security code to lock/unlock the phone? Yes. The default security code to unlock the phone is 0000. To change the security code: a. Go to Settings > Security settings > Phone security> Change Password. b. Input the default code (0000) and then the new code to change the security code. 8	8. Is there a facility to track my mobile phone? You can track your phone in case of loss or theft by activating the Theft Tracker mode and configuring an alternate number for receiving messages from the unauthorized user's SIM. . a. From the main menu, go to Menu> Settings> Security Settings> Theft Tracker. b. Input the password. Default is 0000. c. Enable Theft Tracker mode and enter the number for receiving the messages from the lost mobile's SIM card. 9. Can I secure Privacy for messages, phonebook and call logs? a. Go to Menu> Settings> Security Settings> Privacy Protection b. Enter the default password 0000 to set the privacy protection. c. Tap Protected objects and select the desired objects to protect and save the choice. Each time you access the protected feature such as messages, phonebook and call logs, you will be asked for the password. Note: You can also change the default password to a password of your choice. The new password will be required to access the protected objects (messages/phonebook/call logs). 10. Can I Lock my SIM from Unauthorized Use? The mobile phone allows you to lock your SIM(s) from unauthorized use. 1. Go to Settings > Security settings > SIM1/SIM2 Security> PIN Lock. 2. Set the SIM lock status to ON. 9	3. Change the SIM password by providing the correct old PIN and the desired new PIN. Each you switch on the mobile with the SIM, you need to provide the SIM access code you had set, thus preventing unauthorized use. The default password to use this feature is 0000 (You can change this as required) Safety Guidelines Please read these simple guidelines. Not following them may be dangerous or illegal. SAR Information Your phone is designed not to exceed the limits of emission of radio waves recommended by international guidelines. SAR (specific absorption rate) is the unit of body-absorbed RF energy when the phone is in use. The Highest SAR value of the handset is 0.963 W/kg @1g (head) and 1.100 W/kg @ 1g (body). SAR Recommendations Please keep your calls short and use SMS whenever convenient. This advice applies especially to children, adolescents and pregnant women. Prefer to use your cell phone when the signal quality is good. People having active medical implants should preferably keep the cell phone at least 15 cm away from the implant. Safe Driving Do not use the phone while driving. When you have to use the phone, please use the personal hands-free kit.
---	---	--	---

Please put the phone safely in the phone stand. Do not put it onto any passenger seat or any place from which it may fall down in case of vehicular collision or emergency braking.

Unsafe Areas

Please turn off your phone when you are close to a gas station or in the vicinity of any place where fuel and chemical preparations, or any other dangerous goods are stored.

During Flight

Flight is influenced by interference caused by the phone. It is illegal to use a phone on the airplane. Please turn off your phone during a flight.

In Hospitals

Your Phone's radio waves may interfere with the function of inadequately shielded medical devices. Consult a physician or the manufacturer of the medical device to determine whether they are adequately shielded from external RF energy. Switch off your device when regulations posted instruct you to do so.

To avoid potential interference with implanted medical devices such as a pacemaker or cardioverter defibrillator:

Always keep your phone at least 15.3 centimetres (6 inches) from the medical device.

Do not carry the wireless device in a breast pocket.

Turn off the phone if there is any reason to suspect that interference is taking place.

Follow the manufacturer directions for the implanted medical device.

If you have any questions about using your wireless device with a implanted medical device, consult your health care provider.

10