

biblio

Basic Manual

READ THIS MANUAL TO MASTER
THE CELLULAR PHONE

www.au.kddi.com

Illustrations and
Screenshots
in This Manual

Notes on
Cell Phone Use

Contents

Getting Ready

Making and
Answering Calls

Global Function

Character Input

Phone Book

Pair Function

Mail

Camera

EZweb

EZ News EX

EZ Navi

TV (1Seg)

In Case of
Loss of Your biblio

Troubleshooting

Index

Introduction

Thank you for purchasing the biblio. Before using your biblio, be sure to read the biblio Basic Manual (this PDF manual) to ensure correct usage. After you have finished reading this manual, store this PDF manual and the printed manuals in safe places so you can retrieve them whenever you need them.

Manuals for the biblio

The biblio comes with the Basic Manual and Instruction Manual.

● For learning the basics:

Read the biblio Basic Manual (this manual).

● For learning details on using each function:

Read the supplied biblio Instruction Manual (Japanese). Be sure to read the Safety Precautions “安全上のご注意” to ensure proper usage of the biblio.

The keyword searchable au Online Manual is also available on the au homepage:
<http://www.au.kddi.com/manual/index.html>

- To access from EZweb:  ⇒ *au one Top* ⇒ *auお客さまサポート* (au Customer Support) ⇒ *オンラインマニュアル* (Online Manual)


Scan this QR code to access the au Online Manual. ▶



Illustrations and Screenshots in This Manual

Note on Illustrations

The illustrations in this manual may look different from the actual cell phone in shape, color and typeface. The key illustrations are also simplified as shown below.

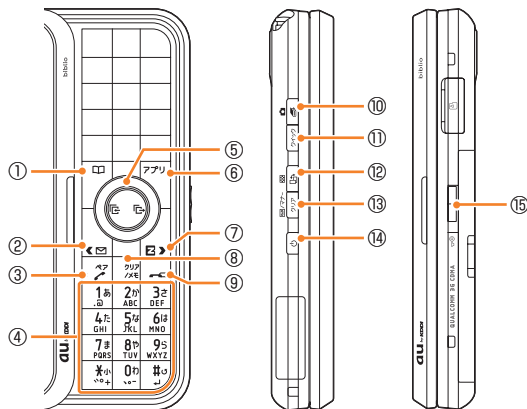

	Key Illustration		Key Illustration
①		⑧	
②		⑨	
③		⑩	
④		⑪	
⑤		⑫	
⑥		⑬	
⑦		⑭	
		⑮	

Note on Screenshots

The screenshots in this manual are simplified and may look different from the actual cell phone screens.

Notes on Cell Phone Use

Cell Phone Etiquette

The cell phone always emits weak radio waves when power is on.

Use the cell phone in an enjoyable and safe manner without forgetting to be considerate of others around you.

- **Use of cell phones is not allowed in some places.**
 - Do not use the cell phone while you are driving. Doing so is both dangerous and prohibited by law.
 - Using a cell phone in an aircraft is prohibited by law. Set Airplane Mode to *ON* and turn the cell phone power off.
- **Radio waves from cell phones may interfere with medical electrical equipment.**
 - Some people close to you in crowded places such as packed trains may be using a cardiac pacemaker. Turn the cell phone off in such places.
 - Abide by the rules of hospitals and other medical institutions where it is forbidden to use or carry cell phones.
- **Be considerate of where you use the cell phone and how loudly you talk.**
 - Do not make calls in theaters, museums, libraries, and other similar places. Turn power off or turn on manner mode not to disturb others around you by ring tones.
 - Do not use the cell phone on a street where you might interrupt the flow of pedestrians.
 - Move to areas where you will not inconvenience others on trains or in hotel lobbies.
 - Refrain from talking in a loud voice.

- Obtain the permission of other people before you take their photos with the cell phone's camera.
- Do not record information with the cell phone's camera in bookstores and other locations where taking photos is not permitted.

Do Not Use the Cell Phone While Driving!

Turn off your cell phone or put it in Drive Mode while driving.

 


Do not use the cell phone while driving a car/motorcycle or riding a bicycle. It may result in a traffic accident. Using a cell phone while driving is prohibited by law. Using a cell phone while riding a bicycle may also be punishable by law.

Prohibited!

- Looking at a cell phone display
- Talking on a cell phone while holding it

Drive Mode

In Drive Mode, a Japanese message meaning "I'm driving now, so I can't answer your call." is played when a call is received, and asks the caller to leave a message on the answer memo.

When the standby screen is displayed, press , use  to select *Drive* and then press  (Set).

Disaster Message Board Service

When a large scale disaster occurs, you can register your safety information from EZweb. The registered information can be referred from anywhere in Japan from EZweb or Internet.


Registering safety information

- When a large scale disaster occurs, from an au phone, you can register your safety information (i.e. your condition and comments) to the 災害用伝言板 (Disaster Message Board) created on the EZweb.
- After registration of your safety information, e-mail is sent to your family or acquaintances you have previously designated to notify that your safety information has been uploaded to the 災害用伝言板 (Disaster Message Board).

Inquiring for safety information

- You can inquire for safety information of a person by entering his/her phone number from EZweb or Internet.*
* To inquire from other carriers' cell phone, a PHS or PC, access "<http://dengon.ezweb.ne.jp/>".

Access	 ⇒ <i>au one Top</i> ⇒ 災害用伝言板 (Disaster Message Board)
	http://dengon.ezweb.ne.jp/

- The maximum storage period of the registered information is 72 hours.
- The maximum available number of registrations is 10 per phone number. When the number of registrations exceeds 10, the oldest one is overwritten.
- The demonstration of this service can be referred to anytime by pressing  ⇒ *au one Top* ⇒ *auお客さまサポート* (au Customer Support) ⇒ 調べる (Search) ⇒ 災害用伝言板 (デモ版) (Disaster Message Board (Demo Version)).
- To view the Disaster Message Board in English, select *English* from the top menu of the Disaster Message Board.

Contents

Introduction

Illustrations and Screenshots in This Manual 1

Notes on Cell Phone Use 2

Cell Phone Etiquette	2
Do Not Use the Cell Phone While Driving!.....	2
Disaster Message Board Service	3

Contents 4

Getting Ready 6

Checking the Contents of the Box	6
Names of Parts	7
Turning On Power	8
Opening/Closing the Cell Phone	8
Setting the Key Lock	8
Charging the Battery Pack	9
Learning the Basics	10
Switching between Portrait Mode and Landscape Mode ...	11
Using the Touch Panel	11
Switching the Display Language to English	13
Initial Setup of E-mail and EZweb	13
Checking Your Phone Number and E-mail Address ...	13
Display Indicators	14
Using Main Menu	15
Changing Your E-mail Address	15
Security Code and Passwords.....	16

Making and Answering Calls 18

Making a Call	18
Making an International Call.....	18
Answering a Call	19
Returning a Call (Outgoing History/Incoming History) ...	19
One-ring Calls.....	19
Adjusting the Earpiece Volume during a Call	20
Turning On Manner Mode.....	20
Changing the Incoming Ring Tone	20
Adjusting the Incoming Ring Tone Volume	21
Turning On the Answer Memo	21

Global Function 23

Setting the Area	23
Obtaining the Latest PRL (Preferred Roaming List)...	23
Calling Japan from Overseas	24

Character Input 25

Character Entry Modes	25
Entering Alphanumeric Characters	25
Entering E-mail Addresses	26
Entering Pictograms	27

Phone Book 28

Saving a Phone Book Entry	28
Dialing from the Phone Book	28
Editing Phone Book Entries	28
Saving a Phone Number from the Incoming or Outgoing History	29



Pair Function	30	EZ News EX	41
Registering a Pair Partner	30	Basic Operations	41
Making a Call to a Pair Partner	30	Setting EZ News EX	41
Sending Mail to a Pair Partner	30		
Mail	31	EZ Navi	43
Using E-mail	31	Passenger Seat Navi for People in the Passenger Seat to Check the Route	43
Creating and Sending E-mail Messages	31	Security Navi to Check Where Your Kids Are	43
Reading Received E-mail Messages	32	EZ Navi Walk for When You Go Out	44
Reading an E-mail Message with an Attached Photo or Movie.....	32	Evacuate Navi to Guide You Home or to Nearby Evacuation Areas during Disasters	45
Replying to Received E-mail Messages.....	32		
Rejecting Spam	33	TV (1Seg)	46
Using C-mail	34	Initial Setup of au Media Tuner	46
Creating and Sending C-mail Messages	34	Watching TV (1Seg)	47
Reading Received C-mail Messages	34	Basic Operations	47
		Exiting the au Media Tuner	47
Camera	35	In Case of Loss of Your biblio	48
Photo Taking Tips	35	Setting Conditions for Activating the Remote Ctrl Lock	48
About Photo Modes	35	Remotely Activating the Remote Ctrl Lock on Your biblio ...	48
Taking a Photo	36	Activating the Remote Ctrl Lock by the Security Lock Service	49
Viewing Photos	36		
EZweb	37	Troubleshooting	50
Accessing Sites	38		
Bookmarking Frequently Accessed Pages	39	Index	52
Viewing Bookmarked Pages	39		
Checking Charges	40		
Downloading Chaku-Uta-Full®/Chaku-Uta®	40		

Getting Ready

Checking the Contents of the Box

The box contains the cell phone and accessories.

- Cell phone
- Battery pack

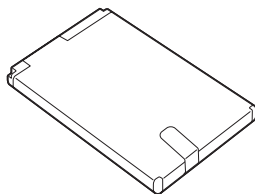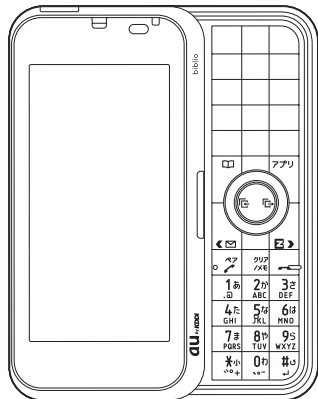


- CD-ROM
- Instruction Manual (Japanese)
- Warranty (Japanese)
- Safety Precautions (Japanese)
- Global Passport CDMA Owner's Guide (Japanese)
- Osaifu-Keitai® Guide (Japanese)
- JIBUN BANK Launcher Operation Guide (Japanese)
- Wi-Fi WIN Operation Guide (Japanese)


- Purchase a specified AC adapter, microSD memory card, desktop holder, earphone conversion adapter, stereo earphones or USB cable as required as they are not included in the box (sold separately).

Names of Parts



From the Front

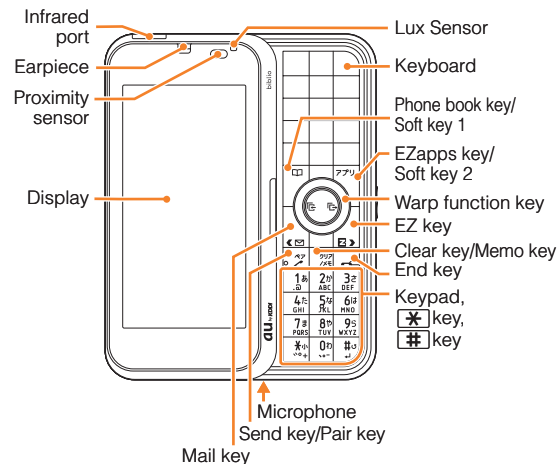

From the Sides

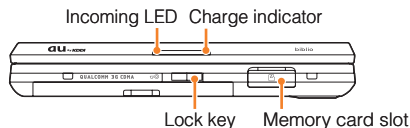

From the Back

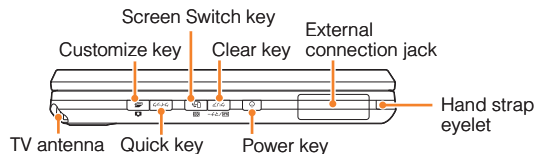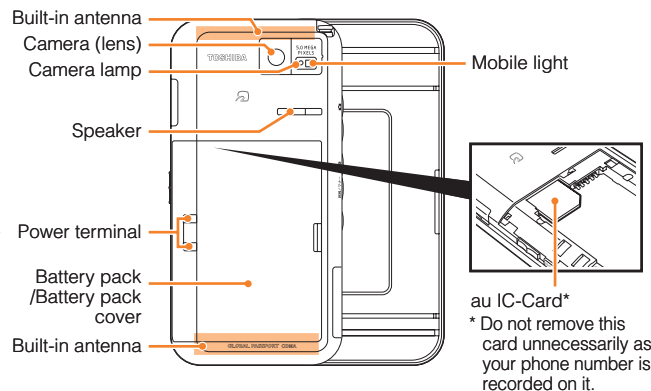

Turning On Power

Hold down  for at least one second.

- You cannot receive or make calls if Out (out of range indicator) is displayed.


Turning Off Power

Hold down  for at least three seconds.

Opening/Closing the Cell Phone

To open, draw the front (display) section to the left.

- To close, gently draw back the same section.

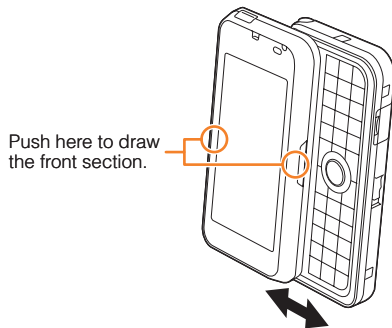


- When opening/closing the cell phone, take care not to touch the display and the keys to avoid erroneous operations.

Setting the Key Lock

Draw  downward once.

The keys and the touch panel are disabled while the cell phone is turned on and closed.

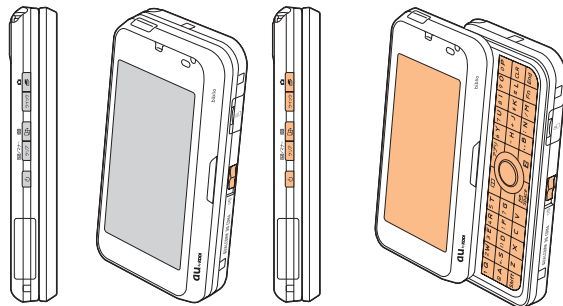

When you close the cell phone, the power saving screen is displayed and nothing happens if you press the keys or touch the touch panel.

When you open the cell phone, the keys and the touch panel are enabled.

Canceling the Key Lock


Draw  downward once.

Charging the Battery Pack

The battery pack is not fully charged at the time of purchase. Be sure to charge the battery pack before using the cell phone for the first time.

- An AC adapter is not included. Purchase a specified AC adapter (sold separately).

3 Charge indicator

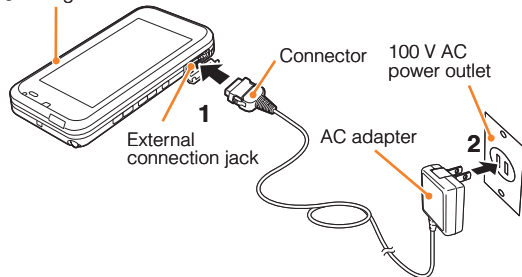

- Be sure to close the cover of the external connection jack when charging is finished.
- Do not pull or twist the cover of the external connection jack forcibly.
- Be sure to use the common AC adapter 02 (sold separately) when charging overseas.

➔ Connect a specified AC adapter to the cell phone with the battery pack attached.

- Open the cover of the external connection jack. Check the shape of the connector of the AC adapter, and plug it straight into the external connection jack.

➔ Unfold the power plug of the AC adapter and plug it into a 100 V AC power outlet.

➔ Confirm that the charge indicator lights.

- Charging: The charge indicator lights.
- Charging finished: The charge indicator goes out.

Learning the Basics

Key Assignments

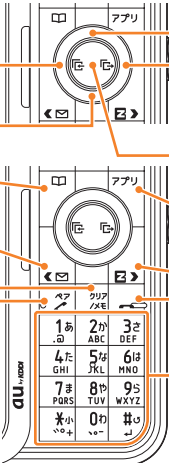


Diagram illustrating the functions of various icons on the mobile phone screen:

- : Display Incoming History.
- : Display Notification window/Shortcut menu.
- : Use Phone Book.
- : Display E-mail/C-mail menu.
- : Set/cancel Answer memo. Delete characters. Cancel operation.
- : Make/answer calls. Use the Pair function.
- : Display the ticker field and info pane.
- : Display Outgoing History.
- : Display Main menu.
- : Display EZapps menu.
- : Display EZ Service menu.
- : End call/communication. Cancel operation.
- : Input phone numbers and characters.

Side Key Assignments

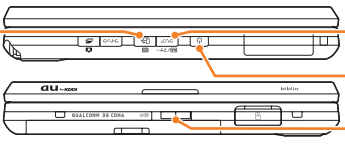





Diagram illustrating the functions of the side keys:

- : Switch the screen mode to auto/landscape/portrait mode. Hold down for at least one second to set/cancel Privacy Filter.
- : Set/cancel manner mode.
- : Turn power on/off.
- : Set/cancel Key Lock.


- If you lose track of where you are or if you make a mistake, press to return to the previous screen. Return to the standby screen by holding down for at least one second.

Hiding/Redisplaying the Notification Window

When the Notification window is displayed on the standby screen, you can temporarily hide it by pressing  (Back) and then display the Main menu by pressing .


To redisplay the hidden Notification window, press  when the standby screen is displayed.


Notification window

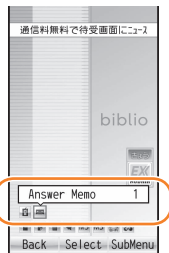

Switching between Portrait Mode and Landscape Mode

When using a function (such as a character entry screen) that is compatible with landscape mode, turn the cell phone as shown below to switch between portrait and landscape modes. In landscape mode, the keyboard is switched to a QWERTY keyboard resembling a standard PC keyboard.

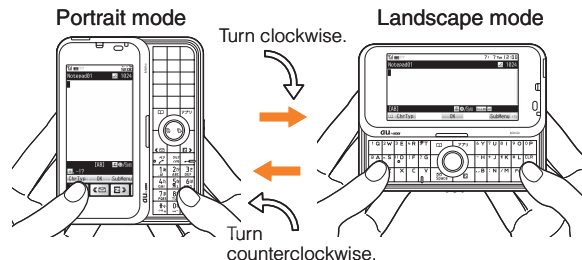


- Operations in portrait mode are described in this manual.
- Alternatively, press  to switch between portrait and landscape modes.
- Hold the cell phone upright when switching portrait and landscape modes. If the cell phone is laid flat, the screen mode may not be switched.

Using the Touch Panel


The display of the cell phone is a touch panel. Touch the display with one finger at a time.


- The touch panel may not function if you touch the display with your fingernail, or if you touch the display while an object other than your finger is touching it.
- The proximity sensor detects the presence of a nearby object (such as your face) and disables the touch panel function to prevent inadvertent touches when you lift the cell phone to your ear when a call is received or during a call.

* Do not put a label on the proximity sensor to avoid malfunction.

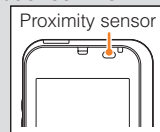

Selecting an Item


Slide your finger up and down and right and left in the center part of the display instead of pressing .

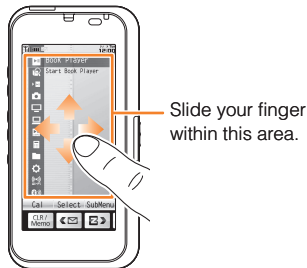

Using the Touch Palette and Buttons above the Touch Palette

The touch palette displayed at the bottom of the display consists of softkeys representing the currently available cell phone keys. Slide your finger from side to side to scroll the touch palette, and instead of pressing a cell phone key, you can tap the corresponding softkey.



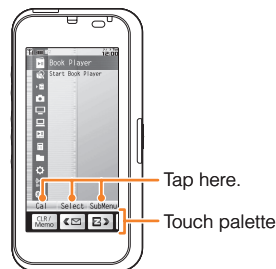





You can also tap a button above the touch palette to perform the corresponding operation.



Switching the Display Language to English

You can switch the display language for function names and other items to English.

When the standby screen is displayed, press .

- ➔ Use  to select 機能 (Function) and then press  (選択 [Select]).
- ➔ Use  to select 画面表示 (Screen Display) and then press  (選択 [Select]).
- ➔ Use  to select *Set Language* and then press  (選択 [Select]).
- ➔ Use  to select *English* and then press  (Set).

Initial Setup of E-mail and EZweb

To use e-mail and EZweb, you need to apply for an EZweb subscription. If you did not apply for an EZweb subscription at the time of purchase, contact an au shop or the au Customer Service Center.

Also, before use, you need to configure initial settings. Your e-mail address is assigned automatically in the initial setup.



When the standby screen is displayed, press .

➔ Press  (OK).

After a short while, your e-mail address is displayed.

➔ Press  (OK).

The initial settings are complete.

- You can also configure initial settings by pressing  or .


Checking Your Phone Number and E-mail Address

When the standby screen is displayed, press  and then .

Display Indicators

Display indicators inform you of mail arrival, current settings, etc.

Display

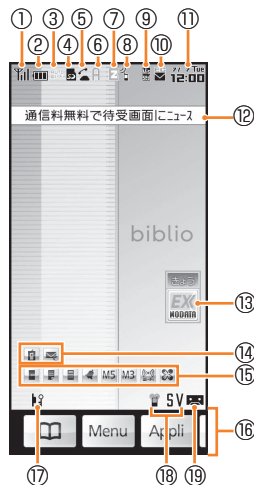



Indicator	Description	Indicator	Description
①	Signal strength	⑨	Missed calls
②	Battery level	⑩	New or unread e-mail/C-mail
③	Wireless LAN (Wi-Fi®) connection status	⑪	— Current date and time
	U S A Roaming area	⑫	— Ticker field
④	Calling/packet communication available	⑬	— Info pane
	A microSD memory card (commercially available) inserted	⑭	— Notification icon
⑤	During a call	⑮	— Shortcut menu
⑥	au Media Tuner activated	⑯	— Touch palette
	EZapps activated	⑰	Key Lock activated
⑦	Connecting to EZweb	⑱	Auto Lock activated
⑧	Receiving EZ News EX information	⑱	Manner mode set
	Privacy Filter set		Answer memo or manner mode set

- The date and time are set automatically.

Using Main Menu


You can access various functions from the Main menu. You can select a Main menu pattern from among three choices, of which the *Book* pattern is set at the time of purchase. The Main menu pattern designed for landscape mode is displayed when the screen mode is switched to landscape mode.

Book (Portrait mode)	Book (Landscape mode)
	
Book Player	PC Site Viewer
E · Dictionary	E-mail
Jump to au one Book	Photo (DSC)
Camera	E · Dictionary
TV	TV (1seg)
PC Site Viewer	
LISMO Player	
Tool	
Data Folder	
Function	
Wi-Fi WIN	
Communication Tool	


- Because the Main menu items to be displayed vary by menu pattern, operations starting from the Main menu also vary by menu pattern.

Changing Your E-mail Address

You can change the account name of your e-mail address.

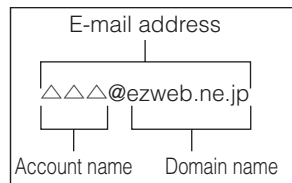




When the standby screen is displayed, press .

➔ Use  to select *E-mail Setup* and then press  (Select).














➔ Use  to select *Other* and then press  (Select).

The cell phone connects to the server.

➔ Use  to select *Eメールアドレスの変更* (Change E-mail Address) and then press  (Select).

➔ Use  to select the entry box, press  (Input), enter your security code, and then press  (OK).

- Your security code is the four-digit number you wrote on your subscription form.
- If the security code is incorrectly entered three times consecutively during a single day, the e-mail address change operation will be disabled until the next day.

- ➔ Use  to select 送信 (Send) and then press  (Select).
- ➔ Use  to select 承諾する (Accept) and then press  (Select).
- ➔ Use  to select the entry box, press  (Input), enter an e-mail address using single-byte alphanumeric characters, and then press  (OK).
 - For details on entering e-mail addresses, see page 26.
- ➔ Use  to select 送信 (Send) and then press  (Select).
- ➔ Use  to select OK, press  (Select) and then  (OK).
 - Check that the e-mail address has been updated before pressing  (OK).

- Your e-mail address cannot be changed if the new address you enter in the above procedure is already being used. In this case, enter a different e-mail address.

Security Code and Passwords

You can use a security code and other passwords described below.

Take care not to forget your security code and passwords, because they are required for performing various operations and using subscription services.

Security Code

Usage Example	①Using the Answering Service (Voice Mail) and Call Transfer remotely from a fixed-line phone ②Making inquiries, applications, and changes while using au Customer Service Center voice guidance, au web pages, and EZweb ③Changing the settings of <i>Mail Filter</i> or <i>Other</i> under E-mail Setup
Initial Setting	The four-digit number you wrote on your subscription form

Lock No.

Usage Example	Changing various settings of the cell phone
Initial Setting	1234

EZ Password

Usage Example	Subscribing or canceling subscriptions to EZweb fee-based contents
Initial Setting	The four-digit number you wrote on your subscription form

Premium EZ Password

Usage Example	<p>①Subscribing or canceling subscriptions to EZweb fee-based contents paid by まとめてau 支払い (au Collective Payment Service)</p> <p>②Purchasing products from EZweb sites using まとめてau 支払い (au Collective Payment Service)</p>
Initial Setting	The four-digit number you wrote on your subscription form

Making and Answering Calls

Making a Call

When the standby screen is displayed, use **[0]** to **[9]** to enter a phone number.

- When calling to a fixed-line phone, you also need to enter the area code.

➔ Press **[]**.

- To end the call, press **[]**.

- After you enter a phone number, you can add 184 or 186 to the phone number as follows:

➔ Press **[]** (Call).

➔ Use **[]** to select *Add Special No.* and then press **[]** (OK).

➔ Use **[]** to select *184* or *186* and then press **[]** (Add).

184: When you do not want to inform the other party of your phone number.

186: When you want to inform the other party of your phone number.


Making an International Call

001 International Call Service

Available without any additional application

Example: To call 212-123-△△△△ in the USA

Enter the access code, a country code, area code and phone number, and then press **[]**.

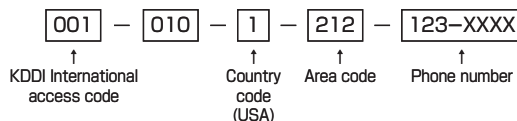

- International call charges are billed together with monthly local call charges.
- For more information on 001 International Call Service, dial either of the following numbers:
From au cell phones (toll-free):
157 (area code not required)
From fixed-line phones (toll-free):
0077-7-111
(Open 9:00 to 20:00 everyday)

Answering a Call

To answer a call, press .

- To end the call, press .

Display When a Call is Received

The phone number of the caller appears.



If the caller's phone number and name are in the phone book, the name is also displayed.

When the phone number of the caller is not displayed, one of the following indicators may appear.

Indicator	Meaning
<i>ID Unsent</i>	The caller did not send a Caller ID.
<i>Payphone</i>	The call is from a pay phone.
<i>Not Support</i>	The call is from a phone that does not support Caller ID.

Missed Call Notification


If you did not answer a call,  and *Missed Call* are displayed to let you know that you missed a call.

To check the caller's phone number, use  to select *Missed Call* and then press  (Select). You can then return the call (see the procedure on the right).

Returning a Call (Outgoing History/Incoming History)

Example: Returning a call to a phone number in the incoming history

When the standby screen is displayed, press .

- Press  while the standby screen is displayed to display the Outgoing History screen.

➔ Use  to select the phone number you want to call and then press  (Detail).

- Press  to display the Outgoing History screen.

➔ Press .


- The cell phone can store up to 50 phone numbers in each of the incoming and outgoing history.

One-ring Calls

What is a One-ring Call?



A one-ring call is a call from an unknown caller that only rings once, causing it to be stored in the incoming history. One-ring calls are often used to get you to return the call, which will connect you to a dating service or some other service that charges you at high rates.

One-ring Indicator

 (Red) indicator on the Incoming History screen indicates you have received a one-ring call (a call rang for three seconds or shorter). Be careful when you return a call to an unknown caller.

Adjusting the Earpiece Volume during a Call





During a call, use .

- : Increases the volume.
- : Decreases the volume.

 
➔ Press  (OK).





Turning On Manner Mode

When the standby screen is displayed, hold down  for at least one second.

This turns on manner mode, and displays ,  and  on the standby screen. This also turns on Answer memo, which is indicated by  on the standby screen.

Turning Off Manner Mode

When the standby screen is displayed, hold down  for at least one second.



Turning off manner mode causes ,  and  to disappear from the standby screen. Answer memo is also turned off, which is indicated by  disappearing from the standby screen.



- Even in manner mode, the cell phone still emits a sound when autofocusing, a shutter sound when you take a photo.


Changing the Incoming Ring Tone




When the standby screen is displayed, press .

➔ Use  to select *Function* and then press  (Select).

➔ Use  to select *Sound/Vib/Lamp* and then press  (Select).

➔ Use  to select *Incoming Setup* and then press  (Select).

➔ Use  to select *Incoming Call* and then press  (Select).

➔ Use  to select  (Ringtone) and then press  (Select).

➔ Use  to select *Original* and then press  (Select).

➔ Use  to select a ring tone and then press  (Set).















The incoming ring tone is set.

- If you press  (Play), the tone plays.

➔ Press  (OK).

Adjusting the Incoming Ring Tone Volume

When the standby screen is displayed, press .


- ➔ Use  to select *Function* and then press  (Select).
- ➔ Use  to select *Sound/Vib/Lamp* and then press  (Select).
- ➔ Use  to select *Incoming Setup* and then press  (Select).
- ➔ Use  to select *Incoming Call* and then press  (Select).
- ➔ Use  to select  (Ringtone Volume) and then press  (Select).
- ➔ Use  to adjust the volume and then press  (Set).
 - Each press of  changes the volume one step.

STEP ↑	The ring tone volume gradually increases.
STEP ↓	The ring tone volume gradually decreases.
Maximum ↑ Standard ↓ Minimum	The ring tone sounds at the set volume.
OFF	
	The ring tone does not sound.



➔ Press  (OK).

Turning On the Answer Memo

When the standby screen is displayed, hold down  for at least one second.

 is displayed on the standby screen.






Turning Off the Answer Memo

When the standby screen is displayed, hold down  for at least one second. The answer memo is turned off and  disappears from the standby screen.

- The cell phone can record a maximum of ten messages, each up to 60 seconds long.
- Answer memo is a function that automatically answers calls and allows callers to record messages. Use the Answering Service (Voice Mail) when your phone is turned off or when you are in a location where a signal cannot be received.



Playing a Message



If a message is recorded, *Answer Memo* appears on the standby screen.

- ➔ Use  to select *Answer Memo* and then press  (Select).
- ➔ Use  to select the message you want to play and then press  (Play).
 - To stop playing the message, press  (Stop).

■ Deleting a Message

When the standby screen is displayed, press .

➔ Use  to select *Answer Memo* and then press  (Select).

➔ Use  to select *Answer Memo List* and then press  (Select).

➔ Use  to select the message you want to delete and then press  (SubMenu).

➔ Use  to select *Delete* and then press  (OK).

➔ Use  to select *Delete One* and then press  (OK).

➔ Use  to select *YES* and then press  (OK).

Global Function

The biblio supports Global Passport CDMA services. You can use your biblio overseas without any additional application.

Setting the Area

When the standby screen is displayed, press .

→ Use  to select *Tool* and then press  (Select).

→ Use  to select *Global Function* and then press  (Select).

Precautions are displayed.

→ Check the precautions and then press  (OK).

→ Use  to select *Area Setting* and then press  (Select).

→ Use  to select *Overseas* and then press  (Select).

→ Use  to select *YES* and then press  (OK).

- Some functions are not available when *Area Setting* is not set to *Japan*.

Obtaining the Latest PRL (Preferred Roaming List)

Manually update and set the PRL (preferred roaming list) before traveling abroad.

When the standby screen is displayed, press .

→ Use  to select *Tool* and then press  (Select).

→ Use  to select *Global Function* and then press  (Select).



Precautions are displayed.

→ Check the precautions and then press  (OK).

→ Use  to select *PRL Setting* and then press  (Select).

→ Use  to select *PRL Manual Update* and then press  (Select).

 
The cell phone connects to the server.

→ Use  to select *PRLダウンロード* (Download PRL) and then press  (ダウンロード [Download]).

Follow the on-screen instructions to download the latest PRL.



- The PRL (preferred roaming list) is the area information of overseas carriers offering international roaming service in partnership with KDDI (au).
- To obtain (download) the PRL, you need to subscribe to EZweb and make initial settings (see page 13) while in Japan.

Calling Japan from Overseas

When the standby screen is displayed, use  to enter a phone number.

➔ Press  (Call).

➔ Use  to select *Voice Call* and then press  (OK).


➔ Use  to select *Call to Japan* and then press  (OK).

➔ Press  (Call).

- When you make an international call from Japan to a Global Passport CDMA-compatible cell phone, you can do it in the same way as making domestic calls within Japan.

Character Input

Character Entry Modes

When a character entry screen is displayed, you can select a character entry mode if you press  (ChrTyp).

Menu Items

漢 : Kanji conversion mode

力 : Double-byte katakana mode



A : Double-byte alphanumeric mode

1 : Double-byte number mode

 

カ : Single-byte katakana mode

AB : Single-byte alphanumeric mode








 
 



12 : Single-byte number mode


Use  to select a character entry mode and then press  (Select).

Entering Alphanumeric Characters


You can use the keys  to  to enter characters. More than one character is assigned to each key.

The following table shows the key assignment for entering characters.




	Number of Times to Press the Key											
Key	1	2	3	4	5	6	7	8	9	10	11	12
	.	@	—	_	/	:	~	?	,	'	!	1
	a	b	c	A	B	C	2					
	d	e	f	D	E	F	3					
	g	h	i	G	H	I	4					
	j	k	l	J	K	L	5					
	m	n	o	M	N	O	6					
	p	q	r	s	P	Q	R	S	7			
	t	u	v	T	U	V	8					
	w	x	y	z	W	X	Y	Z	9			
	0	Inputs symbols										
	Inputs symbols (switches an unconfirmed character between uppercase and lowercase).											
	Adds a line break and displays characters in the opposite order.											

When you change your e-mail address, you cannot use the characters in  for the account name (part of the address to the left of @).

■ Entering Two or More Characters Assigned to the Same Key

After you enter the first character, press  and then enter the next character.

■ Deleting Characters

To delete one character at a time, move the cursor to the character you want to delete and then press . To delete all characters to the right of the cursor, hold down  for at least one second. If there are no characters to the right of the cursor, holding down  will delete all the characters.

■ Starting a New Line

Press .

- Certain functions such as C-mail do not support entering new lines.

Entering E-mail Addresses

 
 







■ E-mail Address Compatible Characters

- Before you enter an e-mail address, switch to the Single-byte alphanumeric mode.
- When changing your e-mail address, you can enter up to 30 single-byte alphanumeric and symbol characters for the account name (part to the left of @). Note the following:
 - Uppercase characters cannot be used.
 - Period (.) or zero (0) cannot be used as the first character.

■ How to Enter E-mail Addresses

Example: Entering "taro.23@toshiba.co.jp"

 





 


Enter "taro.23".

- t : Press  once.
- a : Press  once.
- r : Press  three times.
- o : Press  three times.
- . : Press  once.
- 2 : Press  once and then .
- 3 : Press  once and then .

➔ Enter "@".

- @ : Press  twice.

➔ Enter "toshiba" and then press (OK).

- t : Press  once.
- o : Press  three times.
- s : Press  four times.
- h : Press  twice and then .
- i : Press  three times.
- b : Press  twice and then .
- a : Press  once.

➔ Press (SubMenu).

➔ Use to select *Phrase* and then press (OK).

➔ Use to select *Internet* and then press (Select).

➔ Use to select *.co.jp* and then press (Select). ".co.jp" is entered.

Entering Pictograms

When a character entry screen is displayed, press

 (ChrTyp).

➔ Press  (List).

➔ Use  to select   and then press

 (Select).

➔ Use  to select the pictogram you want to enter and then press  (OK).

- You can enter pictograms consecutively if you press

 (Repeat) instead of  (OK).




Phone Book


Saving a Phone Book Entry




When the standby screen is displayed, hold down  for at least one second.

➔ Use  to select  [Name] and then press  (Select).

➔ Enter a name and then press  (OK).
The  [Reading] for the name is entered automatically.



➔ Use  to select  [Phone No.1] and then press  (Select).

➔ Enter a phone number and then press  (OK).
• If the phone number is for a fixed-line phone, enter the phone number starting with the area code.

➔ Use  to select a phone number type and then press  (Select).
• Follow the next step to enter an e-mail address. If you do not want to enter an e-mail address, press  (Reg).

➔ Use  to select  [E-mail Address1] and then press  (Select).

➔ Enter an e-mail address and then press  (OK).



➔ Use  to select an e-mail address type and then press  (Select).



➔ Press  (Reg).

- The phone book can store up to 1,000 entries.
- The cell phone automatically saves an entry to the lowest available memory number from 000 to 999.
- You can save five phone numbers and five e-mail addresses for each phone book entry.
- You can also assign a group No., and enter birthday, address, and other information.

Dialing from the Phone Book

When the standby screen is displayed, press .

➔ Use  to select the entry containing the phone number you want to dial and then press  (Detail).

➔ Use  to select the phone number and then press  (Select).

➔ Use  to select *Voice Call* and then press  (OK).

Editing Phone Book Entries

When the standby screen is displayed, press .

➔ Select an entry and press  (Detail).



➔ Press  (Edit).

➔ Edit the contents and then press  (Reg).

➔ Use  to select *Overwrite* and then press  (OK).

Saving a Phone Number from the Incoming or Outgoing History

Example: Saving a phone number from the incoming history to the phone book

When the standby screen is displayed, press  and use  to select the phone number you want to save.

➔ Press  (SubMenu).

➔ Use  to select *Reg to Adrs Book* and then press  (OK).

➔ Use  to select *Register New* and then press  (Select).

➔ Use  to select a phone number type and then press  (Select).

- For details on saving a phone book entry, see page 28.

Pair Function




You can register a maximum of five pair partners you contact often to easily call or send mail.

Registering a Pair Partner

When the standby screen is displayed, press .

➔ Use  to select a blank screen and then press  (Select).

➔ Use  to select *YES* and then press  (OK).

➔ Use  to select a pair partner, press  (Detail) and then  (Select).

- When registering a phone book entry with multiple phone numbers and e-mail addresses as pair partner, select the phone number and e-mail address to use with the Pair function.

- When you delete a phone book entry registered in the pair partner, the phone book entry is also deleted from the Pair function.

Making a Call to a Pair Partner


When the standby screen is displayed, press .



➔ Use  to select the person you want to call.

➔ Use  to select *Call* and then press  (Select).

Sending Mail to a Pair Partner

When the standby screen is displayed, press .

➔ Use  to select the person you want to send mail.

➔ Use  to select *E-mail* or *C-mail* and then press  (Select).

- To create an e-mail message, see "Creating and Sending E-mail Messages" on page 31. To create a C-mail message, see "Creating and Sending C-mail Messages" on page 34.

Mail

Using E-mail




















To use e-mail, you need to apply for an EZweb subscription. If you did not apply for an EZweb subscription at the time of purchase, contact an au shop or the au Customer Service Center. Also, before use, you need to configure initial settings.

You can send and receive e-mail with other cell phones that support e-mail, and with PCs. In addition to text messages of up to 5,000 double-byte (or 10,000 single-byte) characters, you can also send photos and movies by e-mail.

- The packet communication charge for sending and receiving e-mail applies to the amount of data sent and received.
- You can send an e-mail message to up to 30 different addresses at one time.
- You can send up to 1,000 e-mail messages per day (a message with multiple recipients is counted as more than one message).
- Sending and receiving e-mail messages that include attachment data may take a while.



Creating and Sending E-mail Messages

When the standby screen is displayed, press .



- ➔ Use  to select *Create New* and then press  (Select).
- ➔ Use  to select *Address* and then press  (Select) twice.
- ➔ Use  to select *Address Book* and then press  (Select).
- ➔ Use  to select a phone book entry and then press  (Detail).
- ➔ Use  to select an address and then press  (Select).
- ➔ Press  (OK).
- ➔ Use  to select *Subject* and then press  (Select).
- ➔ Enter a subject and then press  (OK).
 - You cannot enter single-byte katakana characters or a new line in a subject.
- ➔ Use  to select *Text* and then press  (Select).
- ➔ Enter text and then press  (OK).
 - You cannot enter single-byte katakana characters.
- ➔ Press  ( Send).

Reading Received E-mail Messages

When you receive an e-mail message, *E-mail* appears on the standby screen.




➔ Use  to select *E-mail* and then press  (Select).

➔ Press  (Select).

- : Indicates a read message.
- : Indicates an unread message.

➔ Use  to select the new message and then press  (Select).

Reading an E-mail Message from the E-mail Menu



When the standby screen is displayed, press  to display the E-mail menu, use  to select *Inbox* and then press  (Select).



For subsequent operations, see "Reading Received E-mail Messages" above.

Reading an E-mail Message with an Attached Photo or Movie


Example: Viewing an attached photo

Display the e-mail message that has an attached photo (above).

➔ Use  to select the file name and then press  (Select).

➔ Use  to select the file name and then press  (Receive).

➔ Press  (Play).

- Selecting the file name or pressing  (Receive) may be unnecessary for some files to be displayed, depending on the file size.

Replying to Received E-mail Messages

When the standby screen is displayed, press .

➔ Use  to select *Inbox* and then press  (Select).

➔ Press  (Select).

➔ Use  to select the message you want to reply to and then press  (Select).

➔ Press  (Reply).

"Re:" is prefixed to the subject, and the text of the message is quoted.

➔ Refer to "Creating and Sending E-mail Messages" (page 31) for subsequent operations.














Rejecting Spam

Setting mail filters to reject spam is recommended.
The サポート設定 (Supportive Settings) helps you to set mail filters easily by answering questions that appear on the screen.

Setting Mail Filters

Example: Connecting to サポート設定 (Supportive Settings)

When the standby screen is displayed, press .

- ➔ Use  to select *E-mail Setup* and then press  (Select).
- ➔ Use  to select *Mail Filter* and then press  (Select).
- ➔ Use  to select 次へ (Next) and then press  (Select).
- ➔ Use  to select the input box and then press  (Input).
- ➔ Enter your security code and then press  (OK).
- ➔ Use  to select 送信 (Send) and then press  (Select).
- ➔ Use  to select サポート設定 (Supportive Settings) and then press  (Select).

カンタン設定 (Simple Settings)

サポート設定 (Supportive Settings)	Set the filter by answering questions This is recommended for users who want to configure settings while confirming conditions.
フィルターレベル (高) Filter Level (High)	Shut out all mail from PCs This is recommended for users who only want to send mail to and receive mail from cell phones.
フィルターレベル (中) Filter Level (Medium)	Block unsolicited advertisement, spoof e-mail and mail from specific addresses This is recommended for users bothered by certain senders or spam mail.
フィルターレベル (低) Filter Level (Low)	Block unsolicited advertisement and spoof e-mail This is the minimum level recommended for all users.

- You can also prevent spam by changing your e-mail address. For details on changing your e-mail address, see page 15.

Using C-mail

C-mail is a service that uses phone numbers as addresses to exchange messages between au cell phones that support C-mail. A C-mail message can contain up to 50 double-byte (or 100 single-byte) characters.


- The C-mail send charge applies when sending C-mail.









C-mail Safety Block






C-mail safety block is a function that allows you to reject C-mails that include URLs (<http://△△△>, <https://△△△>) or phone numbers in the C-mail message text.

C-mail safety block is valid by default. Cancel the setting if you want to receive C-mails that include URLs and phone numbers in the message text.

Creating and Sending C-mail Messages








When the standby screen is displayed, hold down  for at least one second.

- ➔ Use  to select *Create New* and then press  (Select).
- ➔ Enter text and then press  (OK).
- ➔ Use  to select  [Address] and then press  (Edit).
- ➔ Use  to select *Quote Adrs Book* and then press  (OK).




- ➔ Use  to select a phone book entry and then press  (Detail).
- ➔ Use  to select a phone number and then press  (Select).
- ➔ Press  (Send).

Reading Received C-mail Messages

When you receive a C-mail message, *C-mail* appears on the standby screen.

- ➔ Use  to select *C-mail* and then press  (Select).
- ➔ Press  (Select).
 - : Indicates a read message.
 - : Indicates an unread message.
- ➔ Use  to select the new message and then press  (View).

Reading a C-mail Message from the C-mail Menu


When the standby screen is displayed, hold down  for at least one second to display the C-mail menu, use  to select *Inbox* and then press  (Select).

For subsequent operations, see "Reading Received C-mail Messages" above.


Camera

Your cell phone has a CMOS camera with 5.11 effective megapixels for shooting photos and movies. You can use the self-timer and autofocus. Shot images can be used for the standby screen, and attached to e-mail messages.


Photo Taking Tips

When taking photos, position the cell phone so that  is not displayed upside down or inclined. Frame the subject within the display and hold the cell phone steady with both hands to avoid shaking.

Portrait Position

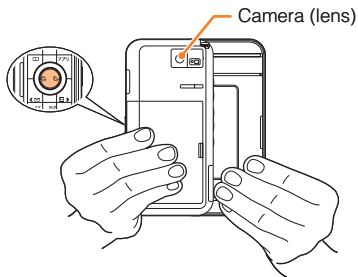

Landscape Position

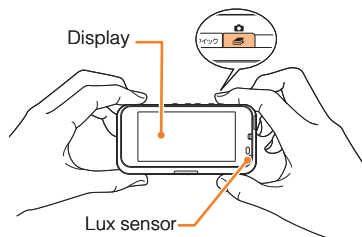

About Photo Modes

The following modes are available for taking photos. 5M is set at the time of purchase.

Mode	Photo Size	Storage Location
W.paper mode	W.paper (Normal)	The <i>Photo Folder</i> in the Data Folder of the cell phone
	W.paper (Wide)	
	W.paper (F.Wide)	
DSC mode	0.3M	The <i>DSC Folder</i> in the Data Folder of a microSD memory card*
	1M	
	2M	
	3M	
	3.5M (F.Wide)	
	5M	

* When a microSD memory card (commercially available) is not inserted, the files are saved to the Data Folder of the cell phone.

- Take care not to cover the lens and lux sensor with a strap, finger or TV antenna.


Taking a Photo

When the standby screen is displayed, press .

➔ Use  to select *Camera* and then press  (Select).



➔ Use  to select *Photo (W. paper)/Photo (DSC)* and then press  (Select).

The monitor screen appears.


➔ Point the AF frame at the subject and then press  (Shoot).


The camera focuses automatically and the shutter clicks.
The preview screen is displayed.

Using to Take a Photo

Point the AF frame at the subject, press  to focus, and then press  to release the shutter.

Saving a Photo

Press  (Save) on the preview screen.

- If you do not want to save the photo, press  in the preview screen.

Viewing Photos

When the standby screen is displayed, press .

➔ Use  to select *Data Folder* and then press  (Select).

➔ Use  to select *Photo Folder* and then press  (Select).

➔ Use  to select a folder and then press  (Select).

➔ Use  to select the photo you want to view and then press  (Select).

EZweb is an information service that allows you to enjoy browsing the Internet on your cell phone. You can also download Chaku-Uta-Full®, Chaku-Uta®, news, and other contents from web pages.




To use EZweb, you need to apply for an EZweb subscription. If you did not apply for an EZweb subscription at the time of purchase, contact an au shop or the au Customer Service Center. Also, before use, you need to configure initial settings.

- The packet communication charge for EZweb connection applies to the amount of data sent and received, not to the length of time connected.
- In addition to communication charges, some sites charge for providing information.

Accessing Sites

■ Viewing the au one Top

You can access EZweb from the au one Top. A variety of useful and fun sites are available on EZweb.

When the standby screen is displayed, press , use  to select *EZweb*, use  to select *au one Top* and then press  (Select).



キーワード検索機能 (Search by Keyword)
Provides a search function for searching for information by keyword.

カテゴリ(メニューリスト) (Category (Menu List))
Provides a list of various content provider sites.

トップニュース (Top News)
Provides automatic updates of the latest news.

最新オススメ情報 (Latest News)
Introduces up-to-date information concerning entertainment, daily life, etc.

天気・乗換・占い・テレビ・銀行 (Weather, Transportation, Horoscope, TV & Bank)
Provides direct access to these au one services.

買う (Shopping & Auctions)
Provides a list of shopping and auction sites available from your cell phone.

知る (Tips & Tools)
Provides information on sports and stock prices, as well as useful tools such as maps and dictionaries.

楽しむ (Hobbies & Culture)
Provides the latest information, such as games, music, books, hobbies and entertainment.

暮らす (Lifestyle)
Provides travel, restaurant and other lifestyle-oriented information.

集まる (Community)
Provides interesting and useful information that you can use for SNS or blogs.

メール (Mail)
Provides an extra e-mail address that can be used on your PC.

マイページ (My Page)
Provides useful information and tools tailored to your cell phone usage and a large data storage area.

au style
Introduces information and sites that au recommends.

とくする情報 (Valuable Information)
Presents gifts and push information to the EZweb subscriber for free.

auお客さまサポート (au Customer Support)
Provides information about charges, various applications, au online manual and notices from au.



auワンちゃんの部屋 (au Doggy's Room)
Introduces au Doggy.


 
カンタンアクセス・オープンサイト (Simple Access & Open Site)
Provides easy access and introduces open sites.

災害用伝言板 (Disaster Message Board)
Register and confirm safety information in time of disaster.








ENGLISH
Introduces English sites.

Basic Operations

Use  to select the site you want to access and then press  (Select).



Press  or  to return to the previous screen. Hold down either key for at least one second to return to the au one Top.

The following describes the basic operations that are available while accessing sites.

Key Operation	Description
	Exits EZweb.
	Moves the cursor up and down. When there is data available above or below the current screen, scrolls up and down the screen one line at a time.
	When there is data available above or below the current screen, scrolls the screen page by page.  : Scrolls one page up.  : Scrolls one page down.
 、 	Returns to the previous screen.

Bookmarking Frequently Accessed Pages

When the page you want to bookmark is displayed, press  (Browser Menu).

➔ Use  to select *New bookmark* and then press  (OK).

- Some pages cannot be bookmarked.

➔ Press  (Reg).



The displayed page is bookmarked, and its title and URL are added to the Bookmark.

- The Bookmark can contain up to 100 titles and URLs.

Viewing Bookmarked Pages









When the standby screen is displayed, press  and then use  to select *EZweb*.

➔ Use  to select *Bookmark(s)* and then press  (Select).

➔ Use  to select the bookmark for the page you want to view and then press  (Connect).
The cell phone connects to the site.







Checking Charges

When the standby screen is displayed, press .

- ➔ Use  to select *Function* and then press  (Select).
- ➔ Use  to select *Time/Toll/Sub* and then press  (Select).
- ➔ Use  to select *Inquire Toll* and then press  (Select).
- ➔ Use  to select *YES* and then press  (OK).
 - Select the item you want to check and then follow the on-screen instructions.

Downloading Chaku-Uta-Full®/Chaku-Uta®

When the standby screen is displayed, press  and then use  to select *EZweb*.

- ➔ Use  to select *au one Top* and then press  (Select).
- ➔ Use  to select *カテゴリ (メニューリスト)* (Category (Menu List)) and then press  (OK).
- ➔ Use  to select *着うた (Chaku-Uta®) or 着うたフル・ビデオクリップ (Chaku-Uta-Full®・Video Clip)* and then press  (Select).

- ➔ Use  to select the site you want to access and then press  (Select).

The download instructions appear.

- Fee-based information sites require entry of EZ password or Premium EZ password. Follow the on-screen instructions to enter either password. See page 17 for details.

- ➔ Follow the on-screen instructions.

Download is completed.

- Downloaded data is saved automatically to the Data Folder.

- ➔ Press  (Play).

The downloaded Chaku-Uta-Full® or Chaku-Uta® plays.

- This procedure is only an example for the purpose of explanation and may differ from actual procedures. Follow the instructions on the site from which you want to download the data.

Use the EZ News EX to display on the standby screen the latest news, weather forecast, horoscope and others that are delivered free of packet communication charges. You can view detailed information on a news item or weather forecast by selecting the ticker field or info pane.

To make all the EZ News EX services available to you, you need to fill out a separate application form (and pay information charges).


You can use the EZ News EX by making a few simple settings following the EZweb initial setup.

Basic Operations

When the standby screen is displayed, press

 **to select the ticker field.**

You can view detailed information on a news item or weather forecast.

- You can also select the info pane.
- The EZ News EX information is automatically received at no charge. Note, however, that packet communication charges may be incurred for manual updates and connecting to EZweb sites. In this case, a confirmation screen for network connection is displayed.
- The EZ News EX information is updated at regular time intervals.  appears while receiving information.

Setting EZ News EX

The EZ News EX is available free of charge. You have only to make a few simple settings. After following the procedure in “Initial Setup of E-mail and EZweb” on page 13, configure EZ News EX settings. If you did not configure the EZ News EX settings at the time of the initial setup, follow the steps below.

When the standby screen is displayed, select the ticker field and then press  (OK).






➔ Follow the on-screen instructions.

The setup procedure is completed.

- When the standby screen returns, a message asking you to wait for a while until the next update takes place appears in the ticker field.

■ Canceling EZ News EX

When the standby screen is displayed, select the ticker field and then press  (News).

- ➡ Press  (サブメニュー[Submenu]), use  to select サービス利用設定変更・解除 (Service Settings/Cancellation) and then press  (選択 [Select]).
- ➡ Use  to select サービス利用解除 (Service Cancellation) and then press  (選択 [Select]).
- ➡ Follow the on-screen instructions.

■ Changing the Reception Settings for EZ News EX Information

You can change the ring tone, vibrator and LED settings under M216 *NewsFlash Receive* for reception of EZ News EX information.

If you do not want the ring tone to sound when receiving EZ News EX information, set the volume to *OFF*.

Using GPS (Global Positioning System), EZ Navi provides useful positional information services.

When the standby screen is displayed, press  and then use  to select the EZnavi.

- The packet communication charges for using EZ Navi services apply to the amount of data sent and received. Some services may require a separate information fee.
- Before using EZ Navi, you must configure initial settings of EZweb (page 13).

Passenger Seat Navi for People in the Passenger Seat to Check the Route

Passenger Seat Navi guides the passengers to the destination with the best route using voice and map.

Drivers are not allowed to use Passenger Seat Navi.

Security Navi to Check Where Your Kids Are

The Security Navi application is made up of the following three functions:

いつでも位置確認 (Auto Position Search [monthly charge]),
エリア通知 (Area Message [no monthly charge]),
位置確認メール (Position Search Mail [no monthly charge])

Using these functions, you can check the position of an au cell phone that supports Security Navi; and automatically send a notification to the specified au cell phones when you enter (or are in) or leave (or are no longer in) the set area within a predetermined period of time.

EZ Navi Walk for When You Go Out

Displays various useful menu items for when you are out. There are two menu modes: the Full Mode menu for those who want to use all the convenient functions including the latest features, and the Simple Mode menu with limited functions allowing you to use the service with simple operation.


The following table describes the Full Mode menu.

トータルナビ／地図 (Total Navigation/Map)	Find the most preferable combination of transportation (trains, airplanes, buses and taxis), and check out maps of your current location and places you like to go.
乗換／時刻表 (Connection/Timetable)	Search for train connections, timetables and other public transportation information.
お店／施設／イベント (Shop/Facility/Event)	Search for local stores, facilities or events.
ドライブ／渋滞情報 (Road/Traffic Information)	Check out road traffic information in real time.
オススメ便利メニュー (Useful Menu)	View information on services that are available on PCs, and use advanced functions of EZ Navi Walk that you can enjoy.
設定／会員登録／インフォ (Setting/Membership Registration/Information)	Configure various settings, sign up as a member or check out various useful information.

- Some of the menu options require a monthly charge.

The Map of Your Current Location



★ represents your initial location. As you start moving, changes of your location are tracked by continuous positioning and indicated in real time by .

The 現在地の地図 (The Map of Your Current Location) option displays the current map in real time.

3D Navi

Shows a 3D view at guidance points and around the destination area.

Evacuate Navi to Guide You Home or to Nearby Evacuation Areas during Disasters

Nearby public evacuation areas or the direction to your home can be determined using the map data pre-installed on the biblio (避難所マップ [Evacuate Area Map]).

Other useful contents can be downloaded from the 災害時ナビ (Evacuate Navi) section of the EZweb site.

- Some contents require a monthly charge.
- Use the information on the screen as a reference and always follow the instructions of police, fire and other municipal authorities.
- When using Evacuate Navi, checking your current position may take more time than usual depending on the status of the GPS satellites.


TV (1Seg)

EZweb Subscription Required

"1Seg", a mobile terrestrial digital television service in Japan, is available on the biblio.

Using the TV Antenna

When watching TV (1Seg), fully extend the TV antenna to ensure good reception.

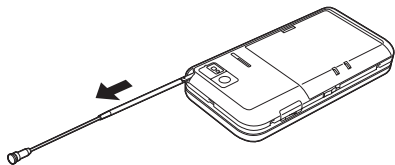

- Before using TV, you must configure initial settings of EZweb (page 13).
- If you are watching TV indoors, you may be able to improve the reception by moving closer to a window.
- The continuous viewing times of TV (1Seg) are as follows. The figures vary according to the usage of data broadcasts.

Continuous viewing time	Using earphones	DBEX ON: Approx. 3 hrs 20 min. DBEX OFF: Approx. 3 hrs 20 min.
	Using the speaker	DBEX ON: Approx. 3 hrs 10 min. DBEX OFF: Approx. 3 hrs 10 min.

- For information about the "1Seg" service, refer to the following homepage.

The Association for Promotion of Digital Broadcasting

From a PC	http://www.dpa.or.jp/
From a cell phone	http://www.dpa.or.jp/1seg/k/

Initial Setup of au Media Tuner

To watch TV (1Seg) using the au Media Tuner, you need to configure initial settings.

When the standby screen is displayed, press .

➔ **Use to select TV and then press (Select).**

➔ **Use to select TV(1Seg) and then press (Select).**

Disclaimer notes are displayed.

➔ **Use to check the disclaimer notes, use to select OK, and then press (選択 [Select]).**

The initial setting screen for using the au Media Tuner is displayed.

- Follow the on-screen instructions to configure each setting. Then, the screen for setting TV (1Seg) channels appears.

➔ **Use to select オート設定 (放送波) (Auto (Broadcasting wave)) and then press (選択 [Select]).**



Automatic channel scanning begins. When receivable channels are found, the channel setup is completed.

- Select マニュアル設定 (Manual) to set the channel manually.

Watching TV (1Seg)

When the standby screen is displayed, press .


➔ Use  to select TV and then press  (Select).


➔ Use  to select TV(1Seg) and then press  (Select).

To Change Channels

Use  to change channels.


You can select TV (1Seg) and EZ Channel-Plus/EZ Channel programs.

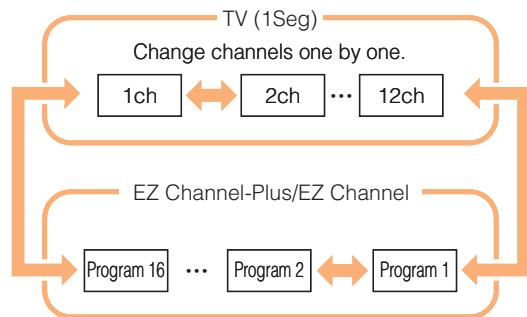


- Before using this feature, you must configure au Media Tuner initial settings (page 46).
- Channels cannot be changed with  when the data operation screen is displayed.

Basic Operations

Launch TV (1Seg) to start receiving data broadcasts.

The data operation screen appears when a data broadcast is received. Press  (Vol/Ch) on the data operation screen to switch to the TV operation screen.


On the TV operation screen, pressing  switches the display.

Data operation screen




 (Vol/Ch)

TV operation screen

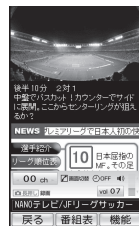

 (戻る[Return])

- To adjust the volume, use *.
- * Only available on the TV operation screen.

Exiting the au Media Tuner

Press , use  to select はい (YES) and then press  (OK).














In Case of Loss of Your biblio














The Remote Ctrl Lock allows you to remotely activate the Auto Lock, FeliCa Lock, and Address Book Lock, preventing others from using your cell phone.

Setting Conditions for Activating the Remote Ctrl Lock

You can activate the Remote Ctrl Lock by calling your biblio a set number of times from a registered phone number within a specified period of time.

When the standby screen is displayed, press .

- ➔ Use  to select *Function* and then press  (Select).
- ➔ Use  to select *Privacy/Rstr* and then press  (Select).
- ➔ Use  to select *Security Lock* and then press  (Select).
- ➔ Use  to select *Rem. Ctrl Lock* and then press  (Select).
- ➔ Enter Lock No., and then press  (OK).
- ➔ Use  to select *Valid No.* and then press  (Select).
- ➔ Use  to select *[Register New]* and then press  (Select).

- ➔ Use  to select *Direct Input*, press  (OK), enter a phone number, and then press  (OK).
- ➔ Press  (Comp).
- ➔ Use  to select *Duration (min)* and then press  (Select).
- ➔ Enter a time and then press  (Set).
 - This sets the time limit for receiving the set number of calls after the first call is received.
 - You can set a time from one to ten minutes.
- ➔ Use  to select *No. of Incm*, and then press  (Select).
- ➔ Enter a number of calls, and then press  (Set).
 - This sets the number of calls to receive to activate the Remote Ctrl Lock.
 - You can set a number of calls from three to ten.
- ➔ Press  (Save).
- ➔ Use  to select *YES* and then press  (OK).

Remotely Activating the Remote Ctrl Lock on Your biblio

Call the biblio from the registered phone number repeatedly within the set time limit.

- When the specified number of calls are received, the Remote Ctrl Lock is activated and a message plays telling you that the cell phone is locked.

Activating the Remote Ctrl Lock by the Security Lock Service

Even if the Remote Ctrl Lock is not set in advance, the Remote Ctrl Lock can be activated by calling au Customer Service Center or completing the application process on au Customer Support from a PC.


The Security Lock Service is available free of charge.

- You must fill out an application to use au Customer Support (the application can be filled out even after your cell phone is lost).

■ Calling au Customer Service Center for Activating/Canceling the Remote Ctrl Lock

From an au cell phone: 113 without a prefix (toll free)

From any other cell phone or fixed-line phone:

 0077-7-113 (toll free)

Open 24 hours


 




Follow the voice guidance to complete the application process.



 


■ Activating/Canceling the Remote Ctrl Lock from a PC


Login to au Customer Support (<https://cs.kddi.com/>) and complete the application process by following the on-screen instructions.

- The Remote Ctrl Lock cannot be activated when the biblio is turned off or out of the service area, or Emission OFF is set to *ON*.

Troubleshooting

Symptom	Possible Cause	Remedy	Page
Cannot turn on power.	● Is the battery pack charged?	Charge the battery pack.	9
	● Did you hold down  for at least one second?	Hold down  for at least one second.	8
Cannot make calls.	● Is power turned on?	Hold down  for at least one second.	8
	● Is Out (out of range indicator) displayed?	Move to a location where Out (out of range indicator) is no longer displayed, and try again. Also check the <i>Area Setting</i> .	8, 23
	● Is your hand or a metal object covering the area around the built-in antenna?	Make sure your hand or any other metal object is not covering the area around the built-in antenna.	7
	● Did you enter the phone number starting with the area code?	When making a call to a phone other than a cell phone, you need to enter the area code even if you are inside the same area.	18
Cannot receive calls.	● Is Out (out of range indicator) displayed?	Move to a location where Out (out of range indicator) is no longer displayed. Also check the <i>Area Setting</i> .	8, 23
	● Is power turned on?	Hold down  for at least one second.	8
No response when a key is pressed.	● Is power turned on?	Hold down  for at least one second.	8
	● Is the cell phone closed with the Key Lock set?	Draw  downward once to cancel Key Lock.	8, 14
A warning tone sounds and power turns off.	● Is there enough power left in the battery pack?	Charge the battery pack.	9

Symptom	Possible Cause	Remedy	Page
Calls are answered automatically.	● Is Answer memo turned on?	Hold down  for at least one second to turn off Answer memo.	21
Cannot hear the other party.	● Is the earpiece volume too low?	Press  during a call to increase the earpiece volume.	20
When making a call, a beeping sound is heard from the earpiece and a connection cannot be established.	● Is Out (out of range indicator) displayed? Or are you in a location where the signal is too weak?	Move to a location where Out (out of range indicator) is no longer displayed. Also check the <i>Area Setting</i> .	8, 23
	● Is the wireless line busy or is the phone you are calling on another line?	End the call and try again later.	18
The incoming LED flashes but the ring tone does not play.	● Is manner mode turned on?	Hold down  for at least one second to turn off manner mode.	20
	● Is S (ring tone off indicator) displayed?	Increase the volume of the incoming call ring tone.	21
Cannot charge the battery pack.	● Is the battery pack installed properly?	Install the battery pack properly.	9
	● Are the plug and connector of the AC adapter inserted properly?	Insert the plug and connector firmly.	
Have difficulty seeing things on the display.	● Is  (Privacy Filter indicator) displayed?	Hold down  for at least one second to cancel Privacy Filter.	14
When the camera is activated, no subject is displayed.	● Is a finger or other object covering the camera (lens)?	Check the position of the camera (lens) and remove the obstacle.	35

- For more detailed information, visit the following au troubleshooting sites:
 - From an au cell phone:  ⇒ *au one Top* ⇒ *auお客さまサポート* (au Customer Support) ⇒ *オンラインマニュアル* (Online Manual) ⇒ *故障診断Q&A* (Troubleshooting FAQ)
 - From a PC: <http://www.kddi.com/customer/service/au/trouble/kosho/index.html>

Index

Numeric

1Seg	46
------------	----

A

Accessories	6
Answer memo	21
Playback	21
Turning off	21
Turning on	21

B

Battery level	14
Battery pack	6,9
Battery pack cover	7

C

Camera	35
Photo taking tips	35
Taking a photo	36
Cell phone etiquette	2
Character input	25
Character entry modes	25
Deleting characters	26
Entering characters from the same key	26
Starting a new line	26
Charging the battery pack	9
Checking charges	40
Close	8

C-mail	34
C-mail safety block	34
Creating and sending	34
Reading	34
Received mail	34
Contents	4

D

Disaster Message Board Service	3
Display	7,14
Domain	15
Downloading Chaku-Uta®	40
Downloading Chaku-Uta-Full®	40

E

Earpiece volume	20
E-mail	31
Creating and sending	31
Initial settings	13
Reading	32
Received mail	32
Replying	32
Viewing attached images	32
E-mail address	13
Available characters	25
Changing	15
Entering	26
Entering pictograms	27
Evacuate Navi	45
EZ Navi	43
EZ Navi Walk	44

EZ News EX	41
Canceling	42
Changing the Reception Settings	42
Info pane	14
Setting	41
Ticker field	14
EZ password	17
EZweb	37
Accessing sites	38
au one Top	38
Basic operations	39
Initial settings	13

G

Global Function	23
Calling Japan from Overseas	24
Obtaining the Latest PRL (Preferred Roaming List)	23
Setting the Area	23

I

Incoming history	19
Indicators	14
Initial settings	13,46
au Media Tuner	46
E-mail · EZweb	13
TV (1Seg)	46
International Call	18
Internet	37
Sites	38,39

K

Key assignments	10
------------------------------	----

Key Lock	8
-----------------------	---

L

Landscape mode	11
Language	13
Learning the basics	10
Lock No.	16

M

Mail	31
C-mail	34
E-mail	31
Mail filters	33
Simple settings	33
Main menu	15
Manner mode	20

N

Names of parts	7
Notification window	11

O

One-ring calls	19
Open	8
Outgoing history	19

P

Pair Function	30
Making a call to a pair partner	30
Registering a pair partner	30
Sending mail to a pair partner	30

Passenger Seat Navi	43
Passwords	16
Phone (call)	18
184/186	18
Answering	19
International Call	18
Making	18
Returning	19
Phone book	28
Dialing	28
Editing	28
Saving	28
Saving a phone number from the incoming or outgoing history	29
Phone number	13
Photos	35
Photo modes	35
Taking	36
Viewing	36
Playback	
Answer memo	21
Portrait mode	11
Premium EZ password	17
Privacy Filter	14,51
Proximity sensor	7,11

R

Remote Ctrl Lock	48
Ring tones	
Changing the type	20
Changing the volume	21

S

Security code	16
Security Lock Service	49
Security Navi	43
Signal strength	14
Sites	38
Bookmarking	39
Viewing from bookmarks	39
Spam	33

T

Touch palette	12
Touch panel	11
Troubleshooting	50
Turning on/off power	8
TV (1Seg)	46
Antenna	46
Basic operations	47
Changing channels	47
Exiting	47
Initial settings	46

V

Viewing	
Photos	36

For inquiries, call: au Customer Service Center

For general information and charges (toll free)

From fixed-line phones:

 0077-7-111

From au cell phones:

157 area code not required

PRESSING ZERO WILL CONNECT YOU TO AN OPERATOR
AFTER CALLING 157 ON YOUR au CELL PHONE

For loss, theft or damage and operation information
(toll free)

From fixed-line phones:

 0077-7-113

From au cell phones:

113 area code not required

From EZweb:

Access Method

EZ ▶ au one Top ▶ auお客さまサポート (au Customer Support)
▶ お問い合わせ (Inquiries)
▶ Menu are subject to change without prior notice.

なるほど! au
みんなでつくる、auQ&Aサイト

Access Method

EZ ▶ au one Top ▶ auお客さまサポート (au Customer Support)
▶ みんなでQ&A「なるほど! au」 (au User's Forum)

Read this code for an easy
access to なるほど! au
(au User's Forum). ▶

- The packet communication charge applies.



モバイル・リサイクル・ネットワーク
0066-944-0077-1111

Cell phone and PHS operators collect and recycle unused
telephones, batteries and battery chargers at stores
bearing the ♻️ logo regardless of brand and manufacturer
to protect the environment and reuse valuable resources.

Read this code for
an easy access to
au Online Manual.



June 2009 Edition

Sales: KDDI CORPORATION・

OKINAWA CELLULAR TELEPHONE COMPANY

Manufactured by: **TOSHIBA CORPORATION**