iida

Basic Manual

Introduction Contents Getting Ready Learning the Basics Phone Address Book Mail Internet Multimedia TV (1Seg) Applications Settings of INFOBAR A01

Global Function

In Case of Loss of Your INFOBAR A01

Appendix/Index

INFOBAR A01

Preface

Thank you for purchasing the INFOBAR A01.

Before using your INFOBAR A01, be sure to read the Basic Manual (this PDF manual) to ensure correct usage. After you have finished reading this manual, store this PDF manual and the printed manuals in safe places so you can retrieve them whenever you need them. If the printed manuals are lost, please contact an au shop or Customer Service Center.

Basic Manual (this PDF manual) describes basic operations of major functions of the INFOBAR A01.

For detailed descriptions on various functions, refer to the Instruction Manual (Japanese).

Downloading Manuals

You can download the Basic Manual (this manual) and the Instruction Manual (Japanese) in PDF format from the au homepage.

http://www.au.kddi.com/torisetsu/index.html

 To display the Basic Manual (this manual) and the Instruction Manual (Japanese) in PDF format on the INFOBAR A01, purchase the full version of Documents To Go or install an application which allows you to display PDF files.

Online Manual

Online manuals are also provided on the au homepage, which are from the Instruction Manual (Japanese) and are reorganized in a searchable format. http://www.au.kddi.com/manual/index.html

Safety Precautions

Be sure to read the Safety Precautions "安全上のご注意" in the Instruction Manual (Japanese) to ensure proper usage of the INFOBAR A01.

For troubleshooting, check the symptom of your INFOBAR A01 in auお客さまサポート (au Customer Support) on the au homepage.

http://www.kddi.com/customer/service/au/trouble/kosho/ index.html

Before Using an au Phone

- You cannot receive or make calls in a location where the signal cannot be received, even within the service area. Calling may not be available in a location where the signal is weak. If you move to a location where the signal is weak during a call, the call may be interrupted.
- The au phone is a digital cell phone and can maintain a high call quality until the signal weakness reaches its limit. Therefore, once the limit has been reached, the call may be disconnected suddenly.
- Note that the au phone uses signals which may be intercepted by a third party. (However, the CDMA/GSM system enables highly confidential call communications.)
- The au phone is a wireless station which is compliant with the Radio Act, and may be subject to inspections regulated by the Radio Act.
- When you insert the au IC-Card, the product number information of your au phone is sent to the au server for the security and operation status notification of the au phone.
- Always be considerate of others around you when using your au phone in public places.
- For a child's use, read the Basic Manual and give your child instructions on proper use.
- The INFOBAR A01 is a cell phone compatible with the international roaming service. Each network service which is described in the Basic Manual varies depending on the area or service. For details, refer to supplied Global Passport Owner's Guide (Japanese).

Introduction

Cell Phone Etiquette

Cell phones always emit weak radio waves when power is on. Use cell phones in an enjoyable and safe manner without forgetting to be considerate of others around you.

Use of cell phones is not allowed in some places.

- · Using a cell phone while driving a car/motorcycle is dangerous and is prohibited by law. Also, using a cell phone while riding a bicycle may be punished by law.
- Using a cell phone in an aircraft is prohibited.

Be considerate of where you use the cell phone and how loudly you talk.

Do not make calls in theaters, museums, libraries, and other similar places. Turn power off or turn on manner mode so as not to disturb others around you by ring tones.


- Do not use the cell phone on a street where you might interrupt the flow of pedestrians.
- Move to areas where you will not inconvenience others on trains or in hotel lobbies
- · Refrain from talking in a loud voice.
- Obtain the permission of other people before you take their photos with the cell phone's camera.

Be considerate of people around you.

- · Some people close to you in crowded places such as packed trains may be using a cardiac pacemaker. Turn the cell phone off in such places.
- · Abide by the rules of hospitals and other medical institutions where it is forbidden to use or carry cell phones.

Accessories

Check all the contents are included.

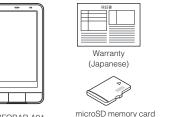

SHARP microUSB-3.5 d conversion cable 01 (SHX11QVA)

Battery pack

(SHX11UAA)

- **INFOBAR A01**
- - - (2 GB) (Sample)
 - * This is inserted in the INFOBAR A01 at the time of purchase
- Instruction Manual (Japanese)
- Safety Precautions (Japanese)
- Notice Sheet (Japanese)
- Setting Guide (Japanese)
- JIBUN BANK Service Guide (Japanese)
- Global Passport Owner's Guide (Japanese)
- au International Call Guide (Japanese)

The following items are not included.

· AC adapter


microUSB cable

 
- Earphone
- · Purchase a specified charger (sold separately).
- The illustrations in this manual may look different from the actual product.

Illustrations and Descriptions in This Manual

Note on Key Illustrations

In this manual, the key illustrations are simplified as shown below.

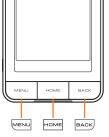

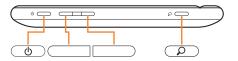

Description of Operations for Selecting Item/Icon/ Key etc.

In this manual, operation steps are described as below.

Description	Explanation
On the character entry	Tap 🕙 on the character entry screen.
screen, 📉	Then tap Input mode.
\rightarrow Input mode.	
On the widget Home,	Press MENU on the widget Home. Then tap
$\mathbf{MENU} \rightarrow Add.$	Add.

Note on Screenshots

The screenshots in this manual are simplified and may look different from the actual screens.

• This manual refers to "SHARP microUSB-3.5 ϕ conversion cable 01" as "microUSB-3.5 ϕ conversion cable".

Security Code and PIN Code

Security Code and Passwords

You have to use each security code for using the INFOBAR A01. You can use a security code and other passwords described below. Take care not to forget your security code and passwords because they are required for performing various operations and using subscription services.

Security Code

Usage Example	 Using the Answering Service (Voice Mail) and Call Transfer remotely from a fixed-line phone
	Making inquiries, applications, and changes while using Customer Service Center voice guidance, and au homepage
Initial Setting	The four-digit number you wrote on your subscription form

Lock No.

PIN Code

LOCK	
Usage	Setting/Canceling Screen lock, Remote lock, Restrict
Example	lock, Remote lock, Restrict
	address book, etc.
Initial	1234
Setting	

	ouc
Usage	Preventing unauthorized
Example	use of the au IC-Card by a
	third party
Initial	1234
Setting	

PIN Code

If the PIN code is incorrectly entered three times consecutively, the PIN code will be locked. Use the PUK code to unlock the PIN code.

PIN Code

You can set the INFOBAR A01 to require PIN code entry every time the power is turned on, to prevent unauthorized use of the au IC-Card by a third party.

- At the time of purchase, the PIN code is not to be required to use phone. On the iida Home, tap Settings → Location & security
 - \rightarrow Set up UIM card lock \rightarrow Mark Lock UIM card to set the PIN code to be required.

The PIN code is also required when setting Lock UIM card.

- The initial setting of the PIN code is "1234". On the iida Home, tap Settings \rightarrow Location & security \rightarrow Set up UIM card lock
 - \rightarrow Change UIM PIN to change the PIN code to a four- to eight- digit number.

PUK Code

Enter the PUK code when the PIN code is locked.

- PUK code is an eight-digit number given at the time of purchase, and is printed on the back side of the plastic card where your au IC-Card is attached.
- When you enter the PUK code, set the new PIN code with *Change UIM PIN*.
- If the PUK code is incorrectly entered ten times consecutively, contact an au shop, PiPit or the Customer Service Center.
- When the PIN code is locked, the INFOBAR A01 may be restarted for the security reasons.

Contents

Prefacei	i
Safety Precautionsi	i
Before Using an au Phonei	i

Introduction

Contents

Cell Phone Etiquette	1
Accessories	1
Illustrations and Descriptions in This Manual	2
Security Code and PIN Code	2
Security Code and Passwords	2
PIN Code	3

Getting Ready

Names and Functions of Parts	6
Charging the Battery Pack	8
Turning the Power On/Off	9
Turning the Power On	9
Turning the Power Off	9
Restarting the INFOBAR A01	10
Sleep Mode	10
Switching the Display Language to English	10
Initial Setup	10
Removing/Attaching the Battery Pack	11
Removing the Battery Pack	11
Attaching the Battery Pack	11
au IC-Card	12
Removing au IC-Card	12
Inserting au IC-Card	13
Using microSD Memory Card	13
Removing microSD Memory Card	
Inserting microSD Memory Card	15

Learning the Basics

Operating the Touch Panel	16
iida Home and widget Home	17
Viewing the iida Home	17
Using Status Bar	18
Using the iida Home	20
Moving the panels	20
Adding the panels	
Using the widget Home	21
Moving/Deleting the widgets	21
Adding the widgets	
Application list	21
Switching Orientation	23
Displaying Available Menu	24
Character Input	25
Switching Software Keyboards	25
Viewing the Character Entry Screen	
Switching Character Entry Modes	
Entering Emoji/D-Emoji/Symbol/Facemark	
Switching Input Software	

Phone

Making a Call Making an International Call (001 International C	
Service)	30
Answering a Call	30
Putting the Call on Hold	30
Answering with the Message of Answering Men	no
	30
Returning a Call (Outgoing History/Incoming	
History)	31
Turning On Manner Mode	31
Turning On the Answering Memo	32
Playing a Message in Answering Memo	

Address Book

Using an Address Book	3
Using Phone Number	3
Using Mail Address	1

Mail

Using E-mail/C-mail	35
Sending E-mail Messages	35
Sending C-mail Messages	35
Receiving E-mail/C-mail Messages	36
Reading E-mail/C-mail Messages	36
Setting Mail Filters	37
Rejecting Spam C-mail Messages	
Using PC-mail	39
Registering Another PC-mail Account	39
Sending PC-mail Messages	40
Receiving PC-mail Messages	40
Using Gmail	40
Sending Gmail	41
Receiving Gmail	41
Replying/Forwarding Gmail	41

Internet

Viewing Sites with Browser42
Using Bookmarks/History42
Bookmarking a Web Page42

Multimedia

Using the Camera	.43
Cautions for Using the Camera	.43
Taking Photos	.43
Recording Movies	.44
Using Photo	.44
Using Contents Manager	.45
Playing/Displaying Data	.45
Using Menu in the Contents Screen	.45

TV (1Seg)

Cautions for Using TV (1Seg)	46
Initial Setup of TV (1Seg)	46
Watching TV (1Seg)	47
Operations on the 1Seg screen	47

Applications

Using Android Market	49
Using au one Market	49
Using GREE Market	50
Managing Applications	50

Settings of INFOBAR A01

Checking Your Profile	51
Changing the Incoming Ring Tone	51
Changing the Wallpaper	51
Initializing microSD Memory Card	51

Global Function

Using Global Passport CDMA/GSM	. 52
GLOBAL PASSPORT	. 52
For overseas use without anxiety	. 53
Configuring the Overseas Settings	. 53
Making a Call at Your Travel Destination	. 54
Receiving a Call at Your Travel Destination	. 55


In Case of Loss of Your INFOBAR A01

Setting Conditions for	Activating the	e Remote	Lock
			56

Appendix/Index

Troubleshooting 57	
Index	

Names and Functions of Parts

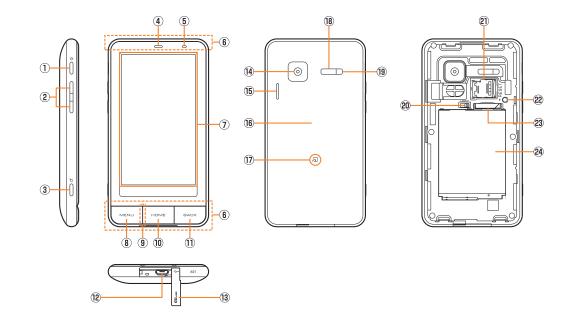

1 O Power key

Turns on/off the power, and sets/disables sleep mode.

Volume up/down key

Adjusts volume.

Hold down on the unlock screen, to enable/disable manner mode.

3 D Search key

Use it to display the Quick Search Box etc.

④ Earpiece (Receiver)

Emits voice of other party during a call, messages in Answering memo, etc.

⑤ Charging/Incoming indicator, Light sensor

Illuminates in red while charging.

Flashes according to the settings when receiving a call or mail message.

Light sensor detects the ambient brightness and adjusts the brightness of display.

Internal antennas

Do not cover the internal antennas with your hand when you call, use the Internet, Wi-Fi or Bluetooth® or retrieve GPS information.

- Display
- (8) Menu key

Displays the option menu.

(9) Mouthpiece (Microphone)

Transmits your voice to the other party during a call. It is also used for recording sounds. Take care not to cover the microphone with your fingers etc.

10 Home key

Use it to display the iida Home etc.

1 BACK Back key

Returns to the previous screen.

② External connection jack

Use it to connect the INFOBAR A01 to the microUSB- 3.5ϕ conversion cable, the common AC adapter 03 (sold separately), the microUSB cable 01 (sold separately), the 18 pin-microUSB conversion adapter 01 (sold separately), the microUSB stereo earphone conversion adapter 01 (sold separately), etc.

- 13 External connection jack cover
- ① Camera lens
- 15 Speaker

Emits ring tones, alarm tones, etc.

- 16 Battery pack cover
- 1 FeliCa mark

Hold it over a reader/writer when using Osaifu-Keitai[®]. Sends and receives data via IC communication.

18 Infrared port

Sends and receives data via infrared communication.

- 19 Mobile light
- 20 Lock slider

Locks/Unlocks the battery pack.

- microSD memory card slot
- 2 Reset button

If operations become unstable or unavailable, press the reset button with a pointed end of an object for at least two seconds to restart the INFOBAR A01. Restarting with the reset button does not delete any saved data or application.

- au IC-Card
- 24 Battery pack

Charging the Battery Pack

The battery pack is not fully charged at the time of purchase. Charge the battery pack when you use the INFOBAR A01 for the first time or the battery level becomes low. Charging is finished when the red charging/incoming indicator goes out.

- When the battery pack has less than approximately 15 percent of the battery level, the message *Please connect charger* appears on the screen. Charge the battery pack after tapping *OK*, or exchange it for another one fully charged.
- Be sure to close the external connection jack cover securely, and do not pull or twist it forcefully.


Charging the Battery Pack with the Specified AC Adapter (sold separately)/DC Adapter (sold separately)

The followings are the explanation of how to connect the common AC adapter 03 (sold separately)/the common DC adapter 03 (sold separately) to charge.

Charging time is as shown below.


Specified AC adapter (sold separately) Approx. 150 min		
Specified DC adapter Approx. 200 min (sold separately)		

 These times are based on the case when you use the common AC adapter 03 (sold separately)/ the common DC adapter 03 (sold separately). Open the external connection jack cover of the INFOBAR A01.

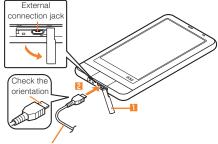

Common AC adapter 03 (sold separately)/ Common DC adapter 03 (sold separately)

Insert the microUSB plug of the common AC adapter 03 (sold separately)/the common DC adapter 03 (sold separately) to the external connection jack of the INFOBAR A01. Plug the common AC adapter 03 (sold separately) power plug into a 100 V AC power outlet/Plug the common DC adapter 03 (sold separately) plug into a cigarette lighter socket.

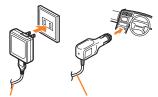

Common AC adapter 03 (sold separately)

Common DC adapter 03 (sold separately)

Charging/Incoming indicator illuminates in red, and 🖬 appears. When charging is finished, the charging/incoming indicator goes out.

 Charging is available by connecting the INFOBAR A01 to a PC with the microUSB cable 01 (sold separately). On the iida Home, tap Settings → USB connection → Mark USB battery charge to enable the setting.

Turning the Power On/Off

Turning the Power On

Hold down 🕜 for at least two

seconds.

The unlock screen is displayed. Slide ♥ to ● to unlock. Precautions on inserting or removing the microSD memory card appear each time the power is turned on.



(Unlock screen)

 The initial setting of the touch panel is executed while the logo is displayed after the power is turned on. Do not touch the screen, otherwise touch panel operations may not be performed properly.

Turning the Power Off

Hold down 🕐 for at least two seconds.

The phone options screen is displayed.

If you hold down (b) on the unlock screen, the power is turned off without the phone options screen being displayed.

Power off $\rightarrow OK$.

Restarting the INFOBAR A01

Turn off the INFOBAR A01 once and restart.

Hold down 🕑 for at least two seconds.

The phone options screen is displayed.

$2 Reboot \rightarrow OK.$

Sleep Mode

If you press on no operation is made for a while, the screen is turned off temporarily, and then sleep mode is set. You can disable sleep mode if you execute the following operation.

(d) while sleep mode is set.

The unlock screen is displayed.

- In some applications in use, the screen which was displayed before sleep mode is set may be displayed when sleep mode is disabled.
- Do not touch the screen when you display the screen by pressing the power key during sleep mode. Otherwise touch panel operations may not be performed properly.

Switching the Display Language to English

You can switch the display language for function names and other items to English.

- 🚺 On the iida Home, *設定* (Settings).
- 2 言語とキーボード (Language & keyboard).
- 3 言語(Language)を選択 (Select language).
- 4 English.

Initial Setup

After you purchase the INFOBAR A01, the initial setup screen is displayed automatically when turning on the power or inserting another's au IC-Card.

For detailed operations on the initial setup, refer to the supplied Setting Guide (Japanese).

- Set Date & time → Next.
- **2** Set Location \rightarrow Next.

3 Set Other.

Set Wi-Fi settings, au one-ID setting, Google account, Text font or Profile settings.

Done.

Yes/No.

If you tap No, the initial setup screen is not displayed from the next startup.

Alternatively, on the iida Home, tap Settings → Default settings to set up.

Removing/Attaching the Battery Pack

Removing the Battery Pack

When removing the battery pack, turn off the INFOBAR A01.

Remove the battery pack cover on the back of the INFOBAR A01.

Hook a fingertip (nail) on the concave portion with the center of the battery pack cover pressed (1-1), and then remove the battery pack cover by pulling up in the direction of the arrow (1-2).





2 Unlock the battery pack.

Slide the lock slider in the direction of the arrow.



Remove the battery pack.

Remove the battery pack by holding the protruding edge and lifting it upward.

 


 When removing the battery pack, always pull up on the protruding edge. Doing otherwise may result in damage to the INFOBAR A01 or the battery contacts.

Attaching the Battery Pack

Use the specified battery pack for the INFOBAR A01 and attach it properly.

Align the contacts on the battery pack with those of the INFOBAR A01 and then insert the battery pack securely with the protruding edge facing up on the battery pack.

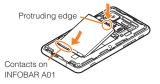

Lock the battery pack.

Slide the lock slider in the direction of the arrow.



After attaching the battery pack cover, press the battery pack cover while tracing the periphery of it, and make sure that it is closed properly.

Trace the battery pack cover, starting from the center of the right side.



- Before attaching the battery pack, make sure that the au IC-Card is inserted properly.
- Failure to follow the correct procedure when attaching the battery pack may result in damage to the battery pack or the battery pack cover.

au IC-Card

An au IC-Card records your personal information au IC-Card such as phone numbers.




· Confirm the correct direction when you insert the au IC-Card.

Removing au IC-Card

Turn off the power and remove the battery pack before removing or inserting the au IC-Card.


Remove the tray straight out by pulling the tab of it and remove the au IC-Card.

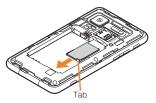


Inserting au IC-Card

- Remove the tray straight out by pulling the tab of it.
- Attach the au IC-Card on the tray with the IC (metal surface) side down.

Adjust the orientation of the cutout of the au IC-Card to that of the tray, and attach the au IC-Card by sliding it onto the tray.

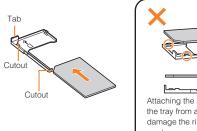


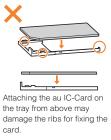

Confirm that the au IC-Card is caught by three ribs of the tray.



Insert the tray into the INFOBAR A01.

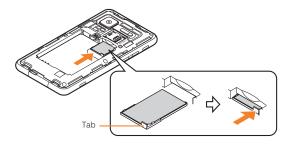

Using microSD Memory Card

You can set microSD memory card (including microSDHC memory card) to the INFOBAR A01, and save data. And also you can save address book, mail messages, bookmarks, etc. in microSD memory card.

- Some applications may not be available when a microSD memory card is not inserted.
- The maximum file size available on a microSD memory card is 2 GB per file when saving data to microSD memory card.
- A microSD memory card initialized on other devices may not be used on the INFOBAR A01 property. Initialize it on the INFOBAR A01. For operations to initialize the microSD memory card, refer to "Initializing microSD Memory Card".
- For operations to play/display data in the microSD memory card, refer to "Playing/Displaying Data" and "Using Menu in the Contents Screen".
- Some files such as copyright protected data may not be played on the INFOBAR A01 even if they are moved/copied from the PC etc. to a microSD memory card successfully.

Handling Precautions

- Do not remove microSD memory card or the battery pack and do not turn off the INFOBAR A01 and other equipment while reading, writing, playing, saving or moving/copying data. It may result in damage to data in the INFOBAR A01 or microSD memory card or data loss.
- Do not drop or subject the INFOBAR A01 to vibration or impact with a microSD memory card inserted. It may result in damage to recorded data or data loss.
- Do not insert objects other than microSD memory card such as liquid, metals or flammable items into the microSD memory card slot. It may result in a fire, electric shock or malfunction.
- Do not apply excessive force to open or close the microSD memory card slot.
- The following microSD memory cards have been confirmed for operation based on the criteria by au. For operation confirmation results of other microSD memory cards, contact each microSD memory card manufacturer.

<microSD/microSDHC Memory Card>

Manufacturer	2 GB	4 GB	8 GB	16 GB	32 GB
Toshiba	0	0	0	0	0
Panasonic	0	0	0	0	-
SanDisk	0	0	0	0	0
ADTEC	0	0	0	-	-
Buffalo	0	0	0	0	-
Sony	0	0	0	-	-

O: Confirmed operation


-: Unconfirmed operation or not for sale

As of May 2011

- * 4 GB or more are for microSDHC memory card.
- * Operation is confirmed for microSD memory cards that are sold as of May 2011. For the latest information on operation confirmation, visit the au homepage or contact the Customer Service Center.

Removing microSD Memory Card

- Turn off the INFOBAR A01 and remove the battery pack cover.
- Slide the microSD memory card slot in the direction of the arrow to unlock.

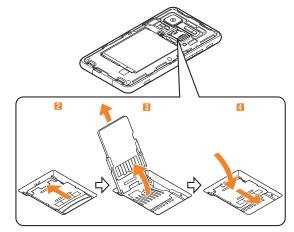

Open the microSD memory card slot and remove the microSD memory card.

Slowly pull the microSD memory card straight out.


4 Close the microSD memory card slot and slide it in the direction of the arrow to lock.

5 Attach the battery pack cover.

- · Do not touch the terminal part of microSD memory card.
- Do not remove the microSD memory card forcefully. It may result in damage to the microSD memory card or the INFOBAR A01 or data loss.
- Application installed to microSD memory card cannot be used once you removed microSD memory card.
- The microSD memory card may be warm after a long time use. It is normal.

Inserting microSD Memory Card

- Turn off the INFOBAR A01 and remove the battery pack cover.
- 2 Slide the microSD memory card slot in the direction of the arrow to unlock.

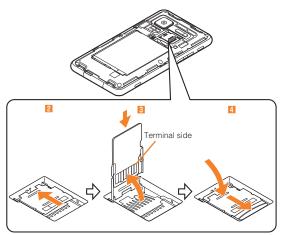

- Open the microSD memory card slot, confirm the direction of the terminal side of the microSD memory card and slowly insert it straight into the slot.
- 4 Close the microSD memory card slot slowly and slide it in the direction of the arrow to lock.
- 5 Attach the battery pack cover.
- Insert a microSD memory card with the right side up in the appropriate direction.

Inserting a microSD memory card forcefully into the slot could result in failure to remove the microSD memory card or damage to the microSD memory card or the INFOBAR A01.

· Do not insert the microSD memory card too deeply when attaching it.

Operating the Touch Panel

The display of the INFOBAR A01 is a touch panel. You can operate the INFOBAR A01 by directly touching the screen.

Tap/Double-Tap

Tap: Gently touch a screen and then immediately release your finger. Double-tap: Tap quickly twice on the same position.



Main purpose of this operation

Select an item or icon displayed on the screen. Double-tap to enlarge/reduce the screen.

Long-Touch

Keep touching an item or key.

Main purpose of this operation Display context menu etc.

Slide

Gently touch a screen and then trace it to the desired direction.

Main purpose of this operation

Scroll screen or switch pages. In addition, operate gauge and bar when adjusting volume and brightness.



Flick

Touch a screen and then quickly flick your finger up, down, left or right.

■ Main purpose of this operation Switch pages or enter characters by flick input.

Pinch

Touch a screen with two of your fingers and then move them apart or closer together.

Main purpose of this operation Enlarge/Reduce the screen.

Drag

Gently touch a screen and then trace it to the desired position.

Main purpose of this operation

Move an icon on the screen to the desired position.







Learning the Basics

Learning the Basics

iida Home and widget Home

Home consists of two screens which are the iida Home and widget Home. You can paste applications, shortcuts, etc. on the iida Home and you can paste widgets on the widget Home.

Flick the screen to the left/right to switch the iida Home and widget Home. Also, slide the iida Home or widget Home to up/down to scroll the screen or switch pages.

Widaet





(iida Home)

Viewing the iida Home

Applications, shortcuts, etc. are displayed in panels. The panels are positioned section by section. Select a panel to activate the application.

- 1) Status bar
- 2 Application/Shortcut panel
- Section bar

Displays a section title and classifies the section. Long-touch a section bar to display the section bar list. Drag it to any section bar and release your finger to scroll the iida Home to the selected section bar position.

④ Bottom key

Operate with the same method as section bar.

- ⑤ Opening/Closing section key
- 6 Panel operation key

While the key is displayed on the enlarged panel, tap the key to operate the displayed contents of the panel.



(iida Home)

Using Status Bar

The notification indicators to notify you of a missed call, a new mail message or a running operation are displayed on the left side of the status bar, while the status indicators to show the status of the INFOBAR A01 are on the right side.

Also, tap the status bar to display the notification/status panel.

Examples of notification indicator

Indicator	Description		
•0	Missed call		
	New mail message (Mail)		
\rangle	New mail message (PC-mail)		
\sum	New mail message (Gmail)		
Ĺ.	Alarm terminated		
	 Appears when the alarm is terminated without the operation for terminating the alarm. 		
30	Schedule notification of the calendar		
	1Seg information Watching information, Playing TV (1Seg) sounds as BGM/ Recording information		
\odot	Playing music		
兼	USB debug connecting		
1	Dialing, Calling		
"	Putting a call on hold		
σο	Answering memo		
8	Skype™ status Signed in/SNew event		
9	Few space available in the INFOBAR A01		
≵↓	Bluetooth [®] file receiving request		
<u>क</u> हा क	USB connecting 1 Card reader mode/ Fast transfer mode/ USB connecting (in Card reader mode connecting)		

Indicator	Description		
	 Data upload, File sending Uploading data, Sending file, Finished sending file, Failed to send file/ Finished uploading data/ Waiting to upload data The Uploading data indicator and Sending file indicator are displayed as animations. 		
D	 Downloading, Finished downloading, Installing data or application, Receiving, Finished receiving file, Failed to receive file The Downloading indicator and Receiving file indicator are displayed as animations. 		
~	Finished installing		
8-	Connected, Unconnected to VPN		
Ĵ	Update available		
$\Box_{\mathbf{A}}$	Major Update (OS Update) available		
÷	Indicators collected		

• When multiple notifications of the same type exist, the number of them is displayed on the lower right of the indicator.

Examples of status indicator

Indicator	Description
12:34	Time
Ċ	Alarm set
20000000000000000000000000000000000000	 Battery level (While charging) (1) Full/ (1) Approx. 80 % remaining/ (2) Approx. 60 % remaining/ (2) Approx. 40 % remaining/ (2) Approx. 20 % remaining/ (2) Approx. 10 % remaining/ (2) Approx. 10 % remaining/ The charge indicator other than "Full" is displayed as an animation.
OFF	Offline mode set

Indicator	Description
	Signal strength (Receiving electric field) [*] Level 4/ Level 3/ Level 2/ Level 1/ Level 0/ Out of service area
3G 3G 41 41 3G 3G 10 11 Data OFF	3G data communication status [*] Waiting/ Receiving/ Sending/ Sending and Receiving/ Data communication off setting
1x 1x 1x 1x 1x 1x 1x 1x 1x 1x 1x 1x 1x	CDMA 1X data communication status [*] Waiting/ Receiving/ Sending/ Sending and Receiving/ Data communication off setting
G G G G DATA DATA	GSM data receiving status [®] Waiting/ Receiving/ Sending/ Sending and Receiving/ Data communication off setting
\bigtriangleup	In roaming (CDMA)
Radi Radi Radi Radi	Signal strength in roaming (GSM)* Level 4/ Level 3/ Level 2/ Level 1/ Level 0
あ AB 12 カナ A 1 カ 区	Character type あ Hiragana-Kanji/AB Half-width alphabet/ 12 Half-width numeric/ 挝 Half-width Katakana/ A Full-width alphabet/ 1 Full-width numeric/ 力 Full-width Katakana/ 区 Character code
₽ @ 4	Manner mode status Standard manner mode/ Drive manner mode/ Silent manner mode
IJ	During a call using hands-free
₽.	Microphone set to off during a call
DMS DMS	Home Network status Suspending/ (Green) Preparing/ (Blue) Running

Indicator	Description	
() 신) 신	Wi-Fi signal strength [*] 중 Level 4/ 중 Level 3/ 중 Level 2/ 중 Level 1/ 중 Level 0	
**	Bluetooth [®] in use Bluetooth [®] in use Connecting	
\$))	GPS in useThe GPS positioning indicator is displayed as an animation.	
C	Data synchronizing	
8 8	Answering memo set Physical No Answering memo/ Answering memo (one to nine entries)/ Answering memo (ten entries)	
2	Osaifu-Keitai [®] lock setting in use	

* Displayed in green when you login using your Google account.

Using Notification/Status Panel

In the notification/status panel, you can check the details on notification indicators and status indicators or activate an application corresponding to the indicator.


You can also set manner mode, VeilView, etc.

1 Power control

You can set Wi-Fi, Bluetooth[®], GPS, auto-sync, and brightness of screen. You can save power by switching the settings frequently when you do not use functions.

Notification area

You can check the status of the INFOBAR A01 and contents of notifications. You can tap to activate a corresponding application depending on the information.

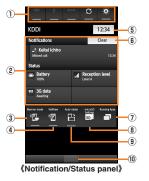

③ Manner mode

You can set manner mode.

④ VeilView

You can set VeilView.

Time

Displays the current time. You can tap to set the date and time.

6 Clear

You can clear all the notifications by tapping the key.

Running Apps

Displays the running applications list screen.

⑧ microSD Settings

You can set the microSD memory card and phone space.

(9) Auto-rotate

You can set the automatic rotation of the display.

Close tab

You can hide the notification/status panel by tapping the tab.

Power control

The brightness of screen is switched in order of ● (dark) → III (medium) → III (bright) → III (auto) every time the icon is tapped.

Using the iida Home

Long-touch the iida Home to display the iida Home management screen. And you can set the sections and panels.

1

1 Setting key

Tap it to display the setting items. You can hide panels, change the size of the displayed panels, etc.

- Section bar adding key Slide it to the right edge of the screen to add a section bar.
- ③ Section bar deleting key Slide it to the left edge of the screen to delete a section bar.
- ④ Add panel

Refer to "Adding the panels".

⑤ Auto align



Panels are aligned automatically to fill the space of the iida Home.

- If you change the size of a displayed panel, the displayed information amount is changed.
- · Tap a section bar to edit the section title.
- Tap the panel whose size can be changed to switch the size of the displayed panel.

Moving the panels

On the iida Home management screen, long-touch the panel to move.

Learning the Basics

2 Drag it to the position to move to and release your finger.

Drag it to a section bar to display the section bar list. And then drag it to any section bar and release your finger to move the panel to the bottom of the selected section.

Adding the panels

On the iida Home management screen, *Add Panel*.

Alternatively, on the iida Home, press $\underbrace{Home} \rightarrow Add/Edit Panel$ to add the panels.

Using the widget Home

Moving/Deleting the widgets

- Long-touch the widget to move/delete.
- For moving
- 2 Drag it to the position to move to and release your finger.
- For deleting
- 2 Drag it to the left side of the screen and release your finger.

Adding the widgets

1 On the widget Home, $\blacksquare \rightarrow Add \rightarrow Widgets$.

Alternatively, long-touch the widget Home \rightarrow *Widgets* to add the widgets.

• Widgets cannot be added in such a case as that the displayed widget Home has no available space.

Application list

The following applications are installed at the time of purchase.

Icon	Application	Description
Brand	BrandGarden	Requires download and
	Facebook Check	installation to use.
	Foursquare	
	GREE	
ijda	iida.jp	
20	LISMO	Play music using LISMO. Requires download and installation to use.
£3	LISMO Book Store	Requires download and
20.	LISMO WAVE	installation to use.
N	Nドライブ (Ndrive)	
40	Run&Walk	
	Sfera Android	
ø	Task Cleaner	
60	unlimited	
<u>.</u>	Address Book	Manage phone numbers or mail addresses.
	au one Market	Use au one Market.
(t: <u></u>	au Wi-Fi接続ツール (au Wi-Fi connection tool)	Requires download and installation to use.
۲	Browser	Browse web sites on the Internet.
* *	Calculator	Use calculator.
26	Calendar	Save and manage schedules.
۲	Camera	Take photos (still images).
80	Camera Reader	Switch Barcode reader, Business card reader, Kanji/English grabber, Text reader, Information reader to use.
Ø.	Clock	Use world clock, alarm, stopwatch, and timer.

lcon	Application	Description	
۲	Compass	Display the compass and your current location on the Google Maps.	
1	Contents Manager	Display and manage data on a microSD memory card.	
	Dictionary	Search for information in the built-in dictionary of the INFOBAR A01 or dictionaries on the Internet.	
4	Documents To Go	Display Microsoft Office documents.	
- ×I	Download	Display the list of data downloaded from the browser and manage them.	
f	Facebook	Use Facebook.	
M	Gmail	Use Gmail.	
8	Google Search	Search for information in the INFOBAR A01 or on web sites.	
	GREE_MARKET	Use GREE Market.	
Ħ	Gガイド番組表 (G-Guide EPG)	Display au one テレビ.Gガイド.	
0	jibe Address Book	Use multiple social networking services such as Twitter or mixi in one application.	
	Latitude	Google Maps to check the location of your friends.	
X	Mail	Use C-mail or e-mail.	
\$	Maps	Use Google Maps.	
4	Market	Use Android Market.	
- Jan	Memo	Create memos.	
(mixi	mixiSH	Use mixi.	
A	Navigation	Search for routes to the destination on Google Maps.	
and the second s	News & Weather	Display news and weather.	

lcon	Application	Description
	Notepad	Create memos.
	One Seg	Watch TV (1Seg).
	Osaifu-Keitai®	Use Osaifu-Keitai [®] .
PC-mail Use PC-mail.		Use PC-mail.
6123	Pedometer	Use pedometer.
2	Phone	Make a call and use outgoing history/incoming history.
3 jo	Photo	Display images in the microSD card as a list and edit them.
	Picture	Sort images and movies by people, event and location and use them.
۴	Places	Search for facilities around your current location and display them on the Google Maps.
S	Q&A	Check Q&A.
2	RSS	Check updated information on the registered RSS.
0	Send and Receive by Infrared	Send and receive data via infrared communication.
O	Settings	Check settings or information.
S	Skype	Make a call or send and receive messages using Skype [™] au.
4	Smart Familink	Play data released by DLNA compatible devices on the INFOBAR A01 using Wi-Fi.
talk	Talk	Use Google Talk.
9	TwiCheck	Check Twitter information.
\sim	Twitter	Use Twitter.
a));	Video Camera	Record movies.
646	Voice Recorder	Record a voice.
Ŷ	Voice Search	Enter a keyword for Google search with your voice.

lcon	Application	Description
		Check temperature, chance of rain, etc. of the day.
You	YouTube	Use YouTube.
ЕЖ	ニュースEX (News EX)	Requires installation to use.
CESQUAR	メーカーアプリ (GALAPAGOS SQUARE)	Use various services such as downloading and viewing applications.

 When you use functions from a menu, packet communication charges may apply depending on the function.

If you have not subscribed to IS NET, au.NET charges (525 yen for the used month) and communication charges apply.

· Icon designs may be changed without prior notice.

Switching Orientation

Portrait and landscape display are switched according to the orientation of the INFOBAR A01.

Example: When rotating the INFOBAR A01 90° from Portrait (Landscape) display to the left (right).





(Landscape display)

(Portrait display)

- Operate the INFOBAR A01 in the upright position. The screen display may not be changed if the INFOBAR A01 is laid in parallel to the ground.
- On the iida Home, tap Settings → Display settings → Auto-rotate screen to set whether to switch portrait display and landscape display.
- In some applications such as Video Camera, the screen display may not be switched regardless of the orientation or setting of the INFOBAR A01.

Displaying Available Menu

Option Menu

The option menu is displayed by pressing with on the screen where the menu is available.

Example: In the inbox screen



Option menu

More

- When the number of available option menus exceeds the number that can be displayed on the screen as icon, *More* is displayed. Option menus that cannot be displayed as icon are collected into *More*, and tap *More* to display them.
- Even on the same screen, the number of items collected into *More* differs depending on the setting and condition since the number of option menus displayed differs depending on the setting and condition.
- In this manual, operation to tap More is not described for option menu.

Context Menu

The context menu is displayed by long-touching an item or a display where the menu is available.

Example: In the character entry screen



Context menu


TapFlow UI

The TapFlow UI is a menu displayed by tapping a when using Address Book, Camera, Video Camera or Picture.

The type, position and size of menu icons displayed on the TapFlow UI vary depending on how frequently you use them.

Example: In the photo monitor screen

· At the time of purchase

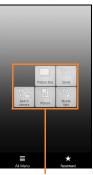

After the operation of each

function

TapFlow UI

TapFlow UI

- While displaying the TapFlow UI, tap *All Menu* to display all the available menu.
- While displaying the TapFlow UI, tap All Menu → Reset usage history
 → Yes to reset the TapFlow UI.
- While displaying the TapFlow UI, tap *Recommend* to display the recommended menu corresponding to applications.

Character Input

Switching Software Keyboards

Tap the character entry field to display software keyboard and enter characters by tapping keys on the screen.

The following two types of software keyboards are available for the $\ensuremath{\mathsf{INFOBAR}}$ A01.

QWERTY	You can enter a displayed character by tapping the character entry key. Use romaji for entry.
	Characters are switched and entered every time the character entry key is tapped.

📕 On the character entry screen, 🕓

- → Change keyboard(Portrait).
- "iWnn IME SH edition" and "Android keyboard" are installed in the INFOBAR A01 as input software. The operations of "iWnn IME - SH edition" are described in this manual.


Flick input

When the software keyboard is "12 Key", you can enter a desired character by flicking the key up, down, left or right without tapping the key repeatedly.

By long-touching a key, the candidates that can be entered by flicking entry are displayed. By flicking the key in the direction of a desired character being displayed, the character is entered in the character entry area. For example, you can enter "A" by only tapping and you can enter "B" by flicking and left.



Viewing the Character Entry Screen

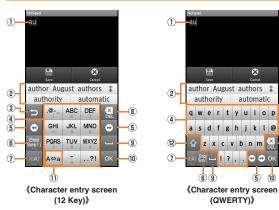

- Character entry area
- 2 Prediction candidates list/Relational prediction candidates list/ Normal conversion candidates list

Enter characters and tap to display the normal conversion candidates list. If the word prediction function is enabled, the prediction candidates list is displayed when characters are entered. The relational prediction candidates list is displayed when an entry is selected from the prediction candidates list.

- You can enlarge the candidates list area by tapping 1. Tap 1 to return it to the original display.
- ③ Back key/Undo key
 - Displays the characters assigned to the same key in the reverse rotation
 - Back function cannot be used in flick input.
 - : You can cancel the last operation such as returning the determined characters to the undetermined state by tapping the key.
- (4) Software keyboard

You can enter a character assigned to each key.

⑤ Cursor key

Moves the cursor to the left and right. Change the range of the characters for character input and conversion.

6 Emoji, Symbol, and Facemark key/Kana, Alphanumeric key

- 📟 : Displays the list of Emoji/D-Emoji/Symbol/Facemark.
- Displays hiragana, katakana, alphabet, number and predicted date and time assigned to the entered key as conversion candidates
- Character entry mode switch key

Switches the character types to enter.

When you switch the character types, the display changes as follows.

- 🔤 : Hiragana-Kanji
- ** : Half-width alphabet
- : Half-width numeric
- Half-width Katakana
- Full-width alphabet Full-width numeric
 - Full-width Katakana
 - Character code

⑧ DEL key

Deletes the selected character or the character on the left of the cursor. When the cursor is at the beginning, the character on the right of the cursor is deleted.

- (9) Settings key/Space key/Conversion key
 - 🕙 : Displays iWnn IME menu.
 - : Enters the space.
 - · Appears in numeric/half-width alphabet entry etc.
 - : Displays the normal conversion candidates list.
 - · Appears in hiragana entry.
- 10 OK key/Enter key
 - · Determines the entering characters.
 - Inserts a line feed at the cursor position.
 - The display is changed depending on the application or entering item.
- 0 Uppercase/Lowercase characters switch key

By tapping 🔤 in alphabet entry, you can switch the entered character to the uppercase/lowercase one.

By tapping iii in hiragana or katakana entry, you can switch the entered character to the uppercase/lowercase one or add dakuten/handakuten to the character.

2 Alphabet entry key/Shift key

- * Switches the entering characters to the alphabet.
 - · Appears in hiragana/kanji entry.

By tapping the shift key, you can switch uppercase characters entry and lowercase characters entry. The display changes as follows each time you tap it.

E : Lowercase character entry
 : Uppercase character entry lock
 : Uppercase character entry

You can switch the symbols to enter by tapping the keys in full-width numeric or half-width numeric entry.

Switching Character Entry Modes

On the character entry screen, $\mathbf{N} \rightarrow Input mode$.

Alternatively, on the character entry screen, long-touch the character entry mode switch key to switch character entry modes.

2 Select the character type.

- The character type is switched in order of Half-width alphabet → Half-width numeric → Hiragana-Kanji each time you tap the character entry mode switch key.
- Some character types cannot be used depending on the screen or the application.

Entering Emoji/D-Emoji/Symbol/Facemark

📙 On the character entry screen, 📟.

The Emoji/D-Emoji/Symbol/Facemark list screen is displayed. Tap when there is no conversion target on the character entry screen.

2 Select Emoji/D-Emoji/Symbol/Facemark.

 There are some lists that cannot be displayed and some Emoji/D-Emoji/ symbols/facemarks that cannot be entered depending on the screen you operate.

Operations on the Emoji/D-Emoji/Symbol/Facemark

list screen

- Full / Halt : Displays the list of full-width symbols/half-width symbols.
- Displays the list of Emoji converted automatically when sent to a cell phone of other carrier.
 - Tap 🔤 to return to the normal Emoji list.
- Image: Displays the previous/next category or page.
- : Deletes the selected character or the character on the left of the cursor.
 - When the cursor is at the beginning, the character on the right of the cursor is deleted.
- cose : Returns to character entry screen.
- Long-touch the facemark: Edits the facemark.
- · Facemarks in History cannot be edited.

Switching Input Software

On the character entry screen, $\mathbb{N} \rightarrow Input$ method.

Alternatively, long-touch the character entry area \rightarrow *Input method* to switch input software.

2	Select mainly to enter alphanumeric. • Japanese entry is impossible.
	Select mainly to enter hiragana, kanji or katakana.

Making a Call

On the iida Home, Phone.

The phone number entry screen is displayed.

Enter a phone number.

When calling to a fixed-line phone, enter the phone number starting with the area code even if you are in the same area.

$3 \quad Call \rightarrow \mathsf{Talk}.$

The calling screen is displayed.

Press _____ or _____ during a call to adjust the other party's voice.

Slide ____ to the left to end the call.

When you end the call to/from an unregistered phone number, the confirmation screen asking whether to register the phone number to the address book is displayed.

- If you touch a wide range of the screen while dialing or calling, it is turned off.
- If the screen remains turned off during a call, you can turn on the screen by pressing or tapping the screen.
- Note that even if you cover microphone, the sound can be conveyed to the other party.
- If you want to return to the calling screen after activating another application during a call, execute the following operations.
 - Press receive to return to the iida Home, activate Phone and tap Return to call in progress.
 - Tap the status bar and tap Current call.

Dial services available from au phones

- The following dial services are available.
- · Call with fixed-line phones all over Japan
- · Call with cell phones, PHS, and car phones all over Japan
- 001 (001 international call service: Subscription is unnecessary)
- · 171 (Disaster emergency message dial)
- 177 (Weather forecast: The area code is necessary)
- 117 (Time signal)
- · 104 (Directory assistance)
- · 115 (Sending telegram)
- 110 (Emergency call to Police)*
- 119 (Emergency call to Fire and Ambulance)*
- 118 (Emergency call to Regional Coast Guard)*
- 157 (Customer Service Center)
- · Maritime telephone
- The numbers are emergency call numbers. The INFOBAR A01 notifies your present location to the emergency call destination with a signal from a base station when you call to the agency that received the emergency call.
- · The following NTT services are unavailable.
 - · Collect call
- · Message service
- Dial Q2
- · 116 (NTT business information)


Making an International Call (001 International Call Service)

Available without any additional application.

Example: To call 212-123-XXXX in the USA

On the phone number entry screen, enter the access code, a country code, area code and phone number

 \rightarrow Call.

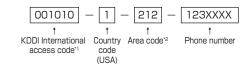

- *1 Long-touch the "0" to enter "+" and "001010" is automatically added when calling.
- *2 If the area code starts with "0", dial it without including the "0" (There are some exceptions such as fixed-line phones in some countries or regions including Italy and Moscow).
- · International call charges are billed together with monthly local call charges.
- For more information on 001 International Call Service, dial either of the following numbers:

From au phones (toll free):

157 (area code not required)

From fixed-line phones (toll free):

10077-7-111 (Open 9:00 to 20:00 everyday)

Answering a Call

Slide 🕓 to the right during an incoming call.

When you get an incoming call, tap *Answer* while the backlight illuminates (except when the unlock screen is displayed).

Talk \rightarrow Slide _____ to the left to end the call.

When you end the call to/from an unregistered phone number, the confirmation screen asking whether to register the phone number to the address book is displayed.

Putting the Call on Hold

Slide _____ to the left during an incoming call.

When you get an incoming call, tap *Answer Holding* while the backlight illuminates (except when the unlock screen is displayed). The call is put on hold. The other party hears voice guidance indicating that the call is put on hold.

Slide 🕓 to the right while the call is on hold.

The hold state is released and the call is connected.

Answering with the Message of Answering Memo

You can answer a call with the message of the Answering memo and record the other party's message.

$\longrightarrow Absence Memo during an incoming call.$

• Press $\longrightarrow Rcv. ON$ to hear the other party's voice while recording Answering memo. Press $\longrightarrow Rcv. OFF$ to turn off the voice.

31

Phone

Returning a Call (Outgoing History/ Incoming History)

On the phone number entry screen,

Outgoing History/Incoming History.

The outgoing history/incoming history screen is displayed.

Select the entry you want to call.

The outgoing history/incoming history detail screen is displayed.

3 Call.

You can tap Message to create C-mail.

 The INFOBAR A01 can store up to 100 entries in each of the outgoing and incoming histories. If the history exceeds 100 entries, it is automatically deleted from the oldest entry. The number of the saved entries may be reduced depending on the amount of free space.

Turning On Manner Mode

Just by selecting Manner mode, you can set not to disturb others around you in public places. Also, you can set the ring tone or the vibrator to off while driving.

I On the iida Home, Settings \rightarrow Sound settings

 \rightarrow Manner mode.

2 Select Manner mode.

	Volume of call ring tone/mail ring tone	Vibrator when receiving call/ mail	Volume of operation sound
Standard manner mode	OFF	ON	OFF
Drive manner mode [*]	OFF	OFF	OFF
Silent manner mode	OFF	OFF	OFF

* The answering message is fixed to Drive, the answering time is fixed to 3secs, and the Answering memo is fixed to ON.

- The use of cell phones while driving a car/motorcycle is dangerous and is prohibited by law. Set manner mode to *Drive manner mode* while driving or riding.
- Hold down ______ for at least two seconds → Manner mode or hold down ______ on the unlock screen to enable/disable manner mode.
- Even in manner mode, the INFOBAR A01 still emits a shutter sound, start/ end tone when you record a movie with Camera or recording start/stop tone of Voice Recorder.

 When playing the data in Contents Manager or checking the function setting by playing the data in manner mode, the data is played on mute.
 Depending on the function, you can adjust the volume by pressing _____/ while playing the data.

Turning On the Answering Memo

When you cannot answer calls, this function automatically plays a message and allows callers to record messages.

- On the iida Home, Settings \rightarrow Call settings
 - \rightarrow Call/Ans Memo \rightarrow Answering memo setting.

- When you set the same length of answering time for Answering memo and Auto Answer, Answering memo takes priority.
- The INFOBAR A01 can record a maximum of ten messages of up to approximately 60 seconds per message. When ten messages have already been recorded, the messages that are already played but not protected are deleted from the oldest one. When ten messages are recorded and all of them have not been played or are protected, the Answering memo does not answer the call.

Playing a Message in Answering Memo

- On the iida Home, Settings \rightarrow Call settings
 - → Call/Ans Memo → Answering Memo List.

The answering memo list screen is displayed.

2 Select the message to be played.

The message is played.

Stop Stop playing the message.		
On/Off	Protect/Unprotect the message not to be	
	automatically deleted.	
Delete Delete the playing message.		
Speaker on/	The message can be heard on the speaker	
Speaker off	earpiece.	

• When multiple messages are recorded, tap

Adding an Address Book Entry

On the iida Home, *Address Book*.

The address book list screen is displayed.

$\blacksquare \quad \blacksquare \quad \blacksquare \quad Add \ new \ entry.$

The address book edit screen is displayed. When you register an account, the screen to select a register destination is displayed. Select a register destination.

Select and edit an item.

4 Save → Yes.

- Tap (to display the entry items which are not displayed.
- If the phone number is for a fixed-line phone, enter the phone number starting with the area code.
- If you save multiple phone numbers/mail addresses, on the address book edit screen, tap (2) to change it to (2) so that you can set a phone number/ mail address for usual use.
- Depending on an item, you can change its type. Tap the icon displayed on the left of the item and select a type. By tapping *Custom* when you change the type, you can save the entered string as a type.
- For the chat address type, set the application which is activated when the
 operation (on the address book detail screen, tap
) is executed.
- If you save the name in the following characters, it is displayed in order of name, and family name on the address book.
 - Half-width alphanumeric including alphabet only for name and family name
 - Half-width alphanumeric including alphabet only for family name/Kanji or half-width alphanumeric including Kanji only for name
- To save GPS information, enable Use wireless networks/Use GPS satellites in advance. On the iida Home, tap Settings → Location & security → Check Use wireless networks/Use GPS satellites to enable it.
- If the other party's phone number is not notified, Ring Set is not enabled.

Using an Address Book

You can use address book entries to make a call or send a mail message easily.

On the address book list screen, select the contact.

Tap image (face) on the address book list screen (newly arrived order).

The address book detail screen is displayed.

Using Phone Number

2

When calling/sending to a phone number

Select the desired phone number on the address book detail screen.

Call	Call to the selected phone number.
Edit and call	Display the selected phone number in the phone number entry screen to make a call.
Send push tone	Send Dual Tone Multi Frequency to the receiver.
Create mail	Create a C-mail message using the selected phone number as an address.
Call added special number	Add the specific number to the selected phone number.

When setting a phone number

Long-touch the desired phone number on the address book detail screen.

Set main phone number Set the phone number for usual use. Create shortcut Direct call Create a shortcut to call to the selected phone number message directly

phone number as an

address.

Using Mail Address

- When sending a mail message to a mail address
- Select the desired mail address on the address book detail screen.
- When setting a mail address
- Long-touch the desired mail address on the address book detail screen.

2	Set main mail address	Set the mail address for usual use.
		Create a shortcut to activate mail message using the selected mail address as an address.

Using E-mail/C-mail

E-mail (XXX@ezweb.ne.jp) is a service that you can exchange e-mail with other cell phones that support e-mail, and with PCs. In addition to text messages, you can also send photos and movies by e-mail.

For the way to acquire an e-mail address, refer to the supplied Setting Guide (Japanese).

C-mail is a service that uses phone numbers as addresses to exchange messages between cell phones.

- For using e-mail/C-mail overseas, refer to supplied Global Passport Owner's Guide (Japanese).
- The packet communication charge for sending and receiving e-mail varies according to the amount of data sent and received. For using overseas, high charges can be incurred. For details, refer to the au comprehensive catalogue or au homepage.
- The function of C-mail is to be expanded. The contents of the expanded function and time for the function expansion are to be released on the au homepage.
- · Charges do not apply when receiving C-mail.

On the iida Home, *Mail*.

The inbox screen is displayed.

Sending E-mail Messages

On the inbox screen/the outbox screen/the folder list screen, *Create*.

The e-mail creation screen is displayed.

2

You can also enter an address directly by tapping the enter destination field.

If you have already entered destinations, the destination list screen is displayed.

Select/Set the address.

Address Book	Enter a mail address by selecting an entry from the address book.
Send/ Receive history	 Enter a mail address by selecting an entry from the send/receive history. On the send/receive history selecting screen, press were → Set secrecy not to display Send/Receive history when selecting destinations etc.
Mail Group	Enter a mail address by selecting a mail group.
Profile	Enter a mail address registered in the Profile.
Secrecy	Disable secrecy setting temporarily when it is set on send/receive history.

4 Tap the subject entry field \rightarrow Enter a subject.

5 Tap the message entry field \rightarrow Enter a message.

6 Send.

- On the e-mail creation screen, press we → Save → Save to unsent box
 → Save as New/Overwrite. After that, the mail message is saved to the Unsent box without being sent.
- If you enter a destination or a name in the destination entry field, the destination candidates are searched for automatically from the send/ receive history or the address book and displayed. Select one of them to be set as the destination. After setting, you can enter and add another destination successively.

Sending C-mail Messages

You can send a message consisting of kanji/hiragana/katakana/ alphanumeric/symbols/pictograms/face marks. After sending, you can know whether the message has been sent to the other party.

On the e-mail creation screen, *Cmail*.

The C-mail creation screen is displayed.

2

You can also enter a phone number directly by tapping the enter destination field.

If you have already entered destinations, the destination list screen is displayed.

Select/Set the phone number.

Address Book	Enter a phone number by selecting an entry from the address book.
Send/ Receive history	 Enter a phone number by selecting an entry from the send/receive history. On the send/receive history selecting screen, press end → Set secrecy not to display Send/Receive history when selecting destinations etc.
Profile	Enter a phone number registered in the Profile.
Secrecy	Disable secrecy setting temporarily when it is set on send/receive history.

Tap the message entry field \rightarrow Enter a message.

5 Send.

- On the C-mail creation screen, tap Save. After that, the mail message is saved to the Unsent box without being sent.
- On the C-mail creation screen, tap *Email* to switch C-mail in process of creation to e-mail. When switched, half-width katakana will be converted to full-width one.
- If you enter the name in the destination entry field, the destination candidates are searched for automatically from the send/receive history or the address book and displayed. Select one of them to set as the destination.
- If you send pictograms to cell phones of different models, some pictograms may not be displayed properly.
- Even when a C-mail is successfully sent, a message indicating that sending the mail failed may appear infrequently.

Receiving E-mail/C-mail Messages

📕 A mail message is received.

When a mail message is received, i appears on the status bar, and the mail ring tone sounds.

2 Tap the status bar.

Select mail information.

The inbox screen is displayed.

4 Select the received mail.

The received mail message screen is displayed.

Reading E-mail/C-mail Messages

You can read mail messages sent, received or saved in each mail box screen.

On the inbox screen/the outbox screen, *Folder*.

The folder list screen is displayed.

Select a folder.

3 Select a mail message.

When you select an unsent mail message in the Unsent box, the e-mail/C-mail creation screen is displayed.

Setting Mail Filters

Mail filters have functions to receive and reject specific e-mail messages and to reject e-mail messages spoofing cell phones or PHSs.

On the inbox screen/the outbox screen/the folder list screen, Settings → E-mail settings → Other settings → OK.

Setting the mail filter as recommended

2 オススメの設定はこちら (See Recommended Settings)
 → 登録 (Register).

Set the mail filter that enables to reject spoofing or auto-forwarded mail messages, and to receive mail messages from cell phones, PHSs or PCs.

Setting details of the mail filter

- 2 迷惑メールフィルター (Mail Filter)
 - \rightarrow Tap (Entry field) \rightarrow Enter your security code
 - → 送信 (Send).

The mail filter screen is displayed.

3	カンタン設定 (Simple Settings)	1.「携帯」「PHS」 「PC」メールを受信 (1. Receive Mail Messages from Cell Phone, PHS or PC)	Reject spoofing or auto-forwarded mail messages, and receive mail messages from cell phones, PHSs or PCs.
		2.「携帯」「PHS」 メールのみを受信 (2. Receive only Mail Messages from Cell Phone or PHS)	Reject mail messages from PCs, spoofing mail messages or auto-forwarded mail messages, and receive mail messages from cell phones or PHSs.
	詳細設定 (Advanced Settings)	一括指定受信 (Collective Receive Setting)	Receive or reject all mail messages from the Internet or cell phones.
		なりすまし規制 (Spoof Restriction)	Reject mail messages sent with an alleged sender address. You can set the following levels; 高 (High),中 (Medium),低 (Low).
		指定拒否リスト設定 (Reject Mail Address List Setting)	Reject mail messages from certain e-mail addresses, domains or parts of addresses to the left of "@" that are contained in the specified address list.

詳細設定	指定受信リスト設定	Prioritize reception of	1	詳細設定	拒否通知メール返	Sets whether to send a
i千和词又是 (Advanced	伯尼文信リスト設定 (Allowed Address	mail messages from		計和回文上 (Advanced	信設定	receiver error (address
Settings)	List Setting)	certain e-mail		Settings)	(Block Mail	unknown) mail message
ootanigo,	Liot Cottinig)	addresses, domains or		00(ll1)g0)	Notification	to the sender of the
		parts of addresses to			Setting)	rejected e-mail
		the left of "@" that are			5,	message.
		contained in the		設定確認/設定	Check the setting s	status of the mail filters
		specified address list.		解除		settings at one time.
		 To block e-mail 		(Check Settings/		<u> </u>
		messages from		Release		
		addresses other than		Settings)		
		the specified ones,		PC設定用ワンタ	Issue a one time pa	assword to set the mail
		unmark all items in		イムパスワード	filter on your PC. TI	ne password is available
		一括指定受信		発行	within 15 minutes a	ifter issuance.
		(Collective Receive		(Issue One Time		
		Setting) to set to off (to		Password for PC		
		reject receiving).		Setting)		
l .	指定受信リスト設	Avoid the mail block due		設定にあたって	Display the explan	ation for setting mail
	定(なりすまし・転	to なりすまし規制		(Notes on Setting	filters.	
	送メール許可)	(Spoof Restriction)		Mail Filter)		
	(Allowed Address	setting, and receive				
	List Setting	auto-forwarded mail	•	f the security code is in	ncorrectly entered three	times consecutively during a
	(Spoofing or Forwarded Mail	messages.	5	single day, the mail filte	er setting operation will b	e disabled until the next day.
	Messages))					once rejected by mail filters.
	0 //	Deinet e meillere en en	E	Be careful when you se	et mail filters.	
	HTMLメール規制	Reject e-mail messages in HTML format.				
	(HTML Mail Restriction)	In HIML format.	F	Rejecting Spa	am C-mail Me	ssages
	URLリンク規制	Reject e-mail messages	You	can register the ph	ione numbers to reje	ct C-mail messages. You
	(URL Link	that include a URL.	can	also set to reject C	-mail messages sen	from the phone numbers
	Restriction)		not	registered in the ad	dress book.	

1 On the inbox screen/the outbox screen/the folder list

screen, Settings \rightarrow C-mail settings \rightarrow Receiving filter

 \rightarrow Enter Lock No. $\rightarrow OK$.

Block specified numbers	Set Specified Numbers	Set whether to enable the Block specified numbers. If no phone number to be blocked is specified in <i>Specified Number List</i> , the specified number screen is displayed. Tap <i>Add new</i> and register the phone number.
	Specified Number List	 Specify the phone number to be blocked. Tap <i>Add new</i> to register a phone number to be blocked. Select the registered phone number → <i>Secrecy</i> → Enter Lock No. → <i>OK</i> to disable secrecy setting on send/receive history temporarily. Press I > <i>Delete</i> → <i>Delete</i> → <i>Delete selection/Delete all</i> to select the phone numbers to be deleted or to delete all the phone numbers. Long-touch the registered phone number. Long-touch the registered phone number. Up to ten phone numbers can be registered. Even when you reject receiving by receiving filter, the sender is supposed to send the mail message correctly, and the charge applies.
Not in address book		to block C-mail from any phone saved in the address book.
E-mail notifications	Set whether	to block e-mail notifications.

Using PC-mail

You can use PC-mail setting an account of au one mail etc.
To use au one mail in *PC-mail*, acquiring au one mail account, enabling IMAP setting, setting mail password are required in advance. On the iida Home, tap *Browser* → Tap the URL entry field → Enter "http://auone.jp/" (Japanese) → au one メールヘルプ (au one mail help) and set after confirming the contents of the help.

On the iida Home, PC-mail.

The inbox screen is displayed.

If multiple mail accounts are registered, the PC-mail main screen is displayed.

When you use PC-mail for the first time, the mail account setup screen is displayed, and then register a mail account. For operation on registering a mail account, refer to "Registering Another PC-mail Account".

Registering Another PC-mail Account

1 On the inbox screen, $\square \rightarrow Accounts$.

The PC-mail main screen is displayed.

$\stackrel{}{\overset{}_{}_{}_{}_{}_{}_{}_{}_{}_{}_{}} \longrightarrow Add \ account.$

The mail account setup screen is displayed. When you register the second or later account, you can register it as a prioritized account by tapping *Send email from this account by default*.

$3 Email address \rightarrow Enter mail address.$

4 Password \rightarrow Enter password \rightarrow Next.

The mail server is set automatically.

5 Tap the account name entry field

- → Enter account name.
- **6** Tap the your name entry field \rightarrow Enter your name \rightarrow *Done*.

Sending PC-mail Messages

■ On the inbox screen, were → Compose. The PC-mail composition screen is displayed.

2 Tap the destination entry field

→ Enter the destination.

If you enter a name or a mail address saved in the address book, the address book is searched and the destination is displayed below the destination entry field. You can select the displayed destination.

Tap the subject entry field \rightarrow Enter the subject.

Tap the message entry field \rightarrow Enter the message.

Send.

If you tap *Sava as draft*, PC-mail is saved to draft without sending it. If you tap *Discard*, PC-mail in process of composition is discarded.

Receiving PC-mail Messages

PC-mail is received.

If PC-mail is received, \blacksquare appears on the status bar, and the mail ring tone sounds.

2 Tap the status bar.

Select PC-mail information.

The inbox screen is displayed.

4 Select the received PC-mail.

The received PC-mail message screen is displayed.

Using Gmail

Gmail is a mail service provided by Google. You can send and receive Gmail with the INFOBAR A01.

- Google account is required to use Gmail. For details on Google account, refer to the supplied Setting Guide (Japanese) and the site (http://www.google.com/support/accounts/).
- On the iida Home, tap Settings → Accounts & sync to synchronize Gmail saved in the server with one saved in the INFOBAR A01.
- · For using Gmail, refer to Google homepage.

On the iida Home, *Gmail*.

The Gmail inbox screen is displayed.

Sending Gmail

- **I** On the inbox screen, $\square \rightarrow Compose$.
- 2 Tap the destination entry field
 - → Enter the destination.
- **Solution** Tap the subject entry field \rightarrow Enter the subject.
- 4 Tap the message entry field \rightarrow Enter the message.
- 5 🖳

Receiving Gmail

Gmail is received.

When Gmail is received, \blacksquare appears on the status bar, and the mail ring tone sounds.

2 Tap the status bar.

3 Select mail information.

The inbox screen is displayed.

4 Select the received mail.

The received mail message screen is displayed.

Replying/Forwarding Gmail

- 👖 On the received mail message screen, 🛽
 - \rightarrow Reply/Reply all/Forward.

Viewing Sites with Browser

On the iida Home, *Browser*.

The browser screen is displayed.

On the iida Home, tap *au one for iida* to always display the iida homepage for Android.

• When browsing a web page with a large amount of data, the application may be terminated automatically.

Filtering function

- The filtering function blocks inappropriate web pages for young people. On the iida Home, tap Settings → Wireless & networks → Filtering settings → Yes
 - \rightarrow Enter a password $\rightarrow OK \rightarrow$ Enter a password again $\rightarrow OK$.
 - The filtering function is disabled during Wi-Fi connection.
 - The password used when enabling the filtering function is necessary when disabling the setting. Be sure to keep the password.

Using Bookmarks/History

- On the browser screen, MENU
 - → Bookmarks/History.

The bookmarks screen/history screen is displayed.

- 2 Select a bookmark/history.
- On the history screen, tap ightarrow /
 ightarrow to bookmark/delete the selected history.

Bookmarking a Web Page

Bookmark the displayed site.

On the browser screen, $\blacksquare \rightarrow Bookmarks \rightarrow Add$.

The bookmark registration screen is displayed.

2 OK.

On the bookmarks/history screen, long-touch the bookmark/history
 Delete bookmark/Delete from bookmarks to delete the bookmark.

Using the Camera

The INFOBAR A01 has a CMOS camera with approximately 8.05 effective megapixels for shooting photos and movies.

When the battery level is (approximately 10 %) or lower, camera cannot be activated.

Insert a microSD memory card before using camera. All the photos and movies taken are saved in a microSD memory card.

• The mobile light flashes in red while each camera mode is activated.

Cautions for Using the Camera

- Do not position the mobile light close to your eyes. Do not look at the mobile light directly while it is on. Do not point on the mobile light toward the eyes of others. It may harm eyesight.
- The INFOBAR A01 may be warm after displaying the photo monitor screen or operating repeated movie recordings for a long time. Be careful of touching for a long time which may result in a low temperature burn.
- If you use the INFOBAR A01 camera in a wrongful manner, you may be subject to punishment according to laws of the national and local governments.

Taking Photos

On the iida Home, *Camera*.

The photo monitor screen is displayed.

at the bottom of the screen.

The shutter sounds and the shot image is automatically saved. On the photo monitor screen, press \longrightarrow Save settings

 \rightarrow Auto Save to set to OFF. After that, the photo preview screen is displayed after shooting. You can save the shot data etc.

- If you operate nothing in the photo monitor screen for approximately three minutes, Camera is terminated.
- If the mobile light is set to *ON*, the mobile light is turned on and it is automatically turned off in approximately three minutes.

AF lock

- By tapping the section on which you want to set the focus in the photo monitor screen, you can hold it in the state that it focuses on the tapped section. When the focusing is locked, the AF frame is displayed and focus lock tone sounds. If the focusing is failed, the AF frame is displayed in red.
- On the photo monitor screen, press were → Focus settings → Chase Focus to set to ON. After that, if you move the AF frame to detect the subject, the AF frame chases the subject even if the subject is moving.
- On the photo monitor screen, press → *Focus settings* to set to *Macro Fixed* or *Infinity Fixed*. After that, you cannot use the AF lock.
- You can take a photo by tapping the AF frame.

Recording Movies

On the iida Home, Video Camera.

The movie monitor screen is displayed.

at the bottom of the screen.

Recording starts.

3

The recorded data is automatically saved.

On the movie monitor screen, press $\forall e = d = d = 0$. After that, the movie preview screen is displayed after stopping recording. You can play or save the recorded data etc.

- · You can record movies only in the landscape display.
- If the battery level becomes (approximately 10%) or lower while recording, recording is terminated and saved automatically.
- When you get an incoming call while recording, the recording is terminated and saved, and then the incoming call screen is displayed. If *Auto Save* is set to *OFF*, the recording is terminated, and then the incoming call screen is displayed. After the incoming or the call, the movie preview screen is displayed.
- If you operate nothing in the movie monitor screen for approximately three minutes, Video Camera is terminated.
- If the mobile light is set to *ON*, the mobile light is turned on and it is automatically turned off in approximately three minutes.

Using Photo

In the Photo, you can perform operations such as displaying the images saved in the microSD memory card as a list and editing them.

On the iida Home, *Photo*.

The album selection screen is displayed. Camera is activated by tapping o.

Select an album.

The thumbnail display screen is displayed.

Tap \blacklozenge to return to the album selection screen.

Tap (to switch the date display and the thumbnail display of the images.

Slide to the left/right to slide the thumbnails.

Select an image.

When you select an image, the one image display screen is displayed.

Operations in the one image display screen

Tap the image: Displays/Hides enlargement/reduction icon, *Paste on Home* and *Menu*.

Using Contents Manager

You can categorize and list, play/display, check, and manage data on a microSD memory card, using Contents Manager.

On the iida Home, *Contents Manager*.

The contents screen is displayed.

· Some data displayed in Contents Manager cannot be played/displayed.

Playing/Displaying Data

On the contents screen, select data.

The application is automatically activated according to the data type and the data is played/displayed.

Regardless of playing/displaying the data from the contents screen, if there are multiple applications to play/display, the application selection screen may be displayed. Select an application to play/ display the data.

You cannot play data on which *is* displayed.

Using Menu in the Contents Screen

You can send, upload, edit, delete data, etc. on the Contents Manager.

On the contents screen, MENU.

2

Delete	Delete data.		
selected	Select data $\rightarrow E$	Enter \rightarrow Yes.	
	Tap Check all/U	Uncheck all to select/cancel all.	
List Players	Display applicat	ions related to file format.	
Switch grid/list	Switch grid disp	lay and list display.	
Sort	Sort saved data		
Slideshow	Display the taken pictures by slideshow. • Tap the screen while playing to stop the slideshow.		
microSD/	Check the space of the microSD memory		
phone space	card, back up the data, etc.		
App setting	Set effective range of search criteria etc. on		
	the contents scr	een.	
Slideshow	Slideshow	Set the interval of switching	
settings	interval	images of slideshow.	
	Slideshow	Set the operation when	
	transition	switching images of	
	slideshow.		
	Repeat setting Set whether to repeat the		
	slideshow display.		
	Shuffle setting	Set whether to display the	
		slideshow in random order.	

Cautions for Using TV (1Seg)

Cautions for using TV (1Seg)

- No communication charges apply for watching TV (1Seg). However, when you use an additional service using packet communication on a data broadcast etc., packet communication charges apply.
- Be careful not to watch TV (1Seg) for a long time at a loud volume. It may harm your hearing.

Behavior by Battery Level

 If the battery level becomes (approximately 10 %) or lower while activating TV (1Seg), it is terminated automatically. If the battery level becomes so while recording TV programs, the recorded content is saved and TV (1Seg) ends.


TV antenna

The TV antenna is not built in the INFOBAR A01. When you activate TV (1Seg) and set the watching area or when you watch/record TV (1Seg), connect the microUSB-3.5 ϕ conversion cable for the TV antenna.

Keep the microUSB-3.5 ϕ conversion cable as straight as possible to use. And use INFOBAR A01 in the direction of the good reception on TV (1Seg).

Also, Fully charge the battery pack before you watch/record TV (1Seg) because the microUSB- 3.5ϕ conversion cable and charging devices cannot be used at the same time.

Open the external connection jack cover of the INFOBAR A01.

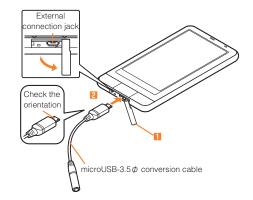

Connect the microUSB-3.5 conversion cable to the INFOBAR A01.

Initial Setup of TV (1Seg)

Set the watching area when you activate TV (1Seg) for the first time. After you have finished to set, you can watch TV (1Seg).

- **On the iida Home**, *One Seg* \rightarrow *OK* \rightarrow *Yes*.
- Select a region.
- Select a prefecture.

Select a locality.

Searching for local channels begins.

OK.

The 1Seg menu screen is displayed.

• On the 1Seq screen, press \checkmark \rightarrow Channel setting \rightarrow Switch area to change the area.

Watching TV (1Seg)

On the iida Home, One Seg \rightarrow One Seg TV.

The 1Seq screen is displayed.

If the confirmation screen for the microUSB-3.5 ϕ conversion cable is displayed, tap OK to display the 1Seg screen.

- 1 Program information
- 2 Video image
- ③ Operation key
- (4) Subtitle
- ⑤ Data broadcast
- ISeq operation panel/Data broadcast operation panel
- Signal strength
- (8) Data broadcast lock indicator

Indicates that the Data broadcast lock content is displayed on a data broadcast.

- SSI indicator

Indicates that the page protected by the advanced security is displayed on a data broadcast.

Multiple services indicator

Indicates that a service (program) broadcasts in another channel being received.

1 Language



· Camera is not available while activating TV (1Seg).

Operations on the 1Seq screen

Operation on the portrait display

Slide/Flick the video image to the left/right: Switches channels. Tap the video image: Shows/Hides the program information and operation key.

Double-tap the video image: Switches image sizes.

Long-touch the video image: Displays the channel list.

Tap the program information: Displays the program name.

Operation key

- / Switches channels or searches for a channel by long-touch. **1Seq Operation Panel**
- / : Starts/Stops recording.
- : Displays the channel list.
- Displays the data broadcast operation panel.

Data Broadcast Operation Panel

- : Moves the cursor.
- : Selects an item.
- Returns to the previous screen.
- Displays the 1Seq operation panel.

Operation on the landscape display

Slide/Flick the video image to the left/right: Switches channels. Tap the video image: Shows/Hides the program information and operation panel.

Long-touch the video image: Displays the channel list.

Tap the program information: Displays the program name.

1Seq Operation Panel

- / Switches channels and searches for a channel by long-touch.
- / . Starts/Stops recording.
- : Displays the program guide.
- : Displays the channel list.

Operations while displaying Channel List

Select the broadcast station name: Switches to the selected broadcast station.

Long-touch the broadcast station → *Channel overwrite registration*

 \rightarrow Yes: Assigns the broadcast station being watched to the selected remote control number.

Long-touch the broadcast station \rightarrow *Delete channel* \rightarrow *Yes*: Deletes the broadcast station from the selected remote control number.

Long-touch the unset remote control number: Assigns the broadcast station being watched to the selected remote control number.

Using Android Market

You can download and install various applications such as useful tools or games from Android Market offered by Google.

- Google account is required to use Android Market. For details on Google account, refer to the supplied Setting Guide (Japanese) and the site (http://www.google.com/support/accounts/).
- For details, on the Android Market screen, press → Help to refer to Android Market Help.

I On the iida Home, Market.

The Android Market screen is displayed.

When you activate Android Market for the first time, the terms of service are displayed, so tap *Accept* after confirming the contents.

- Some applications may not be available when a microSD memory card is not inserted.
- Some applications make the display keep turned on or continue in the background and weaken battery.

Using au one Market

You can download and install applications from au one Market. You can search the desired applications by categories, keywords or ranking.

• au one-ID is required to use some functions. Refer to the supplied Setting Guide (Japanese) to set au one-ID.

On the iida Home, au one Market.

The au one Market screen is displayed

When you activate au one Market for the first time, the terms of service and cautions for using au one Market are displayed, so tap $\square \bigcirc$ (Agree) $\rightarrow OK$ after confirming the contents.

- Follow the terms of service to use au one Market. Procedures on downloading applications and making payment for fee-based applications differ depending on the distributor of au one Market.
- Some applications may not be available when a microSD memory card is not inserted.

Using GREE Market

You can search for free games etc. of au one GREE easily.

On the iida Home, *GREE_MARKET*.

The GREE Market screen is displayed.

You can search for games etc. you want to use from the section on the screen.

To use games searched from GREE Market, registering as an au one GREE member may be required.

Managing Applications

You can delete data, clear cache or stop installed applications forcefully.

On the iida Home, Settings → Applications

→ Manage applications.

The installed applications list is displayed.

Select an application.

The detailed application information is displayed.

Select the operation to perform.

Follow the on-screen instructions to perform it.

• When you select an installed application, *Uninstall* is displayed. Tap it to remove the application.

Checking Your Profile

You can save additional information such as name or residence besides phone number etc. saved in advance and use it for attaching to a mail etc.

On the iida Home, *Settings* \rightarrow *Profile*.

The profile screen is displayed.

 If au IC-Card is not inserted or different au IC-Card is inserted, *auIC* Card(UIM) error. appears for checking your profile. Tap OK to display the profile screen. However, information such as Own phone number, Own mail address or ICCID is not displayed. Also, some operations, such as attaching the profile to mail, may not be carried out. Insert your au IC-Card and turn on power again.

Changing the Incoming Ring Tone

You can select and set data for the incoming ring tone.

- On the iida Home, Settings \rightarrow Sound settings
 - \rightarrow Melody.
- 2 Select the data.

Changing the Wallpaper

You can select and set an image to display as the wallpaper of the widget Home.

- On the iida Home, Settings → Display settings
 - → Wallpaper.
- 2 Select the application.
- **Select** the data \rightarrow *SavelSet wallpaper*.

Initializing microSD Memory Card

When initializing a microSD memory card, all data (including applications) saved on the microSD memory card is deleted.

- On the iida Home, *Settings*
 - \rightarrow microSD & phone storage \rightarrow Unmount microSD \rightarrow OK.
- **2** Erase microSD.
- **3** Erase microSD \rightarrow Enter Lock No. \rightarrow OK
 - → Erase everything.
- Initialize a microSD memory card while charging or with the battery fully charged.
- To have the microSD memory card recognized after having unmounted it, tap *Mount microSD*.
- Do not unmount the microSD memory card while saving data on it since it may result in damage to data on the microSD memory card or data loss.
- · Insert/Remove microSD memory card after turning the power off.


Using Global Passport CDMA/GSM

GLOBAL PASSPORT

Global passport is the international roaming service which allows the INFOBAR A01 used in Japan to be available overseas as it is. You can use the INFOBAR A01 via either GSM network or CDMA network according to your travel destination.

- You can make a call via GSM network or CDMA network around the globe with your usual phone number.
- Because International call charges are billed together with call charges in Japan without any additional application or daily/monthly call charges, you can pay simply. For details of the countries where global passport GSM/global passport CDMA is available, call charges, the contents of the service, etc., refer to the Global Passport Owner's Guide (Japanese) or check them on the au homepage or at Customer Service Center.
 - GSM is an acronym of Global System for Mobile Communications. This is one of the wireless communication systems applied to digital cell phones and widely used around the globe such as in Europe, America, Asia, Oceania and Africa. GSM does not support CDMA, PDC, etc. applied in Japan.
 - The international roaming service is a service which enables voice calls etc. with your phone or phone number of au used in Japan via cell phones carrier's networks overseas.
- Outline for Using GLOBAL PASSPORT
- You can use the service via au network in Japan.
- **2** Set *Area settings* of the INFOBAR A01.
- You can make a call via GSM/CDMA network around the globe with your usual phone number.

4 Set *Area settings* to *Japan* when you have returned to Japan.

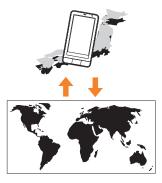

When using overseas

When you use global passport GSM/global passport CDMA overseas, refer to "Configuring the Overseas Settings" and set each setting.

- If you newly subscribe for the INFOBAR A01, you can use it overseas from two days after the first use in Japan.
- When you travel overseas, confirm "Phone number for inquiries when overseas" described on the au homepage and keep a separate memo of it before traveling. If the INFOBAR A01 or an au IC-Card is stolen or lost, please contact for inquiries immediately to suspend phone service.
- If an au IC-Card is stolen or lost, the card may be inserted into another mobile phone (including GSM mobile phone for overseas use) by a third party. So, it is recommended to set the PIN code to protect from improper use by a third party.

For overseas use without anxiety

The overseas network condition is available on the au homepage. Make sure to check the condition before leaving Japan. http://www.au.kddi.com/service/kokusai/tokomae/

When the INFOBAR A01 is Stolen or Lost

- If the INFOBAR A01 is lost or stolen while overseas, please contact Customer Service Center immediately to suspend phone service.
 Please be aware that any calling charges and packet communication charges incurred after theft or loss of a phone are the responsibility of the customer.
- If the au IC-Card inserted into the INFOBAR A01 is stolen or lost, the card may be inserted into another mobile phone (including GSM mobile phone for overseas use) by a third party. So, it is recommended to set the PIN code to protect from improper use by a third party.

Using the INFOBAR A01 Properly by Knowing About Calling and Communication Services Overseas

- Calling charges differ depending on the country/region.
- Discount services do not apply to calling charges incurred while overseas.
- Calling charges are also incurred when receiving calls overseas.
- Depending on the country/region, calling charges may be incurred from the time that you tap *Call*.

Configuring the Overseas Settings

To use the INFOBAR A01 overseas, you are required to change to the telecommunications carrier's networks that you connect to at your travel destination.

Obtaining the PRL (Roaming Area Information)

The PRL (roaming area information) contains information on roaming areas of overseas partner providers who have signed an international roaming contract with KDDI (au).

You need to set the PRL when using the INFOBAR A01 in the CDMA network areas. Please obtain the latest PRL before traveling.

I On the iida Home, Settings \rightarrow Wireless & networks

- → Mobile networks → Roaming settings → PRL settings
- → Update PRL version.

The PRL is obtained. Download the PRL data by following the on-screen instructions.

- · When you download the PRL data, packet communication charges apply.
- Be aware that service may be unavailable in some areas if you do not update the PRL.

Setting the Area

You can set the area where you use the INFOBAR A01.

On the iida Home, Settings \rightarrow Wireless & networks

 \rightarrow Mobile networks \rightarrow Roaming settings \rightarrow Area settings.

2	Japan	Set for using within Japan.	
Overseas(Auto)		Set (automatically set via CDMA network/ GSM network) for using outside Japan.	
Overseas(CDMA)		Set for using CDMA network overseas.	
	Overseas(GSM)	GSM) Set for using GSM network overseas.	

• The country selection screen may be displayed if *Area settings* is set to other than *Japan*. Select the travel country.

Setting the network

You can search and connect to the available networks when the international roaming begins or a network being used is out of service area.

- On the iida Home, Settings \rightarrow Wireless & networks
 - → Mobile networks → Roaming settings
 - → Network operators.

The available networks are searched and displayed.

2 Select the network to use.

When you tap *Search networks*, the available networks are searched. When you tap *Select automatically*, the optimized network is automatically set.

· This service is available only while the GSM network is used.

Setting the data roaming

You can use the packet communication during roaming.

1 On the iida Home, Settings \rightarrow Wireless & networks

\rightarrow Mobile networks \rightarrow Data roaming.

Tap OK to enable the data roaming.

- · To enable the data roaming, set Area settings to other than Japan in advance.
- If you have not subscribed to IS NET, au.NET charges (525 yen for the used month) and communication charges apply.


Making a Call at Your Travel Destination

Making a Call to Another Country (Including Japan) from Your Travel Destination

You can make a call to Japan or another country from your travel destination.

Example: To call "212-123-XXXX" in the USA from South Korea

- On the iida Home, Phone.
- 2 Enter an international access code, country code, area code and the other party's phone number → Call.

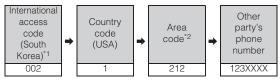

- *1 Long-touch the "0" to enter "+" and the international access code of your travel destination is automatically added when calling.
- *2 If the area code starts with "0", dial it without including the "0" (There are some exceptions such as fixed-line phones in some countries or regions including Italy and Moscow).

• If the person you are dialing is using Global Passport, enter the country code "81" (Japan) regardless of his/her travel destination.

Making a Call within the Same Country While Overseas

You can call to general fixed-line phones or mobile phones with the same method as when calling in Japan.

On the iida Home, Phone.

2 Enter a phone number.

When you use GSM network, enter area code $\mbox{+}$ other party's phone number.

When you use CDMA network, the method for making calls varies depending on where you are calling.

Travel destination	Number
U.S. Mainland, Hawaii, Saipan	"1" + Area code + Other party's phone number
New Zealand, South Korea, China, Hong Kong, Macau, Thailand, Taiwan, Indonesia, Vietnam, Israel, India, Peru, Bermuda Islands, Bangladesh, Bahamas, Venezuela	Area code + Other party's phone number
Mexico	 For local call Other party's phone number For long distance call "01" + Area code + Other party's phone number

Receiving a Call at Your Travel Destination

You can receive calls with the same method as when receiving calls in Japan.

 If you receive a call while overseas, the call is forwarded from Japan no matter where the call is made from. Call charges to Japan are incurred by the caller and receiving charges by the receiver.

Having Calls Made to Your Travel Destination from Japan

People calling you can use the same method as when calling you from Japan.

 
Having Calls Made to Your Travel Destination from Countries Other Than Japan

International access code and "81" (Japan) have to be dialed regardless of the travel destination since the call is made through Japan.

Example: To have a call made to your au phone in Japan "090-1234-XXXX" from the USA

Enter an international access code, Japan country

code and phone number of au phone \rightarrow *Call*.

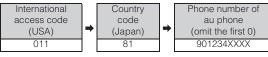

Setting Conditions for Activating the Remote Lock

In the case of loss of your INFOBAR A01, calling the INFOBAR A01 from a specified phone number repeatedly allows you to remotely prevent others from using the INFOBAR A01.

On the iida Home, *Settings* \rightarrow *Location* & *security*

 \rightarrow Lock Setting \rightarrow Remote lock.

2 Enter Lock No. $\rightarrow OK$.

3	Valid number list	 Register up to three phone numbers. 1. Add new. 2. Direct entry → Enter a phone number → . You can select a phone number from Use address book or Use profile. Also you can select Payphone.
	Specified period	Specify the time limit for receiving the number of calls you have set for <i>Number of calls arrived</i> after the first call is received.
	Number of calls arrived	Set the number of calls to receive to activate the Remote lock.
	Remove phone lock	 Allow you to cancel the Remote lock by operating the INFOBAR A01. If you enable the setting, canceling the Remote lock is available by operating the INFOBAR A01 or performing remote operation. If you disable the setting, canceling the Remote lock is available only by performing remote operation.

Activating the Remote Lock from a specified phone number

Call the INFOBAR A01 from a phone number registered to the valid number list with the set conditions (specified period/number of calls arrived).

- · To activate the Remote lock, notify the caller's phone number.
- The Remote lock cannot be activated when the INFOBAR A01 is turned off or out of service area or *Offline mode* is set. If your INFOBAR A01 is in a location where an adequate signal cannot be received, the Remote lock may not be activated.
- To cancel the Remote lock, call the INFOBAR A01 from a phone number registered to the valid number list with the set conditions (specified period/ number of calls arrived).
- The Remote lock cannot be activated or canceled when your au IC-Card is not inserted or another's au IC-Card is inserted.

Activating the Remote Lock with the Security Lock Service

Even if the Remote lock is not set in advance, the Remote lock can be activated by calling Customer Service Center or completing the application process on au Customer Support from a PC. The Security Lock Service is available free of charge.

Calling Customer Service Center for Activating/Canceling the Remote lock

From an au phone: **113** without a prefix (toll free) From any other cell phone or fixed-line phone:

20077-7-113 (toll free)

- Open 24 hours
- · Follow the voice guidance to complete the application process.

Activating/Canceling the Remote lock with au Customer Support Login to au Customer Support (https://cs.kddi.com/) and complete the application process by following the on-screen instructions.

 You must fill out an application to use the Security Lock Service (the application can be filled out even after your cell phone is lost).

Troubleshooting

Trouble	Detail	Page
Cannot turn on the	Is the battery pack charged?	P.8
power by pressing	Is the battery pack attached properly?	P.11
<u>o</u> .	Is the jack of the battery pack clean?	-
	Did you hold down @?	P.9
The power is turned off	Is there enough power left in the battery	P.8
automatically.	pack?	
The power is turned off	Is there enough power left in the battery	P.8
while the wake-up logo	pack?	
is displayed.		
Cannot make calls.	Is the power turned on?	P.9
	Is an au IC-Card inserted?	P.13
	Did you enter the correct phone number?	P.29
	(Did you enter the phone number starting with the area code?)	
	,	P.29
	Did you tap <i>Call</i> after entering a phone number?	P.29
	Did you set the correct setting in Area	P.54
	settings?	1.04
Cannot receive calls.	Does the INFOBAB A01 receive an	P. 19
	adequate signal?	-
	Is the INFOBAR A01 within the service	P.19
	area?	
	Is the power turned on?	P.9
	Is an au IC-Card inserted?	P.13
	Did you set the correct setting in Area	P.54
	settings?	
(out of service area	Is the INFOBAR A01 within the service area	P.19
indicator) appears.	or in a location where the signal is strong?	
	Is your finger off the area around the	P.6
	internal antenna?	
	Did you set the correct setting in Area	P.54
	settings?	

Trouble	Detail	Page
Display and charging/ incoming indicator	Is the ring tone volume set to other than minimum?	-
illuminates or flashes, but ring tone does not sound.	Is manner mode disabled?	P.31
Cannot charge the battery pack.	Are the charging devices connected properly?	P.8
	Is the battery pack attached properly?	P.11
	Is USB battery charge enabled? If a microSD memory card is not inserted, the installation of a USB driver to the PC may be necessary. For the USB driver and install manual, refer to the Support page in シャープケータイdaSH (SHARP Keitai daSH) (http://k-tai.sharp.co.jp/ support/).	P.9
Cannot operate key/	Is the power turned on?	P.9
touch panel.	Turn off the power and then turn it on again.	P.9
Cannot operate touch	Check the proper operation of touch panel.	P.16
panel as intended.	Turn off the power and then turn it on again.	P.9
A message indicating that charging is necessary appears.	The battery pack is almost empty.	P.8
Calls are answered	Is Answering memo disabled?	P.32
automatically.	Is manner mode disabled?	P.31
Battery usage time is short.	Is the battery pack charged enough? Charge the battery pack until the red Charging/Incoming indicator is turned off. Make sure the battery does not approach	P.8 -
	the end of its service life. Make sure the INFOBAR A01 is not left in the place for a long period where in (out of service area indicator) appears. Finish or suspend the applications or	P. 19
	functions not being used.	

Appendix/Index

Trouble	Detail	Page
When making a call, a	Are you within the service area or in a	P.19
beeping sound is heard	location where the signal is strong?	
from the earpiece and a	The wireless line is busy or the other party's	
connection cannot be	you are calling is on another line. Try again	-
established.	later.	
The light of the display is turned off.	Is Screen timeout set to be long enough?	-
Display is dark.	Is Brightness set to be bright enough?	-
	Are you operating the INFOBAR A01 in the area other than bright places? The backlight does not illuminate in the bright surroundings.	-
	Is VeilView disabled?	P.19
Cannot hear the other party.	Is the earpiece volume set to other than minimum?	P.29
	Make sure your ear is not covering the earpiece. Put your ear on the earpiece.	P.6
Cannot watch TV (1Seg), images or	Does the INFOBAR A01 receive an adequate digital broadcasting signal?	-
sounds are interrupted or noise occurs.	Is the microUSB-3.5 ϕ conversion cable connected?	-
	Is the selected area for the area where you use the INFOBAR A01?	-
Cannot operate any key	Press the reset button with a pointed end of	P.7
and the screen is	an object for at least two seconds.	
frozen.	The INFOBAR A01 restarts.	

Trouble	Detail	Page
Cannot operate the respective address book settings.	Is the other party's phone number notified? If there is no notification, the setting for individual incoming image of the address book and the ring tone setting are not enabled. Also, the setting for incoming voice call of the group setting in the address book is not enabled.	-
	Make sure more than one same phone number is not saved in the address book.	P.33
	Is Remote lock disabled?	P.56
	Is the folder set to other than Register sorting set to Folder secrecy?	-
Cannot recognize a microSD memory card.	Is a microSD memory card inserted properly?	P.15
	Is the microSD memory card mounted?	P.51
Cannot operate the camera.	Is there enough power left in the battery pack?	P.8, P.43
	Make sure the INFOBAR A01 does not become too warm.	P.44

For more detailed information, visit the following au troubleshooting sites on the au homepage.

http://www.kddi.com/customer/service/au/trouble/kosho/ index.html

Index

Numeric

001 international call service 30

Α

Absence Memo	30
Accessories	1
Add	42
Add account	39
Add Panel	21
Add/Edit Panel	21
Address Book	
Address Book	33
Cmail	36
Create	35
Advanced Settings	37
Answer	30
Answer Holding	30
Answering memo	32
Answering Memo List	32
App setting	45
Application list	21
Area settings	54
Attaching the battery pack	11
au IC-Card	
au IC-Card	12
Names and functions of parts	7
au one Market	49

C	
Call	33
Call added special number	33
Camera	
Camera4	13
Names and functions of parts	7
Cautions for using the camera4	3
Cautions for using TV (1Seg)4	6
Cell phone etiquette	.1
Character entry screen2	26
Character input2	25
Charging	
Battery pack	8
Charging with the AC adapter	8
Charging with the DC adapter	8
Charging/Incoming indicator	7
Check Settings/Release Settings	
	38

C-mail

C-mail35	5
Cmail35	5

Compose

D

Gmail	41	
PC-mail messages	40	
Configuring the overseas settings		
	53	
Contents Manager	45	
Context menu	24	
Create	35	
Create mail	33	
Create shortcut		
Mail address	34	
Phone number	34	

Data roaming	54
Delete	32
Delete selected	45
Deleting the widgets	21
D-Emoji	27
Display	7
Displaying data	45
Displaying menu	24
Double-tap	16
Drag	16
Drive manner mode	31

E

Earpiece	
Edit and call	33
E-mail	35
E-mail notifications	39
Emoji	27
Erase microSD	51
External connection jack	7

External connection jack cover 7

F		
Facemark27		
FeliCa mark7		
Flick		
Folder		
For overseas use without anxiety		
53		
Forward41		

G

GLOBAL PASSPORT	52
Global passport CDMA	52
Global passport GSM	52
Gmail	40
GREE_MARKET	50

H History......42 Home key7

iida Home 17, 20	
Illustrations and descriptions2	
Incoming History31	
Incoming ring tone51	
Infrared port7	
Initial setup	
Initial setup10	
Initial setup of TV (1Seg)46	

Input method	28
Input mode	2
Inserting au IC-Card	13
Inserting microSD Memory Car	d
	1
Internal antennas	
Issue One Time Password for P	C
Setting	38

	J	
Ja	5 4	

L		
<u> </u>		

Lens	7
Light sensor	7
List Players	45
Lock slider	7
Long-touch	16

М

Appendix/Index

	Mail address34
	Mail Group35
	Making a call at your travel
	destination
≥	Making a call to another country
Appendix/Index	from your travel destination54
ď	Making a call within the same
š	country while overseas
nde	Manage applications50
×	Manner mode31
	Market
	Melody51
60	Menu in the contents screen 45

Menu key7
Microphone7
microSD memory card13
microSD memory card slot7
microSD/phone space 45
Mobile light7
Mouthpiece7
Moving the panels20
Moving the widgets21

Ν

Names and functions of parts 6	
Network operators 54	
Not in address book 39	
Notes on Setting Mail Filter 38	
Notification indicator 18	
Notification/Status panel 19	
Number of calls arrived 56	

	0	
Of	f 32	
Or	າ32	
Or	ne Seg TV 47	
Op	perating the touch panel 16	
Operations on the 1Seg screen		
Op	otion menu 24	
Οı	utgoing History	

	Р
P	C-mail
Pł	none number 33
Pł	10to

PIN code	2
Pinch	16
Playing	45
Playing data	45
Power key	7
PRL settings	53
PRL settings Profile	53
-	
Profile	36

R

S

0
7
5
5
8
1
6
0
6
6
2
4
1
1
1
7

Search key7

Secrecy

Obcrecy	
Cmail	36
Create	35
Security code	2
Select language	10
Send push tone	33
Send/Receive history	
Cmail	36
Create	35
Set main mail address	34
Set main phone number	34
Setting mail filter	37
Silent manner mode	31
Simple Settings	37
Sleep mode	10
Slide	16
Slideshow	45
Slideshow settings	
Sort	45
Speaker	7
Speaker off	32
Speaker on	
Specified period	
Standard manner mode	
Status bar	
Status indicator	
Stop	
Switch grid/list	
Switching orientation	
Switching software keyboards	
Symbol	27

	т	
Та	king photos4	13
Та	ı p 1	6

TapFlow UI	25
Troubleshooting5	57
Turning the power off	9
Turning the power on	9
Turning the power on/off	9

U

Unmount microSD	51
Using an address book	33

V

. 56
. 44
. 17
7

W

Wallpaper	. 51
widget Home 17,	21
Widgets	. 21

For inquiries, call

Customer Service Center

	From fixed-line phones:	<u>K</u> 0077-7-111
For general information and charges (toll free)	From au cell phones: 157 area code not required SLIDING "Dialpad" UPWARD AND TAPPING ZERO WILL CONNECT YOU TO AN OPERATOR AFTER CALLING 157 ON YOUR au CELLPHONE.	
For loss, theft or damage and operation information (toll free)	From fixed-line phones:	K 0077-7-113
	From au cell phones:	113 area code not required
In case above numbers are not available, (toll free)	Except Okinawa: Okinawa:	1 0120-977-033



Cell phone and PHS operators collect and recycle unused telephones, batteries and battery chargers at stores bearing the O logo regardless of brand and manufacturer to protect the environment and reuse valuable resources.

June 2011 Edition

Sales: KDDI CORPORATION • OKINAWA CELLULAR TELEPHONE COMPANY Manufactured by: SHARP CORPORATION