



Basic Manual

LIGHT POOL

Illustrations and
Screenshots
in This Manual

Notes on
Cell Phone Use

Contents

Getting Ready

Making and
Answering Calls

Global Function

Character Input

Phone Book

Mail

Camera

EZweb

EZ News EX

EZ Navi

TV (1Seg)

In Case of Loss of
Your LIGHT POOL

Troubleshooting

Index

Introduction

Thank you for purchasing the LIGHT POOL. Before using your cell phone, be sure to read the cell phone Basic Manual (this PDF manual) to ensure correct usage. After you have finished reading this manual, store this PDF manual and the printed manuals in safe places so you can retrieve them whenever you need them.

Manuals for the cell phone

There are three manuals for the cell phone: the Basic Manual, printed Instruction Manual (Japanese) and full Instruction Manual (Japanese).

● For learning the basics:


Read the cell phone Basic Manual (this manual) or printed cell phone Instruction Manual (Japanese).

● For learning details of each function:

The full Instruction Manual (Japanese) gives detailed instructions on using each function and can be downloaded from the au homepage: <http://www.au.kddi.com/torisetsu/index.html>

To ensure proper usage of the cell phone, be sure to read the Safety Precautions “安全上のご注意” in the Instruction Manual.

The keyword searchable au Online Manual is also available on the au homepage:
<http://www.au.kddi.com/manual/index.html>

- To access from EZweb (free of packet communication charge):  ⇒ *Top Menu/Search* ⇒ *auお客さまサポート* (au Customer Support) ⇒ *オンラインマニュアル* (Online Manual)


Scan this QR code to access the au Online Manual. ▶









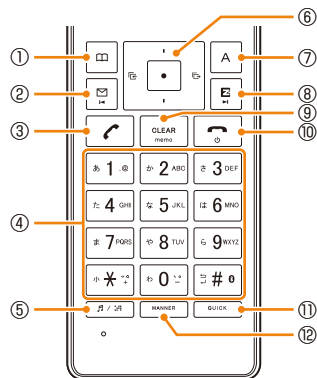


















Illustrations and Screenshots in This Manual

■ Note on Illustrations

The illustrations in this manual may look different from the actual cell phone in shape, color and typeface. The key illustrations are also simplified as shown below.



	Key Illustration		Key Illustration
①		⑦	
②		⑧	
③		⑨	
④	           	⑩	
⑤		⑪	
⑥	  	⑫	

■ Note on Screenshots

The screenshots in this manual are simplified and may look different from the actual cell phone screens.

Notes on Cell Phone Use

Cell Phone Etiquette

The cell phone always emits weak radio waves when power is on.

Use the cell phone in an enjoyable and safe manner without forgetting to be considerate of others around you.

- **Use of cell phones is not allowed in some places.**
 - Do not use the cell phone while you are driving. Doing so is both dangerous and prohibited by law.
 - Using a cell phone in an aircraft is prohibited by law. Set Airplane Mode to *ON* and turn the cell phone power off.
- **Radio waves from cell phones may interfere with medical electrical equipment.**
 - Some people close to you in crowded places such as packed trains may be using a cardiac pacemaker. Turn the cell phone off in such places.
 - Abide by the rules of hospitals and other medical institutions where it is forbidden to use or carry cell phones.
- **Be considerate of where you use the cell phone and how loudly you talk.**
 - Do not make calls in theaters, museums, libraries, and other similar places. Turn power off or turn on manner mode not to disturb others around you by ring tones.
 - Do not use the cell phone on a street where you might interrupt the flow of pedestrians.
 - Move to areas where you will not inconvenience others on trains or in hotel lobbies.
 - Refrain from talking in a loud voice.

- Obtain the permission of other people before you take their photos with the cell phone's camera.
- Do not record information with the cell phone's camera in bookstores and other locations where taking photos is not permitted.

Do Not Use the Cell Phone While Driving!

Turn off your cell phone or put it in Drive Mode while driving.




Do not use the cell phone while driving a car/motorcycle or riding a bicycle. It may result in a traffic accident. Using a cell phone while driving is prohibited by law. Using a cell phone while riding a bicycle may also be punishable by law.

Prohibited!

- Looking at a cell phone display
- Talking on a cell phone while holding it

Drive Mode

In Drive Mode, a Japanese message meaning "I'm driving now, so I can't answer your call." is played when a call is received, and asks the caller to leave a message on the answer memo.

When the standby screen is displayed, press  use  to select *Drive* and then press  (Set).

Disaster Message Board Service

When a large scale disaster occurs, you can register your safety information from EZweb. The registered information can be referred from anywhere in Japan from EZweb or Internet.


Registering safety information

- When a large scale disaster occurs, from an au phone, you can register your safety information (i.e. your condition and comments) to the 災害用伝言板 (Disaster Message Board) created on the EZweb.
- After registration of your safety information, e-mail is sent to your family or acquaintances you have previously designated to notify that your safety information has been uploaded to the 災害用伝言板 (Disaster Message Board).

Inquiring for safety information

- You can inquire for safety information of a person by entering his/her phone number from EZweb or Internet.*
* To inquire from other carriers' cell phone, a PHS or PC, access "<http://dengon.ezweb.ne.jp/>".

Access	 ⇒ Top Menu/Search ⇒ 災害用伝言板他 ⇒ 災害用伝言板 (Disaster Message Board)
	http://dengon.ezweb.ne.jp/

- Registered information is stored until the service set up for the disaster ends.
- The maximum available number of registrations is 10 per phone number. When the number of registrations exceeds 10, the oldest one is overwritten.
- The demonstration of this service can be referred to anytime by pressing  ⇒ Top Menu/Search ⇒ auお客さまサポート (au Customer Support) ⇒ 調べる (Search) ⇒ 災害用伝言板 (デモ版) (Disaster Message Board (Demo Version)).
- To view the Disaster Message Board in English, select *English* from the top menu of the Disaster Message Board.

Contents

Introduction

Illustrations and Screenshots in This Manual 1

Notes on Cell Phone Use 2

Cell Phone Etiquette	2
Do Not Use the Cell Phone While Driving!	2
Disaster Message Board Service	3

Contents 4

Getting Ready 6

Checking the Contents of the Box	6
Names of Parts	7
Viewing Information indicator	8
Charging the Battery Pack	8
Learning the Basics	9
Turning On Power	10
Switching the Display Language to English	10
Initial Setup of E-mail and EZweb	10
Checking Your Phone Number and E-mail Address ...	10
Display Indicators	11
Using Main Menu	12
Changing Your E-mail Address	13
Security Code and Passwords	14

Making and Answering Calls 15

Making a Call	15
Making an International Call	15
Answering a Call	16
Returning a Call (Outgoing History/Incoming History)...	16
One-ring Calls	16
Adjusting the Earpiece Volume during a Call	17
Turning On Manner Mode	17
Changing the Incoming Ring Tone	17
Adjusting the Incoming Ring Tone Volume	18
Turning On the Answer Memo	18

Global Function 20

Setting the Area	20
Obtaining the Latest PRL (Preferred Roaming List)...	20
Calling Japan from Overseas	21

Character Input 22

Character Entry Modes	22
Entering Alphanumeric Characters	22
Entering E-mail Addresses	23
Entering Pictograms	24

Phone Book 25

Saving a Phone Book Entry	25
Dialing from the Phone Book	25
Editing Phone Book Entries	25
Saving a Phone Number from the Incoming or Outgoing History	26



Mail	27	EZ Navi	39
Using E-mail	27	Passenger Seat Navi for People	
Creating and Sending E-mail Messages	27	in the Passenger Seat to Check the Route	39
Reading Received E-mail Messages	28	Security Navi to Check Where Your Kids Are	39
Reading an E-mail Message		EZ Navi Walk for When You Go Out	40
with an Attached Photo or Movie	28	Evacuate Navi to Guide You Home or to Nearby	
Replying to Received E-mail Messages	28	Evacuation Areas during Disasters	41
Rejecting Spam	29		
Using C-mail	30	TV (1Seg)	42
Creating and Sending C-mail Messages	30	Initial Setup of au Media Tuner	42
Reading Received C-mail Messages	30	Watching TV (1Seg)	43
		Basic Operations	43
		Exiting the au Media Tuner	43
Camera	31	In Case of Loss of Your LIGHT POOL	44
Photo Taking Tips	31	Setting Conditions for Activating the Remote Ctrl Lock...	44
About Photo Modes	31	Remotely Activating the Remote Ctrl Lock	
Taking a Photo	32	on Your LIGHT POOL	44
Viewing Photos	32	Activating the Remote Ctrl Lock	
		by the Security Lock Service	45
EZweb	33	Troubleshooting	46
Accessing Sites	34	Index	48
Bookmarking Frequently Accessed Pages	35	Declaration of Conformity for CDMA TSX05	53
Viewing Bookmarked Pages	35		
Checking Charges	36		
Downloading Chaku-Uta-Full®/Chaku-Uta®	36		
EZ News EX	37		
Basic Operations	37		
Setting EZ News EX	37		

Getting Ready

Checking the Contents of the Box

The box contains the cell phone and accessories.

 - Cell phone
- Battery pack

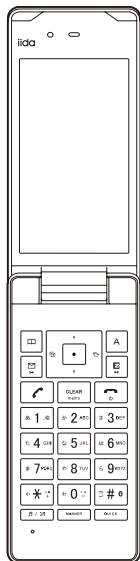


- Instruction Manual (Japanese)
- Warranty (Japanese)
- Safety Precautions (Japanese)
- Global Passport Owner's Guide (Japanese)
- Osaifu-Keitai® Guide (Japanese)
- JIBUN BANK Launcher Operation Guide (Japanese)

- Purchase a specified AC adapter, microSD memory card, desktop holder, earphone conversion adapter, stereo earphones or USB cable as required as they are not included in the box (sold separately).


Names of Parts

Open Position

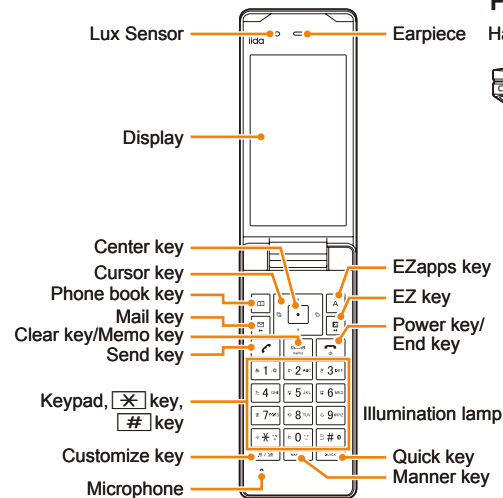

Closed Position

 From the Sides




External connection jack cover




Power terminal

External connection jack

From the Front

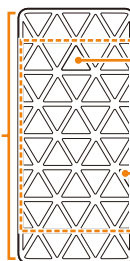


From the Back

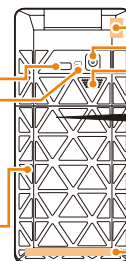

* Do not remove this card unnecessarily as your phone number is recorded on it.

Viewing Information indicator

 Information indicator notifies you of missed call, mail reception, etc. by blinking. Indicator color varies by information.



Information/
Charge
indicator

Indicator color	Information
Red	Missed call exists
Blue	Email exists/Email exists in the Center
Yellow	C-mail exists/Emergency earthquake flash report
Light blue	Updated program/Program information
Green	Other information

Illumination lamp

When you turn the handset power on/off, receive a voice call or mail, etc. the illumination lamp on the handset cover turns on in various patterns.

Long Time Play

By pressing **[P/PA]**, you can enjoy the Long time play in which the illumination lamp turns on working with music play. Playable music types are original data and Chaku-Uta® and Sound (SMAF) data in Data Folder.


In the Long time play, the operations of **[Exit]** (Exit), **[CLEAR MENU]** (Back), **[Volume]** (Volume adjustment) are available.

The standby time may be reduced by the Long time play. It is recommended to use the function while charging.

Charging the Battery Pack

The battery pack is not fully charged at the time of purchase. Be sure to charge the battery pack before using the cell phone for the first time.

- An AC adapter is not included. Purchase a specified AC adapter (sold separately).

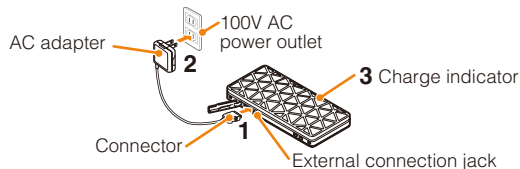

➔ Connect a specified AC adapter to the cell phone with the battery pack attached.

- Open the cover of the external connection jack. Check the shape of the connector of the AC adapter, and plug it straight into the external connection jack.

➔ Unfold the power plug of the AC adapter and plug it into a 100 V AC power outlet.

➔ Confirm that the charge indicator lights.

- Charging: The charge indicator lights.
- Charging finished: The charge indicator goes out.

- Be sure to close the cover of the external connection jack when charging is finished.
- Do not pull or twist the cover of the external connection jack forcibly.
- Be sure to use the common AC adapter 02 (sold separately) when charging overseas.

Learning the Basics



Key Assignments


Key Assignments:

- [Left Arrow] : Display Incoming History.
- [Right Arrow] : Display the ticker field and info pane.
- [Up Arrow] : Display Notification window/Shortcut menu.
- [Down Arrow] : Display Outgoing History.
- [Center Arrow] : Display Main menu.
- [A] : Display EZapps menu.
- [E] : Display EZ Service menu.
- [CLEAR memo] : Set/cancel Answer memo. Delete characters. Cancel operation.
- [Phone Icon] : Make/answer calls.
- [Turn Power On/Off Icon] : Turn power on/off. End call/communication. Cancel operation.
- [0] ~ [9] [X] [#] : Input phone numbers and characters.
- [M / PR] : Activate function assigned to M59 *Customize Key*. Set to *Long Time Play* at the time of purchase. Hold down for at least one second to set/cancel Privacy Filter.
- [QUICK] : Display QuickAccess menu.
- [MANNER] : Set/cancel manner mode.


• If you lose track of where you are or if you make a mistake, press [CLEAR memo] to return to the previous screen. Return to the standby screen by holding down [Turn Power On/Off Icon] for at least one second.

Hiding/Redisplaying the Notification Window

When the Notification window is displayed on the standby screen, you can temporarily hide it by pressing  (Back) and then display the Main menu by pressing .


To redisplay the hidden Notification window, press  when the standby screen is displayed.

Notification window

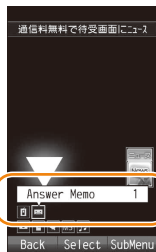


Turning On Power

 Hold down  for at least one second.

- You cannot receive or make calls if  (out of range indicator) is displayed.

Turning Off Power

When the standby screen is displayed, hold down  for at least one second.

Switching the Display Language to English

You can switch the display language for function names and other items to English.

When the standby screen is displayed, press .

- ➔ Use  to select 機能 (Functions) and then press  (選択 [Select]).

- ➔ Use  to select 画面表示 (Screen Display) and then press  (選択 [Select]).

- ➔ Use  to select Set Language and then press  (選択 [Select]).

- ➔ Use  to select English and then press  (Set).

Initial Setup of E-mail and EZweb

To use e-mail and EZweb, you need to apply for an EZweb subscription. If you did not apply for an EZweb subscription at the time of purchase, contact an au shop or the au Customer Service Center.

Also, before use, you need to configure initial settings. Your e-mail address is assigned automatically in the initial setup.


 
When the standby screen is displayed, press .

- ➔ Press  (OK).

After a short while, your e-mail address is displayed.

- ➔ Press  (OK).

The initial settings are complete.

- You can also configure initial settings by pressing  or .


Checking Your Phone Number and E-mail Address

When the standby screen is displayed, press  and then .

Display Indicators

Display indicators inform you of mail arrival, current settings, etc.

Display

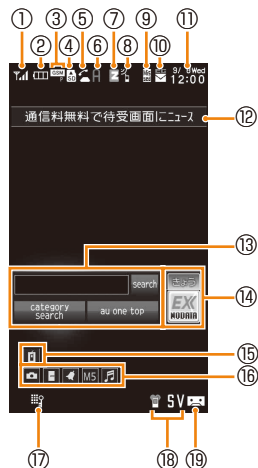

Indicator	Description	Indicator	Description
①	Signal strength	⑨	Missed calls
②	Battery level	⑩	New or unread e-mail/C-mail
③	Overseas (CDMA)/(GSM) mode set	⑪	Current date and time
	Packet communication available	⑫	Ticker field
④	A microSD memory card (commercially available) inserted	⑬	Search window
⑤	During a call	⑭	Info pane
	au Media Tuner activated	⑮	Notification icon
⑥	EZapps activated	⑯	Shortcut menu
⑦	Connecting to EZweb	⑰	Auto Lock activated
⑧	Receiving EZ News EX information	⑱	Manner mode set
	Privacy Filter set		Answer memo or manner mode set




- The date and time are set automatically. However, auto time adjustment is invalid when *Area Setting* is set to overseas mode. Set the date and time manually under M551 *Auto Time Adj.*

Using Main Menu

You can access various functions from the Main menu.


Each Main menu pattern has a different set of items.

Black is set at the time of purchase.

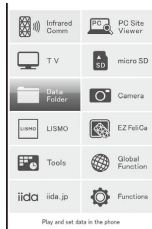Black	Khaki	Pink
		
Infrared Comm	Infrared Comm	Infrared Comm
LISMO	LISMO	PC Site Viewer
microSD	microSD	TV
TV	TV	microSD
Data Folder	Data Folder	Data Folder
Camera	Camera	Camera
PC Site Viewer	PC Site Viewer	LISMO
Tools	Tools	EZ FeliCa
EZ FeliCa	EZ FeliCa	Tools
Global Function	Global Function	Global Function
iida.jp	iida.jp	iida.jp
Functions	Functions	Functions

Changing Your E-mail Address

You can change the account name of your e-mail address.

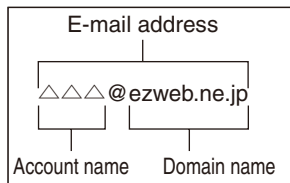

When the standby screen is displayed, press ☐.

➔ Use ☐ to select *E-mail Setup* and then press ☐ (Select).

➔ Use ☐ to select *Other* and then press ☐ (Select).

The cell phone connects to the server.

➔ Use ☐ to select *Eメールアドレスの変更* (Change E-mail Address) and then press ☐ (Select).

➔ Use ☐ to select the entry box, press ☐ (Input), enter your security code, and then press ☐ (OK).

- Your security code is the four-digit number you wrote on your subscription form.
- If the security code is incorrectly entered three times consecutively during a single day, the e-mail address change operation will be disabled until the next day.

➔ Use ☐ to select *送信* (Send) and then press ☐ (Select).

➔ Use ☐ to select *承諾する* (Accept) and then press ☐ (Select).

➔ Use ☐ to select the entry box, press ☐ (Input), enter an e-mail address using single-byte alphanumeric characters, and then press ☐ (OK).

- For details on entering e-mail addresses, see page 25.

➔ Use ☐ to select *送信* (Send) and then press ☐ (Select).

➔ Use ☐ to select *OK*, press ☐ (Select) and then ☐ (OK).

- Check that the e-mail address has been updated before pressing ☐ (OK).

- Your e-mail address cannot be changed if the new address you enter in the above procedure is already being used. In this case, enter a different e-mail address.

Security Code and Passwords

You can use a security code and other passwords described below.

Take care not to forget your security code and passwords, because they are required for performing various operations and using subscription services.

Security Code

Usage Example	①Using the Answering Service (Voice Mail) and Call Transfer remotely from a fixed-line phone ②Making inquiries, applications, and changes while using au Customer Service Center voice guidance, au web pages, and EZweb ③Changing the settings of <i>Mail Filter</i> or <i>Other</i> under E-mail Setup
Initial Setting	The four-digit number you wrote on your subscription form

Lock No.

Usage Example	Changing various settings of the cell phone
Initial Setting	1234

EZ Password

Usage Example	Subscribing or canceling subscriptions to EZweb fee-based contents
Initial Setting	The four-digit number you wrote on your subscription form

Premium EZ Password

Usage Example	①Subscribing or canceling subscriptions to EZweb fee-based contents paid by まとめてau 支払い (au Collective Payment Service) ②Purchasing products from EZweb sites using まとめてau 支払い (au Collective Payment Service)
Initial Setting	The four-digit number you wrote on your subscription form

Making and Answering Calls

Making a Call

When the standby screen is displayed, use to to enter a phone number.

- When calling to a fixed-line phone, you also need to enter the area code.

➔ Press .

- To end the call, press .

- After you enter a phone number, you can add 184 or 186 to the phone number as follows:
 - ➔ Press (Call).
 - ➔ Use to select *Add Special No.* and then press (OK).
 - ➔ Use to select *184* or *186* and then press (Add).
- 184:** When you do not want to inform the other party of your phone number.
- 186:** When you want to inform the other party of your phone number.


Making an International Call

001 International Call Service

Available without any additional application

Example: To call 212-123-△△△△ in the USA

Enter the access code, a country code, area code and phone number, and then press .

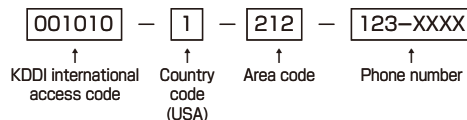

- International call charges are billed together with monthly local call charges.
- For more information on 001 International Call Service, dial either of the following numbers:
From au cell phones (toll-free):
157 (area code not required)
From fixed-line phones (toll-free):
0077-7-111
(Open 9:00 to 20:00 everyday)

Answering a Call

To answer a call, press .

- To end the call, press .

Display When a Call is Received

The phone number of the caller appears.



If the caller's phone number and name are in the phone book, the name is also displayed.

When the phone number of the caller is not displayed, one of the following indicators may appear.

Indicator	Meaning
<i>ID Unsent</i>	The caller did not send a Caller ID.
<i>Payphone</i>	The call is from a pay phone.
<i>Not Support</i>	The call is from a phone that does not support Caller ID.

Missed Call Notification

If you did not answer a call,  and *Missed Call* are displayed to let you know that you missed a call.

To check the caller's phone number, use  to select *Missed Call* and then press  (Select). You can then return the call (see the procedure on the right).

Returning a Call (Outgoing History/Incoming History)

Example: Returning a call to a phone number in the incoming history

When the standby screen is displayed, press .

- Press  while the standby screen is displayed to display the Outgoing History screen.

➔ Use  to select the phone number you want to call and then press  (Detail).

- Press  to display the Outgoing History screen.

➔ Press .


- The cell phone can store up to 50 phone numbers in each of the incoming and outgoing history.

One-ring Calls

What is a One-ring Call?



A one-ring call is a call from an unknown caller that only rings once, causing it to be stored in the incoming history. One-ring calls are often used to get you to return the call, which will connect you to a dating service or some other service that charges you at high rates.

One-ring Indicator

 (Red) indicator on the Incoming History screen indicates you have received a one-ring call (a call rang for three seconds or shorter). Be careful when you return a call to an unknown caller.

Adjusting the Earpiece Volume during a Call



During a call, use .

- : Increases the volume.
- : Decreases the volume.


➔ Press  (OK).



Turning On Manner Mode

When the standby screen is displayed, hold down  for at least one second.

This turns on manner mode, and displays  on the standby screen. This also turns on Answer memo, which is indicated by  on the standby screen.

Turning Off Manner Mode

When the standby screen is displayed, hold down  for at least one second.



Turning off manner mode causes  to disappear from the standby screen. Answer memo is also turned off, which is indicated by  disappearing from the standby screen.


- Even in manner mode, the cell phone emits an autofocus lock sound and shutter sound when you take a photo.



Changing the Incoming Ring Tone

When the standby screen is displayed, press .

➔ Use  to select *Functions* and then press  (Select).

➔ Use  to select *Sound/Vib/Lamp* and then press  (Select).

➔ Use  to select *Incoming Setup* and then press  (Select).

➔ Use  to select *Incoming Call* and then press  (Select).

➔ Use  to select  (Ringtone) and then press  (Select).

➔ Use  to select *Original* and then press  (Select).

➔ Use  to select a ring tone and then press  (Set).















The incoming ring tone is set.

- If you press  (Play), the tone plays.

➔ Press  (OK).

Adjusting the Incoming Ring Tone Volume

When the standby screen is displayed, press .


- ➔ Use  to select *Functions* and then press  (Select).
- ➔ Use  to select *Sound/Vib/Lamp* and then press  (Select).
- ➔ Use  to select *Incoming Setup* and then press  (Select).
- ➔ Use  to select *Incoming Call* and then press  (Select).
- ➔ Use  to select  (Ringtone Volume) and then press  (Select).
- ➔ Use  to adjust the volume and then press  (Set).
 - Each press of  changes the volume one step.

STEP ↑	The ring tone volume gradually increases.
STEP ↓	The ring tone volume gradually decreases.
Level5 ↑ Level3 ↓ Level1	The ring tone sounds at the set volume.
OFF	
	The ring tone does not sound.



- ➔ Press  (OK).

Turning On the Answer Memo

When the standby screen is displayed, hold down  for at least one second.

 is displayed on the standby screen.




 

Turning Off the Answer Memo

When the standby screen is displayed, hold down  for at least one second. The answer memo is turned off and  disappears from the standby screen.

- The cell phone can record a maximum of ten messages, each up to 60 seconds (up to 20 seconds in Overseas (GSM) mode) long.
- Answer memo is a function that automatically answers calls and allows callers to record messages. Use the Answering Service (Voice Mail) when your phone is turned off or when you are in a location where a signal cannot be received.













Playing a Message

If a message is recorded, *Answer Memo* appears on the standby screen.

- ➔ Use  to select *Answer Memo* and then press  (Select).
- ➔ Use  to select the message you want to play and then press  (Play).
 - To stop playing the message, press  (Stop).

■ Deleting a Message

When the standby screen is displayed, press .

- ➔ Use  to select *Answer Memo* and then press  (Select).
- ➔ Use  to select *Answer Memo List* and then press  (Select).
- ➔ Use  to select the message you want to delete and then press  (SubMenu).
- ➔ Use  to select *Delete* and then press  (OK).
- ➔ Use  to select *Delete One* and then press  (OK).
- ➔ Use  to select *YES* and then press  (OK).










Global Function

The cell phone supports Global Passport CDMA/GSM services. You can use your cell phone overseas without any additional application.

Setting the Area

Example: Setting to Overseas (Auto) mode

When the standby screen is displayed, press .

- ➔ **Use  to select *Global Function* and then press  (Select).**
Precautions are displayed.
- ➔ **Check the precautions and then press  (OK).**
- ➔ **Use  to select *Area Setting* and then press  (Select).**
- ➔ **Use  to select *Overseas (Auto)* and then press  (Select).**
- ➔ **Use  to select *YES* and then press  (OK).**

- Some functions are not available when *Area Setting* is not set to *Japan*.

Obtaining the Latest PRL (Preferred Roaming List)



Manually update and set the PRL (preferred roaming list) before traveling abroad.

When the standby screen is displayed, press .

- ➔ **Use  to select *Global Function* and then press  (Select).**
Precautions are displayed.

- ➔ **Check the precautions and then press  (OK).**

- ➔ **Use  to select *PRL Setting* and then press  (Select).**

- ➔ **Use  to select *PRL Manual Update* and then press  (Select).**
The cell phone connects to the server.

- ➔ **Use  to select *PRLダウンロード* (Download PRL) and then press  (ダウンロード [Download]).**

Follow the on-screen instructions to download the latest PRL.

- The PRL (preferred roaming list) is the area information of overseas carriers offering international roaming service in partnership with KDDI (au).
- To obtain (download) the PRL, you need to subscribe to EZweb and make initial settings (see page 10) while in Japan.

Calling Japan from Overseas

When the standby screen is displayed, use  to  to enter a phone number.

➔ Press  (Call).

➔ Use  to select *Voice Call* and then press  (OK).


➔ Use  to select *Call to Japan* and then press  (OK).

➔ Press  (Call).

- When you make an international call from Japan to a Global Passport CDMA/GSM-compatible cell phone, you can do it in the same way as making domestic calls within Japan.

Character Input

Character Entry Modes

When a character entry screen is displayed, you can select a character entry mode if you press  (Char.).

Menu Items

漢 : Kanji conversion mode

A : Double-byte alphanumeric mode


AB : Single-byte alphanumeric mode

1 : Double-byte number mode



12 : Single-byte number mode

 







 
 


力 : Double-byte katakana mode


力力 : Single-byte katakana mode

- Each time you press , the character entry mode changes in following order: Alphanumeric → Number → Katakana → Kanji conversion → Alphanumeric...


Entering Alphanumeric Characters

You can use the keys  to  to enter characters. More than one character is assigned to each key. The following table shows the key assignment for entering characters.




	Number of Times to Press the Key											
Key	1	2	3	4	5	6	7	8	9	10	11	12
	.	@	—	_	/	:	~	?	,	'	!	1
	a	b	c	A	B	C	2					
	d	e	f	D	E	F	3					
	g	h	i	G	H	I	4					
	j	k	l	J	K	L	5					
	m	n	o	M	N	O	6					
	p	q	r	s	P	Q	R	S	7			
	t	u	v	T	U	V	8					
	w	x	y	z	W	X	Y	Z	9			
	0	Inputs symbols										
	Inputs symbols (switches an unconfirmed character between uppercase and lowercase).											
	Adds a line break and displays characters in the opposite order.											

When you change your e-mail address, you cannot use the characters in  for the account name (part of the address to the left of @).

■ Entering Two or More Characters Assigned to the Same Key

After you enter the first character, press  and then enter the next character.

■ Deleting Characters

To delete one character at a time, move the cursor to the character you want to delete and then press . To delete all characters to the right of the cursor, hold down  for at least one second. If there are no characters to the right of the cursor, holding down  will delete all the characters.

■ Starting a New Line

Press .

- Certain functions such as C-mail do not support entering new lines.

Entering E-mail Addresses





 
 



■ E-mail Address Compatible Characters

- Before you enter an e-mail address, switch to the single-byte alphanumeric mode.
- When changing your e-mail address, you can enter up to 30 single-byte alphanumeric and symbol characters for the account name (part to the left of @). Note the following:
 - Uppercase characters cannot be used.
 - Period (.) or zero (0) cannot be used as the first character.

■ How to Enter E-mail Addresses

Example: Entering "taro.23@toshiba.co.jp"










Enter "taro.23".

- t : Press  once.
- a : Press  once.
- r : Press  three times.
- o : Press  three times.
- . : Press  once.
- 2 : Press  once and then .
- 3 : Press  once and then .

➔ Enter "@".

- @ : Press  twice.

➔ Enter "toshiba" and then press (OK).

- t : Press  once.
- o : Press  three times.
- s : Press  four times.
- h : Press  twice and then .
- i : Press  three times.
- b : Press  twice and then .
- a : Press  once.

➔ Press (SubMenu).

➔ Use to select *Phrase* and then press (OK).

➔ Use to select *Internet* and then press (Select).

➔ Use to select *.co.jp* and then press (Select).

"co.jp" is entered.

Entering Pictograms



When a character entry screen is displayed, press




 (Char.).

➔ Press  (List).

➔ Use  to select   and then press  (Select).

➔ Use  to select the pictogram you want to enter and then press  (OK).

- You can enter pictograms consecutively if you press  (Repeat) instead of  (OK).

- Each time you press  in the character entry screen, the character entry mode changes in following order: Pictograms → Decoration-Emojis → Symbols → Facemarks...
- You can switch categories of pictograms, decoration-emojis or face marks by pressing  /  on each selection screen.




Phone Book


Saving a Phone Book Entry

When the standby screen is displayed, hold down  for at least one second.



➔ Use  to select  [*Name*] and then press  (Select).


➔ Enter a name and then press  (OK).
The  [*Reading*] for the name is entered automatically.

➔ Use  to select  [*Phone No. 1*] and then press  (Select).

➔ Enter a phone number and then press  (OK).

- If the phone number is for a fixed-line phone, enter the phone number starting with the area code.

➔ Use  to select a phone number type and then press  (Select).

- Follow the next step to enter an e-mail address. If you do not want to enter an e-mail address, press  (Reg).

➔ Use  to select  [*E-mail Address1*] and then press  (Select).

➔ Enter an e-mail address and then press  (OK).



➔ Use  to select an e-mail address type and then press  (Select).

➔ Press  (Reg).

- The phone book can store up to 1,000 entries.
- The cell phone automatically saves an entry to the lowest available memory number from 000 to 999.
- You can save five phone numbers and five e-mail addresses for each phone book entry.
- You can also assign a group No., and enter birthday, address, and other information.

Dialing from the Phone Book

When the standby screen is displayed, press .

➔ Use  to select the entry containing the phone number you want to dial and then press  (Detail).

➔ Use  to select the phone number and then press  (Select).

➔ Use  to select *Voice Call* and then press  (OK).

Editing Phone Book Entries

When the standby screen is displayed, press .

➔ Select an entry and press  (Detail).



➔ Press  (Edit).

➔ Edit the contents and then press  (Reg).

➔ Use  to select *Overwrite* and then press  (OK).

Saving a Phone Number from the Incoming or Outgoing History

Example: Saving a phone number from the incoming history to the phone book

When the standby screen is displayed, press  and use  to select the phone number you want to save.

➔ Press  (SubMenu).

➔ Use  to select *Reg to Adrs Book* and then press  (OK).

➔ Use  to select *Register New* and then press  (Select).

➔ Use  to select a phone number type and then press  (Select).

- For details on saving a phone book entry, see page 25.

Using E-mail

To use e-mail, you need to apply for an EZweb subscription. If you did not apply for an EZweb subscription at the time of purchase, contact an au shop or the au Customer Service Center. Also, before use, you need to configure initial settings.



You can send and receive e-mail with other cell phones that support e-mail, and with PCs. In addition to text messages of up to 5,000 double-byte (or 10,000 single-byte) characters, you can also send photos and movies by e-mail.

- The packet communication charge for sending and receiving e-mail applies to the amount of data sent and received.
- You can send an e-mail message to up to 30 different addresses at one time.
- You can send up to 1,000 e-mail messages per day (a message with multiple recipients is counted as more than one message).
- Sending and receiving e-mail messages that include attachment data may take a while.

Creating and Sending E-mail Messages

When the standby screen is displayed, press .

➔ Use  to select *Create New* and then press  (Select).


➔ Use  to select *Address* and then press  (Select) twice.


➔ Use  to select *Address Book* and then press  (Select).

➔ Use  to select a phone book entry and then press  (Detail).

➔ Use  to select an address and then press  (Select).

➔ Press  (OK).

➔ Use  to select *Subject* and then press  (Select).

➔ Enter a subject and then press  (OK).

- You cannot enter single-byte katakana characters or a new line in a subject.

➔ Use  to select *Text* and then press  (Select).



➔ Enter text and then press  (OK).

- You cannot enter single-byte katakana characters.



➔ Press  ( Send).



Reading Received E-mail Messages

When you receive an e-mail message, *E-mail* appears on the standby screen.




➔ Use  to select *E-mail* and then press  (Select).

➔ Press  (Select).

- : Indicates a read message.
- : Indicates an unread message.

➔ Use  to select the new message and then press  (Select).

Reading an E-mail Message from the E-mail Menu



When the standby screen is displayed, press  to display the E-mail menu, use  to select *Inbox* and then press  (Select).

For subsequent operations, see "Reading Received E-mail Messages" above.

Reading an E-mail Message with an Attached Photo or Movie


Example: Viewing an attached photo

Display the e-mail message that has an attached photo (above).

➔ Use  to select the file name and then press  (Select).

➔ Use  to select the file name and then press  (Receive).

➔ Press  (Play).

- Selecting the file name or pressing  (Receive) may be unnecessary for some files to be displayed, depending on the file size.

Replying to Received E-mail Messages

When the standby screen is displayed, press .

➔ Use  to select *Inbox* and then press  (Select).

➔ Press  (Select).

➔ Use  to select the message you want to reply to and then press  (Select).

➔ Press  (Reply).

"Re:" is prefixed to the subject, and the text of the message is quoted.

➔ Refer to "Creating and Sending E-mail Messages" (page 27) for subsequent operations.














Rejecting Spam

Setting mail filters to reject spam is recommended.
The サポート設定 (Supportive Settings) helps you to set mail filters easily by answering questions that appear on the screen.

Setting Mail Filters

Example: Connecting to サポート設定 (Supportive Settings)

When the standby screen is displayed, press .

- ➔ Use  to select *E-mail Setup* and then press  (Select).
- ➔ Use  to select *Mail Filter* and then press  (Select).
- ➔ Use  to select *次へ (Next)* and then press  (Select).
- ➔ Use  to select the input box and then press  (Input).
- ➔ Enter your security code and then press  (OK).
- ➔ Use  to select *送信 (Send)* and then press  (Select).
- ➔ Use  to select *サポート設定 (Supportive Settings)* and then press  (Select).

カンタン設定 (Simple Settings)

サポート設定 (Supportive Settings)	Set the filter by answering questions This is recommended for users who want to configure settings while confirming conditions.
フィルターレベル (高) Filter Level (High)	Shut out all mail from PCs This is recommended for users who only want to send mail to and receive mail from cell phones.
フィルターレベル (中) Filter Level (Medium)	Block spoof e-mail and mail from specific addresses This is recommended for users bothered by certain senders or spam mail.
フィルターレベル (低) Filter Level (Low)	Block spoof e-mail This is the minimum level recommended for all users.

- You can also prevent spam by changing your e-mail address. For details on changing your e-mail address, see page 13.

Using C-mail

C-mail is a service that uses phone numbers as addresses to exchange messages between au cell phones that support C-mail. A C-mail message can contain up to 50 double-byte (or 100 single-byte) characters.









- The C-mail send charge applies when sending C-mail.






C-mail Safety Block

C-mail safety block is a function that allows you to reject C-mails that include URLs (<http://△△△>, <https://△△△>) or phone numbers in the C-mail message text. C-mail safety block is valid by default. Cancel the setting if you want to receive C-mails that include URLs and phone numbers in the message text.

Creating and Sending C-mail Messages








When the standby screen is displayed, hold down  for at least one second.

- ➔ Use  to select *Create New* and then press  (Select).
- ➔ Enter text and then press  (OK).
- ➔ Use  to select  [Address] and then press  (Edit).
- ➔ Use  to select *Quote Adrs Book* and then press  (OK).




- ➔ Use  to select a phone book entry and then press  (Detail).
- ➔ Use  to select a phone number and then press  (Select).
- ➔ Press  (Send).

Reading Received C-mail Messages

When you receive a C-mail message, *C-mail* appears on the standby screen.

- ➔ Use  to select *C-mail* and then press  (Select).
- ➔ Press  (Select).
 - : Indicates a read message.
 - : Indicates an unread message.
- ➔ Use  to select the new message and then press  (View).

Reading a C-mail Message from the C-mail Menu


When the standby screen is displayed, hold down  for at least one second to display the C-mail menu, use  to select *Inbox* and then press  (Select). For subsequent operations, see "Reading Received C-mail Messages" above.

Camera


Your cell phone has a CMOS camera with 8.08 effective megapixels for shooting photos and movies. You can use the self-timer and autofocus.

Shot images can be used for the standby screen, and attached to e-mail messages.


Photo Taking Tips

When taking photos, position the cell phone so that  is not displayed upside down or inclined. Frame the subject within the display and hold the cell phone steady with both hands to avoid shaking.

Portrait Position

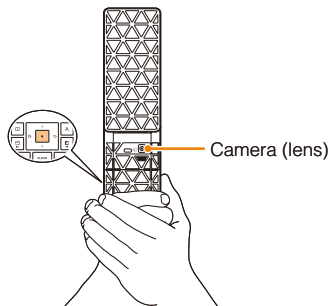

Landscape Position

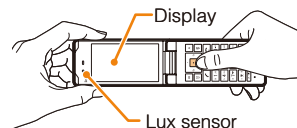

About Photo Modes

The following modes are available for taking photos.

W.paper (F.Wide) is set for W.paper mode and 8M is set for DSC mode at the time of purchase.

Mode	Photo Size	Storage Location
W.paper mode	W.paper (Normal)	The <i>Photo Folder</i> in the Data Folder of the cell phone
	W.paper (Wide)	
	W.paper (F.Wide)	
DSC mode	0.3M	The <i>DSC Folder</i> in the Data Folder of a microSD memory card*
	1M	
	2M	
	Full HD	
	3M	
	5M	
	6M(Full Wide)	
	8M	

* When a microSD memory card (commercially available) is not inserted, the files are saved to the Data Folder of the cell phone.


- Take care not to cover the lens and lux sensor with a strap or finger.

Taking a Photo

When the standby screen is displayed, press .



➔ Use  to select *Camera* and then press  (Select).

➔ Use  to select *Photo (W.paper)/Photo (DSC)* and then press  (Select).
The monitor screen appears.

➔ Point the AF frame at the subject and then press  (Shoot).


The camera focuses automatically and the shutter clicks.
The preview screen is displayed.

Using to Take a Photo

Point the AF frame at the subject, press  to focus, and then press  (Shoot) to release the shutter.

Saving a Photo

Press  (Save) on the preview screen.

- If you do not want to save the photo, press  in the preview screen.

Viewing Photos

When the standby screen is displayed, press .

➔ Use  to select *Data Folder* and then press  (Select).

➔ Use  to select *Photo Folder* and then press  (Select).

➔ Use  to select a folder and then press  (Select).

➔ Use  to select the photo you want to view and then press  (Select).

EZweb is an information service that allows you to enjoy browsing the Internet on your cell phone. You can also download Chaku-Uta-Full®, Chaku-Uta®, news, and other contents from web pages.

To use EZweb, you need to apply for an EZweb subscription. If you did not apply for an EZweb subscription at the time of purchase, contact an au shop or the au Customer Service Center. Also, before use, you need to configure initial settings.

- The packet communication charge for EZweb connection applies to the amount of data sent and received, not to the length of time connected.
- In addition to communication charges, some sites charge for providing information.

Accessing Sites

■ Viewing the au one Top

You can access EZweb from the au one Top. A variety of useful and fun sites are available on EZweb.

When the standby screen is displayed, press , use  to select **EZweb**, use  to select **Top Menu/Search** and then press  (Select).



キーワード検索機能 (Search by Keyword)
Provides a search function for searching for information by keyword.

カテゴリ(メニューリスト) (Category (Menu List))
Provides a list of various content provider sites.

トップニュース (Top News)
Provides automatic updates of the latest news.

最新オススメ情報 (Latest News)
Introduces up-to-date information concerning entertainment, daily life, etc.

天気・乗換・テレビ・占い (Weather, Transportation, TV & Horoscope)
Provides direct access to these au one services.

買う (Shopping & Auctions)
Provides a list of shopping and auction sites available from your cell phone.

知る (Tips & Tools)
Provides information on sports and stock prices, as well as useful tools such as maps and dictionaries.

楽しむ (Hobbies & Culture)
Provides the latest information, such as games, music, books, hobbies and entertainment.

暮らす (Lifestyle)
Provides travel, restaurant and other lifestyle-oriented information.

使える (Useful)
Provides interesting and useful information that you can use for au one mail (webmail).

au style
Introduces information and sites that au recommends.

とくする情報 (Valuable Information)
Presents gifts and push information to the EZweb subscriber for free.



auお客さまサポート (au Customer Support)
Provides information about charges, various applications, au online manual and notices from au.



カンタンアクセス・オープンサイト (Simple Access & Open Site)
Provides easy access and introduces open sites.

災害用伝言板 (Disaster Message Board)
Register and confirm safety information in time of disaster.








ENGLISH
Introduces English sites.

Basic Operations


Use  to select the site you want to access and then press  (Select).

Press  or  to return to the previous screen. Hold down either key for at least one second to return to the au one Top.

The following describes the basic operations that are available while accessing sites.

Key Operation	Description
	Exits EZweb.
	Moves the cursor up and down. When there is data available above or below the current screen, scrolls up and down the screen one line at a time.
	When there is data available above or below the current screen, scrolls the screen page by page.  : Scrolls one page up.  : Scrolls one page down.
 、 	Returns to the previous screen.

Bookmarking Frequently Accessed Pages

When the page you want to bookmark is displayed, press  (Browser Menu).

➔ Use  to select *Favorites* and then press  (OK).

➔ Use  to select *Add Bookmark* and then press  (OK).

- Some pages cannot be bookmarked.

➔ Press  (Reg).



The displayed page is bookmarked, and its title and URL are added to the Bookmark.

- The Bookmark can contain up to 100 titles and URLs.

Viewing Bookmarked Pages









When the standby screen is displayed, press  and then use  to select *EZweb*.

➔ Use  to select *Bookmark(s)* and then press  (Select).

➔ Use  to select the bookmark for the page you want to view and then press  (Connect).
The cell phone connects to the site.







Checking Charges

When the standby screen is displayed, press .

- ➔ Use  to select *Functions* and then press  (Select).
- ➔ Use  to select *Time/Toll/Sub* and then press  (Select).
- ➔ Use  to select *Inquire Toll* and then press  (Select).
- ➔ Use  to select *YES* and then press  (OK).
 - Select the item you want to check and then follow the on-screen instructions.

Downloading Chaku-Uta-Full®/Chaku-Uta®

When the standby screen is displayed, press  and then use  to select *EZweb*.

- ➔ Use  to select *Top Menu/Search* and then press  (Select).
- ➔ Use  to select *カテゴリ (メニューリスト)* (Category (Menu List)) and then press  (OK).
- ➔ Use  to select *着うた (Chaku-Uta®) or 着うたフル・ビデオクリップ (Chaku-Uta-Full®・Video Clip)* and then press  (Select).

- ➔ Use  to select the site you want to access and then press  (Select).

The download instructions appear.

- Fee-based information sites require entry of EZ password or Premium EZ password. Follow the on-screen instructions to enter either password. See page 14 for details.

- ➔ Follow the on-screen instructions.

Download is completed.

- Downloaded data is saved automatically to the Data Folder.

- ➔ Press  (Play).


The downloaded Chaku-Uta-Full® or Chaku-Uta® plays.

- This procedure is only an example for the purpose of explanation and may differ from actual procedures. Follow the instructions on the site from which you want to download the data.


Use the EZ News EX to display on the standby screen the latest news, weather forecast, horoscope and others that are delivered free of packet communication charges. You can view detailed information on a news item or weather forecast by selecting the ticker field or info pane. To make all the EZ News EX services available to you, you need to fill out a separate application form (and pay service charges).

You can use the EZ News EX by making a few simple settings following the EZweb initial setup.

Basic Operations

When the standby screen is displayed, press  to select the ticker field.

You can view detailed information on a news item or weather forecast.

- You can also select the info pane.
- The EZ News EX information is automatically received at no charge. Note, however, that packet communication charges may be incurred for manual updates and connecting to EZweb sites. In this case, a confirmation screen for network connection is displayed.
- The EZ News EX information is updated at regular time intervals.  appears while receiving information.

Setting EZ News EX

The EZ News EX is available free of charge. You have only to make a few simple settings. After following the procedure in “Initial Setup of E-mail and EZweb” on page 10, configure EZ News EX settings. If you did not configure the EZ News EX settings at the time of the initial setup, follow the steps below.

When the standby screen is displayed, select the ticker field and then press  (OK).






➔ Follow the on-screen instructions.

The setup procedure is completed.

- When the standby screen returns, a message asking you to wait for a while until the next update takes place appears in the ticker field.

■ Canceling EZ News EX

When the standby screen is displayed, select the ticker field and then press  (News).

- ➡ Press  (サブメニュー[Submenu]), use  to select サービス利用設定変更・解除 (Service Settings/Cancellation) and then press  (選択[Select]).
- ➡ Use  to select サービス利用解除 (Service Cancellation) and then press  (選択[Select]).
- ➡ Follow the on-screen instructions.

■ Changing the Reception Settings for EZ News EX Information

You can change the ring tone, vibrator and lamp settings under M216 *NewsFlash Receive* for reception of EZ News EX information.

If you do not want the ring tone to sound when receiving EZ News EX information, set the volume to *OFF*.

Using GPS (Global Positioning System), EZ Navi provides useful positional information services.

When the standby screen is displayed, press  and then use  to select *EZnavi*.

- The packet communication charges for using EZ Navi services apply to the amount of data sent and received. Some services may require a separate information fee.
- Before using EZ Navi, you must configure initial settings of EZweb (page 10).

Passenger Seat Navi for People in the Passenger Seat to Check the Route

Passenger Seat Navi guides the passengers to the destination with the best route using voice and map.

Drivers are not allowed to use Passenger Seat Navi.

Security Navi to Check Where Your Kids Are

The Security Navi application is made up of the following three functions:

いつでも位置確認 (Auto Position Search [monthly charge]),
エリア通知 (Area Message [no monthly charge]),
位置確認メール (Position Search Mail [no monthly charge])

Using these functions, you can check the position of an au cell phone that supports Security Navi; and automatically receive a notification from the specified au cell phones when your kids enter (or are in) or leave (or are no longer in) the set area within a predetermined period of time.

EZ Navi Walk for When You Go Out


Displays various useful menu items for when you are out. There are two menu modes: the Full Mode menu for those who want to use all the convenient functions including the latest features, and the Simple Mode menu with limited functions allowing you to use the service with simple operation. The following table describes the Full Mode menu.

フリーワード検索 (Keyword Search)	Search for information about a facility, shop, station, etc. by entering its name or a part of its address.
トータルナビ／地図 (Total Navigation/Map)	Find the most preferable combination of transportation (trains, airplanes, buses and taxis), and check out maps of your current location and places you like to go.
乗換／時刻表 (Connection/Timetable)	Search for train connections, timetables and other public transportation information.
お店／施設／イベント (Shop/Facility/Event)	Search for local stores, facilities or events.
ドライブ／渋滞情報 (Road/Traffic Information)	Check out road traffic information in real time.
オススメ便利メニュー (Useful Menu)	View information on services that are available on PCs, and use advanced functions of EZ Navi Walk that you can enjoy.
設定／会員登録／インフォ (Setting/Membership Registration/Information)	Configure various settings, sign up as a member or check out various useful information.

- Some of the menu options require a monthly charge.

The Map of Your Current Location



★ represents your initial location. As you start moving, changes of your location are tracked by continuous positioning and indicated in real time by .

The 現在地の地図 (The Map of Your Current Location) option displays the current map in real time.

3D Navi

Shows a 3D view at guidance points and around the destination area.

Evacuate Navi to Guide You Home or to Nearby Evacuation Areas during Disasters

Nearby public evacuation areas or the direction to your home can be determined using the map data pre-installed on the cell phone (避難所マップ [Evacuate Area Map]). Other useful contents can be downloaded from the 災害時ナビ (Evacuate Navi) section of the EZweb site.

- Some contents require a monthly charge.
- Use the information on the screen as a reference and always follow the instructions of police, fire and other municipal authorities.
- When using Evacuate Navi, checking your current position may take more time than usual depending on the status of the GPS satellites.

 
TV (1Seg)

EZweb Subscription Required

"1Seg", a mobile terrestrial digital television service in Japan, is available on the cell phone.

Using the TV Antenna

The cell phone has a built-in TV antenna (page 7). When watching TV (1Seg), do not cover the cell phone with your hands for better signal reception.



- Before using TV, you must configure initial settings of EZweb (page 10).
- If you are watching TV indoors, you may be able to improve the reception by moving closer to a window.
- The continuous viewing times of TV (1Seg) are as follows. The figures vary according to the usage of data broadcasts.

Continuous viewing time	Using earphones	DBEX ON: Approx. 3hrs 10min. DBEX OFF: Approx. 3hrs 10min.
	Using the speaker	DBEX ON: Approx. 3hrs. DBEX OFF: Approx. 3hrs.

- For information about the "1Seg" service, refer to the following homepage.

The Association for Promotion of Digital Broadcasting



From a PC	http://www.dpa.or.jp/
From a cell phone	http://www.dpa.or.jp/1seg/k/

Initial Setup of au Media Tuner

To watch TV (1Seg) using the au Media Tuner, you need to configure initial settings.

When the standby screen is displayed, press .

➔ **Use  to select TV and then press  (Select).**



➔ **Use  to select TV (1Seg) and then press  (Select).**

Disclaimer notes are displayed.

➔ **Use  to check the disclaimer notes, use  to select OK, and then press  (選択 [Select]).**

The initial setting screen for using the au Media Tuner is displayed.

- Follow the on-screen instructions to configure each setting. Then, the screen for setting TV (1Seg) channels appears.

➔ **Use  to select オート設定 (放送波) (Auto (Broadcasting wave)) and then press  (選択 [Select]).**



Automatic channel scanning begins. When receivable channels are found, the channel setup is completed.

- Select マニュアル設定 (Manual) to set the channel manually.

Watching TV (1Seg)

When the standby screen is displayed, press .


➔ Use  to select TV and then press  (Select).

 
➔ Use  to select TV (1Seg) and then press  (Select).

■ To Change Channels

Use  to change channels.


You can select TV (1Seg) and EZ Channel-Plus/EZ Channel programs.

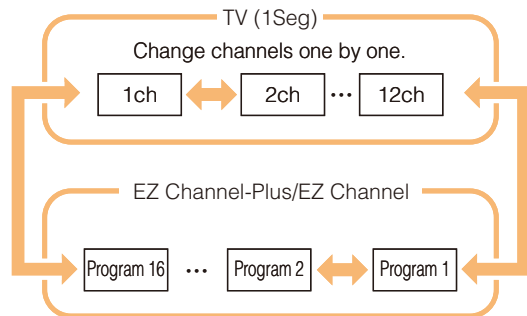


- Before using this feature, you must configure au Media Tuner initial settings (page 42).
- Channels cannot be changed with  when the data operation screen is displayed.


Basic Operations

Launch TV (1Seg) to start receiving data broadcasts.

The data operation screen appears when a data broadcast is received. Press  (Vol/Ch) on the data operation screen to switch to the TV operation screen.

On the TV operation screen, pressing  switches the display.

Data operation screen

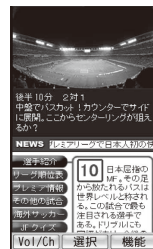


 (Vol/Ch)

TV operation screen



 (戻る[Return])

- To adjust the volume, use  on the TV operation screen.

Exiting the au Media Tuner

Press , use  to select はい (YES) and then press  (OK).














In Case of Loss of Your LIGHT POOL














The Remote Ctrl Lock allows you to remotely activate the Auto Lock, FeliCa Lock, and Address Book Lock, preventing others from using your cell phone.

Setting Conditions for Activating the Remote Ctrl Lock

You can activate the Remote Ctrl Lock by calling your cell phone a set number of times from a registered phone number within a specified period of time.

When the standby screen is displayed, press .

- ➔ Use  to select *Functions* and then press  (Select).
- ➔ Use  to select *Privacy/Rstr* and then press  (Select).
- ➔ Use  to select *Security Lock* and then press  (Select).
- ➔ Use  to select *Rem. Ctrl Lock* and then press  (Select).
- ➔ Enter Lock No. and then press  (OK).
- ➔ Use  to select *Valid No.* and then press  (Select).
- ➔ Use  to select *[Register New]* and then press  (Select).

- ➔ Use  to select *Direct Input*, press  (OK), enter a phone number, and then press  (OK).
- ➔ Press  (Comp).
- ➔ Use  to select *Duration (min)* and then press  (Select).
- ➔ Enter a time and then press  (Set).
 - This sets the time limit for receiving the set number of calls after the first call is received.
 - You can set a time from one to ten minutes.
- ➔ Use  to select *No. of Incm* and then press  (Select).
- ➔ Enter a number of calls and then press  (Set).
 - This sets the number of calls to receive to activate the Remote Ctrl Lock.
 - You can set a number of calls from three to ten.
- ➔ Press  (Save).
- ➔ Use  to select *YES* and then press  (OK).

Remotely Activating the Remote Ctrl Lock on Your LIGHT POOL

Call the cell phone from the registered phone number repeatedly within the set time limit.

- When the specified number of calls are received, the Remote Ctrl Lock is activated and a message plays telling you that the cell phone is locked.

Activating the Remote Ctrl Lock by the Security Lock Service

Even if the Remote Ctrl Lock is not set in advance, the Remote Ctrl Lock can be activated by calling au Customer Service Center or completing the application process on au Customer Support from a PC.


The Security Lock Service is available free of charge.

- You must fill out an application to use au Customer Support (the application can be filled out even after your cell phone is lost).

■ Calling au Customer Service Center for Activating/Canceling the Remote Ctrl Lock

From an au cell phone: 113 without a prefix (toll free)

From any other cell phone or fixed-line phone:

 0077-7-113 (toll free)

Open 24 hours







Follow the voice guidance to complete the application process.








■ Activating/Canceling the Remote Ctrl Lock from a PC


Login to au Customer Support (<https://cs.kddi.com/>) and complete the application process by following the on-screen instructions.

- The Remote Ctrl Lock cannot be activated when the cell phone is turned off or out of the service area, or Emission OFF is set to *ON*.

Troubleshooting

Symptom	Possible Cause	Remedy	Page
Cannot turn on power.	● Is the battery pack charged?	Charge the battery pack.	8
	● Did you hold down  for at least one second?	Hold down  for at least one second.	10
Cannot make calls.	● Is power turned on?	Hold down  for at least one second.	10
	● Is Out (out of range indicator) displayed?	Move to a location where Out (out of range indicator) is no longer displayed, and try again. Also check the <i>Area Setting</i> .	10, 20
	● Is your hand or a metal object covering the area around the built-in antenna?	Make sure your hand or any other metal object is not covering the area around the built-in antenna.	7
	● Did you enter the phone number starting with the area code?	When making a call to a phone other than a cell phone, you need to enter the area code even if you are inside the same area.	15
Cannot receive calls.	● Is Out (out of range indicator) displayed?	Move to a location where Out (out of range indicator) is no longer displayed. Also check the <i>Area Setting</i> .	10, 20
	● Is power turned on?	Hold down  for at least one second.	10
No response when a key is pressed.	● Is power turned on?	Hold down  for at least one second.	10
A warning tone sounds and power turns off.	● Is there enough power left in the battery pack?	Charge the battery pack.	8
Calls are answered automatically.	● Is Answer memo turned on?	Hold down  for at least one second to turn off Answer memo.	18

Symptom	Possible Cause	Remedy	Page
Cannot hear the other party.	● Is the earpiece volume too low?	Press  during a call to increase the earpiece volume.	17
When making a call, a beeping sound is heard from the earpiece and a connection cannot be established.	● Is  (out of range indicator) displayed? Or are you in a location where the signal is too weak?	Move to a location where  (out of range indicator) is no longer displayed. Also check the <i>Area Setting</i> .	10, 20
	● Is the wireless line busy or is the phone you are calling on another line?	End the call and try again later.	15
The illumination lamp flashes but the ring tone does not play.	● Is manner mode turned on?	Hold down  for at least one second to turn off manner mode.	17
	● Is  (ring tone off indicator) displayed?	Increase the volume of the incoming call ring tone.	18
Cannot charge the battery pack.	● Is the battery pack installed properly?	Install the battery pack properly.	8
	● Are the plug and connector of the AC adapter inserted properly?	Insert the plug and connector firmly.	
Have difficulty seeing things on the display.	● Is  (Privacy Filter indicator) displayed?	Hold down  for at least one second to cancel Privacy Filter.	11
When the camera is activated, no subject is displayed.	● Is a finger or other object covering the camera (lens)?	Check the position of the camera (lens) and remove the obstacle.	31

- For more detailed information, visit the following au troubleshooting sites:
 - From an au cell phone:  ⇒ *Top Menu/Search* ⇒ *auお客さまサポート* (au Customer Support) ⇒ *オンラインマニュアル* (Online Manual) ⇒ *故障診断Q&A* (Troubleshooting FAQ)
 - From a PC: <http://www.kddi.com/customer/service/au/trouble/kosho/index.html>

Index

Numeric

1Seg	42
------------	----

A

Accessories	6
Answer memo	18
Playback	18
Turning off	18
Turning on	18

B

Battery level	11
Battery pack	6,8
Battery pack cover	7

C

Camera	31
Photo taking tips	31
Taking a photo	32
Cell phone etiquette	2
Character input	22
Character entry modes	22
Deleting characters	23
Entering characters from the same key	23
Starting a new line	23
Charging the battery pack	8
Checking charges	36

C-mail	30
C-mail safety block	30
Creating and sending	30
Reading	30
Received mail	30
Contents	4

D

Disaster Message Board Service	3
Display	7,11
Domain	13
Downloading Chaku-Uta®	36
Downloading Chaku-Uta-Full®	36

E

Earpiece volume	17
E-mail	27
Creating and sending	27
Initial settings	10
Reading	28
Received mail	28
Replying	28
Viewing attached images	28
E-mail address	10
Available characters	22
Changing	13
Entering	23
Entering pictograms	24
Evacuate Navi	41
EZ Navi	39
EZ Navi Walk	40

EZ News EX	37
Canceling	38
Changing the Reception Settings	38
Info pane	11
Setting	37
Ticker field	11
EZ password	14
EZweb	33
Accessing sites	34
au one Top	34
Basic operations	35
Initial settings	10

G

Global Function	20
Calling Japan from Overseas	21
Obtaining the Latest PRL (Preferred Roaming List)	20
Setting the Area	20

I

Illumination lamp	8
Incoming history	16
Indicators	11
Information indicator	8
Initial settings	10,42
au Media Tuner	42
E-mail · EZweb	10
TV (1Seg)	42
International Call	15

Internet	33
Sites	34,35

K

Key assignments	9
-----------------------	---

L

Language	10
Learning the basics	9
Lock No.	14
Long Time Play	8

M

Mail	27
C-mail	30
E-mail	27
Mail filters	29
Simple settings	29
Main menu	12
Manner mode	17

N

Names of parts	7
Notification window	10

O

One-ring calls	16
Outgoing history	16

P

Passenger Seat Navi	39
Passwords	14
Phone (call)	15
184/186	15
Answering	16
International Call	15
Making	15
Returning	16
Phone book	25
Dialing	25
Editing	25
Saving	25
Saving a phone number from the incoming or outgoing history ..	26
Phone number	10
Photos	31
Photo modes	31
Taking	32
Viewing	32
Playback	
Answer memo	18
Premium EZ password	14
Privacy Filter	11,47

R

Remote Ctrl Lock	44
Ring tones	
Changing the type	17
Changing the volume	18

S

Security code	14
Security Lock Service	45
Security Navi	39
Signal strength	11
Sites	34
Bookmarking	35
Viewing from bookmarks	35
Spam	29

T

Troubleshooting	46
Turning on/off power	10
TV (1Seg)	42
Antenna	42
Basic operations	43
Changing channels	43
Exiting	43
Initial settings	42

V

Viewing	
Photos	32

FCC Notice

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help and for additional suggestions.

Warning

The user is cautioned that changes or modifications not expressly approved by the manufacturer could void the user's authority to operate the equipment.



FCC RF EXPOSURE INFORMATION

Warning! Read this information before using your phone.

In August 1996, the Federal Communications Commission (FCC) of the United States, with its action in Report and Order FCC 96-326, adopted an updated safety standard for human exposure to radio frequency electromagnetic energy emitted by FCC regulated transmitters. Those guidelines are consistent with the safety standard previously set by both U.S. and international standards bodies. The design of this phone complies with the FCC guidelines and these international standards.

Specific Absorption Rate (SAR) for Wireless Phones

The exposure standard for wireless handsets employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC is 1.6 W/kg.

The tests are performed in positions and locations (e.g., at the ear and worn on the body) as required by the FCC for each model. The highest SAR value for this model handset when tested for use at the ear is 0.411 W/kg and when worn on the body, as described in this user guide, is 0.783 W/kg.

Body-worn Operation

This device was tested for typical body-worn operations with the back of the phone kept 0.59 inches (1.5 cm) from the body. To comply with FCC RF exposure requirements, a minimum separation distance of 0.59 inches (1.5 cm) must be maintained between the user's body and the back of the phone, including the antenna. All beltclips, holsters and similar accessories used by this device must not contain any metallic components. Body-worn accessories that do not meet these requirements may not comply with FCC RF exposure limits and should be avoided.

Turn off your phone before flying

You should turn off your phone when boarding any aircraft. To prevent possible interference with aircraft systems, U.S. Federal Aviation Administration (FAA) regulations require you to have permission from a crew member to use your phone while the plane is on the ground. To prevent any risk of interference, FCC regulations prohibit using your phone while the plane is in the air.

European RF Exposure Information

Your mobile device is a radio transmitter and receiver. It is designed not to exceed the limits for exposure to radio waves recommended by international guidelines. These guidelines were developed by the independent scientific organization ICNIRP and include safety margins designed to assure the protection of all persons, regardless of age and health.

The guidelines use a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit for mobile devices is 2 W/kg and the highest SAR value for this device when tested at the ear was 0.248 W/kg*.

As SAR is measured utilizing the devices highest transmitting power the actual SAR of this device while operating is typically below that indicated above. This is due to automatic changes to the power level of the device to ensure it only uses the minimum level required to reach the network.

The World Health Organization has stated that present scientific information does not indicate the need for any special precautions for the use of mobile devices. They note that if you want to reduce your exposure then you can do so by limiting the length of calls or using a 'hands-free' device to keep the mobile phone away from the head and body. Additional Information can be found on the websites of the World Health Organization (<http://www.who.int/emf>).

* The tests are carried out in accordance with international guidelines for testing.

DECLARATION OF CONFORMITY

We, **Toshiba Corporation, Mobile Communications Co.,**
of **1-1, Shibaura 1-Chome, Minato-ku, Tokyo 105-8001 Japan**

declare under our sole responsibility that the product

Type (Model) Name is CN11-J01

to which this declaration relates, is in conformity with the following standards and/or Other normative documents.

Essential Requirement	Applied Specification / Standards
Article 3.1(a) Health	EN 50360:2001, IEC 62209-1:2005
Article 3.1(a) Safety	EN 60950-1:2006
Article 3.1(b) EMC	EN 301 489-1 v1.8.1:2008, EN 301 489-7 v1.3.1 :2005 EN 301 489-17 v1.3.2 :2008
Article 3.2 Radio	EN 301 511 v9.0.2:2003, EN 300 328 v1.7.1:2006

We hereby declare that all essential radio test suites, EMC & safety requirements have been carried out and that the above named product is in conformity to all the essential requirements of Directive 1999/5/EC.

The conformity assessment procedure referred to in Article 10(5) and detailed in Annex IV of Directive 1999/5/EC has been followed with the involvement of the following Notified Body:

SGS UNITED KINGDOM LTD.

SGS Unit 10, South Industrial Estate, Bowburn, Country Durham, DH6 5AD UK

Identification mark: **0890**

The technical documentation relevant to the above equipment will be held at:

Toshiba Corporation, Mobile Communications Co.,

1-1, Asahigaoka 3-Chome Hino-Shi, Tokyo 191-8555 Japan

Name: Mitsuru Nashioka

Title: General Manager Quality Assurance Division

Toshiba Corporation, Mobile Communications Co.,

Signature:



Date: 24 June, 2010

For inquiries, call: au Customer Service Center

	From fixed-line phones: ☎ 0077-7-111
For general information and charges (toll free)	From au cell phones: 157 area code not required PRESSING ZERO WILL CONNECT YOU TO AN OPERATOR AFTER CALLING 157 ON YOUR au CELLPHONE.
	From fixed-line phones: ☎ 0077-7-113
For loss, theft or damage and operation information (toll free)	From au cell phones: 113 area code not required
In case above numbers are not available, ☎ 0120-977-033 (except Okinawa)	☎ 0120-977-699 (Okinawa)

From EZweb:

Access Method EZ⇒Top Menu/Search⇒
auお客さまサポート (au Customer Support)⇒お問い合わせ (Inquiries)

• Menus are subject to change without prior notice.

なるほど! au みんなでつくる、auQ&Aサイト



Access Method EZ⇒Top Menu/Search⇒
auお客さまサポート (au Customer Support)⇒
みんなでQ&A「なるほど! au」(au Users Forum)

Read this code for an easy access to なるほど! au (au User's Forum).

• The packet communication charge applies.



モバイル・ワイヤレス・ネットワーク
製品のリサイクルマーク

Cell phone and PHS operators collect and recycle unused telephones, batteries and battery chargers at stores bearing the ♻ logo regardless of brand and manufacturer to protect the environment and reuse valuable resources.

August 2010 Edition

Sales: KDDI CORPORATION • OKINAWA CELLULAR TELEPHONE COMPANY Manufactured by: **TOSHIBA CORPORATION**

Read this code for an easy access to au Online Manual.
(Packet communication charges do not apply.)

