

Part Number: X11-29949-01
 Printed in China

Xbox 360 Wireless Controller

Thanks for choosing the Xbox 360 Wireless Controller. Your wireless controller lets you experience the ultimate in wireless freedom with the same precision, speed, and accuracy as a wired controller. The Xbox 360 Wireless Controller features:

- 2.4-GHz wireless technology with 30-foot range.
- Integrated headset port.
- Adjustable vibration feedback for longer battery life.

The Xbox 360 Wireless Controller works exclusively with the Xbox 360™ video game and entertainment system. For information about using the Xbox 360 Wireless Controller with a particular game, see your game manual.

To enhance your experience with the wireless controller, try the Xbox 360 Rechargeable Battery Pack and the Xbox 360 Play & Charge Kit (sold separately). If you're looking to expand your wireless experience, consider the Xbox 360 Universal Media Remote and the Xbox 360 Wireless Networking Adapter (sold separately).



- The Xbox 360 Wireless Controller works only within 33 feet (10 meters) of the console. Objects between the controller and the console can reduce this range.

USING YOUR CONTROLLER

The Xbox Guide Button

Your controller is equipped with a button in its center called the Xbox Guide button. Press the Xbox Guide button to turn on your console or to go to the Xbox Guide if the console is already on. See your Xbox 360 Setup manual for more details about the Xbox Guide button.

The Ring of Light

The Xbox Guide button is surrounded by the Ring of Light, which is made up of four quadrants. When a controller is connected to your console, it is assigned a quadrant, which glows to indicate the controller's position.

Turn On Your Xbox 360 Console

To turn on your Xbox 360 console, press **Start** or the Xbox Guide button on any connected controller, wired or wireless.

Use the Expansion Port

The expansion port on your controller lets you connect expansion devices like the Xbox 360 Headset (sold separately) to your controller. The port features a 2.5mm audio connector. For more information, see the instruction manual for your controller expansion device.

Hearing Loss

Extended exposure to high volumes when using a headset may result in temporary or permanent hearing loss. Some unapproved third-party headsets may produce higher sound levels than approved Xbox 360 Headsets.

Use the Charge Port

Your wireless controller is equipped with a charge port on the front of the controller. The charge port works exclusively with the Xbox 360 Play & Charge Kit (sold separately).

TROUBLESHOOTING

If you encounter problems, try the possible solutions provided below.

Lights Spin Longer than 15 Seconds When Connecting

- Move the controller closer to the console.
- Make sure the batteries are in good shape.
- Keep the console and controller at least three feet away from large metal objects, such as file cabinets, mirrors, and refrigerators.
- Make sure the front of the console is positioned in the direction of the controller.
- Cordless phones (2.4 GHz), wireless LANs, wireless video transmitters, microwave ovens, some mobile/cell phones, and Bluetooth headsets can interfere with the operation of the controller. Turn these off or unplug them and retry connecting.
- If nothing else works, turn off your console, remove and reinsert the AA battery pack into the controller, and repeat the steps given in "Connect Your Controller."

IF YOU NEED MORE HELP

Go to www.xbox.com/support or call Xbox Customer Support:
 United States and Canada: 1-800-4MY-XBOX (1-800-469-9269)

TTY users: 1-866-740-XBOX (1-866-742-9269)

Do not take your Xbox 360 console or its peripherals to your retailer for repair or service unless instructed to do so by an Xbox Customer Support representative.

Do Not Attempt Repairs

Do not attempt to take apart, service, or modify the Xbox 360 console, power supply, or its peripherals in any way. Doing so could present the risk of serious injury or death from electric shock or fire, and it will void your warranty.

FOR CUSTOMERS IN THE UNITED STATES

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician to help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Trade Name:	Microsoft Corp.	Responsible Party:	Microsoft Corporation
Address:	One Microsoft Way Redmond, WA 98052 U.S.A.	Telephone No.:	(800) 4MY-XBOX

NOTE

Any changes or modifications made on the system not expressly approved by the manufacturer could void the user's authority to operate the equipment.

FOR CUSTOMERS IN CANADA

This device complies with RSS 210 of Industry Canada (IC).

Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of this device.

Caution

Exposure to radio frequency radiation.

The installer of this radio equipment must ensure that the antenna is located or pointed such that it does not emit RF field in excess of Health Canada limits for the general population; consult Safety Code 6, obtainable from Health Canada's website at www.hc-sc.gc.ca/rpb.

COPYRIGHT

Information in this document, including URL and other Internet Web site references, is subject to change without notice. Unless otherwise noted, the example companies, organizations, products, domain names, e-mail addresses, logos, people, places and events depicted herein are fictitious, and no association with any real company, organization, product, domain name, e-mail address, logo, person, place or event is intended or should be inferred. Copying with all applicable copyright laws is the responsibility of the user. Without limiting the rights under copyright, no part of this document may be reproduced, stored in or introduced into a retrieval system, or transmitted in any form or by any means (electronic, mechanical, photocopying, recording, or otherwise), for any purpose, without the express written permission of Microsoft Corporation.

Microsoft may have patents, patent applications, trademarks, copyrights, or other intellectual property rights covering subject matter in this document. Except as expressly provided in any written license agreement from Microsoft, the furnishing of this document does not give you any license to these patents, trademarks, copyrights, or other intellectual property.

© 2005 Microsoft Corporation. All rights reserved.

Microsoft, Xbox, Xbox 360, and the Xbox logos are either registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries.

Sécurité concernant les piles jetables

Une utilisation inappropriée des piles risque de provoquer une fuite de liquide, surchauffe ou explosion. Il y a un risque d'incendie si les piles sont remplacées par un type incorrect. Le liquide de pile est corrosif, voire toxique. Il peut provoquer des brûlures aux yeux ou à la peau et est nocif s'il est avalé. Pour réduire le risque de blessure :

- Gardez les piles hors de la portée des enfants.
- Vous ne devez jamais chauffer, ouvrir, perforer ou mutiler les piles ni les jeter dans un feu.
- N'utilisez que des piles alcalines, de type AA (LR6).
- Ne mélangez pas de nouvelles et d'anciennes piles, ni des piles de type différent.
- Enlevez les piles si elles sont usées ou avant d'entreposer votre manette ou télécommande pendant une longue période. En ce qui concerne la manette sans fil, ne laissez pas les piles dans le support de batterie LR6 (AA) lorsqu'il n'est pas installé dans la manette.
- En cas de fuite, retirez toutes les piles immédiatement en prenant soin d'éviter tout contact avec la peau ou les vêtements. Si le liquide de la pile entre en contact avec la peau ou les vêtements, lavez immédiatement la peau à eau vive. Avant d'insérer de nouvelles piles, nettoyez à fond le compartiment à piles à l'aide d'une serviette de papier humide ou suivez les conseils de nettoyage du fabricant de la pile.
- Jetez les piles conformément aux normes locales et nationales en matière de gestion des déchets, y compris celles qui régissent la récupération et le recyclage des rebuts de matériel électrique et électronique.

WARNING

Before using this product, read this manual and the Xbox 360 console manuals for important safety and health information. Keep all manuals for future reference. For replacement manuals, go to www.xbox.com/support or call Xbox Customer Support (see "If You Need More Help").

The limited warranty covering this product is contained in the Xbox 360 Warranty manual (Volume 2).

Dispose of this product in accordance with local and national disposal regulations (if any), including those governing the recovery and recycling of waste electrical and electronic equipment (WEEE).

Clean only with a dry or slightly damp cloth. Using cleaning solutions or attempting to clean connectors may damage your controller.

Disposable Battery Safety

Improper use of batteries may result in battery fluid leakage, overheating, or explosion. Risk of fire if batteries are replaced by an incorrect type. Released battery fluid is corrosive and may be toxic. It can cause skin and eye burns, and is harmful if swallowed. To reduce the risk of injury:

- Keep batteries out of reach of children.
- Do not heat, open, puncture, mutilate, or dispose of batteries in fire.
- Use only alkaline batteries, type AA (LR6).
- Do not mix new and old batteries.
- Remove batteries if they are worn out or before storing for an extended period of time. Do not leave batteries in the AA battery holder when it is not installed in the controller.
- If a battery leaks, remove all batteries, taking care to keep the leaked fluid from touching your skin or clothes. If fluid from the battery comes into contact with skin or clothes, flush skin with water immediately. Before inserting new batteries, thoroughly clean the battery compartment with a damp paper towel, or follow the battery manufacturer's recommendations for cleanup.
- Dispose of batteries in accordance with local and national disposal regulations, including those governing the recovery and recycling of waste electrical and electronic equipment (WEEE).

Insert batteries according to the following instructions.

SET UP YOUR XBOX 360 WIRELESS CONTROLLER


Before you can use your Xbox 360 Wireless Controller with your Xbox 360 console, you need to:

- 1 Insert a battery pack. The wireless controller uses only AA disposable batteries in the AA battery pack (provided) or the Microsoft Xbox 360 Rechargeable Battery Pack (sold separately).
- 2 Introduce the controller to the console by wirelessly connecting the two.

Insert Batteries

To insert batteries into the wireless controller AA battery pack:

- 1 Press the tab on the top of the AA battery pack and pull down to detach it from the controller.
- 2 Insert two new AA (LR6) batteries with their positive (+) and negative (-) ends positioned as shown on the underside of the battery pack. For best performance, AA rechargeable batteries are not recommended.
- 3 Slide the AA battery pack back into place on the controller and push in to lock.

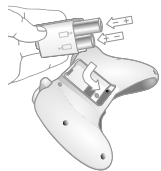

NOTE

To avoid pinching your fingers when inserting, push only on the flat surface of the battery pack.

Remove Controller Batteries Aboard Aircraft

Before boarding any aircraft or packing the wireless controller in luggage that will be checked, remove any batteries from the wireless controller. The wireless controller can transmit radio frequency (RF) energy, much like a cellular telephone, whenever batteries are installed.

Connect Your Controller

Up to four controllers, wired and wireless, can be actively connected to a console at one time. Each connected controller gets a quadrant on the Ring of Light. Before you can connect a wireless controller, at least one quadrant must be free (unlit). To disconnect a controller, remove the battery pack from a connected wireless controller or disconnect a wired controller cable connector.

To connect your wireless controller to your console:

- 1 Press the Xbox Guide button to turn on the controller.
- 2 Press the power button to turn on the console.
- 3 Press the connect button on the console.
- 4 Press the connect button on the controller.
- 5 After the Ring of Light on the controller and console spin and flash once, the controller is connected. The quadrant that remains lighted indicates the controller's position.

NOTES

- When you turn off your console, your controller will still be connected the next time you turn it on.
- Your controller is connected to only one console at a time. You can connect to a new console at any time, but your connection to the previously connected console will be lost.

Manette sans fil Xbox 360

La manette sans fil Xbox 360 fonctionne exclusivement avec le système de jeu vidéo et de divertissement Xbox 360. Pour des renseignements concernant l'utilisation de la manette sans fil Xbox 360 avec un jeu particulier, consultez le guide du jeu.

Pour profiter pleinement de votre manette sans fil, essayez la batterie rechargeable Xbox 360 et le kit de chargement Xbox 360. Si vous désirez encore plus de liberté sans fil, procurez-vous la télécommande multimédia universelle Xbox 360 et l'adaptateur réseau sans fil Xbox 360.

AVERTISSEMENT

Avant d'utiliser ce produit, lisez le présent guide et les guides de garantie de Xbox 360 pour obtenir toute l'information relative à la sécurité et à la santé. Conservez tous les guides pour consultation ultérieure. Pour obtenir des guides de remplacement, visitez le site www.xbox.com/support ou composez le numéro du Service à la clientèle de Xbox (voir la section « Si vous avez besoin d'une aide supplémentaire »).

La garantie limitée couvrant ce produit se trouve dans le Guide de garantie de Xbox 360 (Volume 2).

Éliminez ce produit conformément aux normes locales et nationales en matière de gestion des déchets (s'il y a lieu), y compris celles qui régissent la récupération et le recyclage des rebuts de matériel électrique et électronique.

Ne nettoyez la manette qu'avec un chiffon sec ou légèrement humide. Si vous utilisez une solution nettoyante ou tentez de nettoyer les connecteurs, vous risquez d'endommager votre manette.

