

# Always there to help you

Register your product and get support at  
[www.philips.com/welcome](http://www.philips.com/welcome)



PI3210G/58



## User manual

# PHILIPS



# Contents

---

<b>1</b>	<b>Important safety instructions</b>	<b>3</b>
	Safety	3
	Compliance	3
	Care of the environment	4
	Notice	4
	Written Offer	4

---

<b>2</b>	<b>Overview</b>	<b>6</b>
	Controls	6
	Home screen	6
	Use the drag-down menu of setup options	7

---

<b>3</b>	<b>Get started</b>	<b>8</b>
	Charge power	8
	Conserve battery power	8
	Switch the device on or off	8

---

<b>4</b>	<b>Basics</b>	<b>9</b>
	Find apps	9
	Use the screen	10
	Switch screen rotation on or off	10
	Lock/ unlock the screen	10
	Customize the Home screen	11
	Add application icons and widget	11
	Delete items	11
	Relocate items	11
	Add wallpapers	11
	Text entry	11
	Select input methods	11
	Enter text	12
	Use the Google Keyboard	12
	Edit text	12

---

<b>5</b>	<b>Connections</b>	<b>14</b>
	Connect to the Internet	14
	Connect through Wi-Fi	14
	Connect through the mobile network	14
	Connect to your computer	15
	Use a Micro SD card	15
	Connect to Bluetooth	15

Connect with Bluetooth devices	15
Send or receive files through Bluetooth	16
Listen to music through stereo Bluetooth headphones and speakers	16
Connect to GPS	17
Portable hotspot	17
Mirror the screen to a wireless display	17

---

<b>6</b>	<b>Apps</b>	<b>18</b>
	Install apps	18
	Play Store	18
	Other sources	18
	Manage apps	18

---

<b>7</b>	<b>Browser</b>	<b>20</b>
	Add a bookmark	20

---

<b>8</b>	<b>Email</b>	<b>21</b>
	Set up your email account	21
	Select account settings	21
	Check your email messages	21
	Compose email messages	22
	Organize email messages	22

---

<b>9</b>	<b>Tools</b>	<b>23</b>
	Camera	23
	Take photos or record videos	23
	Calendar	24

---

<b>10</b>	<b>Use the device in corporate networks</b>	<b>25</b>
	Install secure credentials	25
	Set up your Microsoft Exchange account	25
	Add VPN	25

---

<b>11</b>	<b>Settings</b>	<b>27</b>
	SIM management	27
	WIRELESS & NETWORKS	27
	Wi-Fi	27
	Airplane mode	27
	VPN settings	27

DEVICE	27
Sound	27
Display	27
Storage	28
Battery	28
Apps	28
Location access	28
Security	28
Screen lock	28
Find Me Back	28
Visible passwords	29
Device administrators	29
Unknown sources	29
Language & input	29
Language	29
Personal dictionary	29
Voice Search	29
Text-to-speech output	29
Reset	30
ACCOUNTS	30
Date & time	30
Automatic setting	30
Manual setting	30
Accessibility	30
About tablet	30
System updates	30
Status and information about the device	30

---

<b>12 Check for firmware update</b>	<b>32</b>
Update the firmware online	32

---

<b>13 Technical data</b>	<b>33</b>
--------------------------	-----------

---

<b>14 Warranty</b>	<b>35</b>
--------------------	-----------

### Need help?

Please visit

**[www.philips.com/welcome](http://www.philips.com/welcome)**

where you can access a full set of supporting materials such as the user manual, the latest software updates, and answers to frequently asked questions.

# 1 Important safety instructions

## Safety

Only use attachments/accessories specified by the manufacturer.

Use only power supplies listed in the user manual.

The product shall not be exposed to dripping or splashing.

Do not place any sources of danger on the product (e.g. liquid filled objects, lighted candles).

Batteries (battery pack or batteries installed) shall not be exposed to excessive heat such as sunshine, fire or the like.

Where the plug of the Direct Plug-in Adapter is used as the disconnect device, the disconnect device shall remain readily operable.



### Warning

- Never remove the casing of this apparatus.
- Never lubricate any part of this apparatus.
- Never place this apparatus on other electrical equipment.
- Keep this apparatus away from direct sunlight, naked flames or heat.
- Ensure that you always have easy access to the power cord, plug or adaptor to disconnect the apparatus from the power.

## Hearing Safety



### Warning

- **To prevent possible hearing damage, do not listen at high volume levels for long periods.**
- Excessive sound pressure from earphones and headphones can cause hearing loss.

The maximum output voltage of the player is not greater than 150 mV.

## Compliance

# CE 0700

This product complies with the requirement of the 1999/5/EC directive.

A copy of the EC Declaration of Conformity is available in the Portable Document Format (PDF) version at [www.philips.com/support](http://www.philips.com/support).

### SAR statement

Your device is a radio transmitter and receiver. It is designed not to exceed the limits for exposure to radio waves (radio frequency electromagnetic fields) recommended by international guidelines. The guidelines were developed by an independent scientific organization (ICNIRP) and include a substantial safety margin designed to assure the safety of all persons, regardless of age and health. The radio wave exposure guidelines use a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit for mobile devices is 2 W/kg.

Tests for SAR are conducted using standard operating positions with the device transmitting at its highest certified power level in all tested frequency bands. The highest SAR values under the ICNIRP guidelines for this device model are:

Maximum SAR for this model and conditions under which it was recorded

Philips PI3210G (Body-worn)	0.571 W/kg
-----------------------------	------------

During use, the actual SAR values for this device are usually well below the values stated above. This is because, for purposes of system efficiency and to minimize interference on the network, the operating power of your device

is automatically decreased when full power is not needed. The lower the power output of the device, the lower its SAR value.

Body-worn SAR testing has been carried out at a separation distance of 1.5 cm. To meet RF exposure guidelines during body-worn operation, the device should be positioned at least this distance away from the body. If you are not using an approved accessory ensure that whatever product is used is free of any metal and that it positions the device the indicated distance away from the body.

### Note

- The type plate is located on the back of the product.

## Care of the environment

### Environmental information

All unnecessary packaging has been omitted. We have tried to make the packaging easy to separate into three materials: cardboard (box), polystyrene foam (buffer) and polyethylene (bags, protective foam sheet.)

Your system consists of materials which can be recycled and reused if disassembled by a specialized company. Please observe the local regulations regarding the disposal of packaging materials, and old equipment.



Your product is designed and manufactured with high quality materials and components, which can be recycled and reused.



When this crossed-out wheeled bin symbol is attached to a product it means that the product

is covered by the European Directive 2002/96/EC.

Please inform yourself about the local separate collection system for electrical and electronic products.

Please act according to your local rules and do not dispose of your old products with your normal household waste. Correct disposal of your old product helps to prevent potential negative consequences for the environment and human health.



Your product contains batteries covered by the European Directive 2006/66/EC, which cannot be disposed with normal household waste. Please inform yourself about the local rules on separate collection of batteries because correct disposal helps to prevent negative consequences for the environmental and human health.

Always bring your product to a professional to remove the built-in battery.


## Notice

### Written Offer

WOOX Innovations hereby offers to deliver, upon request, a copy of the complete corresponding source code for the copyrighted open source software packages used in this product for which such offer is requested by the respective licenses.

This offer is valid up to three years after product purchase. To obtain source code, please contact [open.source@woox.com](mailto:open.source@woox.com). If you prefer not to use email or if you do not receive confirmation receipt within a week after mailing to this email address, please write to Open Source Team, 6/F, Philips Electronics Building, 5 Science Park East Avenue, Hong Kong Science

 
Park, Shatin, New Territories, Hong Kong. If you do not receive timely confirmation of your letter, please email to the email address above.






**This product is partly based on Open Source software. The license text and acknowledgment can be retrieved from the device under  > About tablet > Legal information.**

Specifications are subject to change without notice. Philips and the Philips' Shield Emblem are registered trademarks of Koninklijke Philips N.V. and are used by WOOX Innovations Limited under license from Koninklijke Philips N.V.. WOOX Innovations reserves the right to change products at any time without being obliged to adjust earlier supplies accordingly.
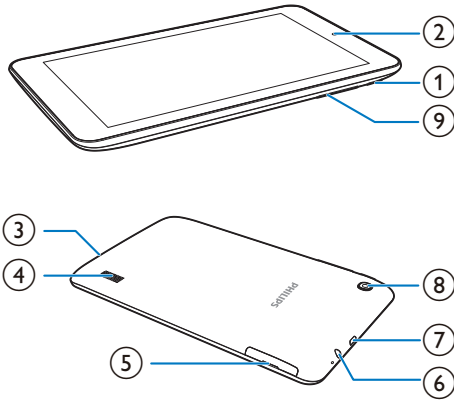
# 2 Overview


## Controls










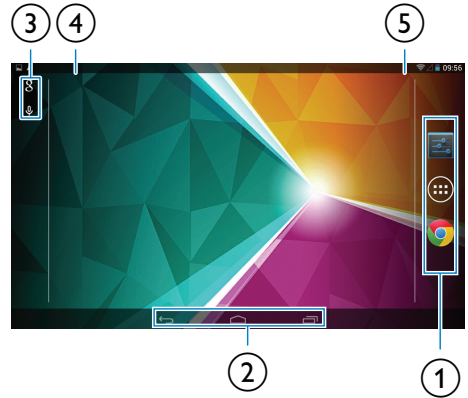 

- ① **Power/ lock button**
  - Press and hold: switch on or off the device.
  - Press: lock/unlock the screen; To unlock the screen, drag the lock to an icon.
  - Reset: press and hold the button for 10 seconds.
- ② **Front camera lens (0.3 MP)**
- ③ 
  - Microphone
- ④ **Speaker**
- ⑤ 
  - Slot for Micro SD card
  -  Slot for SIM card
- ⑥ 
  - 3.5-mm headphone connector
- ⑦ 
  - USB connector for data transfer and power charging
- ⑧ **Rear camera lens (2.0 MP)**
- ⑨ **+ , -**

 - Press: increase/decrease the volume.
- Press and hold: increase/decrease fast.

## Home screen



- ①  **Settings:** Customize the settings of PI3210G.  
 **APPS/WIDGETS:** List all apps or widgets.  
 **Chrome:** Web browser of Google
- ②  : Tap to return to the Home screen.  
 : Go back one level.  
 : Display recent applications that you have accessed.  
 (for some apps): View the options menu.
- ③ **Google Search**
  -  : Use the quick search box to search on PI3210G or the Web.
  -  : Google voice search
- ④ **Notifications**
  - Drag down the bar to check events.
- ⑤ **Time, setup options**
  - Drag down the bar to select setup options.



# Use the drag-down menu of setup options

1 Drag down the top bar as shown.



2 Tap the icon to select your options.

- Battery charging underway
- Switch to the settings menu
- Switch on or off Wi-Fi
- Switch on or off Bluetooth
- Switch on or off GPS
- Switch on or off the data connection through the mobile network  
Make sure that you have mounted your SIM card onto **PI3210G** to access the mobile network.
- Switch on or off the airplane mode.  
When the airplane mode is on, the access to Wireless connection is disabled.
- Change the screen brightness
- Change your option for the screen-off timer
- Switch screen rotation on or off

 
- Enable or disable the device to work as the hotspot for the Internet connection through the mobile network.

## 3 Get started

### Charge power

**PI3210G** has a built-in battery that can be charged through the USB connector of the supplied USB power adapter.

- By using the USB cable, connect **PI3210G** to the supplied USB power adapter.

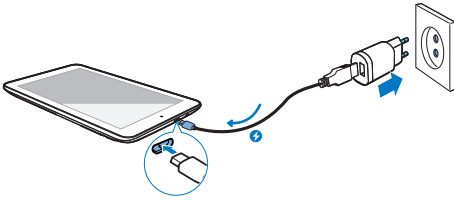

#### Note

- Rechargeable batteries have a limited number of charge cycles. Battery life and number of charge cycles vary by use and settings.

### Conserve battery power

- To conserve battery power and increase the play time, do the following:

#### Use the sleep mode

After the selected time duration, **PI3210G** goes to the sleep mode, and the screen switches off automatically. To save battery power, do the following:

- Go to **Settings > Display > Sleep** to set the screen-off timer to a low value.
- To switch off Wi-Fi during the sleep mode,

- ① Go to **Settings > Wi-Fi**.
- ② At the top bar, select **Advanced > Keep Wi-Fi on during sleep**. Select **Never**.

### Switch the device on or off

 
 


Press and hold the power/ lock button to switch the device on or off.



# 4 Basics

## Find apps

Navigate on the Home screen to find an app:

- Swipe left/ right to select a page;
- Alternatively, tap  to open the list of apps. Swipe left/ right to scroll through the list;
- Use the navigation buttons  /  to switch between screens. Tap  to go to the apps that you have accessed recently.

### Tip

- On **PI3210G**, you can install apps from the **Play Store** or other sources.



### Play Store:

- Download different apps, games, and others.



### Settings:

- Customize the settings of **PI3210G**.



### Play Music:

- Play music that you store on **PI3210G**.
- Online music service of Google



### Gallery:

- View pictures and videos that you store or make on **PI3210G**.



### Camera:

- Take photos or record videos.



### Play Movies & TV:

- Online movie & TV service of Google (available in some countries)



### YouTube:

- Online video service of Google



### Deezer:

- Online music service (available in some countries)



### Play Books:

- Online book service of Google (available in some countries)



### Google+ / Orkut:

- Social networking service of Google



### Hangouts:

- Chat service of Google



### Blogger:

- Blogger service of Google



### Browser:

- Browse Web pages.



### Chrome:

- Web browser of Google



### Google Search:

- Search on **PI3210G** or the Web.



### Voice Search

- Voice search and voice action services of Google



### Maps:

- Maps service of Google



### Earth:

- Satellite view of maps (available in some countries)



- **Email:** Set up your email account on **PI3210G**.



### Gmail:

- Mail service of Google



### Downloads:

- View the list of your downloads from the Web.



### ES File Explorer:

- Browse the files/ folders on **PI3210G**, install apps, and manage files.



### Kingsoft Office:

- Create and manage your document, text, Powerpoint and Excel files.



### Drive:

- Cloud storage service of Google



### Translate:

- Online language translation service of Google



### Calendar:

- Add events, and set reminders for your events.



### Keep:

- Keep quick notes.



### Clock:

- Use the timer, alarm clock, and stopwatch.



### Calculator



### Sound Recorder:

- Record and listen to voice messages.



### AccuWeather:

- Online weather forecast service

---

## Use the screen

---

### Switch screen rotation on or off

- 1 Drag down the top bar.



- 2 In the pull-down menu, tap / to switch screen rotation on or off.

---

### Lock/ unlock the screen

By locking the screen, you can lock all the touch controls on the screen. Thus, undesired operations are prevented.

#### Auto lock

 
After a time duration, the screen dims and is locked automatically. To set the time duration, go to **Settings > Display > Sleep**.

#### To lock the screen manually

- Press the power/ lock button.

#### To unlock the screen

- 1 If necessary, press the power/ lock button to display the lock.
- 2 Drag the lock to unlock.

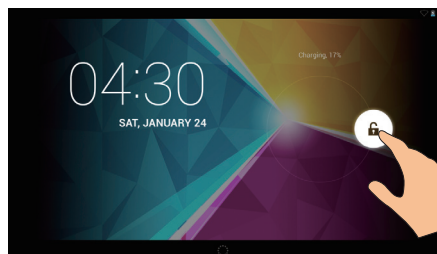



---


## Customize the Home screen

 To access functions quickly from the Home screen, you can add and rearrange items.

---

### Add application icons and widget

- 1 Swipe left/ right to select a page.
  - If necessary, tap  to return to the Home screen.
  - Make sure that the page isn't filled.
  - Tap . Tap **APPS** or **WIDGET** to open the list of apps or widgets.

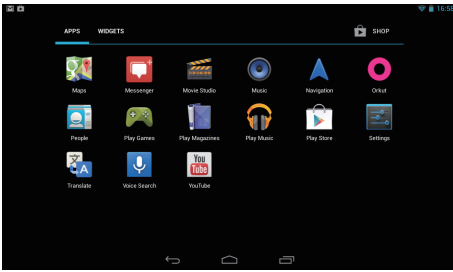


- 2 Tap and hold an icon or widget until the page is displayed.
  - ↳ The icon or widget is added to the selected page.

---

### Delete items

 - 1 Tap and hold an item to unlock.
- 2 Drag the item to **x**.

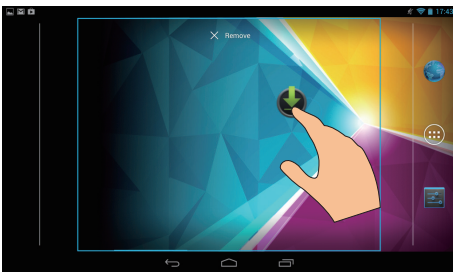


---

### Relocate items

- 1 Tap and hold an item to unlock.
- 2 Drag the item to a space on the page.
- 3 Release the item.
  - ↳ The item moves to the space.

---

### Add wallpapers

- 1 From the Home screen, go to  > **Display** > **Wallpaper**.
- 2 Select your options.


 
---


### Text entry

With the onscreen keyboard, you can enter text in multiple languages.

---

### Select input methods

 - 1 From the Home screen, select  **Settings** > **Language & input**.
- 2 Select your input methods:
  - Google Keyboard:** for multiple languages
  - Google voice typing:** for text input through voice
- 3 To select your input options, tap  next to the input method.

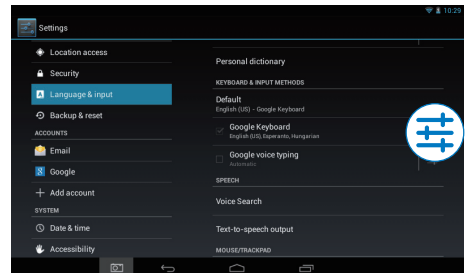

---

## Enter text

 
- 1 Tap the text box to show the onscreen keyboard.
  - 2 Tap on the keys to enter text.
- To delete the entry before the cursor,
- Select **<X>**.
- To move to the next line,
- Select **↵**.

---

## Use the Google Keyboard


### Select keyboard settings or input languages

- On the onscreen keyboard, tap **≡**.

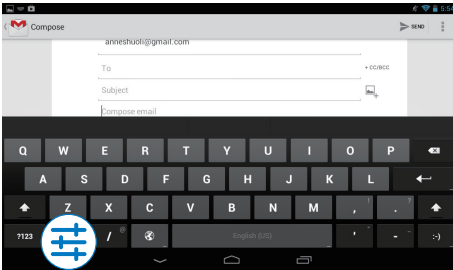

### Switch between selected input languages

 - 1 Add to the option list the languages that you often use.
  - ① On the onscreen keyboard, tap **≡** > Input languages.
  - ② Tap the checkbox to select languages.
- 2 On the onscreen keyboard, tap and hold **⌘** to select a language.

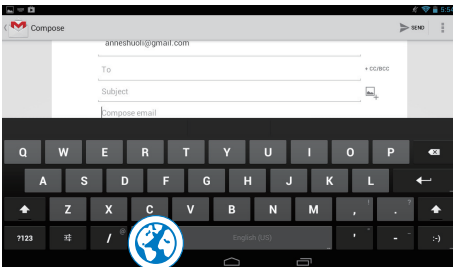

## Switch between letters and numbers/symbols

- Tap **?123** or **ABC**.



Tip

- On the numeric/symbol keyboard, tap **~|{** to switch between numbers/symbols and more symbol choices.

## Switch between upper and lower cases

 
- Tap **↵** repeatedly to switch between **↵** and **↵**.
  - ↵ : The next letter you enter is in upper case.
  - ↵ : All letters you enter are in lower case.

### To switch to the input mode of all upper cases,

- 1 Tap and hold **↵** or **↵**.
  - ↳ The button changes to blue.
- 2 When a click sounds, release the button.
  - ↳ **↵** is displayed.
  - ↳ All letters you enter are in upper case.

### Switch to other options on a button

- Tap and hold the button that is marked with a symbol at the lower/upper right corner:
  - ↳ A pop-up screen is displayed.

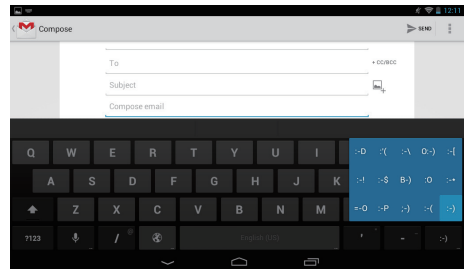

---

## Edit text

 
You can cut, copy, and paste the text that you have entered.

### Copy or cut the selected text

- 1 Tap and hold the text until the pop-screen is displayed.

↳ Current word is selected, with marks for start and end positions.


- 2 Drag the marks to select or change the start/ end positions.
  - Tap **Select all** to select all the text.

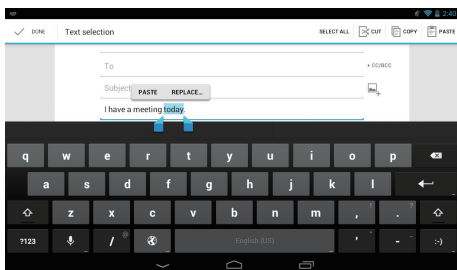

- 3 Tap **Copy** or **Cut**.
  - ↳ The selected text is copied or cut.

### Paste the selected text

 - 1 Put the cursor in a position.
- 2 Tap and hold the position until the pop-screen is displayed.
  - ↳ In the pop-up screen, the option **Paste** is displayed.
  - ↳ Tap **Paste**. The text is pasted in the selected position.

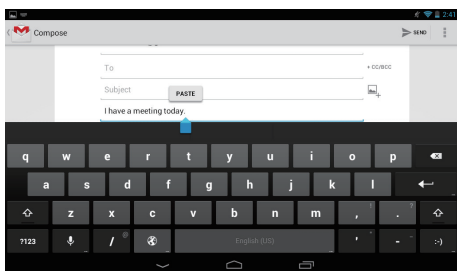



# 5 Connections

## Connect to the Internet

You can connect **PI3210G** to the Internet through Wi-Fi or mobile network.

### Connect through Wi-Fi

  Connect **PI3210G** to a wireless router (Access Point). You can connect **PI3210G** to the network that is built around the router. To connect to the Internet, make sure that the router connects to the Internet directly and no dial-up is required on the computer.

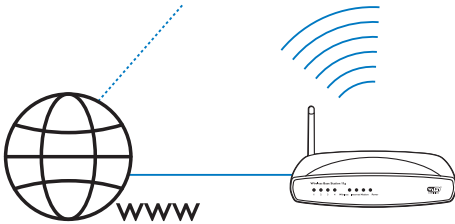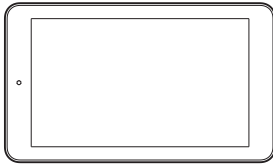

- 1 From the Home screen, tap **Settings** > **Wi-Fi**.
- 2 Select the option to switch on the Wi-Fi function.  
↳ You see a list of Wi-Fi networks in range.
- 3 Connect **PI3210G** to a network:
  - ① Tap to select a network.
  - ② On the pop-up screen, enter the password to the network.

- ↳ **Wi-Fi** is displayed in the status bar when the Wi-Fi connection is completed successfully.
- ↳ Next time you switch on **PI3210G**, **PI3210G** connects to the previously connected network automatically.


### Note

 - If MAC address filtering is enabled on your router, add the MAC address of **PI3210G** to the list of devices that are allowed to join the network. To find the Wi-Fi MAC address, go to **Settings** > **About tablet** > **Status** on the Home screen.
- To refresh the list of networks, select **i** > **Scan** at the upper-right corner of the screen.
- If you have disabled SSID broadcasting or hidden the Service Set Identifier (SSID) of the router, manually enter the SSID or public name for the network. Go to **Settings** > **Wi-Fi**. On the top bar, select **+**.
- If the DHCP (Dynamic Host Configuration Protocol) is unavailable or disabled on the router, manually enter the IP address of **PI3210G**.

### Connect through the mobile network

With your SIM card, you can connect **PI3210G** to the Internet through the mobile network. Consult your service provider for more information.

- 1 Mount your SIM card onto **PI3210G**.

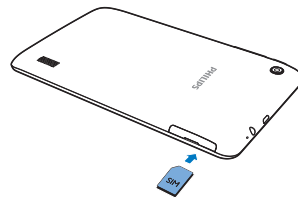


- 2 On the drag-down menu, tap to switch on **Mobile**.



## Connect to your computer

 
Connect **PI3210G** to a computer through the USB cable.

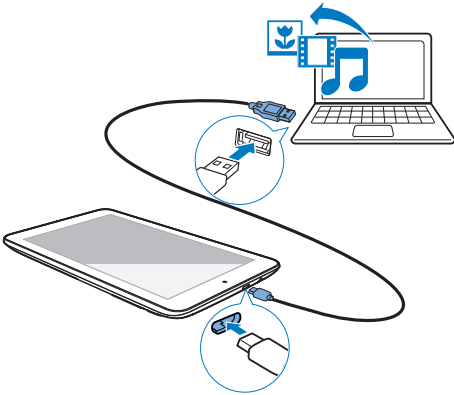

You can transfer apps or media files from your PC to **PI3210G**, the internal storage or SD card.

## Use a Micro SD card

 Insert a Micro SD card (up to 32 GB) into **PI3210G**. You can expand the memory size of **PI3210G**.

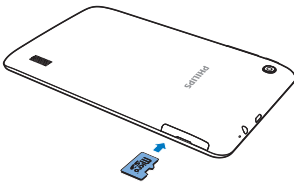

## Connect to Bluetooth

Through Bluetooth, you can do the following wirelessly on **PI3210G**:

- Receive or send files from or to another connected Bluetooth device;
- Listen to music through stereo Bluetooth headphones;

- Listen to music through Bluetooth speakers, like **Philips SHOQBOX**.

## Connect with Bluetooth devices


You can connect **PI3210G** with Bluetooth devices in the following ways:

 
- Connect another Bluetooth device;
- Get connected by another Bluetooth device.

### Tip

- Before the connection, consult the user manual of the Bluetooth device to get its Bluetooth pairing passcode. Or, try 0000 or 1234.

## Connect another Bluetooth devices

- 1 Make sure that the device is discoverable by another Bluetooth device.
  - Consult the user manual of the Bluetooth device for information.
- 2 On **PI3210G**, search for the Bluetooth device:
  - ① From the Home screen, tap  **Settings > Bluetooth**.
  - ② Select the option to switch on Bluetooth.

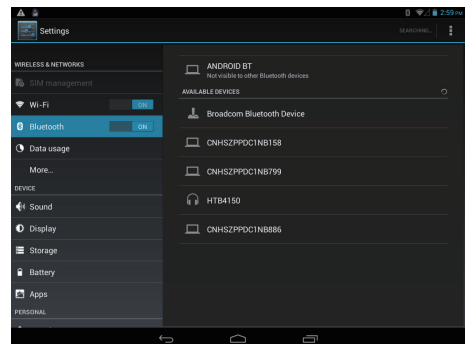


↳  is displayed on the status bar:

- ③ Tap **SEARCH FOR DEVICES**.

- ↳ The device is displayed under **AVAILABLE DEVICES** after it is discovered.


- 3 Pair with the device:
  - On **PI3210G**, tap the device, and enter the passcode as prompted;
  - On the device, enter the passcode as prompted.
    - ↳ A message is displayed when the pairing is complete.

### Get connected by another Bluetooth devices

 - 1 Make sure that **PI3210G** is discoverable by another Bluetooth device:
  - ① From the Home screen, tap  **Settings > Bluetooth**.
  - ② Select the option to switch on **Bluetooth**.
  - ③ Tap **PI3210G**.
    - ↳ \***PI3210G** is discoverable for two minutes.
- 2 On the Bluetooth device, search for and pair with **PI3210G**.
  - For information about the steps, consult the user manual of the Bluetooth device.



Tip:



- \*To change the device name of **PI3210G**, go to  **Settings > Bluetooth**, tap  and select **Rename tablet**.

---

## Send or receive files through Bluetooth

### Send files to another Bluetooth device

- 1 Make sure that
  - you have paired **PI3210G** with the Bluetooth device;
  - on **PI3210G** and Bluetooth device, Bluetooth is on.

- 2 On **PI3210G**, send files through Bluetooth:
  - ① In **Gallery**, play a photo. Tap  **<> Bluetooth**.
  - ② Tap the paired device to start sending.
    - ↳ When sending or receiving is in progress,  is displayed at the top of the screen.
- 3 On the Bluetooth device, receive the files:
  - Confirm as prompted.
  - Save the files as prompted.


### Receive files from Bluetooth device

- 1 Make sure that
  - you have paired **PI3210G** with the Bluetooth device;
  - on **PI3210G** and Bluetooth device, Bluetooth is on.
- 2 On the Bluetooth device, send files to **PI3210G** through Bluetooth.
- 3 On **PI3210G**, receive the files:
  - At the top of the screen, tap .
    - Confirm as prompted.
      - ↳ You can also find the received files in  **Settings > Bluetooth**. Tap  and select **Show received files**.

---

## Listen to music through stereo Bluetooth headphones and speakers

### Connect the stereo Bluetooth headphones or speakers

- ↳ Follow the steps under "Connect another Bluetooth device". After successful connection,  is displayed.
- ↳ Next time you switch on Bluetooth on the devices, the Bluetooth connection is established automatically.

### Listen to music through the stereo Bluetooth headphones or speakers

- Play music on **PI3210G**.
  - ↳ You listen to the music through the connected Bluetooth headphones or speakers.

---

## Connect to GPS

To access location services, switch on the GPS function to connect to GPS (Global Positioning System).

- From the Home screen, tap **Settings > Location access > Access to my location**. Switch on **GPS satellites**.
- Alternatively, use the drag-down menu to switch the GPS function on or off (see 'Use the drag-down menu of setup options' on page 7).

---

## Portable hotspot

**PI3210G** can work as a Wi-Fi hotspot. Through **PI3210G**, you can have your wireless devices connected to the Internet.

**To connect to the Internet through PI3210G,**

- 1 Connect **PI3210G** to the Internet through the mobile network (see 'Connect through the mobile network' on page 14).
- 2 In **More... > Tethering & portable hotspot**, switch on **Wi-Fi hotspot**.
- 3 Tap **Wi-Fi hotspot** to select **Set up Wi-Fi hotspot**. You can check and edit the network name (SSID) and password.
- 4 On your wireless devices, search for and connect to **PI3210G**.

---

## Mirror the screen to a wireless display

With Miracast Wireless Display, you can mirror the screen of **PI3210G** to a wireless display or TV that also supports Miracast Wireless Display.

- 1 Make sure that the wireless display or TV is discoverable.
  - Consult the user manual to enable the function on the wireless display or TV.
- 2 On **PI3210G**, go to **Settings > Display**. Switch on **Wireless Display**.
- 3 In **Wireless Display**, tap **SEARCH FOR DISPLAYS**.
  - ↳ The device is displayed under **AVAILABLE DEVICES** after it is discovered.
- 4 Tap the device to start pairing and connection.
  - ↳ You can mirror the screen of **PI3210G** to the device.



Tip


- To rename **PI3210G**, go to **Settings > Wi-Fi**. Select **Wi-Fi Direct**. Tap **RENAME DEVICE** to edit the name of **PI3210G** that is shown on the wireless display.

# 6 Apps

With apps, you can access functions, services, and different audio/ video content on **PI3210G**.



## Install apps

 
On **PI3210G**, you can install apps from


-  (**Play Store**) over the Internet; or
- other sources, such as other online sources, the internal storage of **PI3210G**, and the Micro SD card that you have inserted into **PI3210G**.

## Play Store

**1** Log in to or create your Google account to access Google services.  
To add a Google account, do the following:


- ①** Go to  (**Play Store**). Tap  > **Accounts**.

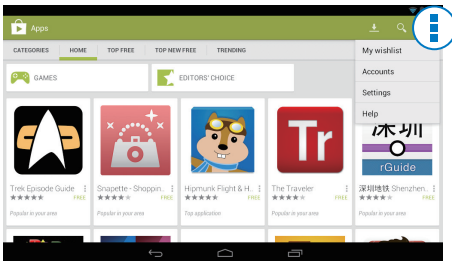

- ②** Select **Add account**.
  - ③** Follow onscreen instructions to add an account.
- 2** Search for apps as needed.
- Tap  for keyword search.
- 3** Download the app:
- Tap the app. Confirm as needed.


- ↳ When the downloading is complete, installation starts automatically.
- ↳ Check the status bar to find the status. If necessary, tap the icon to start installation as prompted.

## Tip

- To manage your accounts, go to  **Settings** > **ACCOUNTS**. Tap an account to select your options.

## Other sources


**Allow the installation from unknown sources**

- From the Home screen, go to  > **Security**. Tap to switch on **Unknown sources**.
- ↳ If the function is enabled, the tick box is selected.

**Download/ transfer apps**


- To download apps from online sources, follow the onscreen instructions;
- To transfer apps to the internal memory or SD card of the device, use the USB cable to connect **PI3210G** to your PC.

**Start installation**

- The downloaded apps start installation automatically;
- To find the apps that you have transferred to the internal memory or SD card, go to . Find the apps and tap the option to start installation.

## Manage apps

You can manage the apps on **PI3210G**, for example, install/ uninstall apps, stop running apps, or select other options.

- 1** From the Home screen, select  **Settings** > **Apps**:


- In **DOWNLOADED**, find the apps that you have downloaded from the **Play Store** or other sources.
- In **RUNNING**, find the apps that are running on **PI3210G**.
- In **ALL**, find all the apps that you have installed on **PI3210G**.

 
 
**2** Tap an app.

↳ Options and information are displayed.



**3** Tap to select an option.

# 7 Browser

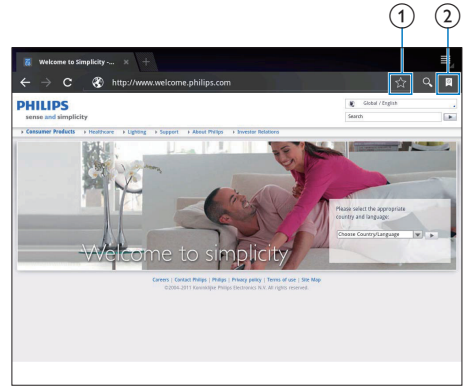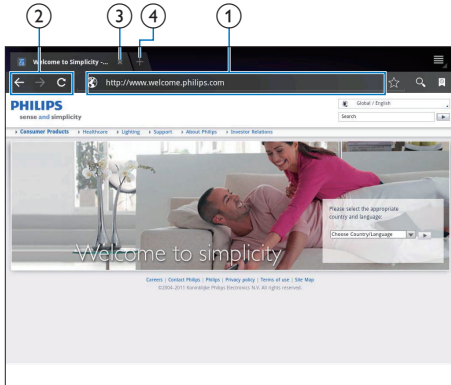With , you can browse Web pages.



- ① Add a bookmark to current Web page.
- ② Go to the bookmarked Web pages.

- 1 From the Home screen, tap .
- 2 Tap the icons or text box to do the following:
  - ① Enter the address of web pages. Tap  to start search.
  - ② Tap the icons to search backwards, forward, or refresh the Web page.
  - ③ Close the Web page.
  - ④ Open a new Web page.

To switch between Web pages,

- At the top bar, tap the tab of the selected Web page.

---

## Add a bookmark

Add a bookmark. You can quickly access a visited Web page.

# 8 Email

On **PI3210G**, you can receive and send email as you do on a computer. Do the following:


- Set up your email accounts on the device.

## Set up your email account

 
On **PI3210G**, set up your email accounts in the following ways:





- Set up your POP3 or IMAP mail accounts, or
- Set up your Microsoft Exchange account to access your Exchange mailbox at work (see 'Set up your Microsoft Exchange account' on page 25).

### Set up your POP3/ IMAP account

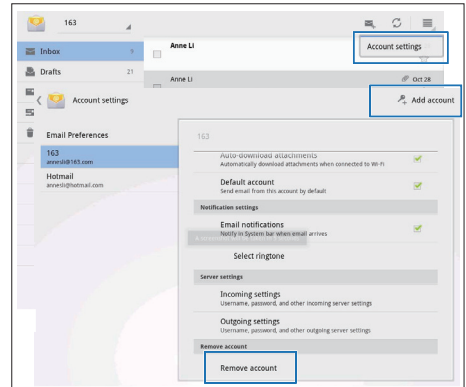
- 1 From the Home screen, go to .
- 2 Set up your email account:
  - Enter the information about your account;
  - Select pop3 or IMAP account.
- 3 Follow the onscreen instructions to complete the setup.
  - Consult your email service provider for the setup information, such as the outgoing server; incoming server.

## Select account settings



 - 1 On the screen of mail list, tap  > **Settings**.
  - ↳ A pop-up screen is displayed.
  - If necessary, tap  repeatedly to return to the screen of mail list.
- 2 Select your options for the account.  
**To add an account,**
  - On  > **Settings**, tap **Add account**.  
**To remove an account,**
  - On  > **Settings**, select **Remove account**.
    - ↳ Current account is removed.

## Check your email messages

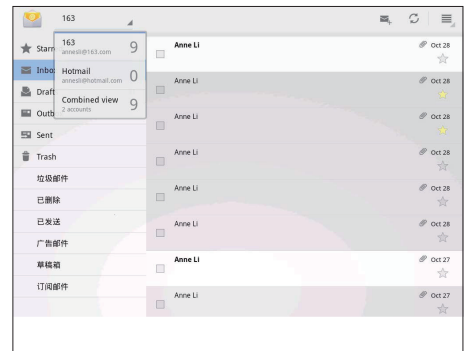

You can check your email messages in the following ways:

- Check one combined mailbox;

- Check messages by account;
- Check starred messages;
- Check unread messages.

**To check one combined mailbox,**

- 1 On the screen of mail list, tap the account name.
  - ↳ A drop-down list of account names is displayed.
  - If necessary, tap ↩ repeatedly to return to the screen of mail list.

**2 Tap Combined view.**

- ↳ Different colors are used to mark the messages from different accounts.

**To check messages from a single account,**

- 1 Repeat **Step 1** in "To check one combined mailbox".

**2 Tap the selected account.**

- ↳ Messages from the account are displayed.

 
**To check starred messages,**

- Tap the star next to the message.
  - ↳ The message is added to the **Starred** folder.

**To check unread messages,**

- On the screen of mail list, the unread messages are in white.


## Compose email messages

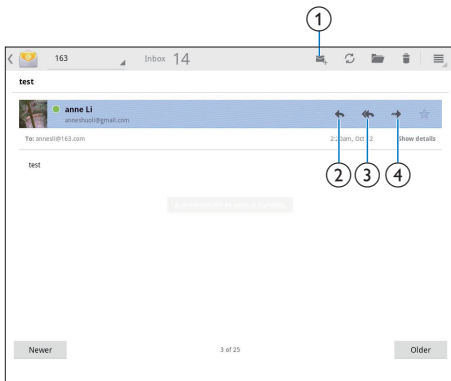

When you read a message, tap the icons to do the following:

- ① **Compose a new message**
- ② **Reply**
- ③ **Reply all**
- ④ **Forward**

## Organize email messages

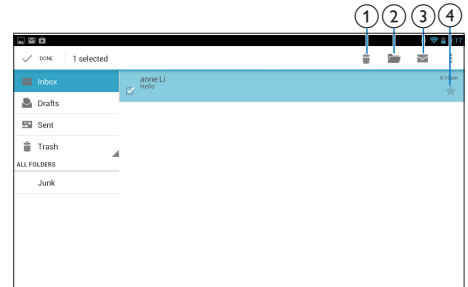 

- 1 On the screen of mail list, select messages you want to manage:
  - Tap the check boxes next to the messages.
    - ↳ Selected messages are highlighted.

**2 Tap the icons to do the following:**

- ① **Delete the messages.**
- ② **Move the messages to the selected folder.**
- ③ **Mark the messages as read or unread.**
- ④ **Add the messages to the Starred folder.**



 
# 9 Tools

## Camera

With the 0.3 and 2.0 Mega-pixel lens at the front and back respectively, you can do the following on **PI3210G**:

- Shoot photos or videos by using the camera or video recorder;
- Through apps, video chats with friends over the Internet.

### Take photos or record videos

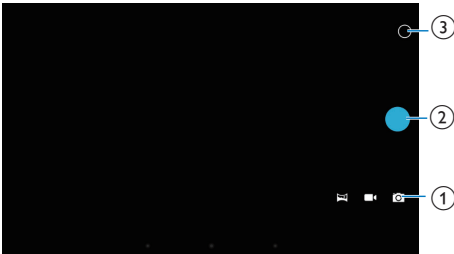

- ① Selector for camera, video recorder, or panorama mode
- ② Shutter
- ③ Options menu

- 1 From the Home screen, go to .  
↳ The onscreen buttons are displayed.
- 2 Tap , , or to switch to the camera, video recorder; or panorama mode.
- 3 Tap > to switch to the camera lens at the front or back.
- 4 To take photos:
  - ① Point the lens at objects.
  - ② Tap .
  - ③ The photo is taken.

To record videos:

- Tap / to start or stop video recording.

To take a panoramic picture:

 
- ① Point the lens at the view.
- ② Tap to start shooting.
- ③ Sweep through the view by moving the device slowly and steadily.  
↳ When the progress bar comes to the end, the shooting stops. A panoramic picture is generated.

To view photos/ videos


- Go to Gallery.

Select settings

Tap to display the options menu:

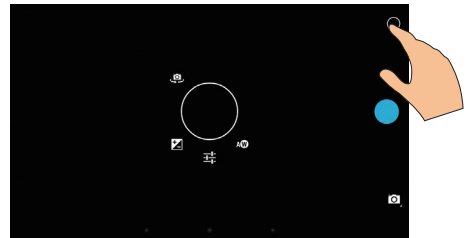

 - Tap to select your options for the camera or video recorder.
- Tap to select an exposure value according to the lighting conditions.
- Drag around the circle to select a scene suitable to your shooting environment.

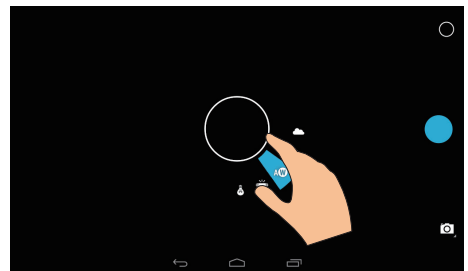

---

## Calendar

On the device, you can sync the calendar with:

- the calendar of your Microsoft Exchange account (see 'Set up your Microsoft Exchange account' on page 25).

# 10 Use the device in corporate networks

You can use **PI3210G** in corporate networks. Install the secure credentials or security certificates before you access corporate networks.

The access to corporate network may allow you to set up your Microsoft Exchange account and add VPN on the device. With the Microsoft Exchange account, you can access your exchange mailbox at work.

## Install secure credentials

Ask your network administrator for secure credentials or security certificates.

**To install the secure credentials,**

- 1 Make sure that you transfer the files of secure credentials from a PC to the SD card that you have mounted onto the device.

### Note

- On **PI3210G**, make sure that the secure credentials are saved to the root directory of the SD card, instead of under a folder.

- 2 Install the secure credentials:

- ① From the Home screen, go to **Security > Install from SD card**.
- ② Tap the file to start installation.
- ③ Set the password and name for the credentials as prompted.

**To apply the secure credentials,**

- 1 In **Security**, select **Security > Trusted credentials**.
- 2 Make sure that the credential is selected.

- ↳ If the function is enabled, the tick box is selected.
- ↳ On the device, you allow the applications to use the secure credentials.

## Set up your Microsoft Exchange account

- 1 From the Home screen, go to **Settings**.
- 2 Set up your email account:
  - Enter the information about your account, and select **Exchange** as the account type.
  - If you have set up other email accounts, select **Settings** on the screen of mail list. Tap **Add account**.
- 3 Follow the onscreen instructions to complete the setup.
  - For the server address, enter the web address for your Outlook web access, for example, **owa.company name.com** or **mail. company name.com/owa**.
  - For other setup information, such as domain name, user name, check with your system administrator.

### Note


- The device can work with Microsoft Exchange 2003 and 2007.

## Add VPN


Virtual private network (VPN) allows you to connect to private networks through secure access.

Sometimes, you need VPN access to connect to corporate networks.

**To add VPN on the device**


- 1 Ask your network administrator for the configuration information.
- 2 From the Home screen, go to  > **Wireless & networks** > **More** > **VPN**.
- 3 Configure the VPN as prompted.
- 4 Install the secure credentials as needed (see 'Install secure credentials' on page 25).

**To connect to the VPN,**

- 1 Make sure that you have connected **PI3210G** to the Internet.
- 2 From the Home screen, go to  > **Wireless & networks** > **More**.  
↳ A list of VPNs is displayed.
- 3 Tap the VPN to start connection.

# 11 Settings

To select your settings,

- 1 Go to  from the Home screen.
- 2 Swipe up or down to scroll through lists of options.
- 3 Tap an option to select it.

---

## SIM management

In **SIM management**, check or select the settings of your SIM card.

---

## WIRELESS & NETWORKS


### Wi-Fi

In **WIRELESS & NETWORKS > Wi-Fi**, select your Wi-Fi settings on the device (see 'Connect through Wi-Fi' on page 14).


#### Add Wi-Fi network


##### Enter SSID manually

SSID (Service Set Identifier) is the name of a router. By the name, the router is recognized by other Wi-Fi devices. If you have hidden the SSID of the router (for example, disable the SSID broadcasting), the router is invisible in the list of available networks. To connect **PI3210G** to the router, enter the SSID of the router manually before you search for available networks on the **PI3210G**.

- 1 In **Wi-Fi**, drag the slider to switch on Wi-Fi.
- 2 On the top bar, tap .
- 3 Enter the SSID of the router:
  - ↳ The **PI3210G** starts searching for the network.
  - ↳ You can find the network in the list of networks.
- 4 Connect **PI3210G** to the network.

#### Network notification

Switch on **Network notification**. At the base of the screen,  is displayed when an open Wi-Fi network is available.

- 1 In **Wi-Fi**, drag the slider to switch on Wi-Fi.
- 2 At the top bar, tap  and select **Advanced > Network notification**.

---

## Airplane mode

Switch on the airplane mode when:

- you need to disable the access to wireless connection for safety purposes, such as on an airplane.

In **WIRELESS & NETWORKS**, select **More > Airplane mode**. You can disable or enable the access to wireless connection.

---

## VPN settings

Use VPN settings to access private networks, such as corporate networks (see 'Use the device in corporate networks' on page 25).

---

## DEVICE

---

### Sound

In **Sound**, select sound settings for your device.

---

<b>Volume</b>	Drag the slider to select the volume level for media, notifications, and alarms.
<b>Notification Sound</b>	Set an audio file as ringtone.
<b>Touch sounds</b>	Sounds play when you tap on the screen.
<b>Screen lock sound</b>	Sounds play when you lock/unlock the screen.

---

### Display

In **Display**, select your display settings:

#### Lock screen notifications

- Switch on to show notifications on the lock screen.

### Wallpaper

- Set the wallpaper of the device.

### Auto-rotate screen

- Tap to switch on or off screen rotation.

### Brightness

- Drag the slider to change the display brightness.

### Daydream

- Select your screen saver options: what screen saver to display and when to display the screen saver. When the screen saver is on, tap on the screen to exit.

### Font size

- Select font size for the on-screen display.

### Sleep

- After the selected time duration, the screen switches off automatically. To save battery power, select a low value.

---

## Storage

In **Storage**, learn the space information about the internal storage and SD card on your **PI3210G**.

---

## Battery

In **Battery**, check the battery use by applications.

---

## Apps

In **Apps**, manage the apps on the internal storage of **PI3210G** (see 'Manage apps' on page 18).

---

## Location access

- In **Access to my location**, switch on or off the options.
  - ↳ If the function is enabled, the tick box is selected.

↳ You can allow or disallow your location information to be used in online location services of Google, such as Maps, or other relevant services and applications.

- In **GPS satellite**, switch on to use the location services that requires GPS assistance.

---

## Security

---

### Screen lock

By default, to unlock the screen of **PI3210G**, press the power/ lock button and then, drag the lock to an icon.

In **Screen lock**, you can set a pattern, pin, or password as the unlock security. To unlock the screen, such unlock security is required.

<b>None</b>	Switch off the lock.
<b>Slide</b>	Slide to unlock the screen (default).
<b>Pattern</b>	Set a pattern as the unlock security.
<b>PIN</b>	Set a PIN that consists of numbers.
<b>Password</b>	Set a password that consists of a combination of numbers, letters, and symbols.

---

### Find Me Back

With the Google service, locate the device and protect your personal data when **PI3210G** is lost.

---

## Visible passwords

Your password consists of several characters. To make sure that you have entered the characters correctly, show the characters as you type the password. Switch **Make passwords visible** on or off as needed.

- Tap the tick box.
  - ↳ If the function is enabled, the tick box is selected.

---

## Device administrators


 
Applications in corporate networks require the rights of device administrator, such as the email and calendar under your Microsoft Exchange account.


Before you uninstall such an application, disable the rights of device administrator:

- In **Device administrators**, tap an application.
  - ↳ The rights of device administrator are disabled.
  - ↳ You cannot sync data for the application.

---

## Unknown sources

On **PI3210G**, you can install applications that you download from  (**Play Store**), or from sources other than .

- For the applications from sources other than , tap **Unknown sources** to allow installation on the **PI3210G**.
  - ↳ If the function is enabled, the tick box is selected.

---

## Language & input

---

### Language


In **Language**, select the language for the onscreen instructions of **PI3210G**.

---

## Personal dictionary

In **Personal dictionary**, add or remove words or phrases to/ from the user dictionary. You can customize the word suggestions that are displayed on the pop-up screen during your text entry on the Google keyboard.

**To add a word or phrase,**


- Tap  to add a word or phrase.

**To edit a word or phrase,**

- 1 Tap on the word or phrase.
  - ↳ A pop-up screen is displayed.

- 2 Edit the word or phrase.

**To remove a word or phrase,**

- Tap  next to the word or phrase.

---

## Voice Search

In **Voice Search**, select your options for Google Voice Search.

---


## Text-to-speech output

In **Text-to-speech output**, select your options for:

- voice output for the accessibility function on the device.

**Install voice data**

Download the voice data for speech synthesis.

- 1 Connect the device to the Internet.
- 2 Select your preferred text-to-speech engine. Tap  > **Install voice data**.
  - ↳ Select and download the voice data.

**Select your options for the voice output**

- 1 In **Speech rate**, select a speed at which the text is read, normal, fast, or slow.
- 2 Tap **Listen to an example**.
  - ↳ Your options are used to play the demo of speech synthesis.

---

## Reset

In **Backup & reset** > **Factory data reset**, you can erase all the data that you have stored on the internal storage of **PI3210G**.

---

## ACCOUNTS

In **ACCOUNTS**, add, remove, or manage an account.

- Tap **Add account** to add an account.
- Tap an account to manage the account, for example, remove the account or select sync options.

---

## Date & time

---

### Automatic setting

Over the Internet, you can sync the date and time on **PI3210G** from Philips online services.

**To switch on the automatic clock setting,**

- 1 In **Date & time**, tap to switch on **Automatic date & time**.
  - ↳ If the function is enabled, the tick box is selected.
- 2 In **Select time zone**, select your current time zone.
- 3 In **Use 24-hour format** and **Select date format**, select your options for time and date display.

---

### Manual setting

- 1 In **Date & time**, tap to switch off **Automatic date & time**.
  - ↳ If the function is disabled, the tick box is deselected.
- 2 Tap to set date, time, and time zone in **Set date**, **Set time**, and **Set time zone**.

- To select a date, tap the date in the calendar.

---

## Accessibility

With the accessibility function, actions on the screen of the device are read out through the text-to-speech technology, such as the taps, selection of menu items. For people who cannot read the screen clearly, the function allows them to use the device in an easier way.

**Use the accessibility function**

- 1 Tap **TalkBack** to switch on.
- 2 In Text-to-speech output, select your options for voice output (see 'Text-to-speech output' on page 29).

---

## About tablet

In **About tablet**, learn the status and information about your **PI3210G**.

---

### System updates

In **System updates**, check for the system updates of **PI3210G**. Make sure that you have connected the device to the Internet.

---

### Status and information about the device

- In **Status, Battery status**: Display the status of power charging.
- **Battery level**: Display remaining power by percentage.
- **IP address**: Display the IP address that is assigned to **PI3210G** when the device is connected a Wi-Fi network.
- **Wi-Fi MAC address**: Display the unique identifier that is assigned to the network adapter of **PI3210G**. If MAC address filtering is enabled on your router, add the MAC address of



**PI3210G** to the list of devices that are allowed to join the network.

- **Bluetooth address:** Display the Bluetooth address of **PI3210G** when the Bluetooth function is switched on.

**Legal information:** Legal information for **PI3210G**

**Model number:** Model no. of the device

**Android version:** Firmware version of the Android platform that the device is running on

**Build number:** Software version of **PI3210G**

# 12 Check for firmware update

Connect **PI3210G** to Wi-Fi. You can receive notifications about firmware updates. Drag down the top bar to check the notifications.

---

## Update the firmware online

On **PI3210G**, you can update the firmware through our online services over the Internet (see 'System updates' on page 30).

# 13 Technical data

## Power

- Power adapter  
CBA0015AK2C1  
Input: 100-240V~ 50/60 Hz, 0.5 A  
Output: DC 5.0V, 2 A
- Power supply: 3,240 mAh Li-ion polymer internal rechargeable battery
- Play time<sup>1</sup>  
video streaming through Wi-Fi: 2 hours

## Operating temperature

- 0°C to 45°C

## Storage temperature

- -10°C to 60°C

## Display

- Type: LCD Touch-sensitive screen
- Diagonal screen size (inch): 7
- Resolution: 1024 x 600 pixels

## Platform

Android™ 4.2.2

## Connectivity

- Headphone: 3.5 mm
- USB: 2.0 High speed, Micro type
- Wireless LAN: Wi-Fi 802.11 b/g/n
- Mobile network  
GPRS/ EDGE (850, 900, 1800, 1900 MHz)  
HSPA+ (900, 2100 MHz)
- Bluetooth  
Bluetooth profiles: A2DP, AVRCP, Object push profile  
Bluetooth version: 2.1+EDR
- GPS

## Headphone sound

- Channel separation: > 45 dB
- Frequency response: 60-18,000 Hz
- Output power: 2 x 5 mW (maximum)
- Signal to noise ratio: > 80 dB

## Speaker sound

- Frequency response: 100-15,000 Hz
- Output power: 600 mW
- Signal to noise ratio: > 60 dB

## Audio playback

- Supported formats:

WAV, MP3, AAC / .m4a, OGG Vorbis, 3GPP, AMR-NB (mono), AMR-WB (stereo), FLAC,

MIDI (Type 0 and 1 (.mid, .xmf, .mxmf)), RTTTL/RTX (.rtttl, .rtx), OTA (.ota), and iMelody(.imy)

## Audio capturing

- AMR-NB  
Bitrate: 4.75 to 12.2 kbps  
Sampling rate: 8 kHz  
File supported: 3GPP (.3gp)
- Specified  
Bitrate: 128 kbps  
Sampling rate: 44.1 kHz  
File format: MP3
- Built-in microphone: mono

## Video playback

- Supported formats:  
MPEG-4 (.3gp), H.264 AVC (3gp, .mp4), H.263 (3gp, .mp4), VP8 (.webm, .mkv), RMVB (.rm, .rmvb)

## Video capturing

- H.264 Aspect ratio (4:3 or 16:9 selectable)
- Video resolution: VGA (640 x 480)
- Frame rate: 30 frames per second
- Container: .mp4
- Audio format: MP3
- Lens: Fixed focus length
- Recording time: Depending on the storage

## Still picture playback

- Supported formats:  
JPEG, BMP, PNG, GIF

## Still picture capturing

- Picture resolution: VGA (640 x 480)
- Picture format: JPEG, PNG
- Lens: Fixed focus length

## Storage media

- Built-in memory capacity:  
8 GB NAND Flash
- External storage:  
Micro SD memory card slot (Maximum memory card capacity: 32 GB)

## Preloaded applications

- Play Store, Google Search, Voice Search, Chrome, Maps, Earth (available in some countries), Google+, Blogger, Gmail, Hangouts, Drive, Orkut, Youtube, Play

Movies & TV(available in some countries),  
Play Music, Play Books(available in some  
countries), Translate

- Browser; Gallery, Movie Studio, Camera,  
Email, Calendar; Clock, Calculator
- ES File Explorer; Deezer (available in some  
countries), AccuWeather



#### Note

- <sup>1</sup> Rechargeable batteries have a limited number of charge cycles. Battery life and number of charge cycles vary by use and settings.
- <sup>2</sup> 1GB = 1 billion bytes; available storage capacity is less. Full memory capacity may not be available as some memory is reserved for the device. Storage capacity is based on 4 minutes per song and 128 kbps MP3 encoding.

# 14 Warranty

Any of the following misuse conditions seen or perceived on this device may void the user's warranty of this device:

- Defects or damages resulting from abnormal use of the product by the customer, such as plastic surfaces and other externally exposed parts scratched, cracked or broken, clean disagree with the operating instructions, as well as spill food or liquids of any kind;
- Defects or damage resulting from testing, installation, alteration, modification of any kind in our products as well as repair workshops conducted by an unauthorized technical assistance;
- Breakage or damage were not observed upon acquisition (cabinet, cables, screen, etc.);
- Products which have had the serial number removed, adulterated or made illegible;
- Defects and damage resulting from the use of components not compatible with Philips brand ; (cabinet, cables, cards, power supply, general parts, etc.);
- Defects and damage caused by natural agents (flooding, salt spray, and other electrical discharge) or exposure to excessive heat;
- Defects or damage caused by the use of software and (or) hardware not compatible with the specifications of Philips products;
- Parts that wear out with regular use, such as cables, battery, buttons, etc.;
- Incidents of accidental damage, such as falls, misuse, contact and/or immersion with liquid.



Specifications are subject to change without notice  
© 2014 Koninklijke Philips Electronics N.V.  
All rights reserved.

Document order number: 000000000000

