



303SH User Guide

303SH User Guide Contents

Introduction

| | |
|-------------------|---|
| Introduction..... | 3 |
|-------------------|---|

Getting Started

| | |
|-----------------------------|----|
| Package Contents..... | 6 |
| Parts & Functions..... | 6 |
| USIM Card Installation..... | 7 |
| SD Card..... | 8 |
| Charging Handset..... | 11 |
| Power On/Off..... | 12 |
| Touchscreen Operations..... | 13 |

Basic Operations

| | |
|---------------------------|----|
| Basic Operations..... | 16 |
| Applications..... | 18 |
| Handset Phone Number..... | 19 |
| Mobile Manners..... | 19 |
| Text Entry..... | 20 |
| Google™ Accounts..... | 22 |
| Google Play..... | 24 |
| Security Codes..... | 26 |
| USIM PIN..... | 27 |
| Screen Lock..... | 28 |
| Software Updates..... | 29 |

Handset Interface

| | |
|---|----|
| Welcome Sheet (Lock Screen) Basics..... | 32 |
| 3-Line Home Basics..... | 33 |
| Status Bar..... | 34 |
| Notifications Window..... | 35 |
| Using Quick Launcher..... | 36 |
| Using Mini-Applications & Mini-Widgets..... | 37 |
| Customizing 3-Line Home..... | 38 |

Phone

| | |
|------------------------|----|
| Calling..... | 42 |
| Optional Services..... | 43 |
| Address Book..... | 48 |

Messaging & Browser

| | |
|--|----|
| Messaging..... | 50 |
| Sending S! Mail/SMS..... | 50 |
| Opening & Replying to S! Mail/SMS..... | 52 |
| Opening Received S! Mail/SMS..... | 54 |
| Creating/Sending Gmail..... | 54 |
| Opening Received Gmail..... | 55 |
| Using Internet Mail..... | 56 |
| Web Browsing (Browser)..... | 58 |

Camera

| | |
|-------------------|----|
| Photo Camera..... | 64 |
| Video Camera..... | 65 |

Music & Images

| | |
|---------------------|----|
| Music & Images..... | 68 |
|---------------------|----|

| | |
|-----------------------------------|----|
| Music Files (Music)..... | 68 |
| Still Images & Video (Album)..... | 69 |

Connectivity

| | |
|-----------------------|----|
| Wi-Fi..... | 72 |
| Tethering Option..... | 74 |
| Bluetooth®..... | 75 |

Global Services

| | |
|---------------------------------|----|
| Global Roaming..... | 80 |
| Calling from Outside Japan..... | 81 |

Settings

| | |
|-----------------------------------|----|
| About Settings..... | 84 |
| Sound Settings..... | 85 |
| Wallpaper & Display Settings..... | 87 |
| Recent Apps Key Setting..... | 88 |
| Device Info..... | 88 |
| Add Account..... | 89 |
| Wi-Fi Settings..... | 90 |
| Home Applications Setting..... | 90 |
| Storage Settings..... | 91 |
| Application Settings..... | 91 |
| Data Transfer..... | 92 |
| Other Settings..... | 94 |

Appendix

| | |
|-----------------------|-----|
| File Storage..... | 104 |
| Backup & Import..... | 104 |
| Specifications..... | 105 |
| Customer Service..... | 106 |

Safety Precautions

| | |
|--|-----|
| Safety Precautions..... | 108 |
| Important Product Information..... | 113 |
| Handset & Hardware Care..... | 114 |
| General Notes..... | 116 |
| FCC Notice..... | 118 |
| RF Exposure Information/Specific Absorption Rate (SAR) Information..... | 119 |
| Water Resistance..... | 120 |

Introduction

Thank you for purchasing SoftBank 303SH.

Before You Begin

- Read "Quick Tips" (in お願いとご注意) and this guide thoroughly beforehand for proper usage.
- Accessible services may be limited by contract conditions.
- Unauthorized copying of any part of this guide is prohibited.
- Guide content subject to change without prior notice.


Guide Usage Notes

- SoftBank 303SH is referred to as "handset" in this guide.
- Most operation descriptions are based on default settings.
- Unless noted otherwise, descriptions are for application sheet in 3-Line Home.
- "Confirmation" refers to authentication prompt, selection, caution or other message that appears after operation.
- Some operation descriptions may be omitted.
- In this guide and on handset, "abroad" means "outside Japan" with regard to handset/service usage.
- In this guide, microSD/microSDHC/microSDXC Card is referred to as "SD Card."

Screenshots & Key Labels





Screenshots and key labels are provided for reference only. Actual handset windows, menus, etc. may differ in appearance.

Accessing Functions Guide

In application sheet,  (Guide)

- Guide usage information and confirmation for automatic updates appear at initial startup. Follow onscreen prompts.

Guide indicator appears on Status Bar by default. To hide Guide indicator:

In application sheet,  (Guide)    Indicator 

off  Back

Getting Started

| | |
|-----------------------------|----|
| Package Contents..... | 6 |
| Parts & Functions..... | 6 |
| USIM Card Installation..... | 7 |
| SD Card..... | 8 |
| Charging Handset..... | 11 |
| Power On/Off..... | 12 |
| Touchscreen Operations..... | 13 |

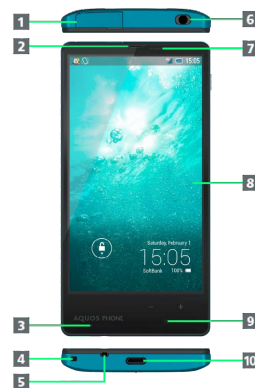
Package Contents

Package Contents

- Handset (SoftBank 303SH)
 - Battery is built into handset.
 - Handset back cover is not removable.
- AC Charger (SHCEJ1)
- クイックスタート (Japanese)
- お願いとご注意 (Japanese) with English "Quick Tips"
- Warranties (Japanese) for handset and AC Charger
- microSD Card (complimentary sample, preinstalled)

Parts & Functions

Handset Parts




| Name | Description |
|---------------------------------|---|
| 1 SD/USIM Card Slot | Access USIM Card and SD Card. |
| 2 Earpiece | Hear other party's voice through this. |
| 3 Notification Lamp | Illuminates while charging or for notifications (missed calls, new messages, etc.). |
| 4 Strap Eyelet | Attach Straps here. |
| 5 Mic | Talk to other party through this. |
| 6 Headphone Port | Connect Headphones with Mic (optional accessories) here. |
| 7 Proximity/Light Sensor | Detects ambient light level and prevents Touchscreen misoperation during call. |
| 8 Display | Touch Display to select menu items, open functions, scroll pages, etc. |
| 9 Internal Camera | Shoot photos or videos. |
| 10 External Device Port | Connect AC Charger or Micro USB Cable here. |



| Name | Description |
|--------------------------|---|
| 1 External Camera | Shoot photos or videos. |
| 2 Mobile Light | Use as a camera flash, flashlight, etc. |
| 3 Infrared Port | Transfer files using Infrared. |
| 4 FeliCa Logo | Place over reader/writer to use NFC/Osaifu-Keitai®. |
| 5 Speaker | Listen to music, video sounds, One Seg audio, etc. |

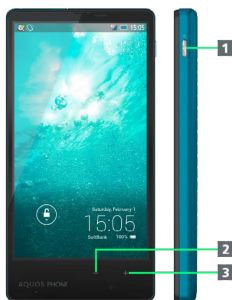Handset Keys



| Name | Description |
|----------------------------|--|
| 1 (Power Key) | Activate/cancel Screen lock. Long Press for power on/off or phone options. |
| 2 (Volume Down Key) | Decrease Volume. In Welcome sheet (lock screen) or 3-Line Home, Touch & Hold to activate/cancel Silent mode. |
| 3 (Volume Up Key) | Increase Volume. In Welcome sheet (lock screen), Touch & Hold to turn on Mobile Light ¹ . |

- 1 To turn off, Press . Alternatively, when Display is active, Tap Display or Tap / to turn off Mobile Light.

USIM Card Installation

USIM Card is an IC card containing customer and authentication information, including handset number.

Inserting USIM Card


Always power off beforehand.

If SD Card is inserted, remove it first. (SD Card needs to be removed to insert USIM Card.)

- For SD Card removal procedure, see "[Removing SD Card.](#)"


1

Open Card Slot Cover



2

Pull out USIM Tray



- Do not pull USIM Tray forcefully or at an angle; damage may result. Gently pull it straight out from the edge.

3


Place USIM Card in USIM Tray



- Check orientation of USIM Card (see the notch), then gently place it with metal contacts facing up.

4


Insert USIM Tray into USIM Card Slot (bottom opening)



- Check orientation of USIM Tray, then insert it all the way.

5

Close Card Slot Cover



- Close Card Slot Cover firmly. Debris trapped between gasket and base may allow ingress of liquid.

Removing USIM Card


Always power off beforehand.

If SD Card is inserted, remove it first. (SD Card needs to be removed to remove USIM Card.)

- For SD Card removal procedure, see "[Removing SD Card.](#)"


1

Open Card Slot Cover



2

Pull out USIM Tray



- Do not pull USIM Tray forcefully or at an angle; damage may result. Gently pull it straight out from the edge.


3

Remove USIM Card



4


Insert USIM Tray into USIM Card Slot (bottom opening)



- Check orientation of USIM Tray, then insert it all the way.

5

Close Card Slot Cover




- Close Card Slot Cover firmly. Debris trapped between gasket and base may allow ingress of liquid.

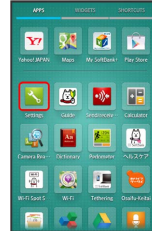
SD Card

Handset supports SD Card up to 64 GB. Some SD Cards may not operate properly.

Unmounting SD Card


1

In application sheet,  (Settings)




2

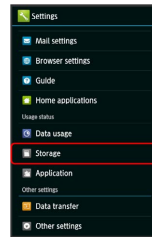

Storage



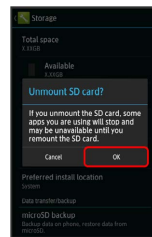
3

Unmount microSD  



 Unmount microSD changes to . (SD Card is unmounted.)


- To have SD Card recognized again, Tap .

Removing SD Card

Always power off beforehand.


1

Open Card Slot Cover



2


Remove SD Card



- Gently push in SD Card and release; it pops out. Carefully remove SD Card without bending it.

3

Close Card Slot Cover




- Close Card Slot Cover firmly. Debris trapped between gasket and base may allow ingress of liquid.

Inserting SD Card

Always power off beforehand.


1

Open Card Slot Cover



2


Insert SD Card into SD Card Slot (top opening)



- Insert SD Card all the way with terminals facing up.

3

Close Card Slot Cover




- Close Card Slot Cover firmly. Debris trapped between gasket and base may allow ingress of liquid.

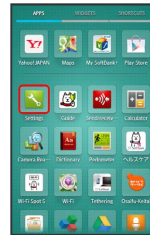
Formatting SD Card

When using a new SD Card for the first time, format it on handset before trying to save images, music, etc.

- Formatting deletes all SD Card files.
- Charge handset while formatting or charge it adequately beforehand.


1

In application sheet,  (Settings)




2

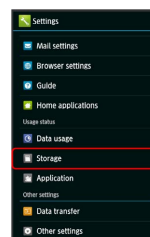Storage




3

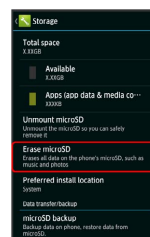Erase microSD




4

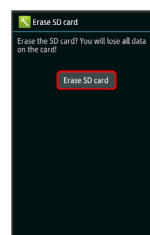Erase SD card



5

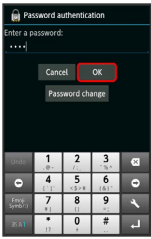
Enter Operation Password → OK



- If Operation Password is unset, follow onscreen prompts.

6

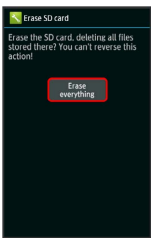Erase everything



- 🚩 All SD Card files will be deleted.

💡 Complimentary Sample SD Card

Sample SD Card is preinstalled.

- Warranty does not cover sample SD Card.

! SD Card Usage Notes

SD Card Files

SD Card files may be lost/alterd due to accidents, malfunctions, repairs, handset upgrade/replacement, mishandling, etc. Back up important files regularly. SoftBank Mobile Corp. is not liable for any damages resulting from loss/alteration of files.

- Never power off while files are being accessed.

microSDXC Card

Handset supports microSDXC Cards (SDXC-compatible SD Cards). microSDXC Cards are supported by SDXC-compatible devices only.

Exchanging Files with Non-SDXC-Compatible Devices

To exchange files between handset and non-SDXC-compatible devices, use SD Cards (microSD/microSDHC Cards) supported by handset and those devices. Inserting a microSDXC Card used on handset in a non-SDXC-compatible device may corrupt card files. In such cases, do not format the microSDXC Card on that device even if prompted to do so.

- Formatting deletes all microSDXC Card files and changes the file system. The original memory capacity may be unavailable after formatting. To use a corrupted microSDXC Card, format it on an SDXC-compatible device.

🚫 SD Card Caution

Keep SD Card away from infants; may cause choking if swallowed.

Charging Handset

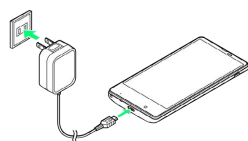
Battery is built into handset.

AC Charger, Micro USB Cable (optional accessory), Micro USB Charging Adapter (optional accessory) and In-Car Charger (optional accessory) are not water proof. Never charge handset while it is wet; may cause fire, malfunction or burns due to electric shock or short-circuiting. Be sure to dry it before use.

AC Charger


Use AC Charger (SHCEJ1).

- Never charge handset while it is wet.



1


Insert Micro USB plug of AC Charger into External Device Port



- Insert Micro USB plug in correct orientation; otherwise, External Device Port may be damaged. Check contours and orientation of Micro USB plug before inserting it.

2

Extend blades and plug AC Charger into AC outlet

 Notification Lamp goes out when charge is full.

- Check that Notification Lamp illuminates red (Notification Lamp illuminates green when charge is almost full).

3

After charging, remove Micro USB plug from External Device Port, then unplug AC Charger and retract blades

USB Charging


Connect handset to a PC with Micro USB Cable (SHDDL1; optional accessory).

- Power on handset and PC first.
- Handset may not charge or charge slowly depending on PC status/environment.
- Never charge handset while it is wet.



1


Insert Micro USB plug of Micro USB Cable into External Device Port




- Insert Micro USB plug in correct orientation; otherwise, External Device Port may be damaged. Check contours and orientation of Micro USB plug before inserting it.

2

Insert USB plug of Micro USB Cable into PC USB port



 Notification Lamp goes out when charge is full.

- Check that Notification Lamp illuminates red (Notification Lamp illuminates green when charge is almost full).

3

After charging, remove Micro USB Cable from handset and PC

Lithium-ion Battery

This product requires a lithium-ion battery. Lithium-ion batteries are recyclable. To recycle a used lithium-ion battery, take it to any shop displaying the recycling symbol.

- To avoid fire or electric shock, do not short-circuit or disassemble Battery.



! Charging Cautions

Handling Cables

Do not pull, bend, or twist cable; may damage the cable.

USB Charging Caution

Handset may power on automatically when connected to a PC with Micro USB Cable; avoid connection aboard aircraft or in hospitals, etc. where handset use is prohibited.

Battery Care

To help maintain performance and life of Internal Battery, do not store in the following conditions.

- Full (immediately after charging is complete)
- Exhausted (too low to power on handset)

Periods of Disuse

Charge handset to approximately 40% at least once every 6 months; if left uncharged, handset may become unusable or files/settings may be affected.

Bulges of Internal Battery

Depending on usage, bulges may appear near end of battery life; this does not affect safety.

Internal Battery Replacement


Internal Battery is a consumable item; may need to be replaced if operating time shortens noticeably. Internal Battery is not user replaceable; its replacement incurs fees and requires handset submission to a SoftBank Shop or other appropriate servicer. For details, contact a SoftBank Shop or SoftBank Customer Support, [General Information](#).


Power On/Off

Power On

1


Long Press  until SoftBank logo appears




 After Power On Graphics, Welcome sheet (lock screen) appears.

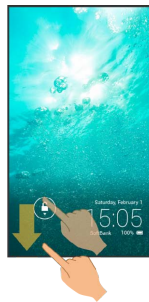2



Drag  down



 Google™ & location window opens.

- If confirmation appears, follow onscreen prompts.
- Google & location window may open even when handset is not used.

3


Set Google's location service options  




 Initial setup menu opens.

Power Off


1

 (Long Press)




2

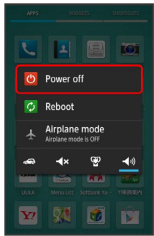
Power off



3

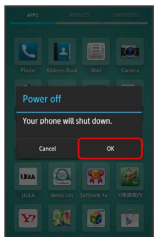OK




 Handset shuts down.

Touchscreen Operations

Touch Display to select menu items, open functions, scroll pages, etc.


Tap

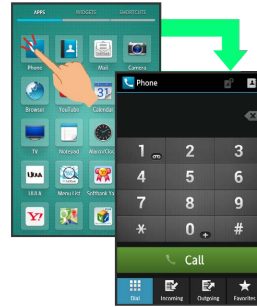Tap item or key to open or execute corresponding function/operation.




Touch & Hold

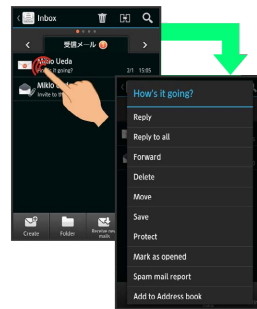Touch item for 1+ seconds to move icon, open menu, etc.




Drag

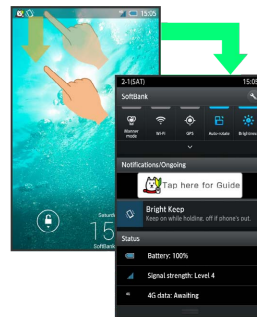Drag item to move it.




Flick

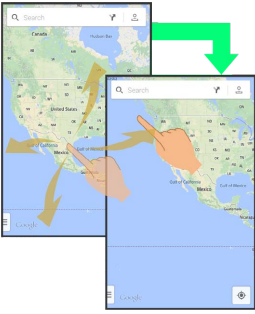Flick to toggle sheets, pages, etc.



Pinch/Spread

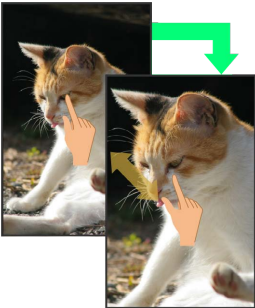Pinch or Spread to zoom in or out on images, maps, etc.



Basic Operations


| | |
|---------------------------|----|
| Basic Operations..... | 16 |
| Applications..... | 18 |
| Handset Phone Number..... | 19 |
| Mobile Manners..... | 19 |
| Text Entry..... | 20 |
| Google™ Accounts..... | 22 |
| Google Play..... | 24 |
| Security Codes..... | 26 |
| USIM PIN..... | 27 |
| Screen Lock..... | 28 |
| Software Updates..... | 29 |

Basic Operations

Home (3-Line Home)


3-Line Home consists of application sheet, widget sheet and shortcut sheet. Most operations start here. See "[3-Line Home Basics](#)" for details.

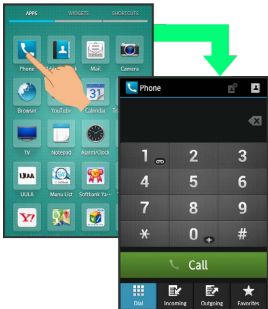


- Flick left/right to toggle sheets.
- To return to 3-Line Home, Tap  at Display bottom.

Handset Navigation






Tap item, icon, key, etc. to open menu/window or execute corresponding function/operation.


- To return to the previous screen, Tap .



Navigation Bar

Tap icons on Navigation Bar (Display bottom) for the following functions/operations.


| Icon | Description |
|---|---|
|  (Back key) | Return to the previous screen. |
|  (Close key) | Close keyboard. |
|  (Home key) | Return to 3-Line Home. |
|  (Menu key) | Open Options menu. |
|  (Recent apps key) | Activate/exit Quick Launcher. (To open/close recent applications window instead, change Recent apps key setting.) Touch & Hold to open/close Notifications Window. |





Action Bar

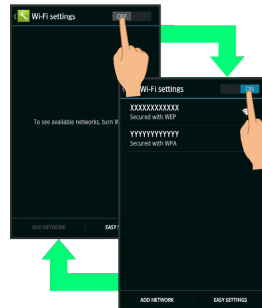Current menu/window title appears on Action Bar (Display top). On the right side of Action Bar, icons for functions frequently used in that menu/window appear.


- When **ON** or **OFF** is on Action Bar, Tap to turn corresponding setting off or on.

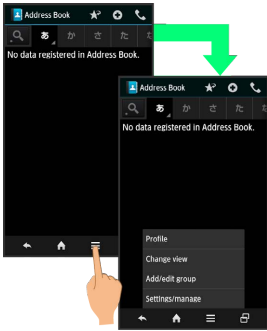


- When  (check all) and  (uncheck all) are on Action Bar, Tap to select or cancel all items together at once.




Menu Operations

Tap  at Display bottom to open Options menu.




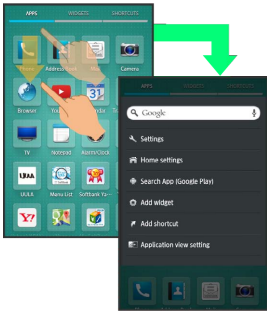· In some windows, Drag down or Touch & Hold for menu.






Handset Settings

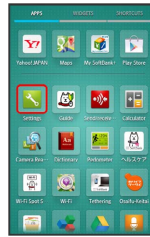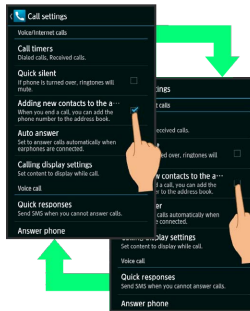
In application sheet, Tap  (Settings) to customize settings.



· Checkbox (or) appears beside some options. Tap to enable () or disable () option.



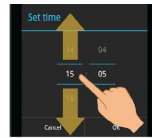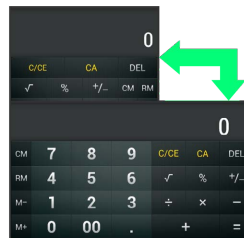
· Drag/Flick slider, spinner, etc. to adjust some settings. If available, Tap  or  for additional settings.





Handset & Display Orientation


Rotate handset 90 degrees; Display orientation changes accordingly.

· Display orientation may not change in some windows.



Capturing Screenshots

Press  and  at the same time.

· Open captured screenshots from  in Contents Manager or other locations.

+ Activating Applications that Support Assist Function

Touch Navigation Bar then Drag up (icon appears) →
 Drag to icon and release finger → Tap application →
 Always or Just once

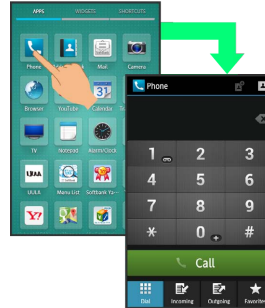
- Depending on icon, releasing finger may activate corresponding application.

Applications

Activating Applications

1


In application sheet, Tap application




Application activates.

- If confirmation appears, follow onscreen prompts.

Exiting Applications

In any application, Tap  repeatedly until 3-Line Home returns. (Some applications may remain active.)

Obtaining Applications

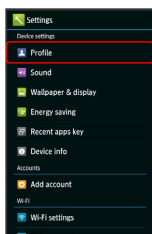
Obtain applications from  (Play Store).


Handset Phone Number

My Phone Number

1

In application sheet,  (Settings)  Profile



 Profile opens.

- Handset number appears in Own phone number field.

Mobile Manners

Silent Mode


Mute ringtones and other handset sounds to avoid disturbing others around you.


- Camera shutter sound, video recording tones, music, video/ game sounds, etc. still play even in Silent mode.

1

In Welcome sheet (lock screen) or 3-Line Home, Touch & Hold




 Silent mode activates.


- To cancel, Touch & Hold  in Welcome sheet (lock screen) or 3-Line Home.

Airplane Mode

Leaving power on, suspend signal-transmitting functions.

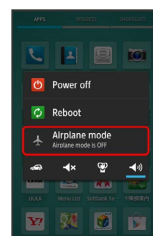
1


 (Long Press)


 Phone options appear.

2

Airplane mode



 Airplane mode activates.

- To cancel, Long Press , then Tap **Airplane mode**.

+ Selecting Silent Mode Option

 (Long Press)  Tap icon (e.g., )

! Airplane Mode Caution


Activating **Airplane mode** disables Wi-Fi and Bluetooth®, interrupting corresponding transmissions.



Wi-Fi/Bluetooth® connections can be used even in Airplane mode by enabling Wi-Fi/Bluetooth® after activating **Airplane mode**; make sure that such connection/transmission is allowed in your current location before use.

Text Entry

Keyboards

Use onscreen keyboards for text entry. In 12-key Keyboard, multiple characters are assigned to each key. In QWERTY Keyboard, a single letter is assigned to each key.

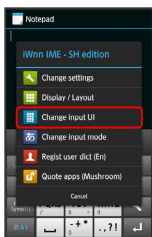
- Tap a text entry field for keyboard. To hide it, Tap .
- Text entry descriptions are for iWnn IME - SH edition. Before reading on, switch input method from Google Keyboard (selected when interface language is set to English) to iWnn IME - SH edition as follows.


In a text entry window, Drag Status Bar down  **Choose input method**  **Japanese**

Switching Keyboards

1


In a text entry window,   **Change input UI**




- When How to Change Input UI window opens after Tapping , Tap **CLOSE**. To disable it thereafter, select **Don't show again.** beforehand.


2

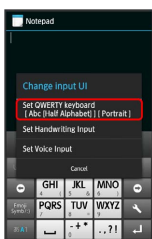Set QWERTY keyboard or **Set 12 keyboard**




 Keyboard is switched.

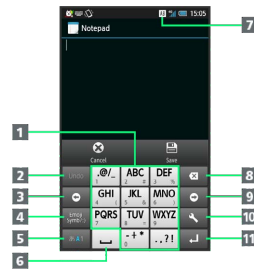12-Key Keyboard Layout



- 1 Enter characters.
- 2 Undo conversion; reverse-toggle character options before confirming entry.
- 3 Backspace cursor.
- 4 Enter pictograms, symbols, or emoticons; switch conversion options.
- 5 Toggle entry modes.
- 6 Enter space; toggle case; add ` or ° for hiragana.
- 7 Current entry mode
- 8 Delete characters.
- 9 Advance cursor; add space at text end.
- 10 Open text entry options; enter space; convert hiragana.
- 11 Insert line break; confirm current characters.

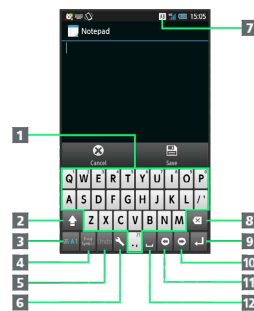QWERTY Keyboard Layout




- 1 Enter characters.
- 2 Toggle case.
- 3 Toggle entry modes.
- 4 Enter pictograms, symbols, or emoticons; switch conversion options.
- 5 Undo conversion.
- 6 Open text entry options.
- 7 Current entry mode
- 8 Delete characters.
- 9 Insert line break; confirm current characters.
- 10 Advance cursor; add space at text end.
- 11 Backspace cursor.
- 12 Enter space; convert hiragana.

Switching Entry Modes

- Tap **AB** to toggle Half Numeric, Kanji, and Half Alphabet modes. Alternatively, Flick **AB** left/right to toggle these entry modes. To use other entry modes:

1

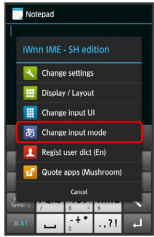
In a text entry window, **Change input mode**



- When How to Change Input UI window opens after Tapping , Tap **CLOSE**. To disable it thereafter, select **Don't show again.** beforehand.

2

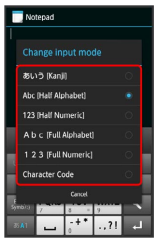Tap mode



Keyboard interface changes accordingly. Current entry mode indicator, such as **AB** (Half Alphabet) or **あ** (Kanji), appears.

Entering Letters

In 12-key Keyboard, to enter Keitai in Half Alphabet:

1

Check Half Alphabet mode is selected (**AB** on Status Bar)



2

JKL (twice: K) **DEF** (twice: e) **GHI** (three times: i)
TUV (once: t) **ABC** (once: a) **GHI** (three times: i)
OK




Keitai is entered.

- To toggle case, type a letter and Tap **A+a**.
- The first letter is capitalized automatically by default. (Cancel auto capitalization as needed.)

Flick Input

In 12-key Keyboard, Flick key for target character (instead of Tapping it repeatedly).

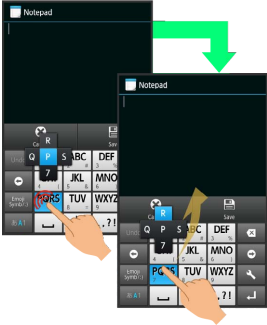- Touch & Hold a key for guide; Flick toward target character to enter.



| Target Character | Operation |
|------------------|------------------------------------|
| P | Tap PQRS once. |
| Q | Touch PQRS and Flick left. |
| R | Touch PQRS and Flick up. |
| S | Touch PQRS and Flick right. |
| 7 | Touch PQRS and Flick down. |

- To enable/disable key preview and Flick input guide, in a text entry window, Tap **Display / Layout** **Key input guide**.

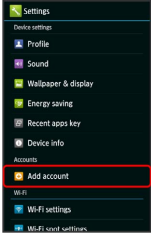
Google™ Accounts

Create a Google Account to use Google services. A Google Account is required to fully use some services and applications/functions.

Creating a Google Account


1

In application sheet, **(Settings)** **Add account**



2

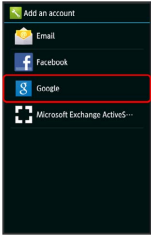
Google



Add a Google Account appears.


3

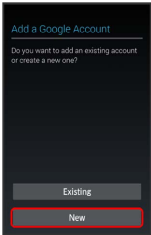New




4

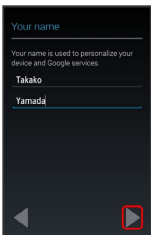Enter first name **Next** Enter last name **Next**



5

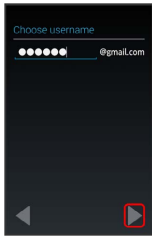Enter e-mail address → ▶



· If confirmation appears, follow onscreen prompts.

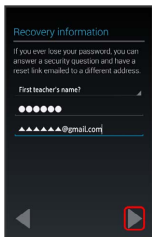
6

Enter password → Next → Re-enter password → ▶




7

Tap Choose a security question field → Tap question →
Tap Answer field → Enter answer → Next → Enter e-mail address → ▶



8

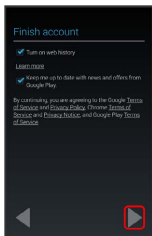Not now → Select whether to enable web history →
Select whether to receive news and offers from Google Play™ → ▶



· To join Google+™, Tap **Join Google+** → ▶. Follow onscreen prompts.

9

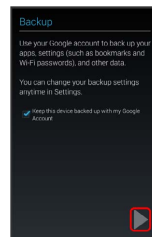
Tap entry field → Enter shown characters (distorted) → ▶



· If shown characters are unreadable, enter a character then Tap ▶; other distorted characters appear.

10

Not now → ▶



🏠 A Google Account is added.

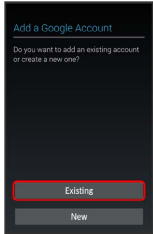
· If confirmation appears, follow onscreen prompts.
· Even if **Keep this device backed up with my Google Account** is selected, this backup function cannot be used.

Signing in to a Google Account

If an application requires a Google Account, Add a Google Account appears. Sign in to use the application.

1

In Add a Google Account, **Existing**



2

Enter e-mail address → **Next** → Enter password → ▶



3

Follow onscreen prompts

You are signed in to your Google Account.

Google Account Cautions

Google Account E-mail Address & Password

Do not forget your Google Account e-mail address and password.

Google Account Operations & User Interface

Operations and user interface are subject to change due to automatic application updates or other reasons.

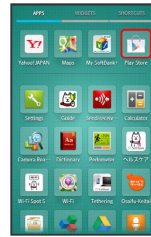
Google Play

Download applications via Google Play. Downloaded applications can be updated manually or automatically. Sign in to your Google Account beforehand.

Installing Free Applications

1

In application sheet, (Play Store)



Google Play opens.

· If confirmation appears, follow onscreen prompts.

2

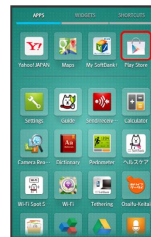
Tap free application → **INSTALL** → **ACCEPT**

Application downloads and installs.

Purchasing Applications

1

In application sheet, (Play Store)



Google Play opens.

· If confirmation appears, follow onscreen prompts.

2

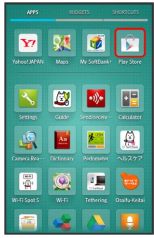
Tap paid application → Tap price → Follow onscreen prompts

Application downloads and installs.

Updating Installed Applications

1






In application sheet,  (Play Store)



 Google Play opens.

- If confirmation appears, follow onscreen prompts.

2

  My apps  Tap application  UPDATE 

Follow onscreen prompts

 Application downloads and installs.

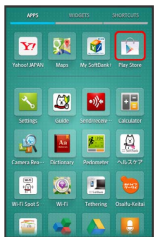
- If confirmation appears, follow onscreen prompts.


Uninstalling Applications

Applications installed via Google Play can be uninstalled.

1






In application sheet,  (Play Store)




 Google Play opens.

- If confirmation appears, follow onscreen prompts.

2

  My apps  Tap application  UNINSTALL 

OK

 Application uninstalls.

Purchased Applications

Payment

Pay once. Re-downloads of uninstalled applications are free of charge.





Use on Other Android Devices

Install same application on other Android devices under same Google Account at no added cost.



Application Operations

Refund Requests





Request refunds within designated period. Returned applications are deleted from handset; no payment is required. (One refund request per application.)



In Google Play,   My apps  Tap application 

REFUND

- For details, Tap   Help in Google Play, then refer to Google Play Help.

Enabling Automatic Updates

In Google Play,   My apps  Tap application 

  Auto-update ()

- Automatic update is not available for some applications.

Google Play Cautions

Application Installation Disclaimer

Download and install applications on this handset via Google Play (developed by Google Inc.) at your own risk. SoftBank Mobile Corp. is not responsible for user installed application content (quality, reliability, legality, appropriateness, accuracy, etc.) or malfunctions installed applications may cause (due to viruses, etc.).

Application Purchase Disclaimer

Purchase applications via Google Play at your own risk. SoftBank Mobile Corp. is not responsible for transactions between users and third party publishers.

Google Play Operations & User Interface

Operations and user interface are subject to change due to automatic application updates or other reasons.

Security Codes

Operation Password & Center Access Code


Center Access Code (Call Barring Password; 4-digit code in contract) is required to use Optional Services from landlines or subscribe to fee-based information.

- Do not forget Operation Password and Center Access Code (Call Barring Password). If you forget these codes, contact us for recovery. For details, contact SoftBank Customer Support, [General Information](#).
- Do not reveal Operation Password or Center Access Code (Call Barring Password). SoftBank Mobile Corp. is not liable for misuse or damages.
- Call Barring settings will be locked if incorrect Center Access Code (Call Barring Password) is entered three times consecutively when making a setting. To unlock, the code must be changed. For details, contact SoftBank Customer Support, [General Information](#).
- If Call Barring Password has been previously changed on a mobile phone, enter the latest code to set Call Barring.

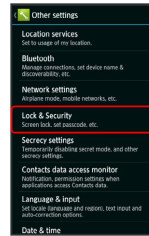
Setting Operation Password

Do not forget Operation Password; write it down if necessary.

1


In application sheet,  (Settings) → **Other settings** →

Lock & Security




2

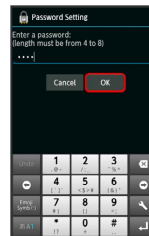Operation password setting → **OK** → Enter Operation Password → **OK**



3

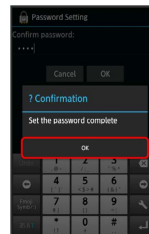Re-enter Operation Password → **OK** → **OK**



 Operation Password is set.


- To change Operation Password, refer to the steps above. (In **2**, enter current Operation Password to proceed.)

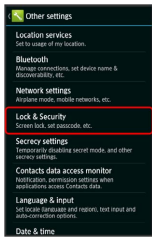
USIM PIN

9999 by default; enable USIM card lock to restrict handset use.

Enabling USIM Card Lock


1


In application sheet,  (Settings) → Other settings → Lock & Security



2

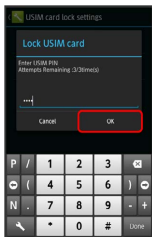USIM card lock settings → Lock USIM card → Enter PIN → OK ()




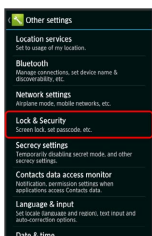
 USIM card lock is enabled.

Changing USIM PIN

Lock USIM Card first. See "Enabling USIM Card Lock" for details.


1

In application sheet,  (Settings) → Other settings → Lock & Security



2

USIM card lock settings → Change USIM PIN → Enter current PIN → OK → Enter new PIN → OK → Re-enter new PIN → OK

 PIN is changed.

PIN Cautions


Entering incorrect PIN three consecutive times activates PIN Lock. To cancel, Personal Unblocking Key (PUK) is required; contact SoftBank Customer Support, [General Information](#). Entering incorrect PUK ten consecutive times activates PUK Lock, disabling handset. For recovery, USIM Card must be reissued at a SoftBank Shop (fees apply).


Screen Lock

After a period of inactivity, Display goes completely dark to save battery power (Screen lock active). Screen lock prevents accidental Touchscreen operation.

Activating Screen Lock Manually

1


When Display is active, 

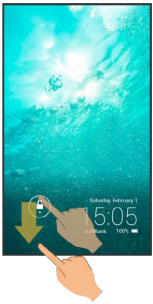
 Display goes completely dark and Screen lock activates.


Canceling Screen Lock

Press  to open Welcome sheet (lock screen).

1

In Welcome sheet (lock screen), Drag  down




 Screen lock is canceled.

- When Screen lock option other than Slide or None is selected, follow onscreen prompts to cancel Screen lock.

Screen Lock Usage Notes

If Screen Lock Activates while Playing Music

Music continues to play. For operation, Press  to open Welcome sheet (lock screen) and use operation panel (operations may vary depending on application).

If You Forget Pattern for Canceling Screen Lock

When drawing a pattern to cancel Screen Lock with a Google Account set up, **Pattern reminder** appears after failing to cancel Screen Lock five consecutive times. Tap **Pattern reminder** and sign in to the Google Account to cancel Screen Lock.

Screen Lock Caution



Do not forget pattern, Lock No. passcode or password set for canceling Screen lock (write it down if necessary). If you forget it, visit the nearest SoftBank Shop for recovery procedure. Note that your files and settings will be lost during the recovery process.

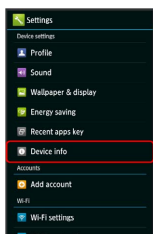
Software Updates

Software Updates

At specified time, handset automatically checks for/downloads firmware updates as required. To update firmware manually:


1

In application sheet,  (Settings)  **Device info**



2

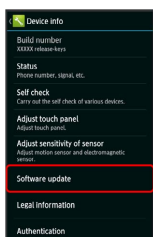Software update



 Software update menu opens.

3

Software update  **Execute**  Follow onscreen prompts


 Software Update starts.

Before Software Update



Handset data may be lost to damage, malfunction, etc.
Back up important information before updating software.
SoftBank Mobile Corp. is not liable for loss or associated damages.

+ Software Update Operations

Enabling/Disabling Automatic Updates

In Software update menu, **Auto update settings**  **Do not update automatically** or **Update automatically**

Changing Automatic Update Start Time

In Software update menu, **Update time settings**  **Select time**  **Set**

· Available when **Auto update settings** is **Update automatically** .

! Software Update Cautions

During Update

Handset cannot be used until Software Update completes; it may take some time to complete.


Signal Conditions

Check signal strength and battery charge beforehand. Poor signal strength or low battery charge may disrupt updates leading to update failure. Update failure may disable handset.

Handset Interface



| | |
|---|----|
| Welcome Sheet (Lock Screen) Basics..... | 32 |
| 3-Line Home Basics..... | 33 |
| Status Bar..... | 34 |
| Notifications Window..... | 35 |
| Using Quick Launcher..... | 36 |
| Using Mini-Applications & Mini-Widgets..... | 37 |
| Customizing 3-Line Home..... | 38 |

Welcome Sheet (Lock Screen) Basics

Welcome sheet (lock screen) appears at power on or when  is Pressed while Display is completely dark (Screen lock active). From Welcome sheet (lock screen), cancel Screen lock, activate an application such as Phone or Mail, etc.

Welcome Sheet (Lock Screen) Layout



- 1 Wallpaper (and widget)¹
- 2 Drag down to cancel Screen lock; Tap  for applications, settings, etc.
- 3 Tap  to show owner information.²
- 4 Notifications of missed calls and new messages appear here.
- 5 Date and time, weather, widget name, etc.¹


- 1 Flick left/right to toggle view.
- 2 Set owner information beforehand. See "[Lock & Security Settings](#)" for details.

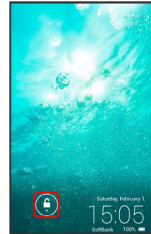
Activating Applications

Activate applications from Welcome sheet (lock screen) as follows.

- Change assigned applications as needed.

1


In Welcome sheet (lock screen), Tap 







 Menu opens.

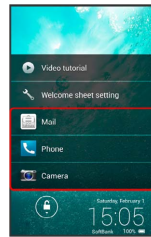2

Tap application



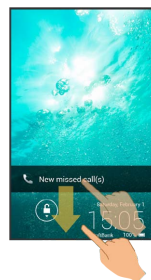
 Application activates.

- Tap **Video tutorial** for a video tutorial (Japanese) on functions.
- Tap **Welcome sheet setting** to open menu for customizing Welcome sheet (lock screen). Alternatively, Tap  (Settings) in application sheet  **Wallpaper & display**  **Welcome Sheet(lock screen)**. See "[Wallpaper & Display Settings](#)" for details.

Missed Call & New Message Notifications

Notifications--New missed call(s) and New mail(s)--appear in Welcome sheet (lock screen).

Drag notification down to open it.



3-Line Home Basics

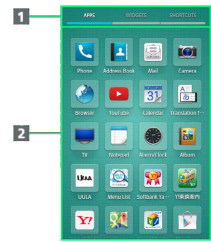
3-Line Home consists of application sheet, widget sheet and shortcut sheet. Most operations start here. Access applications and widgets, save frequently used applications to shortcut sheet, change handset settings, etc.

Toggling Sheets

Flick left/right to toggle sheets.




Application Sheet Layout



- 1 Toggle sheets.
- 2 Activate applications. (Flick up for hidden applications; Drag down for menu.)

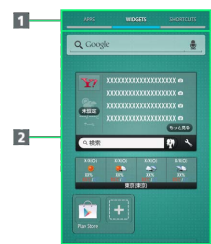Widget Sheet Layout



- 1 Toggle sheets.
- 2 Use widgets. (Flick up for hidden widgets; Drag down for menu.)

Shortcut Sheet Layout



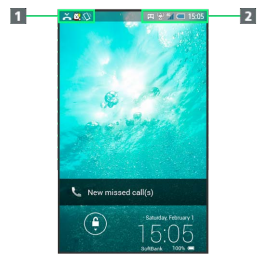
- 1 Toggle sheets.
- 2 Activate applications. (Flick up for hidden shortcuts; Drag down for menu.)

Status Bar

Indicators (new message notification, handset status, etc.) appear at the top of Display.




Status Bar Layout



- 1** Notifications and warnings appear here. (Notification Indicators)
- 2** Handset status and other information appear here. (Status Indicators)

Notification Indicators

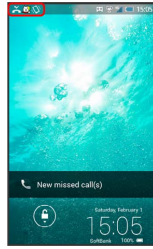
Notification Indicators appear on the left.



| Indicator | Description |
|-----------|---|
| | Functions Guide Available (Drag Status Bar down and open from Notifications Window) |
| | Urgent News |
| | Call Arriving/in Progress |
| | Call on Hold |
| | Missed Call |
| | New Answer Phone Message |
| | New Voicemail |
| | New SMS/S! Mail |
| | New Internet Mail |
| | New Gmail |
| | Unchecked Alarm |
| | Event |
| | Viewing One Seg |
| | Recording One Seg |
| | Application Installation Complete/Update Available |
| | Text Entry Window (Choose Input Method) |
| | Getting Location Information |
| | Data Downloading |
| | Bluetooth® File Reception Request |
| | SD Card Unmounted |
| | Reading SD Card |
| | Connected via USB |
| | Screenshot Captured |
| | Screenshot Failed |
| | More Notifications |
| | Mobile Light On |

Status Indicators

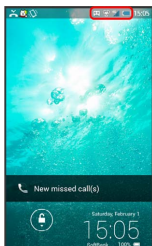Status Indicators appear on the right.



| Indicator | Description |
|-----------|---|
| | Battery Strength |
| | Charging |
| | Signal Strength |
| | No Signal (4G LTE/4G/3G) |
| | 4G LTE/4G Data in Use ¹ |
| | 3G Data in Use |
| | Roaming |
| | Airplane Mode |
| | Wi-Fi Connected |
| | Bluetooth® On |
| | Bluetooth® Connected |
| | Silent (Standard) Mode |
| | Silent (Drive) Mode |
| | Silent Mode |
| | Answer Phone Set |
| | Answer Phone Set (Message Recorded) |
| | Alarm Set |
| | NFC/Osaifu-Keitai® Locked |
| | NFC/Osaifu-Keitai® Locked (USIM Card Only) ² |
| | Kanji Mode |
| | Half Alphabet Mode |
| | Half Numeric Mode |
| | Full Alphabet Mode |
| | Full Numeric Mode |
| | Character Code Mode |

- 1 Corresponding indicator appears when handset is connected to FDD-LTE (SoftBank 4G LTE) or AXGP (SoftBank 4G). Between these Networks, handset connects to SoftBank 4G whenever possible.
- 2 Appears upon inserting USIM Card into handset after using that USIM Card to lock NFC on another mobile.

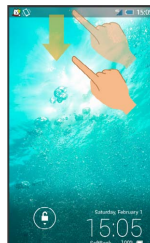
Notifications Window

Open notifications, check handset status or change various settings.

Opening Notifications Window

1


Drag Status Bar down



Notifications Window opens.

• To close Notifications Window, Tap .

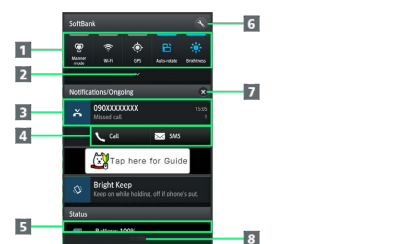
Notifications Window Layout



- 1 Setting keys
- 2 Show second and subsequent lines of Setting keys.
- 3 Notifications and active functions
- 4 Use corresponding functions.
- 5 Handset status¹
- 6 Open Settings.
- 7 Delete all notifications and close Notifications Window.
- 8 Close Notifications Window. (Flick up.)

1 Tap for corresponding settings.

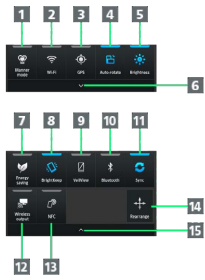Setting Keys



- 1 Set Silent mode option.
- 2 Toggle Wi-Fi on/off.
- 3 Enable/disable GPS positioning.
- 4 Enable/disable Auto-rotate screen.
- 5 Set Display brightness.
- 6 Show second and subsequent lines of Setting keys.
- 7 Toggle Energy saving settings on/off.
- 8 Set Bright Keep.
- 9 Enable/disable VeilView.
- 10 Toggle Bluetooth® on/off.
- 11 Enable/disable account sync.
- 12 Open Wireless output menu.
- 13 Enable/disable Reader/Writer, P2P.
- 14 Open window for rearranging Setting keys.
- 15 Hide second and subsequent lines of Setting keys.

+ Notifications Window Operations

Deleting Notifications

In Notifications Window, Flick notification left/right

- Some notifications may not be deleted.

Rearranging Setting Keys

In Notifications Window, **Rearrange** ➔ Drag icon to target location ➔ (done) on Action Bar

- Icons cannot be moved to the area where **Rearrange** appears in Notifications Window.

Using Quick Launcher

Activate recently used applications as well as assigned applications, mini-applications and mini-widgets.

Opening Quick Launcher

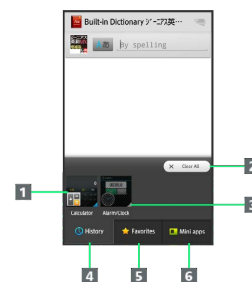
1



Quick Launcher appears.


- If **Recent applications** is set for **Recent apps key**, recent applications window opens instead. For details on **Recent apps key**, see "[Recent Apps Key Setting](#)."

Quick Launcher Layout



- 1 Activate recently used application.
- 2 Delete all history items for recently used applications.
- 3 Indicates application state. (Appears blue when corresponding application is running.)
- 4 Show history items for recently used applications.
- 5 Show assigned shortcuts.
- 6 Show mini-applications and mini-widgets.

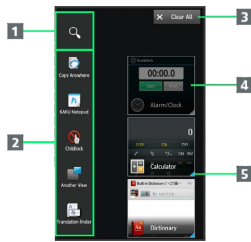Recent Applications Window Layout



- 1 Activate application that supports the assist function.
- 2 Shortcuts to applications
- 3 Delete all history items for recently used applications.
- 4 Activate recently used application.
- 5 Indicates application state. (Appears blue when corresponding application is running.)

+ Quick Launcher/Recent Applications Operations

Deleting Single Usage History Item

In Quick Launcher, **History** → Flick item down

- In recent applications window, Flick item left/right.
- Corresponding application exits if running.

Adding Shortcuts to Quick Launcher

In Quick Launcher, **Favorites** → → Tap item (then select option)

Changing Shortcuts in Recent Applications Window

In recent applications window, Touch & Hold shortcut → → **Select Application or Shortcut** → Tap item (then select option)

- To reset shortcuts, Touch & Hold shortcut in recent applications window → → **To default** → **Yes** .

Deleting Shortcuts

In Quick Launcher, **Favorites** → Touch & Hold shortcut → **Peel off**

- In recent applications window, Touch & Hold shortcut → → **Peel off** → **Yes** .

Rearranging Shortcuts in Quick Launcher

In Quick Launcher, **Favorites** → Touch & Hold shortcut → Drag to target location

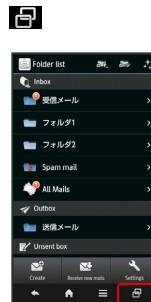
Using Mini-Applications & Mini-Widgets

Activating Mini-Applications/Mini-Widgets

While using applications, watch One Seg, play videos, open a map, etc. in mini-application window or mini-widget window.

- May be unavailable depending on current application window.


1



Quick Launcher appears.

2

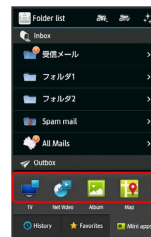Mini apps → Tap mini-application or mini-widget




Mini-application window or mini-widget window opens.

- Follow onscreen prompts.

Mini-Application Window/Mini-Widget Window Layout

If Operation Bar, indicators, etc. are hidden during playback, Tap mini-application window or mini-widget window to show them again.

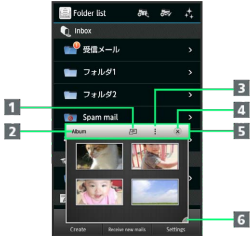- Window interface varies by application/widget.



- 1 Switch to/open standard application window¹.
- 2 Application/widget name
- 3 Open menu.
- 4 Exit mini-application/mini-widget¹.
- 5 Operation Bar
- 6 Drag to change size of mini-application window/mini-widget window.

1 Icon may be hidden if mini-application window or mini-widget window is reduced. In this case, use menu for corresponding operation.

! Mini-Application/Mini-Widget Usage Note

While using a mini-application or mini-widget, videos may not play properly in other applications.


Customizing 3-Line Home

Set theme and Wallpaper, move icons/widgets or add shortcuts/widgets to corresponding sheets.

Setting Theme & Wallpaper

1

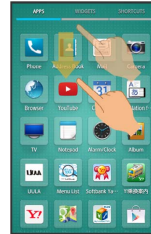
In 3-Line Home, Drag down



Menu opens.


2

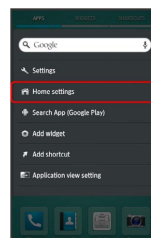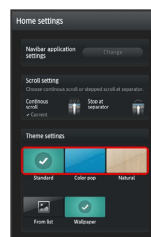Home settings




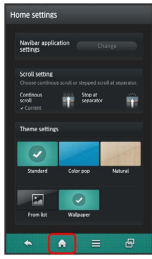
3


Tap theme (**Standard** , **Color pop** or **Natural**)



4

Tap image, color, pattern, etc. → 




 Theme and Wallpaper are set.

- To select from images, Tap **From list**. Follow onscreen prompts.
- Tap **Wallpaper** to use image set in **Wallpaper** under **Wallpaper & display**.

Moving Icons/Widgets


1

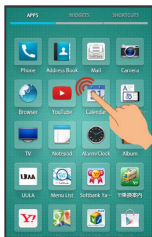In 3-Line Home, Touch & Hold icon/widget



2

Drag to target location


 Release to place icon/widget.

- To a folder: Drag icon to target folder.

Adding Shortcuts

Add an application shortcut.

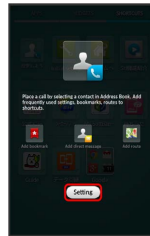
1

In shortcut sheet,  (設定しよう)




2


Setting



3

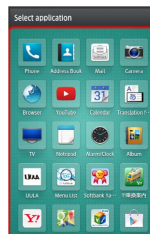Application → Tap application



 Shortcut is added to shortcut sheet.

Adding Widgets

Add Album, Analog clock, etc.

1


In 3-Line Home, Drag down



Menu opens.

2

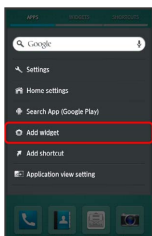Add widget



3

Tap widget



Widget is added.

+ Removing Widgets/Shortcuts

In widget sheet or shortcut sheet, Touch & Hold widget or shortcut → Peel off

Phone

| | |
|------------------------|----|
| Calling..... | 42 |
| Optional Services..... | 43 |
| Address Book..... | 48 |

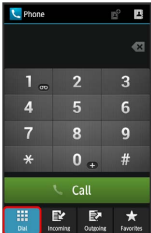
Calling

See below to dial directly or answer calls. (Handset does not support Video Call.)


Placing Calls

1

In application sheet,  (Phone)  **Dial**




 Call Window opens.

- When missed call window opens, Tap . If 3-Line Home returns, perform **1** again.

2

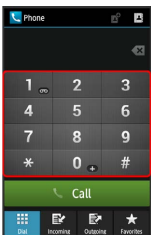
Use onscreen dialpad to enter number




- Include area code for landline numbers.

3

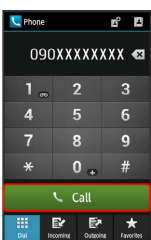Call





 Handset dials the number.

- Wait for other party to accept the call.

4

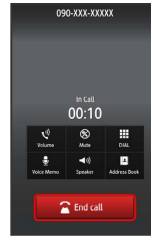To end the call, **End call**




 Call ends.


- After calls to/from numbers not saved in Address Book, save to Address Book confirmation appears. Follow onscreen prompts.

Answering Calls

1

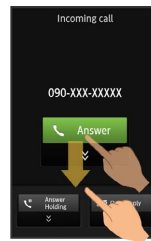When a call arrives, Drag **Answer** down




 Call connects.

- When Screen lock is canceled, Tap **Answer**.

2

To end the call, **End call**



 Call ends.


- After calls to/from numbers not saved in Address Book, save to Address Book confirmation appears. Follow onscreen prompts.

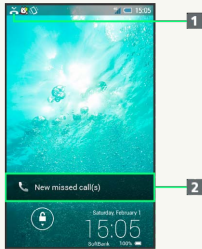
Emergency Location Report

Using SoftBank 3G handset for emergency calls (110, 119 or 118) automatically reports handset location to corresponding agency (police, etc.).

- Location Report does not incur registration/transmission fees.
- Location/signal conditions affect positioning accuracy. Always provide location and call purpose.
- Hiding Caller ID (using 184, etc.) cancels Location Report. However, corresponding agency may obtain location information in life threatening situations.
- Location Report is not sent for calls made while outside Japan.

Missed Calls


For unanswered calls,  appears. In Welcome sheet (lock screen), notification appears.



- 1 Notification Indicator
- 2 Notification

- Drag Status Bar down for Notifications Window, then Tap missed call notification to open Incoming History. When **Call** and **SMS** are below missed call notification, Tap to call back or send SMS.
- Drag notification down to open Incoming History.

Emergency Call Caution

Emergency calls cannot be placed when Airplane mode is active. Long Press  and cancel it.

Optional Services

Use these SoftBank Optional Services:

Optional Services


| Service | Description |
|----------------------------|--|
| Call Forwarding | Divert all/unanswered calls to a preset number. |
| Voicemail | Divert all/unanswered calls to Voicemail Center; access messages via handset/touchtone phones. |
| Call Waiting ¹ | Answer calls during a call. |
| Group Calling ¹ | Switch between open lines/connect multiple lines. |
| Caller ID | Show or hide your number when placing calls. |
| Call Barring | Restrict incoming/outgoing calls by conditions. |


¹ Requires separate subscription

Call Forwarding

1

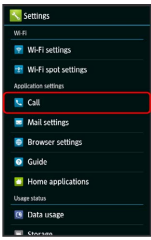
In application sheet,  (Settings) → **Call**



 Call settings opens.

2

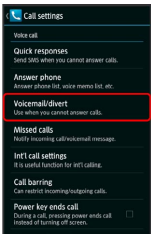
Voicemail/divert




 Voicemail/divert menu opens.

3

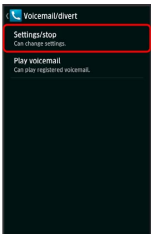
Settings/stop



 Divert menu opens.

4

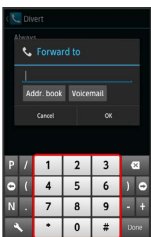
Always or **No answer** → Enter number



- For **No answer**, Tap **Wait time** and select ring time as needed.
- To cancel Call Forwarding, Tap **Stop call forward** → **Yes**.

5

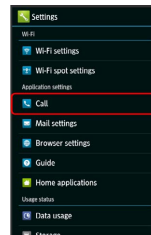
OK

 Call Forwarding is set.

Voicemail

1

In application sheet,  (Settings) → **Call**



 Call settings opens.


2

Voicemail/divert

 Voicemail/divert menu opens.

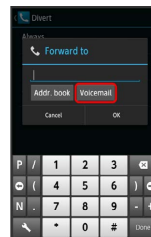
3

Settings/stop

 Divert menu opens.

4


Always or **No answer** → **Voicemail**




- For **No answer**, Tap **Wait time** and select ring time as needed.
- To cancel Voicemail, Tap **Stop call forward** → **Yes**.

5

OK

 Voicemail is set.

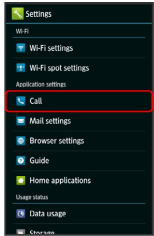
- When a new message is recorded,  appears. To play messages, Tap **Play voicemail** in Voicemail/divert menu, then follow voice guidance.


Call Waiting

Requires separate subscription.

1


In application sheet,  (Settings)  Call




 Call settings opens.

2

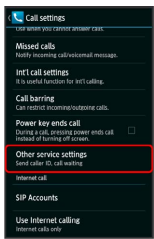
Other service settings





 Other service settings opens.

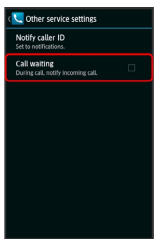3

Call waiting ()



 Call waiting is set.

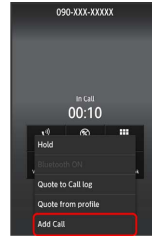
- During a call, a tone sounds for incoming calls; Drag  right to answer.
- To cancel Call Waiting, Tap **Call waiting** ().

Group Calling


Requires separate subscription.

1



During a call,   Add Call




2

Enter number  Call

3


When call connects,   Merge calls

 Group Calling starts.

Caller ID

1

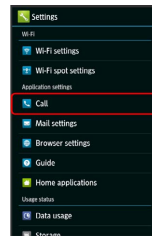
In application sheet,  (Settings)  Call




 Call settings opens.

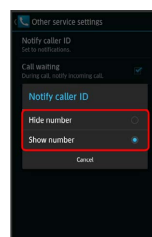
2

Other service settings

 Other service settings opens.

3

Notify caller ID  Hide number or Show number



 Caller ID is set.

Call Barring


Restrict outgoing/incoming calls and SMS messages.


- Call Barring requires Center Access Code (Call Barring Password).
- Call Barring settings will be locked if incorrect Center Access Code (Call Barring Password) is entered three times consecutively when making a setting. To unlock, the code must be changed. For details, contact SoftBank Customer Support, [General Information](#).
- If Call Barring Password has been previously changed on a mobile phone, enter the latest code to set Call Barring.
- When attempting to place/send a call/SMS while calling is restricted, a message appears. Message may take time to appear in some areas.

| Restriction | Description |
|------------------------|---|
| All outgoing calls | Restrict all outgoing calls. |
| Bar int'l call | Restrict international calls; while outside Japan, calls within current country are allowed. |
| Local & home only | Restrict international calls; while outside Japan, calls within current country and to Japan are allowed. |
| Restrict all incomings | Reject all calls. |
| Bar if abroad | Reject calls while outside Japan. |

1

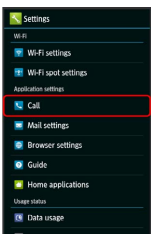
In application sheet,  (Settings)  Call




 Call settings opens.

2

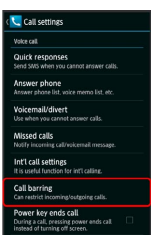
Call barring




 Call barring menu opens.


3

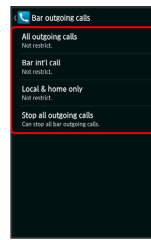Bar outgoing calls or Bar incoming calls  Tap option



4

Enter Center Access Code (Call Barring Password)  OK

 Restriction is set.

+ Optional Services Operations

Setting Missed Call Notification

Activate this function for records of calls missed when handset is off/out-of-range. Initiate Voicemail then follow these steps:

In Call settings, **Missed calls** → **Settings** → **Call**
→ Follow voice guidance

Setting Handset Response to Missed Calls

In Call settings, **Missed calls** → **Sounds & alerts**
Tap item → Follow onscreen prompts

· Set Missed calls sound, Vibration pattern, Incoming calls lamp and Ring duration.

Canceling All Outgoing Call Restrictions

In Call barring menu, **Bar outgoing calls** → **Stop all outgoing calls** → Enter Center Access Code (Call Barring Password) → **OK**

Canceling All Incoming Call Restrictions

In Call barring menu, **Bar incoming calls** → **Stop all incoming calls** → Enter Center Access Code (Call Barring Password) → **OK**

Restricting Outgoing Calls to Specified Numbers

In Call barring menu, **Restrict destinations** → Enter Operation Password → **OK** → **Specified phone number** → **Switch on/off** () → **Call permitted list** → **<Empty>** → Enter number → **OK**

Restricting Outgoing Calls to Numbers Saved in Address Book

In Call barring menu, **Restrict destinations** → Enter Operation Password → **OK** → **Restrict address book** ()

Rejecting Calls from Specified Numbers

In Call barring menu, **Reject call** → **Specified numbers** → **Switch on/off** () → **Reject numbers list** → **<Empty>** → Enter number → **OK**

Rejecting Calls from Numbers Not Saved in Address Book

In Call barring menu, **Reject call** → **Not registered numbers** ()

Rejecting Calls with No/Undisplayable Caller ID or from Payphones

In Call barring menu, **Reject call** → **Number not sent** , **Payphone** or **Unavailable** ()


Address Book

Save phone numbers, e-mail addresses and other information (birthdays, nicknames, etc.).


Set ringtones for each contact as needed.

Adding New Contacts


1

In application sheet,  (Address Book)




 Address Book opens.

2

 (add) on Action Bar



 Add contact window opens.

· If confirmation appears, follow onscreen prompts.

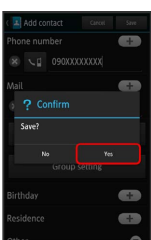
3


Tap item  Complete entry



4


Save  Yes





 Contact is saved.

Dialing from Address Book

1

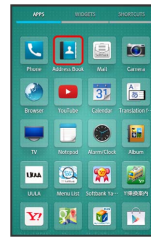In application sheet,  (Address Book)



 Address Book opens.

2

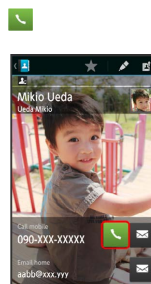
Tap tab  Tap contact




 Contact opens.


· Contacts are sorted by the first character of last name (Read last).


3



 Handset dials the number. Wait for other party to accept the call.

4

To end the call, 

 Call ends.

Address Book Caution

Contacts may be altered/lost if handset is left uncharged or due to accidents, malfunctions, repairs, handset upgrade/replacement, mishandling, etc. Back up important contacts and other data regularly. SoftBank Mobile Corp. is not liable for any damages resulting from loss/alteration of contacts.

Messaging & Browser

| | |
|--|----|
| Messaging..... | 50 |
| Sending S! Mail/SMS..... | 50 |
| Opening & Replying to S! Mail/SMS..... | 52 |
| Opening Received S! Mail/SMS..... | 54 |
| Creating/Sending Gmail..... | 54 |
| Opening Received Gmail..... | 55 |
| Using Internet Mail..... | 56 |
| Web Browsing (Browser)..... | 58 |

Messaging

S! Mail

Exchange messages with S! Mail-compatible SoftBank handsets and e-mail compatible devices (other mobiles, PCs, etc.) beyond SMS character entry limit; attach media files.

SMS

Exchange short messages with mobiles using handset numbers as addresses.

Gmail

Gmail is Google's webmail service. Handset automatically syncs with Gmail.

Internet Mail

Use Internet Mail (POP3/IMAP4/Exchange) on handset.

- Set up an Internet Mail account beforehand.
- Retrieving Internet Mail on handset syncs handset and mail server; received messages are also accessible from PCs.


Sending S! Mail/SMS

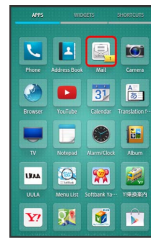
Wi-Fi Connection Setup


Send/receive S! Mail using Wi-Fi. When using Mail (S! Mail/SMS) for the first time, complete Wi-Fi connection setup as follows.

- Descriptions for Mail (S! Mail/SMS) are given assuming that Wi-Fi connection setup is complete.

1


In application sheet,  (Mail)



 Wi-Fi connection setting opens.

2

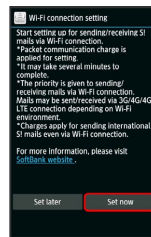
Set now



 Wi-Fi connection setup starts.

3

OK


 Wi-Fi connection setup is complete.

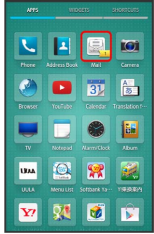
- After Wi-Fi connection setup is complete, Wi-Fi is used for sending/receiving S! Mail. When Wi-Fi is not available, 4G LTE, 4G or 3G Network is used.


Sending S! Mail

To send S! Mail to a contact saved in Address Book:

1

In application sheet,  (Mail)




 Folder list appears.

2

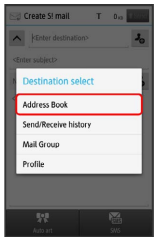
Create




 S! Mail Composition window opens.


3

 Address Book






 Address Book opens.

4


Tap recipient  OK

· For multiple numbers/addresses, Tap one after Tapping recipient.

5

Tap Enter subject field  Enter subject  Next 
Enter text

6

 (Send) on Action Bar




 S! Mail is sent.

· Handset saves failed S! Mail messages to Unsent Folder; automatically attempts redelivery up to two times.


Sending SMS

To send SMS from sent/received mail records:

1

In application sheet,  (Mail)




 Folder list appears.

2

Create  SMS



 SMS Composition window opens.

3


  Send/Receive history

4

SEND HISTORY or RECEIVE HISTORY  Tap recipient



5

Enter text   (Send) on Action Bar

 SMS is sent.

- Handset saves failed SMS messages to Unsent Folder; automatically attempts redelivery up to two times.

+ Saving S! Mail/SMS to Unsent Folder without Sending

In S! Mail Composition window or SMS Composition window,   Save


! S! Mail/SMS Transmission Caution



If Outbox is full, handset automatically deletes sent messages, unprotected ones first.

Opening & Replying to S! Mail/SMS

Handset retrieves S! Mail/SMS messages automatically (set manual retrieval as needed).

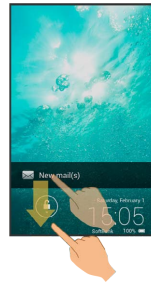
Opening New S! Mail/SMS


When message arrives, handset responds with ringtone/ Vibration/Notification Lamp, and  appears.

- In Welcome sheet (lock screen), notification appears.
- Unread message count () appears in  (Mail) icon in application sheet.

1

Drag New mail(s) notification down




 Message window opens.


- For multiple new messages, message list (Inbox) opens; select one.

Replying to S! Mail/SMS

1

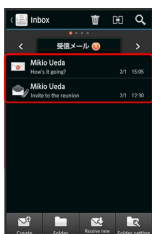
In application sheet, Tap  (Mail)




 Folder list appears.

2

Tap folder in Inbox  Tap message



 Message window opens.

3

Reply or Reply to all



· Reply to all appears for messages addressed to multiple recipients.


4

Enter text   (Send) on Action Bar

 Message is sent.

+ Retrieving Complete Messages

In message window, Tap  (receive) on Action Bar

· Tap  to select item to retrieve.

! Message Retrieval Cautions

Retrieval System

By default, complete message including attachments is retrieved; transmission fees may apply depending on subscribed price plan.

Automatic Message Deletion

If Inbox is full, handset automatically deletes oldest received messages, opened/unprotected ones first. If all messages are unopened, handset automatically deletes oldest unprotected ones first.

Retrieval Outside Japan


Message retrieval outside Japan may incur high charges.

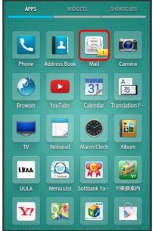
Opening Received S! Mail/SMS


Opening S! Mail/SMS

To open received messages:

1

In application sheet,  (Mail)




 Folder list appears.

2

Tap folder in Inbox

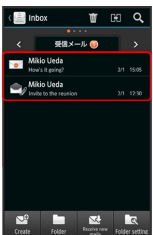



 Message list appears.

· Flick left/right for message lists in other folders.

3

Tap message



 Message window opens.


· Flick left/right to open other messages.

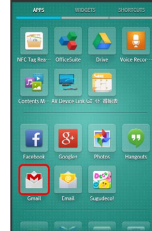
Creating/Sending Gmail


Use Google's webmail service. Sign in to a Google Account beforehand.

Creating/Sending Gmail

1


In application sheet,  (Gmail)




 Inbox opens.



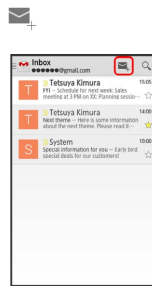· If confirmation appears, follow onscreen prompts.


2



 Mail Composition window opens.

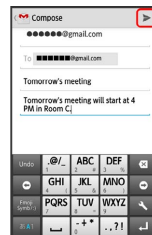3




Enter recipient, subject and text   on Action Bar







 Message is sent.

+ Gmail Composition Operations



Adding Cc/Bcc Recipients

In Mail Composition window,   **Add Cc/Bcc** 
Add recipient

Attaching Images/Videos

In Mail Composition window,   **Attach picture** or
Attach video  Tap application  **Select file**
· If confirmation appears, follow onscreen prompts.

Saving without Sending

While creating message,   **Save draft**
· Message is saved to Drafts.

Discarding Current Message

While creating message,   **Discard**  **Discard**


! Gmail Caution

Gmail messages are not received if recipient device is set to reject messages sent from PCs.

Opening Received Gmail

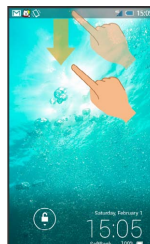
Gmail groups all related messages by subject. (Conversation View)

Opening New Gmail

When Gmail message arrives,  appears.


1


Drag Status Bar down for Notifications Window



2

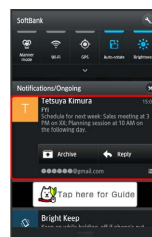Tap message notification




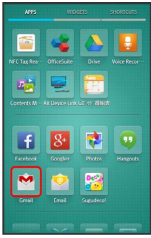
 Message window opens.


· For two or more new messages with different subjects, Inbox opens; select one.

Opening Gmail

1

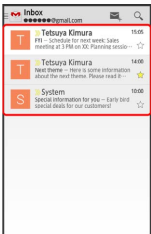
In application sheet,  (Gmail)




 Inbox opens.





2

Tap conversation (subject)



 Message window opens.

+ Replying to Messages


In message window,   Complete message   on Action Bar

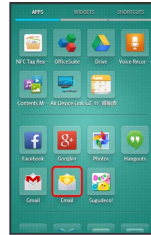
Using Internet Mail


Adding Accounts

Check usernames (user IDs), passwords, server names, etc. of your Internet Mail accounts beforehand.

1


In application sheet,  (Email)



 Account setup menu opens (if no account is set up).


2

Follow onscreen prompts to set up account


 Internet Mail setup is complete.

Creating/Sending Internet Mail

1


In application sheet,  (Email)





 Inbox opens.

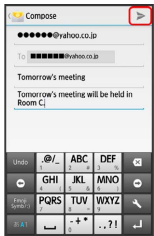
2




 Mail Composition window opens.


3

Enter recipient, subject and text  




 Message is sent.


Opening New Internet Mail

When Internet Mail message arrives, ringtone plays and  appears.

1

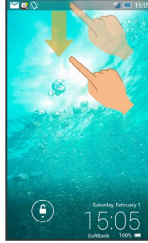
Drag Status Bar down for Notifications Window




 Notifications Window opens.

2

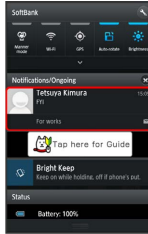Tap message notification




 Message window opens.


· For two or more new messages, Inbox opens; select one.

Opening Internet Mail

1

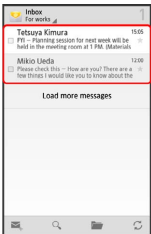
In application sheet,  (Email)




 Inbox opens.

2

Tap message



 Message window opens.

Web Browsing (Browser)

View Internet sites in Browser.


Using Browser

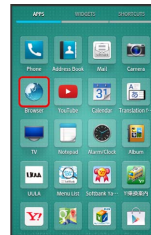
By default, Quick toolbox guidance appears when activating Browser.


- To disable it thereafter, Tap **Don't show again** () and Tap **Close**.



1

In application sheet,  (Browser)




 Browser activates.


- Flick to scroll.

Adding Bookmarks

1

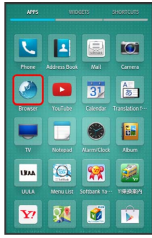
In application sheet,  (Browser)



 Browser activates.



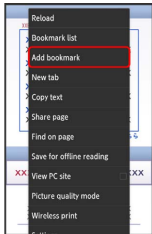2


Open target webpage    Add bookmark




 Add bookmark window opens.

3

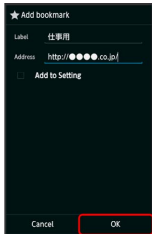
Check/edit label, URL, etc.  





 Current webpage is saved as a bookmark.

Opening Bookmarks

1

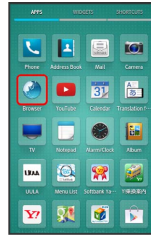
In application sheet,  (Browser)




 Browser activates.

2

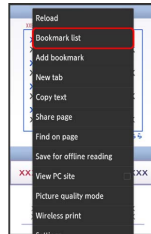
  Bookmark list



 Bookmark window opens.


3

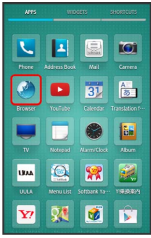
Tap bookmark


 Corresponding webpage opens.

Using History

1


In application sheet,  (Browser)




 Browser activates.

2

  **Bookmark list**

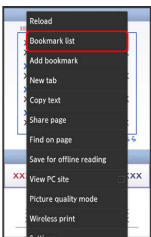


 Bookmark window opens.

3


HISTORY



 History list appears.

4


Tap item (e.g., **Today**)  Tap record

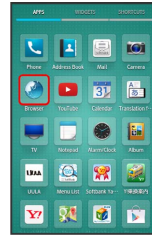
 Corresponding webpage opens.


· Frequently visited webpages are saved in **Most visited** .

Saving Webpages

1


In application sheet,  (Browser)



 Browser activates.

2


Open target webpage    **Save for offline reading**

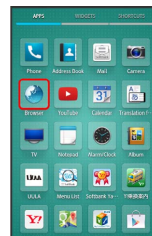
 Current webpage is saved.


Opening New Tabs

Open up to 16 webpages in different tabs to switch between them easily.

1


In application sheet,  (Browser)






 Browser activates.

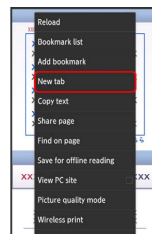

2

  **New tab**



 Another tab opens.

· When multiple tabs are open, Tap   **Tab list**

  to open another tab.

· To switch tabs, Tap   **Tab list** in Browser, then Tap target tab.





SSL & TLS

Secure Sockets Layer (SSL) and Transport Layer Security (TLS) are encryption protocols that secure Internet transmissions of important/sensitive information such as credit card numbers and corporate secrets, providing protection against online threats (eavesdropping, falsification, impersonation, etc.).




Browser Operations

Signing in to My SoftBank







Access My SoftBank to check service charges or reward points, change contract details (subscribed price plan, optional services, etc.), customize handset address, use anti-spam settings, etc.

In Browser,   **Bookmark list**  **My SoftBank**
 Follow onscreen prompts






Searching for Information

In Browser, Tap URL entry field  Enter search text 
Go  Tap link

Editing Bookmarks


In Browser,   **Bookmark list**  Touch & Hold
 bookmark  **Edit or move bookmark**  **Edit**  **OK**

Deleting Bookmarks





In Browser,   **Bookmark list**  Touch & Hold
 bookmark  **Delete bookmark**  **Yes**

Searching within Current Webpage

In Browser,   **Find on page**  Enter search text

 Search results are highlighted.

Opening Saved Webpages

In Browser,   **Bookmark list**  **SAVED PAGES**
 Tap page

SSL/TLS Caution

When a security notice appears upon opening a webpage, subscribers must decide for themselves whether or not to open the page. Opening secure pages constitutes agreement to the terms of SSL/TLS usage. SoftBank Mobile Corp., Sharp Corporation, VeriSign Japan and Cybertrust cannot be held liable for any damages associated with the use of SSL/TLS.

Camera

| | |
|-------------------|----|
| Photo Camera..... | 64 |
| Video Camera..... | 65 |


Photo Camera


Capturing Photos


Capture JPEG images.

- Captured photos are saved to SD Card.
- To capture photos with a blurred background quickly, capture close-ups with **Macro** set.

1

In application sheet,  (Camera)

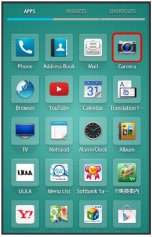

 Photo Viewfinder appears.

2


Aim External Camera at subject



- For people, focus automatically locks on detected face.

3



 Shutter sound plays; photo is saved to SD Card.

+ Photo Viewfinder Operations

Adjusting Brightness

Drag up/down for Brightness Scale

Adjusting Zoom

Drag left/right or Pinch/Spread for Zoom Slider



Locking Focus

Tap subject for focus lock

- To release shutter, Tap the subject again.
- External Camera uses color to track subjects; may not correctly track faintly colored subjects or ones similar to background color.

Opening Captured Photo


Tap preview thumbnail

 Album activates ( appears) and file view window opens.

Using Internal Camera

Use Internal Camera to capture self or others with Lens on Display side.



- Tap  to toggle Internal/External Camera.
- Some functions/settings are not available for Internal Camera.

! Camera Cautions

General Use

Mind etiquette when using Camera.

Keep Lens Clean

Fingerprints/smudges may hinder handset imaging. Clean Lens with a soft cloth beforehand.

Avoid Direct Sunlight Exposure

Do not expose Lens area to direct sunlight for extended periods; may damage color filter, altering images.

🚫 Mobile Light Warning

Do not shine Mobile Light in eyes; may affect eyesight or cause other problems.


Video Camera

Recording Videos

Record H.264/AAC videos.

- Recorded videos are saved to SD Card.

1

In application sheet,  (Camera)

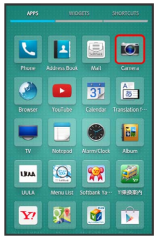



 Photo Viewfinder appears.

2




 Video Viewfinder appears.

- If confirmation appears, follow onscreen prompts.


3

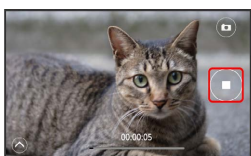
Aim External Camera at subject   to start recording



 Tone sounds and recording starts.

4

 to stop recording



 Tone sounds and recording stops; video is saved to SD Card.

+ Video Viewfinder Operations

Adjusting Brightness



Drag up/down for Brightness Scale

Adjusting Zoom

Drag left/right or Pinch/Spread for Zoom Slider

Opening Recorded Video


Tap preview thumbnail

 Album activates ( appears) and file view window opens.

Using Internal Camera

Use Internal Camera to record self or others with Lens on Display side.



- Tap  to toggle Internal/External Camera.
- Some functions/settings are not available for Internal Camera.

! Camera Cautions

General Use

Mind etiquette when using Camera.

Keep Lens Clean

Fingerprints/smudges may hinder handset imaging. Clean Lens with a soft cloth beforehand.

Avoid Direct Sunlight Exposure

Do not expose Lens area to direct sunlight for extended periods; may damage color filter, altering images.

Continuous Recording Time

Recording capacity is 2 GB per file (recording stops when exceeded). To continue recording, start another session.

🚫 Mobile Light Warning

Do not shine Mobile Light in eyes; may affect eyesight or cause other problems.

Music & Images

| | |
|-----------------------------------|----|
| Music & Images..... | 68 |
| Music Files (Music)..... | 68 |
| Still Images & Video (Album)..... | 69 |

Music & Images

Main Applications

| Application | Description |
|-------------|--|
| Music | Play music files saved to SD Card. |
| Album | Photos and videos shot on handset or downloaded images are sorted into PORTRAIT, EVENT and MAP tabs. |


Music Files (Music)

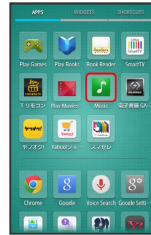
Playing Music Files


Supported file formats:


- 3GPP, 3GPP2, MP4, MP3, AMR, WMA (except WMDRM content), ASF (except WMDRM content), OGG Vorbis, WAVE, MIDI, XMF, RTTTL/RTX, OTA, iMelody, ADTS raw AAC, FLAC

1

In application sheet,  (Music)




 Library opens.

-  appears for the last played song in song list.


2

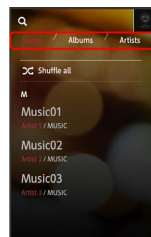
Tap category (e.g., **Albums**)



3

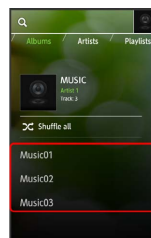Tap item  Tap song



 Song plays.

- In **Songs** , Tap song directly.
- After Tapping an item, you may need to Tap another item (e.g., album name) depending on category.
- Flick left/right to toggle categories.

Still Images & Video (Album)


Photos and videos shot on handset or downloaded images are sorted into PORTRAIT, EVENT and MAP tabs.


Opening/Playing Files


View still images and videos saved to SD Card. See below for supported file formats.

| Image | File Format |
|-------------|--|
| Still Image | JPEG, PNG, GIF, BMP, WBMP, WebP |
| Video | 3GPP, 3GPP2, MP4, WMV (except WMDRM content), ASF (except WMDRM content), WebM, Matroska, MPEG2-TS |

1

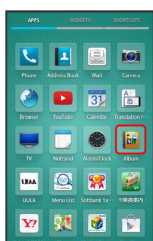In application sheet,  (Album)




 File list appears.


- Tap **ALL**, **PORTRAIT**, **EVENT** or **MAP** to open files by category.
- Flick left/right in file list or folder list to toggle categories.
- When activating Album for the first time, **ALL** file list appears. Album activates in the last-used state thereafter (file list or folder list appears).
- Flick up/down for hidden files.
- If confirmation appears, follow onscreen prompts.

2

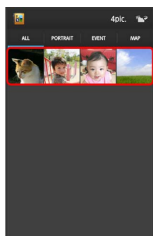Tap file



 File (file view window) opens.

- For video playback, Tap , then follow onscreen prompts.

Connectivity


| | |
|-----------------------|----|
| Wi-Fi..... | 72 |
| Tethering Option..... | 74 |
| Bluetooth®..... | 75 |

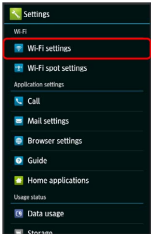
Wi-Fi


Use household Wi-Fi networks, etc. to connect to the Internet.

Enabling Wi-Fi

1

In application sheet,  (Settings) → **Wi-Fi settings**




 Wi-Fi settings opens.

2

OFF on Action Bar




 Wi-Fi is enabled (**ON**).

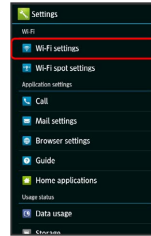
- Access point search starts; available access points appear upon completion.
- Tap **ON** to disable Wi-Fi (**OFF**).


Connecting Selected Access Points

Enable handset Wi-Fi first.

1


In application sheet,  (Settings) → **Wi-Fi settings**



 Wi-Fi settings opens.


2

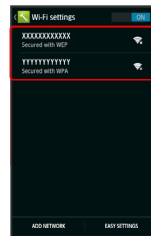
Tap access point



3

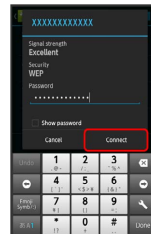Enter password → **Connect**




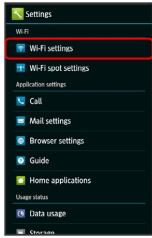
 Handset connects to selected access point.


- Password (indicated by WEP, WPA, KEY, etc.) may be found on a label on your Wi-Fi router. For details, contact the vendor of the router. For public wireless LAN services, check the password with your ISP.
- Omit password entry for unprotected access points.

Disconnecting Wi-Fi

1

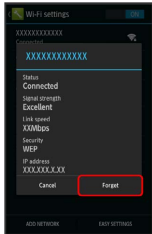
In application sheet,  (Settings) → **Wi-Fi settings**




 Wi-Fi settings opens.

2

Tap connected access point → **Forget**



 Wi-Fi is disconnected.


- Password entry may be required to reconnect to access point.

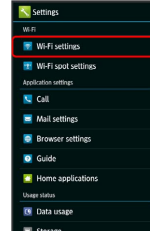
Using Wi-Fi Direct


Use Wi-Fi Direct to establish a Wi-Fi connection with other Wi-Fi Direct compatible devices with no need for an access point or Internet connection.

- Enable handset Wi-Fi first.

1


In application sheet,  (Settings) → **Wi-Fi settings**




 Wi-Fi settings opens.

2

 **Wi-Fi Direct**

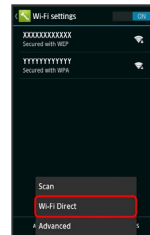


 Found Wi-Fi Direct compatible devices appear in Peer devices field.

- If target device does not appear, Tap **SEARCH FOR DEVICES** to try searching again.

3

Tap target device → Follow onscreen prompts for authentication

 Tapped device is connected.

- A connection request will be canceled if not accepted within a certain period of time.
- To disconnect devices, Tap one then Tap **OK**.

Automatic Updates for Optimizing Wi-Fi Connection

While using Wi-Fi, updates for optimizing connection may be received or applied automatically.

+ Wi-Fi Operations

Connecting Access Points Manually

In Wi-Fi settings, **ADD NETWORK** → Enter Network SSID → **Done** → Tap Security field → Tap security protocol → **Save**

- Available when **Wi-Fi settings** is enabled.
- Selected security protocol may require other fields to be completed.

Connecting Using AOSS

In Wi-Fi settings, **EASY SETTINGS** → **AOSS** → Follow onscreen prompts

Enabling/Disabling Available Network Notifications

In Wi-Fi settings, **Advanced** → **Network notification**

- Available when **Wi-Fi settings** is enabled.
- Tap **Network notification** to toggle on () / off ()

Selecting a Wi-Fi Sleep Option

In Wi-Fi settings, **Advanced** → **Wi-Fi sleep policy** → Tap option

Setting Wi-Fi Frequency Band

In Wi-Fi settings, **Advanced** → **Wi-Fi frequency band** → **Auto**, **5 GHz only** or **2.4 GHz only**

Connecting Using WPS

In Wi-Fi settings, **EASY SETTINGS** → **WPS Push Button** → Follow onscreen prompts

- Available when **Wi-Fi settings** is enabled.
- To connect using the PIN method, Tap **EASY SETTINGS** in Wi-Fi settings, Tap **WPS Pin Entry**, then follow onscreen prompts.

Dismissing Access Points

In Wi-Fi settings, Touch & Hold access point → **Forget network** → **Yes**

? Troubleshooting

Q. Cannot detect access points

A. There may be multiple access points using neighboring channels. In this instance, handset may not detect access points correctly.

Tethering Option

About Tethering Option

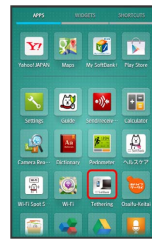
Use handset like a Wi-Fi router to access the Internet from a PC or game device.

- Requires separate subscription.
- Use after checking that handset is updated to the latest software.

Starting Up Tethering Option

1

In application sheet, **Tethering**



Tethering window appears.


- When Terms of Agreement appear, follow onscreen prompts.

Opening Tethering Option Help (Japanese)

1

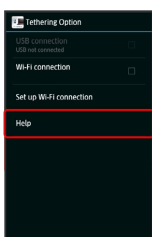
In application sheet,  (Tethering)




 Tethering window appears.

2


Help



 Help window appears.

3

Follow onscreen prompts

 A description of each item appears.

Wi-Fi Connection

After enabling **Wi-Fi connection** () , it will be automatically disabled () when no connection is made to handset for a certain period of time.

Bluetooth®


Connect handset to other Bluetooth® devices for wireless connectivity.


Bluetooth® Functions

| Function | Description |
|------------------------|--|
| Sound output | Listen to music, audio, etc. wirelessly. |
| Handsfree conversation | Use Bluetooth® devices (e.g., headsets) for handsfree conversations. |
| File transfer | Transfer files between handset and Bluetooth® devices. |

Enabling Bluetooth®


1

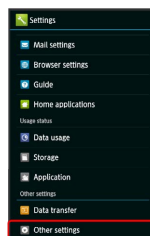
In application sheet,  (Settings) → **Other settings**



2

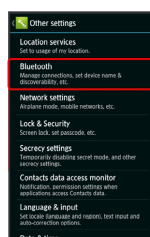Bluetooth




 Bluetooth® menu opens.

3

OFF on Action Bar



 Bluetooth® is enabled (**ON**).

· Tap **ON** to disable Bluetooth® (**OFF**).

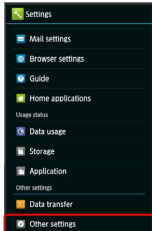
Pairing with Other Bluetooth® Devices

Pair nearby Bluetooth® devices with handset to transfer files, for handsfree conversations, or to listen to music.

- Enable Bluetooth® on handset and set target devices to be discoverable first.

1


In application sheet,  (Settings) → **Other settings**



2

Bluetooth




 Bluetooth® menu opens; found Bluetooth® devices appear in Available devices field.

- If target device does not appear, Tap **SEARCH FOR DEVICES** to try searching again.

3

Tap target device → Follow onscreen prompts for authentication

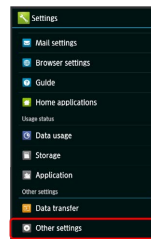
 Pairing completes; handset connects to some devices (e.g., handsfree devices) automatically.

- Authentication procedure varies by device. Passkey entry may be required.
- Passkey is a 1 to 16-digit alphanumeric code required for authentication between handset and other devices.
- Paired devices appear in Paired devices field.

Connecting Paired Bluetooth® Devices


1

In application sheet,  (Settings) → **Other settings**



2

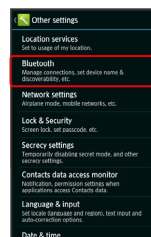Bluetooth




 Bluetooth® menu opens.

- Paired Bluetooth® devices appear in Paired devices field.


3

Tap target device


 Tapped device is connected.

Sending Files (e.g., Address Book)

1

In application sheet,  (Address Book)




 Address Book opens.

2

Tap tab  Tap contact

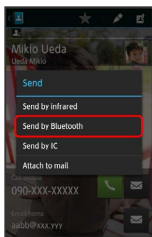


 Contact opens.

- Contacts are sorted by the first character of last name (Read last).


3

 (send) on Action Bar  **Send by Bluetooth**




4

Yes  Tap device

 File is sent.

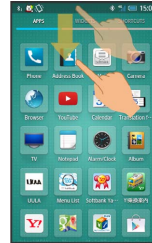
- If confirmation appears, follow onscreen prompts.

Receiving Files (e.g., Address Book)


When file reception request arrives,  appears. To receive files:


1

Drag Status Bar down for Notifications Window



2

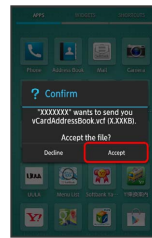


Tap Bluetooth® share notification  **Accept**

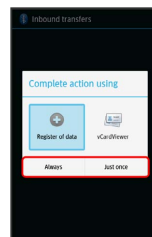



3

After file reception, Drag Status Bar down for Notifications Window

4

Tap Bluetooth® share notification  Tap file  **Register of data**  **Always** or **Just once**



 Data is saved.

- If confirmation appears, follow onscreen prompts.
- Messages received via Bluetooth® can be used from Contents Manager.





Accepting Connection Requests

Handset automatically accepts connection requests from paired devices. For unpaired devices, set handset to be discoverable first; when connection request arrives, follow onscreen prompts.

- If confirmation appears, follow onscreen prompts.



+ Bluetooth® Connection Operations

Renaming Paired Devices



In Bluetooth® menu,  for target device  **Rename**
 Enter name  **OK**

· Renaming may not be possible if a pictogram is used.

Unpairing Devices


In Bluetooth® menu,  for target device  **Unpair**

Connecting to Bluetooth® Devices by Service

In Bluetooth® menu,  for target device  Tap item

· Available when handset is paired with compatible devices.

Disconnecting Devices (e.g., Handsfree Devices)

In Bluetooth® menu, Tap device  **OK**

Setting whether to Allow Other Devices to Detect Handset

In Bluetooth® menu, Tap handset name (default:
SBM303SH)

- Description below handset name changes to Visible to all nearby Bluetooth devices, and handset will be discoverable from other Bluetooth® devices for a period of time set in **Visibility timeout** .
- Handset returns to non-discoverable state automatically after a period of time set in **Visibility timeout** , and will be hidden from unpaired devices.

Renaming Handset Name that Appears on Other Devices

In Bluetooth® menu,   **Rename phone**  Enter name  **Rename**

· Renaming may not be possible if a pictogram is used.

Changing Timeout Duration

In Bluetooth® menu,   **Visibility timeout**  Tap option

· For **Never time out** , handset does not return to non-discoverable state automatically.

? Troubleshooting

Q. Cannot use Bluetooth®

A. Airplane mode may be active. Activating Airplane mode disables Bluetooth®. (Bluetooth® can be enabled again while Airplane mode is active.)

! Bluetooth® Usage Cautions

Connection

Bluetooth® connection may not be possible with some Bluetooth® devices. Noise may interfere with wireless or handsfree conversations.

File Transfer

Files may not appear correctly on recipient devices.

Global Services

| | |
|---------------------------------|----|
| Global Roaming..... | 80 |
| Calling from Outside Japan..... | 81 |

Global Roaming

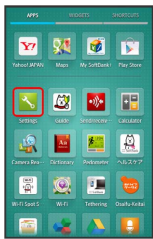
Handset is Global Roaming Service eligible. Use the same handset number outside Japan.

Selecting a Cellular Provider

Handset connects to an appropriate cellular provider automatically by default. To select a cellular provider manually:

1

In application sheet,  (Settings)




2

Other settings  Network settings




3

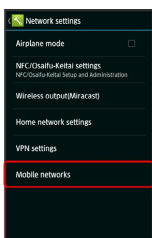Mobile networks




4

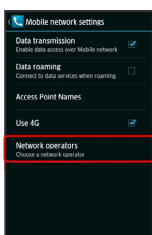Network operators



5

Tap provider

 Cellular provider is set.

- To set an appropriate cellular provider automatically, Tap **Choose automatically**.
- To search for all available cellular providers, Tap **Search networks**.

Calling from Outside Japan

See SoftBank Mobile Website for details:

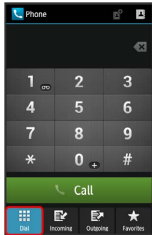
http://mb.softbank.jp/en/global_services/

Access roaming area/rate information or print it out to carry while traveling abroad.


Calling Japan

1


In application sheet,  (Phone)  **Dial**




 Call Window opens.

- When missed call window opens, Tap . If 3-Line Home returns, perform **1** again.

2

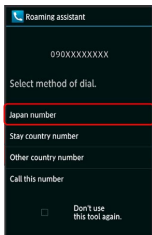
Use onscreen dialpad to enter number  **Call**


 Roaming assistant appears.

- Do not add + before the number.

3

Japan number





 Handset dials the number.


Calling Landlines & Mobiles within Current Country

1

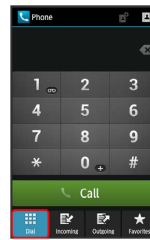
In application sheet,  (Phone)  **Dial**




 Call Window opens.

- When missed call window opens, Tap . If 3-Line Home returns, perform **1** again.

2

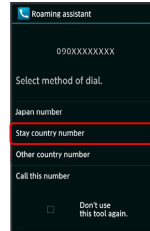
Use onscreen dialpad to enter number  **Call**


 Roaming assistant appears.

- Do not add + before the number.

3

Stay country number




 Handset dials the number.


Calling Countries aside from Japan

1

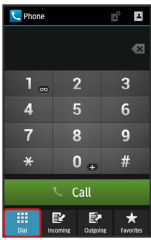
In application sheet,  (Phone) → 




 Call Window opens.

- When missed call window opens, Tap . If 3-Line Home returns, perform **1** again.

2

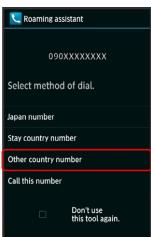
Use onscreen dialpad to enter number → 


 Roaming assistant appears.

- Do not add + before the number.

3






 Country code list appears.

4

Tap country code











 Handset dials the number.

- When calling SoftBank handsets, always Tap .







+ International Call Operations

Changing Country Codes






In application sheet,  (Settings) →  
 →  → Tap country code →  → Tap country code → 


- Tap  to enter country name and code directly.

Deleting Country Codes

In application sheet,  (Settings) →  
 →  → Tap country code → 

Enabling/Disabling Abroad Assistant

In application sheet,  (Settings) →  
 → 


- Tap  to toggle Enable () and Disable () .

Settings

| | |
|-----------------------------------|----|
| About Settings..... | 84 |
| Sound Settings..... | 85 |
| Wallpaper & Display Settings..... | 87 |
| Recent Apps Key Setting..... | 88 |
| Device Info..... | 88 |
| Add Account..... | 89 |
| Wi-Fi Settings..... | 90 |
| Home Applications Setting..... | 90 |
| Storage Settings..... | 91 |
| Application Settings..... | 91 |
| Data Transfer..... | 92 |
| Other Settings..... | 94 |

About Settings


About Settings


In application sheet, Tap  (Settings) to customize the following settings.

| Item | Description |
|---------------------|---|
| Profile | Check handset number, e-mail address, etc. |
| Sound | Set ringtone, confirmation tones, etc. |
| Wallpaper & display | Set Wallpaper, Display brightness, etc. |
| Energy saving | Adjust corresponding settings together at once to save battery power, or check battery status. |
| Recent apps key | Change function to execute when Tapping Recent apps key. |
| Device info | Check handset status. |
| Add account | Create/add accounts; sync them as needed. |
| Wi-Fi settings | Enable Wi-Fi connection. |
| Wi-Fi spot settings | Make SoftBank Wi-Fi spot settings. |
| Call | Set call options. |
| Mail settings | Set Mail options. |
| Browser settings | Set Browser options. |
| Guide | Show/hide Guide indicator. |
| Home applications | Switch Home application. |
| Data usage | Check data usage and set limit. |
| Storage | Check handset/SD Card memory status, mount SD Card and erase SD Card files. |
| Application | Check installed applications and running applications. |
| Data transfer | Import files from other mobiles using SD Card or Bluetooth®, or back up handset files to SD Card. |
| Other settings | Set operation of other functions. |

1

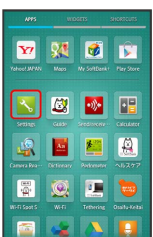
In application sheet,  (Settings)



 Settings opens.

2

Set each item

 Setting is complete.

Sound Settings

Sound Settings

| Item | Description |
|----------------------|---|
| Mode settings | Set Silent mode. |
| Volume | Adjust volume levels. |
| For Incoming call | Set ringtone and other options for incoming calls. |
| For new message | Set ringtone and other options for incoming messages. |
| For notification | Set sound and other options for notifications. |
| Alarm | Set volume and other options for Alarm. |
| Timer | Set sound and other options for Timer. |
| Haptic feedback | Enable Vibration when Tapping dialpad, keys, etc. |
| Audible touch tones | Enable confirmation tones when Tapping a menu. |
| Dial pad touch tones | Enable/disable dialpad tones. |
| Screen lock sounds | Enable tone when locking/unlocking Touchscreen. |

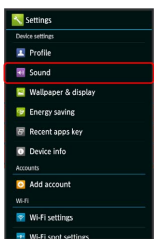
1


In application sheet,  (Settings)



2


Sound



 Sound menu opens.

3

Set each item

 Setting is complete.

+ Sound Operations

Set Silent Mode

In Sound menu, **Mode settings** → Tap option

- Camera shutter sound, video recording tones, music, video/game sounds, etc. still play even in Silent mode.

Set Handset Volume

In Sound menu, **Volume** → Drag each slider to adjust Volume → **OK**

- Sound plays at set Volume when releasing finger.

Set Ringtone for Incoming Calls

In Sound menu, **For Incoming call** → **Melody** → Tap option (**Media Storage** , **Sound/Ringtone** , etc.) → **Always** or **Just once** → Tap tone/file → **OK**

- Sound plays when Tapping a tone/file.

Enable/Disable Vibration for Incoming Calls

In Sound menu, **For Incoming call** → **Vibration** → **ON** or **OFF**

Set Vibration Pattern for Incoming Calls

In Sound menu, **For Incoming call** → **Vibrator pattern** → Tap pattern → **OK**

- Handset vibrates when Tapping a pattern.

Set Notification Lamp Illumination for Incoming Calls

In Sound menu, **For Incoming call** → **Incoming lamp** → **Blinking pattern** or **Blinking color** → Tap item → **OK**

- Notification Lamp flashes when Tapping an item.

Set Ringtone for Incoming Messages

In Sound menu, **For new message** → **Melody** → **Select melody** → Tap option (**Media Storage** , **Sound/Ringtone** , etc.) → **Always** or **Just once** → Tap tone/file → **OK**

- Sound plays when Tapping a tone/file.
- To disable ringtone, Tap **OFF** instead of **Select melody** .

Set Vibration Pattern for Incoming Messages

In Sound menu, **For new message** → **Vibrator** → Tap pattern → **OK**

- Handset vibrates when Tapping a pattern.

Set Notification Lamp Illumination for Incoming Messages

In Sound menu, **For new message** → **Reception lamp**
 → **Blinking pattern** or **Blinking color** → Tap item
 → **OK**

· Notification Lamp flashes when Tapping an item.

Set Ringtone Duration for Incoming Messages

In Sound menu, **For new message** → **Ring duration** →
Ring time setting → Select time → **OK**

· For **Ring single song**, selected tone/file plays to the end.

Set Ringtone for Notifications

In Sound menu, **For notification** → **Notification sounds** → Tap option (**Media Storage**, **Sound/Ringtone**, etc.) → **Always** or **Just once** → Tap tone/file → **OK**

· Sound plays when Tapping a tone/file.

Enable/Disable Notification Lamp for Notifications

In Sound menu, **For notification** → **Pulse notification light**

· Tap **Pulse notification light** to toggle on ()/off ().
 · Disable **Pulse notification light** to save battery power.

Set Ringtone Duration for Notifications

In Sound menu, **For notification** → **Ring duration** →
Ring time setting → Select time → **OK**

· For **Ring single song**, selected tone/file plays to the end.

Enable Vibration when Tapping Dialpad, Keys, Etc.

In Sound menu, **Haptic feedback**

· Tap **Haptic feedback** to toggle on ()/off ().
 · Disable **Haptic feedback** to save battery power.

Enable Confirmation Tones when Tapping a Menu

In Sound menu, **Audible touch tones**

· Tap **Audible touch tones** to toggle on ()/off ().
 · Disable **Audible touch tones** to save battery power.

Enable/Disable Dialpad Tones

In Sound menu, **Dial pad touch tones**

· Tap **Dial pad touch tones** to toggle on ()/off ().
 · Disable **Dial pad touch tones** to save battery power.

Enable Tone when Locking/Unlocking Touchscreen

In Sound menu, **Screen lock sounds**

· Tap **Screen lock sounds** to toggle on ()/off ().
 · Disable **Screen lock sounds** to save battery power.


Wallpaper & Display Settings

Wallpaper & Display Settings

| Item | Description |
|----------------------------------|---|
| Wallpaper | Set Wallpaper for SH HOME (Home application). |
| Welcome Sheet(lock screen) | Set Wallpaper and other options for Welcome sheet (lock screen). |
| Screen edge effect | Set effect that appears on Display edges when Display turns on. |
| Brightness | Set Display brightness. |
| Screen timeout | Set a period of inactivity after which Display turns off automatically. |
| Quality mode | Select a mode (combination of Display color tone and brightness). |
| Auto-rotate screen | Set whether to rotate Display with handset orientation automatically. |
| Screen on/off with motion | Set Display to turn on/off according to handset movement or operation. |
| Font Settings | Set font size and font type. |
| VeilView | Prevent peeking. |
| Daydream | Set screensaver to activate when Display turns off while charging. |
| Display left percents of Battery | Set whether to show battery strength in percent. |


1

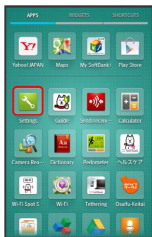
In application sheet,  (Settings)



2

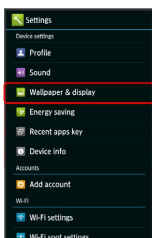
Wallpaper & display



 Wallpaper & display menu opens.

3

Set each item

 Setting is complete.

+ Wallpaper & Display Operations

Set Preloaded Image as Wallpaper

Change Wallpaper for SH Home (Home application).

In Wallpaper & display menu, **Wallpaper** → **OK** → **Live Wallpapers** or **Wallpaper gallery** → **Always** or **Just once** → Select image → **Set wallpaper** or **Set to wallpaper**

· For some images, additional settings are available. Follow onscreen prompts.

Set Still Image as Wallpaper for Welcome Sheet (Lock Screen)

In Wallpaper & display menu, **Welcome Sheet(lock screen)** → **Welcome Sheet wallpaper** → Tap **>** in Image field → Tap page (e.g., **Page 1**) → Tap option (e.g., **Contents manager**) → Follow onscreen prompts

· To remove Wallpaper, Tap **To cancel the setting** when Tapping an option.


Set a Period of Inactivity after which Display Turns Off

In Wallpaper & display menu, **Screen timeout** → Tap time

· Set a shorter time to save battery power.

Set whether to Keep Display Turned On while Hand-Holding Handset

In Wallpaper & display menu, **Screen on/off with motion** → **Bright Keep** → **ON (Notify)**, **ON (Not notify)** or **OFF**

· For **ON (Notify)**,  appears indicating Bright Keep is enabled.

· For **ON (Notify)** and **ON (Not notify)**, regardless of **Screen timeout** setting, Display turns off shortly after placing handset horizontally.

· Hand-held state is determined based on handset angle and Proximity/Light Sensor responses; may not be determined correctly depending on usage status.

Recent Apps Key Setting

Recent Apps Key Setting

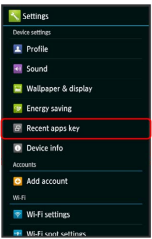
1

In application sheet,  (Settings)




2


Recent apps key



3

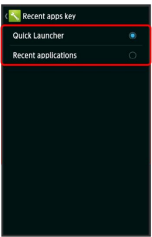Quick Launcher or Recent applications




 Setting is complete.

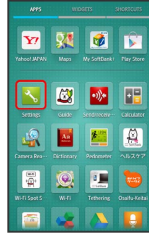
Device Info

Device Info

Check handset status.


1


In application sheet,  (Settings)



2

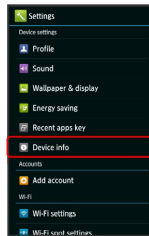Device info



 Device info menu opens.

• For details on Software update, see "[Software Updates](#)."

+ Device Info Operations

Make Developer Options Available

In Device info menu, Tap **Build number** seven times

- To access developer options, open Settings, then Tap **Other settings** → **Developer options** .

Check Handset Status (Battery Status, Handset Number, Etc.)

In Device info menu, **Status**

- Tap **Battery status** to check battery performance.
- Tap **IMEI** to view barcode with IMEI number.

Diagnose Handset

In Device info menu, **Self check** → **Start checking**

→ Tap item(s) () → **Next** → **Next** → **Start diagnosis** → Follow onscreen prompts

- To select () or cancel () all items together at once, in Select to diagnosis window, Tap (check all) or (uncheck all) on Action Bar.

Reboot Handset in Safe Mode

In Device info menu, **Self check** → **Reboot with safe mode** → **OK**

- Handset reboots in the near-default state.
- To exit safe mode, Tap **Self check** in Device info menu → **Reboot to cancel safe mode** → **OK** .

Check Handset Diagnosis Records

In Device info menu, **Self check** → Tap diagnosis record → Follow onscreen prompts

Calibrate Touchscreen

Calibrate Touchscreen to improve response. Hold handset normally during calibration.

In Device info menu, **Adjust touch panel** → Follow onscreen prompts

Calibrate Motion & Electromagnetic Sensors

In Device info menu, **Adjust sensitivity of sensor** → **OK** → Follow onscreen prompts (tone sounds when calibration completes) → **OK**

Check Legal Information, Authentication, & Technical Regulations Conformity Certification

In Device info menu, **Legal information** , **Authentication** or **Technical Regulations Conformity Certification**

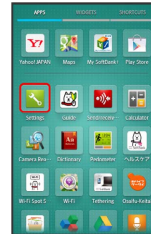
Add Account

Add Account

Create/add accounts; sync them as needed.


1

In application sheet,  (Settings)




2

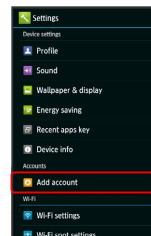Add account




3

Tap account type → Follow onscreen prompts

 An account is added.

+ Select Applications to Sync by Account

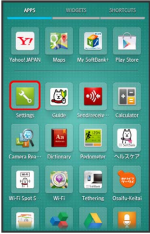
In application sheet,  (Settings) → Tap account type → Tap account → Tap sync option(s) ()

Wi-Fi Settings

Wi-Fi Settings


1

In application sheet,  (Settings)



2

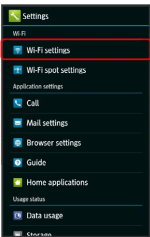Wi-Fi settings




 Wi-Fi settings opens.

3

OFF on Action Bar




 Wi-Fi is enabled (ON).

- Access point search starts; available access points appear upon completion.
- Tap ON to disable Wi-Fi (OFF).

4

Tap access point  Enter password 

 Handset connects to selected access point.


- Password (indicated by WEP, WPA, KEY, etc.) may be found on a label on your Wi-Fi router. For details, contact the vendor of the router. For public wireless LAN services, check the password with your ISP.
- Omit password entry for unprotected access points.
- See "Wi-Fi" for more about Wi-Fi settings and operations.

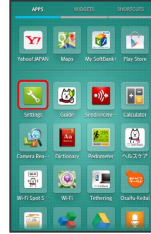
Home Applications Setting

Home Applications Setting

Set Home application.


1


In application sheet,  (Settings)



2

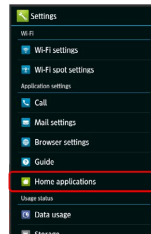
Home applications



 Home applications menu opens.

3

Tap Home application

 Setting is complete.


Storage Settings

Storage Settings

| Item | Description |
|----------------------------|---|
| Total space | Check total space in handset memory and SD Card. |
| Available | Check free space in handset memory and SD Card. |
| Mount microSD | Mount SD Card. See "Unmounting SD Card" for details. |
| Unmount microSD | Unmount SD Card to remove it safely. See "Unmounting SD Card" for details. |
| Erase microSD | Format SD Card. See "Formatting SD Card" for details. |
| Preferred install location | Set install location for applications. |
| microSD backup | Back up files to SD Card. For details on Backup and Restore , see "Data Transfer." |


1

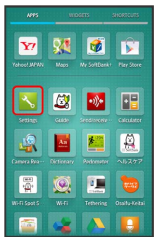
In application sheet,  (Settings)



2

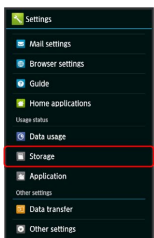
Storage




 Storage menu opens.

3

Set each item

 Setting is complete.

+ Set Install Location for Applications

In Storage menu, **Preferred install location**  Tap item

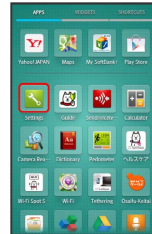
Application Settings

Application Settings

Check installed applications and running applications.


1


In application sheet,  (Settings)



2

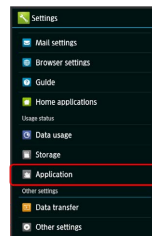Application




 Application menu opens.

- Tap **DOWNLOADED** , **ON SD CARD** , **RUNNING** or **ALL** to show applications by category.
- Flick application list left/right to toggle categories.


3

Tap application

 Application information appears.

4

Set each item

 Setting is complete.

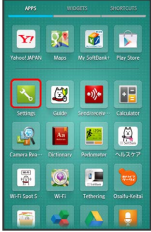
Data Transfer

Import files from other mobiles using SD Card or Bluetooth®, or back up handset files to SD Card.

Restoring Backup Files from SD Card


1


In application sheet,  (Settings)



2

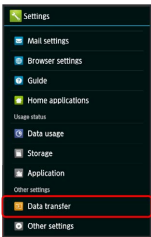Data transfer




 Data transfer window opens.

· Tap **Function information** for a tutorial (Japanese) on functions.



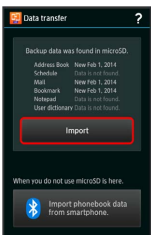3


Data import Import



· If SD Card is not inserted or there is no backup file on inserted SD Card, Select device to import from window opens. Follow onscreen prompts.

4

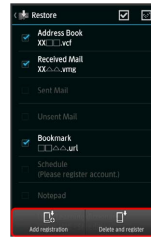
Tap item  Tap backup file  **Add registration** or **Delete and register**



· To select () or cancel () all available items together at once, in Restore item list, Tap (check all) or (uncheck all) on Action Bar.

5


Yes

 Restore starts.

· If confirmation appears, follow onscreen prompts.

6

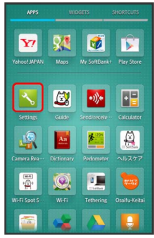
Complete

 Restore is complete.

Backing up Files to SD Card


1


In application sheet,  (Settings)



2

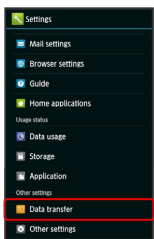Data transfer



 Data transfer window opens.

- Tap **Function information** for a tutorial (Japanese) on functions.

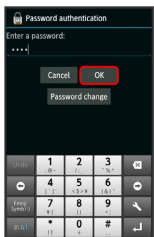
3

Save data to microSD




4

Enter Operation Password  **OK**



5

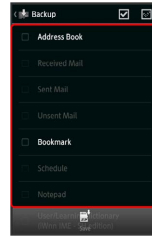
Tap item(s)




- To select () or cancel () all available items together at once, in Backup item list, Tap (check all) or (uncheck all) on Action Bar.
- If confirmation appears, follow onscreen prompts.

6

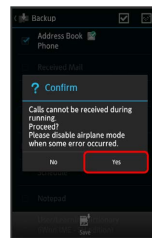
Save  **Yes**



 Backup starts.

7

Complete

 Backup is complete.

Backup Caution


Backup requires 11 MB of free space in handset memory. Backup stops if Battery runs low. Check battery charge beforehand.

Other Settings

Other Settings

| Item | Description |
|------------------------------|---|
| Location services | Enable location information. |
| Bluetooth | Set Bluetooth® connections. |
| Network settings | Set Airplane mode, mobile network, etc. |
| Lock & Security | Set Screen lock, Operation Password, etc. |
| Secrecy settings | Hide contacts, messaging folders, etc. |
| Contacts data access monitor | Control access of applications to Address Book. |
| Language & input | Set functions for language and text entry. |
| Date & time | Set functions for date and time. |
| Accessibility | Set functions for text-to-speech, etc. |
| Initial setting | Perform initial setup manually. |
| Reset all | Delete all handset memory files. |

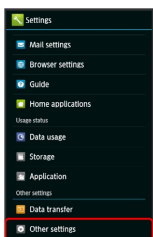
1


In application sheet,  (Settings)



2


Other settings



 Other settings opens.

3

Set each item

 Setting is complete.

Bluetooth® Settings

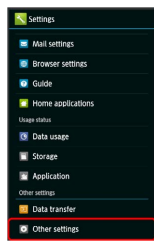
1


In application sheet,  (Settings)



2


Other settings



 Other settings opens.

3

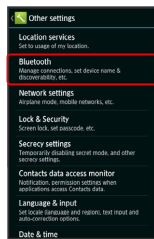
Bluetooth



 Bluetooth® menu opens.

4

Set each item

 Setting is complete.

· For details on each item, see "Bluetooth®."

Network Settings

| Item | Description |
|----------------------------|--|
| Airplane mode | Leaving power on, suspend signal-transmitting functions. |
| NFC/Osaifu-Keitai settings | Set functioning of NFC/Osaifu-Keitai®. |
| Wireless output (Miracast) | Set wireless output. |
| Home network settings | Share media files with other devices over a home network. |
| VPN settings | Set virtual private networks (VPNs). |
| Mobile networks | Set Network options. For details on Network operators , see "Global Roaming." |

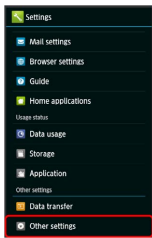
1


In application sheet,  (Settings)



2


Other settings




 Other settings opens.

3

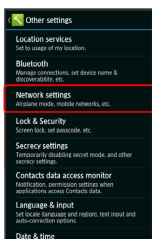
Network settings



 Network settings opens.

4

Set each item

 Setting is complete.

+ Network Settings Operations

Enable/Disable Signal-Transmitting Functions

In Network settings, **Airplane mode**

- Tap **Airplane mode** to toggle on () / off () .

Enable/Disable Sharing of SD Card Media Files on DLNA Devices

In Network settings, **Home network settings** → **Home network server**

- Set up **Wi-Fi for home NW server** beforehand.
- Tap **Home network server** to toggle on () / off () .
- See TV user guide to learn how to connect handset to DLNA-compatible TV.

Set up a Network (Wi-Fi Access Point) for DLNA Service

In Network settings, **Home network settings** → **Wi-Fi for home NW server** → Tap access point

- Available when **Home network server** is disabled.
- If confirmation appears, follow onscreen prompts.

Save Handset Name that Appears on DLNA Devices

In Network settings, **Home network settings** → **Home network server name** → Tap server name field → Enter name → **OK**

- Available when **Home network server** is disabled.

Add Virtual Private Networks (VPNs)

In Network settings, **VPN settings** → **+** on Action Bar → **Set** → **Save**

- Set up pattern, Lock No. passcode or password for Screen lock beforehand.
- Tap an added VPN to connect/disconnect it. Touch & Hold to edit/delete it.

Enable/Disable Mobile Data Transmissions

In Network settings, **Mobile networks** → **Data transmission**

- Tap **Data transmission** to toggle on () / off () .

Enable/Disable Data Roaming

In Network settings, **Mobile networks** → **Data roaming**

- Tap **Data roaming** to toggle on () / off () .
- If confirmation appears, follow onscreen prompts.

Add Access Points

In Network settings, **Mobile networks** → **Access Point Names** → **+** → **New APN** → Tap item → **Set** → **Save**

Delete Added Access Points

In Network settings, **Mobile networks** → **Access Point Names** → **+** → **Reset to default**

Select whether to Use 4G LTE & 4G Networks


In Network settings, **Mobile networks** → **Use 4G**

- Tap **Use 4G** to toggle on () / off () .

Lock & Security Settings

| Item | Description |
|----------------------------|--|
| Operation password setting | Set Operation Password to use or change some functions. See " Setting Operation Password " for details. |
| Screen lock | Set Screen lock option. |
| NFC screen-unlock settings | Use IC Card (NFC) as an option to cancel Screen lock. |
| Owner info | Show owner information in Welcome sheet (lock screen). |
| USIM card lock settings | Set whether to require PIN entry when powering on. See " USIM PIN " for details. |
| Visible passwords | Show/hide passwords as you type. |
| Device administrator | Enable/disable device management options. |
| Unknown sources | Enable/disable installation of non-Google Play applications. |
| Verify apps | When installing a malicious application, show a warning or prevent its installation. |
| Use secure credentials | Control access of applications to secure certificates and other authentication information. |
| Install from microSD | Install encrypted authentication information from SD Card. |
| Clear credentials | Delete all authentication information and reset password for authentication information storage. |

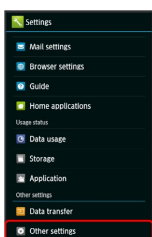
1

In application sheet,  (Settings)



2


Other settings




 Other settings opens.

3

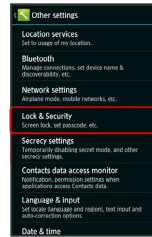
Lock & Security



 Lock & Security menu opens.

4

Set each item

 Setting is complete.

+ Lock & Security Operations

Disable Screen Lock

In Lock & Security menu, **Screen lock** → **None**

- When an option other than **None** or **Slide** is selected, after Tapping **Screen lock**, cancel Screen lock to proceed.

Require Dragging for Canceling Screen Lock

In Lock & Security menu, **Screen lock** → **Slide**

- When an option other than **None** or **Slide** is selected, after Tapping **Screen lock**, cancel Screen lock to proceed.

Require Face Recognition for Canceling Screen Lock

In Lock & Security menu, **Screen lock** → **Face Unlock**

→ **Read message** → **Set it up** → **Continue** →
Align face with guide → Face captured. appears →
Continue → Tap secondary unlock option (in case of
face recognition failure) → **Set pattern or passcode** →
OK

- When an option other than **None** or **Slide** is selected, after Tapping **Screen lock**, cancel Screen lock to proceed.

Require Pattern Drawing for Canceling Screen Lock

In Lock & Security menu, **Screen lock** → **Pattern** →

Draw pattern → **Continue** → **Draw pattern again** →
Confirm

- When an option other than **None** or **Slide** is selected, after Tapping **Screen lock**, cancel Screen lock to proceed.
- If a Google Account has been set up, **Pattern reminder** appears after failing to cancel Screen Lock five consecutive times. Tap **Pattern reminder** and sign in to the Google Account to cancel Screen Lock.

Require Passcode Entry for Canceling Screen Lock

In Lock & Security menu, **Screen lock** → **Lock No.** →

Enter passcode → **Continue** → **Re-enter passcode** →
OK

- When an option other than **None** or **Slide** is selected, after Tapping **Screen lock**, cancel Screen lock to proceed.

Require Password Entry for Canceling Screen Lock

In Lock & Security menu, **Screen lock** → **Password** →

Enter password → **Continue** → **Re-enter password** →
OK

- When an option other than **None** or **Slide** is selected, after Tapping **Screen lock**, cancel Screen lock to proceed.

Set whether to Show Owner Information in Welcome Sheet (Lock Screen)

In Lock & Security menu, **Owner info** → **Show owner info on lock screen**

- Tap **Show owner info on lock screen** to toggle on () / off () .
- After enabling **Show owner info on lock screen**, enter owner information.
- To show owner information, Tap **i** in Welcome sheet (lock screen). (Tap **x** to hide it.)

Enable/Disable Installation of Non-Google Play Applications

In Lock & Security menu, **Unknown sources**

- Tap **Unknown sources** to toggle on () / off () .
- If confirmation appears, follow onscreen prompts.

! Screen Lock Caution

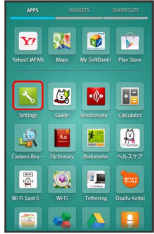
Do not forget pattern, Lock No. passcode or password set for canceling Screen lock (write it down if necessary). If you forget it, visit the nearest SoftBank Shop for recovery procedure. Note that your files and settings will be lost during the recovery process.

Contacts Data Access Monitor Setting

Control access of applications to Address Book.


1


In application sheet,  (Settings)



2

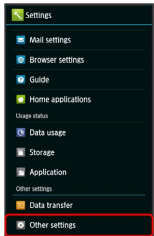Other settings




 Other settings opens.

3

Contacts data access monitor

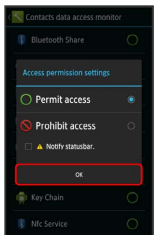



 Contacts data access monitor window opens.

4

Tap application  **Permit access** or **Prohibit access** 

OK




 Setting is complete.

- Select **Notify statusbar.** to show a notification when an application accesses Address Book.

Language & Input Settings

| Item | Description |
|-----------------------|---|
| Select language | Select handset interface language. |
| Spell checker | Enable/disable spelling correction. |
| Personal dictionary | Save words to user dictionary. |
| Default | Set default input method. |
| Google Keyboard | Set functioning of Google Keyboard. |
| Google voice typing | Enable/disable voice input. |
| iWnn IME - SH edition | Set functioning of iWnn IME - SH edition. |
| Voice Search | Set voice search options. |
| Text-to-speech output | Set text-to-speech options. |
| Pointer speed | Set pointer speed for mouse/trackpad use. |

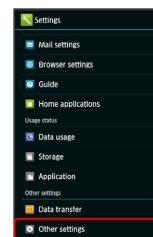
1


In application sheet,  (Settings)



2

Other settings




 Other settings opens.

3


Language & input



 Language & input menu opens.


4

Set each item












 Setting is complete.


+ Language & Input Operations

Select Handset Interface Language




In Language & input menu, **Select language**  Tap option

Save Words to User Dictionary

In Language & input menu, **Personal dictionary**  
 Tap Phrase field  Enter word/phrase  **Next**
 Enter keyword  **Done**  Tap Language field 
 Select language  





- To delete a word, Tap it then Tap .

Set Functioning of Google Keyboard

In Language & input menu,  for Google Keyboard 
 Tap item  Follow onscreen prompts

- For some items, setting completes when Tapping the item.


Set iWnn IME - SH edition


In Language & input menu,  for iWnn IME - SH edition
 Tap item  Tap item  Follow onscreen prompts

Date & Time Settings

| Item | Description |
|-----------------------|--|
| Automatic date & time | Set date and time automatically. |
| Auto timezone | Enable/disable automatic time zone adjustment. |
| Set date | Set date manually. |
| Set time | Set time manually. |
| Select time zone | Set time zone manually. |
| Use 24-hour format | Enable/disable 24-hour format. |
| Choose date format | Set date format. |


1

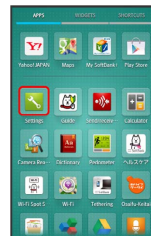
In application sheet,  (Settings)



2

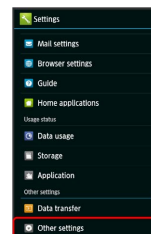
Other settings



 Other settings opens.

3

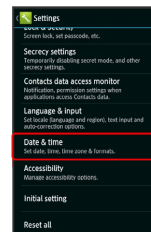
Date & time



 Date & time menu opens.

4

Set each item

 Setting is complete.

+ Date & Time Operations

Set Date & Time Automatically

In Date & time menu, **Automatic date & time**

- Tap **Automatic date & time** to toggle on () / off ()

Enable/Disable Automatic Time Zone Adjustment

In Date & time menu, **Auto timezone**

- Tap **Auto timezone** to toggle on () / off ()

Set Date Manually

In Date & time menu, **Set date** → **Select date** → **OK**

- Available when **Automatic date & time** is disabled.

Set Time Manually

In Date & time menu, **Set time** → **Select time** → **OK**

- Available when **Automatic date & time** is disabled.

Set Time Zone Manually

In Date & time menu, **Select time zone** → Tap country/area

- Available when **Auto timezone** is disabled.

Enable/Disable 24-hour Format

In Date & time menu, **Use 24-hour format**

- Tap **Use 24-hour format** to toggle on () / off ()

Set Date Format


In Date & time menu, **Choose date format** → Tap option

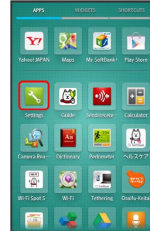
Reset All

Delete all handset memory files.

- Reset all deletes all handset memory files including some preinstalled applications irreversibly. Back up important information before performing Reset all.


1


In application sheet,  (Settings)



2

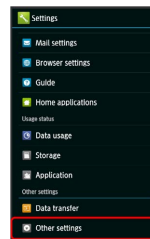
Other settings



 Other settings opens.


3

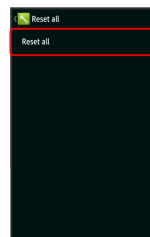Reset all → **Reset all**




4

Enter Operation Password → **OK**

 Reset all window opens.

5

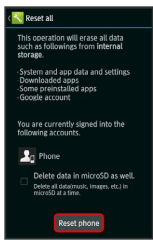
Read message → **Reset phone**



· To delete all SD Card files simultaneously, Tap **Delete data in microSD as well.** ()

6

Erase everything

 **Reset all starts.**

Appendix

| | |
|-----------------------|-----|
| File Storage..... | 104 |
| Backup & Import..... | 104 |
| Specifications..... | 105 |
| Customer Service..... | 106 |

File Storage

File Save Location

- Use handset memory and SD Cards to save files. See "[SD Card](#)" for more about SD Cards including insertion/removal procedure.
- Save locations of created files are fixed. See below for main file types and their save location.

| File Type | Description |
|---|--|
| Address Book, Bookmark, Calendar, Mail, Notepad | Created files are saved to handset memory. |
| Still images (photos), videos, TV programs | Created files are saved to SD Card. |

Backup & Import

Backup/Import Options

| Option | Description |
|---------------------------------------|--|
| Anshin Backup | Back up files to cloud server or SD Cards, and restore to handset as needed. |
| Corresponding applications | Depending on application, backup/import settings can be changed. |
| Settings | Back up or restore files to/from SD Cards via Settings. See " Data Transfer " for details. |
| Transfer to other devices (e.g., PCs) | Connect handset to a PC or other device and transfer files to it. |

Specifications

Handset

Handset specifications are as follows.

- Times below were measured with Eco backlight control disabled, Outdoor view disabled, Brightness set to approximately half of maximum (11 of 21).
- Times below may vary with location, status, settings, etc.
- Display employs precision technology; however, some pixels may remain on/off.

| Item | Description |
|---|--|
| Weight | 117 g (with Internal Battery) ¹ |
| Internal Battery Capacity | 2,120 mAh |
| Continuous Talk Time ² | 3G: 1,000 minutes ¹ GSM: 650 minutes ¹ |
| Continuous Standby Time ³ | 3G: 550 hours ¹ GSM: 450 hours ¹ 4G (AXGP Network): 380 hours ¹ 4G (FDD-LTE Network): 450 hours ¹ |
| Continuous TV (One Seg) Viewing Time ⁴ | 8.5 hours ¹ |
| Charging Time ⁵ | 150 minutes ¹ |
| Dimensions (W x H x D) | 63 mm x 124 mm x 9.9 mm (without protruding parts) ¹ |
| Maximum Output | 3G: 0.25 W GSM (900 MHz): 2 W, GSM (1800 MHz, 1900 MHz): 1 W 4G: 0.2 W |
| Maximum Transmission Speed ⁶ | SoftBank 4G: 110 Mbps in downlink, 10 Mbps in uplink SoftBank 4G LTE: 75 Mbps ⁷ in downlink, 25 Mbps in uplink |

- 1 Approximate value.
- 2 Average measured with handset fully charged, in strong signal conditions at rest.
- 3 Average measured with handset fully charged, without calls or operations, in strong signal conditions at rest, and with Data transmission and Urgent News disabled. May vary with battery strength, ambient temperature, settings, etc.
- 4 Average measured with handset fully charged, with Audio settings set to Natural in landscape view (full screen), using Headphones with Mic (optional accessory) at maximum volume, until Battery runs low (10% of capacity). Viewing time may vary with signal strength and content to be viewed.
- 5 Measured with power off using AC Charger.
- 6 Provided on a best-effort basis; transmission speed may decrease or transmission may become unavailable due to traffic conditions, network environment, etc. In addition, transmission speed varies by area.

- 7 Maximum downlink speed is 37.5 Mbps in some areas. For Network coverage information, see SoftBank Mobile Website (such information may be available in Japanese only).

AC Charger

| Item | Description |
|------------------------|--|
| Power Source | AC 100 V - 240 V, 50/60 Hz |
| Output Voltage/Current | DC 5.0 V/1.0 A |
| Charging Temperature | 5°C to 35°C |
| Dimensions (W x H x D) | 40 mm x 53 mm x 23 mm (without protruding parts, cable) ¹ |
| Cable Length | 1.5 m ¹ |
| Material/Finishing | PC, MBS, PBT, and TPE resin; copper alloy; SUS/Ni plating |

- 1 Approximate value.

Customer Service

For SoftBank handset or service information, call General Information. For repairs, call Customer Assistance.

SoftBank Customer Support

General Information

From a SoftBank handset, dial toll free at 157
From a landline/IP phone, dial toll free at 0800-919-0157

Customer Assistance (Repairs/Lost Handsets)

From a SoftBank handset, dial toll free at 113
From a landline/IP phone, dial toll free at 0800-919-0113
If you cannot reach a toll free number, use the number (charges apply) below for your service area:
Hokkaido Area, Tohoku Area, Hokuriku Area, Kanto & Koshinetsu Area: 022-380-4380
Tokai Area: 052-388-2002
Kansai Area: 06-7669-0180
Chugoku Area, Shikoku Area, Kyushu & Okinawa Area: 092-687-0010

Smartphone Technical Support Center

From a SoftBank handset, dial toll free at 151
From a landline/IP phone, dial toll free at 0800-1700-151

SoftBank Mobile Global Call Center

From outside Japan, dial +81-92-687-0025 (toll free from SoftBank handsets)
If handset is lost/stolen, call this number immediately (international charges apply)

Safety Precautions

| | |
|--|-----|
| Safety Precautions..... | 108 |
| Important Product Information..... | 113 |
| Handset & Hardware Care..... | 114 |
| General Notes..... | 116 |
| FCC Notice..... | 118 |
| RF Exposure Information/Specific Absorption Rate (SAR) Information..... | 119 |
| Water Resistance..... | 120 |

Safety Precautions




Read Safety Precautions before using handset.

Observe precautions to avoid injury to self or others, or damage to property.







SoftBank Mobile Corp. is not liable for any damages resulting from use of this product.

Safety Precautions

These labels show degree of risk from improper use; learn them before reading on:

| Label | Description |
|--|--|
|  DANGER | Great risk of death or serious injury |
|  WARNING | Risk of death or serious injury |
|  CAUTION | Risk of minor injury or damage to property |

These symbols signify prohibited/compulsory actions; learn them before reading on:

| Symbol | Description |
|---|--------------------------------|
|  | Prohibited actions |
|  | Disassembly prohibited |
|  | Exposure to liquids prohibited |
|  | Use with wet hands prohibited |
|  | Compulsory actions |
|  | Unplug from outlet |

Handset, USIM Card, SD Card, Charger (including Optional Accessories), Micro USB Cable (Optional Accessory)

DANGER



Compulsory

Use specified Charger and Micro USB Cable only.

Non-specified equipment use may cause Internal Battery to leak, overheat, burst or ignite, and may cause Charger to overheat, ignite, malfunction, etc.



Do Not Disassemble

Do not disassemble, modify or solder handset or related hardware.

May cause fire, injury, electric shock or malfunction.

Internal Battery may leak, overheat, burst, ignite, etc.

Modifying handsets is prohibited by the Radio Law and subject to penalty.



Avoid Liquids Or Moisture

Do not expose internal handset parts or Charger to liquids.

Do not let exposed internal parts remain wet; do not charge while they are wet. May cause overheating, electric shock, fire, injury or malfunction. Use only as directed.



Prohibited

Do not charge, use, or leave handset or related hardware in extreme heat (fire, heat sources, direct sunlight, inside vehicles, etc.).

Do not charge, leave, use, or be carrying handset or related hardware in a warm place or where heat collects, such as under a kotatsu (blanketed warming table) or electric blanket, next to a kairo (worn warming patch), etc.

May cause warping/malfunction; Internal Battery may leak, overheat, ignite or burst. Handset or related hardware may become hot to the touch, leading to burns or other problems.



Prohibited

Do not force Charger into handset. Check Micro USB plug orientation; retry.

Internal Battery may leak, overheat, burst, ignite, etc.

⚠ WARNING

Prohibited

Display uses tempered glass; however, do not subject to impact or apply excessive force.

Display may break, scattering sharp glass pieces. Should Display break, do not touch glass pieces or broken parts directly; may cause injury.



Prohibited

Do not place handset or Charger in/on ovens, microwave ovens, pressure cookers, induction stoves or other cooking appliances.

Internal Battery may leak, overheat, burst or ignite. Handset/Charger may overheat, emit smoke, ignite, malfunction, etc.



Compulsory

Keep handset off and Charger disconnected near gas stations or places with fire/explosion risk.

Handset use near petrochemicals or other flammables may cause fire/explosion; power off before using NFC (including Osaifu-Keitai®) at gas stations; unlock NFC (including Osaifu-Keitai®) before powering off.



Prohibited

Do not drop/throw or subject to strong impact.

Internal Battery may leak, overheat, burst or ignite, resulting in fire, electric shock, malfunction, etc.



Compulsory

For unusual sound/odor, smoke or other abnormality:

Continued use may cause fire, electric shock, etc.; grasp plug to disconnect Charger, then power off, being careful not to burn or injure yourself.



Prohibited

Keep liquid (e.g., pet urine) and conductive material (e.g., pencil lead, metal strip/jewelry) away from External Device Port.

May cause short-circuiting, resulting in fire, malfunction, etc.



Prohibited

Never charge handset while it is wet.

May cause fire, malfunction, burns, etc. due to electric shock or short-circuiting.



Prohibited

Do not expose handset or related hardware to hot air from dryers or other sources to dry them or for other purposes. Avoid saunas or hot water.

Internal Battery may leak, overheat, burst or ignite. Handset/Charger may overheat, emit smoke, ignite, malfunction, etc.

⚠ CAUTION

Prohibited

Do not place handset or related hardware on unstable surfaces.

Handset or related hardware may fall, resulting in injury, malfunction, etc.; take added care when Vibration is set or while charging.



Compulsory

Keep handset and related hardware away from infants and pets.

Infants and pets may choke from swallowing handset or related hardware or be injured, etc.



Compulsory

For use of handset/related hardware by child, explain instructions and supervise use.

Misuse may cause injury or other problems.

Internal Battery

⚠ DANGER

Use/dispose of Internal Battery according to battery type.

| Symbol on Label | Battery Type |
|-----------------|--------------|
| Li-ion00 | Lithium-ion |



Prohibited

Do not dispose of handset in fire.

Internal Battery may leak, burst, ignite, etc.



Prohibited

Do not damage (nail, hammer, stomp, etc.) handset or subject it to strong impact.

Internal Battery may leak, overheat, burst, ignite, etc.



Compulsory

If battery fluid gets in eyes, do not rub; rinse with clean water and consult a doctor immediately.

Eyes may be severely damaged.

⚠ WARNING

Compulsory

If battery fluid contacts skin or clothes, discontinue handset use and rinse with clean water immediately.

May cause skin damage.



Compulsory

If charging continues even after specified Charging Time, stop charging.

Internal Battery may leak, overheat, burst, ignite, etc.



Compulsory

For abnormal odor, excessive heat, discoloration or distortion, move handset away from sources of flame, being careful not to burn or injure yourself.

Continued use may cause Internal Battery to leak, overheat, burst, ignite, etc.



Compulsory

Do not let your pet bite handset; if this occurs, do not use that handset.

Pet bites may cause Internal Battery to leak, overheat, burst or ignite. May cause handset/related hardware to malfunction, or fire may result.

⚠ CAUTION

Prohibited

Do not dispose of handset with ordinary refuse.

Battery is built into handset; take handset to a SoftBank Shop for appropriate disposal.

Handset

WARNING

Prohibited

Do not use handset while driving or cycling.

Accidents may result.

Phone use while driving or cycling is prohibited by law and subject to penalty; park legally beforehand.



Compulsory

Power off near electronic devices that employ high precision control systems or weak signals.

May cause electronic malfunctions or other problems. Take added care near these devices: Hearing aids, implanted pacemakers/defibrillators and other electronic medical equipment; fire alarms, automatic doors and other automatic control devices.



Compulsory

Power off before boarding aircraft to avoid possible radio wave interference with aircraft operations.

If mobile phone use is allowed on board, follow airline instructions regarding handset use.



Compulsory

Users with a heart condition should adjust ringtone Vibration and Volume as needed.

May cause heart damage.



Compulsory

If thunder is audible while outdoors, power off; find cover.

There is a risk of lightning strike or electric shock.



Prohibited

Do not look into Infrared Port during Infrared transmissions.

Eyesight may be affected.



Prohibited

Do not shine Mobile Light in eyes.

May temporarily affect eyesight or startle, leading to accidents.

CAUTION

Prohibited

Do not use handset when it may affect a vehicle's electronic equipment.

Handset use inside vehicles may cause electronic equipment to malfunction, resulting in accidents.



Compulsory

For any skin irritation associated with use, discontinue use and consult a doctor.

Metal and other materials may cause skin irritation, rashes, or itchiness depending on your physical condition.



Prohibited

Keep handset away from magnetic items (e.g., magnetic cards).

Data on bank cards, credit cards, telephone cards, floppy disks, etc. may be lost.



Prohibited

Do not swing handset by Strap.

May harm self or others; Strap may break, resulting in injury or handset malfunction/breakage.



Compulsory

Handset may become hot while in use, especially in high temperatures.

Prolonged contact with skin may cause burns.



Prohibited

Always maintain some distance from Speaker while ringtones, music or other handset sounds play.

Excessive volume may damage ears or hearing.



Compulsory

Watch One Seg from a distance in good light.

Watching in poor light or too close may affect eyesight.



Compulsory

Moderate handset Volume when using Headphones.

Excessive volume may damage ears or hearing.

Charger (including Optional Accessories)

WARNING



Prohibited

Do not cover/wrap Charger while charging.

Charger may overheat, resulting in fire, malfunction, etc.



Prohibited

Use only the specified voltage.

Non-specified voltages may cause fire, malfunction, etc.

- AC Charger: AC 100 V - 240 V Input
- In-Car Charger (use in negative earth vehicles only): DC 12 V/24 V Input

Do not use power adapters designed for overseas travel.

Transformer use may cause fire, electric shock or malfunction.



Disconnect Power Source

Unplug Charger for periods of disuse; grasp plug to disconnect.

May cause electric shock, fire or malfunction.



Disconnect Power Source

If liquid (water, pet urine, etc.) gets inside, grasp plug to disconnect it immediately.

May cause electric shock, smoke or fire.



Compulsory

To remove debris, grasp plug to disconnect Charger, then clean with a dry cloth.

Fire may result.



Compulsory

Plug Charger firmly into the outlet, keeping the plug and terminals away from conductive material (pencil lead, metal strip/jewelry, etc.).

May cause electric shock, short-circuiting, fire, etc.



Do Not Use Wet Hands

Do not touch plug with wet hands.

May cause electric shock, malfunction, etc.



Prohibited

Do not touch Charger if thunder is audible.

May cause electric shock or other problems.



Prohibited

Do not use Charger in high humidity or near water (in bathrooms, shower rooms, etc.).

May cause fire, electric shock or malfunction.



Prohibited

Do not use In-Car Charger in positive earth vehicles.

May cause fire or other problems. Use in negative earth vehicles only.



Compulsory

Use only the specified fuse for In-Car Charger.

Non-specified fuse may cause fire or malfunction. See In-Car Charger manual for details.

CAUTION



Disconnect Power Source

Grasp plug to disconnect Charger before cleaning.

May cause electric shock or other problems.



Compulsory

Always grasp plug (not cord/cable) to disconnect Charger.

Pulling plug by cord/cable may damage cord/cable and cause electric shock, fire, etc.



Prohibited

Do not subject Charger to strong impact while it is plugged in.

May cause malfunction or injury.

Handset Use & Electronic Medical Equipment

This section is based on "Guidelines on the Use of Radio Communications Equipment such as Cellular Telephones and Safeguards for Electronic Medical Equipment" (Electromagnetic Compatibility Conference, April 1997) and "Guidelines to safeguard implanted medical devices against radio emissions from the use of radio equipment" (Ministry of Internal Affairs and Communications, January 2013).

WARNING



Compulsory

Persons with implanted pacemaker/defibrillator should keep handset more than 15 cm away.

Radio waves may interfere with implanted pacemakers or defibrillators.



Compulsory

Before using electronic medical equipment other than implanted pacemaker/defibrillator outside medical facilities, consult the vendor on radio wave effects.

Radio waves may interfere with electronic medical equipment.



Compulsory

If it may not be possible to keep handset 15 cm away from other persons (e.g., in a crowded situation where you cannot move freely), suspend signal-transmitting functions (e.g., by activating Airplane mode) or power off beforehand. If an application that automatically powers handset on is installed, disable that feature before powering off. Persons with implanted pacemaker/defibrillator may be near.

Radio waves may interfere with implanted pacemakers or defibrillators causing such devices to malfunction.



Compulsory

Observe these rules inside medical facilities to avoid effects of radio waves on electronic medical equipment:

- Do not enter an operating room or an Intensive or Coronary Care Unit while carrying a handset.
- Keep handset off in hospitals.
- Even in lobbies or other places where mobile phone use is permitted, keep handset off near electronic medical equipment.
- Obey medical facility rules on mobile phone use.

Important Product Information

General Use

- If your USIM Card or handset (with USIM Card inserted) is lost or stolen, suspend your service immediately. For details, contact SoftBank Customer Support, [General Information](#).
- Handset transmissions may be disrupted inside buildings, tunnels or underground, or when moving into/out of such places; may affect calls.
- Use handset without disturbing others.
- Handsets are radios as stipulated by the Radio Law. Under the Radio Law, handsets must be submitted for inspection upon request.
- Handset use near landlines, TVs or radios may cause interference.
- Beware of eavesdropping.
Because this service is completely digital, the possibility of signal interception is greatly reduced. However, some transmissions may be overheard.
Eavesdropping
Deliberate/accidental interception of communications constitutes eavesdropping.
- Beware of harmful/malicious websites. Take added care when posting personal information.
- An export license may be required to carry handset into other countries if it is to be used by or transferred to another person. However, no such license is required when taking handset abroad for personal use on a vacation or business trip and then bringing it back. Export control regulations in the United States provide that an export license granted by the US government is required to carry handset into Cuba, Iran, North Korea, Sudan or Syria.

Heat from Handset Use

- Handset internal temperature may increase depending on usage or environment, causing housing to heat up. (Handset may stop charging or Display brightness may be adjusted for safety.) After a period of handset use under such conditions, warning appears and handset shuts down after approximately 3 minutes. To lower internal temperature and prevent automatic shutdown, exit all applications and activate Screen lock.
- After a period of Camera use at high internal temperature, warning appears and handset automatically shuts down after approximately 1 minute. (Shot image is saved.)

Camera

- Mind etiquette when using Camera.
- Test Camera before shooting special moments.
- Do not use Camera in places where shooting is prohibited.
- Shot images may not be used/transferred without copyright holder (photographer) permission, except for personal use.

One Seg

- Handset One Seg reception may be disrupted inside buildings, tunnels or underground, or when moving into/out of such places; may affect One Seg images.

In-Call/Transmission Cautions

- During calls/transmissions, calling/transmission charges/fees apply even if other functions or operations are simultaneously in use.
- Transmissions involving JavaScript may incur high charges.

Urgent News (Application)

- Handset receives alerts by default (Urgent News Incoming Setting is enabled).
- Alert tones sound even in Silent mode.
- Alerts are not received during calls/transmissions or in poor signal conditions.
- Depending on usage/situation, handset may receive alerts for other areas or no alerts.
- Standby Time may decrease when Urgent News Incoming Setting is enabled.
- SoftBank Mobile Corp. cannot be held liable for any damages associated with this service, including accidents resulting from received information, reception timing or reception failure.

Handset & Hardware Care

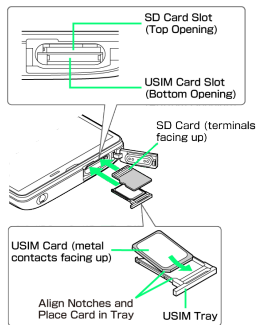
Handset & Hardware Care

- During periods of disuse, charge handset to approximately 40% at least once every 6 months; if left uncharged, files/settings may be affected or handset may become unusable. SoftBank Mobile Corp. is not liable for any resulting damages.
- Use handset within 5°C - 35°C (up to 40°C for brief periods in bathrooms, shower rooms, etc.) and 35% - 90% humidity.
- Avoid extreme temperature or direct sunlight.
- Handset/Internal Battery may become warm during operation or while charging. This is normal.
- Warranty does not cover malfunctions resulting from misuse.
- Clean handset with a soft dry cloth. Alcohol/solvent use may fade color/print.
- Avoid scratching Display.
- Avoid heavy objects or excessive pressure. May cause malfunction or injury.
 - Do not sit on handset in back pants pocket.
 - Do not place heavy objects on handset inside handbags, packs, etc.
- Handset back cover is not removable. Do not try to remove it; may cause damage or malfunction, or affect water resistance.
- Connect only specified products to Port. Other devices may malfunction or cause damage.
- Do not power off while using SD Card; may result in data loss or malfunction.
- When walking outside, moderate handset Volume to avoid accidents.
- Avoid covering Earpiece, Mic and Speaker while using handset.
- Proximity Sensor prevents Touchscreen misoperation during calls. Do not cover or place a sticker/label over Proximity Sensor; Display may remain off during calls, disabling handset operation.
- Do not cover Proximity Sensor or place a sticker/label over it; may hinder ambient light detection, resulting in malfunction of Proximity Sensor.

SD/USIM Card Slot

SD Card Slot is located above USIM Card Slot. Insert each card into correct opening in correct orientation.

- Always power off before card insertion/removal.
- Place USIM Card in USIM Tray beforehand.



Touchscreen

- Touchscreen may not respond in these situations:
 - Use with gloves/long fingernails
 - Use of pens, pencils or sharp objects
 - Use with objects on/against Display
- To prevent malfunctions, do not:
 - Touch Display with wet fingers
 - Use if Display is wet
 - Subject Display to force/pressure
 - Place labels or stickers over Display
- If Display is wet, wipe it with a soft cloth.
- To improve response, calibrate Touchscreen as follows.

In application sheet, (Settings) → **Device info** → **Adjust touch panel** → Follow onscreen prompts
- In the following cases, Press to activate Screen lock, then Press again to cancel it.
 - Handset operates automatically without touch input
 - Handset does not respond to touch input

Self Check

If handset is unstable, diagnose the cause as follows.

In application sheet, (Settings) → **Device info** → **Self check** → Follow onscreen prompts

Saving Battery Power

Reduce battery consumption as follows.

In application sheet, (Settings) → **Energy saving** → **Energy saving settings** → **Energy save**

- When **Energy save** is enabled, Energy save symbol appears green.

Headphones

Headphones with Mic (SHLDL1) are available for separate purchase. Other headphone mics may not function properly on handset.

- Do not subject Headphone Port to strong impact while using Headphones with Mic; water resistance may be affected.

Forcing Power Off

If handset has stopped processing or won't respond to operation, power off forcibly as follows.

(Long Press for at least 8 seconds)

- Release finger after vibration; handset powers off.

Bluetooth® Function

SoftBank Mobile Corp. is not liable for any damages resulting from data/information leakage due to use of handset Bluetooth® function.

■Precautions

The frequency band utilized by handset Bluetooth® function is shared with industrial, scientific or medical equipment, including household microwave ovens, and used by radio stations, amateur radio stations, etc. (hereafter "other radio stations").

1. Before using Bluetooth®, visually check that no other radio stations sharing the same frequency band are in use nearby.
2. Should interference occur between handset and other radio stations, move it to a different location or cancel Bluetooth® function immediately.
3. For additional information and support, contact SoftBank Customer Support, General Information: From a SoftBank handset, call toll free at 157. To call toll free from a landline/IP phone, see "[Customer Service](#)."

Frequency Band

This radio station utilizes 2.4 GHz band. FH1 indicates FHSS modulation with maximum transmission radius of 10 meters. XX4 indicates a different modulation scheme with maximum transmission radius of 40 meters. It is not possible for the radio station to avoid using the frequency band of a mobile unit identification apparatus.

To view related information (Japanese):

In application sheet, (Settings) → **Device info** →

Authentication

2.4FH1/XX4

Wi-Fi (Wireless LAN)

Wireless LAN (hereafter "Wi-Fi") uses radio waves to enable communication between compatible devices within range. However, it is advisable for the user to configure security settings to avoid risk of data interception.

- Do not use Wi-Fi near electrical appliances, audiovisual equipment or office automation equipment; may affect Wi-Fi transmission speed, availability, clarity, etc. (Especially when a microwave oven is in use.)
- If there are multiple access points nearby, handset may not detect access points correctly.

■Precautions

The frequency band utilized by handset Wi-Fi is shared with industrial, scientific or medical equipment, including household microwave ovens, and used by radio stations, amateur radio stations, etc. (hereafter "other radio stations").

1. Before using Wi-Fi, visually check that no other radio stations sharing the same frequency band are in use nearby.
2. Should interference occur between handset and other radio stations, move it to a different location or disable Wi-Fi immediately.

3. For additional information and support, contact SoftBank Customer Support, General Information: From a SoftBank handset, call toll free at 157. To call toll free from a landline/IP phone, see "[Customer Service](#)."

Frequency Band

This radio station utilizes 2.4 GHz band and 5 GHz band with DSSS-OFDM modulation. Maximum transmission radius is 40 meters.

To view related information (Japanese):

In application sheet,  (Settings)  [Device info](#) 

Authentication



Available Channels in the 5 GHz Band

Three bands are available within the 5 GHz frequency band:

5.2 GHz, 5.3 GHz and 5.6 GHz (W52/W53/W56).

- W52 (5.2 GHz band; channels 36, 38, 40, 44, 46, 48)
- W53 (5.3 GHz band; channels 52, 54, 56, 60, 62, 64)
- W56 (5.6 GHz band; channels 100, 102, 104, 108, 110, 112, 116, 118, 120, 124, 126, 128, 132, 134, 136, 140)

Using the 5.2 GHz or 5.3 GHz band (W52/W53) for outdoor communication is prohibited by the Radio Law.

■Simultaneous Use with Bluetooth®

Wi-Fi (IEEE 802.11b/g/n) and Bluetooth® transmit on the 2.4 GHz band. Enabling handset Bluetooth® or using Bluetooth® devices near handset may affect Wi-Fi transmission speed, availability and clarity. Should interference occur, cancel handset Bluetooth® or discontinue Bluetooth® device use.

- Handset supports Wi-Fi channels 1 - 13. Handset does not connect to access points set to other channels.
- Available channels vary by country.
- For use of Wi-Fi aboard aircraft, check with airline beforehand.
- In some countries/regions, there are restrictions on the use of Wi-Fi. Check the local laws and regulations before using Wi-Fi on handset abroad.

General Notes

Portrait Rights

Portrait rights protect individuals' right to refuse to be photographed or to refuse unauthorized publication/use of their photographs. Portrait rights consist of the right to privacy, which is applicable to all persons, and the right to publicity, which protects the interests of celebrities. Therefore, photographing others including celebrities and publicizing/distributing their photographs without permission is illegal; use Camera responsively.

Copyrights

Copyright laws protect sounds, images, computer programs, databases, other materials and copyright holders. Duplicated material is limited to private use only. Use of materials beyond this limit or without copyright holder permission may constitute copyright infringement, and be subject to criminal punishment. Comply with copyright laws when using images shot with Camera.

The software contained in handset is copyrighted material; copyright, moral right and other related rights are protected by copyright laws. Do not copy, modify, alter, disassemble, decompile or reverse-engineer the software; do not separate it from hardware in whole or part.

Open Source Software

- Handset contains software based on GNU General Public License (GPL), GNU Lesser General Public License (LGPL), and other licenses.

To check details of relevant software licenses:

In application sheet,  (Settings)  [Device info](#) 

[Legal information](#)  [Open source licenses](#)

- The source code of software based on GPL, LGPL, and Mozilla Public License (MPL) is provided on the following website free of charge.

<https://sh-dev.sharp.co.jp/android/modules/oss/> (Japanese)

Electromagnetic Safety in Europe

For body-worn operation, this mobile phone has been tested and meets RF exposure guidelines when used with an accessory containing no metal and positioning the handset a minimum 15 mm from the body. Use of other accessories may not ensure compliance with RF exposure guidelines.

CE Declaration of Conformity

In some countries/regions including Europe, there are restrictions on the use of 5 GHz WLAN that may limit the use to indoors only.

If you intend to use 5 GHz WLAN on the device, check the local laws and regulations beforehand.

Hereby, Sharp Telecommunications of Europe Ltd, declares that 303SH is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC. A copy of the original declaration of conformity for each model can be found at the following Internet address: <http://www.sharp.co.jp/k-tai/>

CE0168

Battery Cautions

Use specified Charger only.

Non-specified equipment use may cause Internal Battery to leak, overheat, burst or ignite, and may cause Charger to overheat, ignite, malfunction, etc.

Battery is built into handset. Do not dispose of handset with ordinary refuse; take it to a SoftBank Shop for appropriate disposal.

Charge handset in ambient temperature 5°C - 35°C; Internal Battery may leak/overheat and performance may deteriorate outside this range.

European RF Exposure Information

Your mobile device is a radio transmitter and receiver. It is designed not to exceed the limits for exposure to radio waves recommended by international guidelines. These guidelines were developed by the independent scientific organization ICNIRP and include safety margins designed to assure the protection of all persons, regardless of age and health.

The guidelines use a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit for mobile devices is 2.0 W/kg and the highest SAR value for this device when tested at the ear was 0.627 W/kg*. As mobile devices offer a range of functions, they can be used in other positions, such as on the body as described in this User Guide**. In this case, the highest tested SAR value is 0.520 W/kg***. As SAR is measured utilizing the device's highest transmitting power the actual SAR of this device while operating is typically below that indicated above. This is due to automatic changes to the power level of the device to ensure it only uses the minimum level required to reach the network.

The World Health Organization has stated that present scientific information does not indicate the need for any special precautions for the use of mobile devices. They note that if you want to reduce your exposure then you can do so by limiting the length of calls or using a hands-free device to keep the mobile phone away from the head and body.

*The tests are carried out in accordance with international guidelines for testing.

**Please see "[Electromagnetic Safety in Europe](#)" for important notes regarding body-worn operation.

***A method of measuring SAR when a mobile phone is used at positions other than at the ear was established in March 2010 through an international standard (IEC62209-2).

World Health Organization

<http://www.who.int/emf>

List of Specific Absorption Rates (SAR) for radio waves by smartphone model

<http://www.softbank.jp/mobile/support/sar/> (Japanese)

Volume Level Caution

To prevent possible hearing damage, do not listen at high volume levels for long periods.



■Headphone Signal Level

The maximum output voltage for Music Player function, measured in accordance with EN 50332-2, is 122.5 mV.

5 GHz WLAN Operation in USA

Within the 5.15-5.25 GHz band, U-NII devices are restricted to indoor operations to reduce any potential for harmful interference to co-channel Mobile Satellite Services (MSS) operations.

FCC Notice

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the manufacturer responsible for compliance could void the user's authority to operate the equipment.

FCC Information to User

This equipment has been tested and found to comply with the limits of a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation; if this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

1. Reorient/relocate the receiving antenna.
2. Increase the separation between the equipment and receiver.
3. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
4. Consult the dealer or an experienced radio/TV technician for help.

FCC RF Exposure Information

Your handset is a radio transmitter and receiver. It is designed and manufactured not to exceed the emission limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission of the U.S. Government.

The guidelines are based on standards that were developed by independent scientific organization through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons, regardless of age and health.

The exposure standard for wireless handsets employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC is 1.6 W/kg. The tests are performed in positions and locations (e.g. at the ear and worn on the body) as required by the FCC for each model.

The highest SAR value for this model handset as reported to the FCC when tested for use at the ear is 0.56 W/kg, and when worn on the body in a holder or carry case, is 0.65 W/kg.

Body-worn Operation; This device was tested for typical body-worn operations with the handset kept 1.0 cm from the body. To maintain compliance with FCC RF exposure requirements, use accessories that maintain a 1.0 cm separation distance between the user's body and the handset. The use of beltclips, holsters and similar accessories should not contain metallic components in its assembly.

The use of accessories that do not satisfy these requirements may not comply with FCC RF exposure requirements, and should be avoided. The FCC has granted an Equipment Authorization for this model handset with all reported SAR levels evaluated as in compliance with the FCC RF emission guidelines. SAR information on this model handset is on file with the FCC and can be found under the Display Grant section of <http://www.fcc.gov/oet/ea/> after searching on FCC ID APYHRO00203.

Additional information on Specific Absorption Rates (SAR) can be found on the FCC Radio Frequency Safety website at <http://transition.fcc.gov/oet/rfsafety/>.

RF Exposure Information/Specific Absorption Rate (SAR) Information

RF Exposure Information/Specific Absorption Rate* (SAR) Information

This mobile phone SoftBank 303SH meets the MIC's**** technical regulation for exposure to radio waves.

The technical regulation* established permitted levels of radio frequency energy, based on standards developed by independent scientific organizations through periodic and thorough evaluation of scientific studies.

The regulation employs a unit of measurement known as the Specific Absorption Rate, or SAR.

The SAR limit is 2 watts/kilogram (W/kg)** averaged over ten grams of tissue.

The limit includes a substantial safety margin designed to assure the safety of all persons, regardless of age and health.

The value of the limit is equal to the international guidelines recommended by ICNIRP*****.

The highest SAR value for this mobile phone is 0.570 W/kg when tested for use at the ear.

While there may be differences between the SAR levels of various phones and at various positions, all phones meet MIC's technical regulation.

Although the SAR is determined at the highest certified power level, the actual SAR of the phone during operation can be well below the maximum value.

Use at positions other than at the ear

This mobile phone may be used at positions other than at the ear. By using an accessory such as a belt clip holster that maintains a 1.5 cm separation with no metal (parts) between the body and the mobile phone, this mobile phone will comply with international guidelines for radio wave protection (***).

The World Health Organization has announced that "A large number of studies have been performed over the last two decades to assess whether mobile phones pose a potential health risk. To date, no adverse health effects have been established as being caused by mobile phone use."

For more information about SAR, see the following websites:

- Ministry of Internal Affairs and Communications (MIC)

<http://www.tele.soumu.go.jp/e/sys/ele/body/index.htm>

- Association of Radio Industries and Businesses (ARIB)

<http://www.arib-emf.org/index02.html> (Japanese)

*The technical regulation is provided in Article 14-2 of the Ministry Ordinance Regulating Radio Equipment.

**Provided for in "Radio-radiation protection guidelines," reported in 1997 by the Telecommunications Technology Council, Ministry of Posts and Telecommunications.

***A method of measuring SAR when a mobile phone is used at positions other than at the ear was established in March 2010 through an international standard (IEC62209-2). MIC technical regulation was reported in October 2011 by the Information and Communications Council.

****Ministry of Internal Affairs and Communications

*****International Commission on Non-Ionizing Radiation Protection

Standards of the Federal Communications Commission (FCC) of the U.S. Government and information from the E.U. are given as information relating to RF exposure. For details, see

"FCC RF Exposure Information" and "European RF Exposure Information."

Water Resistance

Handset Water Resistance

Handset complies with IPX5 (former JIS protection level 5)¹ and IPX7 (former JIS protection level 7)² water protection standards, with Card Slot Cover closed firmly. (Handset is not dust proof.)

¹IPX5 compliant means that a handset continues to function as a phone after being subjected to a water jet (approximately 12.5 liters/min.) discharged from a nozzle (inner diameter: 6.3 mm), from all directions (approximately 3 m from handset) for at least 3 minutes.

²IPX7 compliant means that a handset continues to function as a phone after being gently submerged to the depth of 1 m in still tap water at room temperature, left there for approximately 30 minutes, then removed from it.

- Water resistance may be affected under some circumstances. Warranty does not cover malfunctions resulting from misuse.
 - Handset is compliant with IPX5 and IPX7 water protection standards. However, ingress of beverage, sea water, etc. may cause malfunction.
- Handset Care
- Close Card Slot Cover firmly. Debris (hair, sand, fibers, etc.) trapped between gasket and base may allow ingress of liquid.
 - If handset is exposed to liquids with Card Slot Cover open, they may enter handset and cause electric shock or malfunction. Discontinue use and power off.
 - If handset is wet, wipe it with a dry cloth.
 - Never open/close Card Slot Cover with wet hands or while handset is wet.
 - Do not use Headphone Port or External Device Port while it is wet or obstructed by sand/dirt; water resistance may be affected, or malfunction, burns or fire may result due to electric shock, short-circuiting, etc.
 - Handset is only water resistant against fresh/tap water between 5°C - 35°C.

Precautions

- Do not subject handset to soap, detergent, bath powder/oil, sea/pool/spa water, hot water, etc.
- Rinse off sea/pool water, beverage, dirt, sand, mud, etc. immediately with fresh/tap water between 5°C - 35°C; residue may cause malfunction if allowed to dry.
- Do not soak handset in bath or pool; never use it in water (including key operation).
- Handset is not resistant to water pressure. Avoid high-pressure water/shower (over 6 liters/min.) or water immersion.
- Do not expose handset to high humidity for long periods; avoid prolonged use in bath/shower rooms.
- Volume may be low when Mic, Earpiece or Speaker is wet; dry handset before use (see "[Drying Handset](#)").
- Charger and optional accessories are not water or dust proof. Do not use in high humidity or near water (outdoors, in bathrooms, shower rooms, etc.); may cause fire, electric shock or malfunction.
- Do not subject handset to strong impact; do not poke Mic, Earpiece, Speaker, etc. with a sharp object.
- Avoid placing handset directly on sand. Sand may penetrate Earpiece, Speaker, etc., resulting in low volume.
- Do not move handset directly from a cold place to a warm humid place; condensation may occur. Should this happen, dry handset naturally at room temperature.
- Handset does not float on water.
- Keep handset out of heavy rain.

Charging Cautions

- Never charge handset while it is wet; may cause fire, malfunction or burns due to electric shock or short-circuiting. Be sure to dry it before use.
- Do not use Charger in rooms where water is regularly in use (kitchens, bathrooms, shower rooms, etc.); may cause fire or electric shock.

Care & Maintenance

- Proper care of Card Slot Cover gasket is crucial for continued handset water resistance. Observe the following:
 - Do not remove or damage gasket. Keep it clean.
 - Do not insert a sharp object into Card Slot Cover gap, Headphone Port or External Device Port.
 - If Card Slot Cover is damaged or deformed, contact a SoftBank Shop.
- To maintain water resistance, it is recommended to replace Card Slot Cover every 2 years regardless of its condition. Customer-requested Card Slot Cover replacement incurs fees and requires handset submission. For details, contact a SoftBank Shop or SoftBank Customer Support, [General Information](#).

Washing Handset

Wipe off dirt, sand, beverage, etc., gently with a cloth. Then hold handset approximately 10 cm below faucet or shower head and wash with low-pressure tap water (6 liters/min. or lower) at room temperature (5°C - 35°C). Wash with your hands, taking care not to open Card Slot Cover; do not use a brush or sponge. Dry handset before use; after drying it well, power on.

- Before washing handset, make sure that Card Slot Cover is closed firmly.
- Do not use a washing machine or ultrasonic cleaner.
- Headphone Port and External Device Port tend to accumulate dust, sand, etc.; rinse and dry them completely before use. Any residue may cause malfunction, burns or fire.
- Do not put a cotton swab, cloth, etc. into Headphone Port or External Device Port; water resistance may be affected causing malfunction.

Drying Handset

After exposing handset to water, be sure to dry External Device Port, Mic, Speaker, Headphone Port and Earpiece.

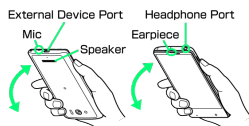
- When shaking handset, hold it firmly so as not to drop it.

1

Wipe handset surface with dry cloth


2

Holding handset firmly by its sides, shake it about 20 times



3

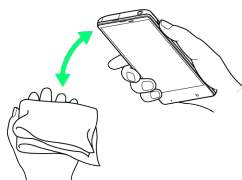Pat against dry cloth to remove moisture from holes and grooves



4

Leave handset on dry cloth for approximately 2 - 3 hours at room temperature

! Cautions

When Removing Moisture

Do not put a cotton swab, cloth, etc. into openings; water resistance may be affected.

After Drying Procedure

Do not use handset in wet conditions.

- Voice quality may be affected, or moisture may transfer to clothes, bag, etc.
- Moisture may short-circuit Headphone Port, External Device Port or other parts.
- Exposure to cold may freeze moisture and cause malfunction.

303SH User Guide Index

A

| | |
|---------------------------|----|
| About Settings..... | 84 |
| Add Account..... | 89 |
| Address Book..... | 48 |
| Applications..... | 18 |
| Application Settings..... | 91 |

B

| | |
|-----------------------|-----|
| Backup & Import..... | 104 |
| Basic Operations..... | 16 |
| Bluetooth®..... | 75 |

C

| | |
|---------------------------------|-----|
| Calling..... | 42 |
| Calling from Outside Japan..... | 81 |
| Charging Handset..... | 11 |
| Creating/Sending Gmail..... | 54 |
| Customer Service..... | 106 |
| Customizing 3-Line Home..... | 38 |

D

| | |
|--------------------|----|
| Data Transfer..... | 92 |
| Device Info..... | 88 |

F

| | |
|-------------------|-----|
| FCC Notice..... | 118 |
| File Storage..... | 104 |

G

| | |
|-----------------------|-----|
| General Notes..... | 116 |
| Global Roaming..... | 80 |
| Google Play..... | 24 |
| Google™ Accounts..... | 22 |

H

| | |
|--------------------------------|-----|
| Handset & Hardware Care..... | 114 |
| Handset Phone Number..... | 19 |
| Home Applications Setting..... | 90 |

I

| | |
|------------------------------------|-----|
| Important Product Information..... | 113 |
| Introduction..... | 3 |

M

| | |
|---------------------|----|
| Messaging..... | 50 |
| Mobile Manners..... | 19 |
| Music & Images..... | 68 |

Music Files (Music)..... 68

N

Notifications Window.....35

O

Opening & Replying to S! Mail/SMS..... 52

Opening Received Gmail..... 55

Opening Received S! Mail/SMS.....54

Optional Services.....43

Other Settings..... 94

P

Package Contents..... 6

Parts & Functions.....6

Photo Camera..... 64

Power On/Off..... 12

R

Recent Apps Key Setting..... 88

RF Exposure Information/Specific Absorption Rate (SAR) Information..... 119

S

Safety Precautions..... 108

Screen Lock..... 28

SD Card..... 8

Security Codes..... 26

Sending S! Mail/SMS.....50

Software Updates.....29

Sound Settings.....85

Specifications.....105

Status Bar..... 34

Still Images & Video (Album).....69

Storage Settings.....91

T

Tethering Option..... 74

Text Entry.....20

Touchscreen Operations..... 13

U

USIM Card Installation..... 7

USIM PIN.....27

Using Internet Mail..... 56

Using Mini-Applications & Mini-Widgets..... 37

Using Quick Launcher.....36

V

Video Camera..... 65

W

Wallpaper & Display Settings.....87

Water Resistance.....120

Web Browsing (Browser)..... 58

Welcome Sheet (Lock Screen) Basics.....32

Wi-Fi.....72

Wi-Fi Settings.....90

3

3-Line Home Basics..... 33

SoftBank 303SH User Guide

March 2014, First Edition
SoftBank Mobile Corp.

Visit [SoftBank Shop](#) for assistance

Model : SoftBank 303SH
Manufacturer : SHARP CORPORATION