

# DVR 426HDv2

## Digital Camcorder

with camera

## User Manual



**Vivitar**<sup>®</sup>  
we make it easy<sup>™</sup>

© 2009-2012 Sakar International, Inc. All rights reserved.

Windows and the Windows logo are registered trademarks of Microsoft Corporation.

All other trademarks are the property of their respective companies.

## **Contents**

Introduction .....	2
What's Included .....	2
Parts of the Camcorder .....	3
Initial Camcorder Setup .....	4
Main Camcorder Modes .....	7
Camcorder Technical Specifications .....	8
Computer System Requirements – Windows .....	9
Computer System Requirements – Macintosh .....	9
Powering ON/OFF Your Digital Video Recorder .....	10
Changing Camcorder Mode .....	11
Navigating the Menus .....	12
Video Capture Mode .....	13
Video Playback Mode .....	17
Photo Capture Mode .....	21
Photo Playback Mode .....	25
Installing the Software .....	29
Connecting the Camcorder to the Computer .....	30
Getting Photos and Videos from your Camcorder to Your Computer .....	31
Get started! .....	32
Transferring Images from my Camcorder to my Computer Manually .....	33
Camcorder Maintenance .....	34
Sakar Warranty Card .....	35
Technical Support .....	36
Troubleshooting .....	36

## Introduction

Thank you for purchasing this digital video recorder. Everything you need to take quality digital photos and videos is included with your digital video recorder.

Vivitar makes capturing those special moments as easy as possible.

**Note:** Your camcorder needs an SD Memory card (up to 16GB) for normal use.

SD Memory cards are not included and need to be purchased separately.

Please read this manual carefully first in order to get the most out of your digital video recorder.

## What's Included

1. Digital Video Recorder  
(with Built-in USB Connector,  
not shown)
2. AV Cable
3. Vivitar Experience Image Manager  
software Installation CD
4. Wrist Strap

①



②



③



④



**Note:** SD memory card and batteries not included.


## Parts of the Camcorder



- |                          |                              |
|--------------------------|------------------------------|
| 1. AV Out Port           | 12. Left / Resolution Button |
| 2. Wrist Strap Connector | 13. Shutter / OK Button      |
| 3. Tripod Mount          | 14. LCD Screen               |
| 4. USB Connector         | 15. Up / Zoom In Button      |
| 5. USB Lever             | 16. SD Memory Card Slot      |
| 6. LED Indicator Light   | 17. Power Button             |
| 7. Microphone            | 18. Delete Button            |
| 8. Lends                 | 19. Right/ViviLink Button    |
| 9. Speaker               | 20. Down / Zoom Out Button   |
| 10. MODE Button          | 21. Battery Compartment      |
| 11. MENU Button          |                              |

# Initial Camcorder Setup

## Installing the Batteries

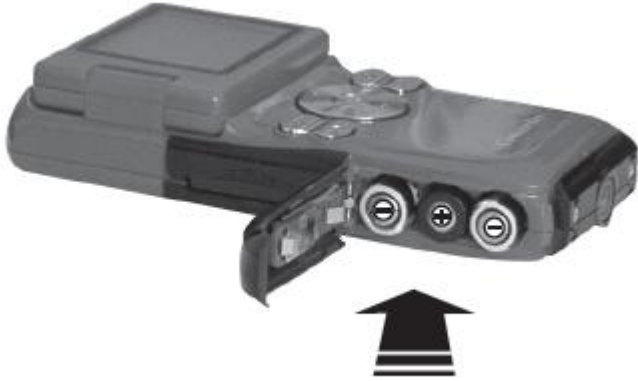

- Insert 3 X AAA (1.5V) batteries.
- Alkaline batteries recommended (not included).

## Installing the Memory Card




- Make sure the camcorder is powered OFF.
- Insert SD Memory card (up to 16GB) before use.

## Turning On the Camcorder



## Using the Camcorder

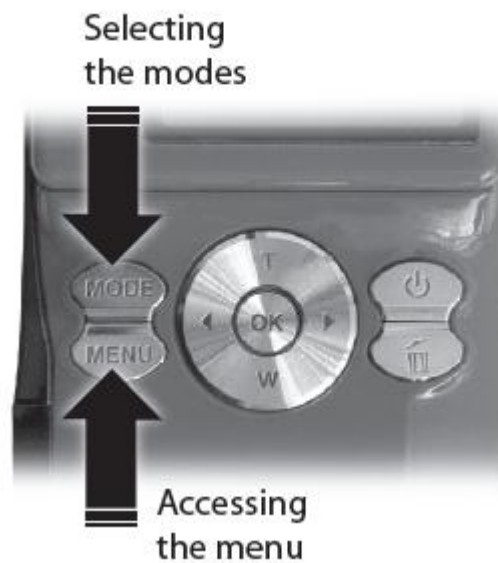

When powering the camcorder ON **for the first time** the camcorder will take you through the initial setup.

## **Powering the Digital Video Recorder ON**

### 1) Batteries




Make sure the batteries have been inserted properly into your digital video recorder.

Slide the battery cover on the back of the camera in a downward direction to open the cover.

Insert 3 x AAA (1.5V) batteries (not included) with the correct polarity, according to the polarity illustrated inside the battery compartment.

#### **Note:**

- Alkaline batteries are recommended.
- Remove the batteries from the camera when not in use for an extended period.
- Do not mix alkaline and non-alkaline batteries.
- Some camera features (such as Flash in some models) will not work if the battery power level is low.
- When the battery power is low the battery icon turns red and the camcorder will automatically turn off a few seconds later.
- The energy status of the power is displayed on LCD as shown below:

 *Full battery power*       *Medium battery power*       *Low battery power*

### 2) SD Memory Card

Make sure the camcorder is powered OFF before inserting your SD/MMC/SDHC Memory Card.

Make sure an SD card (up to 16GB) has been inserted into your digital video recorder. (SD Memory card not included.)

To properly insert the SD Card:


Push the SD card into the slot in the direction shown on the camcorder (see SD icon by the SD card slot). Push the SD card until you hear a slight clicking sound. This indicates the SD card has been inserted correctly.

#### **Note:**

- After the camcorder is powered on, an SD icon will appear on the LCD display. If you do not see the SD icon on the display, please check if the card was inserted properly.

- Make sure the SD card is not locked (check the lock switch on the side of the SD card). If the SD card is locked this will prevent the camcorder from saving captured photos to the SD card.

### 3) Power On

Press and hold the **POWER**  button to turn on the camcorder.

### **Setting the Camcorder Language**

You will first be prompted to select a language for the camcorder. The Language selection menu will appear. Select the language of your choice and press the **Shutter/OK** button to confirm the selection.

Your digital video recorder is now ready to begin capturing videos and photos.

## Main Camcorder Modes

Your digital video recorder has different modes for the various camcorder functions.

You can switch modes by pressing the **MODE** button on your digital video recorder after the camcorder has been powered ON.



### Video Capture Mode

---

Use this mode to capture videos with your digital video recorder.

This is the default mode when the camcorder is powered ON.

To take a video, aim your camcorder as desired and press the **Shutter** button to start the record. A red record indicator will appear on the LCD screen while record is in progress. To stop the record, press the **Shutter** button again. The video will be automatically saved to your camcorder's memory card.

To access the various menus for the Video Capture mode, press the **MENU** button while in the Video Capture mode.



### Photo Capture Mode

---

Use this mode to capture pictures with your camcorder.

After turning on your camcorder, press the **MODE** button once to open the Photo Capture mode.

To take a picture, aim your camcorder as desired and press the **Shutter** button.

The picture will be automatically saved to your camcorder's memory card.

To access the various menus for the Photo Capture mode, press the **MENU** button while in the Photo Capture mode.



### Playback Mode (Photos & Videos)

---

Use this mode to view and manage the photos and videos on your camcorder.

After turning on your camcorder, press the **MODE** button twice to open the Playback mode for photos and videos. You can scroll through the photos and videos that you've previously taken to view and delete them as desired.

To access the various menus for the Playback mode for photos and videos, press the **MENU** button while in the Playback mode.



## Camcorder Technical Specifications

Image Sensor	CMOS Sensor
Image Resolution	2048x1536 (3M), 1280x1024 pixels (1.3 MP)
Video Resolution	1280 x 720 (HD), 640X480pixels (VGA 30fps)
File Format	JPEG/AVI
External Memory	SD/MMC/SDHC (up to 16GB) – SD Card Memory Card not included
LCD Display	1.77 Inch TFT
Lens	f=3.0mm F2.8
Zoom	4X Digital Zoom
Image Quality	Normal
White Balance	Auto
Color Effect	Standard
Light Exposure	Auto
ISO	Auto
Frequency	60 Hz
Auto Power Off	3 minutes
Metering	Center
Language	English, French
Microphone	Yes
Speaker	Yes
Interface	USB 2.0 (HS)
System Requirements	Window XP SP3 / Vista SP1/ Windows 7 Mac OS X v10.5.x or higher
Battery	3 x AAA (1.5V) Alkaline batteries
Working Temperature	0~40 °C

## Computer System Requirements – Windows

To be able to download photos and videos to your PC, you will need the following minimum configuration:

- Microsoft® Windows XP with Service Pack 3, Windows Vista with Service Pack 1 or Windows 7
- Pentium® 4 processor (or above)
- 1 GB of RAM, with 250 MB of free hard disk space
- 16-bit Color monitor, 1024 X 768 recommended screen resolution
- CD-ROM Drive
- QuickTime® 6 or higher
- Microsoft® Internet Explorer 7 or higher
- Windows Media Player 10 or higher
- DirectX 9 or higher
- Internet connection required

## Computer System Requirements – Macintosh


To be able to download photos and videos to your Macintosh, you will need the following minimum configuration:

- Intel processor running Mac OS X v10.5.x or later
- 1 GB RAM, 250 MB free hard disk space
- Display: 1024 x 768 or higher-resolution monitor
- CD-ROM Drive
- QuickTime® 6 or higher
- Internet connection required

## Powering ON/OFF Your Digital Video Recorder


- Make sure the batteries have been inserted properly into your digital video recorder.
- If your camcorder comes with a rechargeable lithium battery, make sure it is fully charged before the first use.
- Make sure an SD card has been inserted into your camcorder.  
(SD card up to 16GB - SD Card not included)

### **Powering the camcorder ON**

Press the **Power**  button to turn your camcorder ON.

The camcorder will be in Video Capture mode to start.

### **Powering the camcorder OFF**

While the camcorder is on, you can press the **Power**  button again at any point to turn your camcorder OFF. You will see a “Goodbye” splash screen and then the camcorder will power off completely.

**Note:** When there is insufficient battery power, a “Low Battery” message will appear on the LCD screen. The digital video recorder will automatically power off a few moments later.

### **Auto Power Saving**

Your digital video recorder has an Auto Power Off feature that will automatically turn off the camcorder if it has not been in use after 3 minutes.

## Changing Camcorder Mode

Your digital video recorder has three main modes:

- 1) **Video Capture Mode** - Use this mode to capture videos with your camcorder.
- 2) **Photo Capture Mode** - Use this mode to capture photos with your camcorder.
- 3) **Playback Mode (for photos and videos)** - Use this mode to view the photos and videos you have already taken with your camcorder.

When the camcorder is first powered ON, the Video Capture Mode will be active. The icons that appear on the LCD screen are the best default settings so that you can begin to capture and enjoy clear quality videos and photos.

To change the active camcorder mode, make sure the camcorder is powered ON and press the **MODE** button.



When in Video Capture Mode, this icon will display on the top-left corner of the LCD display.




When in Photo Capture Mode, this icon will display on the top-left corner of the LCD display.



When in Playback Mode, this icon will display on the top-left corner of the LCD display

## Navigating the Menu

Each camcorder mode has a set of menus specific to that mode.

- 1) Press the **MENU** button to open the menus for the current mode.
- 1) Press the **LEFT** or **RIGHT** direction control button to scroll between the various menus for the current mode.
- 2) Press the **UP** or **DOWN** direction control button to highlight the desired menu selection.
- 3) Press the **Shutter/OK** button to confirm and select the highlighted menu option.
- 4) If the selection can be remembered by the camcorder, a  selection icon will appear to the right of the selected menu option. Changes made to these options will remain as is until you decide to change them again at a later time.
- 5) Some menu options are single-use functions that are not remembered by the camcorder and do not display this icon when selected.
- 6) At any time you can press the **MODE** button to exit the menus and return to the previous screen.

## Video Capture Mode

The Video Capture Mode allows you to capture videos with your digital video recorder. When the camcorder is first powered ON, the Video Capture Mode will display by default.

### Taking a Video

- 1) While in Video Capture Mode use the LCD display to direct the camcorder at the scene you would like to capture.
- 2) Press the **UP- T/Zoom In** and **Down – W/Zoom Out** buttons to better set the camcorder display if desired.
- 3) Press the **Shutter** button to start the video capture.
- 4) The elapsed time will begin to appear on the top right corner of the LCD screen and a red indicator will appear in place of the video icon on the LCD screen.
- 5) To stop the video record, press the **Shutter** button again.
- 6) The video will automatically be saved to the camcorder's SD card.
- 7) You can also capture your videos using the **iTwist Flip Screen**.

When you would like to quickly and easily include yourself in the video, simply flip the LCD display out and hold the camera facing towards you. Make sure you can see yourself within the scene on the LCD screen, look at the lens, then click the **Shutter** button to begin recording.



It's as easy as twist and shoot!

**Note:** The amount of recording time available for the resolution selected appears on the top center of LCD screen. The lower the resolution setting the more recording time is available. However, videos recorded at lower resolution are of less quality than videos recorded at the higher resolution.

Remember, the amount of time that you can capture videos also depends on the size of the SD memory card inserted as well as the video resolution selected.

## Video Capture Mode Quick Function Buttons

Your digital video recorder has a four-directional pad and additional buttons that functions as Quick Function buttons.


Button	Function
LEFT 	Video Resolution – Changes between HD, VGA, QVGA Video Resolution
UP (T)	Zooms in
RIGHT 	ViviLink for Videos – Opens the ViviLink Menu options for Videos (see below for details)
DOWN (W)	Zooms out

### Other

Shutter/OK	<ul style="list-style-type: none"><li>- Starts and stops your video capture</li><li>- Confirms menu selection</li></ul>
MENU	Opens the Video Menu options <b>Note:</b> To navigate through the Menus, use the <b>Left, Right, Up, and Down</b> directions control buttons.
MODE	Toggles between the Video Capture Mode, Photo Capture Mode, and Playback Mode  Exits the Video Menu options


## ViviLink for Videos Menu

ViviLink Quick Function Button (Right Button):

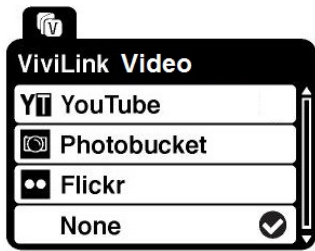

The ViviLink technology allows you to quickly and easily upload your camcorder's photos and videos to the social networks of your choice with the accompanying Vivitar Experience Image Manager application.

- 1) Press the **RIGHT** button while in Video Capture Mode.  
This is the Quick Function Button to access the ViviLink for Videos Menu.
- 2) The ViviLink for Videos Menu appears with the following options:  
YouTube, Photobucket, Flickr, None
- 3) Press the **UP** or **DOWN** direction control button to scroll through the menu options.
- 4) Press the **OK** button to select and confirm the desired option.

A  selected option icon will appear on the selected item.

**NOTE:** The selected ViviLink option remains the default option for all captured images. This can be changed at any time by choosing another option from the ViviLink menu.

- 5) Once you have selected a ViviLink, press the **MODE** button to return to the Video Capture Mode.
- 6) The icon of the selected ViviLink destination appears on the LCD screen.

**NOTE:** The icon of the selected ViviLink destination also appears in Video Playback mode on each captured image. If you have selected 'None' as your ViviLink, no icon appears.


Remember that the ViviLink feature is deactivated by default. A ViviLink destination will only be assigned to a photo or video if you manually set it from this menu or from the ViviLink menu in Capture mode (accessible with the ViviLink Quick-Function button in Capture mode).

Changing the ViviLink destination site will also make the selected site the new default ViviLink option. A new default can be selected at any time through this menu.




## Video Capture Mode Menus

The following are the menus that appear in your camcorder's Video Capture Mode:

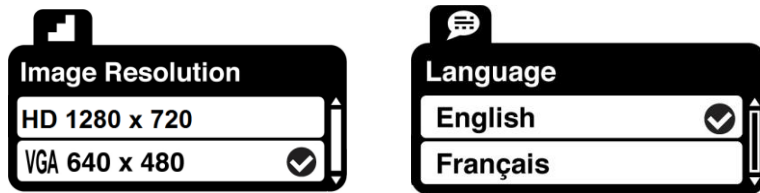

### **Image Resolution Menu**


The Image Resolution menu allows you to choose the desired size of the images taken by your camcorder. Keep in mind that images with a larger size will also take up more of your camcorder's memory.

- 1) Press the **MENU** button to open the menus for the current mode.
- 2) Press the **LEFT** or **RIGHT** direction control button to scroll and select the Image Resolution menu.
- 3) Press the **UP** or **DOWN** direction control button to scroll through the menu options.
- 4) Press the **Shutter/OK** button to select the desired option.
- 5) A  selected option icon will appear on the selected item.
- 6) Press the **LEFT** or **RIGHT** button to select the next menu item.
- 7) Press the **MODE** button to exit the menu and return to your previous mode.
- 8) An icon reflecting your selection will display on the LCD screen.
- 9) Remember that this setting will be saved by your camcorder until you manually change the setting.

### **Language Menu**


You can select your camcorder's language setting by selecting the desired language from the Language menu.

- 1) Press the **MENU** button to open the menus for the current mode.
- 2) Press the **LEFT** or **RIGHT** direction control button to scroll and select the Language menu.
- 3) Press the **UP** or **DOWN** direction control button to scroll through the menu options.
- 4) Press the **Shutter/OK** button to select the desired option.

- 5) A  selected option icon will appear on the selected item.
- 6) Press the **LEFT** or **RIGHT** button to select the next menu item.
- 7) Press the **MODE** button to exit the menu and return to your previous mode.
- 8) Remember that this setting will be saved by your camcorder until you manually change the setting.

## Video Playback Mode

The Playback mode allows you to review photos and videos that you've already taken with your digital video recorder.

- When you first turn on the camcorder, the camcorder will be in Video Capture mode by default.
- Press the **MODE** button twice to open the **Playback Mode**.
- The Playback screen appears with the Playback  icon appearing on the top left corner of the screen.



## Playing Videos on Your Digital Video Recorder

- 1) Select your Video:
  - Once in Playback mode, press the **LEFT** or **RIGHT** direction button to scroll through the images on your digital video recorder's memory card until you find the video you would like to view.
  - Each captured image (both videos and photos) is displayed on the LCD screen.
  - Videos appear with an '**AVI**' icon on the top left of the LCD screen.
- 2) Play your selected Video:
  - Press the **Shutter** button to **START** playing the video.
    - While the Video is playing all the icons on the top section of the LCD disappear.
    - The video playing time is shown on the bottom right.
  - Press the **Shutter** button again to **STOP** the video.


- Press the **UP** button to increase the volume during video playback.  
Press the **DOWN** button to decrease the volume during video playback.

### **Video Playback Mode Quick Function Buttons**

Your digital video recorder has a four-directional pad and additional buttons that functions as Quick Function buttons.

<b>Button</b>	<b>Function</b>
<b>LEFT</b> 	<ul style="list-style-type: none"> <li>- Displays the PREVIOUS image</li> <li>- Scrolls through your Thumbnail images</li> </ul>
<b>UP (T)</b>	<ul style="list-style-type: none"> <li>- Scrolls through your Thumbnail images</li> <li>- Increases the volume during video playback</li> </ul>
<b>RIGHT</b> 	<ul style="list-style-type: none"> <li>- Displays the NEXT image</li> <li>- Scrolls through your Thumbnail images</li> </ul>
<b>DOWN (W)</b>	<ul style="list-style-type: none"> <li>- Opens the Thumbnail display</li> <li>- Scrolls through your Thumbnail images</li> <li>- Decreases the volume during video playback</li> </ul>

#### **Other**

<b>Shutter/OK</b>	<ul style="list-style-type: none"> <li>- Plays the selected video file</li> <li>- Stops the selected playing video</li> <li>- Confirms menu selection</li> <li>- Opens selected image from the Thumbnail display</li> </ul>
<b>DELETE</b> 	<p>Opens the Delete menu options</p> <p><b>Note:</b> To navigate through the Menus, use the <b>Left, Right, Up, Right,</b> and <b>Down</b> directions control buttons.</p>
<b>MODE</b>	<p>Toggles between the Video Capture Mode, Photo Capture Mode, and Playback Mode</p> <p>Exits the Video Playback menu</p>

## Thumbnail View

Easily navigate and select the image you wish to view by using the Thumbnail View.

The images on your camcorder will be displayed in a 3 X 3 matrix where you can use the direction buttons to scroll and select images from the thumbnails.

- 1) Press the **DOWN (W)** button for the images to appear in Thumbnail View.
- 2) Use the **UP/DOWN/LEFT/RIGHT** direction control buttons to navigate the thumbnails and select the image you wish to view.

Videos appear with a 'V' icon.


- 3) Press the **Shutter/OK** button for the selected image to appear in full screen.

**Note:** You can identify from the thumbnail the image type:

- AVI files have a **V** appear on the thumbnail image
- JPEG files do not have any icons on the thumbnail image

## Video Playback Mode Menu

The following is the menu that appears in your digital video recorder's Video Playback Mode:

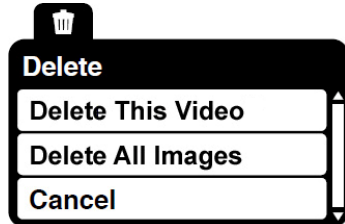

### **Delete Menu**

While in the Playback mode, you can delete videos from your camcorder through the Delete menu or by pressing the **DELETE** button.

#### *Delete This Video:*

- 1) Select the image you wish to delete.
- 1) Press the **MENU** or **DELETE** button to open the 'Delete' menu.
- 2) Press the **UP** or **DOWN** direction control button to highlight the 'Delete this Video' option, and then press the **Shutter/OK** button confirm and continue.
- 3) A 'Delete This Video' confirmation menu appears.
  - Select 'No' then press the **Shutter/OK** button to exit without deleting the selected video.

- Select 'Yes' then press the **Shutter/OK** button to delete the selected video.

*Delete All Images (all videos and photos):*

- 1) Press the **MENU** or **DELETE** button to open the 'Delete' menu.
- 2) Press the **UP** or **DOWN** direction control button to highlight the 'Delete All Images' option, and then press the **Shutter/OK** button confirm and continue.
- 3) A 'Delete All Files?' confirmation menu appears.
  - Select 'No' then press the **Shutter/OK** button to exit without deleting all of your images.
  - Select 'Yes' then press the **Shutter/OK** button to delete all of your captured images.


**Caution:** Please use this Delete feature with care. Once all the images are deleted they are permanently removed from your SD memory card. Please make sure that you only use this feature once you have downloaded and saved all the images you wish to your computer.

## Photo Capture Mode

The Photo Capture mode allows you to capture pictures with your digital video recorder.

- When the camcorder is first powered ON, the camcorder will be in Video Capture Mode by default.
- Press the **MODE** button once to enter the Photo Capture mode.

### Taking a Picture

- 1) Turn on your digital video recorder.
- 2) Press the **MODE** button once to open the Photo Capture Mode.
- 3) The  camera icon will appear on the top left corner of the LCD.
- 4) While in Photo Capture mode, use the LCD display to direct the camcorder at the scene you would like to capture.
- 5) Press the **UP- T/Zoom In** and **Down – W/Zoom Out** buttons to better set the camcorder display if desired.
- 6) Press the **Shutter** button to capture and save your photo to the memory card.
- 7) You can also capture Self-Portrait photos using the **iTwist Flip Screen**.



When you would like to quickly and easily include yourself in the photo, simply flip the LCD display out and hold out the camera facing towards you. Make sure you can see yourself within the scene on the LCD screen and click the **Shutter** button to take the picture.

It's as easy as twist and shoot!

**Note:** The lower the resolution setting the more photos can be taken. However lower resolution photos are of less quality than photos taken at higher resolution.

## Photo Capture Mode Quick Function Buttons

Your digital video recorder has a four-directional pad and additional buttons that functions as Quick Function buttons.

Button	Function
LEFT 	Photo Resolution – Changes between 3M and 1M and Photo Resolution
UP (T)	Zooms in
RIGHT 	N/A
DOWN (W)	Zooms out

### Other

Shutter/OK	<ul style="list-style-type: none"> <li>- Captures your Photo</li> <li>- Confirms menu selection</li> </ul>
MENU	Opens the Photo Menu options <b>Note:</b> To navigate through the Menus, use the <b>Left, Right, Up, and Down</b> directions control buttons.
MODE	Toggles between the Video Capture Mode, Photo Capture Mode, and Playback Mode  Exits the Photo Menu options


### *ViviLink for Photos Menu*

ViviLink Quick Function Button (Right Button):



The ViviLink technology allows you to quickly and easily upload your camcorder's photos and videos to the social networks of your choice with the accompanying Vivitar Experience Image Manager application.

- 1) Press the **RIGHT** button while in Photo Capture Mode.  
This is the Quick Function Button to access the ViviLink for Photos Menu.
- 2) The ViviLink for Photos Menu appears with the following options:  
Facebook, Twitgoo, Twitpic, Photobucket, Flickr, MySpace, Picasa Albums, None
- 3) Press the **UP** or **DOWN** direction control button to scroll through the menu options.
- 4) Press the **OK** button to select and confirm the desired option.

A  selected option icon will appear on the selected item.

**NOTE:** The selected ViviLink option remains the default option for all captured images. This can be changed at any time by choosing another option from the ViviLink menu.

- 5) Once you have selected a ViviLink, press the **MODE** button to return to the Photo Capture Mode.
- 6) The icon of the selected ViviLink destination appears on the LCD screen.

**NOTE:** The icon of the selected ViviLink destination also appears in Photo Playback mode on each captured image. If you have selected 'None' as your ViviLink, no icon appears.


Remember that the ViviLink feature is deactivated by default. A ViviLink destination will only be assigned to a photo or video if you manually set it from this menu or from the ViviLink menu in Capture mode (accessible with the ViviLink Quick-Function button in Capture mode).

Changing the ViviLink destination site will also make the selected site the new default ViviLink option. A new default can be selected at any time through this menu.




## Photo Capture Mode Menus

The following are the menus that appear in your digital video recorder's Photo Capture Mode:

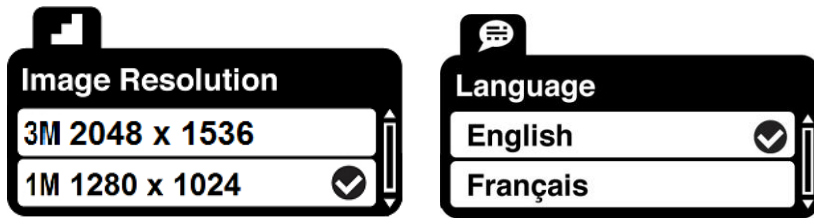

### **Image Resolution Menu**


The Image Resolution menu allows you to choose the desired size of the images taken by your camcorder. Keep in mind that images with a higher resolution will also take up more of your camcorder's memory.

- 1) Press the **MENU** button to open the menus for the current mode.
- 2) Press the **LEFT** or **RIGHT** control button to scroll and select the Image Resolution menu.
- 3) Press the **UP** or **DOWN** direction control button to scroll through the menu options.
- 4) Press the **Shutter/OK** button to select the desired option.
- 5) A  selected option icon will appear on the selected item.
- 6) Press the **LEFT** or **RIGHT** button to select the next menu item.
- 7) Press the **MODE** button to exit the menu and return to your previous mode.
- 8) An icon reflecting your selection will display on the LCD screen.
- 9) Remember that this setting will be saved by your digital video recorder until you manually change the setting or restore the camcorder's default factory settings.

### **Language Menu**


You can select your camcorder's language setting by selecting the desired language from the Language menu.

- 1) Press the **MENU** button to open the menus for the current mode.
- 2) Press the **LEFT** or **RIGHT** direction control button to scroll and select the Language menu.
- 3) Press the **UP** or **DOWN** direction control button to scroll through the menu options.
- 4) Press the **Shutter/OK** button to select the desired option.

- 5) A  selected option icon will appear on the selected item.
- 6) Press the **LEFT** or **RIGHT** button to select the next menu item.
- 7) Press the **MODE** button to exit the menu and return to your previous mode.

## Photo Playback Mode

The Playback mode allows you to review photos and videos that you've already taken with your digital video recorder.



- When you first turn on the camcorder, the camcorder will be in Video Capture mode by default.
- Press the **MODE** button twice to open the **Playback Mode**.
- The Playback screen appears with the Playback  icon appearing on the top left corner of the screen.

### Viewing Captured Photos on Your Camcorder


- 1) Select your Photo:
  - Once in Playback mode, press the **LEFT** or **RIGHT** direction control button to scroll through the images on your digital video recorder's memory card until you find the image you would like to view.
  - Each captured image (both videos and photos) is displayed on the LCD screen.
  - Photos appear with a '**JPG**' icon on the top left of the LCD screen.
- 2) **Zooming In/Out** of your selected Photo:
  - Press the **UP / Zoom In** button to Zoom In and magnify the selected photo.
  - Press the **Shutter/OK** button then press the **LEFT/RIGHT/UP/DOWN** buttons to navigate around the zoomed photos.
  - Press the **DOWN/Zoom Out** button to Zoom Out of the selected photo or press the **Shutter/OK** button to return back to the photo in full screen.

## Photo Playback Mode Quick Function Buttons

Your digital video recorder has a four-directional pad and additional buttons that functions as Quick Function buttons.

Button	Function
<b>LEFT</b> 	- Displays the PREVIOUS image - Scrolls through your Thumbnail images
<b>UP (T)</b>	- Scrolls through your Thumbnail images - Zooms in to a photo
<b>RIGHT</b> 	- Displays the NEXT image - Scrolls through your Thumbnail images
<b>DOWN (W)</b>	- Opens the Thumbnail display - Scrolls through your Thumbnail images - Zooms out of a photo

### Other

<b>Shutter/OK</b>	- Opens selected image from the Thumbnail display - Confirms menu selection
<b>DELETE</b> 	Opens the Delete menu options <b>Note:</b> To navigate through the Menus, use the <b>Left, Up, Right, and Down</b> directions control buttons.
<b>MODE</b>	Toggles between the Video Capture Mode, Photo Capture Mode, and Playback Mode Exits the Photo Playback menu

## Thumbnail View

Easily navigate and select the image you wish to view by using the Thumbnail View.

The images on your camcorder will be displayed in a 3 X 3 matrix where you can use the direction buttons to scroll and select images from the thumbnails.

- 1) Press the **DOWN (W)** button for the images to appear in Thumbnail View.
- 2) Use the **UP/DOWN/LEFT/RIGHT** direction control buttons to navigate the thumbnails and select the image you wish to view.


**Note:** You can identify from the thumbnail the image type:

- AVI files have a **V** appear on the thumbnail image

- JPEG files do not have any icons on the thumbnail image
- 3) Press the **Shutter/OK** button for the selected image to appear in full screen.
  - 4) **Zooming Into the Image:**
    - Once in full screen display mode, you can press the **UP** or **DOWN** button to Zoom In and Zoom Out of the photo.
    - Once Zoomed In, press the **Shutter/OK** button to allow navigation of the zoomed in photo.
    - Press the **Shutter** button to return to the full size image.

### Photo Playback Mode Menu

The following is the menu that appears in your digital video recorder's Photo Playback Mode:

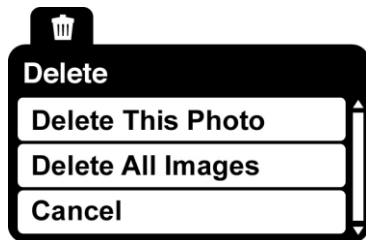

### **Delete Menu** 🗑️

While in the Playback mode, you can delete photos from your camcorder through the Delete menu.

Remember, you can also quickly access the Delete menu by pressing the **Delete** button.

#### *Delete This Photo:*

- 1) Select the image you wish to delete.
- 2) Press the **MENU** button to open the 'Delete' menu.
- 3) Press the **UP** or **DOWN** direction control button to highlight the 'Delete this Photo' option, and then press the **Shutter/OK** button confirm and continue.
- 4) A 'Delete This Photo' confirmation menu appears.
  - Select 'No' then press the **Shutter/OK** button to exit without deleting the selected photo.
  - Select 'Yes' then press the **Shutter/OK** button to delete the selected photo.

*Delete All Images (all videos and photos):*

- 1) Press the **SET** button to open the 'Delete' menu.
- 2) Press the **UP** or **DOWN** direction control button to highlight the 'Delete All Images' option and then press the **Shutter/OK** button confirm and continue.
- 3) A 'Delete All Files?' confirmation menu appears.
  - Select 'No' then press the **Shutter/OK** button to exit without deleting all of your images.
  - Select 'Yes' then press the **Shutter/OK** button to delete all of your captured images.

**Caution:** Please use this Delete feature with care. Once all the images are deleted they are permanently removed from your SD memory card. Please make sure that you only use this feature once you have downloaded and saved all the images you wish to your computer.

## Installing the Software

You must be connected to the internet to install and run the Vivitar Experience Image Manager software.

- 4) Insert the installation CD into your CD-ROM drive. The installation screen should automatically open.



- 5) On PC: The Vivitar Experience Image Manager Installer window appears. If the window does not appear, open the application's CD/DVD drive and click on "Setup.exe" to launch the installer.
- 6) On Macintosh: Click the icon that appears on the desktop to install the Vivitar Experience Image Manager.
- 7) If you do not have internet access at the time of inserting the CD-ROM, connect to the internet and then click the "Install Vivitar Experience Image Manager" button to begin the installation.



**Note:** If you do not have internet access, you can still download media from the camcorder. Click the "How to transfer photos and videos from my camcorder to my computer" button for instructions.

- 8) If you have internet access, the “Choose your language” window opens, choose your language and click “Next” to open the next window.
- 9) Select your camera model from the list and click “Next” to open the next window.
- 10) Click “Next” to confirm your camera model selection and to install the application.
- 11) Please wait while the application is being installed on your computer.
- 12) Please review the license terms.

On PC and Macintosh: Click the “I accept the terms of this license agreement” and then click “Next” to continue.

- 13) On PC only: Let the “Vivitar Experience Image Manager” installer create the folder to where the program will be installed, and then click “Install”.
- 14) Please wait while the application continues the installation process on your computer.
- 15) On PC: Click the “Close” button when the installation is complete.  
Click the “Launch Vivitar Experience Image Manager” to open the application.
- 16) On Macintosh: Click the “Quit” button when the installation is complete.  
Click the “Launch Vivitar Experience Image Manager” to open the application.
- 17) If you close the application you can run the Vivitar Experience Image Manager from the Programs (PC) or Applications (Mac) menu on your computer.



## Connecting the Camcorder to the Computer

- 1) Slide down the USB lever on the side of the digital video recorder to reveal the retractable built-in USB connector.
- 2) Insert the USB connector into an available USB port on your computer.
- 3) Power the camcorder ON.
- 4) The first time you connect the device to the computer you will have to wait a few seconds until the computer recognizes the device.
- 5) As your camcorder is a mass storage device “MSDC” will appear on the LCD, indicating that your camcorder is in Mass Storage Mode.

## Getting Photos and Videos from your Camcorder to Your Computer

**NOTE:** An SD card needs to be inserted. Do not disconnect the USB connector during transfer. Doing so will cancel the transfer of any files on their way to your computer.

- 1) Select the “Get Images” button from the Main menu.



- 2) The “Get media from device” window opens.
- 3) You can select to download photos, videos or both.
- 4) Select your camera (removable disk) from the device window. If your camera is the only USB device connected then it will be selected automatically.
- 5) Select a location on the computer where to place the new photo and video files.
- 6) Add the new photo and video files to albums if desired.
- 7) Select to remove the media files from the selected device (removable disk) after the import.
- 8) Click the “Get Media” button to transfer the photos and videos from your camera to your computer.



- 9) A media download progress bar appears on the bottom left showing the number of media files downloading to your computer. A message appears when the download is complete.
- 10) The photo and video files that you selected are now downloaded to your computer to the selected folder and albums ready for your use.

## **Get started!**

Using the Vivitar Experience Image Manager, you can:

- Upload and manage photos and videos to and from the most popular photo sharing and social networking sites - Facebook, Flickr, Picasa, MySpace, Photobucket, Twitpic, Twitgoo and YouTube
- Seamlessly transfer photos and videos from one social network to another
- Organize your images by creating offline and online albums
- Edit images using automatic and manual tools
- Use automatic “Geotagging” with built in Google Maps

**For more details on how to use the Vivitar Experience Image Manager open the “Help Guide” from the Help Menu or click the “Take a Tour” button on the application’s Home screen.**

## Transferring Images from my Camcorder to my Computer Manually

### **WINDOWS**

- 1) Slide down the lever on the side of the camcorder to reveal the built-in USB connector.  
Use the USB built-in connector on your camcorder to connect your camcorder to the USB port on your computer.
- 2) “MSDC” appears on the LCD – indicating that your camcorder is in Mass Storage Mode.
- 3) A window appears with a list of options, select “Open folder to view files” and click OK.
- 4) Open the DCIM folder and the folder inside to view the media files.
- 5) Select the media and copy the files from this folder into your computer. Optionally, select the files and choose Copy from the Edit menu. Then select a folder and choose Paste from the Edit menu.
- 6) We recommend that you copy the images into the Pictures/My Pictures folder and the videos into the Videos/My Videos folder.
- 7) Do not disconnect the camcorder from the computer during transfer. Doing so will cancel the transfer of any files on their way to your computer.

### **MACINTOSH**

- 1) Slide down the lever on the side of the camcorder to reveal the built-in USB connector.  
Use the USB built-in connector on your camcorder to connect your camcorder to the USB port on your computer.
- 2) “MSDC” appears on the LCD – indicating that your camcorder is in Mass Storage Mode.
- 3) The camcorder’s device icon appears on the desktop.
- 4) Click on the device icon and open the DCIM folder and the folder inside to view the media files.
- 5) Select the files and drag them into your computer. Optionally, select the files and choose Copy from the Finder’s Edit menu. Then select a folder and choose Paste from the Edit menu.
- 6) We recommend that you copy the images into the Pictures folder and the videos into the Movies folder.
- 7) Do not disconnect the camcorder from the computer during transfer. Doing so will cancel the transfer of any files on their way to your computer.

## **Apple iPad**

**NOTE:** Please check your device packaging for compatibility with the iPad.

### ***Apple iPad Camera Connection:***

For models that are compatible with the iPad, photos and videos can be imported from your digital camera to your iPad by following either one of the options below:

1) Connecting your digital camera to your iPad using an iPad Camera Connector:

Plug the Camera Connector into the dock connector port on your iPad, then attach your digital camera using the built-in USB connector to the Camera Connector.

**NOTE:** iPad Camera Connector not included. This may be purchased separately.

2) Using an iPad SD Card Reader:

Connect the SD Card Reader to your iPad, then insert your digital camera's SD card into the slot to import photos and videos directly from your camera's SD card.

**NOTE:** iPad SD Card Reader not included. This may be purchased separately.

**NOTE:** After you make the connection, your iPad automatically opens the Photos application, which lets you choose which photos and videos to import, then organizes them into albums.

## **Camcorder Maintenance**

The digital video recorder is a delicate device.

Always wear the wrist strap to prevent the device from falling.

Please handle your camcorder with care to avoid damaging it.

Do not expose your digital video recorder to heat sources.

Do not use your digital video recorder in wet or moist conditions.

To clean the lens, first blow away the dust on the surface of the lens, then use a proper cloth or tissue for optical devices to clean the lens. If necessary, use lens cleanser.

Never use organic cleanser to clean the digital video camera.

Never touch the lens with your fingers.

When left idle for an extended period of time, store the digital video recorder without the batteries, in a dry and dark place.

## Sakar Warranty Card

This warranty covers for the original consumer purchaser only and is not transferable. Products that fail to function properly **UNDER NORMAL USAGE**, due to defects in material or workmanship will be repaired at no charge for parts or labor for a period of one year from the time of purchase.

### What Is Not Covered By Warranty:

Damages or malfunctions not resulting from defects in material or workmanship and damages or malfunctions from other than normal use, including but limited to, repair by unauthorized parties, tampering, modification or accident.

### What To Do When Service Is Required:

When returning your defective product (postage pre-paid) for service, your package should include:

- 1) Copy of **original** bill of sale.
- 2) A detailed written description of the problem.
- 3) Your return address and telephone number (Daytime).

### MAIL TO ADDRESS BELOW:

<u>Sakar US</u> Sakar International Attention: Service Department 195 Carter Drive Edison, NJ 08817	<u>Sakar UK/Europe</u> Attention: Service Department 2D, Siskin Parkway East 4020 Middlemarch Business Park Coventry, CV3 4PE	<u>Sakar Australia</u> Return faulty camera to the Refund Counter at the store where purchased
--	---	---

## Technical Support

For technical support issues please visit our website at **www.vivitar.com**. You can find manuals, software and FAQ's at the website. Can't find what you are looking for? E-mail us at **support@vivitar.com** and one of our technical support team members will answer your questions. For phone support in the US please call 1-800-592-9541, in the UK call 0800 917 4831, in Australia call 1800-006-614. If you would like to call from anywhere else, please visit **www.vivitar.com** for your local toll free number.

## Troubleshooting

**Q: I have taken photos and selected the "Get Images" button. I get a message that the images were successfully transferred but the photos do not appear on my computer.**

**What do I do?**

Ensure that you have in fact taken photos. Press the Shutter button to take some sample photos and then try downloading them again.

With test photos, if the camera powers off before you upload them to the computer the photos are not stored in the camera's memory. These photos should be uploaded quickly before the camera powers off. If the photos are saved to the SD memory card then all the photos should appear.

**Q: How do I make sure I don't lose important pictures?**

This camera requires an SD card for normal use. If the camera powers off nothing will happen to the images stored on the SD memory card. We recommend always downloading your photos to your computer as soon as possible to prevent unintentional data loss.

**Q: I deleted images using the Vivitar Experience Image Manager. The images were also deleted from my computer. How do I recover images that I accidentally deleted?**

All images deleted using the Vivitar Experience Image Manager are sent to your computer's Recycle or Trash Bin and can be retrieved from there.

DVR426HDv2040312\_TA