


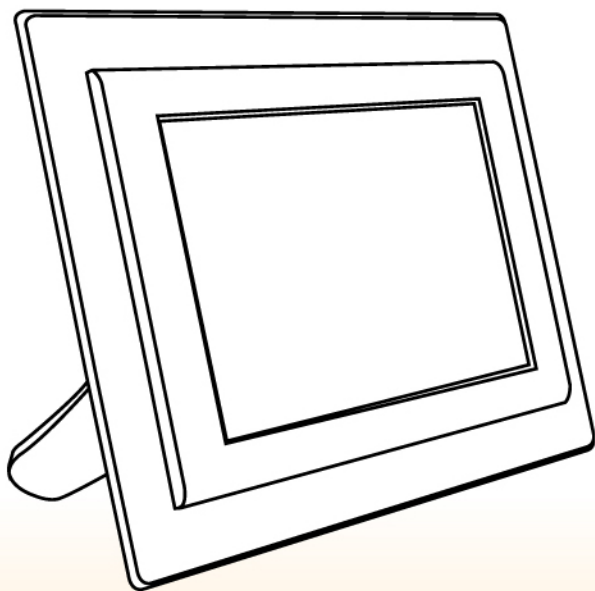

HiTi K65 Digital Photo Frame



Quick Start Guide

English

繁體中文

简体中文

Every Photo Has a Story



Contents

English

P 01 ~ P 06

繁體中文


P 07 ~ P 12

简体中文

P 13 ~ P 18




I. Quick Start

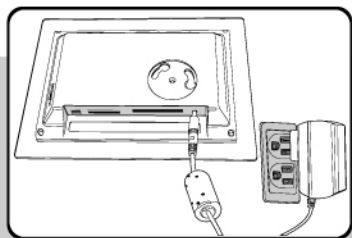

1. Connecting the power cord.


Connect the supplied power cord from K65 to the wall plug and the power LED will turn blue.

Note: K65 has a built-in rechargeable (1500mA polymer) lithium ion battery. It can last around 1 hour of photo viewing after fully charged. K65 will be >90% charged in 2 hours when the power is OFF or 5 hours when it's ON.

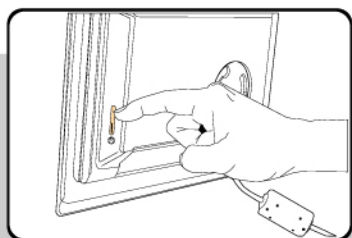


2. Turning on photo frame

- (1) Press the power key and hold it for around 2~3 seconds until the screen is turned on.
- (2) The slideshow of the default pictures stored in the internal memory will start automatically.

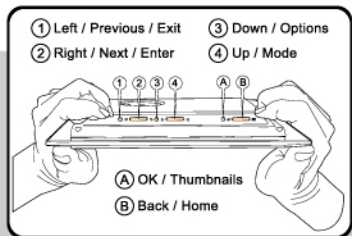


3. The User Interface of K65

- (1) Viewing the K65 from the top of the housing, there are six control keys as shown.
- (2) Each of these six keys represents multiple functions. A menu-bar will be shown on the screen to indicate the different functions of these keys in different modes.

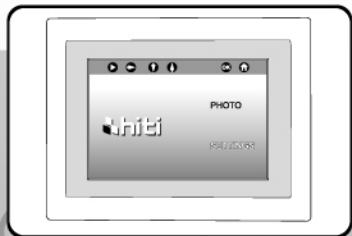

4. The Main Page


- (1) Press "Home" to access the main page.
- (2) Press Key③(down) or Key④(up) to select "Photo" to setup the photo showing options.
- Or
- (3) Press Key③(down) or Key④(up) to select "Setting" to setup the generic settings of the photo frame.

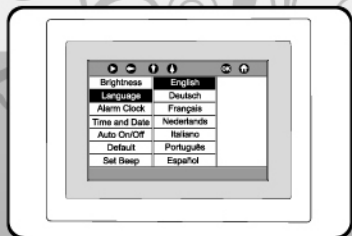


5. Language Selection

- (1) Select "Setting" from the main page
- (2) Press Key③(down) to select "Language".
- (3) Press Key(A)(OK) to enter language list and select one language.
- (4) Press Key(A)(OK) to confirm selection.


6. Time and Date Setting.

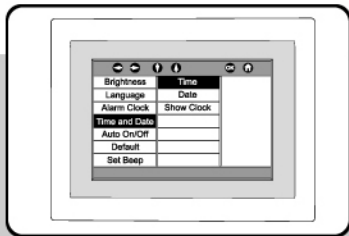

- (1) Select "Setting" from the main page
- (2) Press Key③(down) to select "Time and Date".

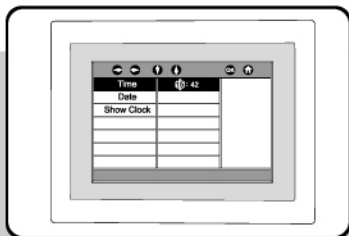


- (3) Select "Time" and Press KeyⒶ(OK) to set time
- (4) Select "Time". Press Key③(down) or Key④(up) to adjust time and press KeyⒶ(OK) to validate
- (5) Follow equivalent steps to set the date.

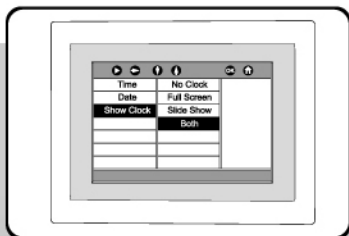

7. Clock Setting

- (1) Select "Show Clock" and Press KeyⒶ(OK) to setup the clock.
- (2) Press Key③(down) or Key④(up) to choose your clock setting and press KeyⒶ(OK) to validate.
- (3) "Full screen clock" and "slideshow clock" on the screen are as shown below.


Note: Please refer to the information on the page 3 to access full screen clock viewing.

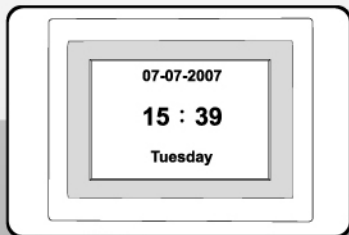

Full screen clock




Slideshow clock

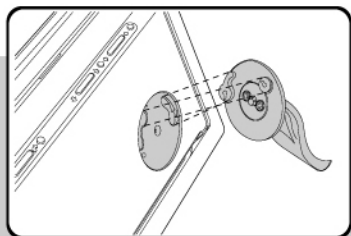

8. Detachable Stand Installation



- (1) Align the hinge on the stand to the sockets on the back of the housing as shown

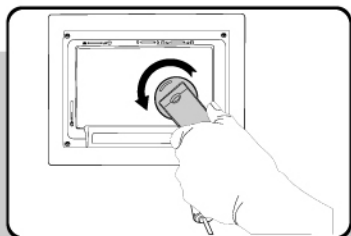

- (2) Insert the stand into the socket and turn counterclockwise with the click.

II. Slideshow


1. In The Slideshow Mode

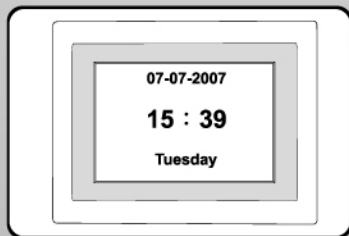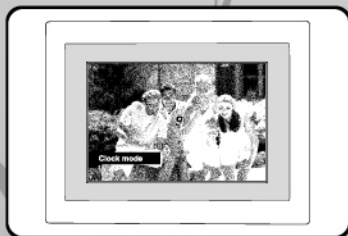

- (1) Press Key① to start slideshow function from the main page.
- (2) You may switch to "browse mode" or full screen "clock mode" by pressing Key④.




(2) You may press Key ③ to pop-up the menu bar.

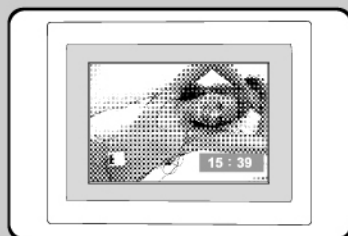


(3) You may press Key ①(left) to return to the previous picture or press Key ②(right) to advance to the next picture.

2. Slideshow Setting

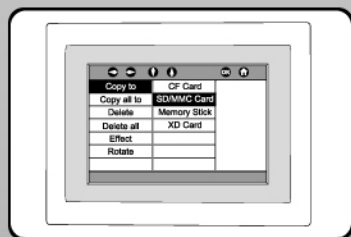


- (1) Select "Photo" from the main page.
 - (2) Select the "Album" from internal memory or memory cards and press Key (A)(OK) to read the pictures.
- Or
- (3) Press Key ③(down) or Key ④(up) to setup "Slideshow Sequence", "Transition Effect", "Frequency" or "Background Color".

III. Thumbnails Show

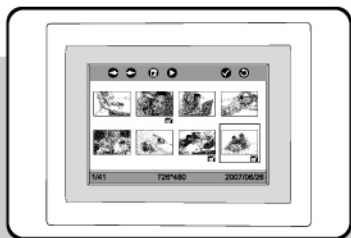


- (1) Press Key **A** (Thumbnails) from slideshow mode or browse mode.
- (2) Press Key **A** (OK) to enter thumbnails mode to view pictures.
- (3) Move the focus and press Key **A** to select multiple pictures

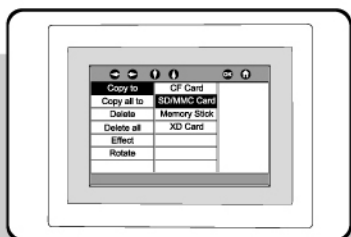


- (4). Press Key **3** or Key **4** to "copy", "delete", "effect" or "rotate" the selected picture(s).

IV. Memory Card & Internal Memory

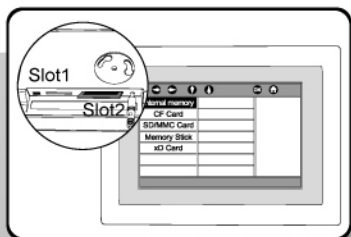


Slot1 (support SD/MMC/XD/MS cards) and Slot2 (support CF card) locate on the bottom of the housing. Once a memory card is inserted properly, the respective memory card selection will be activated on the menu screen

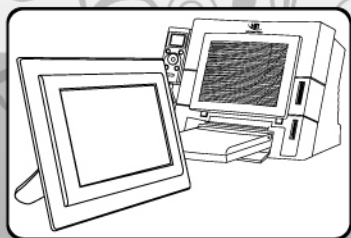


You may also link the K65 as a card reader to your PC or HiTi photo printer by using the supplied USB cord. There will be 3 discs (for SD/MMC/XD/MS slot, CF slot and the internal memory) shown on your PC or on the control of HiTi photo printer.

V. Package Contents

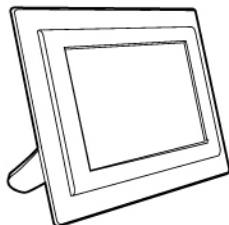


HiTi K65 Digital Photo Frame

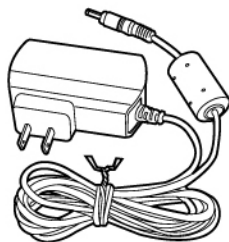

Power adaptor



Quick start guide

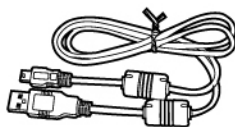

USB cable
(male USB type A plug)



Detachable stand

VI. FAQ

Q. How can I print the picture I like in K65 directly ?

A. You may use HiTi 641PS, HiTi S400 series or HiTi BS-400 series printer with features Link-Print™ function. Link the K65 and the printer by the supplied USB cord. Control the printing steps from the display of the printer.


Q. Is the K65 LCD screen touch-enabled?

A. No. Please use the control keys on back to control K65.

Q. Can I use K65 to delete photos on memory cards?

A. Yes, you can delete the pictures on memory card inserted.
(see III.Thumbnails Show)


I. 快速操作指南

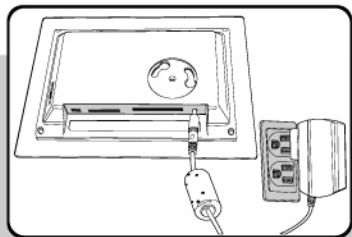

1. 電源線安裝

利用產品包裝裡所提供的電源線連接K65與電源插座。當電源連接成功時，藍色的LED指示燈將會亮起。


Note : K65內建有可重覆充電的1500mA鋰電池，可提供約1個小時的電力使用。若數位相框畫面呈關機狀況，電池充電時間約為2小時；若畫面呈開機狀況，電池充電時間約為5小時。

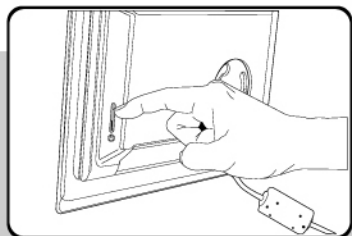

2. 開啓數位相框

(1) 按下開關按鈕並持續2-3秒直到螢幕畫面開啓。

(2) 開啓後，數位相框將自動以幻燈片模式播放內建於記憶體的相片。

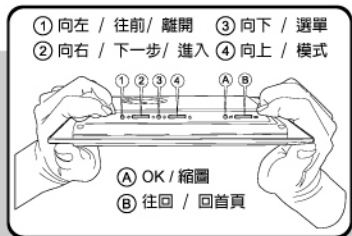

3. K65操作介面說明

(1) 從K65主機上方俯視，可看見6個操控按鈕如圖示。

(2) 每個操控按鈕都有多重的功能。操控指示選單將依照不同模式，在螢幕上方標示適切的操作指示圖，提供您便利的操作。




4. 畫面首頁

(1) 按下按鍵 B 回到畫面首頁。

(2) 按下按鍵 ③ (向下) 或按鍵 ④ (向上) 選擇「相片」，可設定相片播放選單。

(3) 按下按鍵 ③ (向下) 或按鍵 ④ (向上) 選擇「設定」，可進行數位相框設定。

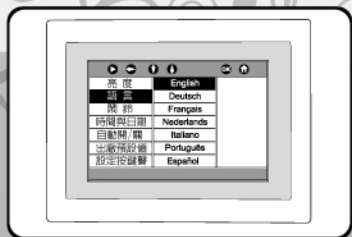

5. 語言選擇


(1) 從畫面首頁，選擇「設定」功能。

(2) 利用按鍵 ③ (向下)，選擇「語言」功能。


(3) 按下按鍵 A (OK)，進入語言選單並選擇一個語言。

(4) 再按按鍵 A (OK) 確認即完成。

6. 時間及日期設定

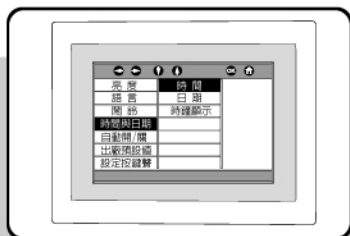


- (1) 從畫面首頁，選擇「設定」功能。
- (2) 利用按鍵 ③ (向下)，選擇「時間和日期」功能。

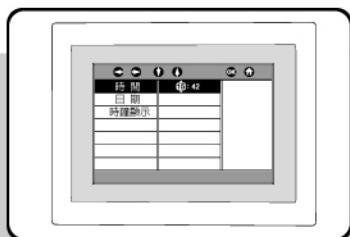


- (3) 選擇「時間」，按下按鍵 ④ (OK) 可開始設定時間。
- (4) 利用按鍵 ③ (向下) 和按鍵 ④ (向上) 可調整時間，設定完成後再按按鍵 ④ (OK) 即可確認。

7. 時鐘設定

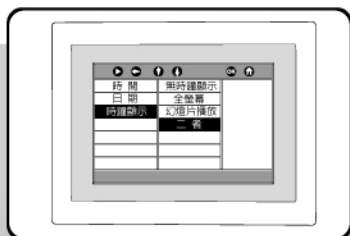


- (1) 選擇「時鐘顯示」並按按鍵 ④ (OK) 開始時鐘顯示設定。
- (2) 利用按鍵 ③ (向下) 和按鍵 ④ (向上) 可選擇時鐘的呈現方式，設定完成後再按按鍵 ④ (OK) 即可確認。
- (3) 「全螢幕」和「幻燈片播放」螢幕呈現方式如下。

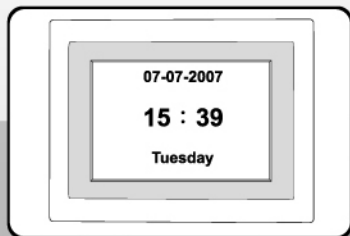

全螢幕時鐘顯示




幻燈片播放時鐘顯示

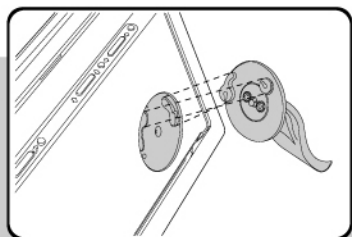

8. 可拆卸式支架設定



(1) 數位相框主機背面設有連接支架的插孔，可如圖示操作。

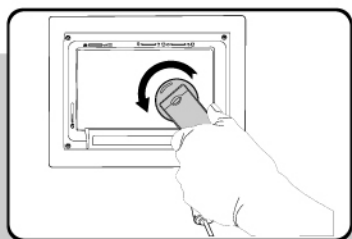

(2) 當支架插入插孔後，逆時鐘旋轉到底即可。


II. 相片播放

1. 幻燈片播放模式

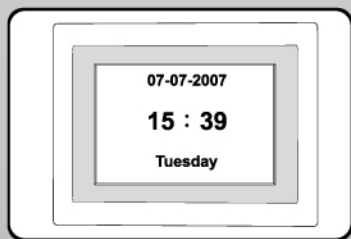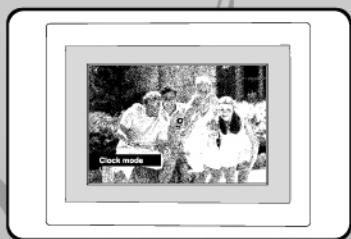


(1) 從畫面首頁按下按鍵 ①，可開始進行幻燈片模式的相片播放功能。

(2) 可按按鍵 ④ (模式) 選擇「瀏覽模式」或「時鐘模式」。

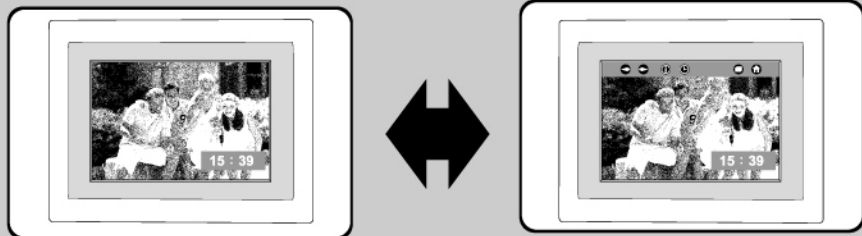


(3) 按下按鍵 ③ (選單)，即可在螢幕跳出主選單示意圖。

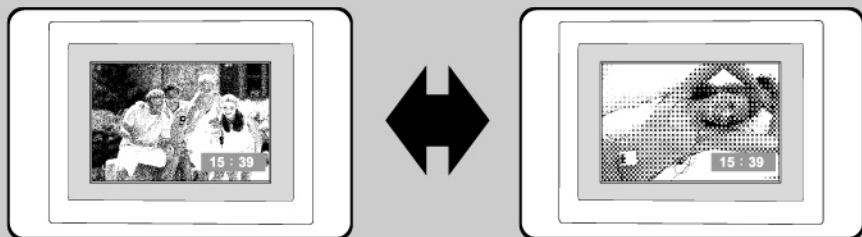

(4) 你可以按按鍵 ① (向左) 回到上一張相片，或按按鍵 ② (向右) 跳至下一張相片。

2. 幻燈片播放模式

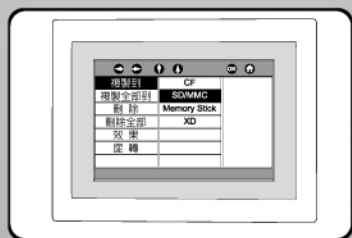


(1) 從畫面首頁，選擇「相片」功能。

(2) 進入內建記憶體或記憶卡，選擇「相簿」功能，再按按鍵 ④ (OK) 讀取裡頭的相片檔案。

或者


(3) 利用按鍵 ③ (向下) 和按鍵 ④ (向上)，選擇「幻燈片播放順序」、「過場效果」、「頻率」以及「背景色」等功能。

III. 縮圖呈現

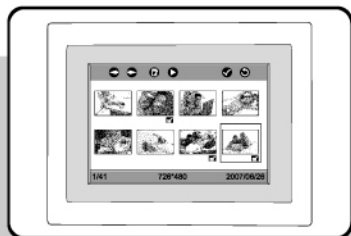


(1)在「幻燈片播放模式」或「瀏覽模式」下播放相片檔案時，按按鍵 **(A)** (縮圖) 即可進入縮圖功能。

(2)利用按鍵 **(1)** (向左) 或按鍵 **(2)** (向右) 移動，在選定的影像上，按下按鍵 **(A)** (OK)，表示已選取。

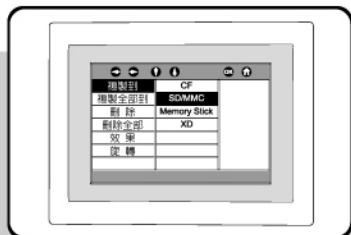


(3)相片選定後，再按按鍵 **(3)** 或按鍵 **(4)**，即可進入影像編輯功能，做「複製」、「刪除」、「效果」和「旋轉」等變化。

IV. 記憶卡及內建記憶體使用說明

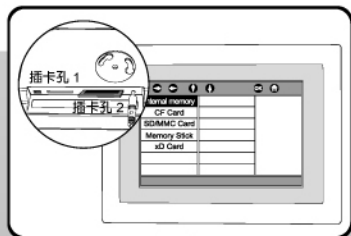


插卡孔1 (支援SD/MMC/XD/MS卡) 和插卡孔2 (支援CF卡) 位於主機背面底部。當記憶卡插入機身後，記憶卡將自動出現在相片來源選擇的選單上。

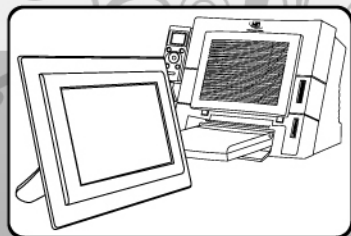


此外，利用產品附搭的USB線，你可將K65變成讀卡機，連接至你的個人電腦或HiTi熱昇華相片印表機。

V. 產品內容物

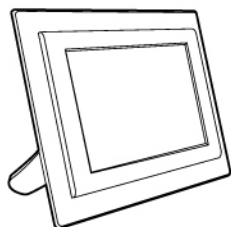


HiTi K65數位相框

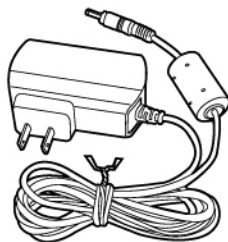

電源線



快速操作指南

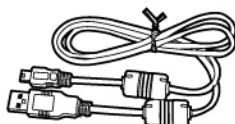

USB連接線



相框支架

VI. 快速問答

Q. 如何直接輸出我喜歡的相片？

A. 你可以選擇HiTi 641PS, HiTi S400或HiTi BS系列，這些搭配有Link-Print™ 功能的相片印表機進行列印工作。可透過產品附贈的USB線，連接K65數位相框和HiTi相片印表機，再利用印表機本身的控制器一步一步操作即可完成。


Q. 請問K65的LCD螢幕是可觸式的嗎？

A. 不是，如欲進行K65數位相框的操作請利用背面的按鍵操控。

Q. 請問我可以利用K65來刪除記憶卡裡的相片嗎？

A. 可以的，你可以透過K65直接刪除記憶卡裡的相片。（參考III.縮圖呈現功能說明）


I. 快速操作指南

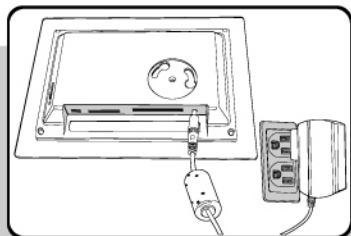

1. 电源连接安装

利用产品包装里所提供的电源适配器连接K65与电源插座。当电源连接成功时，电源开关上的蓝色LED指示灯将会亮起。


注：K65内建有可重复充电的1500mAh锂电池，可连续提供电源约1个小时。若数码相框为关机状态，电池充电时间约为2小时；若数码相框为开机状态，电池充电时间约为5小时。

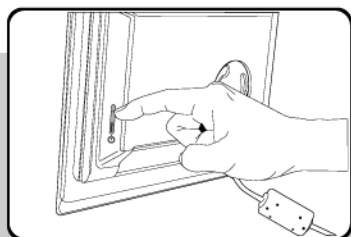

2. 开启数码相框

(1)按下电源开关按钮并持续2-3秒直到屏幕画面开启。

(2)开启后，数码相框将自动以幻灯片模式播放其内部存储的照片。

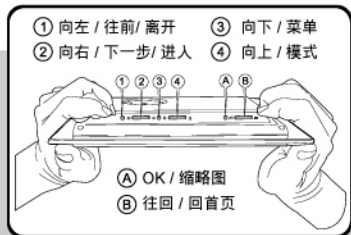

3. K65操作接口说明

(1)从K65主机上方俯视，可看见6个操控按钮，如图所示。

(2)每个操控按钮都有多重的功能。操控指示菜单将依照不同模式，在屏幕上方标识与其功能相符的操作指示图，为您的操作提供便利。




4. 画面首页

(1)按下按键B回到画面首页。

(2)按下按键③(向下)或按键④(向上)选择「相片」，可进行相片播放设定。

(3)按下按键③(向下)或按键④(向上)选择「设定」，可进行数码相框设定。

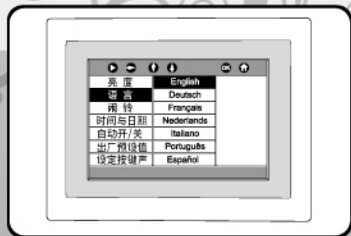

5. 语言选择

(1)从画面首页，选择「设定」功能。

(2)利用按键③(向下)，选择「语言」功能。


(3)按下按键A (OK)，进入语言菜单并选择一个语言。

(4)再按按键A (OK) 确认即完成。

6. 时间及日期设定




- (1) 从画面首页，选择「设定」功能。
- (2) 利用按键③(向下)，选择「时间和日期」功能。

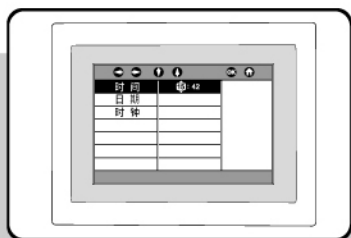


- (3) 选择「时间」，按下按键Ⓐ (OK) 开始设定时间。
- (4) 利用按键③(向下)和按键④(向上)可对时间进行调整，设定完成后再按按键Ⓐ (OK) 即可确认。
- (5) 设置日期可以按照相同的步骤来进行。

7. 时钟设定

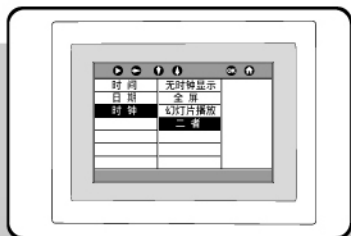


- (1) 选择「时钟」并按按键Ⓐ (OK) 开始时钟设定。
- (2) 利用按键③(向下)和按键④(向上)可选择时钟的呈现方式，设定完成后再按按键Ⓐ (OK) 即可确认。
- (3) 「满版画面时钟」和「幻灯片模式时间」屏幕呈现方式如下。

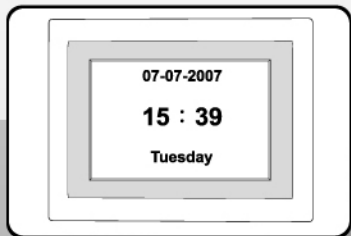

满版画面时钟




幻灯片模式时间

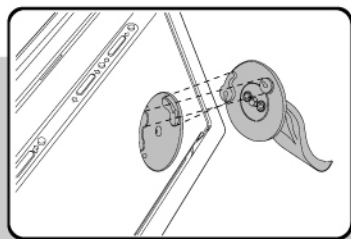

8. 可拆卸式支架设定


(1) 数码相框主机背面设有连接支架的插孔，可如图示操作。

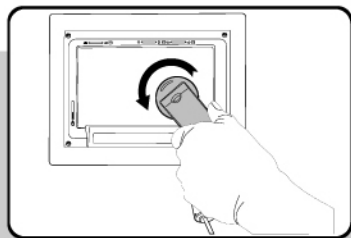

(2) 当支架插入插孔后，逆时针旋转到底即可。


II. 相片轮播

1. 幻灯播放模式

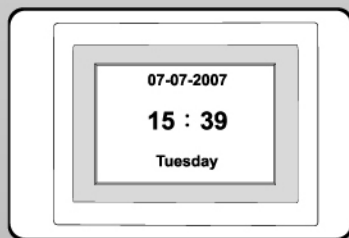


(1) 从画面首页按下按键①，可开始进行幻灯播放模式的相片轮播功能。

(2) 可按按键④(模式)选择「浏览模式」或「时钟模式」。

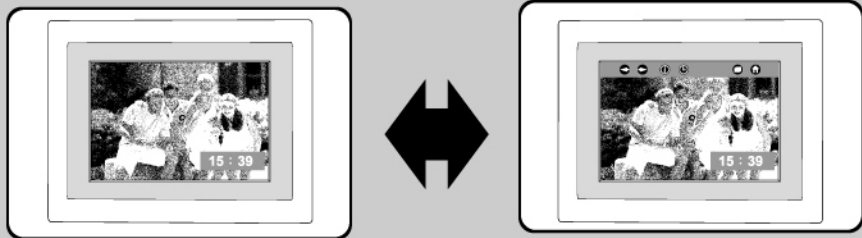


(3) 按下按键③(选单)，即可在屏幕上方跳出主菜单示意图。

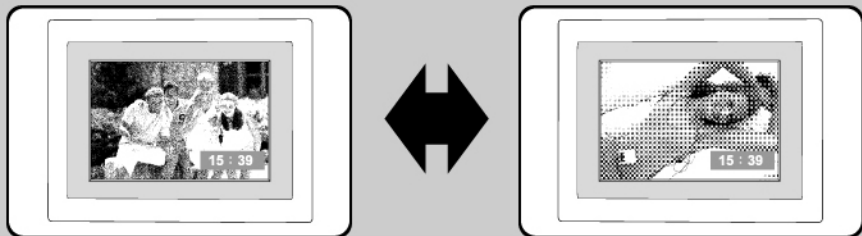

(4) 你可以按按键①(向左)回到上一张相片，或按按键②(向右)跳至下一张相片。

2. 幻灯模式设定

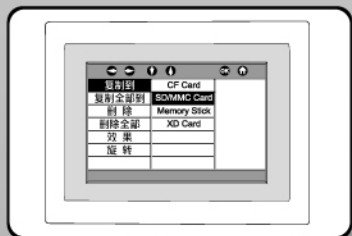


(1) 从画面首页，选择「相片」功能。

(2) 进入内建记忆体或记忆卡，选择「相册」功能，再按按键Ⓐ (OK) 读取里头的相片。

或者


(3) 利用按键③(向下)和按键④(向上)，选择「幻灯片播放顺序」、「切换效果」、「频率」以及「背景色」等进行设定。

III. 缩略图呈现

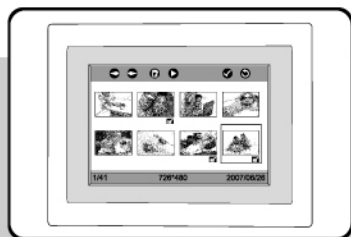


(1)在「幻灯播放模式」或「浏览模式」下播放相片档案时，按下按键Ⓐ(缩略图)即可进入缩略图功能。

(2)利用按键①(向左)或按键②(向右)移动光标，在选定的影像上，按下按键Ⓐ(OK)，表示已选取。

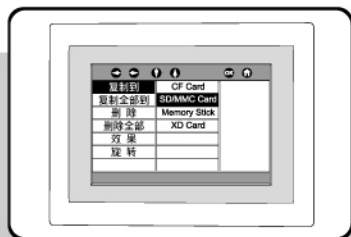


(3)相片选定後，再按按键③或按键④，即可进入影像编辑功能，做「复制」、「删除」、「效果」和「旋转」等操作。

IV. 记忆卡及内建记忆体使用说明

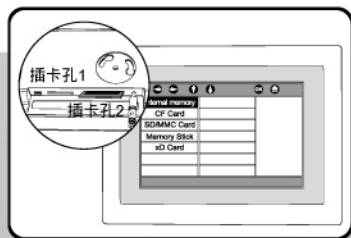


插卡孔1（支持SD/MMC/XD/MS卡）和插卡孔2（支持CF卡）位於主机背面底部。当记忆卡插入机身後，在相片来源选择菜单上将相应的记忆卡类型将自动变为可选。

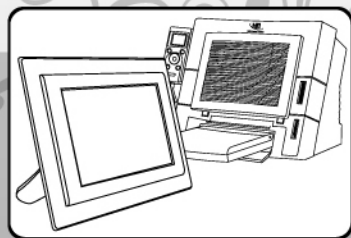


此外，利用产品附搭的USB线，你还可将K65当做一个读卡机，连接至你的个人计算机或HiTi热升华相片打印机，来实现对CF/SD/MMS/XD/MS卡或内存中的相片操作。

V. 包装内的物品

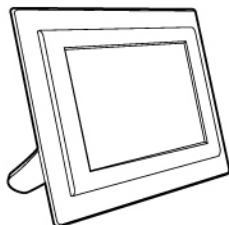


HiTi K65数码相框

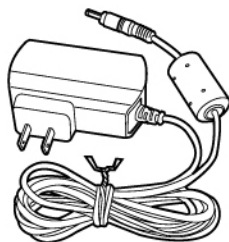

电源适配器



快速操作指南

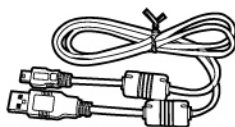

USB连接线



相框支架

VI. 快速问答

Q. 如何直接输出我喜欢的相片？

A. 你可以选择HiTi 641PS, HiTi S400或HiTi BS系列，这些搭配有Link-Print™功能的相片打印机进行打印工作。可透过产品附件的USB线，连接K65数码相框和HiTi相片打印机，再利用打印机本身的控制器一步一步操作即可完成。

Q. 请问K65的LCD屏幕是触摸式的吗？

A. 不是，如您欲对K65数码相框进行操作请利用背面的6个按键实现操控。

Q. 请问我可以利用K65来删除记忆卡里的相片吗？

A. 可以的，你可以透过K65直接删除记忆卡里的相片。（参考III. 缩略图呈现功能说明）



Customer Service

Taiwan (Headquarters)

Hi-Touch Imaging Technologies

3F, No. 31, Shuang-Shih Rd. Sec. 3, Pan-Chiao City,
Taipei County 220, Taiwan
Tel: +886-2-8258-3058 Fax: +886-2-8258-3062
www.hi-ti.com

China

Hi-Touch Imaging Technologies (Suzhou)

Building C, 36# QiHong Road, Suzhou Industrial Park,
Jiangsu Province, PRC
Tel: +86-512-8717-1688 Fax: +86-512-6760-1186
www.hi-ti.com.cn

India

Hi-Touch Imaging Technologies (New Delhi Liaison Office)

401/402, 4th floor, 96, Siddharth Building Nehru Place,
New Delhi 110019, India
Tel: +91-11-4180-8190 Fax: +91-11-4180-8193
www.hi-ti.com

Middle East - Africa

Hi-Touch Imaging Technologies (Middle East)

Emaar business park, bldg # 2, office # 426 P.O. Box 261750,
Dubai-United Arab Emirates
Tel: +971-4-3674547 Fax: +971-4-3674221
www.hi-ti.ae

North America

Hi-Touch Imaging Technologies (America), Inc.

285 S. Dupont Ave, Suite #104 Ontario, CA 91761, U.S.A
Tel: +1-909-974-0099 Fax: +1-909-974-0011
www.hitouchimaging.com

Europe · UK · Russia

Hi-Touch Imaging Technologies Netherlands B.V.

ESP 206, 5633 AC, Eindhoven, The Netherland
Tel: +31-40-2565166
Fax: +31-40-2903176 & +31-40-2903287
www.hi-ti.nl

Latin America

Hi-Touch Imaging Technologies (Mexico)

Agustín González de Cossío Str. #1 int. 202 Col. Del Valle,
Mexico City, 03100
Tel: +52-55-50253671, +52-55-50253672,
+52-55-11076206
Fax: any above telephone numbers with ext. 111
www.hi-ti.com/latinamerica

