



KF750 使用手冊

CE 0168

www.lgmobile.com

P/N : MMBB0274841 (1.1) G

LG ELECTRONICS INC.

KF750 使用手冊

繁體中文
簡體中文
ENGLISH

Bluetooth QD ID B013855



此手冊內的部份內容可能因應手機的
軟件或你的服務供應商而跟你的手機
有所不同。

KF750 使用手冊

恭喜您買了 LG 先進輕巧的 KF750 手機，
本手機專為利用最新的數字流動通訊科
技而設計。



妥善處理您的舊電器

- 1 若產品資料中出現有交叉的推輪垃圾桶符號，即表示該產品受 European Directive 2002/96/EC（歐洲規程 2002/96/EC）之管制。
- 2 所有電器及電子產品應送往政府與有關地區當局所指定的收集地點，並與都市廢物源流分開進行處理。
- 3 妥善處理您的舊電器，會有助防止它們對環境及人體健康所造成的潛在不良影響。
- 4 有關舊電器處理方式的詳情，請聯絡您的市政當局、廢物處理服務或購買產品的商店。

設定	01
您的備用屏幕	02
基本功能	03
自製功能	04
管理功能	05
網絡功能	06
設定	07
配件	08

目錄

指引

安全與有效使用準則 8

設定

安裝智能咭和電池 14

記憶咭 16

功能總覽 18

您的備用屏幕

您的備用屏幕 20

觸控屏幕提示 20

狀態列 21

基本功能

通話 22

撥打語音通話 22

撥打視像通話 22

透過「通訊錄」撥打語音/視像通話 22

撥打國際電話 22

接聽來電和拒接來電 23

快速撥號 23

撥打其他電話 23

DTMF 音 23

檢視通話記錄 23

使用來電轉駁 24

使用通話限制 24

變更通用設定 25

變更視像通話設定 25

通訊錄 26

搜尋通訊錄 26

新增通訊錄 26

通訊錄選項 27

建立群組 27

使用服務撥號號碼 27

檢視本手機號碼 27

建立名片 28

變更通訊錄設定 28

訊息 29

訊息 29

發送訊息 29

輸入文字 29

T9模式 29

Abc模式 29

設定電子郵件 30

提取電子郵件 31

透過新帳戶發送電子郵件 31

變更電子郵件設定 31

訊息資料夾 32

管理訊息 32

使用常用範本 32

使用情感圖示 33

變更文字訊息設定 33

變更多媒體訊息設定 33

變更其他設定 34

自製功能	
相機.....	35
快速拍照	35
拍攝照片後.....	35
使用閃光燈.....	35
調節亮度.....	36
選擇拍攝模式.....	36
使用連環拍攝模式.....	37
使用畫框拍攝模式.....	37
拍攝超廣角圖片.....	37
使用進階設定.....	38
變更圖片大小.....	39
選擇效果.....	39
檢視已儲存照片.....	40
將相片設定為牆紙或通訊錄圖 像.....	40
視像攝錄機.....	41
拍攝快速影片.....	41
錄製影片後.....	41
調節亮度.....	41
使用進階設定.....	41
變更影片大小.....	42
選擇特殊效果.....	43
觀看已儲存影片.....	43
照片及影片.....	44
編輯相簿選項功能表.....	44
編輯視像簿選項功能表.....	44
檢視照片及影片.....	44
檢視影片時調節音量.....	44
從影片中擷取圖像.....	45
從相簿發送照片或影片.....	45
以投影片放映形式檢視照片.....	46
設定相片為牆紙.....	46
編輯照片.....	46
在照片中加入效果.....	46
使照片變形.....	47
對相片使用聚光燈.....	47
編輯影片.....	47
裁剪影片長度.....	47
合併兩段影片.....	48
合併照片和影片.....	48
在影片中加入文字.....	48
覆疊照片.....	49
新增聲音錄製.....	49
在影片中加入原聲帶.....	50
變更影片時間.....	50
新增變暗效果.....	50
多媒體.....	51
圖像.....	51
我的圖像選項功能表.....	51
發送照片.....	51
使用圖像.....	52
管理圖像.....	52
刪除圖像.....	52
編輯圖像.....	52
標記或取消標記圖像.....	53
建立投影片放映.....	53
檢查記憶體狀態.....	53

目錄

聲音.....	53
使用聲音.....	53
影片.....	54
觀看影片.....	54
在暫停影片時使用選項.....	54
發送錄像片段.....	54
將錄像片段用作鈴聲.....	54
使用影片選項功能表.....	54
遊戲及應用程式.....	55
享受 M-Toy 功能表.....	55
下載遊戲或應用程式.....	55
玩遊戲.....	55
使用遊戲選項功能表.....	55
Flash 內容.....	56
檢視 SWF/SVG 檔案.....	56
檢視 SWF/SVG 檔案時使用選項.....	56
文件.....	56
傳送檔案到手機.....	56
檢視檔案.....	56
其他.....	57
Muvee 工作室.....	57
製作電影.....	57
音樂.....	57
將音樂傳送至手機.....	58
播放歌曲.....	58
播放音樂時使用選項.....	58
建立播放列表.....	59
編輯播放列表.....	59
刪除播放列表.....	59

使用收音機.....	59
搜尋電台.....	60
編輯頻道.....	60
重設頻道.....	60
收聽電台.....	61
使用語音備忘錄.....	61
錄製聲音或語音.....	61
發送錄音.....	61

管理功能

記事簿.....	62
新增事項至日曆.....	62
變更預設日曆檢視.....	62
新增項目至待辦事項.....	62
發送待辦事項項目.....	63
新增備忘錄.....	63
設定鬧鐘.....	63
使用計算機.....	63
使用秒錶.....	64
轉換單位.....	64
新增城市至世界時間.....	64
電腦同步.....	65
在電腦上安裝 LG PC Suit.....	65
連接手機和電腦.....	65
備份和還原手機資訊.....	65
檢視電腦上的手機檔案.....	66
同步處理通訊錄.....	66
同步訊息.....	66
同步您的音樂.....	66

將手機用作大容量儲存裝置.....	67	使用飛航模式.....	75
DivX 連線的 PIN 碼.....	67	配件.....	76
網絡功能		網絡服務.....	77
瀏覽器.....	68	技術資料.....	77
存取網絡.....	68		
新增並存取書籤.....	68		
儲存網頁.....	68		
存取已儲存的網頁.....	68		
檢視瀏覽器記錄.....	69		
使用 RSS 讀取裝置.....	69		
新增收取點.....	69		
更新 RSS 讀取裝置.....	69		
變更網頁瀏覽器設定.....	69		
網絡功能.....	70		
將手機用作數據機.....	70		
使用藍芽.....	70		
使用藍芽發送和接收檔案.....	70		
同其他藍芽裝置配對.....	72		
使用藍芽耳機.....	72		
設定			
變更屏幕設定.....	73		
個人化情景模式.....	73		
變更電話設定.....	73		
使用日期和時間.....	74		
變更其他設定.....	74		
變更安全性設定.....	74		
使用記憶體管理.....	74		

安全與有效使用準則

請閱讀以下簡易的使用準則。違反這些準則可能會發生危險或觸犯法律。

射頻能量暴露準則

此裝置滿足無線電波暴露的國際準則。

您的流動電話是一部無線電波收發器。其設計和製造不會超出由國際指引 (ICNIRP) 建議的無線電波頻率能量暴露限制。這些限制是綜合指引的一部份，並定出對一般人的 RF 能量接受水平。這些指引是經由獨立的科學機構通過對科學研究作定期和徹底的評估而制定的。這些指引包括為確保任何年齡和任何健康狀態人士安全而設的基本安全極限。

流動電話的暴露標準採用了一組名為比吸收率的測量數據，即 SAR。國際指引中所規定的 SAR 限制為 2.0 W/kg*。對 SAR 的測試是通過在標準的操作位置使電話以最高認可功率水平在所有測試波段中傳輸訊號而進行的。儘管 SAR 是在最高認可功率水平下確定的，電話的實際 SAR 會遠遠低於其實際值。

這是因為電話的設計是為了在不同的功率水平下工作，以達到僅僅接通使用網絡所需的功率。在一般情況下，您離基站越近，電話的輸出功率就越低。在某款型號的電話上市之前，必須符合歐洲 R&TTE 指引中的標準。該指引包含保護使用者和任何其他個人健康和安全的基基本要求。

測試該裝置在耳邊使用的最高 SAR 值為 0.5 W/kg。

在將手機置於耳邊正常使用或使其距身體至少 1.5 厘米遠的情況下，此流動電話符合關於 RF 暴露的指引。如果隨身攜帶手機，所用的手機套或其他裝置中不可包含金屬物品，並應使手機與身體至少保持 1.5 厘米的距離。要傳輸數據檔案或訊息時，該裝置與網絡進行有效的連接。在某些情況下，數據檔案或訊息的傳送可能會延遲，直至這類連接可用為止。請確保遵守以上的特別距離指示，直至傳輸完成為止。測試該裝置在身上使用的最高 SAR 值為 0.755 W/kg。

* 公眾使用的流動電話 SAR 限制為 10 克人體組織上平均 2.0 瓦特/千克 (W/kg)。指引包括一個基本安全極限，用以向公眾提供額外的保護，並解決任何量度上的差異所帶來的問題。SAR 值會視乎國家報告要求及網絡波段而定。

如需其他地區的 SAR 資訊，請參閱 www.lgmobile.com 網頁中的產品資料。

產品護理及維修



警告

僅請使用經認可可用於此特定手機型號的電池、充電器及配件。使用其他種類可能使手機的認可或保養失效，並可能引致危險。

- 請勿拆開此裝置。需要對手機進行維修時，請將其帶到合資格的維修技師處。
- 請遠離電視、收音機或電腦等電器產品而使用手機。
- 裝置需遠離發熱來源，如散熱器或烹調器具。
- 請勿掉落手機。
- 請勿讓此裝置遭機械震動或電擊。
- 請於任何有特殊限制的地方關閉手機。例如，請勿在醫院內使用手機，否則，它可能會對敏感的醫療設備造成影響。
- 請勿以潮濕的雙手對充電中的手機進行操作。這可能會引致觸電或造成手機嚴重損壞。
- 不要在易燃材料附近為手機充電，因為充電期間手機會發熱並導致火災。
- 使用乾布清潔裝置表面（請勿使用如苯、稀釋劑或酒精等溶劑）。
- 切勿在柔軟家具上為手機充電。
- 手機應在通風良好的環境中充電。
- 請勿讓此裝置接觸過多煙或塵埃。
- 請勿將手機置於信用卡或車票附近，這可能會影響磁帶上的資料。
- 請勿以尖銳物件敲打屏幕，否則可能會對手機造成損毀。
- 請勿將手機暴露於液體或濕氣中。

安全與有效使用準則

- 請小心使用配件，如耳機。如非必要，請勿觸及天線。
- 如果您的汽車配有氣囊，切勿讓已安裝的無線設備或手提無線設備阻擋氣囊。它有可能因使用不當而失靈或造成嚴重損傷。

有效手機操作

電子裝置

所有手機都可能會因為受到干擾而影響效能。

- 請勿在未得到批准下在醫療儀器附近使用您的手機。避免將手機放置在起搏點上，例如您的胸部口袋。
- 手機可能影響到某些助聽器。
- 輕微干擾可影響電視、收音機、個人電腦等。

道路安全

檢查您駕駛時地區使用手機的法例及規則。

- 駕駛時請勿使用手提手機。
- 請專心一致駕駛。
- 如有免提聽筒套件，請使用免提聽筒套件。
- 若有駕駛條例要求，請駛離馬路並停泊好汽車後才撥打或接聽電話。
- RF 能量可能會影響車內某些電子設備，例如立體聲音響及安全設備等。

- 如果在外出時聆聽音樂，請確保將音量設定至合適水平，以便可以對周圍環境產生警覺。這在馬路旁邊時尤為必要。

避免損害您的聽覺

如果長時間以較大音量收聽，可能會對聽覺造成損害。所以我們建議開啓或關閉手機時，不要將它放於太近耳朵。我們亦建議將音樂及通話音量設定至合適水平。

玻璃零件

手機有部分零件為玻璃質料。當手機掉落地面或是受到相當程度的撞擊時，玻璃質料的鏡面可能會破裂。千萬不要以手接觸或嘗試移除玻璃碎片，應立即停止使用手機，並盡快到 LG 授權的維修中心更換該破碎的玻璃鏡面。

爆破地區

請勿在進行爆破時使用手機。請嚴格遵守相關限制、規定或條例。

潛在爆炸氣壓

- 請勿在燃料補給點使用手機。
- 請勿在燃料或化學物質旁使用。
- 請勿使用放置了手機及配件的汽車傳輸或放置易燃氣體、液體或爆炸物。

在飛機上

無線裝置可引致飛機干擾。

- 登機前，請先關掉手機。
- 未經地勤人員批准，請勿在陸上使用手機。

兒童

請將手機放在兒童接觸不到的安全地方。手機包含微細零件，如果拆開，可能造成哽咽危險。

緊急呼叫

緊急電話可能在某些流動網絡中不能發出。因此，您不應僅倚賴手機作為緊急電話方式。請向您本地的服務供應商查詢。

電池資料及保護

- 充電前，您無須完全放電。跟其

他電池系統不同，沒有記憶影響可緩和電池的效能。

- 只使用 LG 電池及充電器。LG 充電器是為將電池壽命擴至最大而設。
- 請勿拆解電池組或造成電池組短路。
- 請保持電池組的金屬接點清潔。
- 當電池不再提供可接受的效能，請更換電池。電池組可重充數百次直至需要更換為止。
- 如果電池很久沒有使用來擴展其用量，需重充電。
- 請勿直接將充電器暴露於日光下或高濕度環境（如浴室）中。
- 請勿把電池放置在熱或冷的地方，這可損害電池效能。
- 若使用類型不當的電池，則有發生爆炸的危險。
- 請根據製造商的指示來處理廢棄電池。請盡量回收利用。請勿作為家庭廢棄物處理。
- 如果需要更換電池，請帶同手機前往最近的授權 LG 電子產品服務點或經銷商以尋求協助。
- 請謹記在手機完全充電後從牆壁插座拔出充電器，避免充電器造成不必要的電力損耗。

了解您的手機





充電器、USB線、免提插孔

提示：如要連接 USB 線，請先開機並註冊到網絡。



側鍵

- 屏幕處於備用狀態時：鈴聲音量。
- 在通話中：聽筒音量。
- 播放音樂時
- 短按：控制音量。

觸控媒體按鈕：將屏幕變為觸控屏，以存取您的檔案。

**開啟多項工作功能表
拍攝按鍵**

01

02

03


04

05

06

07

08

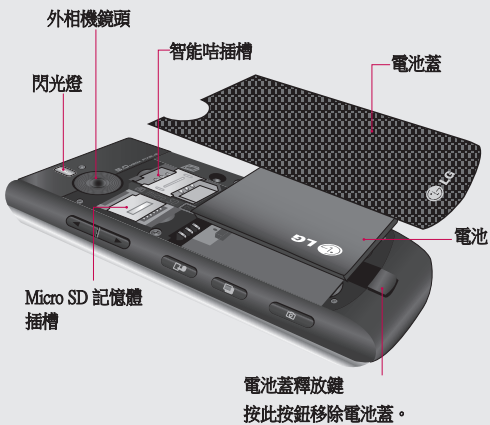

外相機鏡頭

閃光燈

智能咕插槽

電池蓋

電池

Micro SD 記憶體
插槽

電池蓋釋放鍵

按此按鈕移除電池蓋。



設定

13

安裝智能咭和電池

1 取下電池蓋

按住手機底部的電池蓋釋放鍵並提起電池蓋。



2 取下電池

握住電池邊緣，將電池拿出電池盒外。




警告：請勿使用指甲取出電池。

警告：手機開機時，不要取下電池，因為這樣會損壞手機。

3 安裝智能咭

將智能咭滑入智能咭插槽。請確保智能咭上的金屬接觸區面向下方。要取出智能咭，請向反方向抽出。

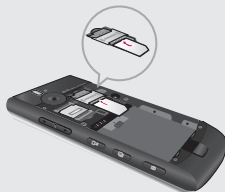


4 安裝電池

先將電池頂部頂入電池格上方邊緣。請確保電池觸點對準手機觸點。將電池固定。



5 手機充電

小心打開 KF750 側邊的充電器插孔蓋。插入充電器並插入電源插座。為您的 KF750 手機充電，直至屏幕上顯示「電池電量已滿」訊息。

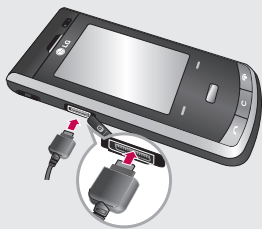

注意：將 KF750 充電器插入手機時，務必要遵照圖示方法。

01

02

03

04

05

06

07

08

記憶咭

安裝記憶咭

使用記憶咭，擴展手機可使用的記憶體空間。KF750 手機可支援高達 4GB 的記憶咭。

提示：記憶咭是選購配件。


- 1 按照之前的操作，取下電池蓋。
- 2 將記憶咭滑入頂部插槽，直到卡緊為止。請確保金屬接觸區面向下。



- 3 按照之前的操作，蓋上電池蓋。

格式化記憶咭


若記憶體已格式化，則即可開始使用。若記憶咭尚未格式化，則需要執行此操作。

- 1 從備用屏幕，按  選擇「設定」。
- 2 選擇「記憶體管理」，然後再選擇「外置記憶體」。
- 3 選擇格式化，然後確認您的選擇。
- 4 若設有安全密碼，則輸入密碼，記憶咭將被格式化，可隨時使用。

提示！ 要變更預設儲存目標，請從「設定」功能表開啟「記憶體管理」並選擇「主要儲存裝置設定」。

傳輸通訊錄

將通訊錄從智能咭傳輸到手機：

- 1 從備用屏幕，選擇 ，然後選擇「通訊錄」。
- 2 依次選擇「通訊錄設定」和「複製」。
- 3 選擇「智能咭至手機」。
- 4 選擇「全部」或「依次序」，並點按「完成」。

01

02

03

04

05

06

07

08

功能總覽



遊戲及應用程式

- 1 M-Toy
- 2 我的遊戲及應用程式
- 3 設定



通話

- 1 視像通話撥號
- 2 通話記錄
- 3 通話時間
- 4 數據用量
- 5 通話費用
- 6 來電轉駁
- 7 通話限制
- 8 固定撥號號碼
- 9 來電等候
- 0 通用設定
- * 視像通話設定



記事簿

- 1 日曆
- 2 待辦事項
- 3 備忘錄
- 4 保密備忘錄
- 5 日期搜尋器
- 6 設定



多媒體

- 1 觸控媒體
- 2 相機
- 3 視像攝錄機
- 4 音樂
- 5 FM 收音機
- 6 語音備忘錄
- 7 媒體編輯器
- 8 Muvvee工作室



訊息

- 1 建立新訊息
- 2 收件匣
- 3 郵箱
- 4 草稿
- 5 寄件匣
- 6 已發送項目
- 7 我的資料夾
- 8 常用範本
- 9 情感圖示
- 0 設定



我的檔案

- 1 我的圖像
- 2 我的聲音
- 3 我的影片
- 4 遊戲及應用程式
- 5 Flash 內容
- 6 文件
- 7 其他
- 8 我的記憶咭



Google

- 1 Search
- 2 Mail
- 3 Maps
- 4 Blogger
- 5 You Tube
- 6 Upload History



通訊錄

- 1 新增
- 2 搜尋
- 3 快速撥號
- 4 群組
- 5 服務撥號號碼
- 6 本手機號碼
- 7 我的名片
- 8 設定



工具

- 1 快選功能表
- 2 鬧鐘
- 3 計算機
- 4 秒錶
- 5 單位轉換器
- 6 世界時間
- 7 智能咭服務



瀏覽器

- 1 主頁
- 2 輸入網址
- 3 書籤
- 4 RSS 讀取裝置
- 5 儲存的網頁
- 6 記錄
- 7 設定



連接

- 1 藍芽
- 2 伺服器同步
- 3 USB 連線模式
- 4 電視輸出
- 5 啟動電腦上的DivX 連線 PIN 碼



設定

- 1 情景模式
- 2 手機
- 3 屏幕
- 4 日期及時間
- 5 網絡
- 6 互聯網設定
- 7 存取點
- 8 分組數據連線
- 9 安全
- 0 記憶體管理
- * 串流播放設定
- # 重設設定

01

02

03

04

05

06

07

08


設定

19

您的備用屏幕

KF750 未工作時，會返回到備用屏幕。您可從此處存取功能表選項，快速撥打電話並更改您的情景模式及很多其他內容。

觸控屏幕提示

若按 ，屏幕會切換到觸控媒體屏幕模式。

從備用屏幕，長按觸控媒體鍵，進入觸控媒體功能表。

要選擇某個項目，請準確點按觸控屏幕上的圖示。若能識別出您所點按的操作，KF750 便會輕微震動。

- 點按觸控屏時無需重按，只需要輕輕按中即可。
- 使用指尖點按所需的選項。小心不要按任何其他鍵。
- 不要用護套或護蓋蓋住手機，因為一旦觸控屏幕上蓋有任何東西，它將無法正常運作。
- 要結束觸控屏幕，按一下右下角的圖示。手機將會返回到主備用屏幕。
- 屏幕下方的觸控板可用作方向鍵，以瀏覽手機功能表。

提示！ 使用觸控媒體可輕鬆快速存取您的音樂、相片、M-Toy、文件和FM收音機。



觸控板

注意：屏幕燈光熄滅後，按手機右側的相機鍵，可還原備用屏幕。

對客戶的忠告

為了讓天線得到更佳接收，LG 建議您按照以下圖示握住手機。



通話中或使用藍芽連線時，請勿用手蓋住天線區域。這可降低訊號質量。

狀態列

狀態列透過使用多種圖示，指明如訊號強度、新訊息和電池電量等情況，亦告訴您藍芽或 GPRS 是否已啟動。

下表說明可能在狀態列中看到的圖示的含義。

圖示	說明
	多項工作列表
	網絡訊號強度（列數會有變化）
	無網絡訊號
	電池已耗盡
	新文字訊息
	新電郵
	鬧鐘已設定
	正在使用標準情景模式

圖示	說明
	正在使用靜音情景模式
	外置記憶體
	通話線路已轉接
	可使用 GPRS
	正在使用 EDGE
	漫遊
	藍芽已啟動
	通話已轉駁
	可使用 3G

01

02

03

04

05

06

07

08

通話

撥打語音通話

- 1 輸入包括完整區域代碼的號碼。
要刪除數字，請按下 **C**。
要刪除所有數字，請按住 **C**。
- 2 按 **☎** 可撥打電話。
- 3 按 **☎** 或合上手機可結束通話。

撥打視像通話

若您撥打的用戶在 3G 覆蓋服務區域內使用 3G 視像手機，則您可在 3G 覆蓋服務區域內撥打視像通話。您亦可接聽視像通話。要撥打/接聽視像通話，請執行如下操作。

- 1 使用按鍵輸入手機號碼或從已撥電話/已接電話清單中選擇號碼。要更正錯誤，短按 **C** 可刪除一個數字，或按住 **C** 則刪除所有數字。
- 2 如果您想使用免提聽筒，請確保已插入耳機。
- 3 要啟用視像功能，請按左觸控鍵 [選項] 並選擇視像通話撥號。系統會通知您：在撥打視像通話前，您需要關閉其他應用程式。

注意：接通視像通話可能需要一些時間。請耐心等待。連線時間也取決於對方接聽電話的速度。連線視像通話時，您將看到自己的圖像；對方接聽電話後，他們的圖像便會顯示在屏幕上。

- 4 根據需要調校相機位置。
- 5 按 **☎** 或合上手機可結束通話。

透過「通訊錄」撥打語音/視像通話

撥打「通訊錄」中儲存的號碼十分方便。

- 1 點按右觸控鍵，存取通訊錄列表。
- 2 點按至要撥號的聯絡人。
- 3 按 **☎** 撥打語音通話。按左觸控鍵並選擇視像通話撥號以撥打視像通話。
- 4 按 **☎** 可結束通話。

撥打國際電話

- 1 按住 **0+** 可輸入國際撥號前碼。「+」字元加在國際地區號碼的前頭。
- 2 輸入國家代碼、區域代碼和電話號碼。
- 3 按 **☎**。

接聽來電和拒接來電


手機響鈴後，按  硬鍵接聽來電。

按右觸控鍵，可令響鈴靜音。
如果在開會時忘記將情景模式變更為「靜音」，此功能將十分有用。


按右觸控鍵拒接。

快速撥號


您可為常撥聯絡人指定一個快速撥號號碼。

- 1 按  並選擇通訊錄。
- 2 選擇快速撥號。
- 3 您的留言信箱已經設定至快速撥號 1。您無法變更。選擇任何其他號碼，為其指定快速撥號聯絡人。
- 4 通訊錄將開啟。透過點按一下相應的電話號碼，選擇要將其指定給此號碼的聯絡人。

要撥打快速撥號號碼：

- 1 按已指定的號碼，然後按發送鍵 ，或者
- 2 按住指定的號碼，直到聯絡人電話顯示在屏幕上。

撥打其他電話


- 1 通話中，點按左觸控鍵，並選擇新建通話撥號。
- 2 撥號或搜尋通訊錄（請參閱第22頁的如何從通訊錄撥打電話，了解詳情）。
- 3 按  連接通話。
- 4 兩個通話均將顯示於通話屏幕上。初始通話將會被鎖定，來電者被保留。
- 5 選擇交換，在兩方通話間切換。
- 6 要結束其中一個或兩個通話，請選擇選項 → 結束，然後選擇所有通話或使用中通話。

注意：您需為撥打的每個電話付費。

DTMF 音

透過 DTMF，您可以使用數字指令在自動化訊息內導覽功能表。預設情況下，雙音多頻處於開啟狀態。

檢視通話記錄

按 ，選擇通話 → 通話記錄。
選擇要檢視的對象：

所有通話 - 檢視所有撥出、已接和未接來電的完整清單。

撥出通話 - 檢視所有已撥出通話的清單。

01

02

03

04

05

06


07

08

通話

已接來電 - 檢視所有已接聽來電的清單。

未接來電 - 檢視所有未接來電的清單。

按 ，選擇通話。

從通話中，您亦可選擇檢視的內容：


通話時間 - 檢視所有已撥和已接電話的通話時間。

數據用量 - 檢視所有接收和傳送數據用量（以千字節表示）。

通話費用 - 檢視套用到已撥號碼的費用（此服務視網絡而定，部份網絡商不支援此功能）。

提示！ 從任何通話清單，點按左觸控鍵並點按清除全部以刪除所有已存的項目。


使用來電轉駁

- 1 按 ，選擇通話。
- 2 選擇來電轉駁，並選擇語音通話或視像通話。
- 3 可選擇全部語音通話、線路繁忙時、無人接聽或無法接通時。
- 4 輸入轉駁號碼。
- 5 選擇轉駁予以啟用。

注意：轉駁電話需要收費。請聯絡網絡供應商，了解詳情。

提示！ 要關閉所有通話轉接功能，請選擇停用全部。

使用通話限制

- 1 按 ，選擇通話。
- 2 選擇通話限制，並選擇語音通話或視像通話。
- 3 選擇以下六個選項的任何一個或所有：

所有撥出通話

國際通話撥號

本地以外的國際撥號


所有來電

國際漫遊時來電

- 4 輸入通話限制密碼。請向您的網絡商查詢這項服務。

提示！ 選擇固定撥號號碼，開啟並編譯可從此手機撥出的號碼清單。您需要從您的網絡商處得到一個 PIN2 碼。啟用後，僅可撥打固定撥號清單中包含的號碼。

變更通用設定

- 1 按 ，選擇通話。
- 2 選擇通用設定。您可從此處修改以下選項的設定：
 - 來電拒接** - 選擇開啟或關閉並選擇拒接所有通話、通訊錄、群組、無名稱記錄(不在通訊錄中的號碼)或無來電號碼。
 - 發送我的號碼** - 選擇撥出通話時，是否顯示您的號碼。
 - 自動重撥** - 選擇開啟或關閉。
 - 接聽模式** - 選擇是按發送鍵、開啟滑蓋或按任何鍵來接聽來電。
 - 分鐘提示** - 選擇開啟後，您便可在通話時聽到分鐘提示音。


藍芽接聽模式 - 選擇免提，可使用藍芽耳機接聽來電或選擇手機，便可透過按手機上的按鍵來接聽來電。

儲存新號碼 - 選擇「是」儲存新號碼。

滑蓋關閉設定 - 合上滑蓋時，選擇「結束通話」或「繼續通話」。

語音清晰度 - 您可選舉是或否。

變更視像通話設定

- 1 按 ，選擇通話。
- 2 選擇視像通話設定。
- 3 確定是否使用私人圖片或開啟鏡像功能（這樣，您可在屏幕上看到您自己）。

01

02

03

04

05

06

07

08

通訊錄

搜尋通訊錄

有兩種方法可搜尋通訊錄：

從備用屏幕


- 1 從備用屏幕，點按右觸控鍵，開啟通訊錄。
- 2 選擇對應於要檢視通訊錄首個單詞的字母。因此，對於「Home」，請選擇 H。

提示！ 點按右觸控鍵並選擇搜尋於-群組，您可按群組進行搜尋操作。這將顯示所有群組清單。

從主功能表

- 1 選擇通訊錄。
- 2 選擇搜尋，並使用鍵盤輸入要查找聯絡人的前幾個字母。
- 3 通訊錄將顯示對應於輸入字母的通訊錄清單。

新增通訊錄

- 1 按  並選擇通訊錄。
- 2 選擇新增。
- 3 選擇將聯絡人儲存到手機或智能咭。
- 4 輸入新聯絡人的名字和姓氏。您不必同時輸入名字和姓氏，但必須輸入其中一個。
- 5 輸入多達五個不同的號碼並為各號碼指定一個類型。您可選擇手機、家庭、公司、傳呼機或傳真。點按完成。
- 6 可新增多達兩個電郵地址。
- 7 將聯絡人指定給群組。您可選擇沒有群組、家庭、朋友、學校、同學或重要人士。
- 8 您也可新增主頁、住宅地址、公司名稱、職位、公司地址和備忘錄。

提示！ 您可為通訊錄建立自訂群組，請參閱第27頁的建立群組。

通訊錄選項

您可在檢視通訊錄時進行多項操作。以下是存取和使用選項功能表的方式：

- 1 開啟您要使用的聯絡人。請參閱第 26 頁上的搜尋通訊錄。
- 2 按左觸控鍵開啟選項清單。
在此處您可以：

編輯 - 變更任何聯絡人的詳細資料。

發送訊息 - 向聯絡人發送訊息或電子郵件。請參閱第 29 頁，了解如何發送訊息的詳情。

發送名片 - 以名片方式向他人發送聯絡人的詳細資料。選擇以文字訊息、多媒體訊息、電子郵件或藍芽發送。


語音通話撥號 - 向聯絡人撥打語音通話。

視像電話撥號 - 向聯絡人撥打視像通話。

儲存到智能咭/手機 - 選擇要移動或複製到智能咭還是手機（視乎起初儲存通訊錄的位置而定）。

刪除 - 刪除通訊錄。點按「是」如果您肯定。


建立群組

- 1 按  並選擇通訊錄。
- 2 選擇群組，並點按左觸控鍵。
- 3 選擇新增群組。
- 4 為您的新群組輸入名稱。
- 5 點按完成。

注意：若要刪除某群組，指定給該群組的聯絡人將不會遺失。它們仍會保留在您的通訊錄中。

提示！ 透過顯示現有群組並點按左觸控鍵，您可編輯此群組。選擇新增群組、新增成員至群組，群組鈴聲，重新命名或刪除群組。

使用服務撥號號碼

您可檢視由服務供應商指定的「服務撥號號碼」(SDN) 清單（如果受智能咭支援）。此類號碼包括緊急電話、電話號碼查詢和留言信箱號碼。選擇服務號碼後，按  撥打服務電話。

檢視本手機號碼

可讓您顯示智能咭中的手機號碼。

01

02

03

04

05

06

07

08


通訊錄

建立名片

透過依次選擇「我的名片」和「新增」，您可建立自己的名片。輸入姓名、號碼、電子郵件和圖像後，您可用其作為傳送訊息時的名片。

變更通訊錄設定

您可以對通訊錄設定進行調整，以便通訊錄按照您的喜好運作。

- 1 按  並選擇通訊錄。
- 2 選擇設定。您可從此處對以下設定進行調整：

通訊錄列表設定 - 選擇檢視儲存於您的手機及 智能咭中的通訊錄，還是僅檢視儲存於手機或 智能咭中的聯絡人。您亦可選擇名稱顯示次序，先顯示名字或姓氏，然後顯示圖片。

通訊錄同步化 - 連接到您的伺服器以同步通訊錄。請參閱第 66 頁的同步處理通訊錄。

複製 - 在手機與 智能咭之間進行複製。選擇執行此操作的方式：全部或依次序。

移動 - 這和複製一樣，但聯絡人僅會儲存於您所移動至的位置。如果您將一個聯絡人從 智能咭 移動至手機，它將從 智能咭 記憶體中刪除。

通過藍芽傳送所有通訊錄 -

透過藍芽將所有通訊錄資訊發送到其他手機。

備份通訊錄 - 請參閱第 65 頁上的備份和還原手機資訊。

還原通訊錄 - 請參閱第 65 頁上的備份和還原手機資訊。

清除通訊錄資料 - 刪除您所有的通訊錄。若確定要刪除整個通訊錄，請點按是。


記憶體資訊 - 您可以查看手機或 智能咭上還剩有多少的記憶體空間。


訊息


訊息

KF750 手機將 文字訊息、多媒體訊息 和電子郵件集中在同一目錄中，使用起來方便簡單。

發送訊息

- 1 選擇訊息，然後選擇建立新訊息。
- 2 選擇訊息以發送 文字訊息或多媒體訊息。或者，要發送電郵，請選擇電子郵件。詳情請參閱第 30 頁。
- 3 如果您選擇「訊息」，則新 文字 訊息 將會開啟。
- 4 依次選擇選項和附加，新增圖像、影片、聲音、主題等。
- 5 按  發送。輸入號碼，或選擇「通訊錄」開啟您的聯絡人清單。您可以選擇多個聯絡人。

 **警告：**您將按收件者每則文字訊息 160 字元計費。

 **警告：**若向 文字訊息 加插了圖像、影片或聲音，它將自動轉換為 多媒體訊息，而您亦需為此支付相應費用。

輸入文字

有兩種方法輸入文字：

T9 模式及 Abc 模式。

開啟空白訊息後，要在文字輸入方法之間切換，請按住  鍵。

T9 模式 - 開啟 T9 模式，然後選擇 T9 abc、T9 Abc、T9 ABC 或 123。

Abc 模式 - 選擇 abc、Abc、ABC 或 123。

要在大寫、小寫和標題字母之間變動，請按  鍵。

要刪除字元，請使用屏幕下方的 **C** 硬鍵。

要輸入符號，請選擇選項和附加。

T9 模式

T9 模式使用內置字典，識別根據點按按鍵順序寫入的單字。只需點按與要輸入字母關聯的數字按鍵，且只要輸入所有字母，字典便可識別要輸入的單字。例如，按 8、3、5、3、7、4、6、6、3 可得到「telephone」。

Abc 模式

在 Abc 模式下，您必須重複按按鍵，才能輸入字母。例如，要寫入「hello」，請按 4 兩次、3 兩次、5 三次、5 又三次，然後按 6 三次。

01

02

03

04

05

06

07

08

訊息

設定電子郵件

縱使出門在外，您亦可使用 KF750 上的電子郵件功能與其他人保持聯絡。設定 POP3 或 IMAP4 電子郵件帳戶簡單方便。

- 1 選擇訊息，然後選擇設定。
- 2 先選擇電子郵件，然後選擇電子郵件帳戶。
- 3 您現在可選擇帳戶的工作方式：
 - 標題** - 為此帳戶輸入名稱。
 - 我的名字** - 輸入您的名字。
 - 使用者名稱** - 輸入帳戶用戶名稱。
 - 密碼** - 輸入帳戶密碼。
 - 電郵地址** - 輸入帳戶電郵地址。
 - 回覆 電郵 地址** - 輸入「回覆」的電郵地址。
 - 外寄郵件伺服器** - 輸入帳戶的詳細資料。
 - 內送郵件伺服器** - 輸入帳戶的詳細資料。
 - 最大 接收 大小** - 選擇您的電郵大小限制，上限為 1MB。
 - 郵箱類型** - 輸入郵箱類型，即 POP3 或 IMAP4。
 - 儲存到伺服器** - 選擇是否將您的電郵儲存到伺服器。對於 IMAP4 帳戶，副本將得以儲存。

儲存已發送的郵件到 - 選擇儲存 IMAP4 電郵的位置。對於 POP3 帳戶，副本將儲存在手機上。

存取點 - 選擇您的互聯網存取點。

自動接收 - 選擇是否要自動提取您的新電郵。

進階設定 - 選擇是否要使用進階設定。

SMTP 連接埠號碼 - 通常，此號碼為 25。

內送郵件伺服器連接埠 - 通常，對於 POP3 帳戶，此為 110；而對於 IMAP4 帳戶則為 143。

SMTP 驗證 - 選擇外寄郵件伺服器的安全設定

SMTP 使用者名稱 - 輸入 SMTP 的使用者名稱。

SMTP 密碼 - 輸入 SMTP 的密碼。

APOP 安全登入 - 選擇是否為 POP3 帳戶啟用 APOP 安全登入。IMAP4 帳戶則始終設為關閉。

現在，您的帳戶經已完成設定，並會出現於電郵資料夾的帳戶清單當中。

提取電子郵件

您可以自動或手動檢查您的帳戶中的新郵件。請參閱「變更電子郵件設定」，了解如何自動查收。

如要手動查收：

- 1 依次選擇訊息和郵箱。
- 2 選擇要使用的帳戶。
- 3 選擇擷取，手機將會連接到電郵帳戶並擷取新訊息。

透過新帳戶發送電子郵件

- 1 選擇訊息，然後選擇新增。
- 2 選擇電郵，則系統會開啟一封新電郵。
- 3 使用標籤及選項，輸入收件者的地址並寫入您的訊息。使用插入，可附加圖像、影片、聲音或其他檔案類型。
- 4 選擇發送，您的電子郵件便會發出。

提示！ 您可將 Word、Excel、PowerPoint 及 PDF 檔案電郵給您的 KF750，以便在外出時亦可查看。

變更電子郵件設定

您可調整電郵設定，以便可按您的偏好使用電郵。

- 1 選擇訊息，然後開啟設定。
- 2 選擇電子郵件，然後您可調整以下設定：

允許回覆電郵 - 選擇開啟或關閉允許發送「閱讀確認」訊息。

要求回覆電郵 - 選擇開啟或關閉要求接收「閱讀確認」訊息。

擷取時隔 - 選擇 KF750 查收新電郵的頻率。

轉寄與回覆時加入原始訊息 - 選擇是否包含原始訊息。

包括附件 - 選擇是否加入原始附件。

在漫遊中自動接收 - 選擇在國外時，是自動接收訊息或停止接收。

新電子郵件通知 - 選擇是否要獲得新電郵的通知。

簽名 - 建立電郵簽名並啟用此功能。

重要性 - 選擇電郵的優先等級。

01

02

03

04

05

06

07

08

訊息

訊息資料夾

KF750 訊息中使用的資料夾結構可輕鬆辨識。

收件匣 - 收到的所有訊息將置於您的收件匣中。您可從此處進行回覆、轉寄等操作，詳情請見下方說明。

郵箱 - 接收到的所有電郵會置於您的收件匣中。

草稿 - 若不夠時間完成訊息，您可將寫完的部份儲存於此處。

寄件匣 - 這裡是發送中的訊息之臨時存放資料夾。

已發送項目 - 所有已發送的訊息將置於您的「已發送項目」資料夾中。

我的資料夾 - 您可管理此資料夾中的訊息。

管理訊息

您可使用收件匣來管理您的訊息。

- 1 依次選擇訊息和收件匣。
- 2 選擇「選項」然後選擇：
 - 回覆** - 回覆所選訊息。
 - 轉寄** - 將所選訊息發送給他人。
 - 通話** - 向您的寄件者撥打語音或視像通話。
 - 刪除** - 刪除訊息。

建立新訊息 - 開啟新的空白訊息或電郵。

標記/取消標記 - 標記您的訊息以便進行多重刪除。

複製及移動 - 複製或移動訊息至手機、智能咭 或我的資料夾。

篩選 - 按類型來檢視訊息。這樣可將文字訊息與多媒體訊息分開並歸為一組。

訊息資訊 - 參閱訊息的其他資訊，包括發送、到達和讀取報告的時間。

看到無足夠空間儲存智能卡訊息這則訊息時，請從收件匣中刪除部份訊息。

看到無足夠空間儲存訊息這則訊息時，您可透過刪除訊息或已儲存的檔案來釋放空間。

使用常用範本

為您最常發送的文字訊息及多媒體訊息建立範本。您會發現手機上已存有部份範本，您可根據需要對其進行編輯。

- 1 選擇訊息，然後選擇常用範本。
- 2 選擇文字範本或多媒體範本。然後，您可選擇選項以新增、編輯、刪除或刪除全部範本。

使用情感圖示

情感圖示令您的訊息更添生氣。您會發現手機上已存有一些常用情感圖示。

- 1 選擇訊息，然後選擇表情圖示。
- 2 選擇選項新增、編輯、刪除或刪除全部表情圖示。

變更文字訊息設定

您的 KF750 已預先定義訊息設定，以便您可立即發送訊息。如果您要變更設定，可按以下指示執行操作。依次選擇訊息、設定和文字訊息。您可對以下各項進行變更：

文字訊息中心 - 為您的訊息中心輸入詳細資料。

發送報告 - 選擇是否要就已發送的訊息接收確認訊息。

有效時期 - 選擇訊息要在訊息中心中保留多久。

訊息類型 - 將您的文字轉換為語音、傳真、X.400 或電子郵件。

字元編碼 - 選擇訊息中字元的編碼方式，這將影響到您的訊息大小，進而影響數據費用。

發送長文字時設為 - 選擇以多個文字訊息或多媒體訊息的方式發送。

變更多媒體訊息設定

您的 KF750 已預先定義訊息設定，以便您可立即發送訊息。如果您要變更設定，可按以下指示執行操作。依次選擇訊息、設定和多媒體訊息。您可對以下各項進行變更：

接收模式 - 選擇本地或漫遊網絡。隨後若選擇手動，您只會先收到多媒體訊息通知，以便您決定是否進行完整下載。

發送報告 - 選擇是否要求或允許發送報告。

閱讀回覆 - 選擇是否要求或允許閱讀回覆。

重要性 - 選擇多媒體訊息的優先等級。

有效時期 - 選擇訊息要在訊息中心中保留多久。

投影片播放時間 - 選擇幻燈片在屏幕上的顯示時間。

發送時間 - 在指定時間發送您的訊息。

多媒體訊息中心 - 為您的訊息中心輸入詳細資料。

01

02

03

04

05

06

07

08

訊息

變更其他設定

選擇訊息，然後選擇設定和：

服務訊息 - 選擇要接收還是阻止服務訊息。您亦可透過建立受信任的和不受信任的寄件者清單來設定您的訊息安全性。

資訊服務 - 選擇您的區域廣播、頻道或語言。


相機

快速拍照

- 1 長按手機右側的按鍵，相機的取景器會顯示在屏幕上。
- 2 水平握住手機，將鏡頭對準拍照對象。
- 3 輕按拍攝按鈕，對焦方塊會顯示在取景器屏幕的中央。
- 4 定位手機，以便您在對焦方塊中看到拍照的對象。
- 5 當對焦方塊變綠，則表示相機對焦完成。
- 6 完全按下拍攝按鈕。

拍攝照片後

拍攝的照片會顯示在屏幕上。圖像的名稱會同右側的五個圖示一起顯示在屏幕。

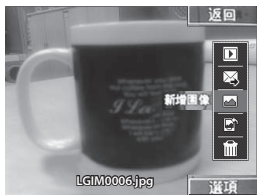

返回 返回到上一個功能表。

- ▶ 檢視相簿中已拍攝的照片。
- ✉ 以訊息、電子郵件、藍芽或 Blog 內容方式發送相片。請參閱第 29 頁了解如何發送訊息，或參閱第 70 頁了解如何使用藍芽發送和接收檔案。
- 🖼️ 新增圖像: 直接拍攝另外一張照片。當前照片將會被儲存。
- 📄 將圖像用作牆紙、通訊錄圖像或開機圖像或關機圖像中。
- 🗑️ 刪除剛剛拍攝的照片並點按是確認。取景器將再次出現。

提示! 在相機模式下，選擇播放圖示，可開啟相簿。請參閱第 40 頁，檢視已儲存照片，了解詳情。

使用閃光燈

預設情況下，閃光燈設定為關閉，但仍存在其他選項。

- 1 從取景器右方選擇 ⚡ 以設定閃光燈。

01

02

03

04

05

06



07

08

相機

調節亮度

亮度定義圖像在有光和黑暗中的區別。低亮度會將圖像顯示得較模糊，而高亮度會將圖像顯示得較清晰。

- 1 選擇設定中的亮度。
- 2 將亮度指示符沿列向  點按觸控鍵，亮度將降低，獲得的圖像較模糊，向  點按觸控鍵，亮度將升高，獲得的圖像較清晰。

選擇拍攝模式

- 1 選擇設定開啟可用的拍攝模式。
- 2 從以下五個選項中選擇：
 - 標準拍攝** - 這是預設拍攝類型，照片將如第 35 頁的快速拍照所述，以正常方式拍攝。
 - 連環拍攝** - 此功能可讓您自動快速而連貫地拍攝九張照片。參閱以下的連拍模式，了解詳情。
 - 畫框拍攝** - 從有趣畫框中選擇一個，以將朋友轉換為私密或僅用來裝飾周圍環境。
 - 超廣角** - 此拍攝類型尤適用於為大型人群拍照或拍攝超廣角圖片。詳情請參閱第 37 頁的拍攝超廣角圖片。
 - 音樂影片拍攝** - 您可以選擇歌曲，再拍攝相片。

使用連環拍攝模式

連環拍攝模式特別適用於拍攝移動物體或體育賽事。

- 1 選擇連環拍攝。
- 2 在取景器中定位對象並於要拍攝標準照片時，按拍攝按鈕。
- 3 相機將以快速連續的方式拍攝九張照片，並顯示第一張照片，而八張縮圖會顯示在屏幕下方。
- 4 透過選擇縮圖選擇要保留的拍攝：按一次為檢視，並選擇儲存進行儲存。

使用畫框拍攝模式

畫框拍攝可用於將朋友轉換為私密或使用畫框來裝飾其周圍環境。

- 1 選擇畫框拍攝功能表。
- 2 確定有趣畫框中主題並按拍攝按鈕。

拍攝超廣角圖片

使用超廣角拍攝模式，拍出的照片栩栩如生。相機會讓您拍攝三張圖片，成一條線排列，且將其合併為一張圖像，這樣，闊屏幕檢視便成為全景照片。

- 1 選擇超廣角。
- 2 按常規方式來拍攝第一張相片。圖像右側的鏡像版本會顯示在取景器中。
- 3 拍攝第二張和第三張照片時，將會顯示新一張圖像於取景器中，最後三張圖像會並排。
- 4 在相簿中，圖片將以一張全景圖像儲存。

注意：由於圖片大小的緣故，在「相簿」視圖中，顯示的全景圖片會略為縮小。

01

02

03

04

05

06

07

08

相機

使用進階設定

從取景器，選擇設定，然後開啟其他選項中的所有進階設定。

大小 - 變更相片大小，以儲存在記憶體空間中，或拍攝預設圖片，為通訊錄更正大小。請參閱第 39 頁的變更圖片大小。

場景模式 - 設定相機，以根據環境調整。從自動、人像、風景、夜間、沙灘、運動和派對中選擇。

亮度 - 設定相機取景器中圖像的對比度。

效果 - 選擇要套用到拍攝相片的色調。請參閱第 39 頁的選擇色調。

白平衡 - 白平衡可確保照片中的任何白色顯示得真實。為了使相機正常調整白平衡，您可能需要確定光線條件。從自動、日光、陰天、照明燈或室內中選擇。

計時器 - 計時器讓您設定按拍攝按鈕後的延遲時間。可供選擇的選項為：關閉、3 秒、5 秒或 10 秒。適宜於拍攝也要包括您在內的群組相片。

拍攝模式 - 請參閱第 36 頁。

ISO - ISO 決定相機光線感應器的敏感度。ISO 越高，相機感光性越好。此選項在光線較暗的環境下且閃光燈亦無法使用的情況下較有效。從自動、ISO 100、ISO 200、ISO 400 或 ISO 800 中選擇 ISO 值。

質素 - 變更相片大小，以儲存在記憶體空間中。請參閱第 39 頁的變更圖片大小。

微距 - 微距模式讓您拍攝距離相當近的照片。若您嘗試拍攝距離超近的照片，但對焦方塊仍顯示為紅色，此時最好開啟微距模式。

從取景器，選擇右邊的微距圖示，從而開啟微距模式。

記憶體使用裝置 - 選擇是將照片儲存至手機記憶體，還是儲存至外置記憶體。

隱藏圖示 - 設定是否自動隱藏取景器側面的圖示。

對焦模式 - 選擇對焦方式。

聲音 - 從三種門聲音中選擇一種。

注意：選擇新設定後，始終選擇儲存以執行作出的變更。

提示！ 結束相機時，所有設定將返回為預設情況，但圖片大小和圖片品質除外。所需的任何非預設設定需要重設，如色調和ISO。拍攝下一張照片前，需要進行檢查。

提示！ 設定功能表疊加在取景器上，這樣，當變更圖像色彩或質量的要素時，您將能夠在設定功能表後的預覽中查看到圖像變更。結束並套用任何變更前，記住選擇儲存。

變更圖片大小

像素越高，檔案大小越大，從而佔據的記憶體空間便越多。若要使手機或記憶卡儲存更多的照片，請變更圖片像素，以縮小檔案大小。

- 1 從取景器，選擇右下角的設定。
- 2 選擇大小。
- 3 從以下六個數字選項（5M：
2592x1944、3M：2048x1536、
2M：1600x1200、1M：1280x960、
640x480、320x240）選擇像素值或
選擇預設值：

通訊錄 - 此選項設定相機拍攝大小最適合的相片以便新增至手機通訊錄。

- 4 選擇要使用的大小選項，並點按選擇以執行變更。設定功能表將返回上一頁，以備選擇其他設定。

選擇效果

- 1 從取景器，選擇右下角的設定。
- 2 選擇效果。
- 3 存在以下十二個選項：關閉、黑白、負片、復古、藍色、浮雕、素描、紫色調、藍色調、單色、邊緣圖 或 色調分離。
- 4 選擇要使用的效果並選擇選擇。
- 5 作出選擇後，會返回上一頁，以備選擇其他設定。

提示！ 您可將拍攝的彩色照片顏色變更為黑白或復古，但您無法將黑白色或復古等效果照片變為彩色。

01

02

03

04

05

06

07

08

檢視已儲存照片

- 1 您可從圖示功能表頂部的相機模式和「相簿」存取已儲存的相片。
- 2 相簿將顯示於屏幕上。
- 3 選擇要檢視的相片，使其顯示於屏幕。
- 4 再次選擇相片，以便完全開啟。

將相片設定為牆紙或通訊錄圖像


從圖像相簿，選擇圖像和使用方式，將圖像用作牆紙或通訊錄圖像。

注意：通訊錄圖像僅能新增至儲存至手機（而不是智能咭）的通訊錄。

提示！ 您亦可使用觸控屏幕存取您的相片。按手機右側的觸控媒體鍵，並點按相片圖示。然後，透過點按屏幕，檢視相片。

視像攝錄機

拍攝快速影片

- 1 將相機模式開關移至 。攝影機的取景器將顯示於屏幕上。
- 2 水平握住手機，將鏡頭對準拍攝對象。
- 3 按一下拍攝按鈕，開始錄製。
- 4 REC 將出現在取景器的底部。


錄製影片後


已錄製的影片會顯示在屏幕上。圖像的名稱會和五個圖示一起顯示在屏幕上。

 檢視影片相簿。

 播放檔案。

 新增影片。

 以訊息、電子郵件、藍芽或 YouTube 方式發送影片。請參閱第 29 頁了解如何發送訊息，或參閱第 70 頁了解使用藍芽發送和接收檔案。



 刪除剛剛錄製的影片，透過點按「是」予以確定。取景器將再次出現。

提示！ 選擇相簿圖示，開啟影片相簿。參閱第 44 頁的檢視照片及影片，了解詳情。

調節亮度

亮度定義圖像在有光和黑暗中的區別。低亮度會將圖像顯示得較模糊，而高亮度會將圖像顯示得較清晰。

1 選擇 。

2 將亮度指示符沿列向  點按觸控鍵，亮度將降低，獲得的圖像較模糊，向  點按觸控鍵，亮度將升高，獲得的圖像較清晰。

使用進階設定

從取景器，選擇設定，然後開啟其他選項中的進階設定。

錄製速度 - 您可以慢速影片、標準或快速影片。

大小 - 變更影片大小以儲存於記憶體中。參閱第 42 頁的變更影片圖像大小。

場景模式 - 設定圖像，以根據環境調整。從自動、人像、風景、夜間、沙灘、運動和派對中選擇。

效果 - 選擇要套用到拍攝相片的效果。參閱第 43 頁的選擇特殊效果。

白平衡 - 白平衡可確保照片中的任何白色顯示得真實。為了使相機正常調整白平衡，您可能需要確定光線條件。從自動、日光、陰天、照明燈或室內中進行選擇。

01

02

03

04

05

06

07

08

視像攝錄機

音樂影片拍攝 - 透過設定各種類型，錄製影片。

質素 - 變更相片大小，以儲存在記憶體空間中。請參閱變更影片大小。

長度 - 選擇訊息或標準。

從取景器，選擇設定，然後開啟預覽選項中的進階設定。

記憶體使用裝置 - 選擇將影片儲存至手機記憶體，或是儲存至外置記憶體。

隱藏圖示 - 設定相機自動隱藏取景器側邊的圖示。

語音 - 選擇靜音以錄製影片，而沒有聲音。

注意：選擇新設定後，點按「選擇」以儲存執行作出的變更。

提示！ 結束視像攝錄機時，所有設定將返回為預設情況，但影片大小除外。所需的任何非預設設定需要重設，如效果和平衡。錄製下一段影片前，需要進行檢查。

變更影片大小

像素越高，檔案越大，從而佔據的記憶體空間便越多。若要使手機儲存更多的影片，請變更像素數目，以縮小檔案大小。

1 從設定功能表，選擇大小。

2 從四個選項中選擇像素值：

640x480 - 最高品質的闊屏幕選項。

320x240 - 圖像大小較小，從而佔用的檔案空間較小。適合於節省記憶體空間。

176x144 - 圖像大小較小，從而佔用的檔案空間較小。

16:9 - 闊屏幕選項。

3 選擇要使用的大小選項，並點按選擇以執行變更。設定目錄將自動關閉，為拍攝影片作好準備。

選擇特殊效果

- 1 依次選擇設定和效果。
- 2 存在以下十二個選項：關閉、黑白、負片、復古、藍色、浮雕、素描、紫色調、藍色調、單色、邊緣圖 或色調分離。
- 3 選擇要使用的效果並點按選擇。
- 4 作出選擇後，目錄會返回上一頁，以備選擇其他設定。

觀看已儲存影片

- 1 選擇相簿圖示。相簿將顯示於屏幕上。
- 2 選擇要檢視的影片，點按至所需影片相簿的最前端。
- 3 再次選擇影片，以便完全開啟。

01

02

03

04

05

06

07

08

照片及影片

編輯相片簿選項功能表

您可使用相片簿中「選項」功能表來檢視和編輯圖像。

檢視 - 檢視圖像。

發送 - 將圖像發送給朋友。

刪除 - 刪除圖像。

使用方式 - 設定圖像為牆紙/通訊錄圖像/開機圖像或關機圖像。

播放投影片 - 以投影片播放圖像。

編輯 - 編輯圖像。

列印 - 透過藍芽或PictBridge列印圖像檔案。

日期顯示 - 設定日期顯示選項。

編輯視像簿選項功能表

您可使用視像簿中「選項」功能表來檢視和編輯視像。

播放 - 播放影片。

發送 - 將影片發送給朋友。

刪除 - 刪除影片。


使用方式 - 將影片用作鈴聲。

重新命名 - 為視像重新命名。

編輯 - 編輯影片。

日期顯示 - 設定日期顯示選項。

檢視照片及影片


- 1 拍攝相片或錄製影片後，選擇相簿。
- 2 相簿將顯示於屏幕上。
- 3 選擇要檢視的影片或照片，使其顯示於屏幕。
- 4 再次選擇以便完全開啟。
- 5 影片將自動開始播放。要暫停播放，請選擇 。


提示！ 您可刪除相片或影片。選擇相片或影片，然後依次選擇選項和刪除。選擇是確認。

檢視影片時調節音量


要調節影片中的語音音量，按手機側的音量鍵。或者，使用觸控板上的上下箭頭。

從影片中擷取圖像

- 1 選擇要從其擷取圖像的影片。
- 2 點按  以暫停要將其轉換為圖像的邊框上的影片，並點按選項以開啟選項功能表。
- 3 從選項功能表，選擇「拍攝」。
- 4 圖像將顯示於屏幕上，且包括其指定的圖像名稱。
- 5 選擇「確定」。
- 6 選擇「返回」返回到我的影片。
- 7 圖像將儲存於「我的檔案」資料夾中並顯示於相簿中。您需要結束相簿，然後重新開啟才可顯示。

 **警告：**若未在手機上記錄多媒體檔案，部份功能將無法正常使用。

從相簿發送照片或影片

- 1 選擇兩次照片或影片，予以開啟。選擇影片後，按  開始播放。
- 提示！** 您可重新命名相片或影片。選擇相片或影片，然後依次選擇選項和檔案-重新命名。為照片或影片輸入新名稱。
- 2 選擇左觸控鍵開啟選項功能表。
 - 3 選擇發送並選擇如何發送影片或照片：訊息、電子郵件和藍芽。
 - 4 選定的訊息應用程式會開啟，這樣，您可以發送影片或照片。

注意：透過多媒體訊息發送前，照片或影片可能需要重新調整大小。部份影片太大，無法透過多媒體訊息發送，在這種情況下，請選擇其他發送選項。

01

02

03

04

05

06

07

08

照片及影片

以投影片放映形式檢視照片

投影片模式將以投影片放映的形式，一次一張顯示相簿中所有照片。影片無法以投影片形式檢視。

- 1 選擇要開始投影片放映的相片，並點按兩次予以開啟。
- 2 選擇左觸控鍵開啟「選項」功能表。
- 3 選擇播放投影片，即可開始放映。

設定相片為牆紙

- 1 按兩下要將其設為牆紙的相片，予以打開。
- 2 選擇左觸控鍵開啟「選項」功能表。
- 3 選擇使用方式 - 牆紙。

編輯照片

可對照片執行多項操作，如變更或保持原樣。

- 1 開啟要編輯的相片，並選擇選項。
- 2 選擇檔案 - 編輯。
- 3 選擇圖示以調整相片：



左右旋轉圖像。



變更相片大小。



往圖像中插入圖示。



剪輯圖像為 640X480、320X240、176X146、160X120、

通訊錄大小、牆紙大小、從用戶指定。



扭曲圖像。



將色調變更為黑白、復古或彩色負片等特別效果。



變更或新增畫框到圖像。



反轉圖片到鏡像圖像。



使用變形、哈哈鏡或聚光燈變更圖像。

在照片中加入效果

- 1 從編輯屏幕，選擇「特別」效果或「畫框」效果。
- 2 選擇後，將兩個選項的任何一個應用於相片：

特別效果 - 變更片顏色為黑白、復古或彩色負片。

畫框效果 - 將畫框新增至相片中。選擇所需的畫框類型。選擇確定，使選定的畫框疊加於相片上。

- 3 要取消效果，只需要選擇復原。

使照片變形

使照片變形最適宜於變更朋友的面部表情或僅僅扭曲照片，以獲得藝術化的效果。

- 1 從編輯屏幕，依次選擇「更多」和「變形」。
- 2 如果未偵測到圖片的面部，則系統會顯示一則快顯訊息「未偵測到臉孔」，而變形效果將會取消。
- 3 如果偵測到面部，則首個變形樣式將會套用於圖片。
- 4 選擇要用於相片的變形樣式。
- 5 選擇變形強度。。
- 6 選擇「確定」套用變更。

對相片使用聚光燈

- 1 在圖像上選擇所需的位置。
- 2 移動聚光燈。
- 3 選擇「確定」套用變更。

提示！ 使用哈哈鏡功能，將圖像的左側部分複製到右側，以使得圖片更有趣。

編輯影片

編輯功能可用於除 640x480 外的所有視像類型。若要編輯影片，則請勿採用此格式來錄製。

裁剪影片長度

- 1 選擇要編輯的影片，並點按「選項」。
- 2 依次選擇檔案 - 編輯和「裁剪」。
- 3 選擇「開始」和「結束」，標記新的開始和結束點。

01

02

03

04

05


06

07

08


照片及影片

合併兩段影片

- 1 選擇要編輯的影片，並選擇「選項」。
- 2 依次選擇檔案 - 編輯和「影片合併」。
- 3 「我的影片」資料夾將開啟。選擇要合併的影片並選擇「選擇」。
- 4 選擇「效果」，選擇合併影片的方式：無、淡出、搖攝變焦、橢圓、揭露、百葉窗、棋盤或分解。
- 5 按  儲存新合併的影片。選擇在原始檔案上儲存，或儲存為新檔案。
- 6 重複這些步驟，合併其他新影片。

合併照片和影片

- 1 選擇要編輯的視像，並選擇「選項」。
- 2 依次選擇檔案 - 編輯和「圖像合併」。
- 3 「我的圖像」資料夾將開啟。選擇要合併至視像中的相片並選擇「選擇」。
- 4 選擇合併至影片的開頭或結尾。

- 5 選擇「效果」，選擇合併相片和影片的方式：無、淡出、搖攝變焦、橢圓、揭露、百葉窗、棋盤或分解。
- 6 按 。選擇在原始檔案上儲存，或儲存為新檔案。
- 7 重複這些步驟，合併其他新相片。

在影片中加入文字

- 1 選擇要編輯的影片，並選擇「選項」。
- 2 依次選擇檔案 - 編輯和「文字覆疊」。
- 3 使用鍵盤輸入文字並選擇「儲存」。
- 4 選擇要在其上顯示文字的屏幕區域。
- 5 選擇「開始」並標記何時顯示文字。
- 6 選擇「取消」標記何時使文字消失。
- 7 選擇「儲存」予以儲存。選擇在原始檔案上儲存，或儲存為新檔案。
- 8 重複這些步驟，為其他影片新增文字。

覆疊照片

- 1 選擇要編輯的影片，並選擇「選項」。
- 2 依次選擇檔案 - 編輯和「圖像覆疊」。
- 3 「我的圖像」資料夾將開啟。選擇要覆疊影片的相片，並選擇「選擇」。
- 4 選擇要在其上顯示相片的屏幕區域。若照片太大，則會覆疊整個屏幕，而不只是所選區域。
- 5 選擇「開始」並標記何時顯示相片。
- 6 選擇結束標記何時使相片結束。
- 7 選擇「儲存」予以儲存。選擇在原始檔案上儲存，或儲存為新檔案。
- 8 重複這些步驟，為其他相片新增。

新增聲音錄製

- 1 選擇要編輯的視像，並選擇「選項」。
- 2 依次選擇檔案 - 編輯和「聲音錄製」。原本聲音品質將受到新增錄音的影響。
- 3 選擇「是」繼續。
- 4 按「播放」檢視影片。達到要錄製語音的位置時，按「暫停」。
- 5 按開始錄音和結束停止錄音和影片結束。
- 6 選擇在原始檔案上儲存，或儲存為新檔案。
- 7 重複此步驟，新增更多聲音錄製至影片中。

01

02

03

04

05

06

07

08

照片及影片

在影片中加入原聲帶

- 1 選擇要編輯的視像，並選擇「選項」。
- 2 依次選擇檔案 - 編輯和「配音」。
- 3 「我的聲音」資料夾將開啟。選擇要新增至影片中的曲目並點按「選擇」。
- 4 影片的原始音效錄音將被清除。
- 5 若視像檔案長過音頻檔案，則選擇是「一次」，還是「重複」播放。
- 6 選擇在原始檔案上儲存，或儲存為新檔案。

變更影片時間

- 1 選擇要編輯的視像，並選擇「選項」。
- 2 依次選擇檔案 - 編輯和「時間調整」。
- 3 選擇四種時間選項中的一種：x4、x2、x1/4、x1/2。
- 4 選擇在原始檔案上儲存，或儲存為新檔案。

新增變暗效果

- 1 開啟要編輯的影片，選擇「選項」。
- 2 依次選擇檔案 - 編輯和「變暗效果」。
- 3 選擇在原始檔案上儲存，或儲存為新檔案。
- 4 現在，影片會在開始時淡入，在結束時淡出。

多媒體

您可將任何多媒體檔案儲存在「我的檔案」中的手機記憶體中，以便輕鬆存取所有圖片、聲音、影片和遊戲。您亦可將檔案儲存至記憶咭中。使用記憶咭的好處在於，您可以釋放手機記憶體的空間。

圖像

我的圖像包括圖片清單，其中有預載至手機的預設圖像和透過手機相機拍攝的圖像。

我的圖像選項功能表

圖片中可用的選項取決於選取的圖像類型。所有選項將可用於手機相機上拍攝的圖片，但僅使用方式、排序方式、多格子/列表檢視、檔案資訊和記憶體管理選項可用於預設圖像。

發送 - 將圖像發送給朋友。

使用方式 - 將圖像設定為特定時間顯示於手機上。

移動 - 將圖像從手機記憶體移至我的記憶咭，反之亦然。

複製 - 將圖像從手機記憶體複製至我的記憶咭，反之亦然。

刪除 - 刪除圖像。

標記/取消標記 - 選擇多個檔案。

列印方式 - 透過藍芽或PictBridge列印圖像。

檔案 - 重新命名、編輯或檢視檔案資訊。

建立新資料夾 - 在我的圖片資料夾內建立新資料夾。

播放投影片 - 開始播放投影片。

排序方式 - 按特定次序排列圖像。

多格子/列表檢視 - 以多格子或列表類型檢視每個圖像。

記憶體管理 - 檢視記憶體狀態。

發送照片

- 1 依次選擇「我的檔案」和「我的圖像」。
- 2 選擇要發送的相片，並點按選項。
- 3 選擇發送並從訊息、電子郵件、藍芽或Blog內容中進行選擇。
- 4 若選擇訊息或電子郵件，則照片會附加至訊息中，您亦可正常編寫和發送訊息。若選擇藍芽，手機會提示您開啟藍芽，並搜尋要向其發送圖片的裝置。

01

02

03

04

05

06

07

08

多媒體

使用圖像

您可選擇用作牆紙或屏幕保護程式的圖像，或甚至將其用於識別來電者。

- 1 依次選擇「我的檔案」和「我的圖像」。
- 2 選擇圖像，並點擊選項。
- 3 點按使用方式並選擇以下一項：
牆紙 - 為備用屏幕設定待機圖片。
通訊錄圖像 - 給通訊錄清單中的特定聯絡人分配一個圖像，以便在其向您致電時顯示。

開機圖像 - 設定開機時所顯示的圖像。

關機圖像 - 設定關機時所顯示的圖像。

管理圖像

- 1 依次選擇「我的檔案」和「我的圖像」。
- 2 依次選擇「選項」和排序方式。
- 3 從日期、類型或名稱中選擇。

刪除圖像

- 1 依次選擇「我的檔案」和「我的圖像」。
- 2 選擇要刪除的圖像並選擇選擇。
- 3 選擇刪除，然後選擇是以確認。

提示！ 如要快速刪除我的檔案中的任何檔案，先予以選擇，遊標會顯示，然後按下 **C** 硬鍵。選擇是予以確認。(不適用於預設檔案)

移動或複製圖像

您可以在手機記憶體和記憶咭之間移動或複製圖像。若要釋放某記憶庫中的部份空間，或要確保圖像不會遺失，您便需要進行這項作業。

- 1 依次選擇「我的檔案」和「我的圖像」。
- 2 選擇圖像，然後選擇「選項」。
- 3 選擇移動或複製。

編輯圖像

使用選項功能表，編輯圖像。

- 1 選擇多媒體功能表。
- 2 選擇媒體編輯器。
- 3 選擇圖像編輯器，並從多個選項中選擇。

標記或取消標記圖像

若要同時移動、複製、發送或刪除多個圖像，您首先要識別出它們，然後以勾號進行標記。

- 1 依次選擇「我的檔案」和「我的圖像」。
- 2 依次選擇選項和標記/取消標記。
- 3 每個圖像的右下角均會出現一個方塊。如果選擇圖像，則勾號將出現在方塊中，予以標記。
- 4 如要取消標記某圖像，只要再次選擇該圖像，以便勾號從方塊中消失。
- 5 一旦標記所有適當圖像後，選擇選項之一，套用於所有圖像。

建立投影片放映

如果要查看手機上的所有圖像，或瀏覽您擁有的內容，則可建立投影片播放，這樣就省去逐一開啟、關閉圖像的麻煩。

- 1 依次選擇「我的檔案」和「我的圖像」。
- 2 依次選擇選項和播放投影片。

檢查記憶體狀態

您可查看已使用的記憶體空間及所剩記憶體空間。

- 1 依次選擇「我的檔案」和「我的圖像」。
- 2 依次選擇選項和記憶體管理。
- 3 選擇手機記憶體或我的記憶咕。

注意：若您尚未插入記憶咕，您就無法選擇我的記憶咕。

聲音

此我的聲音資料夾包含預設聲音和錄音。您可在此處管理、發送或將聲音設定為鈴聲。

使用聲音

- 1 依次選擇我的檔案和我的聲音。
- 2 選擇預設聲音或錄音記錄。
- 3 選擇某一聲音，並選擇播放開始收聽。
- 4 選擇選項，然後選擇使用方式。
- 5 從話音鈴聲、視像鈴聲、訊息提示音、開機、關機聲音中選擇。

多媒體

影片

影片資料夾會顯示已下載的影片清單以及您在手機上錄製的影片清單。

觀看影片

- 1 依次選擇「我的檔案」和「我的影片」。
- 2 選擇影片，然後按播放。

提示！ 如要快速刪除我的檔案中的任何檔案，先按一下，遊標會顯示，然後按下 **C** 硬鍵。選擇是予以確認。(不適用於預設檔案)

在暫停影片時使用選項

在暫停模式下選擇選項，並從以下選項進行：

橫向檢視 - 在完全拍攝模式下檢視影片。

靜音/取消靜音 - 開啟/關閉聲音。

拍攝 - 將暫停中的屏幕擷取為圖片。

重複 - 重複視像檔案。

檔案資訊 - 檢視名稱、大小、日期、類型、長度、尺寸、版權和保護詳情。

發送 - 透過訊息、電子郵件、藍芽或YouTube發送影片。

刪除 - 刪除影片。

電視輸出/電視關閉

發送錄像片段

- 1 選擇一影片，然後選擇選項。
- 2 選擇發送並從訊息、電子郵件、藍芽或YouTube中進行選擇。
- 3 若選擇訊息或電子郵件，則影片段會附加至訊息中，您亦可正常編寫和發送訊息。若選擇藍芽，手機會提示您開啟藍芽，並搜尋要向其發送影片的裝置。

使用影片選項功能表

從我的影片資料夾中，您可以選擇以下選項之一：

發送 - 向好友發送影片。

移動 - 將錄像片段從手機記憶體移至我的記憶咭，反之亦然。

複製 - 將錄像片段從手機記憶體複製至我的記憶咭，反之亦然。

刪除 - 刪除影片。

標記/取消標記 - 選擇多個檔案。

檔案 - 重新命名檔案、編輯名稱或檢視檔案資訊。

建立新資料夾 - 在我的影片資料夾內建立新資料夾。

排序方式 - 按特定順序排列影片。

多格子/列表檢視 - 以多格子或列表類型檢視選項功能表。

記憶體管理 - 檢視記憶體狀態。

遊戲及應用程式

您可以將遊戲及應用程式下載到手機上，以使用其打發空閒時間。

享受 M-Toy 功能表

您可享受六種預設遊戲：飛標、全壘打大賽、魔力球、電神之錘、迷宮、釣魚。

關於 - 檢視遊戲的資訊。

設定 - 啟用遊戲時，設定聲音和震動。

重置數據 - 重設所有記錄。

退出 - 結束遊戲。

下載遊戲或應用程式

- 1 選擇遊戲的遊戲功能表，選擇應用程式的應用程式功能表。
- 2 選擇下載遊戲 / 應用程式，然後按連接。
- 3 您將會連線至有遊戲供您下載的入門網站。

提示！ 如要快速刪除我的檔案中的任何檔案，先按一下，遊標會顯示，然後按下 **C** 硬鍵。按是確認。(不適用於預設檔案)。

玩遊戲

- 1 選擇我的遊戲及應用程式。
- 2 選擇一款遊戲，並點按啟動。

使用遊戲選項功能表

在我的遊戲及應用程式資料夾中，以下選項可用：

建立新資料夾 - 在我的遊戲和應用程式功能表中建立資料夾。

排序方式 - 按日期、大小或名稱來排序遊戲及應用程式。

記憶體管理 - 檢視記憶體狀態。

01

02

03

04

05

06

07

08

多媒體

提示！ 您亦可使用觸控屏幕存取您的遊戲。按手機右側的觸控媒體鍵，點按M-Toy遊戲圖示。然後點按屏幕，存取您的遊戲。

Flash 內容

Flash 內容資料夾中包含您所有的預設及已下載 Flash 內容。

檢視 SWF/SVG 檔案

- 1 依次選擇我的檔案和 Flash 內容。
- 2 選擇檔案，然後按播放。

檢視 SWF/SVG 檔案時使用選項

在暫停模式下選擇選項，並從以下選項進行：

播放/暫停 - 暫停或繼續播放。

全屏 - 在全屏幕檢視模式下檢視 SWF/SVG（僅當選擇選項而無暫停的情況下出現）。

靜音/取消靜音 - 開啟/關閉聲音。

作為待機圖片使用 - 將 SWF/SVG 檔案設為牆紙。

檔案資料 - 檢視檔案的名稱、大小、日期、時間和類型。

文件

從文件功能表，您可檢視所有文件檔案。您可從此處檢視 Excel、PowerPoint、Word、文字和 PDF 檔案。

傳送檔案到手機

藍芽很可能是將檔案從電腦傳送到手機的最簡易方式。您也可以透過同步使用 LG PC Suite，詳細資訊請參閱第 65 頁。

接收藍芽傳送：

- 1 確保您的手機與電腦均已開啟藍芽，並已被對方偵測到。
- 2 使用電腦，透過藍芽發送檔案。
- 3 發送檔案後，在手機上選擇確定，予以接受。
- 4 該檔案應出現於您的文件或其他資料夾中。

檢視檔案

- 1 依次選擇我的檔案和文件。
- 2 選擇一個文件，然後選擇檢視。

其他

此其他資料夾用於儲存圖片、聲音、影片、遊戲或應用程式以外的檔案。其使用方式與文件資料夾相同。您可能會發現，從電腦將檔案傳送到手機時，這些檔案將出現於其他資料夾而不是文件資料夾中。若發生這種情況，您可以將其移走。

如要將檔案從其他移到文件：

- 1 選擇我的檔案，然後選擇其他。
- 2 選擇某個檔案，然後選擇選項。
- 3 選擇移動。

Muvee工作室

Muvee工作室可讓您建立配有音樂的圖像幻燈片放映。



製作電影

- 1 進入多媒體，然後選擇Muvee工作室。
- 2 選擇 **+** 以新增影像。選擇要包含的影像，然後在選項中選擇完成。
- 3 選擇式樣功能表，選擇電影樣式。
- 4 選擇播放查看建立的內容。

音樂

LG KF750 具有內置的音樂播放器，這樣，您可播放所有喜愛的曲目。要存取音樂播放器，請從主功能表選擇音樂。您可從此處存取大量資料夾：

最近播放 - 檢視所有最近播放的

全部曲目 - 包含手機上具有的所有歌曲。

演出者 - 按演出者瀏覽音樂收藏。

專輯 - 按音樂專輯瀏覽音樂收藏。

類型 - 按類型瀏覽音樂收藏。

播放列表 - 包含建立的任何播放清單。

隨機播放曲目 - 以隨機順序聆聽音樂。

01

02

03

04

05

06

07

08




多媒體

將音樂傳送至手機

將音樂傳送至手機的最簡單方式是透過藍芽或同步。您亦可使用 LG PC Suite，詳情請參閱第 65 頁。接收藍芽傳送：

- 1 確保兩個裝置均開啟藍芽，且彼此可看見對方。
- 2 選擇其他裝置上的音樂檔案並選擇透過藍芽發送。
- 3 發送檔案後，透過在手機上點按確定，予以接受。
- 4 檔案應顯示於音樂 → 全部曲目或其他資料夾。

播放歌曲

- 1 依次選擇我的音樂和全部曲目。
- 2 選擇要播放的音樂，然後選擇播放。
- 3 按下  暫停歌曲。
- 4 點按  (右) 跳至下一首歌曲。
- 5 點按  (左) 跳至上一首歌曲。

播放音樂時使用選項

選擇「選項」並從以下選項中選擇：

最小化 - 使音樂播放器屏幕消失，這樣，您可按正常方式繼續使用手機。

轉至我的音樂 - 移至我的音樂資料夾。

重複 - 重複選定的曲目。

隨機播放 - 以隨機順序聆聽音樂。

調諧器 - 設定調諧器功能表。

視覺效果 - 選擇視覺效果。

新增至播放列表 - 將檔案新增到播放列表。

檔案資訊 - 檢視歌曲的名稱、大小、日期、類型、標題、演出者、專輯、版權、說明、長度和保護詳情。


發送 - 以訊息、電子郵件或透過藍芽發送歌曲。

刪除 - 刪除歌曲。

使用方式 - 將歌曲用作鈴聲之一。

建立播放列表

透過從所有曲目資料夾中選擇歌曲項目，從而建立自己的播放列表。

- 1 依次選擇我的音樂和播放列表。
- 2 選擇新增，輸入播放列表名稱，然後按  儲存。
- 3 全部曲目資料夾將會顯示。選擇要納入播放列表的所有歌曲；記號將顯示於對應的名稱旁。

要播放播放列表，請予以選擇，然後選擇播放。

注意：要新增第二個播放列表，請選擇選項，然後選擇新增播放列表。

編輯播放列表

您可能需要不時新增歌曲，或從播放列表中刪除歌曲。要執行此操作時，您可編輯播放列表。

- 1 依次選擇音樂和播放列表。。
- 2 選擇播放列表。
- 3 選擇選項，然後選擇：

新增歌曲 - 新增更多歌曲至播放列表。標記所需歌曲並選擇完成。

上移/下移 - 將歌曲在列表中上下移動，以變更播放次序。

發送 - 以訊息、電子郵件或透過藍芽發送歌曲。

從列表移除 - 從播放列表中刪除歌曲。選擇是確認。

標記/取消標記 - 選擇多個檔案。

使用方式 - 您可將歌曲設定為音效。

檔案資訊 - 檢視歌曲檔案資訊。

記憶體管理 - 檢視記憶體狀態。

刪除播放列表

- 1 依次選擇音樂和播放列表。
- 2 選擇選項，然後選擇刪除或刪除全部以刪除所有播放列表。

使用收音機

LG KF750 手機具有 FM 收音機功能，以便您可在外出時收聽喜歡的電台節目。

注意：您需要插入耳機才可收聽收音機。將其插入到與充電器相同的插孔。

01

02

03

04

05

06

07

08

多媒體

搜尋電台

透過手動或自動搜尋電台頻道，從而進行調諧。這些電台頻道將儲存至特定頻道編號，如此一來，您就不需要重新調諧。手機中最多可儲存 50 個頻道。



自動調諧：

- 1 從多媒體，選擇 FM 收音機及選項。
- 2 選擇自動掃描，然後選擇是。找到的電台將自動分配至頻道編號。

提示！ 您可使用觸控屏幕來存取音樂。按手機右側的觸控媒體鍵，選擇 FM 收音機或音樂圖示。然後點按，並透過觸控屏幕來選擇您的音樂檔案或 FM 收音機功能。

手動調諧：

- 1 依次選擇 FM 收音機和選項。
- 2 選擇頻道清單，然後選擇要將電台存儲至的頻道編號。
- 3 輸入電台頻道，然後點按設定予以儲存。

注意：您亦可透過使用顯示在電台頻率旁邊的  (左) 和  (右)，手動調諧電台。

編輯頻道

您需要將電台移至其他頻道，以便令收聽頻率最高的電台存取起來更加容易。

- 1 依次選擇 FM 收音機和選項。
- 2 選擇頻道列表，然後選擇要變更的頻道。
- 3 從其他頻道中的一個頻道選擇電台，或手動調諧頻道至所需的頻道。

透過顯示，然後點按選項，您可編輯每個頻道。

重新命名 - 為頻道重新命名。

取代 - 為選定的頻道設定新頻率。

重設頻道 - 重設頻道。

重設所有頻道 - 重設所有頻道。

重設頻道

- 1 依次選擇 FM 收音機和選項。
- 2 依次選擇頻道列表和選項。
- 3 選擇重設頻道以重設目前頻道，或選擇重設全部頻道以重設所有頻道。每個頻道將返回至開始 87.5Mhz 頻率。

收聽電台

選擇 FM 收音機，然後輸入要收聽電台的頻道編號。

提示！ 如要改善收音機的接收效果，您可延長作為收音機天線的耳機線。

使用語音備忘錄

使用語音備忘錄錄製語音備忘錄或其他聲音。

- 1 選擇多媒體。
- 2 依次選擇語音備忘錄和選項，然後從以下選項中選擇：

長度 - 設置錄製時間。

可從 多媒體訊息大小、30 秒、1 分鐘或無限制中選擇。

質素 - 選擇聲音質素。

從特細緻、細緻或標準中進行選擇。

記憶體使用裝置 - 檢查每個記憶體的目前狀態。

轉至錄音記錄 - 開啟我的聲音中的錄音資料夾。

錄製聲音或語音

- 1 選擇多媒體。
- 2 選擇語音備忘錄。
- 3 選擇錄製開始錄製。
- 4 選擇停止即停止錄製。
- 5 在選項中選擇播放，收聽您的錄音內容。

發送錄音

- 1 完成錄音後，您可選擇「選項」。
- 2 選擇發送並從訊息、電子郵件或藍芽中進行選擇。若選擇訊息或電子郵件，則錄製會新增至訊息，且您可按正常方式進行編寫和發送。若選擇藍芽，則系統會提示您開啟藍芽。

注意：完成錄製後，選擇選項並選擇播放、發送、檔案、刪除、使用方式（將錄製用作鈴聲）或轉至錄音記錄。

01

02

03

04

05


06

07

08


記事簿

新增事項至日曆


- 1 從備用屏幕，按  並選擇記事簿。選擇日曆。
- 2 選擇要將事件新增至的日期。
- 3 依次選擇選項和新增事項。
- 4 選擇要新增約會、週年紀念或生日並選擇完成。
- 5 檢查日期，並輸入開始事件的時間。
- 6 對於約會和週年紀念，請在下方兩個時間和日期方塊中輸入完成事件的時間和日期。
- 7 若要新增主題或備註至事件，請點按標題或位置，並鍵入備註。
- 8 選擇完成，則您的事件將儲存至日曆中。方形游標會標記已儲存事件的日期，如設鬧鐘提示，事件開始時會響鈴。

提示！ 您可以在日曆中設定假期。每次選擇假日中的一日，然後選擇選項並選擇設定假期。每一日均為紅色。設定鬧鐘時，可選擇排除設定為假日的日期。

變更預設日曆檢視


- 1 從備用屏幕，按  並選擇記事簿。選擇設定。
- 2 選擇日曆點並選擇每月檢視或每星期檢視。
- 3 按完成以確認選擇。

新增項目至待辦事項

- 1 從備用屏幕，按  並選擇記事簿。
- 2 選擇待辦事項並選擇新增。
- 3 為待辦事項項目設定日期，新增備註並選擇重要性：高、中或低。
- 4 透過選擇完成，儲存待辦事項清單項目。


提示！ 選擇某個項目，並點按選項和編輯，可編輯此項目。透過選擇完成，確認修改。

發送待辦事項項目

- 1 從備用屏幕，按  並選擇記事簿。選擇待辦事項。
- 2 選擇要分享的待辦事項項目，然後選擇選項。
- 3 選擇以訊息發送。您可選擇按文字訊息、多媒體訊息、電子郵件或藍芽發送。



提示！ 您可以備份並同電腦同步日曆。請參閱第 65 頁的「電腦同步」。

新增備忘錄


- 1 從備用屏幕，按  並選擇記事簿-備忘錄。
- 2 如果不存在任何的備忘錄，則選擇「新增」。
- 3 鍵入備忘錄，然後按儲存。
- 4 下次開啟備忘錄應用程式時，備忘錄將顯示在屏幕上。

提示！ 您可以編輯現有備忘錄。選擇要編輯的備忘錄並選擇編輯。

設定鬧鐘

- 1 從備用屏幕，按  並選擇「工具」-「鬧鐘」。
 - 2 選擇「選項」並點按「新增」。
 - 3 設定鬧鐘響鈴的時間。
 - 4 選擇鬧鐘響鈴方式：一次、每天、星期一至星期五、星期一至星期六、星期六至星期日、星期六至星期三、星期六至星期四、星期日至星期四或假日除外。
 - 5 選擇  和「編輯」，為鬧鐘選擇聲音。要收聽聲音，請點按至該聲音。
 - 6 為鬧鐘新增備忘錄，並在完成鍵入後，選擇「完成」。鬧鐘響鈴後，備忘錄將出現。
 - 7 最後，您可將延後間隔設定為 5、10、20、30 分鐘、1 小時或關閉。
 - 8 完成鬧鐘設定後，選擇完成。
- 注意：您最多可設定 5 個鬧鐘。**

使用計算機

- 1 從備用屏幕，按  選擇工具。選擇「計算機」。
- 2 選擇數字鍵以輸入數字。
- 3 對於簡單的計算，請選擇所需的機能 (+, -, x, /)，然後按 =。
- 4 對於較複雜的計算，請選擇**選項**並從 +/-、sin、cos、tan、log、ln、exp、sqrt、deg 或 rad 中選擇。

01

02

03

04

05


06

07


08

記事簿


使用秒錶

- 1 從備用屏幕，按  選擇工具。選擇「秒錶」。
- 2 選擇開始開始使用秒錶。
- 3 選擇「停止」停止秒錶。
- 4 選擇「分段」，衡量每個圈速。
- 5 要重新啟動秒錶，請選選擇「恢復」。
- 6 選擇「重新設定」返回到零。

轉換單位

- 1 從備用屏幕，按  選擇工具。選擇單位轉換器。
- 2 選擇要轉換匯率、面積、長度、重量、溫度、體積還是速度。
- 3 您現在可選擇單位，輸入要轉換的值，然後輸入要轉換至的單位。
- 4 對應值將顯示於屏幕上。

新增城市至世界時間

- 1 從備用屏幕，按  選擇工具。選擇世界時間。
- 2 依次選擇選項和新增城市。開始鍵入所需的城市名稱，且其將顯示於屏幕的頂端。或者，選擇地圖，並從地圖選擇所選城市。
- 3 按選擇以確認選擇。

提示！ 如果您在國外，可透過依次選擇選項和變更目前城市，從世界時間變更您的時區。如上所述選擇所需的城市，並點按選擇。

電腦同步

您可將電腦同手機保持同步，從而確保所有重要詳情和日期相匹配，同時作為重要資料備份，讓您完全放心。

在電腦上安裝 LG PC Suit

- 1 從備用屏幕，按 。
- 2 選擇連接，然後選擇 USB 連接模式。
- 3 選擇 USB 連接模式並按一下選擇。
- 4 提供的光碟插入電腦。按一下出現在屏幕上的 LG PC Suite 安裝程式精靈。
- 5 選擇執行安裝程式時使用的語言並按一下確定。
- 6 遵循屏幕上的說明，完成 LG PC Suite 安裝程式精靈。
- 7 安裝完成後，LG PC Suite 圖示將顯示於桌面上。

連接手機和電腦

- 1 將 USB 線連接到手機和電腦。
- 2 連按兩下位於桌面上的 LG PC Suite 圖示。
- 3 按一下連線精靈和 USB。
- 4 依次按下下一步、下一步和完成。手機和電腦現已連接。

備份和還原手機資訊

- 1 如同以上所述，將手機連接到電腦。
- 2 按一下備份圖示，並選擇備份或還原。
- 3 標記要備份或還原的內容。選擇要將資訊備份至的位置或還原自其資訊的位置。按一下確定。
- 4 資訊將會備份。

01

02

03

04

05

06

07

08

電腦同步

檢視電腦上的手機檔案

- 1 如同以上所述，將手機連接到電腦。
- 2 按一下內容圖示。
- 3 所有儲存至手機上的文件、flash 內容、圖像、聲音和影片將會顯示於 LG 手機資料夾的屏幕上。

提示！ 在電腦上檢視手機的內容，有助您整理檔案、管理文件並刪除不再需要的內容。

同步處理通訊錄

- 1 將手機連接到電腦。
- 2 按一下通訊錄圖示。
- 3 選擇通訊錄同步化，然後選擇從手機匯入。現在，電腦匯入並顯示儲存至智能咭和手機的所有通訊錄。
- 4 按一下檔案並選擇儲存。現在，您可選擇要儲存聯絡人的位置。

注意：如要將通訊錄備份儲存至智能咭，請按一下位於電腦屏幕左側的智能咭資料夾。選擇屏幕頂部的編輯，然後選擇全部選擇。在通訊錄上按滑鼠右鍵，並選擇複製至通訊錄。現在按一下位於屏幕左側的手機資料夾，顯示所有號碼。

同步訊息

- 1 將手機連接到電腦。
- 2 按一下訊息圖示。
- 3 所有電腦和手機訊息將顯示於屏幕的資料夾中。
- 4 使用位於屏幕頂端的工具列以編輯和重新排列訊息。

同步您的音樂

- 1 將手機連接到電腦。
- 2 按一下音樂圖示。
- 3 已儲存的音樂檔案會顯示在音樂資料夾的屏幕上。

注意：要想使用音樂，必須滿足以下條件。

- Windows XP Service Pack 2 或更高版本。
- Windows Media Player 11 或更高版本。
- USB 連接模式必須處於使用狀態中，且音樂同步模式必須開啟。

將手機用作大容量儲存裝置

只有在您已插入記憶咭的情況下，手機方用作大容量儲存裝置。

- 1 斷開電腦與手機之連接。
- 2 從備用屏幕，按 。
- 3 選擇連接，然後選擇 USB 連接模式。
- 4 顯示大容量儲存並點按選擇。
- 5 將手機連接到電腦。手機將讀取：以USB Mass Storage Device 及以大型儲存裝置模式連線。傳送期間，請勿斷開連接。
- 6 所有手機檔案將自動儲存至電腦硬碟上。

注意：手機必須從電腦上撥出，以啟動大型儲存裝置。

注意：USB Mass Storage Device 僅備份儲存在記憶咭而非手機記憶體上的內容。要傳送手機記憶體的內容 (例如，通訊錄)，您需要使用電腦同步來進行同步。

DivX 連線的 PIN 碼

安裝同電腦同步軟件相同光碟上提供的 DivX 轉換器。

安裝完成後，從電腦的「程式檔案」上選擇 DivX，然後依次選擇「DivX converter」和「Converter」。

這將開啟「Converter」應用程式。使用應用程式中的箭頭，將轉換格式變更為「Mobile」。若在應用程式方塊上按一下滑鼠右鍵，並選擇「偏好」，則您可變更儲存轉換檔案的位置。

準備就緒，開始轉換檔案後，只需要將檔案拖放至應用程式中。然後，您需要為要開始的流程選擇「轉換」。完成流程後，「Conversion complete」自動彈出將顯示。現在，您可以透過使用大型儲存裝置功能（請參閱左邊了解詳情）或使用電腦同步軟件，透過內容「上載」（請參閱第 66 頁了解詳情），將轉換的檔案傳送到手機中。

01

02

03

04

05

06


07

08

瀏覽器

使用瀏覽器，您可隨時獲取最新新聞和天氣預報以及體育或交通資訊。另外，瀏覽器還可讓您下載到最新的音樂、鈴聲、待機圖片及遊戲。


存取網絡

- 1 從備用屏幕，按  並選擇瀏覽器。
- 2 要直接存取瀏覽器主頁，請選擇瀏覽器。或者，選擇輸入網址並鍵入所需的網址，然後點按開啟。

注意：連線至此服務和下載內容，需另行收費。請向網絡供應商諮詢收費詳情。

新增並存取書籤

為了方便快捷存取喜愛的網站，您可新增書籤並儲存網頁。

- 1 從備用屏幕，按  並選擇「瀏覽器」。
- 2 選擇書籤。書籤列表顯示在屏幕上。
- 3 要建立新資料夾，請依次選擇選項及建立新資料夾。為書籤資料夾輸入名稱。


- 4 要新增書籤，請選擇選項，然後點按新增到書籤。依次輸入書籤名稱和網址。
- 5 選擇完成。此時，書籤將顯示於書籤列表中。
- 6 要存取書籤，只需要捲動到此書籤，然後選擇開啟。

儲存網頁


- 1 按照以上所述操作，存取所需的網頁。
- 2 選擇選項並選擇儲存項目 - 儲存此網頁。
- 3 為網頁輸入名稱，這樣，您可方便進行識別。
- 4 選擇儲存。

提示！ 此功能亦讓您編輯儲存的網頁標題，保護或取消保護屏幕備忘錄並刪除儲存的網頁。

存取已儲存的網頁

- 1 從備用屏幕，按  並選擇瀏覽器。
- 2 選擇儲存的網頁。
- 3 選擇開啟，連接到已儲存的頁面。

檢視瀏覽器記錄

- 1 從備用屏幕，按  並選擇瀏覽器，然後選擇記錄。
- 2 可視記錄將顯示。選擇選項並選擇新增到書籤，將目前頁面新增到書籤。
- 3 依次選擇選項和列表記錄，顯示最近存儲的網頁列表。
- 4 要存取這些網頁中的一個，只要選擇所需的網頁並點按開啟即可。

使用 RSS 讀取裝置

RSS (Really Simple Syndication) 是網絡收取點格式成員之一，用於發布經常更新的內容，如 blog 內容、新聞標題或 podcasts。RSS 文件也稱為收取點、網絡收取點或頻道，包含來自關聯網站的內容概要或完整文字。

RSS 使得人們可以自動跟蹤其最愛網站的更新，這比手動查看要容易多了。

用戶可透過在閱讀器中輸入收取點連結或按一下啟動訂閱程序的瀏覽器中的 RSS 圖示，即可檢視收取點服務。閱讀器會定期檢查用戶的收取點，查看是否有新內容更新，並下載其發現的任何更新。


新增收取點

您可自己直接輸入收取點：瀏覽器 → RSS 讀取裝置 → 選項 → 新增。

更新 RSS 讀取裝置

- 1 您可選擇更新或更新所有選項。
- 2 如果您要進行自動更新，請選擇更新行程表。

變更網頁瀏覽器設定

- 1 從備用屏幕，按  並選擇瀏覽器。選擇瀏覽器設定。
- 2 您可選擇編輯網絡設定、外觀設定、快取記憶、Cookies、安全或重設設定。
- 3 變更設定後，點按選擇。

01

02

03

04

05

06

07

08

網絡功能

將手機用作數據機

即使無法用USB 線連接，KF750 亦可用作電腦的數據機，為您提供電郵和互聯網存取功能。您可以使用 USB 線或藍芽。

使用 USB 線：

- 1 確保 LG PC Suite 已安裝於電腦上。
- 2 使用 USB 線連接 KF750 手機和電腦，並啟動 LG PC Suite 軟件。
- 3 按一下電腦上的Communication。然後，按一下設定並選擇數據服務。
- 4 選擇 LG Mobile USB 數據服務並選擇確定。此時，它將顯示在屏幕上。
- 5 按一下連線，您的電腦便可透過 KF750 手機進行連線。

注意：有關使用 LG PC Suite 進行同步的詳情，請參閱第 65 頁。

使用藍芽

- 1 確保藍芽已開啟，且可見於電腦和 KF750 手機。
- 2 配對電腦和 KF750 手機，以便連線時需要密碼。
- 3 使用 LG PC 套件上的連線精靈，建立有效的藍芽連線。
- 4 按一下電腦上的Communication。然後，按一下設定。
- 5 按一下數據服務。
- 6 選擇以藍芽連線的標準數據服務並按一下確定。此時，它將顯示在屏幕上。
- 7 按一下連線，您的電腦便可透過 KF750 手機進行連線。

使用藍芽發送和接收檔案

藍芽是一種發送和接收檔案的好方法，因為不需要傳輸線，且連線方便快捷。您亦可連接手機到藍芽，以接聽來電。

發送檔案：


- 1 開啟要發送的檔案，通常為照片、影片或音樂檔案。
- 2 選擇「選項」並選擇發送。選擇藍芽。
- 3 選擇是開啟藍芽。
- 4 KF750 手機將自動搜尋範圍內其他已啟動藍芽的裝置。
- 5 選擇要將檔案發送至的裝置，然後選擇選擇發送檔案。
- 6 您的檔案將會送出。

提示！ 留意進度列，確保檔案已發送。

接收檔案：

- 1 接收檔案前，藍芽必須均設定為開啟和可見。詳情請參閱以下的變更藍芽設定。
- 2 系統顯示一則訊息，提示您接受來自寄件者的檔案。選擇是接收檔案。
- 3 您可查看到儲存檔案的位置且選擇檢視檔案或作為牆紙使用。檔案通常儲存到我的檔案中相關資料夾。

變更藍芽設定：

- 1 在備用屏幕上按 ，然後選擇連接。

- 2 依次選擇藍芽和設定。
對以下選項作出變更：

顯示我的手機 - 選擇可見、隱藏或可見 時間為1分鐘。

我的裝置名稱 - 為 KF750 手機輸入名稱。

支援的服務 - 搜尋 KF750 支援的設定檔。請參閱第 70 頁的將手機用作數據機或第 72 頁的使用藍芽耳機。

我的位址 - 搜尋您的藍芽裝置地址。

01

02

03

04

05

06

07

08

網絡功能

同其他藍芽裝置配對

透過將 KF750 手機同其他裝置配對起來，您可設定一個密碼保護連接。這意味著配對會更安全。

- 1 檢視藍芽是否為開啟和可見。您可在設定功能表中變更您的可見狀態。
- 2 依次選擇配對裝置和新增。
- 3 您的 KF750 手機將搜尋裝置。搜尋完成後，屏幕上會顯示更新和新增。
- 4 選擇要配對的裝置並輸入密碼，然後點按新增。
- 5 然後，手機將連接到其他裝置，且您必須在此裝置上輸入相同的密碼。
- 6 密碼保護藍芽連線已準備就緒。

使用藍芽耳機


- 1 檢視藍芽是否為開啟和可見。
- 2 遵循隨手機附帶的說明，將手機置於配對模式中並配對裝置。
- 3 選擇是以立即連接。KF750 手機將自動切換到耳機情景模式。

提示！ 參閱第 25 頁，了解有關藍芽接聽模式的詳情，以便在連線藍芽耳機時，可以控制如何接聽來電。

設定

在此資料夾內，您可調整各項設定，以便讓此 KF750 可彰顯您的個性。
注意：有關通話設定的詳情，請參閱第 25 頁。

變更屏幕設定

- 1 從備用屏幕，按  並選擇「設定」。
- 2 選擇屏幕設定，然後從以下選項中選擇：

屏幕主題 - 選擇桌面、開機或關機時的畫面。

功能表式樣 - 選擇用於顯示功能表的樣式。

撥號 - 設定撥號字體顯示。

字體 - 調整字體大小。

背光燈 - 選擇背光燈的維持時間。
注意：背景燈開啟時間越長，耗費的電量就越多，這樣，手機充電將更頻繁。

影像質量提升 - 您可選擇開啟或關閉。

手機主題 - 快速變更屏幕的整個外觀。


問候語訊息 - 輸入手機開機時的問候訊息。

- 3 選擇選擇儲存設定。

個人化情景模式


您可以在備用屏幕中快速變更您的情景模式。只需要點按左觸控箭頭鍵選用其他情景模式。

使用設定功能表，您便可編輯每種情景模式設定。

- 1 從備用屏幕，按下 。
- 2 選擇設定 - 情景模式，然後選擇您要編輯的情景模式。靜音情景模式只可編輯提示類型。
- 3 選擇選項並選擇編輯。
- 4 然後，您便可變更清單中的所有可用聲音和提示選項，包括鈴聲及音量、訊息提示、按鍵音設定等。

變更電話設定

您可隨意變更 KF750，以便以最適合於您的方式使用。

- 1 從備用屏幕，按下 。
- 2 選擇設定 - 手機，然後從以下清單中進行選擇。

01

02

03

04

05

06

07

08

設定

自動按鍵鎖 - 在備用屏幕下自動鎖定鍵盤並設定時間。

觸控板 - 開啟或關閉觸控板震動。

觸控屏幕效果 - 設定觸控屏幕的效果音。

語言 - 變更 KF750 的顯示語言。

省電模式 - 選擇開啟或關閉省電設定。

資訊 - 檢視 KF750 手機的技術資訊。

使用日期和時間

日期及時間 - 調整您的日期和時間設定，或選擇因應旅遊或夏令時間來自動更新時間。

變更其他設定

您的網絡商已經為您設定連線設定，因而，您可以立即享用您的新手機。若要變更任何設定，請使用此功能表。

網絡 - 您的 KF750 會自動連線至您的首選網絡。使用此功能表可變更這些設定。

互聯網設定 - 設定設定檔，連接到互聯網。

存取點 - 您的網絡商已經為您儲存此資訊。您可以使用此功能表來新增存取點。

分組數據連線 - 設定分組數據連線。

變更安全性設定

PIN 碼要求 - 設定手機，以便在開機時要求輸入 SIM 卡的 PIN 碼。

手機鎖 - 設定手機鎖，避免無授權使用。您將需要一個安全密碼。

變更密碼 - 變更密碼：PIN/ PIN2/ 安全密碼。

使用記憶體管理

KF750 手機具有三種可用記憶體：手機、智能咭和外置記憶咭（您可能需要另行購買記憶咭）。

您可以使用記憶體管理確定如何使用各記憶體，且查看可用的空間。

在備用屏幕下按 。選擇設定，然後選擇記憶體管理。

手機共用記憶體 - 檢視 KF750 手機上可用於圖像、聲音、影片、Flash 內容、多媒體訊息、電子郵件、Java 應用程式和其他的記憶體。

手機預留記憶體 - 查看手機上可用於文字訊息、通訊錄、日曆、待辦事項、備忘錄、鬧鐘、通話記錄、書簽和其他記憶體。



智能咭記憶體 - 查看智能咭上可用的記憶體。

外置記憶體 - 檢視可用於外置記憶卡的記憶體（您可能需要另行購買記憶咭）。

主要儲存裝置設定 - 選擇「手機記憶體」或「外置記憶體」。

提示！ 有關安裝記憶咭的資訊，請參閱第 16 頁。

使用飛航模式

在備用屏幕下按  開啟飛航模式，然後選擇「設定」-「情景模式」。選擇「飛航模式」，並按  予以啟用。

在飛航模式中，您不可撥打電話、連線到互聯網、發送訊息或使用藍牙。

01

02

03

04

05

06

07

08

配件

以下配件隨 KF750 手機一併提供。

充電器



USB線及光碟
在 KF750 和電腦
間建立連接並進
行同步。



電池



使用手冊
了解更多
KF750。



立體聲
耳機



注意：

- 只可用原裝 LG 配件。
- 不使用原裝 LG 配件，保養可能失效。
- 不同的地區可能有不同的配件，請向我們的地區服務公司或代理商了解更多詳情。

網絡服務

本手冊所述之無線電話經認可可用於 GSM 900、DCS 1800、PCS1900 及 W-CDMA 網絡。

手冊中提及的多項功能均為網絡服務。這些特殊服務需向您的無線服務供應商申請。使用這些網絡服務前，您必須向無線網絡供應商訂閱服務並獲取有關如何使用的說明。

技術資料

一般

產品名稱：KF750

系統：GSM 900 / DCS 1800 / PCS 1900 / W-CDMA

環境溫度

最高：+55°C（放電）；+45°C（充電）

最低：-10°C

Declaration of Conformity



LG Electronics

Suppliers Details

Name

LG Electronics Inc

Address

LG Electronics Inc, LG Twin Towers 20,
Yeouido-dong, Yeongdeungpo-gu, Seoul, Korea 150-721

Product Details

Product Name

GSM 900 / DCS 1800 / PCS 1900 / W-CDMA Terminal Equipment

Model Name

KF750

Trade Name

LG

CE 0168

Applicable Standards Details

R&TTE Directive 1999/5/EC

EN 301 489-01 V1.6.1, EN 301 489-07 V1.3.1
EN 301 489-17 V1.2.1, EN 301 489-24 V1.3.1
EN 301 511 V9.0.2
EN 301 908-1 V3.2.1 EN 301 908-2 V3.2.1,
EN 300 328 V1.6.1
EN 50360/EN 50361:2001
EN 60950-1 : 2001

Supplementary Information

Declaration

I hereby declare under our sole responsibility that the product mentioned above to which this declaration relates complies with the above mentioned standards and Directives

Name

Seung Hyoun, Ji / Director

Issued Date

21.Mar. 2008

LG Electronics Inc, Amsterdam Office
Veluwezoom 15, 1327 AE Almere, The Netherlands
Tel : +31 - 36- 547 - 8940, e-mail : seokim @ lge.com


Signature of representative



视话机软件或服务提供商而定，本手册中的部分内容可能与您的手机有所不同。

KF750 用户手册

恭喜您购买此款功能先进、外观小巧的 LG KF750 手机，它采用了最新的数字移动通信技术，专注于为您提供便利的操作。



处理旧的设备

- 1 如果某产品附有此带十字叉的带轮垃圾桶符号，则表明该产品适用于欧洲指令 2002/96/EC (European Directive 2002/96/EC)。
- 2 所有电器和电子产品应与市政垃圾分开处理，由政府或当局指定专门的垃圾收集设施。
- 3 对旧的设备的正确处理将有助于防止对环境 and 人类健康带来负面影响。
- 4 有关旧的设备处理的详细信息，请与您所在城市的相关部门、废物处理服务处或购买产品处联系。

设置	01
待机屏幕	02
基本功能	03
高级功能	04
管理功能	05
网络	06
设置	07
配件	08

内容

准则

关于安全有效使用手机的准则 8

设置

开始了解您的手机 13

安装 USIM 卡和电池 15

存储卡 17

菜单地图 19

待机屏幕

触摸屏提示 21

状态栏 22

基本功能

呼叫 23

 拨打语音电话 23

 拨打视频电话 23

 从电话本拨打语音/视频电话 23

 拨打国际电话 23

 接听和拒绝电话 24

 快速拨号 24

 拨打第二个电话 24

 DTMF 铃声 24

 查看通话记录 24

 使用呼叫转接 25

 使用呼叫限制 25

 更改常用通话设置 26

 更改视频通话设置 26

电话本 27

 搜索联系人 27

 添加新联系人 27

电话本 28

 联系人选项 28

 创建群组 28

 使用服务号码 28

 查看本机号码 28

 创建名片 29

 更改电话本设置 29

信息 30

 信息 30

 发送信息 30

 输入文本 30

 T9 预测 30

 Abc 手动 31

 设置电子邮件 31

 检索电子邮件 32

 使用新帐户发送电子邮件 32

 更改电子邮件设置 32

 信息文件夹 33

 管理信息 33

 使用模板 34

 使用图释 34

 更改文本信息设置 34

 更改多媒体信息设置 34

 更改其它设置 35

高级功能

相机.....	36	从相册发送照片或视频.....	46
快速拍照.....	36	以幻灯片显示方式查看照片.....	47
拍照后.....	36	将照片设为主屏.....	47
使用闪光灯.....	36	编辑照片.....	47
调整亮度.....	37	为照片添加效果.....	47
选择拍摄模式.....	37	变形照片.....	48
使用连拍模式.....	38	聚光照片.....	48
使用相框拍摄模式.....	38	编辑视频.....	48
拍摄全景照片.....	38	剪辑视频长度.....	48
使用高级设置.....	39	合并两段视频.....	49
更改图像大小.....	40	合并照片和视频.....	49
选择色调.....	40	为视频添加文本.....	49
查看保存的照片.....	40	叠加照片.....	50
将照片设为主屏或联系人图像.....	41	添加录音.....	50
摄像机.....	42	向视频添加原声碟.....	51
快速摄像.....	42	更改视频速度.....	51
拍摄视频后.....	42	添加淡化效果.....	51
调整亮度.....	42	多媒体.....	52
使用高级设置.....	42	图像.....	52
更改视频图像大小.....	43	“我的图像”选项菜单.....	52
选择色调效果.....	44	发送照片.....	53
观看保存的视频.....	44	使用图像.....	53
照片和视频.....	45	管理图像.....	53
编辑相册选项菜单.....	45	删除图像.....	53
编辑摄像机选项菜单.....	45	移动或复制图像.....	54
查看照片和视频.....	45	编辑图像.....	54
观看视频时调节音量.....	45	标记或去除标记图像.....	54
从视频中拍摄图像.....	46	创建幻灯片显示.....	54
		查看内存状态.....	55

内容

声音	55	使用收音机	61
使用声音	55	搜索电台	62
视频	55	编辑频道	62
观看视频	55	重置频道	62
暂停视频时使用选项	55	收听收音机	63
发送视频剪辑	56	使用录音机	63
将视频剪辑用作铃声	56	录制声音或语音	63
使用视频选项菜单	56	发送录音	63
游戏和应用程序	56		
体验 M-Toy 菜单	56	管理功能	
下载游戏或应用程序	57	管理器	64
玩游戏	57	将事件添加到日程表中	64
使用游戏选项菜单	57	更改默认日程表视图	64
Flash 内容	57	向任务列表添加项目	64
查看 SWF/SVG 文件	57	更改任务项	64
查看 SWF/SVG 文件时使用选项	57	添加备忘录	65
文档	58	设置闹钟	65
将文件传输到手机	58	使用计算器	66
查看文件	58	使用秒表	66
其它	58	换算单位	66
影片编辑器	59	向世界时间添加城市	66
创建电影	59	电脑同步	67
音乐	59	在计算机上安装 LG PC 套件	67
将音乐传输到手机	60	连接手机和电脑	67
播放歌曲	60	备份和恢复手机信息	67
播放音乐时使用选项	60	在电脑上查看手机文件	67
创建播放列表	61	同步电话本	68
编辑播放列表	61	同步信息	68
删除播放列表	61	同步音乐	68

将手机用作 大容量存储器 设备	69	使用飞行模式	77
用于 DivX 连接的 PIN 码	69	配件	78
网络		网络服务	79
浏览器	70	技术参数	79
访问网页	70		
添加并访问书签	70		
保存页面	70		
访问保存的网页	70		
查看浏览器历史记录	71		
使用 RSS 阅读器	71		
添加订阅源	71		
更新 RSS 阅读器	71		
更改网络浏览器设置	71		
网络	72		
将手机用作调制解调器	72		
使用蓝牙	72		
使用蓝牙发送和接收文件	72		
与其它蓝牙设备配对	74		
使用蓝牙耳机	74		
设置			
更改屏幕设置	75		
个性化情景模式	75		
更改手机设置	76		
使用日期和时间	76		
更改其它设置	76		
更改安全性设置	76		
使用内存管理器	77		

关于安全有效使用手机的准则

请阅读以下简单的准则。违反这些准则可能造成危险或者触犯法律。

暴露在射频能量之下

本手机符合无线电波暴露的国际准则
本手机是一种无线电发射器和接收器。其设计和制造都不能超过国际准则 (ICNIRP) 建议的射频 (RF) 暴露的发射限制。这些限制是完整准则中的一部分，为大众建立了射频的许可水平。此准则以由独立的科学组织通过定期充分地评估科学研究而制定的标准为基础。此准则包括为确保所有人员（无论年龄和健康状况）安全而设计的安全裕量。

手机的暴露标准采用一种称为“特定吸收率”或 SAR 的测量单位。国际准则中规定的 SAR 上限值为 2.0 W/kg*。SAR 测试是在所有测试的频段中以手机的最高认可功率电平进行发射时，使用标准操作位置执行的。SAR 是以最高认可功率电平来确定的，手机操作时的实际 SAR 值可能远小于最大值。这是由于手机设计以多个功率电平操作，从而只使用抵达网络所需的功率。因此一般而言，离基站越近则手机的功率输出越低。

在新款手机可销售给大众之前，必须证明它符合欧洲 R&TTE 指令。此指令是保护用户及他人健康和所需满足的必要条件。

对该手机进行测试时，人耳能够承受的 SAR 最大值为 0.5 W/kg。

本手机在用于耳朵附近的正常使用位置时，或位于距离身体以外 1.5cm 的位置时，均符合 RF 暴露准则。携带时，可使用皮带夹或底座固定，皮带夹和底座不得包含金属成分，应将手机置于身体以外 1.5cm 的位置。要传输数据文件或信息，本手机需要连接到网络。在某些情况下，如果连接不可用，数据文件和信息的传输将会延迟，直至有可用连接。传输过程中，请保持上述分离距离。对该手机进行测试时，身体能够承受的 SAR 最大值为 0.755 W/kg。

大众使用的手机的 SAR 限制为 2.0 瓦特/千克 (W/kg)，平均值超过十克薄纸。准则包括了安全裕量，以加强对公众的保护及补偿任何测量变量。SAR 值可能根据国家报道需要和网络频段而不同。

有关其它地区的 SAR 信息，请参阅 www.lgmobile.com 上的产品信息部分。

产品保养和维护

警告

仅使用经核准为用于此特定手机型号的电池、充电器和配件。使用任何其它类型可能导致适用于此手机的许可或保修失效，并可能造成危险。

- 不要拆解本机。当需要维修时，请将手机送往合格的服务技术人员处。
- 远离诸如电视、收音机或个人计算机之类的电器。
- 远离诸如暖气片或灶灶之类的热源。
- 小心不要让手机摔落。
- 不要让手机受到机械振动或撞击。
- 在任何有特殊条例要求的区域关闭手机。例如，请勿在医院使用手机，因为它可能影响敏感的医疗设备。
- 手机充电时，请勿用湿手操作手机。这可能会导致电击或手机严重受损。
- 请勿在靠近易燃物体的位置充电，因为手机可能因加热而引发火灾。
- 使用干布清洁手机外壳（不要使用如苯、稀释剂或酒精之类的溶剂）。
- 如果手机置于柔软物体之上，请不要充电。
- 应在通风条件好的位置对手机进行充电。
- 不要在烟雾或灰尘过多的环境中使用或存放手机。
- 不要将手机放在信用卡或卡式车票旁边，它可能会影响磁条上的信息。
- 不要用尖锐物体敲击屏幕，这可能会损坏手机。
- 不要将手机暴露在液体或潮气中。
- 谨慎使用如耳机之类的配件。在不必要的情况下，不要触摸天线。

关于安全有效使用手机的准则

有效的手机操作

电子设备

所有手机都可能受到干扰，这种干扰会对性能造成影响。

- 在未经允许的情况下，不得在医疗设备附近使用手机。不要将手机放在心脏起搏点上，例如，胸前的口袋内。
- 手机可能会对某些助听器造成干扰。
- 微弱的干扰可能会影响电视、收音机、个人计算机等。

行车安全

查阅有关在驾驶时使用手机的本地法律法规。

- 不要在驾驶时使用手持式手机。
- 将注意力完全集中在驾驶上。
- 如果有免提装置，请使用免提装置。
- 如果行驶条件需要，请在拨打或接听电话之前将车辆驶离道路并停车。
- 射频能量可能影响车辆内的电子系统，例如立体声音响、安全设备等。
- 当车辆配备气囊时，不要让安装的或便携式的无线设备阻挡气

囊。否则，可能导致安全气囊失效，或由于不适当的个人行为造成严重伤害。

- 如果您在外出时使用耳机收听音乐，请确保将音量设置为合理的音量级别，以便注意周围的情况。在过马路时，尤其要注意这一点。

避免对您的听力造成伤害

如果您长时间置于高音环境中，那么您的听力可能会遭到伤害。因此，我们建议您在开机或关机时不要将手机置于耳边。同时，我们还建议您将音乐和通话音量设置为合理的音量级别。

玻璃零件:

您的移动设备的有些零件由玻璃制成。这块玻璃如果您的移动设备在一个硬面被投下或，可能打破接受坚固冲击。如果玻璃打破，不要接触也不要试图去除。停止使用您的移动设备，直到玻璃被一个授权服务供应商替换

爆破区域

不要在正在进行爆破的地区使用手机。请依照有关限制，并遵守任何规章或规定。

易爆环境

- 不要在加油站内使用手机。
- 请勿在加油点或化工厂附近使用手机。
- 不要在放有手机和配件的车厢内运输或存放可燃气体、液体或爆炸品。

在飞机上

无线设备可能对飞机造成干扰。

- 登机前，请关机。
- 未经机务人员允许，不得在地面上使用手机。

儿童

将手机放在儿童接触不到的安全地方。手机中包含细小零件，如果脱落可能导致窒息危险。

紧急电话

并非在所有手机网络中均可使用紧急电话。因此，您不应仅依赖于手机的紧急呼叫功能。请向本地的服务提供商核准。

电池信息及保养

- 您无需在再次充电前对电池进行完全放电。与其它电池系统不同，本机电池不具有可能影响电池性能的记忆效应。
- 只能使用 LG 电池和充电器。LG 充电器设计为最大程度地延长电池使用寿命。
- 不要拆解电池组或将其短路。
- 保持电池组的金属触点清洁。
- 当电池不再提供合乎要求的性能时，请更换电池。在需要更换之前，电池组可以反复充电数百次。
- 如果电池已经使用很长一段时间，请对电池再次进行充电以保持最佳使用状态。
- 不要将电池充电器暴露在直射阳光下，也不要置于诸如浴室之类的高湿环境中使用。

关于安全有效使用手机的准则

- 不要将电池存放在过热或过冷的地方，这可能损害电池的性能。
- 如果用不适当的电池进行替换，可能会有爆炸危险。
- 请按制造商的说明处置用过的电池。如果可能，请循环使用电池。不要象处理家用废物一样处理电池。
- 如果要更换电池，请将其携带至 LG Electronics 授权服务点或经销商处以寻求帮助。
- 手机充好电后，请务必将充电器从墙上插座拔下，以避免不必要的耗电。

开始了解您的手机

主 LCD

- **顶部：**信号强度、电池电量及其它功能。
- **底部：**我的文档/菜单/电话本指示。

左软键/右软键

执行显示屏底部所示的功能。在待机模式下，点触左软键打开“我的文档”菜单。点触右软键连接“电话本”。

通话键

拨打电话号码并接听来电。

听筒

内置相机镜头

导航触摸键


- **在待机模式下：**
 - ☰ 联系人列表
 - ☰ 快速菜单
 - ☉ (右) 信息
 - ☉ (左) 情景模式
- **在菜单中：**在菜单间导航。

结束/电源键

挂断或拒接来电。
开机/关机。
按一次返回待机屏幕。

清除键

- 每按一下删除一个字符。

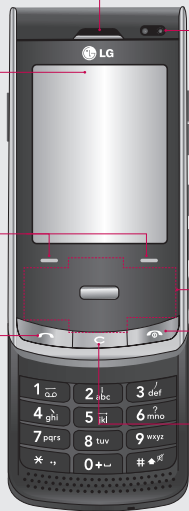

01

02

03

04

05

06

07

08

设置

13




提示：要连接 USB 数据线，请等到手机开机并注册网络。



安装 USIM 卡和电池

1 卸下电池盖

按住手机顶部的电池释放按钮，将电池盖滑出。

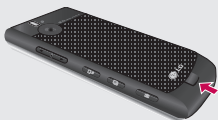

2 取出电池

握住电池边缘，使用电池盖将其从电池室中取出。




警告：不要使用指甲取出电池。

警告：手机开机时，不要取出电池，这可能会损坏手机。

3 安装 USIM 卡

将 USIM 卡滑进 USIM 卡弹夹中。确保卡的金色接触区域面朝下。要取出 USIM 卡，沿相反的方向轻推。

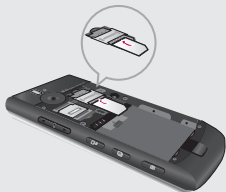

01

02

03

04

05

06

07

08


4 安装电池

先将电池顶端插入电池室顶部。请确保电池触点与手机端子对齐。向下推电池底部，直至电池卡入到位。



5 充电

滑开 KF750 侧面的充电器插槽盖。插入充电器并插入电流插座。只要屏幕上显示“已完全充电”信息，KF750 充电才完成。

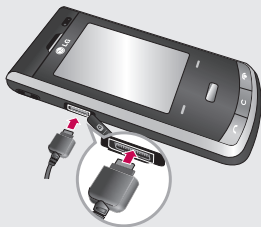

备注：应如图所示，将 KF750 充电器插入手机。

存储卡

安装存储卡

使用存储卡，可以扩展手机的可用存储空间。KF750 最大支持 4GB 存储卡。

提示：存储卡是可选配件。


- 1 像前面一样卸下电池盖。
- 2 将存储卡滑入插槽顶部，直到卡入到位。确保金色接触区域面朝下。



- 3 像前面一样替换电池盖。

格式化存储卡

如果已格式化存储卡，您可以开始使用。如果未格式化存储卡，您需要先进行格式化。

- 1 从待机屏幕中按 ，选择“设置”和“手机设置”。
- 2 选择“内存管理器”，然后选择“外部存储器”。
- 3 选择格式，然后确认选择。
- 4 输入密码（如果已设置）以格式化存储卡，现在，您可以使用该存储卡了。

提示！要更改默认存储位置，请从“手机设定”菜单选择“主存储器设置”，以打开“内存管理器”。

备注：如果存储卡中已有内容，它将自动保存在正确的文件夹中，例如，视频将自动保存到“我的视频”文件夹中。

01

02

03

04

05


06

07

08

传输电话本

将电话本从 USIM 卡传输到手机：

- 1 从待机屏幕选择 ，然后选择“电话本”。
- 2 选择“电话本设置”，然后选择“复制”。
- 3 选择“从手机到USIM卡”，然后点触“完成”。
- 4 选择“全部”或“逐个”，然后点触“完成”。

菜单地图



游戏和应用程序

- 1 M-Toy
- 2 游戏和应用程序
- 3 设置



呼叫

- 1 拨打视频电话
- 2 通话记录
- 3 通话时间
- 4 数据量
- 5 通话费用
- 6 呼叫转接
- 7 呼叫限制
- 8 固定拨号
- 9 呼叫等待
- 0 通话设定
- * 视频通话设置



管理器

- 1 日程表
- 2 任务
- 3 备忘录
- 4 私人备忘录
- 5 日期计算器
- 6 设置



多媒体

- 1 点触媒体
- 2 相机
- 3 摄像机
- 4 音乐
- 5 FM 收音机
- 6 录音机
- 7 媒体编辑器
- 8 影片编辑器



信息

- 1 创建新信息
- 2 收件箱
- 3 电子邮箱
- 4 草稿箱
- 5 发件箱
- 6 已发送
- 7 我的文件夹
- 8 模板
- 9 图释
- 0 设置



我的文档

- 1 我的图像
- 2 我的声音
- 3 我的视频
- 4 游戏和应用程序
- 5 Flash 内容
- 6 文档
- 7 其它
- 8 外部存储器

01

02

03

04

05

06

07

08

设置

19



Google

- 1 Search
- 2 Mail
- 3 Maps
- 4 Blogger
- 5 You Tube
- 6 Upload History



电话本

- 1 新增
- 2 搜索
- 3 快速拨号
- 4 群组
- 5 服务号码
- 6 本机号码
- 7 我的名片
- 8 设置



工具

- 1 快速菜单
- 2 闹钟
- 3 计算器
- 4 秒表
- 5 换算器
- 6 世界时间
- 7 USIM 服务



浏览器

- 1 主页
- 2 输入地址
- 3 书签
- 4 RSS 阅读器
- 5 已保存页面
- 6 历史记录
- 7 设置



连接

- 1 蓝牙
- 2 同步服务
- 3 USB 连接模式
- 4 TV 输出
- 5 用于 DivX 连接的 PIN 码




设置

- 1 情景模式
- 2 手机
- 3 显示
- 4 日期和时间
- 5 网络
- 6 互联网网络设定
- 7 存取点
- 8 分组数据连接
- 9 安全性
- 0 内存管理器
- * 恢复初始设定
- # 流媒体设置

待机屏幕

不使用 KF750 时，将返回待机屏。在此，您可以访问菜单选项、快速拨打电话和更改情景模式，以及其它一些操作。

触摸屏提示

如果按 ，屏幕将切换到交互式触摸屏键盘。

从待机屏幕按住触摸屏按键，进入多媒体菜单。

要选择一个项目，请准确点触触摸屏上的图标。当 KF750 识别您点触的选项时，会轻微振动。

- 无需大力按，触摸屏非常敏感，仅需点触即可。
- 使用指尖点触所需选项。请注意不要触碰到其它键。
- 不要使用手机套，使用金属套可能导致触摸屏不可用。
- 要退出触摸屏，点触右上角的主页图标一次即可。手机将返回主待机屏幕。
- 屏幕下的触式键盘可用作四向箭头盘，可用于浏览手机菜单。

提示！ 使用触摸屏可快速且轻松地访问“音乐”、“照片”、“游戏”、“电子书”和“收音机”。



触式键盘

备注：屏幕指示灯亮时，按手机右侧的相机键恢复到待机屏。

01

02

03

04

05

06

07

08

客户须知

为了使天线保持最佳的灵敏度，LG 建议您按照下图所示的方式持握手机。



通话和使用蓝牙连接期间，请不要用手遮挡天线区域。这可能降低信号质量。

状态栏

状态栏使用不同图标指示诸如信号强度、新信息和电池使用寿命等信息，以及告知您是否启动了蓝牙或 GPRS。





下表说明了您可能在状态栏中看到的不同图标的涵义。

图标	描述
	闹钟已设置
	正在使用“标准”情景模式
	正在使用“静音”情景模式
	外部存储器
	呼叫被转接
	GPRS 可用
	正在使用 EDGE
	正在漫游
	蓝牙已启动
	来电被拒绝
	3G 可用

图标	描述
	多任务
	网络信号强度（指示栏数不同）
	无网络信号
	电池电量空
	新文本信息
	新电子邮件



通话

拨打语音电话


- 1 输入电话号码，包括完整区号。
要删除一个数字，请按 。
要删除所有数字，请长按 。
- 2 按  拨打电话。
- 3 按  或关闭手机以结束通话。

拨打视频电话

您可以在 3G 覆盖服务区拨打视频电话，前提是对方拥有 3G 视频手机且位于 3G 覆盖服务区内。您也可以接听视频电话。要拨打/应答视频电话，请执行以下操作。



- 1 使用键盘输入电话号码，或者从呼入/呼出列表选择电话号码。
要更正错误，请短按  删除输入的最后一个数字，或者按住  删除所有数字。
- 2 若不想使用扬声器，请确保将耳机插入。
- 3 要启用视频功能，请按左软键 [选项]，然后选择视频电话。
要拨打视频电话，系统将通知您需要关闭其它应用程序。

备注：视频电话可能需要一定时间进行连接。请耐心等待。连接时间也取决于对方应答呼叫的速度。在视频电话连接过程中，您会看到自己的图像；在对方应答后，屏幕将显示其图像。



- 4 请根据需要调整相机位置。
- 5 按  或闭合翻盖结束通话。

从电话本拨打语音/视频电话

拨打在电话本中存有号码的联系人的电话非常方便。

- 1 点触右软键访问电话本列表。
- 2 滚动到联系人并拨打电话。
- 3 按  拨打语音电话。按左软键并选择拨打视频电话。
- 4 按  结束通话。

拨打国际电话

- 1 请长按  以输入国际前缀。“+”字符可作为国际接入码前缀。
- 2 输入国家代码、地区代码和电话号码。
- 3 按 。

01

02

03

04

05


06

07

08

呼叫

接听和拒绝电话

电话铃响起时，按  硬键接听电话。


按左软键静音。

如果您在开会时忘记将情景模式更改为“静音”，这非常有帮助。



按右软键拒接来电。

快速拨号


您可以为常用联系人指定快速拨号号码。

- 1 按 ，然后选择电话本。
- 2 选择快速拨号。
- 3 语音邮箱已设为快速拨号 1。不能对此设置进行更改。选择任意其它号码，为其指定快速拨号联系人。
- 4 此时将打开您的地址簿。点触要指定到该号码的联系人电话号码一次，以选择该联系人。

拨打快速拨号号码：

- 1 按指定的号码，然后按发送键  或  或
- 2 按住指定的号码，直到屏幕上显示该联系人。

拨打第二个电话


- 1 在初始通话过程中，点触左软键，然后选择新增呼叫。
- 2 拨打号码或搜索电话本（有关如何从电话本拨打电话的详情，请参阅第 29 页）。
- 3 按  以连接通话。
- 4 此时呼叫屏幕上将显示两个呼叫。初始呼叫被锁定，通话方进入保持状态。
- 5 选择切换在不同呼叫之间切换。
- 6 要结束一个呼叫或同时结束两个呼叫，请选择选项 → 结束，然后选择全部或活动。

备注：您需要对每通电话付费。

DTMF 铃声

DTMF 允许您使用自动消息中的数字命令导航。DTMF 默认为启动。

查看通话记录


按 ，选择通话 → 通话记录。选择以查看：

所有通话 - 查看所有拨电、已接来电和未接来电的完整列表。

拨出电话 - 查看所有已拨打的电话的列表。

已接来电 - 查看打给您的所有电话的列表。

未接来电 - 查看您没接到的所有电话的列表。

按 ，选择通话。

从“通话”中，您也可以选择以查看：


通话时间 - 查看所有拨出和接听电话的时间。

数据量 - 查看所有已接收和发送数据的字节数 (KB)。

通话费用 - 查看您拨打电话所产生的费用（此服务取决于网络，某些运营商不支持此服务）。

提示！ 从任意呼叫列表中
点触左软键，然后选择全部删除
以删除记录的条目。


使用呼叫转接

- 1 按 ，选择通话。
- 2 选择呼叫转接，然后选择语音通话和/或视频通话。
- 3 选择转接电话的情况：转接所有通话、线路忙时转接、无人接听时转接，或无法接通时转接。
- 4 输入您要转接的号码。
- 5 选择激活以激活。

备注：转接通话会产生相应费用。有关详细信息，请联系您的网络提供商。

提示！ 要关闭所有呼叫转接，请选择全部停用。

使用呼叫限制

- 1 按 ，选择通话。
- 2 选择呼叫限制，然后选择语音通话和/或视频通话。
- 3 选择以下五个选项中的一项或所有项：

所有拨出电话

拨出的国际电话

国际漫游时拨打电话

所有来电

国际漫游时来电

- 4 输入呼叫限制密码。请与您的网络运营商联系，了解有关此服务的信息。

提示！ 选择固定拨号打开并汇集一个号码列表，可从手机拨打此列表中的号码。您需要运营商提供的 PIN2 码。启动后，仅可以使用手机拨打此号码列表中的号码。

01

02

03

04

05


06

07


08

呼叫

更改常用通话设置

- 1 按 ，选择通话。
- 2 选择通话设定。在此，您可以修改以下设置：
 - 拒接来电** - 选择打开或关闭，选择拒接所有来电、拒接来自特定组、联系人的来电；或拒接未注册号码（不在电话本中或禁显号码）。
 - 发送本机号码** - 选择当您呼叫对方时是否显示您的号码。
 - 自动重拨** - 选择开或关。
 - 接听模式** - 选择是使用发送键、任意键还是打开滑盖时接听电话。
 - 分钟提示** - 选择打开，在通话过程中每一分钟将听到一次提示音。
 - 蓝牙接听模式** - 选择免提可使用蓝牙耳机接听来电，或选择手机在使用蓝牙耳机时按手机任意键接听来电。
 - 保存新号码** - 选择“是”以保存新号码。
 - 通话关闭设置** - 选择“结束通话”以在关闭滑盖时断开通话连接。

更改视频通话设置

- 1 按 ，选择通话。
- 2 选择视频通话设置。
- 3 确定是使用个人图像还是选择个人图像，然后打开镜像（可以在屏幕上看到您自己）。

电话本

搜索联系人

有两种方式可搜索联系人：

从待机屏幕


- 1 从待机屏幕中，点触右软键以打开地址簿。
- 2 选择与您要查看的联系人姓名的第一个字母对应的字母。因此，对于“Home”，请选择 E-H。

提示！ 通过点触右软键并选择按群组搜索，您可以按群组搜索。此时将显示您的所有群组列表。

从主菜单

- 1 选择电话本。
- 2 选择搜索，使用键盘输入您要查找的联系人姓名的前几个字母。
- 3 地址簿将列出与您输入的字母对应的联系人列表。

添加新联系人

- 1 按 ，然后选择电话本。
- 2 选择新增。
- 3 选择是将联系人保存到手机还是 USIM 卡。
- 4 输入新联系人的姓氏和名称。您无需同时输入姓氏和名称，但必须输入一个。
- 5 可以为每个联系人输入最多 5 个不同的号码并指定一个号码类型。从以下选项选择：手机、家庭、办公室、传呼机、传真、VT 和普通。点触确定。
- 6 最多可以添加两个电子邮件地址。
- 7 将此联系人分配到某个群组。从以下选项选择：无群组、家人、朋友、同事、同学或重要人士。
- 8 您还可以添加主页、家庭地址、公司名称、职位、公司地址和备忘录。

提示！ 您可以为联系人创建自定义群组，请参阅下面的创建群组。

01

02

03

04

05

06

07

08

电话本

联系人选项

查看联系人时，您可以执行多项操作。以下显示如何进入并使用选项菜单：

- 1 打开您要使用的联系人。请参阅第 27 页的搜索联系人。
- 2 按左软键打开选项列表。
在此，您可以：

编辑 - 更改联系人的任何详细信息。

发送信息 - 向联系人发送信息或电子邮件。有关如何发送信息的详细信息，请参阅第 30 页。

发送名片 - 将联系人的详细信息作为名片发送给其他人。选择发送方式：作为文本信息、作为多媒体信息、通过电子邮件或蓝牙。


拨打语音电话 - 呼叫联系人。

拨打视频电话 - 视频呼叫联系人。

保存到 USIM 卡/手机 - 选择是移动到或复制到 USIM 卡还是手机（取决于联系人的初始保存位置）。

删除 - 删除联系人。如果确定，请点触“是”。


创建群组

- 1 按 ，然后选择电话本。
- 2 选择群组，然后点触左软键。
- 3 选择新增群组。
- 4 输入新群组的名称。
- 5 点触完成。

备注：如果您删除一个群组，分配至该群组的联系人不会被删除。他们仍将保留在地址簿中。

提示！ 您可以突出显示现有群组并点触左软键来编辑它。选择以通过电话本向群组添加成员，指定群组铃声、重命名群组或删除群组。

使用服务号码

您可以查看由您的服务提供商分配的服务拨号号码 (SDN) (如果 USIM 卡支持)。此类号码包括紧急电话、查号台和语音邮件号码。选择服务号码后，按  呼叫服务。

查看本机号码


允许在 USIM 卡中您的电话号码。

创建名片

您可以通过选择“我的名片”和“添加”来创建自己的名片。输入姓名、号码、电子邮件和图像后，您可以在发送信息时将其用作名片。

更改电话本设置

您可以调整您的电话本设置，使地址簿符合您的需要。

- 1 按 ，然后选择“电话本”。
- 2 选择设置。在此，您可以调整以下设置：

联系人列表设置 - 选择要查看的联系人的保存位置：手机 + USIM卡、仅限手机、仅限 USIM卡。您还可以选择先显示联系人的姓还是名，以及是否显示联系人图片。

同步电话本 - 连接到服务器以同步电话本。请参阅第 68 页的“同步电话本”。

复制 - 将联系人从 USIM 卡复制到手机，或从手机复制到 USIM 卡。选择是逐个还是全部执行此操作。

移动 - 其操作与“复制”相同，但联系人进保存在移动目标位置。如果将联系人从 USIM 卡移动到手机，其将从 USIM 存储卡中删除。

通过蓝牙发送所有联系人 - 通过蓝牙将所有联系人信息发送到其它手机。

备份电话本 - 请参阅第 67 页的“备份和恢复手机信息”。

恢复电话本 - 请参阅第 67 页的“备份和恢复手机信息”。

清空电话本 - 删除所有联系人。如果确定要清空地址簿，请点触“是”。

内存信息 - 您可以查看手机或 USIM 卡上的剩余存储空间。

01

02

03

04

05

06

07


08


信息


信息

KF750 将短信、多媒体信息和电子邮件结合到一个直观易使用的菜单中。

发送信息

- 1 选择信息，然后选择创建新信息。
- 2 选择信息以发送短信或多媒体信息。或者，选择电子邮件以发送电子邮件。有关详细信息，请参阅第 31 页。
- 3 如果选择“信息”，将打开一条新短信。
- 4 选择选项，然后选择插入添加图像、视频、声音或主题。
- 5 按  发送。输入电话号码，或选择电话本以打开联系人列表。您可以添加多个联系人。

 **警告：**您将按每个收件人每条文本信息 160 个字符付费。

 **警告：**如果在短信中添加图像、视频或声音，则短信将自动转换为彩信，您需要支付相应费用。

输入文本


有两种方式可输入文本：


T9 预测和 Abc 手动。

要在文本输入法之间切换，在打开空信息时，请长按  键。

T9 预测性文本 - 打开 T9 预测性文本，然后选择 T9 abc、T9 Abc 或 123。

Abc 手动 - 选择 Abc、ABC 或 123。

要在大写、小写和标题之间切换，请按  键。

要删除一个字符，请使用屏幕下方的  硬键。

要输入符号，请选择选项，然后选择插入。

T9 预测

T9 模式使用内置字典，根据您点触按键的顺序识别您写入的内容。只需点触与您要输入的字母关联的数字键即可，输入所有字母后，字典将识别您输入的内容。例如，依次按 8、3、5、3、7、4、6、6、3 输入“telephone”。

Abc 手动

在 Abc 模式中，要输入字母，您必须重复按键。例如，要写入“hello”，需要按两次 4、两次 3、三次 5，再按三次 5，最后按三次 6。

设置电子邮件

使用 KF750 中的电子邮件，您可以在旅途中随时与他人保持联系。设置 POP3 或 IMAP4 电子邮件账户非常快捷。

- 1 选择信息，然后选择设置。
- 2 选择电子邮件，然后选择电子邮件账户。
- 3 现在，您可以选择帐户工作方式：

标题 - 输入此账户的名称。

我的名称 - 输入您的名称。

用户名 - 输入账户的用户名。

密码 - 输入账户密码。

电子邮件地址 - 输入账户的电子邮件地址。

电子邮件回复地址 - 输入“回复”电子邮件地址。

发送邮件服务器 - 输入账户的详细信息。

接收邮件服务器 - 输入账户的详细信息。

最大接收大小 - 选择电子邮件的大小限制，最大为 1MB。

邮箱类型 - 输入邮箱类型：POP3 或 IMAP4。

保存到服务器 - 选择是否将电子邮件保存到服务器。对于 IMAP4 账户，始终保存副本。

保存已发送邮件至 - 选择是否保存 IMAP4 电子邮件。对于 POP3 账户，副本始终保存在手机中。

接入点 - 选择 Internet 接入点。

自动读取 - 选择是否自动提取新电子邮件。

高级设置 - 选择是否使用高级设置。

SMTP 端口号 - 通常为 25。

接收服务器端口 - 通常，对于 POP3 账户为 110；对于 IMAP4 账户为 143。

SMTP 认证 - 选择发送邮件服务器的安全设置。

SMTP 用户名 - 输入 SMTP 用户名。

01

02

03

04

05

06

07

08

信息

SMTP 密码 - 输入 SMTP 密码。

APOP 安全登录 - 选择可为 POP3 账户激活 APOP 安全登录。

IMAP4 账户通常设置为“关闭”。

现在，已经设置了您的账户，它将显示在“电子邮件”文件夹的账户列表中。

检索电子邮件

您可以自动或手动检查账户的新电子邮件。请参阅“更改电子邮件设置”以手动查看。

手动查看：

- 1 选择信息，然后选择电子邮箱。
- 2 选择您要使用的账户。
- 3 选择检索，手机将连接到您的电子邮件账户并检索新邮件。

使用新帐户发送电子邮件

- 1 选择信息，然后选择新建。
- 2 选择电子邮件，此时将打开新电子邮件。
- 3 使用选项卡和选项输入收件人的地址，然后写邮件。使用插入附加图像、视频、声音或其它类型的文件。
- 4 选择发送，您的电子邮件将被发送。

提示！ 您可以通过电子邮件将 Word、Excel、PowerPoint 和 PDF 文档发送到 KF750，以便您可以在旅途中查看它们。

更改电子邮件设置

您可以调整电子邮件设置以满足您的个人需要。

- 1 选择信息，然后打开设置。
- 2 选择电子邮件，然后，您可以调整以下设置：

允许回复电子邮件 - 选择是否允许发送“读取确认”邮件。

请求回复电子邮件 - 选择是否要请求“读取确认”邮件。

检索间隔 - 选择 KF750 检查新电子邮件信息的频率。

在转发和回复中包含信息 - 选择是否要包含原始信息。

包含附件 - 选择可包含原始附件。

漫游时自动检索 - 选择国际漫游时是自动检索邮件还是停止自动检索。

新电子邮件通知 - 选择在收到新电子邮件时是否需要提示。

签名 - 创建电子邮件签名并打开此功能。

优先级 - 选择电子邮件信息的优先级级别。

信息文件夹

KF750 中使用的“信息”文件夹结构，完全无需进行说明。

收件箱 - 您接收到的所有信息将放置在收件箱中。在此，您可以进行回复、转发等操作，有关详细信息，请参阅以下内容。

电子邮箱 - 所有收到的电子邮件将放置在电子邮箱中。

草稿箱 - 如果您来不及写完一条信息，您可以将已写信息保存在此。

发件箱 - 这是发送信息时的临时存储文件夹。

已发送 - 您发送的所有信息将放置在“已发送”文件夹中。

我的文件夹 - 您可以在此文件夹中管理信息。

管理信息

您可以使用收件箱管理信息。

1 选择信息，然后选择收件箱。

2 选择“选项”，然后选择：

回复 - 回复选定的信息。

转发 - 将选定信息发送给其他人。

通话 - 向发件人拨打语音或视频电话。

删除 - 删除信息。

创建新信息 - 打开新的空白信息或电子邮件。

标记/去除标记 - 标记信息以执行多项删除。

复制和移动 - 将信息复制或移动到手机、USIM 卡或“我的文件夹”。

过滤器 - 按类型查看信息。这可以将短信和彩信分开。

信息 - 查看信息的其它信息，包括发送时间、接收时间及阅读报告。

如果看到信息无空间接收 USIM 卡信息，您应从收件箱中删除一些信息。

如果看到信息无空间接收信息，您可以删除信息或保存的文件以腾出空间。

01

02

03

04

05

06

07

08

信息

使用模板

为您最常使用的短信和彩信创建模板。手机中已有一些模板，您可以根据需要进行编辑。

- 1 选择信息，然后选择模板。
- 2 选择文本模板或多媒体模板。然后，您可以选择“选项”新增、编辑、删除或全部删除模板。

使用图释

使用图释，使您的信息更具趣味性。手机中已有一些常用图释。

- 1 选择信息，然后选择图释。
- 2 选择“选项”以新增、编辑、删除或全部删除图释。

更改文本信息设置

KF750 已预定义信息设置，因此，您可以立即发送信息。如果要更改设置，请根据下列步骤执行操作。

选择信息，然后选择设置和文本信息。您可以更改：

文本信息中心 - 输入信息中心的详细信息。

状态报告 - 选择可接收信息已发送确认信息。

有效期 - 选择信息在信息中心中的最常保存时间。

信息类型 - 将文本转换为语音、传真、X.400 或电子邮件。

字符编码 - 选择字符编码方式，这将影响信息大小并因此产生数据费用。将长文本另发发送为 - 选择是以多条短信还是一条彩信发送。

更改多媒体信息设置

KF750 已预定义信息设置，因此，您可以立即发送信息。如果要更改设置，请根据下列步骤执行操作。

选择信息，然后选择设置和多媒体信息。您可以更改：

检索模式 - 选择是本地还是漫游网络。如果选择手动，那么您只会收到彩信通知，随后，您可以决定是否要完整下载该信息。

状态报告 - 选择是否允许请求状态报告。

已读回执 - 选择是否允许发送已读回执。

优先级 - 选择多媒体信息的优先级级别。

有效期 - 选择信息在信息中心中的最常保存时间。

幻灯片持续时间 - 选择幻灯片在屏幕上显示多长时间。

创建模式 - 选择信息模式。

发送时间 - 在指定时间发送信息。

多媒体信息中心 - 输入信息中心的详细信息。

更改其它设置

选择信息和设置，然后选择：

信息服务 - 选择接收状态、语言和其它设置。

服务信息 - 选择是接收还是阻止服务信息。您也可以通过创建可信和不可信发件人列表来设置信息安全性。

01

02

03

04

05

06

07

08


相机

快速拍照

- 1 按手机右侧的键，此时屏幕上将出现相机取景器。
- 2 水平放置相机，将镜头对准要拍摄的物体。
- 3 轻按拍摄按钮，取景器屏幕的中间会出现一个对焦框。
- 4 使用相机定位，以便在对焦框中看到要拍摄的物品。
- 5 对焦框变绿时，表示相机已对焦好。
- 6 完全按下拍摄按钮。

拍照后

拍好的照片将显示在屏幕上。图像名称在屏幕底部显示，屏幕右侧将显示五个图标。

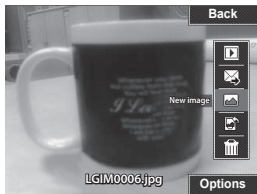

Back 返回上一个菜单。

查看“相册”中保存的您拍摄的照片。

通过多媒体信息、电子邮件或蓝牙发送照片。有关发送信息的信息，请参阅第 30 页，有关使用蓝牙发送和接收文件的信息，请参阅第 73 页。

立即拍摄其它照片。将保存您的当前照片。

将图像用作墙纸、联系人图像或开机或关机屏幕。

删除拍摄的照片，点触是确认。此时将出现取景器。

提示！ 在相机模式下，选择“播放”图标打开相册。有关详细信息，请参阅第 40 页的查看保存的照片。

使用闪光灯

闪光灯默认为关闭，此外还有其它选项。

- 1 选择取景器右上角的 进入闪光灯子菜单。
- 2 有三个闪光灯选项：

常亮 - 相机将自动评估拍摄好照片所需的光照条件，并在需要时使用闪光灯。

拍摄时 - 为了消除红眼，相机将闪光两次。



关闭 - 相机从不使用闪光灯。此选项有助于节省电池电量。

- 3 选择您要使用的闪光灯选项。
- 4 选择后，闪光灯菜单将自动关闭，您就可以拍照了。
- 5 取景器中的闪光灯图标将根据您设置的闪光灯模式而更改。

备注：无论您何时退出相机，闪光灯设置将自动转为关闭模式。当您重新打开相机时，如果需要使用闪光灯，需要重新打开。

调整亮度

对比度定义图像的深浅差别。对比度低的图像显示模糊，而对比度高的图像则显示更为清晰。

- 1 在设置中选择亮度。
- 2 沿滚动条滑动对比度指示器， 对应对比度更低、更模糊的图像， 对应对比度更高、更清晰的图像。

选择拍摄模式

- 1 选择设置打开可用拍摄模式。
- 2 从四个选项中进行选择：

标准拍摄 - 此为默认拍摄模式，照片将以标准方式拍摄，如第 40 页的“快速拍照”中所述。

连拍 - 这允许您快速地连续拍摄九张照片。有关详细信息，请参阅下面的“使用连拍模式”。

相框拍摄 - 从趣味相框中选择一个，将您的朋友化身为海盗或为其点缀环境。

全景 - 此拍摄类型对于拍摄一群人或拍摄全景非常有用。有关详细信息，请参阅第 38 页的“拍摄全景照片”。

01

02

03

04

05

06

07

08

相机

使用连拍模式

连拍模式对于拍摄移动中的物体或运动中的物体非常有用。

- 1 选择连拍。
- 2 将物体定位在取景器中，请像拍摄普通照片一样按下拍摄按钮。
- 3 相机将快速地连续拍摄八张照片，并在屏幕左侧显示第一张照片的缩略图。
- 4 通过选择缩略图选择您要保留的照片：第一次是查看，然后点触保存以保存。
- 5 在图像缩略图旁边将显示一个勾号。选择保存以退出。

使用相框拍摄模式

相框拍摄可将您的朋友化身为海盗或为其点缀环境。

- 1 选择相框拍摄菜单。
- 2 将物体定位在趣味相框中，按拍摄按钮。
- 3 通过选择保存来保存图像。

拍摄全景照片

使用全景拍摄真实记录您的生活。相机将为您拍摄三张排列的照片，并将它们组合成一张照片，以广角视图显示全景照片。

- 1 选择全景。
- 2 正常拍摄第一张照片。图像右侧以虚景显示在取景器中。
- 3 当您拍摄第二张和第三张照片时，将上一张照片的虚景处与取景器中的下一张图像连接。
- 4 在相册中，三张照片将分别保存为三张图片，同时还包括一张全景图片。

备注：由于图像大小问题，全景照片在“相册”视图中可能会轻微扭曲。

使用高级设置

从取景器中选择设置，然后打开“其它”选项中的所有高级设置。

大小 - 更改保存在内存中的照片大小，或预设的拍摄照片的大小，使其大小适用于电话本。请参阅第 40 页的更改图像大小。

场景模式 - 设置相机，使其适应环境。从自动、肖像、风景、夜间、海滩、体育和聚会中选择。

亮度 - 设置相机取景器中图像的对比度。

效果 - 选择色调以应用于拍摄的照片。请参阅第 40 页的选择色调。

白平衡 - 白平衡确保照片中的白色显示真实。要正确调整相机的白平衡，您需要确定光照条件。从自动、日光、阴天、阴影和荧光灯中选择。

定时器 - 自拍器允许您设置按下拍摄按钮后的延迟。从 3 秒、5 秒或 10 秒中选择。当您也想在照片中占有一席之地时，此选项很有用！

拍摄模式 - 请参阅第 40 页。

ISO - ISO 确定相机的光照传感器的感光性。ISO 越高，相机感光性能越好。在较黑的光照条件下，当不能使用闪光灯时，这非常有用。从

ISO 50、ISO 100、ISO 200、ISO 400 或 ISO 800 中选择 ISO 值。

质量 - 更改保存在内存中的照片大小，或预设的拍摄照片的大小，使其大小适用于电话本。请参阅第 40 页的更改图像大小。

微距 - 微距模式允许您拍摄特写。如果您要拍摄特写照片而对焦框变为红色，请打开微距模式。

从取景器中选择设置，然后打开预览选项中的所有高级设置。

存储位置 - 选择是将照片保存到手机内存还是外部存储器。

隐藏图标 - 设置是否自动隐藏取景器边缘的图标。

自动对焦 - 选择对焦方式。

声音 - 从三种快门声音中选择一种。

备注：要应用所做的更改，请始终在选择新设置后选择保存。

提示！ 退出相机时，除图像大小和图像质量外，所有设置将恢复回默认设置。您需要对任何所需的非默认设置进行重设，例如，色调和 ISO。拍摄下一张照片之前，请先查看。

01

02

03

04

05

06

07

08

相机

提示！ 设置菜单层叠在取景器之上，因此，当您更改图像颜色或质量时，您将在设置菜单下预览到图像更改效果。退出之前，记得选择保存以应用更改。

更改图像大小

像素越高，文件越大，同时意味着将占用更多内存。如果要在手机或存储卡中保存更多图片，请更改像素大小，使文件更小。

- 1 从取景器选择左下角的设置。
- 2 选择大小。
- 3 从以下六个数值选项中选择像素值 (5M: 2592x1944, 3M: 2048x1536, 2M: 1600x1200, 1M: 1280x960, 640x480, 320x240) 或选择预设值：

电话本 - 将相机拍摄的照片设为可添加到手机联系人的合适大小。

- 4 选择您要使用的尺寸选项，点触选择实施您所做的更改。设置菜单将自动关闭，您可以拍照了。

选择色调

- 1 从取景器选择左下角的设置。
- 2 选择效果。
- 3 有 12 个色调选项：无、黑白、反色、怀旧、蓝色、浮雕、素描、紫色调、蓝色调、单色、边缘图或多色调分色。
- 4 选择您要使用的色调，然后选择选择。
- 5 选择后，色调菜单将自动关闭，您就可以拍照了。

提示！ 您可以将照片从彩色更改为黑白或怀旧，但是，您不可以将黑白或怀旧照片还原为彩色。

查看保存的照片

- 1 您可以从相机模式，或者从图标菜单顶部的“相册”访问保存的照片。
- 2 屏幕上将显示您的相册。
- 3 选择您要查看的照片，将其调到相册前方。
- 4 再次选择该照片，完全打开。

将照片设为主屏或联系人图像

从相册中，选择图像并选择用作以将图像用作主屏或联系人图像。

备注：联系人图像仅可添加到手机（不是 SIM 卡）中保存的联系人中。

提示！ 您还可以使用触摸屏访问照片。按手机右侧的左软键，然后点触照片图标。随后，您可以通过点触屏幕在图片间滚动。

01

02

03

04

05


06

07

08

摄像机

快速摄像


- 1 将相机模式切换至 。屏幕上将显示摄像机的取景器。
- 2 水平放置相机，将镜头对准要拍摄的物体。
- 3 按拍摄按钮一次，开始录制。
- 4 REC 将显示在取景器的底部。


拍摄视频后


屏幕上将显示所拍摄视频的静态图像。图像名称在屏幕底部显示，屏幕右侧将显示五个图标。

 查看摄像册。

 播放文件。

 再次录制移动图像。




 通过多媒体信息、电子邮件或蓝牙发送视频。有关发送信息的信息，请参阅第 30 页，有关使用蓝牙发送和接收文件的信息，请参阅第 73 页。

 删除您刚拍摄的视频，按“是”确认删除。此时将出现取景器。

提示！ 选择摄像册图标，打开摄像册。有关详细信息，请参阅第 45 页的查看照片和视频。

调整亮度

对比度定义图像的深浅差别。对比度低的图像显示模糊，而对对比度高的图像则显示更为清晰。

- 1 选择 。
- 2 沿滚动条滑动对比度指示器， 对应对比度更低、更模糊的图像， 对应对比度更高、更清晰的图像。

使用高级设置

从取景器中选择设置，然后打开“其它”选项中的高级设置。

大小 - 更改保存在存储空间中的视频大小。请参阅下面的更改视频图像大小。

场景模式 - 设置图像以适应环境。从自动、肖像、风景、夜间、海滩、体育和聚会中选择。

效果 - 选择色调效果以应用于拍摄的照片。请参阅第 44 页的选择色调效果。

白平衡 - 白平衡确保照片中的白色显示真实。要正确调整相机的白平衡，您需要确定光照条件。从自动、白炽灯、日光、荧光灯或阴天中选择。

特别录制 - 通过设置不同类型来录制移动图像。

质量 - 更改保存在内存中的照片大小，或预设的拍摄照片的大小，使其大小适用于电话本。请参阅第 43 页的更改图像大小。

时间 - 从三种快门声音中选择一种。从取景器中选择设置，然后打开预览选项中的高级设置。

存储位置 - 选择是将视频保存到手机内存还是外部存储器。

隐藏图标 - 设置相机是否自动隐藏取景器侧面的图标。

语音 - 选择“静音”，录制视频而不录制声音。

备注：要应用所做的更改，请始终在选择新设置后点触“保存”。

提示！ 退出摄像机时，除图像大小和图像质量外，所有设置将恢复回默认设置。您需要对任何所需的非默认设置进行重设，例如，色调和白平衡。拍摄下一段视频之前，请先查看。

更改视频图像大小

像素越高，文件越大，同时意味着将占用更多内存。如果要在手机中保存更多视频，请更改像素大小，使文件更小。

1 从设置菜单中选择大小。

2 从 4 个选项中选择像素值：

640x480(W) - 质量最高的宽屏选项。

320x240 - 图像较小，因此文件较小。适用于保存在内存中。

176x144 - 图像最小，文件最小。宽屏 16:9 - 宽屏选项。

3 选择您要使用的尺寸选项，点触保存应用您所做的更改。设置菜单将自动关闭，您可以拍摄视频了。

备注：当您观看视频时，播放速度为每秒 30 帧，而 120fps 的播放速度为每秒 15 帧。

警告： LG KF750 功能强大的编辑软件与除 640x480 和 640x480 外的所有视频类型兼容。如果您计划对视频进行编辑，请不要使用此格式。

摄像机

选择色调效果

- 1 选择设置，然后选择效果。
- 2 有 12 个色调选项：关、黑白、反色、棕褐色、蓝色、浮雕、素描、紫色调、蓝色调、单色、边缘图或多色调分色。
- 3 选择您要使用的色调，然后点触选择。
- 4 选择后，色调菜单将自动关闭，您就可以拍摄视频了。

提示！ 您可以将拍摄的视频从彩色更改为黑白或怀旧，但是，您不可以将拍摄的黑白或怀旧视频还原为彩色。

观看保存的视频

- 1 选择摄像册图标。屏幕上将显示您的相册。
- 2 选择您要查看的视频一次，将其调到摄像册的前方。
- 3 再次选择该视频，完全打开。

照片和视频

编辑相册选项菜单

使用相册中的“选项”菜单，您可以查看和编辑图像。

查看 - 查看图像。

发送 - 向朋友发送图像。

删除 - 删除图像。

用作 - 将图像设为主屏/联系人图像/开机或关机图像。

重命名 - 重命名图像。

编辑 - 编辑图像。

打印 - 通过图片打印机或蓝牙打印图像文件。

日期显示 - 设置日期显示选项。

编辑摄像册选项菜单

使用摄像册中的“选项”菜单，您可以查看和编辑视频。

播放 - 播放视频。

发送 - 向朋友发送视频。

删除 - 删除视频。

用作 - 将视频设为铃声。

重命名 - 重命名视频。

编辑 - 编辑视频。

日期显示 - 设置日期显示选项。

查看照片和视频

1 拍摄照片或视频后，请选择相册。

2 屏幕上将显示您的相册。

3 选择您要查看的视频或照片一次，将其调到相册的前方。

4 再次选择该视频或照片，完全打开。

5 视频即开始自动播放。要暂停播放，请选择 。

提示！ 您可以删除照片或视频。选择照片或视频，选择选项，然后选择删除。选择是确认。

01

02

03

04

05

06

07

08


观看视频时调节音量

要调节视频中音频的音量，请查看手机屏幕是否处于视频模式。或者，使用触控键盘上的向上或向下键。


照片和视频

从视频中拍摄图像

- 1 选择您要从中拍摄图像的视频。
- 2 按  以暂停您要从中拍摄照片的视频，点触屏幕右侧以打开选项菜单。
- 3 从选项菜单中选择“拍摄”。
- 4 屏幕上将显示图像，以及为其指定的名称。
- 5 选择“确定”。
- 6 选择“返回”返回相册。
- 7 图像将保存在“我的文件”文件夹中，并显示在相册中。您需要退出相册，然后重新打开以显示该图像。

 **警告：**如果手机中没有录制多媒体文件，某些功能可能无法使用。

从相册发送照片或视频

- 1 选择照片或视频两次以打开它。如果选择视频，请在播放时按 。

提示！ 您可以重命名照片或视频。选择照片或视频，选择选项，然后选择文件 - 重命名。为照片或视频输入新名称。

- 2 选择左软键打开选项菜单。
- 3 选择发送并选择您要发送视频或照片的方式：信息、电子邮件或蓝牙。
- 4 所选信息应用程序将打开，您可以发送视频或照片。

备注：在通过彩信发送照片或视频前，可能需要调整其大小。某些视频可能太大，根本无法通过多媒体信息发送，在这种情况下，请选择其它发送选项。

01

02

03

04

05

06

07

08

以幻灯片显示方式查看照片

幻灯片模式允许以幻灯片的形式一次性显示相册中的所有照片。无法以幻灯片模式观看视频。

- 1 选择您要开始幻灯片显示的照片，点触两次以打开它。
- 2 选择左软键打开“选项”菜单。
- 3 选择幻灯片显示，放映即开始。

将照片设为主屏


- 1 选择您要设为墙纸的照片两次，以打开它。
- 2 选择左软键打开“选项”菜单。
- 3 选择“用作 - 主屏”。


编辑照片


您可以对照片进行多方面的更改、修饰或使其更具趣味性。


- 1 打开您要编辑的照片，然后选择选项。
- 2 选择编辑。
- 3 选择图标以调整照片：


 向左或向右旋转图像。

 更改照片大小。

 向图像插入图标。


 将图像剪切为 640X480、320X240 或 176X146。

 使图像失真。

 更改色调：黑白、棕褐色或彩色负片。

 为图像更改或添加相框。

 将图片翻转为镜像。

 使用变形、哈哈镜或聚光灯更改图像。

为照片添加效果

- 1 从编辑屏幕中，选择“特殊效果”或“相框效果”。
- 2 选择为照片应用 2 个选项中的任意一个：

特殊效果 - 更改照片颜色：黑白、棕褐色或彩色负片。

相框效果 - 为照片添加相框。选择所需的相框类型。选择确定，将所选相框层叠在照片之上。

- 3 要撤消效果，选择撤消即可。

提示！ 您可以对照片使用多个效果，颜色效果除外。

照片和视频

变形照片

当您更改朋友的面部表情，或扭曲照片以达到某种艺术效果时，变形照片功能非常有用。

- 1 从编辑屏幕中，选择“更多”，然后选择“变形”。
- 2 如果检测不到图片中的脸部，将显示一则信息“未检测到脸部”，同时将取消变形效果。
- 3 检测到脸部后，将对图片应用第一种变形样式。
- 4 选择要用于照片的变形样式。
- 5 选择变形亮度。
- 6 选择“确定”以应用更改。

聚光照片

- 1 选择图像的所需位置。
- 2 选择聚光灯大小。
- 3 选择“确定”以应用更改。

提示！ 使用哈哈镜将左侧图像复制到右侧，以制作趣味图片。

提示！ 您可以撤消在照片上应用的多个效果，调整大小除外。如果在调整大小之前已应用任何效果，那么将保存当前应用效果和调整大小效果。撤消次数将重置。

编辑视频

可对所有视频类型使用编辑功能，640x480 除外。如果您计划对视频进行编辑，请不要使用此格式。

剪辑视频长度


- 1 选择要编辑的视频，然后点触“选项”。
- 2 选择“编辑”，然后选择“剪辑”。
- 3 选择“开始”和“结束”以标记起点和终点。

合并两段视频

- 1 选择要编辑的视频，然后选择“选项”。
- 2 选择“编辑”，然后选择“视频合并”。
- 3 此时将打开“视频”文件夹。选择您要合并的视频，然后选择“选择”。
- 4 选择效果以选择合并视频的方式：无、淡出、缩放、椭圆形、落花流水、遮帘、棋盘或消失。
- 5 按  保存新合并的视频。选择是保存在源文件中还是另存为新文件。
- 6 重复这些步骤以合并更多视频。

合并照片和视频

- 1 选择要编辑的视频，然后选择“选项”。
- 2 选择“编辑”，然后选择“图像合并”。
- 3 此时将打开“图片”文件夹。选择您要合并的照片，然后选择“选择”。
- 4 选择并滑动照片，将其与视频的结尾或开头合并。

- 5 选择效果以选择合并照片和视频的方式：无、淡出、缩放、椭圆形、落花流水、遮帘、棋盘或消失。
- 6 按 。选择是保存在源文件中还是另存为新文件。
- 7 重复这些步骤以合并更多照片。

为视频添加文本

- 1 选择要编辑的视频，然后选择“选项”。
- 2 选择“编辑”，然后选择“文字叠加”。
- 3 使用键盘输入文本，然后选择“保存”。
- 4 选择“开始”，标记文本出现的时间。
- 5 选择屏幕中您要显示文本的区域。
- 6 选择“取消”以标记何时使文本消失。
- 7 选择“保存”以保存。选择是保存在源文件中还是另存为新文件。
- 8 重复这些步骤以添加更多文本。

照片和视频

叠加照片

- 1 选择要编辑的视频，然后选择“选项”。
- 2 选择“编辑”，然后选择“图像叠加”。
- 3 此时将打开“图片”文件夹。选择您要叠加在视频上的照片，然后选择“选择”。
- 4 选择“开始”，标记照片出现的时间。
- 5 选择屏幕中您要显示照片的区域。如果照片太大，将叠加在整个屏幕上，而不仅仅是所选区域。
- 6 选择“取消”以标记何时使照片消失。
- 7 选择“保存”以保存。选择是保存在源文件中还是另存为新文件。
- 8 重复这些步骤以叠加更多照片。

添加录音

- 1 选择要编辑的视频，然后选择“选项”。
- 2 选择“编辑”，然后选择“录音”。添加录音将影响源音频文件的质量。
- 3 选择“是”继续。
- 4 按“播放”观看视频。到达您要录音的部分时，请按“暂停”。
- 5 按“结束”停止录音并播放。
- 6 按“是”后再按“保存”以保存。选择是保存在源文件中还是另存为新文件。
- 7 重复这些步骤以向视频添加更多录音。


向视频添加原声碟

- 1 选择要编辑的视频，然后选择“选项”。
- 2 选择“编辑”，然后选择“配音”。
- 3 此时将打开“声音”文件夹。选择您要添加到视频的曲目，然后点触选择。
- 4 源音频录音文件将被清除。
- 5 如果音频比视频短，请选择是播放一次还是重复播放。
- 6 选择是保存在源文件中还是另存为新文件。

更改视频速度

- 1 选择要编辑的视频，然后选择“选项”。
- 2 选择“编辑”，然后选择“时间分段”。
- 3 选择四个速度选项之一：x4、x2、x1/4、x1/2。
- 4 选择是保存在源文件中还是另存为新文件。

添加淡化效果

- 1 打开要编辑的视频，选择 ，然后选择“选项”。
- 2 选择“编辑”，然后选择“淡化效果”。
- 3 选择是保存在源文件中还是另存为新文件。
- 4 视频将立即在最开始淡入，在最后淡出。

01

02

03

04

05

06

07

08

多媒体

您可以将任意多媒体文件存储到“我的文档”的手机内存中，这样，您可以轻松访问所有图片、声音、视频和游戏。您也可以将文件保存到存储卡中。使用存储卡的优点是：您可以释放手机内存的存储空间。

图像

我的图像包含一个图片列表，其中包括预先加载到手机中的默认图像、您下载的图像以及手机相机拍摄的图像。

“我的图像”选项菜单

图片中可用的选项取决于您选择的图像类型。对于手机相机拍摄的照片，所有选项均可用；对于默认图像，仅可使用用作、打印、排序方式、网格（列表）视图和内存管理器选项。

发送 - 向朋友发送图像。

用作 - 设为在特定时间在手机上显示的图像。

移动 - 将图像从手机内存移到存储卡，或从存储卡移到手机内存。

复制 - 将图像从手机内存复制到存储卡，或从存储卡复制到手机内存。

删除 - 删除图像。

标记/去除标记 - 选择多个文件。

打印 - 通过图片打印机或 Bluetooth® 打印图像文件。

文件 - 更改文件名称或查看信息。

新建文件夹 - 在“图片”文件夹中创建一个新的文件夹。

幻灯片显示 - 开始显示幻灯片。

排序方式 - 按特定顺序排列图像。

网格视图/列表视图 - 以网格或列表类型查看每张图像。

内存管理器 - 查看内存状态。

发送照片

- 1 选择我的文档，然后选择我的图像。
- 2 选择要发送的照片，然后点触选项。
- 3 选择发送并从信息、电子邮件或蓝牙中选择。
- 4 如果选择信息或电子邮件，照片将被附加到信息中，您可以照常撰写和发送信息。如果选择蓝牙，手机将提示您打开蓝牙并搜索要将图片发送至的设备。

使用图像

您可以选择图像以用作墙纸和屏幕保护程序，或用来识别呼叫者。

- 1 选择我的文档，然后选择我的图像。
- 2 选择图像，然后点触选项。
- 3 选择用作并从以下选项中选择：
墙纸 - 设为待机屏幕的墙纸。
拨出电话 - 设为在拨出电话时显示的图像。

联系人图像 - 将图像分配给联系人列表中的某人，当其呼叫时，您的手机上会显示该图片。

开机图像 - 设为开机时显示的图像。

关机图像 - 设为关机时显示的图像。

管理图像

- 1 选择我的文档，然后选择我的图像。
- 2 选择选项，然后选择“排序方式”。
- 3 从日期、类型或名称中选择。

删除图像

- 1 选择我的文档，然后选择我的图像。
- 2 选择要删除的图像，然后选择选项。
- 3 选择删除，然后选择是确认删除。

提示！ 要快速删除“我的文件”中的任意文件，请选择该文件一次，通过光标使其突出显示，然后按 **C** 硬键。选择是确认。

01

02

03

04

05

06

07

08

多媒体

移动或复制图像

您可以在手机内存和存储卡之间移动或复制图像。您可能需要执行此操作以释放其中一个存储位置的存储空间，或保护图像不丢失。

- 1 选择我的文档，然后选择我的图像。
- 2 选择图像，然后选择选项。
- 3 选择移动或复制。

编辑图像

您可以使用选项菜单编辑图像。

- 1 选择多媒体菜单。
- 2 选择内容编辑器。
- 3 选择图像编辑器，然后从多个选项中选择。有关详细信息，请参阅第 53 页。

标记或去除标记图像

如果您要一次移动、复制、发送或删除多张图像，首先，您需要通过打勾标记识别它们。

- 1 选择我的文档，然后选择我的图像。
- 2 选择选项，然后选择标记/去除标记。
- 3 每张图像左侧将出现一个框。如果选择了图像，框中会显示一个打勾标记以对其进行标记。
- 4 要去除标记图像，请再次选择图像以取消勾选。
- 5 标记完所有图像后，请选择选项之一以应用到所有图像。

创建幻灯片显示

如果您要查看手机中的所有图像或浏览已有图像，您可以创建一个幻灯片，这样，您无需对每张图像都执行打开和关闭操作。

- 1 选择我的文档，然后选择我的图像。
- 2 选择选项，然后选择幻灯片显示。

查看内存状态

您可以查看已用存储空间和剩余存储空间。

- 1 选择我的文档，然后选择我的图像。
- 2 选择选项，然后选择内存管理器。
- 3 选择手机内存或外部存储卡。

备注：如果您没有插入存储卡，则无法选择外部存储器。

声音

我的声音文件夹包含默认声音和录音。在此，您可以管理、发送或将声音设为铃声。

使用声音

- 1 选择我的文档，然后选择声音。
- 2 选择默认声音或录音。
- 3 选择一个声音，选择播放试听。
- 4 选择选项，然后选择用作。
- 5 从来电铃声、视频铃声、信息提示音、开机声音和关机声音中选择。

视频

视频文件夹显示已下载的视频以及手机中录制的视频列表。

观看视频

- 1 选择我的文档，然后选择我的视频。
- 2 选择视频，然后按播放。

提示！要快速删除“我的文件”中的任意文件，请按该文件一次，通过光标使其突出显示，然后按 **C** 硬键。选择是确认。

暂停视频时使用选项

在暂停模式下选择“选项”并从以下选项中选择：

风景视图 - 以完整拍摄模式观看视频文件。

静音/取消静音 - 打开或关闭声音。

抓取 - 将定帧捕获为图片。

重复 - 重复视频文件。

文件信息 - 查看名称、大小、日期、时间、类型、长度、尺寸、保护和版权等详情。

发送 - 以信息、电子邮件形式或通过蓝牙发送视频。

删除 - 删除视频。

用作 - 用作语音/视频铃声。

多媒体

发送视频剪辑

- 1 选择视频，然后选择选项。
- 2 选择发送并从信息、电子邮件或蓝牙中选择。
- 3 如果选择信息或电子邮件，视频剪辑将被附加到信息中，您可以照常撰写和发送信息。如果选择蓝牙，手机将提示您打开蓝牙并搜索要将视频发送至的设备。

将视频剪辑用作铃声

- 1 选择视频，然后选择选项。
- 2 选择用作，然后从语音铃声或视频铃声中选择。

使用视频选项菜单

从我的视频文件夹，您可以选择以下选项：

发送 - 向朋友发送视频。

用作 - 将视频设为铃声。

移动 - 将视频剪辑从手机内存移至存储卡，或从存储卡移至手机内存。

复制 - 将视频剪辑从手机内存复制到存储卡，或从存储卡复制到手机内存。

删除 - 删除视频。

标记/去除标记 - 选择多个文件。

文件 - 编辑文件名称并查看其信息。

新建文件夹 - 在“视频”文件夹中创建一个新的文件夹。

排序方式 - 按特定顺序排列视频。

网格视图/列表视图 - 以网络或列表类型查看选项菜单。

内存管理器 - 查看内存状态。

游戏和应用程序

您可以将游戏和应用程序下载到手机中，在闲暇时为您带来乐趣。

体验 M-Toy 菜单

您可以体验六种默认游戏，包括：Dart、Homerun Derby、Magic Ball、Hammer、Maze、Fishing。

关于 - 查看游戏信息。

设置 - 设置声音和激活游戏时的振动效果。

重设数据 - 重设所有设置。

退出 - 结束游戏。

下载游戏或应用程序

- 1 对于游戏，请选择游戏菜单；对于应用程序，请选择应用程序菜单。
- 2 选择下载游戏/应用程序，然后按连接。
- 3 您将连接到可下载游戏的网络端口。

提示！ 要快速删除“我的文件”中的任意文件，请按该文件一次，通过光标使其突出显示，然后按 **C** 硬键。按是确认。

玩游戏

- 1 选择游戏菜单。
- 2 选择一款游戏，然后点触启动。


使用游戏选项菜单

在“文件”和“应用程序”文件夹中，可使用以下选项：

新建文件夹 - 在“游戏和应用程序”菜单下创建文件夹。

排序方式 - 按日期、大小或名称对游戏和应用程序排序。

内存管理器 - 查看内存状态。

提示！ 您还可以使用触摸屏访问游戏。按手机右侧的  键，然后点触游戏图标。随后，您可以通过点触屏幕访问游戏。

Flash 内容

“Flash 内容”文件夹包含所有默认和下载的 Flash 文件。

查看 SWF/SVG 文件

- 1 选择我的文件，然后选择 Flash 内容。
- 2 选择文件，然后按播放。

查看 SWF/SVG 文件时使用选项

在暂停模式下选择选项并从以下选项中选择：

播放/暂停 - 暂停或恢复播放。

全屏/风景视图 - 以全屏或风景视图模式查看 SWF/SVG（仅在非暂停模式下选择选项时可见）。

静音/取消静音 - 打开或关闭声音。

用作墙纸 - 将 SWF/SVG 文件用作墙纸。

文件信息 - 查看文件的名称、大小、日期、时间和类型。

多媒体

文档

从“文档”菜单中，您可以查看所有文档文件。在此，您可以查看 Excel、PowerPoint、Word、文本和 PDF 文件。

将文件传输到手机

蓝牙可能是将文件从计算机传输到手机最简便的方法。您也可以通过同步数据线使用 LG PC 套件，有关详细信息，请参阅第 67 页。

使用蓝牙传输：

- 1 请确保手机和计算机都已打开蓝牙，彼此可见。
- 2 通过蓝牙，使用计算机发送文件。
- 3 文件发出后，您必须选择确定在您的手机上接受它。
- 4 文件应出现在文档或其它文件夹中。

查看文件

- 1 选择我的文档，然后选择文档。
- 2 选择文档，然后选择查看。

其它

其它文件夹用于存储非图片、声音、视频、游戏或应用程序文件。其使用方式与文档文件夹相同。当您从计算机传输到手机时，您可能发现文件保存在其它而不是文档文件夹中。如果这样，您可以移动文件。


将文件从“其它”文件夹移到“文档”文件夹：

- 1 选择我的文件，然后选择其它。
- 2 选择文件，然后选择选项。
- 3 选择移动。

多媒体

影片编辑器

影片编辑器允许您创建与音乐相结合的图像幻灯片。

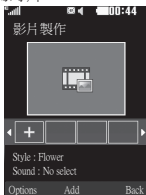

创建电影

- 1 转到“娱乐”，然后选择影片编辑器。
- 2 选择 **+** 以添加图像。选择要包括的图像，然后选择选项中的完成。
- 3 选择样式菜单以选择一种电影样式。
- 4 选择播放观看您创建的内容。

音乐

LG KF750 拥有内置的音乐播放器，因此，您可以播放所有喜爱的曲目。要访问音乐播放器，请从主菜单中选择音乐。您可以在此访问多个文件夹：

最近播放 - 查看您最近播放的所有歌曲。

我的音乐 - 所有音乐：

所有曲目 - 包含手机中的所有歌曲。

艺术家 - 按艺术家浏览音乐集合。

专辑 - 按专辑浏览音乐集合。

流派 - 按流派浏览音乐集合。

播放列表 - 包含您创建的任何播放列表。

随机曲目 - 以随机顺序聆听音乐。

01

02

03

04

05

06

07

08




多媒体

将音乐传输到手机

将音乐传输到手机的最轻松的方法是通过蓝牙或同步数据线。您也可以使用 LG PC 套件，有关详细信息，请参阅第 67 页。使用蓝牙传输：

- 1 请确保双方设备都已打开蓝牙，对对方可见。
- 2 选择另一个设备上的音乐文件，选择通过蓝牙发送。
- 3 文件发出后，您必须点触确定在您的手机上接受它。
- 4 文件应显示在音乐 → 所有曲目中。

播放歌曲

- 1 选择我的音乐，然后选择所有曲目。
- 2 选择您要播放的歌曲，然后选择播放。
- 3 按  暂停歌曲。
- 4 点触  (右) 跳到下一首歌曲。
- 5 点触  (左) 跳到上一首歌曲。

播放音乐时使用选项

选择选项，然后从下列内容中选择：
最小化 - 隐藏音乐播放器屏幕，以便您可以继续照常使用手机。

转到我的音乐 - 将文件移至“我的音乐”文件夹。

重复 - 重复选定的曲目。

随机曲目 - 以随机顺序聆听音乐。

均衡器 - 设置均衡器菜单。

视觉效果 - 选择视觉效果。

添加到播放列表 - 将文件添加到播放列表。

文件信息 - 查看歌曲的名称、大小、日期、时间、类型、长度、保护和版权。


发送 - 以信息形式或通过蓝牙发送歌曲。

删除 - 删除歌曲。

用作 - 将歌曲用作铃声之一。

创建播放列表

您可以从所有曲目文件夹中进行选择，以创建自己的播放列表。

- 1 选择我的音乐，然后选择播放列表。
- 2 选择添加，输入播放列表名称，然后按  保存。
- 3 此时将显示“所有曲目”文件夹。选择所有要包含在播放列表中的歌曲；这些歌曲名称旁边将显示一个勾号。

要播放播放列表，请选择列表，然后选择播放。

备注：要另外添加一个播放列表，请选择选项，然后选择添加新的播放列表。

编辑播放列表

您可能随时想要向播放列表添加新歌曲或从中删除歌曲。要执行此操作，您可以编辑播放列表。

- 1 选择我的音乐，然后选择播放列表。
- 2 选择播放列表。
- 3 选择选项，然后选择：

新增歌曲 - 将更多歌曲添加到播放列表。标记所需的歌曲，然后选择完成。

上移/下移 - 在列表中上移或下移歌曲，以更改播放顺序。

发送 - 以信息形式或通过蓝牙发送歌曲。

从列表中删除 - 将歌曲从播放列表中删除。选择是确认。

标记/去除标记 - 选择多个文件。

用作 - 您可以将歌曲设为效果音。

删除播放列表

- 1 选择我的音乐，然后选择播放列表。
- 2 选择选项，然后选择删除或全部删除从播放列表中删除歌曲。

使用收音机

LG KF750 拥有 FM 收音机功能，以便您转到喜爱的电台并收听无线广播。

备注：要收听收音机，您需要插入耳机。将其插入您用来插入充电器的同一个插槽。

多媒体

搜索电台

您可以手动或自动微调收音机电台。搜索后，它们将保存为特定频道编号，这样，您就不用重复进行微调。您可以在手机中最多保存 50 个频道。



自动微调：

- 1 从音乐中选择 FM 收音机，然后选择选项。
- 2 选择自动扫描，然后选择是。手机将自动为找到的电台分配一个频道编号。

提示！ 您可以使用触摸屏访问音乐。按手机右侧的相机键，然后选择收音机或音乐图标。随后，您可以通过点触屏幕滚动并选择音乐文件或收音机功能。

手动微调：

- 1 选择 FM 收音机，然后选择选项。
- 2 选择频道列表，然后选择要保存电台的频道编号。
- 3 输入电台频率，然后点触选择以保存。

备注：您也可以使用电台频率旁显示的  (左) 和  (右) 手动微调电台。

编辑频道

您可能想要将电台移至其它频道，以便更轻松地访问最常收听的电台。

- 1 选择 FM 收音机，然后选择选项。
- 2 选择频道列表，然后选择您要更改的频道。
- 3 您可以从其它频道中选择一个电台；也可以手动将频道微调至您所需的频率。

您可以通过突出显示来编辑每个频道，然后点触选项：

重命名 - 重命名频道。

替换 - 为选定频道设置新频率。

重置频道 - 重置频道。

重置所有频道 - 重置所有频道。

重置频道

- 1 选择 FM 收音机，然后选择选项。
- 2 选择频道列表，然后选择选项。
- 3 选择重置频道以重置当前频道，或选择重置所有频道以重置所有频道。每个频道的开始频率将返回为 87.5Mhz。

提示！ 要提高收音机接收质量，请伸展耳机线，它具有收音机天线的功能。

收听收音机

选择 FM 收音机，然后输入您要收听的电台的频道编号。

提示！ 要提高收音机接收质量，请伸展耳机线，它具有收音机天线的功能。

使用录音机

使用录音机录制语音备忘录或其它声音。

- 1 选择多媒体。
- 2 选择录音机，然后选择选项并从以下内容选择：

时长 - 设置录音时长。

从“彩信大小”、“30 秒”、“1 分钟”或“无限制”中选择。

质量 - 选择声音质量。

从“超精细”、“精细”或“标准”中选择。

存储位置 - 查看每个存储器的当前状态。

转到我的声音 - 在我的声音中打开“录音”文件夹。

录制声音或语音

- 1 选择多媒体。
- 2 选择录音机。
- 3 选择 Rec. 开始录音。
- 4 选择停止可以结束录音。
- 5 选择选项中的播放收听录音。

发送录音

- 1 完成录音后，请选择“选项”。
- 2 选择发送并从信息、电子邮件或蓝牙中选择。如果选择信息或电子邮件，录音将被添加到信息中，您可以照常撰写或发送信息。如果选择蓝牙，手机可能提示您打开蓝牙。

备注：完成录音后，请选择选项并从播放、发送、文件、删除、用作（将录音用作铃声）或转到我的声音中选择。

01

02

03

04

05


06

07

08


管理器

将事件添加到日程表中


- 1 从待机屏幕中，按 ，然后选择管理器。选择日程表。
- 2 选择您要添加事件的日期。
- 3 选择选项，然后选择新增事件。
- 4 选择是要添加约会、周年纪念还是生日，然后选择完成。
- 5 查看日期并输入事件开始的时间。
- 6 对于约会和周年纪念，请在下面的“时间”和“日期”框中输入事件结束的时间和日期。
- 7 如果要为事件添加主题或备注，请点触主题或名称，然后键入备注。
- 8 选择完成，您的事件将保存在日程表中。方形光标标记已保存事件的日期，在事件开始时间会有闹钟提醒，以便您进行安排。

提示！ 您可以在日历中设置假期。一次性选择您的假期所在日期，选择选项，然后选择设置假期。假期中的每一天都将变为红色。设置闹钟时，您可以将设为假期的日期排除在外。

更改默认日程表视图


- 1 从待机屏幕中，按 ，然后选择管理器。选择设置。
- 2 选择任务，点触选项，然后选择月视图或周视图。
- 3 按确定以确认选择。

向任务列表添加项目

- 1 从待机屏幕中，按 ，然后选择管理器。
- 2 选择任务，然后选择添加。
- 3 为任务项设置日期、添加备注或选择优先级：高、中或低。
- 4 选择完成以保存任务列表项。


提示！ 您可以通过选择项目对其进行编辑，点触选项，然后点触编辑。选择保存以确认您所做的修改。

更改任务项

- 1 从待机屏幕中，按 ，然后选择管理器。选择任务。
- 2 选择您要共享的任务项，然后选择选项。
- 3 选择发送。您可以通过文本信息、多媒体信息、电子邮件或蓝牙共享任务项。



提示！ 您可以将日历备份在计算机上或与计算机同步。请参阅第 67 页上的“电脑同步”。

添加备忘录

- 1 从待机屏幕中，按 ，然后选择“管理器”-“备忘录”。
- 2 如果没有现有备忘录，请选择“添加”。
- 3 键入备忘录，然后选择“保存”。
- 4 在您下一次打开备忘录应用程序时，屏幕上将显示此备忘录。

提示！ 您可以编辑现有备忘录。选择您要编辑的备忘录，然后选择编辑。

设置闹钟

- 1 从待机屏幕中，按 ，然后选择“工具”-“闹钟”。
 - 2 选择“选项”，然后点触“新增”。
 - 3 设置您希望闹钟响起的时间。
 - 4 选择您希望闹钟响起的方式：一次、每天、星期一至星期五、星期一至星期六、星期六至星期天或节假日除外。
 - 5 选择  和“编辑”以选择闹钟铃声。要聆听声音，请选择声音，然后点触“播放”。
 - 6 为闹钟添加备忘录，结束内容键入后，请选择“完成”。闹钟响起时，会显示备忘录。
 - 7 最后，您可以设置暂停间隔：5、10、20、30 分钟、1 小时或关。
 - 8 设置闹钟后，请选择“完成”。
- 备注：**您最多可以设置 5 个闹钟。

01

02

03

04

05


06

07


08

管理器


使用计算器

- 1 从待机屏幕中，按 ，然后选择“工具”。
- 2 选择数字键输入数字。
- 3 对于简单计算，选择您所需的函数 (+, -, x, /)，然后选择 =。
- 4 对于较复杂的计算，请点选择选项，然后从 sin、cos、tan、log、ln、exp、sqrt、deg 或 rad 中选择。


使用秒表

- 1 从待机屏幕中，按 ，然后选择“管理器”-“工具”。选择“秒表”。
- 2 选择“开始”启动计时器。
- 3 选择“停止”停止计时器。
- 4 选择“记录”测量每一圈的时间。
- 5 要重启秒表，请选择“恢复”。
- 6 选择“重设”归零。

换算单位

- 1 从待机屏幕中，按 ，然后选择“管理器”和“工具”。选择换算器。
- 2 选择要换算的内容：币种、面积、长度、重量、温度、体积或速率。
- 3 现在，您可以选择单位，输入要换算的初始值，然后选择要换算的目标单位。
- 4 屏幕上将显示相应的值。

向世界时间添加城市

- 1 从待机屏幕中，按 ，然后选择“管理器”和“工具”。选择世界时间。
- 2 选择选项，然后选择添加城市。开始键入所需城市的名称时，屏幕顶部即显示该城市。或者，选择地图，然后从地图中选择所需城市。
- 3 按选择以确认选择。

提示！ 如果出国，您可以通过选择更改，然后选择更改当前城市来更改世界时间的时区。如上所述选择所需城市，然后点触选择。

电脑同步

您可以使用手机同步电脑，以确保所有重要信息和日期匹配，同时做好备份。

在计算机上安装 LG PC 套件

- 1 从待机屏幕中按 ，选择手机设置。
- 2 选择连接，然后选择 USB 连接模式。
- 3 选择 USB 连接模式，然后单击确定。
音乐 - 音乐同步模式。
其它 - 数据服务模式。
- 4 将随附的 CD 插入电脑。单击显示在屏幕上的 LG PC 套件安装程序。
- 5 选择安装程序运行的语言，然后单击确定。
- 6 根据屏幕说明完成 LG PC 套件安装程序向导。
- 7 安装完成后，桌面上将显示 LG PC 套件图标。

连接手机和电脑

- 1 将 USB 数据线连接到手机和电脑。
- 2 双击桌面上的 LG PC 套件图标。
- 3 单击连接向导，然后单击 USB。
- 4 单击下一步，再单击下一步，最后单击完成。现在，手机与电脑已连接。

备份和恢复手机信息

- 1 如上所述，将手机连接到电脑。
- 2 单击备份图标，选择备份或恢复。
- 3 标记您要备份或恢复的内容。选择您要保存备份信息的位置，或恢复信息的位置。单击确定。
- 4 您的信息将备份。

在电脑上查看手机文件

- 1 如上所述，将手机连接到电脑。
- 2 单击内容图标。
- 3 手机中保存的所有文档、Flash 内容、图像、声音和视频将显示在“LG 手机”文件夹屏幕中。

提示！ 在电脑中查看手机内容有助于您排列文件、整理文档或删除不再需要的内容。

01

02

03

04

05

06

07

08

电脑同步

同步电话本

- 1 将手机连接到电脑。
- 2 单击电话本图标。
- 3 选择传输，然后选择从手机导入。电脑中将导入并显示 USIM 卡和手机中保存的所有联系人。
- 4 单击文件，然后选择保存。现在，您可以选择要保存电话本的位置。

备注：要备份保存在 USIM 卡中的电话本，请单击电脑屏幕左侧的“SIM 卡”文件夹。选择屏幕顶部的编辑，然后选择全选。右键单击联系人，然后选择复制到联系人。现在，请单击屏幕左侧的手机文件夹，此时将显示您的所有号码。

同步信息

- 1 将手机连接到电脑。
- 2 单击信息图标。
- 3 所有电脑和手机信息将显示在屏幕上的文件夹中。
- 4 使用屏幕顶部的工具栏编辑和排列信息。

同步音乐


- 1 将手机连接到电脑。
- 2 单击音乐图标。
- 3 您保存的音乐文件将显示在屏幕上的“音乐”文件夹中。

备注：要使用“音乐”，必须满足以下条件。

- Windows XP Service Pack 2 或更高版本。
- Windows Media Player 11 或更高版本。
- 应激活“USB 连接”模式并打开“音乐同步”模式。

将手机用作 大容量存储器 设备

只有插入存储卡时，您的手机才可以用作大容量存储设备。

- 1 断开手机与电脑的连接。
- 2 从待机屏幕中按 ，选择设置。
- 3 选择连接，然后选择 USB 连接模式。
- 4 突出显示大容量存储，然后点触选择。
- 5 将手机连接到电脑。此时手机将显示：正作为大容量存储连接…，随后将显示以大容量存储器模式连接。传输期间不要断开连接。
- 6 所有手机文件将自动保存在电脑硬盘中。

备注：要启动大容量存储，必须将手机从电脑上拔下。

备注：大容量存储将仅备份保存在存储卡中的内容，而不备份手机内存中的内容。要传输手机内存中的内容（如，电话本），您需要使用“电脑同步”进行同步。

用于 DivX 连接的 PIN 码

安装作为电脑同步软件、在同一 CD 中提供的 DivX Converter。

安装后，请从电脑的程序文件中选择 DivX，然后，依次选择“DivX Converter”和“Converter”


此时将打开“Converter”应用程序。使用应用程序中的箭头将转换格式更改为“手机”。如果右键单击应用程序框，选择“首选项”，您可以更改保存转换文件的位置。

准备好转换文件后，将文件拖放至应用程序即可。您需要选择“Convert”以开始转换过程。转换过程完成后，会显示一则“转换已完成”提示消息。现在可使用大容量存储功能将转换的文件传输到手机中（有关详细信息，请参阅第 69 页），或使用电脑同步软件上载内容（有关详细信息，请参阅第 67 页）。

浏览器

轻松使用浏览器，您可以在需要时随时获取新闻、天气预报以及体育或交通信息。此外，您还可以使用浏览器下载最新音乐、铃声、墙纸和游戏。

访问网页

- 1 从待机屏幕中按 ，选择浏览器。
- 2 要直接访问浏览器主页，请选择浏览器。或者，选择输入地址并键入所需的 URL，然后选择打开。

备注：连接此服务并下载内容时，可能会产生额外费用。查看网络提供商要求的数据付费。

添加并访问书签

为了轻松快速地访问收藏的网站，您可以添加书签并保存网页。

- 1 从待机屏幕中按 ，选择激活主页。
- 2 选择书签。此时屏幕上将出现一个书签列表。
- 3 要创建新文件夹，请选择选项，然后选择新建文件夹。输入书签文件夹的名称。
- 4 要添加一个新的书签，请选择选项并点触新增。输入书签名称和 URL。


- 5 选择完成。现在，您添加的书签将显示在书签列表中。
- 6 要访问书签，仅需滚动到书签，然后选择打开即可。

保存页面


- 1 如上所述，访问所需网页。
- 2 选择选项，然后选择保存项目 - 保存此页面。
- 3 为网页输入一个名称，便于您轻松识别。
- 4 选择保存。

提示！ 此菜单还允许您编辑已保存的页面的标题、保护或取消保护屏幕备忘录，以及删除保存的页面。

访问保存的网页

- 1 从待机屏幕中按 ，选择浏览器。
- 2 选择保存的网页。
- 3 选择打开以连接到保存的网页。

查看浏览器历史记录

- 1 从待机屏幕中，按  并选择浏览器，然后选择历史记录。
- 2 此时将显示视觉历史记录。选择选项，然后选择添加至书签，以将当前网页添加至书签。
- 3 选择选项，然后选择历史记录列表，以显示您最近访问过的网页标题列表。
- 4 要访问其中一个网页，只需选择所需页面，点触打开即可。

使用 RSS 阅读器

RSS（简易供稿）是一种网络订阅源格式，可用于发布最近更新的内容，如博客、新闻标题或播客。RSS 文档通常被称为订阅源、网络订阅源或频道，它包含相关网站的内容摘要或完整文本。

RSS 使人们可以以主动方式随时关注其感兴趣的网站，而无需手动查看。

用户订阅源的方式：将订阅源的链接输入阅读器，或单击浏览器中的 RSS 图标即可开始订阅流程。阅读器将定期检查用户订阅的源以查看新内容并下载找到的任何更新。


添加订阅源

您可以直接输入订阅源：浏览器 → RSS 阅读器 → 选项 → 新增，或者，您可以选择网页中的 RSS 图标以单击订阅源链接。

更新 RSS 阅读器

- 1 您可以选择更新或全部更新选项。
- 2 如果您要自动更新，请选择更新日程表。

更改网络浏览器设置

- 1 从待机屏幕中按 ，选择浏览器。选择浏览器设置。
- 2 您可以选择编辑网路设定、外观设置、缓存、Cookie、安全性或重设置。
- 3 更改设置后，请点触选择。

01

02

03

04

05

06

07

08

网络

将手机用作调制解调器

KF750 可以同时用作电脑的调制解调器，使您在无法使用有线连接时仍可访问电子邮件和互联网。您可以使用 USB 数据线或蓝牙。

连接 USB 数据线：

- 1 确保电脑上已经安装了 LG PC 套件。
- 2 使用 USB 数据线连接 KF750 和电脑，启动 LG PC 套件软件。
- 3 单击电脑上的通信。然后，单击设置并选择调制解调器。
- 4 选择 LG Mobile USB 调制解调器，然后选择确定。此时将在屏幕上打开。
- 5 单击连接，您的电脑将与 KF750 之间建立连接。

备注：有关使用 LG PC 套件同步的详细信息，请参阅第 67 页。

使用蓝牙

- 1 确保已打开蓝牙并在电脑和 KF750 上均可见。
- 2 配对电脑和 KF750，以便需要通行码才能建立连接。
- 3 使用 LG PC 套件上的连接向导创建一个活动的蓝牙连接。
- 4 单击电脑上的通信。然后，单击设置。
- 5 单击调制解调器。
- 6 选择 Standard Modem over Bluetooth link，然后单击确定。此时将在屏幕上打开。
- 7 单击连接，您的电脑将与 KF750 之间建立连接。

使用蓝牙发送和接收文件

蓝牙适用于在无线条件下发送和接收文件，连接快速且方便。您也可以连接蓝牙耳机拨打和接听电话。

发送文件：

- 1 打开要发送的文件，通常是照片、视频或音乐文件。
- 2 选择“选项”，然后选择发送。选择蓝牙。
- 3 点触是以打开蓝牙。
- 4 KF750 将自动搜索范围内其它启用了蓝牙的设备。
- 5 选择您要向其发送文件的设备，然后选择选择以发送文件。
- 6 您的文件将被发送。

提示！ 注意进度栏，确保文件已发送。

接收文件：

- 1 要接收文件，您的蓝牙必须为开且可见。有关详细信息，请参阅下面的更改蓝牙设置。
- 2 手机会提示您一条信息，是否接收来自其他发件人的文件。选择是以接收文件。
- 3 您可以查看文件的保存位置，可以选择查看文件或用作墙纸。文件通常保存在“我的文件”中的相关文件夹。

更改蓝牙设置：

- 1 在待机屏幕中按 ，然后选择连接。

- 2 依次选择蓝牙和设置。进行更改：

我的设备可见性 - 选择“可见”、“可见 1 分钟”或“隐藏”。

我的设备名称 - 为您的 KF750 输入一个名称。

支持的服务 - 搜索 KF750 支持的配置文件。请参阅第 72 页的“将手机用作调制解调器”和第 74 页的“使用蓝牙耳机”。

我的地址 - 搜索蓝牙设备地址。

01

02

03

04

05

06

07

08

网络

与其它蓝牙设备配对

要将您的 KF750 与其它设备配对，您可以设置受通行码保护的连接。这意味着配对更加安全。

- 1 查看蓝牙是否为开且可见。您可以在设置菜单中更改可见性。
- 2 依次选择配对设备和新建。
- 3 KF750 将搜索设备。搜索完全刷新时，屏幕上将显示添加。
- 4 选择您要与之配对的设备，输入通行码，然后按添加。
- 5 随后，您的手机将连接到其它设备，您可以在该设备上输入相同的通行码。
- 6 现在，受通行码保护的蓝牙连接已经准备就绪了。

使用蓝牙耳机

- 1 查看蓝牙是否为开且可见。
- 2 根据耳机随附的说明书将耳机置于配对模式下并配对设备。
- 3 选择是以立即连接。KF750 将自动切换到“耳机”情景模式。


提示！ 有关蓝牙接听模式的详细信息，请参阅第 26 页，以便您可以控制接听来电的方式，以及何时连接蓝牙耳机。

设置

使用此文件夹，您可以调整设置以使 KF750 更具个性化。

备注：有关通话设置的信息，请参阅第 26 页。

更改屏幕设置

- 1 从待机屏幕中按 ，选择设置。
- 2 选择显示设置，然后从以下选项中选择：
 - 屏幕主题** - 为待机屏幕或拨出电话选择主题。
 - 菜单样式** - 选择用于显示菜单的样式。
 - 拨号** - 设置拨号显示。
 - 字体** - 调整字体颜色。
 - 背景灯** - 选择背景灯持续时间。


备注：背景灯打开时间越长，电池耗电量就越大，您可能需要更频繁的对手机进行充电。

 - 手机方案** - 快速更改屏幕整体外观。
 - 问候语信息** - 输入打开时的问候语信息。
- 3 选择选择以保存设置。

个性化情景模式

您可以在待机屏幕上快速更改情景模式。轻触屏幕右上角的当前情景模式图标。

使用设置菜单，您可以个性化每个情景模式设置。

- 1 在待机屏幕中按 。
- 2 选择情景模式，然后选择您要编辑的情景模式。您不能编辑静音情景模式。
- 3 选择选项，然后选择编辑。
- 4 随后，您可以更改列表中可用的所有声音和提示选项，包括铃声和音量、信息提示、屏幕声音设置等。

01

02

03

04

05

06

07


08

设置

更改手机设置

您可以自由调整 KF750 的设置，使其满足您的需要。

提示！ 要在选项列表中滚动，请点触所见的最后一个条目，然后使用手指向上滑过屏幕。列表向上滚动，您将看到更多条目。

- 1 在待机屏幕中按 。
- 2 选择手机设置，然后从下表中选择。

自动键盘锁 - 在待机屏幕和设置的时间下自动锁定键盘。

触式键盘振动 - 打开或关闭触式键盘振动。

触摸屏效果 - 设置触摸屏时的效果音。

语言 - 更改 KF750 的显示语言。

省电 - 选择打开或关闭省电设置。

信息 - 查看 KF750 的技术信息。

使用日期和时间

日期和时间 - 调整日期和时间设置，或者，选择在旅行时或针对夏令时自动更新时间。

更改其它设置

网络运营商已为您设置连接设置，因此，您开机即可使用手机。如果要更改设置，请使用此菜单。

网络 - KF750 将自动连接到首选网络。要更改这些设置，请使用此菜单。

互联网网络设定 - 设置连接到互联网的网络设定。

存取点 - 网络运营商已保存此信息。您可以使用此菜单添加新的接入点。

分组数据连接 - 设置分组数据连接。

更改安全性设置

需要 PIN 码 - 将手机设置为开机时需要请求 SIM 卡的 PIN 码。

手机锁 - 设置手机锁以避免未经授权的使用。您需要一个安全码。

更改密码 - 更改密码：PIN/PIN2/安全码。

使用内存管理器

KF750 有三种可用存储器：手机、USIM 卡和外部存储卡（您可能需要单独购买存储卡）。

您可以使用内存管理器确定每种存储器的使用方式以及查看可用空间。

在待机屏幕中按 。选择设置，然后选择内存管理器。

手机公用内存 - 查看 KF750 中针对以下各项的可用内存：图像、声音、视频、Flash、彩信、电子邮件、Java 应用程序、其它。

手机剩余内存 - 查看手机目前针对以下各项的可用内存：短信、电话本、日历、任务列表、备忘录、闹钟、通话记录、书签及其它。



USIM 卡内存 - 查看 USIM 卡的可用内存。

外部存储器 - 查看外部存储卡的可用内存（您可能需要单独购买存储卡）。

主存储设置 - 选择“手机内存”或“外部存储器”。

提示！ 有关安装存储卡的信息，请参阅第 17 页。

使用飞行模式

在待机屏幕中按  打开飞行模式，然后选择“设置”-“情景模式”。选择“飞行模式”，然后按  激活。

飞行模式下，您不能拨打电话、连接到互联网、发送信息或使用蓝牙。

01

02

03

04

05

06

07

08

配件

这些配件随 KF750 提供。

充电器



数据线和 CD

在 KF750 和电脑间建立连接并同步。



电池



用户指南

了解更多关于 KF750 的信息。



立体声耳机



备注：

- 务必使用正品 LG 配件。
- 否则可能导致保修失效。
- 在不同地区提供的配件可能不同；如需要进一步查询有关情况，请与我们的地区服务公司或代理联系。

网络服务

本指南中描述的无线手机适用于 GSM 900、DCS 1800、PCS1900 和 W-CDMA 网络。

本指南中包含的一系列功能称为网络服务。这些服务是由您的无线服务提供商提供的特殊服务。在利用这些网络服务之前，必须先向您的服务提供商预订，并获取使用说明。

技术参数

标准

产品名称：KF750

系统：GSM 900 / DCS 1800 /
PCS 1900 / W-CDMA

外部环境

最高温度：+55°C（放电）、+45°C（
充电）

最低温度：-10°C

Declaration of Conformity



LG Electronics

Suppliers Details

Name

LG Electronics Inc

Address

LG Electronics Inc, LG Twin Towers 20,
Yeouido-dong, Yeongdeungpo-gu, Seoul, Korea 150-721

Product Details

Product Name

GSM 900 / DCS 1800 / PCS 1900 / W-CDMA Terminal Equipment

Model Name

KF750

Trade Name

LG

CE 0168

Applicable Standards Details

R&TTE Directive 1999/5/EC

EN 301 489-01 V1.6.1, EN 301 489-07 V1.3.1
EN 301 489-17 V1.2.1, EN 301 489-24 V1.3.1
EN 301 511 V9.0.2
EN 301 908-1 V3.2.1 EN 301 908-2 V3.2.1,
EN 300 328 V1.6.1
EN 50360/EN 50361:2001
EN 60950-1 : 2001

Supplementary Information

Declaration

I hereby declare under our sole responsibility that the product mentioned above to which this declaration relates complies with the above mentioned standards and Directives

Name

Seung Hyoun, Ji / Director

Issued Date

21.Mar. 2008

LG Electronics Inc, Amsterdam Office
Veluwezoom 15, 1327 AE Almere, The Netherlands
Tel : +31 - 36- 547 - 8940, e-mail : seokim @ lge.com

Signature of representative



Some of the contents in this manual may differ from your phone depending on the software of the phone or your service provider.

KF750 User Guide

Congratulations on your purchase of the advanced and compact KF750 phone by LG, designed to operate with the latest digital mobile communication technology.



Disposal of your old appliance

- 1** When this crossed-out wheeled bin symbol is attached to a product it means the product is covered by the European Directive 2002/96/EC.
- 2** All electrical and electronic products should be disposed of separately from the municipal waste stream via designated collection facilities appointed by the government or the local authorities.
- 3** The correct disposal of your old appliance will help prevent potential negative consequences for the environment and human health.
- 4** For more detailed information about disposal of your old appliance, please contact your city office, waste disposal service or the shop where you purchased the product.

Setup **01**

Your standby screen **02**

The basics **03**

Get creative **04**

Get organised **05**

The web **06**

Settings **07**

Accessories **08**

Contents

Setup

Getting to know your phone	8
Installing the USIM and battery	10
Memory card.....	12
Menu map.....	14

Your standby screen

Touch screen tips.....	16
The status bar	17

The basics

Calls	18
Making a voice call	18
Making a video call.....	18
Making a voice/video call from Contacts.....	18
Making international calls.....	19
Answering and rejecting a call.....	19
Speed dialling.....	19
Making a second call.....	19
DTMF tones	20
Viewing your call logs.....	20
Using call divert	20
Using call barring.....	21
Changing the common call settings	21
Changing your video call settings	22
Contacts.....	23
Searching for a contact.....	23
Adding a new contact	23
Contact options	24

Creating a group.....	24
Using service dial numbers	25
Viewing your own number.....	25
Creating a business card.....	25
Changing your contact settings	25
Messaging.....	27
Messaging.....	27
Sending a message	27
Entering text	27
T9 predictive	27
Abc manual	28
Setting up your email	28
Retrieving your email	29
Sending an email using your new account	29
Changing your email settings ...	29
Message folders.....	30
Managing your messages	30
Using templates.....	31
Using emoticons.....	31
Changing your text message settings	31
Changing your multimedia message settings.....	32
Changing your other settings....	32

Get creative

Camera	33
Taking a quick photo	33
After you've taken your photo	33
Using the flash.....	34

Adjusting the brightness.....	34	Adding an effect to a photo	44
Choosing a shot mode	34	Morphing a photo.....	44
Using continuous shot mode	35	Spotlighting a photo	45
Using a frame shot mode.....	35	Editing your videos.....	45
Taking a panoramic shot	35	Trimming the length of your video	45
Using the advanced settings	36	Merging two videos together....	45
Changing the image size.....	37	Merging a photo with a video	46
Choosing a colour tone.....	37	Adding text to a video.....	46
Viewing your saved photos.....	38	Overlaying a photo.....	46
Setting a photo as a wallpaper or contact image	38	Adding a voice recording.....	47
Video camera	39	Adding a soundtrack to your video	47
Shooting a quick video	39	Changing the speed of your video	48
After you've shot your video	39	Adding a dimming effect	48
Adjusting the brightness.....	39	Multimedia.....	49
Using the advanced settings	39	Images.....	49
Changing the video size	40	My images option menus	49
Choosing an effect tone	41	Sending a photo.....	49
Watching your saved videos	41	Using an image	50
Your photos and videos	42	Organising your images	50
Editing photo album options	42	Deleting an image	50
Editing video album options	42	Moving or copying an image.....	50
Adjusting the volume when viewing a video.....	42	Editing an image	51
Capturing an image from a video.....	42	Marking and unmarking images.....	51
Sending a photo or video from the album	43	Checking your memory status	51
Viewing your photos as a slide show	43	Sounds	51
Setting a photo as a wallpaper	43	Using a sound.....	51
Editing your photos.....	44	Videos.....	52

Contents

Watching a video.....	52	Searching for stations.....	58
Using options while video is paused.....	52	Editing the channels.....	58
Sending a video clip.....	52	Resetting channels.....	58
Using a video clip as a ringtone.....	52	Listening to the radio.....	59
Using the video options menu.....	52	Using voice recorder.....	59
Games and Applications.....	53	Sending the voice recording.....	59
M-Toy menu.....	53	Get organised	
Playing a game.....	53	Organiser.....	60
Using the games options menu.....	53	Adding an event to your calendar.....	60
Flash contents.....	54	Changing your default calendar view.....	60
Viewing an SWF/SVG file.....	54	Adding an item to your to do list.....	60
Using options viewing the SWF/SVG file.....	54	Sharing a to do item.....	61
Documents.....	54	Adding a memo.....	61
Transferring a file to your phone.....	54	Tools.....	62
Viewing a file.....	55	Setting your alarm.....	62
Others.....	55	Using your calculator.....	62
Movie maker.....	55	Using the stopwatch.....	62
Creating a movie.....	55	Converting a unit.....	63
Music.....	55	Adding a city to your world time.....	63
Playing a song.....	56	PC Sync.....	64
Using options while playing music.....	56	Installing LG PC Suite on your computer.....	64
Creating a playlist.....	56	Connecting your phone and PC.....	64
Editing a playlist.....	57	Backing up and restoring your phone's information.....	64
Deleting a playlist.....	57	Viewing your phone files on your PC.....	65
Using the radio.....	57		

Synchronising your contacts	65	Settings	Changing your screen settings.....	74
Synchronising your messages.....	65		Personalising your profiles.....	74
Synchronising your music.....	65		Changing your phone settings.....	75
Using your phone as a mass storage device.....	66		Using Date & Time.....	75
PIN for DivX connection	66		Changing your other settings.....	75
			Changing security settings	76
			Using memory manager.....	76
			Using flight mode.....	76
The web		Accessories.....		77
Browser	68	Network service		78
Accessing the web.....	68	Technical data		78
Adding and accessing your bookmarks.....	68	Guidelines		
Saving a page	69	Guidelines for safe and efficient use		80
Accessing a saved page	69			
Viewing your browser history	69			
Using RSS reader	69			
Adding the Feed.....	70			
Updating the RSS reader	70			
Changing the web browser settings	70			
The web	71			
Using your phone as a modem	71			
Using Bluetooth.....	71			
Sending and receiving your files using Bluetooth	72			
Pairing with another Bluetooth device	73			
Using a Bluetooth headset	73			

Getting to know your phone





Charger, USB Cable, Handsfree connector

TIP: To connect the USB cable, wait until the phone has powered up and has registered to the network.



Side keys

- **When the screen is idle:** volume of ring tone.
- **During a call:** volume of the earpiece.
- **When playing a BGM track**
 - **Short press:** controls the volume.
 - **Long press:** move to the next or previous music file.
- **Touch screen button:** turn the LCD into a touch screen to access your files.
- **Opens the multitasking menu**
- **Capture button**

01

02

03


04

05

06

07


08

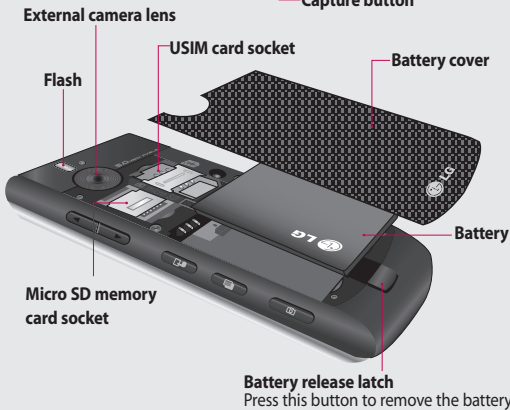

Installing the USIM and battery

1 Remove the battery cover

Press and hold down the battery release button at the top of the phone and lift off the battery cover.

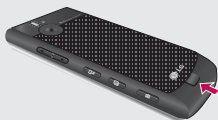

2 Remove the battery

Hold the top edge of the battery and lift it from the battery compartment using the battery cover.




WARNING: Do not use your fingernail when removing the battery.

WARNING: Do not remove the battery when the phone is switched on, as this may damage the phone.

3 Install the USIM card

Slide the USIM card into the USIM card holder. Make sure that the gold contact area on the card is facing downwards. To remove the USIM card, pull it gently in the reverse direction.

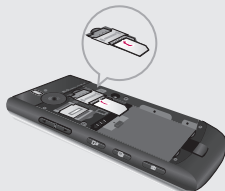


4 Install the battery

Insert the top of the battery first into the top edge of the battery compartment. Ensure that the battery contacts align with the terminals on the phone. Press down the bottom of the battery until it clips into place.



5 Charging your phone

Slide back the cover of the charger socket on the side of your KF750. Insert the charger (with the arrow to the back of the handset) and plug into a mains electricity socket. Your KF750 will need to be charged until a message reading "Battery full" appears on screen.

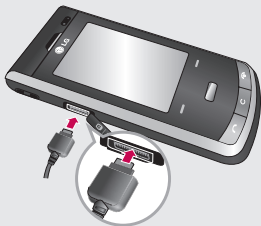

01

02

03

04

05

06

07

08

Memory card

Installing a memory card

You can expand the memory available on your phone using a memory card. The KF750 will support up to a 4GB memory card.

TIP: A memory card is an optional accessory.


- 1 Remove the battery cover as before.
- 2 Lift the memory card cover and insert a micro SD card with the gold contact area facing downwards. Close the memory card cover so that it clicks shut.



- 3 Replace the battery cover.

Formatting the memory card

If your memory card is already formatted, you can begin using it straight away. If your card isn't formatted, you will need to do so.

- 1 From the standby screen press  then select **Settings**.
- 2 Select **Memory manager** then choose **External memory**.
- 3 Select **Format** and then confirm your choice.
- 4 Enter the password, if one is set, and your card will be formatted and ready to use.

TIP! To change your default storage destination, open **Memory manager** from the Phone settings menu and select **Primary storage settings**.

NOTE: If your memory card has existing content it will automatically be filed in the correct folder, for example, videos will be stored in the My Videos folder.

01

02

03

04

05

06

07

08

Setup

13

Menu map



Games & apps

- 1 M-Toy
- 2 My games & apps
- 3 Settings



Calling

- 1 Make video call
- 2 Call logs
- 3 Call durations
- 4 Data volume
- 5 Call costs
- 6 Call divert
- 7 Call barring
- 8 Fixed dial numbers
- 9 Call waiting
- 0 Common settings
- * Video call settings



Organiser

- 1 Calendar
- 2 To do
- 3 Memo
- 4 Secret memo
- 5 Date finder
- 6 Settings



Multimedia

- 1 Touch media
- 2 Camera
- 3 Video camera
- 4 Music
- 5 FM radio
- 6 Voice recorder
- 7 Media editor
- 8 Movie maker



Messaging

- 1 Create new message
- 2 Inbox
- 3 Mailbox
- 4 Drafts
- 5 Outbox
- 6 Sent items
- 7 My folders
- 8 Templates
- 9 Emoticons
- 0 Settings



My stuff

- 1 My images
- 2 My sounds
- 3 My videos
- 4 Games & Apps
- 5 Flash contents
- 6 Documents
- 7 Others
- 8 My memory card



Google

- 1 Search
- 2 Mail
- 3 Maps
- 4 Blogger
- 5 You Tube
- 6 Upload History



Tools

- 1 Quick menu
- 2 Alarms
- 3 Calculator
- 4 Stopwatch
- 5 Converter
- 6 World time
- 7 SIM service



Connectivity

- 1 Bluetooth
- 2 Server sync
- 3 USB connection mode
- 4 TV out
- 5 PIN for DivX connection



Contacts

- 1 Add new
- 2 Search
- 3 Speed dials
- 4 Groups
- 5 Service dial numbers
- 6 Own number
- 7 My business card
- 8 Settings



Browser

- 1 Home
- 2 Enter address
- 3 Bookmarks
- 4 RSS reader
- 5 Saved pages
- 6 History
- 7 Settings



Settings

- 1 Profiles
- 2 Phone
- 3 Screen
- 4 Date & Time
- 5 Network
- 6 Internet profile
- 7 Access points
- 8 Packet data conn.
- 9 Security
- 0 Memory manager
- * Streaming settings
- # Reset settings

01

02

03

04

05

06

07

08

Your standby screen

Whenever your KF750 isn't in use it will return to your standby screen. From here you can access menu options, make a quick call and change your profile - as well as many other things.

Touch screen tips

If you press the touch screen button on the right-hand side of the phone the screen will switch to an interactive touch screen keypad.

Press and hold the touch screen button from the standby screen to enter a further multimedia menu.

To select an item, touch the icon on the touch screen. Your KF750 will vibrate slightly when it recognises that you've touched an option.

- There's no need to press too hard as the touchscreen is sensitive enough to pick up on a light touch.
- Use the tip of your finger to touch the option you require. Be careful not to touch any other keys.
- Don't cover the phone with a case or cover, as the touch screen will not work with any material covering it.

- The touch pad below the screen can be used as a four way arrow pad to navigate you through the phone menus.

TIP! Use the touch screen for fast and easy access to your music, Photo, M-Toy, Document and FM radio.



Touch pad

NOTE: When the screen light goes off, you can press the camera key on the right hand side of the phone to restore the standby screen.

Advice to the customer

In order to allow better antenna sensitivity LG suggest that you hold the handset as shown below.



Please do not cover the antenna area with your hand during a call or when using a Bluetooth connection. It may reduce signal quality.

The status bar

The status bar indicates, using various icons, things like signal strength, new messages and battery life as well as telling you whether your Bluetooth or GPRS is active.

Below is a table which explains the meaning of icons you're likely to see in the status bar.

Icon	Description
	Multitasking
	Network signal strength (number of bars will vary)
	No network signal
	Battery empty

Icon	Description
	New text message
	New email
	An alarm is set
	Normal profile in use
	Silent profile in use
	External memory
	Calls are diverted
	GPRS available
	EDGE in use
	Roaming
	Bluetooth is active
	Calls are rejected
	3G available

01

02

03

04

05





06

07

08

Calls

Making a voice call


- 1 Enter the number including the full area code.
To delete a digit press .
To delete all digits press and hold .
- 2 Press  to make the call.
- 3 Press  or close the handset to finish the call.

Making a video call

You can make a video call in a 3G-covered service area if the user you are calling also has a 3G video phone in a 3G-covered service area. You can also receive video calls. To make a video call, do the following.



- 1 Enter the phone number, as before.
- 2 If you do not want to use the speakerphone, ensure you have the headset plugged in.
- 3 To start the video function, press the left soft key **Options** and select **Make video call**. You will be notified that you will need to close other applications to make the video call.

NOTE: The video call may take some time to connect. Please be patient. While the video call is connecting, you will see your own image; after the other party has answered, their image will be displayed on the screen.


- 4 Adjust the camera position if necessary.
- 5 Press  to finish the call, or close the handset.

Making a voice/video call from Contacts


It's easy to call anyone whose number you have stored in your Contacts.

- 1 Press the down key on the navigation touch pad to access the contacts list.
- 2 Scroll to the contact to make a call.
- 3 Press  to make a voice call. Press the left soft key and select **Make video call** to make a video call.
- 4 Press  to finish the call.

Making international calls

- 1 Press and hold **0+** for the international prefix. The '+' character prefixes the international access code.
- 2 Enter the country code, area code, and the phone number.
- 3 Press .

Answering and rejecting a call


When your phone rings press the  hard key to answer the call.

Press Silent to mute the ringing. This is great if you've forgotten to change your profile to Silent for a meeting!

Press the End key to reject the incoming call.



Speed dialling

You can assign a frequently-called contact to a speed dial number.


- 1 Press  and select **Contacts**.
- 2 Select **Speed dials**.
- 3 Your Voicemail is set to speed dial 1. Select any other number to assign it to a speed dial contact.

- 4 Your address book will open. Select the contact you'd like to assign to that number.

To call a speed dial number:

- 1 Press the assigned number then press the send key , or .
- 2 Press and hold the assigned number until the contact appears on screen.

Making a second call

- 1 During your initial call, press **OK**, then **Options**, and select **Add new call**.
- 2 Dial the number or search your contacts (see page 18 for details on how to make a call from Contacts).
- 3 Press  to connect the call.
- 4 Both calls will be displayed on the call screen. Your initial call will be locked and the caller put on hold.
- 5 Select **Swap** to change between the calls.
- 6 To end one or both calls select **Options** → **End** followed by **All** or **Active**.

NOTE: You will be charged for each call you make.

01

02

03

04

05

06

07


08

Calls

DTMF tones

DTMF allows you to use numerical commands to navigate menus within automated messages. DTMF is switched on as default.

Viewing your call logs

Press , then select **Calling** →

Call logs.


Choose to view:

All calls - View a complete list of all of your dialled, received and missed calls.

Dialled calls - View a list of all the numbers you have called.

Received calls - View a list of all the numbers that have called you.

Missed calls - View a list of all the calls you have missed.

Press , select **Calling**.

Before Calling you can also choose to view:


Call durations - View the duration of all your sent and received calls.

Data volume - View the amount in kilobytes of all your received and sent data.

Call costs - View the charges applied to your dialled numbers (this service is network-dependant. Some operators are unable to support it).

TIP! From any calls list, touch the left soft key and **Delete All** to delete all the recorded items.

Using call divert

- 1 Press , then select **Calling**.
- 2 Select **Call divert** and choose **Voice calls** and/or **Video calls**.
- 3 Choose when to divert all calls; when the line is busy, when there is no answer or when you are not reachable.
- 4 Input the number you'd like to divert to.
- 5 Select **Activate**.

NOTE: Charges may be incurred for diverting calls. Please contact your network provider for details.


TIP! To turn off all call diverts, choose **Deactivate all**.

Using call barring

- 1 Press , select **Calling**.
- 2 Select **Call barring** and choose **Voice calls** and/or **Video calls**.
- 3 Choose any or all of the five options:
 - All outgoing**
 - Outgoing international**
 - Outgoing international calls except home country**
 - All incoming**
 - Incoming when abroad**
- 4 Enter the call barring password. Please check with your network operator for this service.

TIP! Select **Fixed dial number** to turn on and compile a list of numbers that can be called from your phone. You'll need your PIN2 code from your operator. When activated, only numbers included in the fixed dial list can be called from your phone.

Changing the common call settings

- 1 Press , then select **Calling**.
- 2 Select **Common settings**. From here you can amend the settings for:
 - Call reject** - Select **On** or **Off** and choose to reject all calls, those from specific groups, contacts, unregistered numbers (those not in your list of contacts) or those with no caller ID.
 - Send my number** - Choose whether your number will be displayed when you call someone.
 - Auto redial** - Choose **On** or **Off**.
 - Answer mode** - Choose whether to answer the phone by pressing the **Send** key, by pressing any key, or by opening the slide.
 - Minute minder** - Select **On** to hear a tone every minute during a call.
 - BT answer mode** - Choose how to answer a call when using a Bluetooth headset. Select **Handsfree** or **handset**.

01

02

03

04

05

06

07

08


Calls

Save new number - Saves numbers you use that aren't already stored in Contacts.

Slide close setting - Select **End call** to be able to disconnect a call by closing the slide.

Voice clarity- Select **Yes** to listen to the voice clearly.

Changing your video call settings

- 1 Press , then select **Calling**.
- 2 Select **Video call settings**.
- 3 Determine whether to **Use private picture** and/or, switch on the **Mirror**.

Contacts

Searching for a contact

There are two ways to search for a contact:

From the standby screen


- 1 From the standby screen touch the down key on the touch pad to open the address book.
- 2 Press the number key corresponding to the first letter of the contact you'd like to view. So, for 'Home' press **4** (GHI) twice.

TIP! You can search by group by touching the left soft key and selecting **Search by group**. This will bring up a list of all your groups.

From the main menu

- 1 Select **Contacts**.
- 2 Select **Search** and enter the first few letters of the contact you'd like to find using the keypad.
- 3 Your address book will bring up a list of the contacts corresponding to the letters you've entered.

Adding a new contact

- 1 Press  and select **Contacts**.
- 2 Select **Add new**.
- 3 Choose whether to save the contact to your **Handset** or **USIM**.
- 4 Enter the first and last name of your new contact. You do not have to enter both, but you must enter one or the other.
- 5 Enter up to five different numbers and assign a type for each. Choose from **Mobile, Home, Office, Pager, Fax, VT** and **General**.
- 6 Add up to two email addresses.
- 7 You can assign the contact to a group. Choose from **No group, Family, Friends, Colleagues, School** or **VIP**.
- 8 You can also add a **Homepage, Home address, Company name, Job title, Company address** and a **Memo**.

TIP! You can create customised groups for your contacts. See **Creating a group** on page 24.

01

02

03

04

05

06

07

08

Contacts

Contact options

There are many things you can do when viewing a contact. Here's how to access and use the options menu:

- 1 Open the contact you'd like to use. See **Searching for a contact** on page 23.
- 2 Press the left soft key to open the list of options.

From here you can:

Send message - Send a message or an email to the contact. See page 27 for details on how to send messages.

Send business card - Send the contact's details to another person as a business card. Choose to send as a **Text message, Multimedia msg, Email** or via **Bluetooth**.

Make voice call - Call the contact.

Make video call - Make a video call to the contact.

Edit - You can edit the contact.

Mark/Unmark - Mark your contacts for multiple selection.


Search by - You can search the entry by number or group.

Save to USIM/ Handset - Choose to move or copy to the USIM card or handset (depending on where you originally saved the contact).

Delete - Delete the contact.

Text input - You can set the text input method.


Creating a group

- 1 Press  and select **Contacts**.
- 2 Select **Groups** and touch the left soft key.
- 3 Select **Add new group**.
- 4 Enter a name for your new group.
- 5 Touch **Done**.

NOTE: If you delete a group, the contacts which were assigned to that group will not be lost. They will remain in your address book.

TIP! You can edit an existing group by highlighting it and touching the left soft key. Choose to **Add a member** to the group from your contacts, assign a **Group ringtone**, **Rename** the group or **Delete** the group.

Using service dial numbers

You can view the list of Service Dial Numbers (SDN) assigned by your service provider (if supported by the USIM card). Such numbers include emergency, directory enquiries and voicemail numbers. After selecting a service number, press  to dial that service.

Viewing your own number


Select **Own number** in the Contacts menu to view your number.

Creating a business card

You can create your own business card by selecting **My business card**, then **Add**. Enter your name, number, email address and image.

Changing your contact settings

You can adapt your contact settings so that your address book works according to your preferences.

- 1 Press  and select **Contacts**.
- 2 Select **Settings**. From here you can adjust the following settings:

Contact list settings - Choose whether to view contacts saved to both your **Handset & USIM**, **Handset only** or **USIM** only. You can also select to show the first name or last name of a contact first, and to show a contact picture.

Synchronise contacts - Connect to your server to synchronise your contacts. See **Synchronising your contacts** on page 65.

Copy - Copy your contacts from your USIM to your handset or from your handset to your USIM. Choose to do this one by one, or all together.

Move - This works in the same way as **Copy**, but the contact will only be saved to the location you've moved it to. If you move a contact from the USIM to the handset it will be deleted from the USIM memory.

Send all contacts via Bluetooth - Send all contacts information to another handset by Bluetooth.

Back up contacts - See **Backing up and restoring your phone's information** on page 64.

01

02

03

04

05

06

07

08

Contacts

Restore contacts - See **Backing up and restoring your phone's information** on page 64.

Clear contacts - Delete all your contacts.


Memory info. - You can check how much memory you've got left on your handset or your USIM.

Messaging

Messaging

Your KF750 combines SMS, MMS and email into one intuitive and easy to use menu.

Sending a message

- 1 Select **Messaging** then choose **Create new message**.
- 2 Choose **Message** to send an SMS or MMS. A new SMS will open.
- 3 Select **Options**, then **Insert**, to add an image, video, sound or subject.
- 4 Press  **Send**. Enter the phone number or select **Contacts** to open your contacts list. You can add multiple contacts.



WARNING: You will be charged per 160 character text message for each person that you send the message to.





WARNING: If an image, video or sound is added to an SMS it will be automatically convert to an MMS and you will be charged accordingly.


Entering text

There are two ways to enter text:

T9 predictive and Abc manual.

To switch between text entry methods, press and hold the  key when you have a blank message open.

To change between upper, lower and title case press the  key.

To delete a character use the  hard key below the screen.

To enter a symbol select **Options** and **Insert**.

T9 predictive

T9 mode uses a built-in dictionary to recognise words you're writing based on the key sequences you touch. Simply touch the number key associated with the letter you want to enter, and the dictionary will recognise the word once all the letters are entered. For example, press 8, 3, 5, 3, 7, 4, 6, 6, 3 to write 'telephone'.

01

02

03

04

05

06

07

08

Messaging

Abc manual

In Abc mode you must press the key repeatedly to enter a letter. For example, to write 'hello', press **4** twice, **3** twice, **5** three times, **5** three times again, then **6** three times.

Setting up your email

You can stay in touch on the move using email on your KF750. It's quick and simple to set up a POP3 or IMAP4 email account.

- 1 Select **Messaging** then select **Settings**.
- 2 Select **Email**, then **Email accounts**.
- 3 You can now choose how your account works:
 - Title** - Enter a name for this account.
 - My name** - Enter your name.
 - Username** - Enter the account username.
 - Password** - Enter the account password.
 - Email address** - Enter the account email address.
 - Reply email address** - Enter the 'reply to' email address.

Outgoing mail server - Enter the account details.

Incoming mail server - Enter the account details.

Maximum receive size - Choose the size limit of your emails, the maximum is 1MB.

Mailbox type - Enter the mailbox type, POP3 or IMAP4.

Save to server - Choose whether to save your emails to the server. For IMAP4 accounts copies are always saved.

Save sent mail into - Choose where to save your IMAP4 emails. For POP3 accounts copies are always saved on the phone.

Access point - Choose your Internet access point.

Auto retrieve - Choose whether to fetch your new emails automatically.

Advanced settings - Choose whether to use the advanced settings.

Incoming server port - Normally, this is 110 for POP3 accounts and 143 for IMAP4 accounts.

SMTP authentication - Choose the security settings for the outgoing mail server.

APOP secure login - Choose to activate APOP secure login for a POP3 account. IMAP4 accounts are always set to off.

Now your account is set up, it will appear in the list of accounts in your Email folder.

Retrieving your email

You can automatically or manually check your account for new email. See 'Changing your email settings' to check automatically.

To check manually:

- 1 Select **Messaging** then **Mailbox**.
- 2 Select the account you want to use.
- 3 Choose **Retrieve** and the phone will connect to your email account and retrieve your new messages.

Sending an email using your new account

- 1 Select **Messaging**, then choose **Create new message**.
- 2 Choose **Email** and a new email will open.

- 3 Use **Options** to enter the recipient's address and to write your message. Use **Insert** to attach images, videos, sounds or other file types.
- 4 Select **Send** and your email will be sent.

TIP! You can email Word, Excel, Power Point and PDF documents to your KF750 so you can review them on the move.

Changing your email settings

You can adapt your email settings so that it works according to your preferences.

- 1 Select **Messaging** then open **Settings**.
- 2 Select **Email** and then you can adapt the following settings:
 - Allow reply email** - Choose to allow the sending of 'read confirmation' messages.
 - Request reply email** - Choose whether to request 'read confirmation' messages.
 - Retrieve interval** - Choose how often your KF750 checks for new email messages.

01

02

03

04

05

06

07

08

Messaging

Include message in Fwd & Reply -

Choose whether or not to include the original message.

Include attachment - Choose whether or not to include the original attachment.

Auto Retrieval in Roaming -

Choose whether or not to automatically retrieve your messages when abroad.

New email notification - Choose whether or not to be alerted to new emails.

Signature - Create an email signature and switch this feature on.

Priority - Choose the priority level of your email messages.

Message folders

Inbox - All the messages you receive are placed into your inbox. Here you can read, reply to and forward your messages.

Mailbox - All emails you receive are placed into your Mailbox.

Drafts - If you don't have time to finish writing a message, you can save what you've done so far here.

Outbox - This is a temporary storage folder for messages that are being sent.

Sent items - All the messages you send are placed into your Sent items folder.

Managing your messages

- 1 Select **Messaging** then **Inbox**.
- 2 Select Options and then choose to:
 - Reply** - Send a reply to the selected message.
 - Forward** - Send the selected message on to another person.
 - Call** - Call the person who sent you the message.
 - Delete** - Delete the message.
 - Create new message** - Open a new, blank message or email.
 - Mark/Unmark** - Mark your messages for multiple deletion.
 - Copy & Move** - Copy or move the message to your phone, USIM or My folders.
 - Filter** - View your message by type. This will group SMS separately from MMS.

Message info. - See additional information for the message, including the time it was sent.

If you see the message **No space for USIM message** you should delete some messages from your inbox.

If you see the message **No space for messages** you can delete either messages or saved files to create space.

Using templates

Create templates for the SMS and MMS messages you send most frequently. You'll find some templates already on your phone, and you can edit these if you wish.

- 1 Select **Messaging** then choose **Templates**.
- 2 Choose **Text templates** or **Multimedia templates**. You can then select Options to **Add new, Edit, Delete** or **Delete all** templates.

Using emoticons

Liven up your messages using emoticons. You'll find some commonly used emoticons already on your phone.

- 1 Select **Messaging** then choose **Emoticons**.
- 2 Select Options to **Add new, Edit, Delete** or **Delete all** emoticons.

Changing your text message settings

Your KF750 message settings are pre-defined so that you can send messages immediately. If you'd like to change the settings, you can do so as follows.

Select **Messaging**, then choose **Settings**, then **Text message**. You can make changes to:

Text message centre - Enter the details for your message centre.

Delivery report - Choose to receive confirmation that your message was delivered.

Validity period - Choose how long your message is stored at the message centre.

Message types - Convert your text into **Voice, Fax, X.400** or **Email**.

Character encoding - Choose how the characters in your messages are encoded, this impacts the size of your message and therefore data charges.

01

02

03

04

05

06

07

08

Messaging

Send long text as - Choose to send as **Multiple SMS** or as an **MMS**.

Changing your multimedia message settings

Your KF750 message settings are pre-defined so that you can send messages immediately. If you'd like to change the settings, you can do so as follows.

Select **Messaging**, then choose **Settings**, then **Multimedia message**.

You can make changes to:

Retrieval mode - Choose **Home** or **Roaming** network. If you then choose **Manual** you will receive only notifications of MMS and you can then decide whether or not to download them in full.

Delivery report - Choose to allow and/or request a delivery report.

Read reply - Choose to allow and/or send a read reply.

Priority - Choose the priority level of your MMS.

Validity period - Choose how long your message is stored at the message centre.

Slide duration - Choose how long your slides appear on screen.

Delivery time - Deliver your message at a specific time.

Multi msg. centre - Enter the details for your message centre.

Changing your other settings

Select **Messaging**, choose **Settings** then:

Info. service - Choose your reception status, language and other settings.

Service message - Choose to receive or block service messages. You can also set your message security by creating trusted and untrusted lists of senders.

Camera

Taking a quick photo

- 1 Press and hold the capture button on the right-hand side of the handset and the camera's viewfinder will appear on the screen.
- 2 Holding the phone horizontally, point the lens towards the subject of the photo.
- 3 Slightly depress the capture button and a focus box will appear in the centre of the viewfinder screen.
- 4 Position the phone so you can see the subject of your photo in the focus box.
- 5 When the focus box turns green, the camera has focused on your subject.
- 6 Press the capture button fully.

After you've taken your photo

Your captured photo will appear on the screen. The name of the image runs along the bottom of the screen together with five icons down the right side.



Back Go back to previous menu.

View the pictures you have taken in your Album.

Send the photo as an MMS, Email, via Bluetooth or Blog This. See page 27 for **Sending a message**, page 72 for **Sending and receiving your files using Bluetooth**.

Take another photo straight away. Your current photo will be saved.

Use the image as wallpaper, as a Contact image, or in your Start-up or Shut down screen.

Delete the photo you have just taken. The viewfinder will reappear.

TIP! In camera mode select the Play icon to open the photo album. See page 38, **Viewing your saved photos**, for details.

01

02

03

04

05

06


07

08

Camera

Using the flash



Flash is set to Auto by default, but there are other options.

- 1 Select  from the top right corner of the viewfinder to enter the flash sub-menu.
- 2 There are three flash options:
 - On** - Your camera will always flash when taking a picture.
 - Auto** - Your camera will assess whether or not the flash is necessary for a good picture.
 - Off** - The camera will never flash. This is useful if you want to save battery power. Select the flash option you'd like to use.
- 3 When you've made your selection the flash menu will automatically close, ready for you to take your picture, and the flash icon in the viewfinder will change according to your chosen flash mode.

NOTE: Whenever you exit the camera, the flash setting will revert to Auto mode. You'll need to switch the flash back on if you still need it when you reopen the camera.

Adjusting the brightness

Contrast defines the difference between light and dark in an image. A low contrast image will appear foggy, whereas a high contrast image will appear much sharper.

- 1 Select **Brightness** in **Settings**.
- 2 Slide the contrast indicator along the bar, towards  for a lower contrast, hazier image or towards  for a higher contrast, sharper image.

Choosing a shot mode

- 1 Select **Settings** to view the available shot modes.
- 2 Choose from the five options:
 - Normal** - This is the default shot type. The photo will be taken in the normal way, as outlined in **Taking a quick photo** on page 33.
 - Continuous shot** - This enables you to take nine shots automatically in very quick succession. See **Using continuous shot mode** below for details.
 - Frame shot** - Choose from one of the fun frames to transform your friend into a pirate or just to

decorate their surroundings.

Panorama - This shot type is great for taking a photo of a large group of people or for capturing a panoramic view. See **Taking a panoramic shot** below for more details.

Music video shot - This shot type allows to take a shot with music or voice.

Using continuous shot mode

Continuous shot mode is great for taking photos of moving objects or at sporting events.

- 1 Select **Continuous shot**.
- 2 Position the subject in the viewfinder and press the capture button as you would to take a normal photo.
- 3 The camera will take nine shots in quick succession and display the first with eight thumbnails on the screen.
- 4 Select the shot you want to keep by selecting the thumbnail.

Using a frame shot mode

Frame shot can be used to transform your friend into a pirate, or just to decorate their surroundings with a frame.

- 1 Select **Frame shot** menu.
- 2 Position the subject in the fun frame and press the capture button.
- 3 Save the image by selecting **Save**.

Taking a panoramic shot

Capture life as it appears using panoramic shot. The camera will let you take three photos, all aligned, and combine them into one image so that your wide angle view becomes a panoramic photo.

- 1 Select **Panorama**.
- 2 Take the first photo as normal. A ghosted version of the right side of the image will appear in the viewfinder.
- 3 When you take the second and third photos, line the ghost of the previous image up with the next image in the viewfinder.
- 4 In phone photos are saved as a one panoramic image only.

01

02

03

04

05

06

07

08

Camera

NOTE: Due to the image size the panoramic photo will appear slightly distorted in the Album view.

Using the advanced settings

From the viewfinder select **Settings**.

Size - Change the size of the photo. See **Changing the image size** on page 37.

Scene mode - Set the the camera to adjust for the environment. Choose from **Auto, Portrait, Landscape, Night, Beach, Sports, and Party**.

Brightness - Set the brightness of the image in the viewfinder of the camera.

Effect - Choose a colour tone to apply to the photo you're taking. See **Choosing a colour tone** on page 37.

White Balance - The white balance ensures that any white in your photo is realistic. In order for your camera to correctly adjust the white balance you may need to determine the light conditions. Choose from **Auto, Daylight, Cloudy, Illuminate and Indoors**.

Timer - The self-timer allows you to set a delay after the capture button is pressed. Choose from **3 seconds, 5 seconds or 10 seconds**. Great for a group photo that you want to be part of too!

Shot mode - See page 34.

ISO - ISO determines the sensitivity of the camera's light sensor. The higher the ISO, the more sensitive the camera will be to light. This is useful in darker conditions when the flash can't be used. Choose an ISO value from **Auto, ISO 100, ISO 200, ISO 400 or ISO 800**.

Quality - Super fine/ Fine /Normal

Memory in use - Choose whether to save your photos to the **Handset** memory or to the **External** memory.

Hide icons - Hide the icons to the side of the viewfinder.

Focus mode - Set the camera to focus automatically.

Sound - Select one of three different shutter sounds.

NOTE: Always select **Save** after selecting a new setting to implement the changes you've made.

TIP! When you exit the camera, all your settings will return to default, except image size and image quality. Any non-default settings you require will need to be reset, for example, colour tone and ISO. Check them before you take your next photo.

TIP! The settings menu is superimposed over the viewfinder, so when you change elements of the image colour or quality, you'll be able to see the image change in preview behind the settings menu. Remember to select **Save** before exiting to apply any changes.

Changing the image size

The more pixels, the larger the file size, which in turn means they will take up more of your memory. If you want to fit more pictures on your phone or memory card you can alter the number of pixels to make the file size smaller.

- 1 From the viewfinder select **Settings** in the bottom left corner.
- 2 Select **Size**.
- 3 Select a pixel value from the six numerical options (**5M: 2592x1944**, **3M: 2048x1536**, **2M: 1600x1200**, **1M: 1280x960**, **640x480**, **320x240**) or choose the preset:
Contact - This sets the camera to take a photo the perfect size to be added to a phone contact.
- 4 Select the size option you'd like to use and press **Select** to implement your changes. The settings menu will automatically close, ready for you to take your picture.

Choosing a colour tone

- 1 From the viewfinder, select **Settings**.
- 2 Select **Effect**.
- 3 There are twelve colour tone options: **Off**, **Black & White**, **Negative**, **Sepia**, **Blue**, **Emboss**, **Sketch**, **Purplish**, **Bluish**, **Monochrome**, **Edgemap**, or **Posterize**.
- 4 Choose the colour tone you'd like to use and press **Select**.

01

02

03

04

05

06

07

08

Camera

5 When you've made your selection, the colour tone menu will automatically close, ready for you to take your picture.

TIP! You can change a photo taken in colour to black and white or sepia, taken but you cannot change a picture taken in black and white or sepia back to colour.

NOTE: Contact images can only be added to contacts saved to your phone, not your SIM.

TIP! You can also access your photos using the touch screen. Press and hold the touch screen button on the right-hand side of the phone and touch the **Photo** icon. You can then scroll through your pictures by touching the screen.

Viewing your saved photos


- 1** You can access your saved photos from within the camera mode and from the Album at the top of the icon menu.
- 2** Your album will appear on the screen.
- 3** Highlight the photo you want to view to bring it to the front of the album.
- 4** Select the photo to open it fully.

Setting a photo as a wallpaper or contact image

From your image album, select an image and **Use as** to use the image as a wallpaper or contact image.





Video camera


Shooting a quick video

- 1 Move the camera mode switch to  and press the centre button. The video camera's viewfinder will appear on screen.
- 2 Holding the phone horizontally, point the lens towards the subject of the video.
- 3 Press the capture button once to start recording.
- 4 **REC** will appear at the bottom of the viewfinder. Press the capture button again to stop recording.

After you've shot your video

A still image representing your captured video will appear on screen. The name of the image runs along the bottom of the screen together with five icons down the right side.




-  View your video album.
-  Play the file.
-  New video is played.
-  Send the video as an MMS, as an Email, via Bluetooth or YouTube. See page 27 for **Sending a message**, or page 72 for **Sending and receiving your files using Bluetooth**.

 Delete the video you have just made. The viewfinder will reappear.

TIP! Select the album icon to open the video album. See **Watching your saved videos** on page 41 for details.

Adjusting the brightness

Contrast defines the difference between light and dark in an Video. A low contrast Video will appear foggy, whereas a high contrast Video will appear much sharper.

- 1 Select .
- 2 Slide the contrast indicator along the bar, towards  for a lower contrast, hazier Video, or towards  for a higher contrast, sharper Video.

Using the advanced settings

From the viewfinder select **Settings**.

Size - Change the size of the video. See **Changing the video size** on page 40.

Scene mode - Set the Video for adjusting the environment. Choose from **Auto**, **Portrait**, **Landscape**, **Night**, **Beach**, **Sports**, and **Party**.

01

02

03

04

05

06

07

08

Video camera

Effect - Choose an effect tone to apply to the video you're making. See **Choosing an effect tone** on page 41.

White Balance - The white balance ensures that any white in your Videos is realistic. In order for your camera to correctly adjust the white balance you may need to determine the light conditions. Choose from **Auto**, **Daylight**, **Indoors**, **Illuminate** and **Cloudy**.

Music video shot - This shot type allows to take a shot with music or voice.

Recording speed - Record the video using **Normal**, **Slow video**, **Fast video**.

Duration - Select the maximum length of the recording.

Memory in use - Choose whether to save your videos to the **Handset** memory or to the **External** memory.

Hide icons - Hide the icons to the side of the viewfinder.

Voice - Choose **Mute** to record a video without sound.

NOTE: Always touch **Save** after selecting a new setting to implement the changes you've made.

TIP! When you exit the video camera all your settings will return to default, except Video Size & Video Quality. Any non-default settings you require will need to be reset, for example colour tone and white balance. Check them before you shoot your next video.

Changing the video size

The more pixels, the larger the file size, which in turn means they will take up more memory. If you want to fit more videos onto your phone you can alter the number of pixels to make the file size smaller.

- 1 Select **Size** from the settings menu.
- 2 Select a pixel value from the four options:

640x480(W) - The highest quality wide screen option.

320x240 - Smaller Video size, therefore smaller file size. Great for saving on memory space.

176x144 - Smallest Video size and therefore a smaller file size.

16:9 Wide - Wide screen option.

- 3 Select the size option you'd like to use and press **Save** to implement your changes. The settings menu will automatically close, ready for you to shoot your video.

NOTE: When you view your videos, playback speed is 30 frames per second, with the exception of 120 fps where playback is at 15 frames per second.



WARNING: The great editing software on your LG KF750 is compatible with all video types except 640x480. Don't record in this format if you plan to edit your video.

Choosing an effect tone

- 1 Select **Settings** and choose **Effect**.
- 2 There are twelve colour tone options: **Off, Black & White, Negative, Sepia, Blue, Emboss, Sketch, Purplish, Bluish, Monochrome, Edgemap** and **Posterize**.
- 3 Choose the colour tone you'd like to use and press **Select**.

- 4 When you've made your selection, the colour tone menu will automatically close, ready for you to shoot your video.

TIP! You can change a video shot in colour to black and white or sepia after it's taken, but you cannot change a video shot in black and white or sepia to colour.

Watching your saved videos

- 1 Select the album icon. Your album will appear on screen.
- 2 Highlight the video you want to view to bring it to the front of the album.
- 3 Select the video to open it fully.

01

02

03

04

05

06

07

08

Your photos and videos

Editing photo album options

You can view and edit your images using the Options menu in the photo album.

View - View the image.

Send - Send the image to a friend.

Delete - Delete the image.

Use as - Set the image as a wallpaper/ contacts image/start-up or shut down image.

Slide show - Set the image as a slide show.

Edit - Edit the image.

Print - Print an image file via PictBridge or Bluetooth.

Editing video album options

You can view and edit your videos using the Options menu in the video album.

Play - Play the video.

Send - Send the video to a friend.

Delete - Delete the video.

Use as - Set the video as a ringtone.

Rename - Rename the video.


Edit - Edit the video.

TIP! You can easily delete a photo or video. Select the photo or video, then select **Options** and choose **Delete**.


Adjusting the volume when viewing a video

To adjust the volume of the audio on a video, use up and down on the touch pad.


Capturing an image from a video

- 1 Play the video you would like to capture an image from.
- 2 Press  to pause the video on the frame you'd like to convert to an image and open the options menu.
- 3 From the options menu select **Capture**.
- 4 The image will appear on the screen with its assigned image name.
- 5 Select **OK**.
- 6 Select **Delete** to return to the album.

- 7 The image will be saved in the My files folder and will appear in the album (You need to exit the album and then re-open for this to appear).

 **WARNING:** Some functions may not work properly if the multimedia file has not been recorded on the phone.

Sending a photo or video from the album

- 1 Select a photo or video to open it. If you select a video, press  when it starts to play.
- 2 Select the left soft key to open the options menu.
- 3 Select **Send** and choose how you would like to send the video or photo: **Message, Email or Bluetooth**.
- 4 The chosen messaging application will open so you can send the video or photo.

NOTE: The photo or video may need to be resized before it can be sent by MMS. Some videos may be too large to send by MMS at all, in which case you can choose one of the other sending options.

Viewing your photos as a slide show

Slide show mode will show all the photos in your album one at a time as a slide show.

- 1 Select the photo you would like to begin the slide show.
- 2 Press the left soft key to open the Options menu.
- 3 Select **Slide show** and it will begin.

Setting a photo as a wallpaper

- 1 Select the photo you would like to set as a wallpaper.
- 2 Select the left soft key to open the Options menu.
- 3 Select **Use as - Wallpaper**.

01

02

03

04

05

06










07

08

Your photos and videos

Editing your photos

There are loads of great things you can do to your photos to change them, add to them or liven them up a little.

- 1 Open the photo you'd like to edit and select **Options**.
- 2 Select **Edit**.
- 3 Select an icon to adapt your photo:
 -  Rotate the image left or right.
 -  Change the size of the photo.
 -  Insert an icon to the image.
 -  Clip the image to 640X480, 320X240, 176X146.
 -  Distort the image.
 -  Change the colour tone to Black and white, Sepia, or Colour negative.
 -  Change or add a frame to the image.
 -  Reverse the picture to a mirror image.
 -  Change the image using morphing, fun mirror, or spotlight.

Adding an effect to a photo

- 1 From the editing screen, select **Special effect** or **Frame effect**.

- 2 Choose to apply any of the two options to the photo:
 - Special effect** - Change the colour of a photo to **Black and white**, **Sepia** or **Colour Negative**.
 - Frame effect** - Add a frame to your photo. Select the desired frame type. Select **OK** to have the chosen frame superimposed over your photo.
- 3 To undo an effect simply select **Undo**.

TIP! You can use more than one effect on a photo, except for a colour effect.

Morphing a photo

Morphing a photo is great for changing the facial expressions of friends, or just for distorting a photo for artistic effect.

- 1 From the editing screen select **More** and then **Morphing**.
- 2 If the face in the picture is not detected, a pop up message **Face is not detected** will be displayed and the morphing effect will be cancelled.

- 3 If the face is detected the first morphing style will be applied to the picture.
- 4 Select the morphing style you would like to use on the photo.
- 5 Select the intensity of morphing.
- 6 Select **OK** to apply the changes.

Spotlighting a photo

- 1 Select the desired location on the image.
- 2 Select the size of spotlight.
- 3 Select **OK** to apply the changes.

TIP! Use the Fun mirror to copy the left side of the image over the right side to make fun pictures.

TIP! You can undo more than one effect on a photo, except for a resize. If any effect is already applied before the resize effect, the applied and resize effects will be saved. The undo count will then be reset.

Editing your videos

Editing features are available for all video types except 640x480. Don't record in this format if you plan to edit your video.

Trimming the length of your video

- 1 Choose the video you'd like to edit, and touch **Options**.
- 2 Select **Edit** and choose **Trim**.
- 3 Select **Start** and **End** to mark the new start and end points.

Merging two videos together

- 1 Choose the first video you'd like to edit, and select **Options**.
- 2 Select **Edit** and choose **Video merge**.
- 3 The My videos folder will open. Choose the video you would like to merge to and choose **Select**.
- 4 Select **Effect** to choose how the videos merge together: **None**, **Fade out**, **Pan zoom**, **Oval**, **Uncover**, **Blind**, **Checker board** or **Dissolve**.

01

02

03

04


05

06


07

08

Your photos and videos

- 5 Press  to save the new merged video. Choose to save over the original file or as a new file.
- 6 Repeat these steps to merge more videos.

Merging a photo with a video

- 1 Choose the video you'd like to edit, and select **Options**.
- 2 Select **Edit** and choose **Image merge**.
- 3 The My images folder will open. Choose the photo you would like to merge into your video and choose **Select**.
- 4 Select and slide the photo to merge it to the end or the beginning of the video.
- 5 Select **Effect** to choose how the photo and video merge together: **None, Fade out, Pan zoom, Oval, Uncover, Blind, Checker board** or **Dissolve**.
- 6 Press . Choose to save over the original file or as a new file.
- 7 Repeat these steps to merge more photos.

Adding text to a video

- 1 Choose the video you'd like to edit, and select **Options**.
- 2 Select **Edit** and choose **Text overlay**.
- 3 Enter your text using the keypad and press **Save**.
- 4 Press **Start** and mark when you'd like the text to appear.
- 5 Select the area of the screen you'd like the text to appear in.
- 6 Select **OK** to mark when you'd like the text to disappear.
- 7 Select **Save** to save it. Choose to save over the original file or as a new file.
- 8 Repeat these steps to add more text.

Overlaying a photo

- 1 Choose the video you'd like to edit, and select **Options**.
- 2 Select **Edit** and choose **Image overlay**.

- 3 The My images folder will open. Choose the photo you would like to overlay your video and choose **Select**.
- 4 Select **Start** and mark when you'd like the photo to appear.
- 5 Select the area of the screen you'd like the photo to appear in. If the photo is too big it will overlay the whole screen, not just the area selected.
- 6 Select **OK** to mark when you'd like the photo to disappear.
- 7 Select **Save** to save it. Choose to save over the original file or as a new file.
- 8 Repeat these steps to add more photos.

Adding a voice recording

- 1 Choose the video you'd like to edit and select **Options**.
- 2 Select **Edit** and choose **Voice recording**. The quality of the original audio will be affected by adding a voice recording.
- 3 Select **Yes** to continue.
- 4 Press **Play** to view your video. When you get to the part you'd like to record your voice over, press **Pause**.
- 5 Press **End** to stop recording.
- 6 Select **Save** followed by **Yes** to save. Choose to save over the original file or as a new file.
- 7 Repeat these steps to add more voice recordings to the video.

Adding a soundtrack to your video

- 1 Choose the video you'd like to edit and select **Options**.
- 2 Select **Edit** and choose **Audio dubbing**.
- 3 The My sounds folder will open. Choose the track you would like to add to your video and press **Select**.
- 4 The original audio recording of your video will be erased.
- 5 If the audio is shorter than the video choose whether to play **Once** or to **Repeat** it.
- 6 Choose to save over the original file or as a new file.

01

02

03

04

05

06

07


08

Your photos and videos

Changing the speed of your video

- 1 Choose the video you'd like to edit and select **Options**.
- 2 Select **Edit** and choose **Time scaling**.
- 3 Select one of the four speed options: **x4**, **x2**, **x1/4**, **x1/2**.
- 4 Choose to save over the original file or as a new file.

Adding a dimming effect

- 1 Open the video you'd like to edit, select  and select **Options**.
- 2 Select **Edit** and choose **Dimming effect**.
- 3 Choose to save over the original file or as a new file.
- 4 Your video will now fade in at the start and fade out at the end.

Multimedia

You can store any multimedia files on your phone's memory in My stuff so that you have easy access to all of your pictures, sounds, videos and games. You can also save your files to a memory card. The advantage of using a memory card is that you can free up space on your phone's memory.

Images

My images contains a list of pictures including default images pre-loaded onto your phone, images downloaded by you and images taken on your phone's camera.

My images option menus

The options available to you in **My images** depend on what type of image you have selected. All of the options will be available for pictures you have taken on the phone's camera, but only the **Use as**, **Sort by Grid (List) view** and **Memory manager** options are available for default images.

Send - Send the image to a friend.

Use as - Set the image to appear on your phone at certain times.

Move - Move an image from the phone memory to a memory card or vice versa.

Copy - Copy an image from the phone memory to a memory card or vice versa.

Delete - Delete an image.

Mark/Unmark - Select multiple files.

Print - Print an image via PictBridge or Bluetooth®.

File - Change the name or view the information for the file.

Slide show - Start a slide show.

Sort by - Sort images into a specified order.

Grid view/ List view - View each image in grid or list type.

Memory manager - View the memory status.

Sending a photo

- 1 Select **My stuff** then choose **My images**.
- 2 Select the photo you want to send and press **Options**.

01

02

03

04

05

06

07

08

Multimedia

- 3 Select **Send** and choose from **Message, Email, Bluetooth** or **Blog**.
- 4 If you choose **Message** or **Email**, your photo will be attached to the message and you can write and send the message as normal. If you choose **Bluetooth**, you will be prompted to turn Bluetooth on and your phone will search for a device to send the picture to.

Using an image

You can choose images to use as wallpapers and screensavers or even to identify a caller.

- 1 Select **My stuff** then **My Images**.
- 2 Select the image and touch **Options**.
- 3 Select **Use as** and choose from:
 - Wallpaper** - Set a wallpaper for the standby screen.
 - Contacts image** - Allocate an image to a particular person in your contacts list so that the picture shows when they call you.
 - Start up image** - Set an image to appear when you switch the phone on.

Shut down image - Set an image to appear when you switch the phone off.

Organising your images

- 1 Select **My stuff**, then **My images**.
- 2 Select **Options**, then **Sort by**.
- 3 Choose from **Date, Type** or **Name**.

Deleting an image

- 1 Select **My stuff**, then **My images**.
- 2 Select the image you want to delete and choose **Options**.
- 3 Select **Delete**, then **Yes** to confirm.

TIP! To quickly delete any file in My files, highlight it with the cursor and press the **C** key.

Moving or copying an image

You can move or copy an image between the phone memory and the memory card. You might want to do this to either free up some space in one of the memory banks or to safeguard your images from being lost.

- 1 Select **My stuff** then **My images**.
- 2 Select an image and select **Options**.
- 3 Select **Move** or **Copy**.

Editing an image

You can edit the image using the **Options** menu.

- 1 Select **Multimedia** menu.
- 2 Select **Media editor**.
- 3 Select **Image** editor and choose from several options. See page 44 for details.

Marking and unmarking images

If you want to move, copy, send or delete several images at once, you first need to identify them by marking them with a tick.

- 1 Select **My stuff** then **My images**.
- 2 Select **Options** then **Mark/Unmark**.
- 3 A box will appear to the left of each image. If you select an image, a tick will appear in the box marking it.
- 4 To unmark an image, select the image again so that the tick disappears from the box.

- 5 Once you have marked all of the appropriate images, choose one of the options to apply to all of them.

Checking your memory status

You can check to see how much of your memory you have used and how much you have remaining.

- 1 Select **My stuff**, then **My images**.
- 2 Select **Options**, then **Memory manager**.
- 3 Choose **Handset memory** or **External memory**.

NOTE: If you do not have a memory card inserted, you will not be able to select External memory.

Sounds

The **My sounds** folder contains the **Default sounds** and **Voice recordings**. From here you can manage, send or set sounds as ringtones.

Using a sound

- 1 Select **My stuff**, then **My sounds**.
- 2 Select **Default sounds** or **Voice recordings**.

01

02

03

04

05

06

07

08

Multimedia

- 3 Select a sound and press **Play** to listen to it.
- 4 Select **Options** and **Use as**.
- 5 Choose from **Voice ringtone**, **Video ringtone**, **Message tone**, **Start-up sound** and **Shut down sound**.

Videos

The **My videos** folder shows the list of downloaded videos and videos you have recorded on your phone.

Watching a video

- 1 Select **My stuff** then **My videos**.
- 2 Select a video and press **Play**.

Using options while video is paused

Select **Options** while in pause mode and choose from:

Landscape view - View the video file in full shot.

Mute/ Unmute - Switch the sound on/off.

Capture - Capture the frozen frame as a picture.

Repeat - Repeat the video file.

File info. - View brief details about the file.

Send - Send the video in a message, email or via Bluetooth.

Delete - Delete the video.

Use as - Use as a voice/video ringtone.

Sending a video clip

- 1 Select a video and press **Options**.
- 2 Select **Send** and choose from **Message**, **Email** or **Bluetooth**, **You Tube**.
- 3 If you choose **Message** or **Email**, your video clip will be attached to the message and you can write and send the message as normal. If you choose **Bluetooth**, you will be prompted to turn Bluetooth on and your phone will search for a device to send the video to.

Using a video clip as a ringtone

- 1 Select a video and select **Options**.
- 2 Select **Use as** and choose from **Voice ringtone** or **Video ringtone**.

Using the video options menu

From the **My videos** folder, you can choose from the following options:

Send - Send a video to a friend.

Use as - Set a video as your ringtone.

Move - Move a video clip from the phone memory to a memory card or vice versa.

Copy - Copy a video clip from the phone memory to a memory card or vice versa.

Delete - Delete a video.

Mark/Unmark - Select multiple files.

File - Edit the file name and view its information.

Create new folder - Create a new folder within the My videos folder.

Sort by - Sort videos into a specific order.

Grid view/ List view - View the options menu by grid or list type.

Memory manager - View the memory status.

Games and Applications

You can download games and applications to your phone to keep you amused when you have time to spare.

M-Toy menu

You can enjoy six default games:

Dart, Homerun Derby, Magic Ball,

Hammer, Maze and Fishing.

About - View the information for a game.

Setting - Set the sound and vibration when activating a game.

Reset data - Reset all settings.

Exit - Leave the M-Toy menu.

Playing a game

1 Select **Games** menu.

2 Select a game and touch **Launch**.

Using the games options menu

From the Games and Applications folders, the following options are available:

Create new folder - Create a folder within the games and applications menu.

Sort by - Sort the games and applications by **Date, Size** or **Name**.

01

02

03

04

05


06

07

08

Multimedia

Memory manager - View the memory status.

TIP! You can also access these games using the touch screen. Press and hold the  touch screen button on the right-hand side of the phone and touch the **M-Toy** icon.

Flash contents

The Flash contents folder contains all of your default and downloaded flash contents.

Viewing an SWF/SVG file

- 1 Select **My Stuff**, then **Flash contents**.
- 2 Select the file and press **Play**.

Using options viewing the SWF/SVG file

Select **Options** while in pause mode and choose from:

Play/Pause - Pause or resume playback.

Full screen/ Landscape view -

View your SWF/SVG in full screen or landscape view mode (this only appears if you select **Options** without

pausing).

Mute/Unmute - Switch the sound on/off.

Use as wallpaper - Set the SWF/SVG file as a wallpaper.

File info. - View brief details about the file.

Documents

From the Documents menu, you can view Excel, Powerpoint, Word, text and pdf files.

Transferring a file to your phone

Bluetooth is probably the easiest way to transfer a file from your computer to your phone. You can also use LG PC Suite via your sync cable. See page 64 for details.

To transfer using Bluetooth:

- 1 Make sure your phone and computer have Bluetooth switched on and are visible to one another.
- 2 Use your computer to send the file via Bluetooth.
- 3 When the file is sent, you will have to accept it on your phone by selecting **OK**.

- The file should appear in your **Documents** or **Others** folder.

Viewing a file

- Select **My stuff**, then **Documents**.
- Select a document and choose **View**.

Others


The **Others** folder is used to store files which are not pictures, sounds, videos, games or applications. It is used in the same way as the **Documents** folder. You may find that when you transfer files from your computer to your phone that they appear in the **Others** folder rather than the **Documents** folder. If this happens, you can move them.

To move a file from Others to Documents:

- Select **My Stuff** then **Others**.
- Select a file and choose **Options**.
- Select **Move**.

Movie maker

The Movie maker allows you to create an image slide show combined with music.

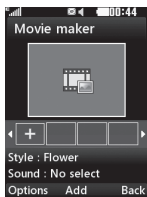

Creating a movie

- Go to **Multimedia** and select **Movie maker**.
- Select **+** to add an image. Choose the images you want to include then select **Done**.
- Select **Style** menu to choose a movie style.
- Select **Play** to see what you've created.

Music

Your LG KF750 has a built-in music player so you can play all your favourite tracks. To access the music player, select **Music** from the Multimedia menu. From here you can access a number of folders:

Recently played - View all of the songs you have played recently.

01

02

03

04

05

06

07

08

Multimedia

All tracks - Contains all of the songs you have on your phone.

Artists - Browse through your music collection by artist.




Albums - Browse through your music collection by album.

Genres - Browse through your music collection by genre.

Playlists - Contains any playlists you have created.

Shuffle tracks - Listen to your music in a random order.

Playing a song

- 1 Select **My music**, then **All tracks**.
- 2 Select the song you want to play and choose **Play**.
- 3 Press  to pause the song.
- 4 Touch  (right) to skip to the next song.
- 5 Touch  (left) to skip to the previous song.

Using options while playing music

Select **Options** and choose from:

Minimise - Make the music player screen disappear so that you can continue using your phone as normal.

Go to my music - Move the Cursor to the My music folder.

Repeat - Repeat the selected track.

Shuffle - Listen to your music in a random order.

Equaliser - Set the equaliser menu.

Visualisation - Select the visual effects.

Add to playlist - Add the file to a playlist.

File info. - View brief details about the file.


Send - Send the song as a message or via Bluetooth.

Delete - Delete the song.

Use as - Use the song as one of your ringtones.

Creating a playlist

You can create your own playlists by choosing a selection of songs from the **All tracks** folder.

- 1 Select **My music**, then **Playlists**.
- 2 Select **Add**, enter the playlist name and press  **Save**.
- 3 The All tracks folder will be displayed. Select all of the songs that you would like to include in your playlist; a tick will show next to the file name.

To play a playlist, select it and choose **Play**.

NOTE: To add a second playlist, select **Options** then **Add new playlist**.

Editing a playlist

From time to time, you may want to add new songs or delete songs from a playlist.

- 1 Select **My music**, then **Playlists**.
 - 2 Select the playlist.
 - 3 Select **Options**.
- Add new songs** – Add more songs to the playlist. Mark the ones you want and select **Done**.

File info. - View the Name, Size, Date, Time, Type, Duration, Protection and Copyright of the song.

Send – Send a song as a message or via Bluetooth.

Remove from list – Remove a song from the playlist.

Mark/Unmark – Select multiple files.

Use as – You can set the song as an effect sound.

Memory manager - You can view the current status of memory.

Deleting a playlist

- 1 Select **My music**, then **Playlists**.
- 2 Select **Options** then **Delete** or **Delete all** to delete all of the playlists.

Using the radio

Your LG KF750 has an FM radio feature so you can tune into your favourite stations to listen to on the move.

NOTE: You need to insert your headphones to listen to the radio. Insert them into the same socket as your charger.

01

02

03

04

05

06

07

08

Multimedia

Searching for stations

You can tune radio stations by searching for them either manually or automatically. They will be saved to specific channel numbers so you don't have to keep re-tuning. You can save up to 50 channels in your phone.

To auto tune:



- 1 From **Music** select **FM radio** then **Options**.
- 2 Select **Auto scan**. The stations found will automatically be allocated to a channel number.

TIP! You can access music using the touch screen. Press and hold the touch screen button on the right-hand side of the phone and choose the **FM Radio** or **Music** icon. You can then scroll through and select your music files or the radio functions by touching the screen.

To manually tune:

- 1 Select **FM radio** then **Options**.
- 2 Select **Channel list** and choose the channel number you want to save the station to.

- 3 Enter the station frequency and touch **Select** to save.

NOTE: You can also manually tune into a station by using  (left) and  (right) displayed next to the radio frequency.

Editing the channels

You may want to move the stations to another channel so that the ones you listen to most frequently are easier to access.

- 1 Select **FM radio** then **Options**.
- 2 Select **Channel list** and select the channel you want to change.
- 3 Either select a station from one of the other channels, or manually tune the channel into the frequency you want.

You can edit each channel by highlighting it and touching **Options**:

Rename - Rename the channel.

Replace - Set new frequency for the selected channel.

Resetting channels

- 1 Select **FM radio**, then **Options**.
- 2 Select **Channel list**, then **Options**.

- 3** Choose **Reset channel** to reset the current channel or choose **Reset all channels** to reset all of the channels. Each channel will return to the starting 87.5Mhz frequency.

TIP! To improve the radio reception, extend the headset cord, which functions as the radio antenna.

Listening to the radio

Select **FM radio**, then enter the channel number of the station you would like to listen to.

Using voice recorder

Use your voice recorder to record voice memos or other sounds.

- 1** Select **Multimedia**.
- 2** Select **Voice recorder** then options and choose from:

Duration – Set the recording duration.

Choose from **MMS msg. size, 30 secs, 1 min** or **No limit**.

Quality – Select the sound quality. Choose from **Super Fine, Fine** or **Normal**.

Memory in use - Check the current status of each memory.

Go to Voice recordings – Open the Voice recordings folder in **My sounds**.

- 3** Select **Rec.** to begin recording.
- 4** Select **Stop** to end recording.
- 5** Select **Play** in the options menu to listen to your recording.

Sending the voice recording

- 1** Once you have finished recording, select options.
- 2** Select **Send** and choose from **Message, Email** or **Bluetooth**. If you choose **Message** or **Email**, the recording will be added to the message and you can write and send it as normal. If you choose **Bluetooth**, you will be prompted to turn Bluetooth on.

NOTE: After you have finished recording, select **Options** and choose **Play, Send, File, Delete, Use as** (to use the recording as your ringtone) or **Go to Voice recordings**.

01

02

03

04

05


06

07

08


Organiser

Adding an event to your calendar


- 1 From the standby screen, press  and choose **Organiser**. Select **Calendar**.
- 2 Select the date you would like to add an event to.
- 3 Select **Options** then **Add new event**.
- 4 Select whether you would like to add an **Appointment**, **Anniversary** or **Birthday** and select **Done**.
- 5 Check the date and enter the time you would like your event to begin.
- 6 For appointments and anniversaries enter the time and date your event finishes in the lower time and date boxes.
- 7 If you would like to add a subject or a note to your event, touch **Subject** or **Name** and type in your note.
- 8 Select **Done** and your event will be saved in the calendar. A cursor will mark the day that any events have been saved to and a bell will ring at the start time of your event, so that you can stay organised.

TIP! You can set a holiday in your calendar. Select each day you are on holiday one at a time, then choose **Options** and select **Set holiday**. Each day will be shaded red. When you come to set an alarm, you can choose to exclude days set as holidays.

Changing your default calendar view


- 1 From the standby screen press  and choose **Organiser**. Select **Settings**.
- 2 Select **Calendar** and choose either **Month view** or **Week view**.
- 3 Press **Done** to confirm your choice.

Adding an item to your to do list

- 1 From the standby screen press  and choose **Organiser**.
- 2 Select **To do** and select **Add**.
- 3 Set the date for the to do item, add notes and select a priority level: **High**, **Medium** or **Low**.
- 4 Save your to do list item by selecting **Done**.


TIP! You can edit an item by selecting it, touching **Options** and **Edit**. Confirm your amendments by selecting **Save**.

Sharing a to do item

- 1 From the standby screen press  and choose **Organiser**. Select **To do**.
- 2 Select the to do item you would like to share, then select **Options**.
- 3 Select **Send**. You can choose to share your to do item by **Text message**, **Multimedia msg**, **Email** or **Bluetooth**.

TIP! You can back up and synchronise your calendar with your computer. See PC Sync on page 64.

Adding a memo

- 1 From the standby screen press  and choose **Organiser - Memo**.
- 2 Select **Add**.
- 3 Type your memo, followed by **Save**.
- 4 Your memo will appear on screen next time you open the **Memo** application.

TIP! You can edit an existing memo. Select the one you want to edit and select **Edit**.

01

02

03

04

05



06

07

08

Tools


Setting your alarm

- 1 From the standby screen press  and choose **Tools** then **Alarms**.
- 2 Select **Options** and touch **Add new**.
- 3 Set the time you would like the alarm to sound.
- 4 Choose whether you would like your alarm to sound **Once, Daily, Mon-Fri, Mon-Sat, Sat-Sun, Sat-Wed, Sat-Thu, Sun-Thu** or **Except Holiday**.
- 5 Select  and **Edit** to select a sound for your alarm. To listen to sounds select the sound, and touch **Play**.
- 6 Add a memo for the alarm and select **Done** when you have finished typing. When the alarm sounds the memo will be displayed.
- 7 Finally, you can set the snooze interval at **5, 10, 20** or **30 mins, 1 hour** or **off**.
- 8 Once you have set your alarm, select **Done**.


NOTE: You can set up to 5 alarms.

The alarm will be alerted on even if the phone is switched off.


Using your calculator

- 1 From the standby screen, press  and choose **Tools**. Select **Calculator**.
- 2 Select the numeric keys to input numbers.
- 3 For simple calculations, select the function you require (+, -, x, ÷), followed by =.
- 4 For more complex calculations, select **Options** and choose from +/-, **sin, cos, tan, log, ln, exp, sqrt, deg** or **rad**.


Using the stopwatch

- 1 From the standby screen, press  and choose **Tools**. Select **Stopwatch**.
- 2 Select **Start** to begin the timer.
- 3 Select **Stop** to stop the timer.
- 4 Select **Lap** to measure each lap time.
- 5 To restart stopwatch, select **Resume**.
- 6 Select **Reset** to return to zero.

Converting a unit

- 1 From the standby screen, press  and choose **Tools**. Select **Converter**.
- 2 Choose whether you would like to convert **Currency, Surface, Length, Weight, Temperature, Volume** or **Velocity**.
- 3 You can now select the unit and enter the value you would like to convert from, followed by the unit you would like to convert to.
- 4 The corresponding value will appear on the screen.

Adding a city to your world time

- 1 From the standby screen, press  and choose **Tools**. Select **World time**.
- 2 Select **Options**, followed by **Add city**. Start typing the name of the city you require and it will show at the top of the screen. Alternatively choose **Map**, and select your chosen city from the map.
- 3 Press **Select** to confirm your choice.

TIP! If you are abroad, you can change your time zone from World time by selecting **Options**, followed by **Change current city**. Choose your required city as above.

01

02

03

04

05

06


07

08

PC Sync

You can synchronise your PC with your phone to make sure all your important details and data match, and also as a backup to put your mind at ease.

Installing LG PC Suite on your computer

- 1 From the standby screen press  and choose **Connectivity**.
- 2 Select **USB connection mode** and click **OK**.
Music - Music Sync mode.
Others - Data Service mode.
- 3 Insert the supplied CD into your PC. Click on the **LG PC Suite Installer** which will appear on your screen.
- 4 Select the language you would like the installer to run in and click **OK**.
- 5 Follow the instructions on the screen to complete the **LG PC Suite Installer wizard**.
- 6 Once installation is complete, the **LG PC Suite icon** will appear on your desktop.

Connecting your phone and PC

- 1 Connect the USB cable to your phone and your PC.
- 2 Double click on the **LG PC Suite Icon** on your desktop.
- 3 Click on **Connection Wizard** and **USB**.
- 4 Click on **Next**, then **Next** again, and **Finish**. Your phone and PC are now connected.

Backing up and restoring your phone's information

- 1 Connect your phone to your PC as outlined above.
- 2 Click on the **Backup** icon, and select **Backup** or **Restore**.
- 3 Mark the contents you would like to back up or restore. Select the location you would like to backup information to, or restore information from. Click **OK**.
- 4 Your information will be backed up.

Viewing your phone files on your PC

- 1 Connect your phone to your PC as outlined above.
- 2 Click on the **Contents** icon.
- 3 All of the documents, flash contents, images, sounds and videos you have saved onto your phone will be displayed on the screen in the LG Phone folder.

TIP! Viewing the contents of your phone on your PC helps you to arrange files, organise documents and remove contents you no longer need.

Synchronising your contacts

- 1 Connect your phone to your PC.
- 2 Click on the **Contacts** icon.
- 3 Select **Transfer**, then **Import from mobile handset**. Your PC will now import and display all contacts saved to your USIM card and handset.
- 4 Click on **File** and select **Save**. You can now select where you would like to save your contacts to.

NOTE: To backup contacts saved to your USIM card, click on the SIM card folder on your PC screen. Select **Edit** at the top of the screen, then **Select all**. Right-click your contacts and select **Copy to contacts**. Now click on the **Handset** folder on the left of your screen and all your numbers will be displayed.

Synchronising your messages

- 1 Connect your phone to your PC.
- 2 Click on the **Messages** icon.
- 3 All of your PC and phone messages will be displayed in folders on your screen.
- 4 Use the tool bar at the top of your screen to edit and rearrange messages.

Synchronising your music

- 1 Connect your phone to your PC.
- 2 Click on the **Music** icon.
- 3 The music files you have saved will be displayed on the screen in the Music folder.

01

02

03

04

05

06

07

08

PC Sync

NOTE: The following conditions must be met.

- Windows XP Service Pack 2 or higher.
- Windows Media Player 11 or higher.
- USB Connection mode should be active and Music Sync mode should be on.

Using your phone as a mass storage device

Your phone can only be used as a mass storage device if you have a memory card inserted.

- 1 Disconnect your phone from your PC.
- 2 From the standby screen, press .
- 3 Select **Connectivity**, then **USB connection mode**.
- 4 Highlight **Mass storage** and press **Select**.
- 5 Connect your phone to your PC. Your phone will read: **Connecting as Mass Storage...** followed by **Connected as Mass Storage Mode**. Do not disconnect during transfer.

- 6 All of your phone files will automatically be stored onto your PC hard drive.

NOTE: Your phone must be unplugged from your PC to initiate Mass Storage.

NOTE: Mass storage backs up content saved on your memory card only, not your handset memory. To transfer the contents of your handset memory (e.g. contacts) you'll need to synchronise using PC Sync.

PIN for DivX connection

Install the DivX converter which is supplied on the same CD as the PC Sync software.

Once installed select DivX from the Program Files on your PC, then DivX converter followed by Converter.

This will open the Converter application. Use the arrows in the application to change the conversion format to Mobile. If you right-click on the application box and select Preferences, you can change the location that the converted files are saved in.

Once you are ready to convert your files, simply drag and drop the files into the application. You will need then to select Convert for the process to begin. When the process is finished a “Conversion complete” pop up will be displayed. The converted file can now be transferred to your phone using the Mass Storage functionality (see page 66 for details) or uploaded using the PC Sync software (see page 64 for details).

Using TV out

Choose PAL or NTSC for connecting your KF750 to a TV.

01

02

03

04

05

06


07

08

Browser

With a browser at the tip of your fingers, you can get up-to-date news and weather forecasts as well as information on sports or traffic whenever you need it. In addition, the browser allows you to download the latest music, ringtones, wallpapers and games.


Accessing the web

- 1 From the standby screen, press  and choose **Browser**.
- 2 To access the browser homepage directly, select **Home**.
Alternatively, select **Enter address** and type in your desired URL, followed by **Open**.

NOTE: An additional cost is incurred when connecting to this service and downloading content. Check your data charges with your network provider.

Adding and accessing your bookmarks

For easy and fast access to your favourite websites, you can add bookmarks and save web pages.


- 1 From the standby screen press  and choose **Browser**.
- 2 Select **Bookmarks**. A list of your Bookmarks will appear on the screen.
- 3 To create a new folder, select **Options** and choose **Create new folder**. Enter the name of your bookmark folder.
- 4 To add a new bookmark, select **Options** and touch **Add new**. Enter a name for your bookmark followed by the URL.
- 5 Select **Done**. Your bookmark will be displayed in the list of bookmarks.
- 6 To access the bookmark, simply scroll to it and select **Open**.

Saving a page


- 1 Access your required webpage as described above.
- 2 Select **Options**, **Save items**, then **Save this page**.
- 3 Enter a name for the webpage so you can easily recognise it.
- 4 Select **Save**.

TIP! This menu will also allow you to edit titles of saved pages, protect or unprotect the screen memo, and delete saved pages.

Accessing a saved page

- 1 From the standby screen press  and choose **Browser**.
- 2 Select **Saved pages**.
- 3 Select **Open** to connect to the saved page.

Viewing your browser history

- 1 From the standby screen press  and choose **Browser**, and then select **History**.
- 2 **Visual history** will be displayed. Select **Options** and select **List history**, to show a list of web page titles you have accessed recently.
- 3 To access one of these pages, simply select the required page and touch **Open**.

Using RSS reader

RSS (Really Simple Syndication) is a family of web feed formats used to publish frequently updated content such as blog entries, news headlines or podcasts. An RSS document, which is called a **feed**, **web feed**, or **channel**, contains either a summary of content from an associated web site or the full text.

RSS makes it possible for people to keep up with their favorite web sites in an automated manner that is easier than checking them manually.

01

02

03

04

05

06

07

08

Browser

The user subscribes to a feed by entering the feed's link into the reader or by clicking an RSS icon in a browser that initiates the subscription process. The reader checks the user's subscribed feeds regularly for new content, downloading any updates that it finds.


Adding the Feed

You can input the feed directly yourself: **Browser** → **RSS reader** → **Options** → **Add new** or you can click the feed link by selecting the RSS icon in the webpage.

Updating the RSS reader

- 1 You can select **Update** or **Update all Options**.
- 2 If you want to update it automatically, select **Update schedule**.

Changing the web browser settings

- 1 From the standby screen press  and choose **Browser**. Select **Settings**.
- 2 You can choose to edit **Profiles**, **Appearance settings**, **Cache**, **Cookies**, **Security**, or **Reset Settings**.
- 3 Once you have changed your settings, touch **Select**.

The web

Using your phone as a modem

Your KF750 can double as a modem for your PC, giving you email and internet access even when you can't connect using wires. You can use either the USB cable or Bluetooth.

Using the USB cable:

- 1 Ensure you have LG PC Suite installed on your PC.
- 2 Connect your KF750 and your PC using the USB cable and launch the LG PC Suite software.
- 3 Click **Communication** on your PC. Then click **Settings** and select **Modem**.
- 4 Choose **LG Mobile USB Modem** and select **OK**. It will now appear on screen.
- 5 Click **Connect** and your PC will connect through your KF750.

NOTE: For more information on synchronising using LG PC Suite see page 64.

Using Bluetooth

- 1 Ensure Bluetooth is switched **On** and **Visible** for both your PC and KF750.
- 2 Pair your PC and KF750 so that a passcode is required for connection.
- 3 Use the **Connection wizard** on your LG PC Suite to create an active Bluetooth connection.
- 4 Click **Communication** on your PC. Then click **Settings**.
- 5 Click **Modem**.
- 6 Choose **Standard Modem over Bluetooth link** and click **OK**. It will now appear on screen.
- 7 Click **Connect** and your PC will connect through your KF750.

01

02

03

04

05

06

07

08

The web

Sending and receiving your files using Bluetooth

Bluetooth is a great way to send and receive files as no wires are needed and connection is quick and easy. You can also connect to a Bluetooth headset to make and receive calls.

To send a file:

- 1 Open the file you want to send.
- 2 Select Options and choose **Send**. Choose **Bluetooth**.
- 3 Select **Yes** to turn Bluetooth on.
- 4 Your KF750 will automatically search for other Bluetooth enabled devices within range.
- 5 Choose the device you want to send the file to and choose **Select** to send the file.
- 6 Your file will be sent.


TIP! Keep an eye on the progress bar to make sure your file is sent.

To receive a file:

- 1 To receive files, your Bluetooth must be both **On** and **Visible**. See **Changing your Bluetooth settings** below for more information.

- 2 A message will prompt you to accept the file from the sender. Select **Yes** to receive the file.
- 3 You will see where the file has been saved and you can choose to **View** the file. Files will usually be saved to the relevant folder in My Stuff.

Changing your Bluetooth settings:

- 1 Press  in the standby screen, and choose **Connectivity**.
- 2 Choose **Bluetooth** then **Settings**. Make your changes to:

My device visibility - Choose to be Visible, Visible for 1 min or Hidden.

My device name - Enter a name for your KF750.

Supported services - Search for the profile supported by KF750. See **Using your phone as a modem** on page 71 or **Using a Bluetooth headset** on page 73.

My address - Search your Bluetooth device address.

Pairing with another Bluetooth device

By pairing your KF750 and another device, you can set up a passcode-protected connection. This means your pairing is more secure.

- 1 Check your Bluetooth is **On** and **Visible**. You can change your visibility in the **Settings** menu.
- 2 Select **Paired devices, Options**, then **Add new device**.
- 3 Your KF750 will search for devices. If devices are found, **Refresh** and **Add** will appear on screen.
- 4 Choose the device you want to pair with and enter a passcode then press **Add**.
- 5 Your phone will then connect to the other device, on which you should enter the same passcode.
- 6 Your passcode-protected Bluetooth connection is now ready.

Using a Bluetooth headset

- 1 Check your Bluetooth is **On** and **Visible**.
- 2 Follow the instructions that came with your headset to place your headset in pairing mode and pair your devices.
- 3 Select **Yes** to **Connect now**. Your KF750 will automatically switch to Headset profile.

01

02

03

04

05

06

07


08

Settings

Within this folder you can adapt your settings to personalise your KF750.

NOTE: For information on call settings see page 21.

Changing your screen settings

- 1 From the standby screen, press  and select **Settings**.
- 2 Select **Screen** and then choose from:
 - Screen theme** - Choose the theme for your Home Screen, start Up, Shut down the phone.
 - Menu style** - Choose the style used to display menus.
 - Dialling** - Set the display used when making a call.
 - Font** - Adjust the font.
 - Backlight** - Choose how long the backlight remains on for.
NOTE: The longer the backlight is on for, the more battery power is used and you may need to charge your phone more often.
 - Image quality enhancement** - Chooosed the menu to enhance the quality of the selected image.

Handset theme - Quickly change the whole look of your screen.


Greeting message - Enter the greeting message used when the phone is switched on.

- 3 Choose **Select** to save your settings.

Personalising your profiles

You can quickly change your profile on the standby screen. Simply touch the currently active profile icon.

Using the settings menu you can personalise each profile setting.

- 1 From the standby screen, press  and select **Settings**.
- 2 Select **Profiles** and then choose the profile you want to edit. You cannot edit the **Silent** profile. You can edit the Alert By option of your silent profile.
- 3 Select **Options** and choose **Edit**.
- 4 You can then change all of the sounds and alert options available in the list, including your **Ring tone** and **Volume, Message alerts** and more.

Changing your phone settings

Enjoy the freedom of adapting your KF750 so that it works in a way that suits you.

- 1 From the standby screen, press



- 2 Select **Settings**, then **Phone**, and choose from the list below.

Auto key lock - Lock the keypad automatically in the standby screen.

Touchpad - Turn the touchpad vibration **On** or **Off**.

Touchscreen effect - Set the effect tone used when touching the screen.

Languages - Change the language of for your KF750's display.

Power save - Choose to switch the power saving settings **On** or **Off**.

Information - View the technical information for your KF750.

Using Date & Time

Date & Time - Adjust your date and time settings or choose to automatically update the time when you travel or for daylight saving.

Changing your other settings

Your connectivity settings have already been set up by your network operator, so you can enjoy your new phone immediately. If you want to change any settings, use this menu.

Network - Your KF750 connects automatically to your preferred network. To change these settings, use this menu.

Internet profiles - Set the profiles to connect to the internet.

Access points - Your network operator has already saved this information. You can add new access points using this menu.

Packet data conn - Set the packet data connection.

01

02

03

04

05

06

07

08

Settings

Changing security settings


PIN code request - Set the phone to ask for the PIN code of your SIM card when switching on the phone.

Handset lock - Set the phone lock to avoid unauthorised use. You will need a security code.

Change codes - Change the codes: PIN/ PIN2/ Security code.

Using memory manager

Your KF750 has three memories available: the phone, the USIM Card and an external memory card (you may need to purchase the memory card separately).

You can use memory manager to determine how each memory is used and see how much space is available. Press  in standby screen. Select **Settings** then **Memory Manager**.

Handset Common memory - View the memory available on your KF750 for images, sounds, videos, flash, MMS, applications, java and others.

Handset reserved memory - View the memory available on your handset for SMS, contacts, calendar items, to do list, memos, alarms, call history, bookmarks and miscellaneous items.



USIM memory - View the memory available on your USIM Card.

External memory - View the memory available on your external memory card (you may need to purchase the memory card separately).

Primary storage setting - choose Handset memory or External memory.

TIP! See page 12 for information on **Installing a memory card**.

Using flight mode

Turn on flight mode by pressing  in standby screen, and then select **Settings** and **Profiles**. Select **Flight mode** and press  to activate.

Flight mode will not allow you to make calls, connect to the internet, send messages or use Bluetooth.

Accessories

These accessories were supplied with KF750.

Charger



USB cable and CD

Connect and synchronise your KF750 and PC.



Battery



User Guide

Learn more about your KF750.



Stereo headset



NOTE:

- Always use genuine LG accessories.
- Failure to do this may invalidate your warranty.
- Accessories may be different in different regions; please check with our regional service company or agent for further inquiries.

Network service

The wireless phone described in this guide is approved for use on the GSM 900, DCS 1800, PCS1900 and W-CDMA network.

A number of features included in this guide are called Network Services. These are special services that you arrange through your wireless service provider. Before you can take advantage of any of these Network Services, you must subscribe to them through your service provider and obtain instructions for their use from your service provider.

Technical data

General

Product name : KF750

System : GSM 900 / DCS 1800 /
PCS 1900 / W-CDMA

Ambient Temperatures

Max : +55°C (discharging), +45°C
(charging)

Min : -10°C

Declaration of Conformity



LG Electronics

Suppliers Details

Name

LG Electronics Inc

Address

LG Electronics Inc, LG Twin Towers 20,
Yeouido-dong, Yeongdeungpo-gu, Seoul, Korea 150-721

Product Details

Product Name

GSM 900 / DCS 1800 / PCS 1900 / W-CDMA Terminal Equipment

Model Name

KF750

Trade Name

LG

CE 0168

Applicable Standards Details

R&TTE Directive 1999/5/EC

EN 301 489-01 V1.6.1, EN 301 489-07 V1.3.1
EN 301 489-17 V1.2.1, EN 301 489-24 V1.3.1
EN 301 511 V9.0.2
EN 301 908-1 V3.2.1 EN 301 908-2 V3.2.1,
EN 300 328 V1.6.1
EN 50360/EN 50361:2001
EN 60950-1 : 2001

Supplementary Information

Declaration

I hereby declare under our sole responsibility that the product mentioned above to which this declaration relates complies with the above mentioned standards and Directives

Name

Seung Hyoun, Ji / Director

Issued Date

21.Mar, 2008

LG Electronics Inc, Amsterdam Office
Veluwezoom 15, 1327 AE Almere, The Netherlands
Tel : +31 - 36- 547 - 8940, e-mail : seokim @ lge.com


Signature of representative

Guidelines for safe and efficient use

Please read these simple guidelines. Not following these guidelines may be dangerous or illegal.

Exposure to radio frequency energy

Radio wave exposure and Specific Absorption Rate (SAR) information This mobile phone model KF750 has been designed to comply with applicable safety requirements for exposure to radio waves. These requirements are based on scientific guidelines that include safety margins designed to assure the safety of all persons, regardless of age and health.

- The radio wave exposure guidelines employ a unit of measurement known as the Specific Absorption Rate, or SAR. Tests for SAR are conducted using standardised methods with the phone transmitting at its highest certified power level in all used frequency bands.
- While there may be differences between the SAR levels of various LG phone models, they are all designed to meet the relevant guidelines for exposure to radio waves.

- The SAR limit recommended by the International Commission on Non-Ionizing Radiation Protection (ICNIRP) is 2W/kg averaged over 10g of tissue.
- The highest SAR value for this model phone tested by DASy4 for use at the ear is 0.5 W/kg (10g).
- SAR data information for residents in countries/regions that have adopted the SAR limit recommended by the Institute of Electrical and Electronics Engineers (IEEE), which is 0.755 W/kg averaged over 1g of tissue.

Product care and maintenance

WARNING

Only use batteries, chargers and accessories approved for use with this particular phone model. The use of any other types may invalidate any approval or warranty applying to the phone, and may be dangerous.

- Do not disassemble this unit. Take it to a qualified service technician when repair work is required.

- Keep away from electrical appliances such as TVs, radios, and personal computers.
- The unit should be kept away from heat sources such as radiators or cookers.
- Do not drop.
- Do not subject this unit to mechanical vibration or shock.
- Switch off the phone in any area where you are required by special regulations. For example, do not use your phone in hospitals as it may affect sensitive medical equipment.
- Do not handle the phone with wet hands while it is being charged. It may cause an electric shock and can seriously damage your phone.
- Do not charge a handset near flammable material as the handset can become hot and create a fire hazard.
- Use a dry cloth to clean the exterior of the unit (do not use solvents such as benzene, thinner or alcohol).
- Do not charge the phone when it is on soft furnishings.
- The phone should be charged in a well ventilated area.

- Do not subject this unit to excessive smoke or dust.
- Do not keep the phone next to credit cards or transport tickets; it can affect the information on the magnetic strips.
- Do not tap the screen with a sharp object as it may damage the phone.
- Do not expose the phone to liquid or moisture.
- Use the accessories like earphones cautiously. Do not touch the antenna unnecessarily.

Efficient phone operation

Electronics devices

All mobile phones may get interference, which could affect performance.

- Do not use your mobile phone near medical equipment without requesting permission. Avoid placing the phone over pacemakers, for example, in your breast pocket.
- Some hearing aids might be disturbed by mobile phones.
- Minor interference may affect TVs, radios, PCs, etc.

Guidelines for safe and efficient use

Road safety

Check the laws and regulations on the use of mobile phones in the area when you drive.

- Do not use a hand-held phone while driving.
- Give full attention to driving.
- Use a hands-free kit, if available.
- Pull off the road and park before making or answering a call if driving conditions so require.
- RF energy may affect some electronic systems in your vehicle such as car stereos and safety equipment.
- When your vehicle is equipped with an air bag, do not obstruct with installed or portable wireless equipment. It can cause the air bag to fail or cause serious injury due to improper performance.
- If you are listening to music whilst out and about, please ensure that the volume is at a reasonable level so that you are aware of your surroundings. This is particularly imperative when near roads.

Avoid damage to your hearing

Damage to your hearing can occur if you are exposed to loud sound for long periods of time. We therefore recommend that you do not turn on or off the handset close to your ear. We also recommend that music and call volumes are set to a reasonable level.

Glass Parts

Some parts of your mobile device are made of glass. This glass could break if your mobile device is dropped on a hard surface or receives a substantial impact. If the glass breaks, do not touch or attempt to remove. Stop using your mobile device until the glass is replaced by an authorized service provider.

Blasting area

Do not use the phone where blasting is in progress. Observe restrictions, and follow any regulations or rules.

Potentially explosive atmospheres

- Do not use the phone at a refueling point.
- Do not use near fuel or chemicals.
- Do not transport or store flammable gas, liquid, or explosives in the same compartment of your vehicle as your mobile phone and accessories.

In aircraft

Wireless devices can cause interference in aircraft.

- Turn your mobile phone off before boarding any aircraft.
- Do not use it on the ground without permission from the crew.

Children

Keep the phone in a safe place out of the reach of small children. It includes small parts which may cause a choking hazard if detached.

Emergency calls

Emergency calls may not be available under all mobile networks. Therefore, you should never depend solely on the phone for emergency calls. Check with your local service provider.

Battery information and care

- You do not need to completely discharge the battery before recharging. Unlike other battery systems, there is no memory effect that could compromise the battery's performance.
- Use only LG batteries and chargers. LG chargers are designed to maximize the battery life.
- Do not disassemble or short-circuit the battery pack.
- Keep the metal contacts of the battery pack clean.
- Replace the battery when it no longer provides acceptable performance. The battery pack maybe recharged hundreds of times until it needs replacing.
- Recharge the battery if it has not been used for a long time to maximize usability.

Guidelines for safe and efficient use

- Do not expose the battery charger to direct sunlight or use it in high humidity, such as in the bathroom.
- Do not leave the battery in hot or cold places, this may deteriorate the battery performance.
- There is risk of explosion if the battery is replaced by an incorrect type.
- Dispose of used batteries according to the manufacturer's instructions. Please recycle when possible. Do not dispose as household waste.
- If you need to replace the battery, take it to the nearest authorized LG Electronics service point or dealer for assistance.
- Always unplug the charger from the wall socket after the phone is fully charged to save unnecessary power consumption of the charger.

이 휴대폰은 한글 SMS가 지원됩니다.

* * : 획추가 # : 쌍자음

자음	버튼	자음	버튼	자음	버튼
ㄱ	①	ㄴ	④	ㄷ	⑦ → * → *
ㅋ	① → *	ㄷ	⑤	ㅌ	⑦ → #
ㆁ	① → #	ㅌ	⑤ → *	ㅍ	⑦ → * → #
ㄴ	②	ㄹ	⑤ → * → *	ㅇ	⑧
ㄷ	② → *	ㅍ	⑤ → * → #	ㅎ	⑧ → *
ㅌ	② → * → *	ㅅ	⑦		
ㅍ	② → * → #	ㅈ	⑦ → *		


모음	버튼	모음	버튼	모음	버튼
ㅏ	③	ㅓ	⑥ → ⑥ → *	ㅗ	⑥ → ③ → ⑨
ㅑ	③ → *	ㅕ	⑦	ㅛ	⑥ → ⑨
ㅓ	③ → ③	ㅗ	⑨	ㅝ	⑥ → ⑥ → ③ → ⑨
ㅕ	③ → ③ → *	ㅛ	③ → ⑨	ㅟ	⑥ → ⑥ → ⑨
ㅗ	⑥	ㅝ	③ → * → ⑨	ㅙ	⑦ → ⑨
ㅛ	⑥ → *	ㅟ	③ → ③ → ⑨		
ㅝ	⑥ → ⑥	ㅙ	③ → ③ → * → ⑨		





Warranty Card
產品保用證

Mobile Phone
手提電話

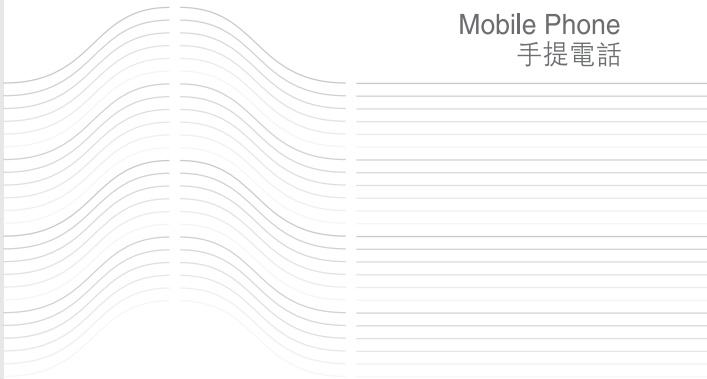

Warranty Card

產品保用證

LG Customer Care Centre

客戶維修服務中心



Welcome to contact for detailed information
& Customer Care Centre address

歡迎致電查詢詳細資料及維修服務中心地址

Customer Service Hotline 客戶服務熱線 : (852) 3543 7777

E-mail Us 客戶查詢電郵 : cshelpdesk@lge.com

LG Website 瀏覽網站 : hk.lge.com

Thank you for your purchase of LG Electronics product under the terms and conditions listed on this warranty card.

多謝閣下購買及使用本公司之產品，請參閱保用證所列之產品保用條款。

IMPORTANT : Please keep and present this warranty card and purchase invoice when services are rendered.
Otherwise, this warranty will be voided.

重要事項：顧客請保留此保用證和購貨發票，並需在檢查/維修時出示，否則保用無效。

Mobile Phone Warranty Policy

HK Area
香港地區

手提電話保用條款

- (1) LG Electronics Hong Kong Limited (hereafter LGEHK) provides warranty period from the date of purchase as follows and only valid for mobile purchase in Hong Kong only (any promotion gift item is not included):
 - (i) Handset :12 months
 - (ii) Charger :6 months
 - (iii) Battery :6 months
 - (iv) Hand free earphone :3 months
 - (2) Warranty is valid only for authorized product; parallel import and counterfeit product are invalid.
 - (3) Product is under warranty against manufacturing defects by reason of faulty workmanship or internal electronic parts materials. This warranty does not cover defects arising from natural wear of the product (including casing, key pad, display, antenna, and accessories, etc.)
 - (4) If check-up or repairing are required, customer must present the original invoice and warranty card on which the relevant IMEI number was printed. Upon any failure to present the above documentation, customer must pay for the costs of the services provided.
 - (5) All parts replaced within the warranty period are the property of LGEHK. We have rights to handle those parts as necessary.
 - (6) Data stored in handsets may be lost after the repair and thus should be properly stored by customer beforehand.
 - (7) Warranty will be voided under the following conditions, and LGEHK reserves the right to refuse providing service and/or shall demand charges for any costs of servicing from customer:
 - (i) Product has been tampered with or undergone unauthorized repair by third parties, improper installation, alteration or modification to this product, or damage, tearing, removal of the warranty sticker that is affixed to this product.
 - (ii) Defects arising from misuse, mishandling, abuse, accident, negligence and damage caused directly or indirectly by fire, flood, liquid water, corrosion, convulsion of nature, war, riot or civil commotion.
 - (iii) The IMEI number sticker on this product has been erased or modified.
 - (iv) The content of warranty policy has been modified without authorization.
 - (v) LGEHK is not responsible for any loss of data or system corruption during the process of transportation or repair to and from the Service Centre and due to the forces of nature.
 - (8) LGEHK reserves the right to terminate or modify the terms of this warranty card. For exceptional cases, subject to our report, we reserve the right to terminate this warranty card or modify terms of warranty policy.
 - (9) Our company will not be liable for any loss directly or indirectly caused by the breakdown of the product.
 - (10) This warranty card is restricted within Hong Kong SAR only.
- (1) 本公司為客戶提供保用期如下，只適用於香港購買之手機，並不包括各促銷活動之贈品(由購買日起計)
 - (i) 機身: 12個月
 - (ii) 充電器: 6個月
 - (iii) 電池: 6個月
 - (iv) 免提耳機: 3個月
 - (2) 保用服務只適用於原裝貨，水貨及冒牌貨均屬無效。
 - (3) 此保用只適用於生產上的瑕疵，如電子零件偶然出現毛病，並不包括手機的自然磨損包括外殼、鍵盤、顯示屏、天線、附件等。
 - (4) 用戶要求維修時，須同時帶同手機、保用證及印有IMEI號碼之有效發票正本到本公司指定之維修中心進行維修，否則保用服務無效。客戶須付維修費用。
 - (5) 若在保用期內維修更換後的所有零件、配署及附件，均屬本公司所有，本公司有權作出任何處理。
 - (6) 手機內存資料有可能因維修而遺失，請顧客要自行保存。
 - (7) 在下列情況下本保用證將自動失效，本公司有權拒絕維修該手機或向客人釐收所有的維修費用。
 - (i) 手機曾被作不許可之維修、不適當的安裝、更改，或貼於其上的維修貼紙遭受損壞、撕破，除去，保用證即無效。
 - (ii) 手機曾被錯誤使用、錯誤處理、疏忽使用，直接或間接引起由火、液體、火災、腐蝕、地震、戰爭、暴亂或天災所造成之損壞。
 - (iii) 手機上的IMEI號碼貼紙經一經修改或除去，保用服務即無效。
 - (iv) 擅自修改本保用證的內容。
 - (8) 本公司將對任何於使用、維修或運送時引致之系統錯誤及資料遺失，或因天然災害、意外事件造成之損失概不負責。
 - (9) 本保用證的發出及終止均屬本公司所有，就不明的情況或個案，經審查後，本公司有權發出或終止本保用證。
 - (10) 本公司將不負責由於產品損壞而直接或間接引致之任何損失。
 - (11) 此保用證只適用於香港特別行政區範圍內。



服務承諾

- 服務員親切熱情的服務態度
- 多用途互動訊息系統
- 完善售後服務，提供專業的保養服務
- 為客戶介紹及推薦最新產品
- 有效率和快捷的服務
- 不斷創新產品，給客戶無限驚喜



To:

LG Electronics HK Ltd.
North Point Post Office Box No.54509
香港北角郵政信箱54509號



Limited Warranty

限期保用證

To provide our best after-sales service, please complete and return this warranty card to us. 您的寶貴意見能使我們的服務更加完善，請填妥及寄回此保用證以享受閣下尊有的售後服務。

Customer Information

客戶資料

Purchaser's Name:

客戶姓名

Address:

地址

E-mail:

電郵

Mobile:

手提電話

Home:

家居電話

Model No.:

型號

IMEI No.:

機身IMEI編號

Date of Purchase:

購買日期

Invoice/Sales Docket No.:

購買單據編號



