



繁體中文

簡體中文

ENGLISH

USER GUIDE

LG-M400n

Copyright© 2017 LG Electronics, Inc. All rights reserved.

MFL69850601 (1.0)

www.lg.com

關於此使用手冊

感謝您選擇該 LG 產品。初次使用裝置之前，請仔細閱讀本使用者指南，以確保安全和正確使用。

- 請務必使用原裝 LG 配件。提供的物件僅針對本裝置設計，可能與其他裝置不相容。
- 本裝置採用觸控式螢幕鍵盤，不適合視障人士使用。
- 說明基於裝置預設設定。
- 裝置上的預設應用程式會隨時更新，並且對這些應用程式的支援可能會撤銷，恕不另行通知。如果您對裝置提供的應用程式有任何疑問，請聯絡 LG 服務中心。對於使用者安裝的應用程式，請聯絡相關的服務提供商。
- 修改裝置的作業系統，或從非官方來源安裝軟體可能會損壞裝置以及導致資料損壞或資料丟失。這類操作將違反您的 LG 許可協議，並使您的保養失效。
- 一些內容和圖片視乎您地區、服務供應商、軟件版本或 OS 版本可能與您的裝置有所不同，並可能有所更改而不需事前通知。
- 裝置提供的軟體、音訊、牆紙、圖像和其他媒體授權為有限用途。如果您出於商業或其他目的提取和使用這些資料數據，則可能會侵犯版權法。作為使用者，您對媒體的非法使用需要負上全部責任。
- 數據服務 (例如收發短信、上傳、下載、自動同步和位置服務) 可能會產生額外的費用。為避免額外的費用，請選擇適合您需要的流量組合。聯絡您的服務提供商以獲取更多詳細資訊。

說明通告



警告：可能會導致使用者和第三方受傷的情況。



小心：可能會導致輕微人身傷害或裝置損壞的情況。



注意：注意或其他資訊。

目錄

5 安全及有效使用準則

01

自訂設計功能

- 13 指紋辨識
- 16 Pen Pop
- 17 快速共用
- 18 QuickMemo+
- 20 多工處理功能
- 21 QSlide

02

基本功能

- 23 產品元件和配件
- 24 零件概覽
- 26 開啟或關閉電源
- 27 安裝 SIM 卡及電池
- 29 插入記憶卡
- 30 取出記憶卡
- 30 為電池充電
- 32 觸控螢幕
- 35 桌面
- 42 螢幕鎖定
- 45 記憶卡加密
- 46 螢幕截圖
- 47 輸入文字
- 52 勿干擾
- 53 內容共享

03

有用的應用程式

- 56 安裝及解除安裝應用程式
- 57 已解除安裝應用程式
- 58 手機
- 61 訊息
- 62 相機
- 70 媒體匣
- 73 音樂
- 74 電子郵件
- 76 日曆
- 77 計算機
- 77 時鐘
- 78 下載
- 78 檔案管理員
- 79 語音備忘錄
- 79 FM 收音機
- 80 通訊錄
- 82 工作
- 82 LG Backup
- 83 RemoteCall Service
- 83 Chrome
- 83 Google 應用程式

04

電話設定

- 87 設定
- 87 網絡
- 97 聲音和通知
- 98 顯示
- 99 一般

05

附錄

- 108 LG 語言設定
- 108 LG Bridge
- 109 手機軟體更新
- 111 常見問題
- 114 防盜指南
- 115 更多資訊

安全及有效使用準則

請讀取以下簡易的使用規則。違反這些準則可能會發生危險或觸犯法例。

如果發生故障，您裝置中內置的軟件工具會建立一份故障日誌。此工具只會收集與故障相關的數據，例如訊號強度、通話時突然斷線的裝置 ID 位置和載入的應用程式。此日誌只用作協助確定發生故障的原因。這些日誌會被加密，如您需要退回裝置進行維修，只有已授權的 LG 維修中心才可存取其內容。

關於裝置的重要資訊

- 裝置應用程式及服務需隨供應商情況及軟件版本而定，如有更改或取消，恕不另行通知。
- 裝置於首次開啟時會進行起始設定。首次啟動時間可能會較長。

使用前需知

- 如欲另行購買配件，請聯絡 LG 客戶資訊中心查詢認可的分銷商。
- 裝置的外型和規格如有更改，恕不另行通知。
- 除產品本身的用途外，請勿將 LG 產品用於其他用途。使用非官方認可的應用程式或軟件可能會對裝置造成損壞，而此類損壞並不包括在保養服務之內。

無線電波暴露準則

無線電波暴露及特定吸收比率 (SAR) 資訊。

本裝置之設計符合適用的無線電波暴露安全要求。這些要求是基於可確保所有使用者安全的科學指引，範圍涵蓋任何年齡與任何健康狀況的人士。

- 無線電波暴露指引的量度單位稱為特定吸收比率或 SAR。SAR 測試使用標準方法進行，用裝置在所有使用的頻帶的最高合格電源水平傳輸。
- 雖然不同型號 LG 裝置的 SAR 水平有所差異，但所有這些裝置的設計均符合無線電波暴露的相關指引。
- 國際非離子化輻射保護委員會 (ICNIRP) 建議的 SAR 限制，即平均 10 克組織 2 W/kg。

- 本型號裝置經測試後在耳邊使用的最高 SAR 值為 0.471W/kg(10 克)，佩戴在身上時的最高 SAR 值為 1.130 W/kg(10 克)。
- 在將裝置置於耳邊正常使用或使其距身體至少 5 毫米遠的情況下，此流動電話符合關於 RF 暴露的指引。如果隨身攜帶裝置，所用的裝置套或其他裝置中不可包含金屬物品，並應使裝置與身體至少保持 5 毫米的距離。要傳輸數據檔案或訊息時，該裝置與網絡進行有效的連接。在某些情況下，數據檔案或訊息的傳送可能會延遲，直至這類連接可用為止。請確保遵守以上的特別距離指示，直到傳輸完成為止。

產品保護及維護

- 請僅使用經認可適用於此特定型號裝置的原裝 LG 電池、充電器及配件。使用其他種類的配件可能會導致裝置的認可或保養失效，並可能引致危險。
- 一些內容和圖片可能與您的裝置有所不同，並可能有所更改而不須事前通知。
- 請勿拆開此裝置。如裝置需要維修，請由合格的維修技師進行維修。
- 根據 LG 的政策，保養期內的維修可能會包括更換部件或主板，這些用於更換的部件或主板可能全新的或是經過翻新的，但其功能與被更換的部件相同。
- 請遠離如電視、收音機或個人電腦等電器產品而使用裝置。
- 裝置需遠離發熱來源，如散熱器或烹調器具。
- 請勿摔落裝置。
- 請勿讓此裝置遭機械震動或衝擊。
- 請於所有須遵守特殊限制的地方關閉裝置。例如，請勿在醫院內使用裝置，否則它可能會對敏感的醫療設備造成影響。
- 請勿以潮濕的雙手操作充電中的裝置。這可能會引致觸電和造成裝置嚴重損壞。
- 請不要在易燃材料附近為裝置充電，因為充電期間裝置會發熱並導致火災。
- 使用乾布清潔裝置表面（請勿使用苯、稀釋劑或酒精等溶劑）。
- 切勿將裝置放在布質家具上充電。

- 裝置應在通風良好的環境中充電。
- 請勿讓此裝置接觸過多煙霧或塵埃。
- 請勿將裝置放於信用卡或車票附近，這可能會影響磁帶上的資料。
- 請勿以尖銳物件敲打螢幕，否則可能會損毀裝置。
- 請勿將裝置暴露於液體或濕氣中。
- 請小心使用配件，例如耳機。如非必要，請勿觸及天線。
- 如果玻璃螢幕碎裂，請勿使用、接觸或嘗試移除或修補玻璃。因妄用或不正確使用而導致玻璃螢幕受損並不在保養範圍內。
- 您的裝置是電子裝置，在正常運作下會散發熱力。在沒有足夠通風的環境下，長時間與皮膚直接接觸可能導致不適或輕度灼傷。因此，在操作期間或操作之後處理裝置時，請謹慎使用。
- 如果裝置被弄濕，請立即拔下裝置電源連接並立即徹底抹乾。請勿嘗試使用焗爐、微波爐或風筒等外置加熱裝置加快烘乾過程。
- 請確保產品並無與液體接觸。請勿在產品被沾濕時使用或充電。如果產品被沾濕，指示器會被液體損壞並改變顏色。請注意，這樣會對您獲取任何保用所提供的免費維修服務造成限制。

有效使用裝置

電子裝置

所有裝置的效能均可能因訊號干擾而受影響。

- 請勿在未經許可的情況下於醫療儀器附近使用裝置。請諮詢您的醫生，以確定使用裝置是否會干擾醫療儀器的操作。
- 心臟起伏器生產商建議在其他裝置與心臟起伏器之間預留最小 15 厘米，以防止對其產生潛在干擾。
- 本裝置會產生亮光或閃光。
- 部份助聽器可能會受裝置干擾。
- 裝置可能會輕微干擾電視、收音機、個人電腦等。
- 如可能，請在介乎 0°C 與 40°C 的溫度環境下使用裝置。將裝置曝露在極低或極高的溫度下可能會導致產品損壞、故障或甚至爆炸。

道路安全

請查看於您所在地區駕駛時使用裝置的法例及規則。

- 駕駛時切勿使用手持裝置。
- 請專心一致駕駛。
- 請視乎駕駛情況，駛離馬路並停泊好汽車後才撥打或接聽電話。
- RF 能量可能會影響車內某些電子系統，例如車載立體聲音響及安全設備等。
- 如果您的汽車配有氣囊，切勿讓已安裝的無線裝置或手提無線裝置阻擋氣囊。這可能會導致氣袋無法正常彈出，使其失去保護作用或造成嚴重人身傷害。
- 如果在外出時聆聽音樂，請確保將音量設定至合適水平，以便可以對周圍環境產生警覺。這在路邊時特別重要。

避免損害您的聽覺



避免聽力受損，請不要長時間在高音量下聆聽。

如果長時間以較大音量收聽，可能會對聽覺造成損害。所以我們建議開啟或關閉裝置時，不要將它放於太近耳朵。我們亦建議將音樂及通話音量設定至合適水平。

- 使用耳機時，如果您未能聽見附近的人說話，或者坐在您身邊的人能聽到您正在聆聽的聲音，就應將聆聽音量調低。



- 耳機的過大聲音壓力可能導致聽覺受損。

玻璃部件

裝置的某些零件由玻璃製成。如果裝置跌落到堅硬的表面，或受到非常大的撞擊，玻璃可能會破裂。如玻璃破裂，請勿接觸或嘗試移除碎片。停止使用您的裝置，直到授權的服務提供商更換玻璃。

爆破地區

請勿在進行爆破時使用裝置。請嚴格遵守相關限制、規定或條例。

潛在爆炸環境

- 請勿在油站使用裝置。
- 請勿在燃料或化學物質附近使用裝置。
- 請勿使用放置了裝置及配件的汽車運送或放置易燃氣體、液體或爆炸物。

在飛機上

無線裝置可引致飛機干擾。

- 登機前，請先關掉裝置。
- 未經機務人員批准，在地面停駐時也請勿使用裝置。

兒童

請將裝置放在兒童接觸不到的安全地方。裝置包含微細零件，如果拆開，可能造成哽咽危險。

緊急通話

某些流動網絡可能無法使用緊急通話。因此，您不應僅倚賴裝置作為緊急通話的方式。請向您本地的服務供應商查詢。

電池資料及保護

- 充電前，您無須完全放電。跟其他電池系統不同，它不會產生可降低電池效能的記憶效應。
- 只使用 LG 電池及充電器。LG 充電器是為將電池壽命擴至最大而設。
- 請勿拆解電池或造成電池短路。
- 請保持電池的金屬接點清潔。
- 當電池不再提供可接受的效能，請更換電池。電池組在必須更換前可重複充電數百次。

- 如果電池很久沒有使用，則需重新充電，以擴展其用量。
- 請勿直接將充電器暴露於日光下或高濕度環境（如浴室）中。
- 請勿將裝置置於過熱或過冷的地方，因為這可能降低您的裝置性能。
- 若使用類型不當的電池，可能會有爆炸的危險。請根據相關指示處理廢棄電池。
- 如果需要更換電池，請帶同裝置前往最近的授權 LG 電子產品服務點或經銷商以尋求協助。
- 請謹記在裝置完全充電後從牆壁插座拔出充電器，避免充電器造成不必要的電力損耗。
- 電池的實際壽命將取決於網絡設定、產品設定、使用模式、電池及環境條件。
- 請勿讓如動物牙齒、指甲等尖銳物與電池發生接觸。這可能會引起火災。

使用 SIM 卡時的注意事項

- 切勿將貼有標籤或封條的 SIM 卡插入裝置內。這樣可能造成損壞。
- 裝置正在使用時，切勿移除 SIM 卡。這樣可能造成 SIM 卡或系統損壞。
- 請格外小心，避免 SIM 卡出現刮痕、屈曲或受磁石破壞。這樣可能會刪除儲存於 SIM 卡內的檔案或造成裝置失靈。

使用記憶卡時要注意的事項

- 插入記憶卡時，請確保方向正確。插入方向錯誤可能會損害記憶卡。

保護個人資料

- 請保護您的個人資料，以免資料外洩或敏感資料遭不當使用。
- 使用裝置時，始終備份重要資料。LG 不會就任何資料損失承擔責任。
- 棄置裝置前，請時常備份所有數據並重設裝置，以免敏感資料遭不當使用。
- 下載應用程式時，請詳細閱讀權限螢幕上的資訊。
- 若應用程式可存取多項功能或您的個人資料，使用時須加倍小心。
- 定期檢查您的個人帳戶。若懷疑個人資料遭不當使用，請要求服務供應商刪除或更改帳戶資料。
- 若裝置遺失或被盜，請更改帳戶密碼以保護個人資料。
- 不要使用來源不明的應用程式。



01

自訂設計功能

指紋辨識

指紋辨識概覽

使用指紋識別功能前，您必須在裝置上註冊指紋。

您可以在下列情況中使用指紋識別功能：

- 解鎖螢幕。
- 查看**媒體匣**或 **QuickMemo+** 內的鎖定內容。
- 登入應用程式或以指紋識別身份，以確認購買項目。



- 您可使用指紋透過裝置識別使用者身份。來自不同使用者的非常類似的指紋可能會被指紋感測器辨識為相同的指紋。為增強裝置的安全性，將螢幕鎖定模式設定為模式解鎖，PIN 或密碼。

指紋辨識注意事項

指紋識別的準確度可能因不同原因降低。要最大限度地提高指紋辨識準確率，請在使用裝置之前檢查以下各項。

- 裝置的電源/鎖定鍵設有指紋感測器。確保電源/鎖定鍵沒有被硬幣或鑰匙等金屬物體損壞。
- 如果電源/鎖定鍵或您的手指上沾有水份、灰塵或其他外來物質，指紋註冊或識別功能可能無法使用。使用指紋識別功能前請清潔並擦乾您的手指。
- 如果您的手指表面有疤痕或由於浸泡在水中而不光滑，指紋可能無法被正確辨識。
- 如果您彎曲您的手指或僅使用指尖進行操作，則您的指紋可能無法識別。確保您的手指覆蓋電源/鎖定鍵的整個表面。
- 每次註冊僅掃描一隻手指。掃描多隻手指可能會影響指紋註冊和辨識。

- 如果週圍空氣乾燥，裝置可能會產生靜電。如果周圍空氣乾燥，使用者應避免掃描指紋，或在掃描指紋前避免接觸金屬物件，例如硬幣或鑰匙以移除靜電。

註冊指紋

您可以在裝置中註冊和保存您的指紋以使用指紋辨識。

1 點擊 **○** > **設定** > **一般** > **指紋和安全** > **指紋**。




- 此功能在已啟用安全鎖定的情況下可供使用。
 - 使用 Knock Code、圖形、PIN 碼、密碼及其他功能鎖定裝置。
- 如果沒有啟動螢幕鎖定，請根據畫面的指示設置鎖定螢幕功能。參閱[配置螢幕鎖定設置](#)了解詳細資訊。

2 找到裝置背面的電源/鎖定鍵，輕輕放上一隻手指以註冊指紋。



- 輕輕按下電源/鎖定鍵以便感測器可識別您的指紋。如果您過於用力地按下電源/鎖定鍵，則可能會啟動畫面鎖定功能，或關閉螢幕。
- 確保您的指尖覆蓋電源/鎖定鍵感測器的整個表面。

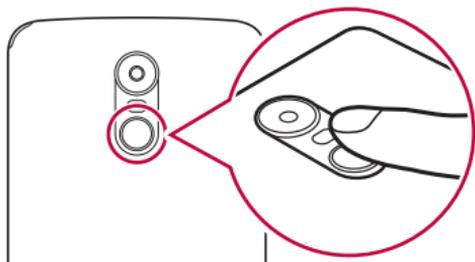

- 3 按照螢幕上的說明進行操作。
 - 通過一點一點移動手指反復掃描指紋，直到指紋註冊完畢。
- 4 完成指紋註冊後，點擊**確定**。
 - 點按**新增更多**以註冊另一個指紋。如果您僅註冊了一個指紋，而相應手指的狀況不佳，則指紋識別可能無法有效進行。鑒於此類情況的預防措施，請註冊多個指紋。

管理指紋

您可以修改或刪除指紋。

- 1 點擊  > **設定** > **一般** > **指紋和安全** > **指紋**。
- 2 按照指定的解鎖方式解鎖。
- 3 從指紋清單中，輕觸一個指紋以重命名。如要刪除指紋，點擊 。

用指紋解鎖螢幕

您可以通過指紋來解鎖螢幕或查看鎖定內容。啟動預期功能：

- 1 點擊  > **設定** > **一般** > **指紋和安全** > **指紋**。
- 2 按照指定的解鎖方式解鎖。
- 3 在指紋設置螢幕啟動預期功能：
 - **螢幕鎖定**：用指紋解鎖螢幕。
 - **內容鎖定**：用指紋解鎖內容。要實現此功能，請確保已設定內容鎖定。

Pen Pop

Pen Pop 功能讓您快捷輕易地存取不同選項，以建立備忘錄。拔出觸控筆，即可開啟 Pen Pop。

設定 Pen Pop

點擊  > 設定 > 一般 > 觸控筆。

Pen Pop 選項


- ：隱藏或顯示 Pen Pop 選項。
- ：開啟 Pop Memo 以建立備忘錄。
- ：開啟擷取+，並在備忘錄中使用目前的螢幕影像。
- ：開啟 Pop Scanner 即可使用相機拍攝相片，並在備忘錄中使用。
- ：開啟 QuickMemo+ 並檢視目前的備忘錄。
- ：新增快捷鍵，以存取您所選擇的應用程式。

快速共用

您可以將拍攝的照片或影片馬上分享至您喜愛的應用程式。

- 1 點擊 $\circ >$ , 然後拍照或錄像。
- 2 點選螢幕上的應用程式圖示，即可與該應用程式共用照片或影片。

您亦可以向相反方向撥動圖示，以檢視其他可共用照片和影片的應用程式。

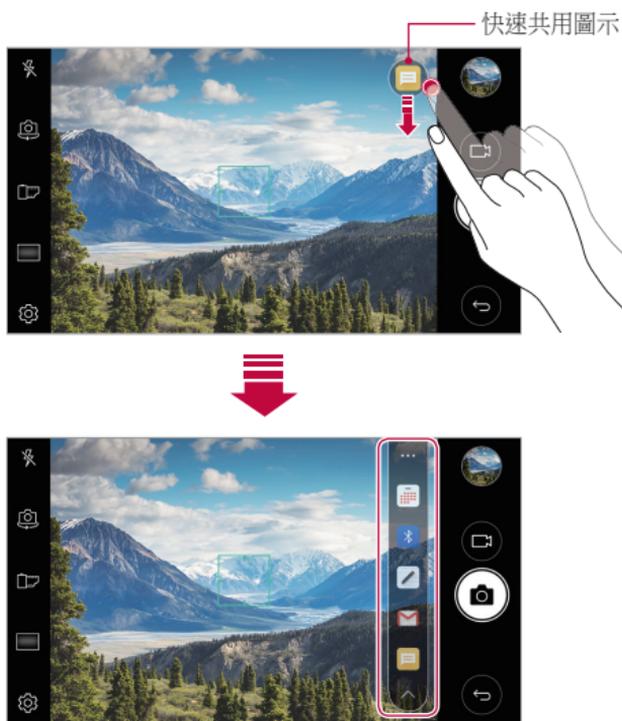

- 快速共用圖示所顯示的應用程式可能會有所不同，視乎裝置上安裝的應用程式之類型和使用頻率而定。

QuickMemo+

QuickMemo+ 概覽

您可以使用此進階記事本功能上的各種選項 (例如影像管理和螢幕擷圖)，以製作創意筆記。傳統記事本不支援此功能。

建立筆記

- 1 點擊  > QuickMemo+。
- 2 點擊  以建立筆記。
 - ：儲存筆記。
 - ：撤銷上一操作。
 - ：重做撤銷的上一操作。
 - ：使用鍵盤輸入筆記。
 - ：手寫筆記。
 - ：擦除手寫筆記。
 - ：放大或縮小，旋轉或刪除手寫筆記的部分。
 - ：瀏覽其他選項，包括刪除、插入、分享、更改種類、鎖、紙張樣式、停止所有自動連接、QSlide。
- 3 點擊  以儲存筆記。

在照片上寫筆記

- 1 點擊  > QuickMemo+。
- 2 點擊  以拍攝照片，然後點選**完成**。
- 3 點擊  或  即可在照片上書寫筆記。
 - 在照片上手寫筆記。
 - 在照片下輸入文字。
- 4 點擊  以儲存筆記。

在螢幕截圖上寫筆記

- 1 查看螢幕時，您需要向下拖動狀態列，然後點擊 。
 - 螢幕截圖將顯示為記事本背景主題。備忘錄工具將在螢幕頂部顯示。
- 2 隨意寫筆記。
 - 在照片上手寫筆記。
- 3 點擊  並將筆記儲存到所需的位置。
 - 儲存的筆記可在 **QuickMemo+** 或**媒體匣**中進行查看。
 - 要始終在同一位置儲存筆記，請選擇**以此為本操作預設值**。核取方塊並選擇一個應用程式。

管理資料夾

您可以查看按類型分組的筆記。

- 1 點擊  > **QuickMemo+**。
- 2 在螢幕的頂部，點擊  並選擇一個功能表項目：
 - **所有備忘錄**：查看 **QuickMemo+** 中所有儲存的筆記。
 - **我的備忘錄**：檢視透過 **QuickMemo+** 建立的筆記。
 - **Pop Scanner**：檢視由 Pop Scanner 建立的筆記。
 - **擷取+**：查看通過  建立的筆記。
 - **垃圾桶**：檢視已刪除的筆記。
 - **新類別**：新增類別。
 - ：重新排列、新增或刪除類別。要變更類別的名稱，請點選該類別。




- 初次啟動 QuickMemo+ 時，某些資料夾不會顯示。當資料夾包含至少一個相關筆記時，停用的資料夾將啟用並顯示。

多工處理功能

多重視窗

您可以將螢幕分割成多個視窗，以同時使用兩個應用程式。在使用應用程式時，長按 ，然後從最近使用的應用程式清單選取應用程式。

- 您可以在主螢幕上同時顯示和使用兩個應用程式。
- 如要停用多重視窗功能，長按 。

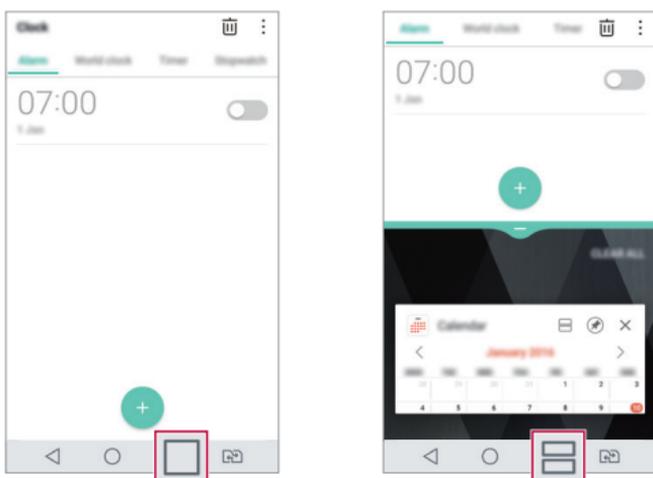

- 您可以在支援多重視窗功能的應用程式上使用此功能。
- 部分應用程式不支援多重視窗功能，當中包括已下載的應用程式。

概覽螢幕

概覽螢幕讓您預覽最近使用的應用程式。

如要檢視最近使用的應用程式清單，在主螢幕上點擊 ，然後點選顯示的應用程式。

- 點按應用程式，並將應用程式拖動至螢幕頂部，即可在多重視窗上啟動應用程式。您亦可以點選每個應用程式頂部的 。

QSlide

您可以在已有應用程式正在運行時使用 QSlide 開啟其他應用程式。例如，在視訊播放時使用日曆。

在應用程式運行時，點擊  > QSlide。



• 某些應用程式可能不支援此功能。

- ：關閉 QSlide 模式以切換到全屏模式。
- ：調整 QSlide 視窗的透明度。如果 QSlide 視窗是透明的，則該視窗無法回應觸摸輸入。
- ：關閉 QSlide 視窗。
- ：調整 QSlide 視窗的大小。



02

基本功能

產品元件和配件

您的裝置包含以下項目。

- 裝置
- 電池
- 耳機
- USB 連接線
- 充電器
- 快速入門指南




- 上列配件為可選購配件。
- 裝置隨附的任何可用的配件可能視地區和服務提供者而定。
- 請務必使用原裝 LG Electronics 配件。使用由其他製造商製造的配件可能會影響裝置的通話效能或導致故障。這種情況可能無法由 LG 維修服務所承擔。



- 如果缺少任何基本配件，聯繫您購買裝置的經銷商。
- 如要購買額外的基本配件，請聯絡 LG 客戶服務中心。
- 如要購買可選配件，請聯絡 LG 客戶服務中心，以瞭解供貨經銷商。
- 產品包裝盒中的某些項目如有變更，恕不另行通知。
- 裝置的外觀和規格如有變更，恕不另行通知。
- 裝置規格可能會有所不同，具體視區域或服務提供商而定。
- 請務必使用 LG Electronics 提供的原裝配件。使用第三方配件可能會損壞裝置或導致故障。

零件概覽

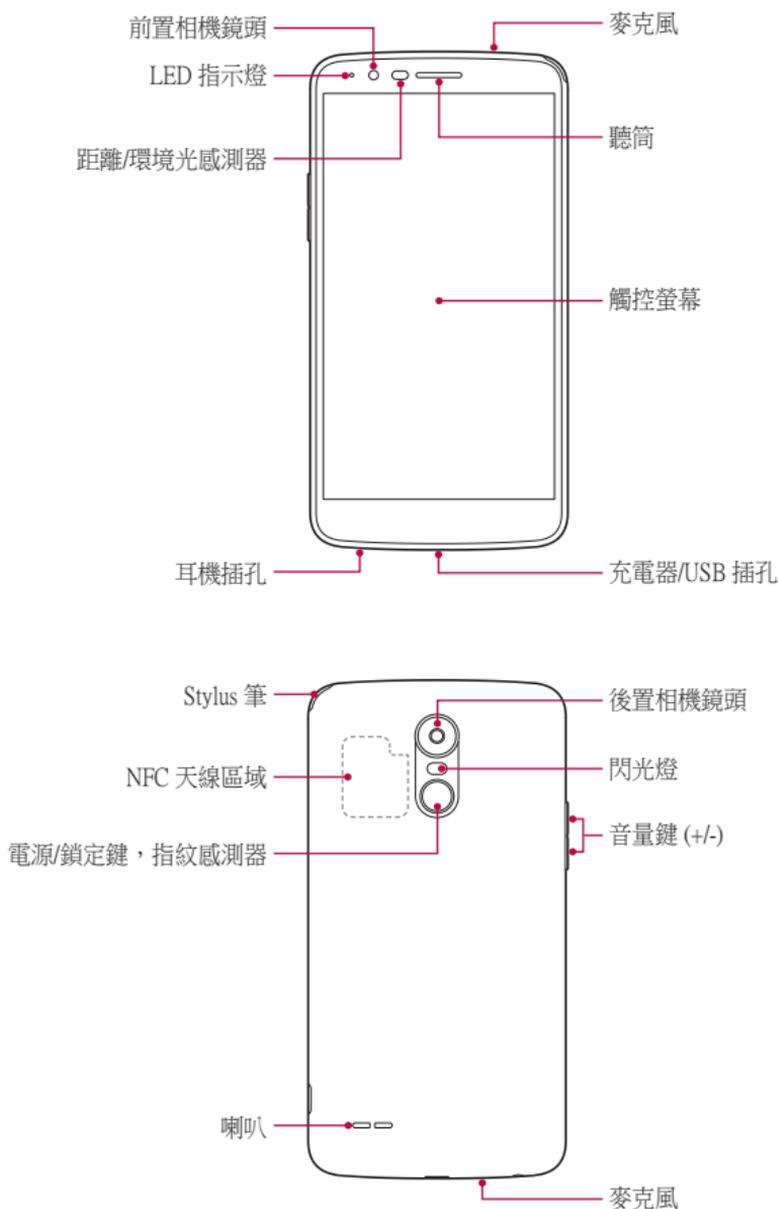

- 距離/環境光感測器
 - 距離感測器：在通話時，當裝置接近人體，距離感測器會關閉螢幕並停用觸控功能。當裝置位於特定範圍以外時，該感測器會重新開啟螢幕並啟用觸控功能。
 - 環境光感測器：環境光感測器在開啟自動亮度控制模式時分析環境光強度。
- 音量鍵
 - 調整鈴聲、通話或通知的音量。
 - 使用相機時，輕按音量鍵即可拍攝照片。要連續拍攝照片，請按住音量鍵。
 - 螢幕鎖定或關閉時，按音量減小 (-) 鍵兩次以啟動**相機**應用程式。按音量增加 (+) 鍵兩次以啟動**擷取+**。
- 電源/鎖定鍵 (指紋感測器)
 - 當您想要開關螢幕時，短暫地按一下該鍵。
 - 當您想要選擇電源控制選項時，按住該鍵。
 - 開啟指紋識別功能以簡化螢幕解鎖程序。查看**指紋辨識概覽**以了解詳情。
 - 在使用前置相機時，輕按按鍵以拍攝相片。
 - 輕按按鍵兩下以擷取螢幕擷圖。



- 某些功能可能會限制存取，具體視裝置規格而定。
- 請勿將重物放在裝置上或坐在裝置上。否則可能會損壞觸控式螢幕。
- 螢幕保護膜或配件可能會干擾距離感測器。
- 如果裝置被沾濕或在潮濕的地方使用，觸控式螢幕或按鈕可能無法正常運作。

開啟或關閉電源

開啟電源

電源關閉時，按住電源/鎖定鍵。



- 初次開啟裝置時，將進行初始組態。智能手機的初次啟動時間可能比平常要長。

關閉電源

按住電源/鎖定鍵，然後選擇**關機**。

電源控制選項


點按電源/鎖定鍵，然後選擇一個選項。

- **關機**：關閉裝置。
- **關閉電源後重新開啟**：重新啟動裝置。
- **開啟飛航模式**：停止流動電訊相關功能，包括進行電話通話、收發短信和上網瀏覽。其他功能仍然可用。


安裝SIM卡及電池

插入由裝置服務供應商提供的 SIM 卡和隨附的電池。


- 1 要取下電池蓋，請用一隻手緊握裝置。再用另一隻手，如下圖所示用拇指推開背蓋。

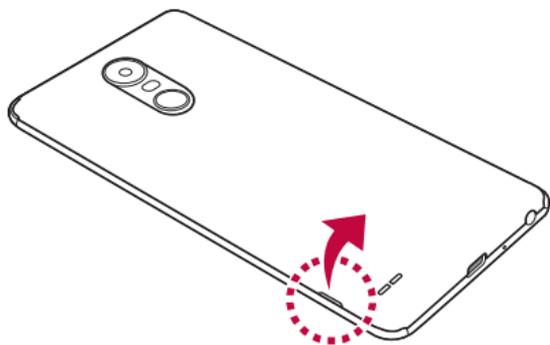

- 2 如圖所示將 SIM 卡推入 SIM 卡插槽。確保卡的金屬接觸面朝向下方。

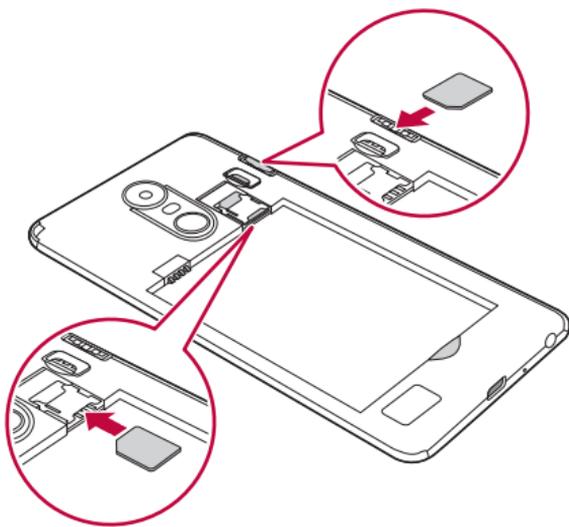

3 插入電池。

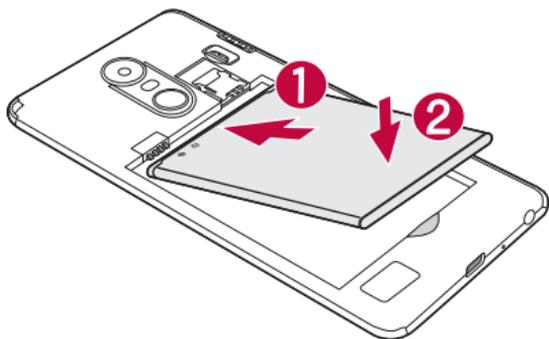

4 如要合上電池蓋，將背蓋對準電池盒，並按下背蓋直到卡緊為止。



- 此裝置只支援 Nano SIM 卡。
- 為實現無故障效能，建議將電話與正確類型的 SIM 卡一起使用。務必使用運營商提供的原廠製造 SIM 卡。

使用 SIM 卡的預防措施


- 請勿遺失 SIM 卡。LG 對於遺失或轉移 SIM 卡導致的損壞和其他問題概不負責。
- 插入或拔出 SIM 卡時，小心不要損壞該卡。

插入記憶卡

將記憶卡插入裝置。

裝置支援高達 2 TB microSD 卡。部分記憶卡與您的裝置可能不相容，視乎記憶卡製造商和類型而定。

- 1 取下電池蓋。
- 2 插入記憶卡時，請將金屬接觸面朝向下方。

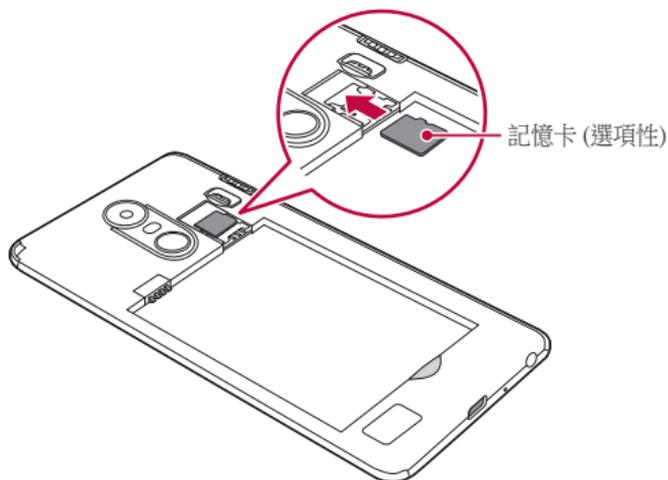

- 3 重新蓋上電池蓋。



- 有些記憶卡可能無法與裝置完全兼容。如果使用不兼容的記憶卡，可能會損壞裝置或記憶卡，或損毀已儲存的資料。



- 頻繁地寫入及清除資料可能會縮短記憶卡的壽命。

取出記憶卡

為安全起見，請在取出記憶卡前執行卸載。

- 1 點擊 **○** > **設定** > **一般** > **儲存裝置** > **△**。
- 2 移除背蓋，然後取出記憶卡。




- 請勿在裝置傳輸或存取資料時取出記憶卡。這可能會導致資料遺失或損毀，亦可能導致記憶卡或裝置損壞。LG 對於濫用或不正確使用記憶卡的損失概不負責，包括資料遺失。

為電池充電

在使用裝置之前，首先把電池充滿電。

將充電數據線的一端連接到充電器，將數據線的另一端插入手機充電連接埠，然後將充電器插入電源插座。

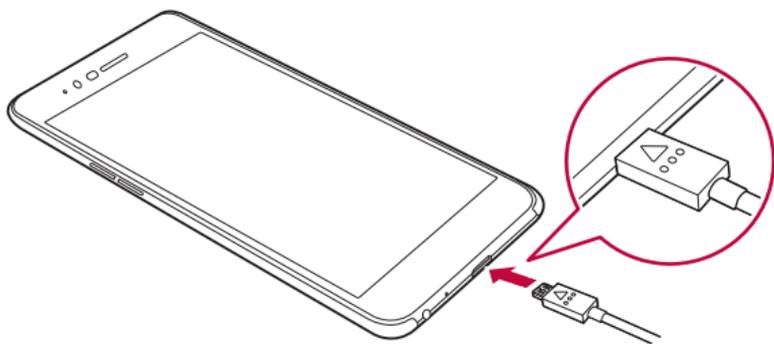

- 請確保使用裝置隨附的 USB 連接線。
- 確保使用經 LG 認證的充電器、電池和充電線。用第三方充電器對電池充電可能會導致電池爆炸或損壞裝置。
- 在裝置充電時使用裝置可能會導致電擊。使用裝置時，請停止充電。



- 裝置充滿電後，從電源插座中拔下充電器。這樣可防止不必要的耗電。
- 對電池充電的另一種途徑是在裝置與桌上型或筆記本電腦之間連接 USB 連接線。這種方式可能會比常用的電池充電方式花費更長時間。
- 請勿使用無法維持額定電壓的 USB Hub (集線器) 對電池充電。充電可能會失敗或意外停止。

使用裝置時的注意事項

- 更換電池時，應格外小心以確保沒有異物或水進入裝置。
- 確保裝置內部不會接觸金屬物件或水。
- 確保使用隨附的 USB 連接線；請勿使用第三方的 USB 連接線或充電器。LG 有限保養不包括因使用第三方配件而引致的後果。
- 未能遵循此指南的指引或不正當使用裝置可能會導致裝置損壞。

有效地使用電池

如果您一直同時連續運行許多應用程式和功能，則電池的使用時間可能會減少。

取消後台操作可延長電池使用時間。

要最大限度地減少電池消耗，請遵循以下提示：


- 不使用時關閉Bluetooth® 或 Wi-Fi 網絡功能。
- 盡可能將螢幕待機時間縮短。
- 最大限度地降低螢幕亮度。
- 不使用裝置時設置螢幕鎖定。
- 檢視電池使用狀況資料，並關閉所有耗電的已下載應用程式。

觸控螢幕

透過使用觸控螢幕手勢，您可以自行熟悉如何控制裝置。

點選

用您的指尖輕輕點選以選擇或執行應用程式或選項。

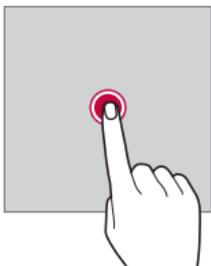


點住。

點住數秒，以顯示可用選項的功能表。




雙點選

快速點選兩次以放大或縮小網頁和放大地圖。

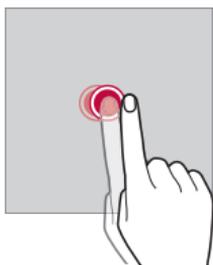


拖動

點選應用程式或小工具等項目，然後以受控的動作將手指移動至另一個位置。您可用此手勢來移動項目。

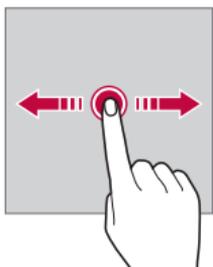

撥動

使用手指點選螢幕，然後快速不停頓移動手指。您可用此手勢撥動清單、網頁、照片、螢幕和更多項目。

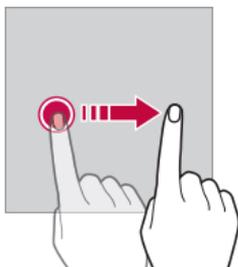

捏合與張開

將兩根手指捏合以縮小，例如圖片或地圖。要放大，請張開手指。



- 不要讓觸控螢幕遭受過度的物理撞擊。您可能會損壞觸控感測器。



- 如果在磁性、金屬或導電材料附近使用裝置，則可能會發生觸控螢幕故障。
- 如果在明亮光線 (如陽光直射) 下使用裝置，可能會看不見螢幕，具體視您的位置而定。請在陰涼的位置或環境光線不太明亮但亮度足以閱讀書籍的位置使用裝置。
- 請勿過度用力按壓螢幕。
- 用指尖輕輕點選所需的選項。
- 如果在戴手套時或用指甲尖端點選，觸控功能可能無法正常執行。
- 如果螢幕受潮濕影響，觸控功能可能無法正常執行。
- 如果從第三方商店購買的螢幕保護膜或配件套用在裝置上，觸控式螢幕可能無法正常工作。

桌面

主螢幕概覽

主螢幕是存取裝置上各種功能和應用程式的起點。在螢幕上點擊  以直接轉至主螢幕。

您可以在主螢幕管理所有應用和小工具。向左或向右滑動介面以快速查看所有安裝的應用程式。

主螢幕佈局

您可以查看主螢幕上的所有應用程式並管理小工具和資料夾。



- 主螢幕可能會有所不同，具體視服務提供商或軟體版本而定。

- **狀態列**：查看狀態圖示、時間和電池電量。
- **天氣小工具**：檢視特定地區的天氣和時間資訊。
- **Google 搜尋小工具**：透過輸入說出或寫出的關鍵字，執行 Google 搜尋。


- **資料夾**：按您的偏好建立資料夾來對應用程式進行分組。
- **頁面圖示**：顯示主螢幕的畫布總數目。點選所需的頁面圖示，即可前往您選取的頁面。系統會顯示目前畫布的圖示。
- **快速存取區域**：將主要應用程式設置在螢幕底部，以便可從任何主螢幕畫布進行存取。
- **主頁觸摸按鈕**
 - ◀：回到前一個螢幕。關閉鍵盤或彈出視窗。
 - ○：點選以前往主螢幕。點按着即可啟動 Google 搜尋。
 - □：點選即可檢視最近使用的應用程式清單，或執行清單上的應用程式。如要刪除所有最近使用的應用程式，點選**全部清除**。如要透過多重視窗功能同時使用兩個應用程式，可在使用應用程式時點按圖示。
 - ↻：選擇您要使用的 SIM 卡。點選並按住按鈕可進行雙智能咭設定。

編輯主頁觸摸按鈕

您可以重新排列主頁觸摸按鈕，或將常用功能添加到主頁觸摸按鈕區域。

點擊 ○ > 設定 > 顯示 > 主頁觸摸按鈕 > 按鈕組合，然後自訂設定。

- 提供數種功能，包括 QSlide、通知及擷取+。最多可以添加五個項目。

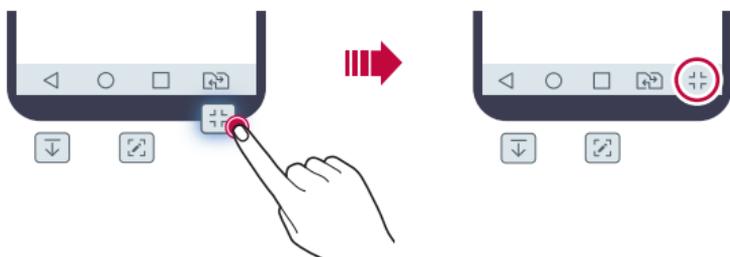

狀態圖示

當有未讀消息、日曆事件或鬧鐘的通知時，狀態列將顯示相應的通知圖示。透過查看狀態列中顯示的通知圖示，檢查裝置的狀態。

	無訊號
	數據正在通過網絡傳輸
	已設定鬧鐘
	已開啟震動模式
	已開啟藍牙
	已透過 USB 連接到電腦
	電池電量
	飛航模式已開啟
	未接來電
	Wi-Fi 已連接
	靜音已開啟
	GPS 已開啟
	熱點已開啟
	無 SIM 卡
	NFC 已開啟




- 某些圖示可能會顯示不同或可能根本未顯示，具體視裝置狀態而定。根據您使用裝置的實際環境參閱圖示。
- 顯示的圖示可能會有所不同，具體視區域或服務提供商而定。

通知面板


在主螢幕上向下拖動狀態列，即可開啟通知面板。

- 如要開啟快速存取圖示清單，可向下拖動通知面板或點選 。
- 如要重新排列、加入或移除圖示，點選**編輯**。
- 如果您點按圖示，將顯示相應功能的設定螢幕。

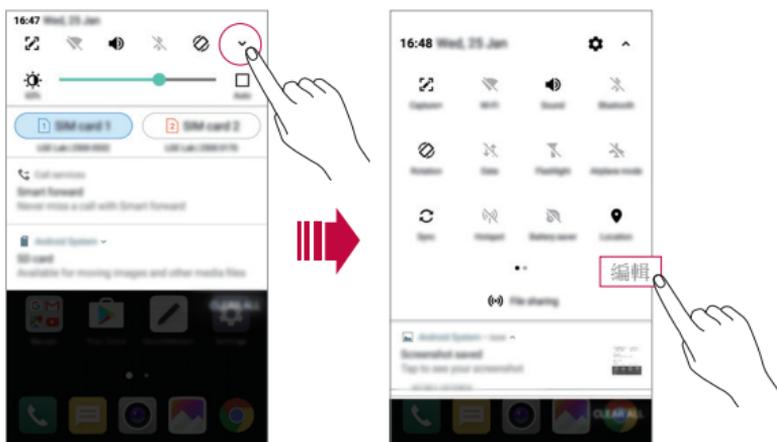

切換螢幕方向

您可以將螢幕方向設定為根據裝置的實際方向自動切換。在通知面板中，點選快速使用圖示清單中的**旋轉**。或者，點擊 **○ > 設定 > 顯示**，然後啟用**自動旋轉螢幕**。

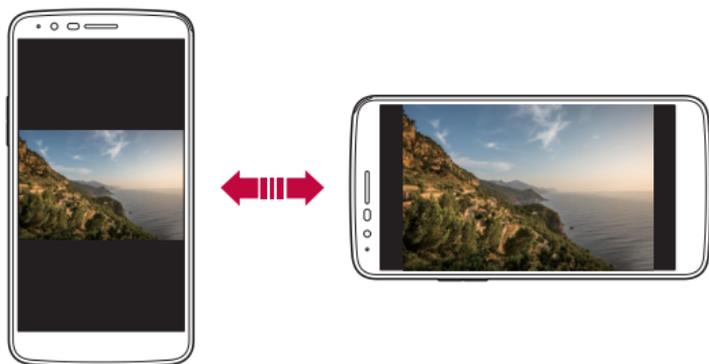

編輯主螢幕

在主螢幕中，點按着空白處，然後選取下方的所需操作。


- 要重新排列主螢幕畫布，請點按着一個畫布，然後將其拖到想放置的位置。
- 如要將小工具加入主螢幕，點按着主螢幕的空白處，然後選取小工具。按着想新增的小工具圖標並移至主螢幕的空間。
- 如要更改主題，點按着主螢幕的空白處，然後選取**主題**。或者，點擊 **○ > 設定 > 顯示 > 主題**，然後選取主題以套用至裝置。
- 如要配置主螢幕設定，點按着主螢幕的空白處，然後選取**主頁螢幕設定**。參閱**主頁螢幕設定**瞭解詳細資訊。
- 如要檢視或重新安裝解除安裝的應用程式，點按着主螢幕的空白處，然後選取**已解除安裝應用程式**。參閱**已解除安裝應用程式**瞭解詳細資訊。

檢視背景主題

您可以隱藏主螢幕中的應用程式和小工具，以只觀看背景圖像。

在主螢幕中央上放置兩隻手指並慢慢移開。

- 要返回到顯示應用程式和小工具的原始螢幕，在主螢幕中捏合您的手指或點擊 ◀。

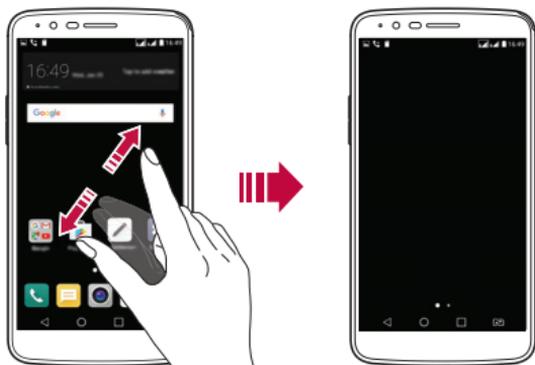

在主螢幕中移動應用程式

在主螢幕中，點按着一個應用程式，然後將其拖到其他位置。

- 要在主螢幕底部保留常用的應用程式，請點按着一個應用程式，然後將其拖到底部的快捷瀏覽區。
- 要從快捷瀏覽區域中刪除圖示，將該圖示拖到主螢幕。

從主螢幕使用資料夾

建立資料夾

在主螢幕中，點擊一個應用程式，然後將其拖到另一個應用程式上。

- 此時將建立一個新資料夾，並且應用程式將添加到該資料夾。

編輯資料夾

在主螢幕中，點選資料夾，然後執行以下其中一項操作。

- 要編輯資料夾名稱和顏色，請點擊資料夾名稱。
- 如要加入應用程式，點住應用程式，將應用程式拖動至資料夾，然後放開。
- 要從資料夾刪除應用程式，請點住該應用程式，然後將其拖到資料夾以外。如果資料夾中僅唯一一個應用程式，資料夾便會自動移除。
- 在資料夾中點擊 **+** 後，您亦可加入或移除應用程式。

主頁螢幕設定

您可以自訂主螢幕設定。

- 1 點擊 **○ > 設定 > 顯示 > 桌面**。
- 2 自訂以下設置：
 - **選擇主頁**：選擇主螢幕模式。
 - **牆紙**：變更主螢幕背景牆紙。
 - **螢幕效果**：選擇在主螢幕畫布切換時套用的效果。
 - **應用程式**：設定應用程式在主螢幕上的排序方式。
 - **縮圖**：變更主螢幕的應用程式排列模式。
 - **隱藏應用程式**：選擇在主螢幕上隱藏的應用程式。

螢幕鎖定

螢幕鎖定概覽

如果按下電源/鎖定鍵，您的裝置螢幕將自行關閉並鎖定。裝置處於空閒狀態一段指定的時間後也將發生此操作。

如果在未設定螢幕鎖定時按下電源/鎖定鍵，主螢幕將立即顯示。

要確保安全並阻止不必要地存取裝置，請設定螢幕鎖定。



- 螢幕鎖定會阻止裝置螢幕上不必要的觸控輸入並降低電池消耗。我們建議您在不使用裝置時啟動螢幕鎖定功能。

配置螢幕鎖定設置

配置螢幕鎖定設置有以下幾個可用的選項。

- 1 點擊 **○** > **設定** > **顯示** > **鎖定螢幕** > **選擇螢幕鎖定** 然後選擇您喜歡的方法。
- 2 自訂以下設置：
 - **無**：停用螢幕鎖定功能。
 - **揮動**：在螢幕上揮動以解鎖螢幕。
 - **Knock Code**：按一定模式點擊螢幕上空格以解鎖螢幕。
 - **圖形**：繪製圖案以解鎖螢幕。
 - **PIN 碼**：輸入數位密碼以解鎖螢幕。
 - **密碼**：輸入字母數位元密碼以解鎖螢幕。
 - **指紋**：使用您的指紋解鎖螢幕。



- 如果裝置解鎖失敗 5 次，螢幕將會封鎖 30 秒。

安全啟動設定

選取 Knock Code、圖案、PIN 碼或密碼作為鎖定裝置的方式。裝置開啟時，您可以隨時配置鎖定裝置，以保護資料。

- 除了緊急通話外，解鎖裝置前，所有功能將無法使用。
- 如果您忘記了解密密碼，將無法復原加密資料和個人資料。

鎖定螢幕設定

您可以自訂以下的鎖定螢幕設置。

- 1 點擊 **○** > **設定** > **顯示** > **鎖定螢幕**。
- 2 自訂設定：
 - **選擇螢幕鎖定**：選擇螢幕鎖定方法。
 - **Smart Lock**：選擇智慧鎖，以便在其中一個發生時，裝置可自動解鎖。
 - **牆紙**：變更鎖定螢幕背景牆紙。
 - **時鐘**：選取在鎖定螢幕上時鐘的顯示類型。
 - **捷徑**：在螢幕拖動應用程式捷徑，將應用程式捷徑加入至鎖定螢幕，並在鎖定螢幕上直接存取應用程式。
 - **遺失手機的通訊錄資訊**：在鎖定螢幕上顯示緊急通訊錄資訊。
 - **鎖定時計**：設定裝置自動鎖定的待機時間。
 - **電源按鈕立即鎖定**：按下電源/鎖定鍵時立即鎖定螢幕。



- 可用的設定項目可能有所不同，具體視選擇的螢幕鎖定方法而定。

開啟螢幕

透過點按兩次螢幕，您可以開關螢幕。



- 此選項僅在 LG 提供的主螢幕上可用。在自訂啟動程式或使用者安裝的主螢幕上，該功能可能無法正常工作。
- 點選螢幕時，請使用指尖。不要使用指甲。
- 要使用 KnockON 功能，請確保距離/環境光感測器沒有被貼紙或其他異物擋住。

開啟螢幕

點按兩次螢幕中央。

- 如點按螢幕頂部或底部可能會降低辨識率。

關閉螢幕

點按兩次主螢幕中的空白處。

或者，還可以按兩下狀態列的空白處。

Knock Code

您可以創建自己的 Knock Code 來解鎖螢幕。在螢幕關閉時，您可以按特定序列點按螢幕，以直接存取主畫面。



- 您可以將 Knock Code 與 KnockOn 功能一起使用。
- 點選螢幕時，確保使用指尖。

創建 Knock Code

- 1 點擊 **○** > **設定** > **顯示** > **鎖定螢幕** > **選擇螢幕鎖定** > **Knock Code**。
- 2 以您選擇的模式點擊方塊，以創建一個 Knock Code，然後點擊**下一頁**。
- 3 再次輸入創建的 Knock Code 進行驗證，然後點擊**確認**。

用 Knock Code 解鎖螢幕

輸入您創建的 Knock Code 來解鎖螢幕。

螢幕關閉時，在觸控式螢幕中輸入您的 Knock Code。

- 還可在鎖定螢幕開啟時輸入 Knock Code。

記憶卡加密

您可以加密和保護記憶卡中保存的資料。記憶卡中的加密資料無法從其他裝置進行存取。

- 1 點擊 **○ > 設定 > 一般 > 指紋和安全 > 加密 SD 卡儲存器**。
- 2 閱讀螢幕上的記憶卡加密概覽，然後點選**繼續**以繼續。
- 3 選擇一個選項，然後點選**現在加密**。
 - **新檔案加密**：僅加密在加密之後儲存在記憶卡上的資料。
 - **完全加密**：加密當前儲存在記憶卡上的所有資料。
 - **排除媒體檔案**：切勿將影像、音樂或視訊等多媒體檔案加密。



- 要加密記憶卡，請確保使用 PIN 或密碼設定螢幕鎖定。
- 一旦記憶卡加密啟動，某些功能將不可用。
- 如果在加密正在進行時關閉電源，則加密過程將失敗，並且某些資料可能會損壞。因此，開始加密前，請檢查電池電量是否充足。
- 加密的檔案只能從加密檔案的裝置進行存取。
- 加密的記憶卡無法在其他 LG 裝置中使用。如要在其他流動裝置上使用已加密的記憶卡，請格式化該記憶卡。
- 您甚至可以在裝置沒有安裝記憶卡的情況下啟動記憶卡加密。加密後安裝的所有記憶卡都將自動加密。

螢幕截圖

您可以在查看當前螢幕時進行螢幕截圖。

透過快捷方式

同時按住電源/鎖定鍵和音量減小 (-) 鍵至少兩秒鐘。

- 點按一下電源/鎖定按鈕，然後立即按住按鈕。您必須將手指放在電源鍵上直至完成擷取螢幕擷圖。



- 您可從媒體匣的 Screenshots 資料夾內查看已擷取的螢幕擷圖。

透過擷取+

在您要螢幕截圖的螢幕中，向下拖動狀態列，然後點擊 。



- 螢幕關閉或鎖定時，通過按音量增加 (+) 鍵兩次，您可以啟動擷取+。如要使用此功能，點擊  > 設定 > 一般，然後開啟快捷鍵。
- 參閱 [在螢幕截圖上寫筆記](#) 瞭解詳細資訊。

輸入文字

使用智能鍵盤


您可以使用智能鍵盤來輸入和編輯文字。

您可以透過智能鍵盤同時輸入和檢視文字，而不必費心在螢幕和傳統鍵盤之間切換。此功能可讓您在鍵入時輕鬆找出和更正錯誤。



移動遊標

透過智能鍵盤，您可以將遊標移至所需的確切位置。輸入文字時，點住空白鍵，然後向左或向右拖動。

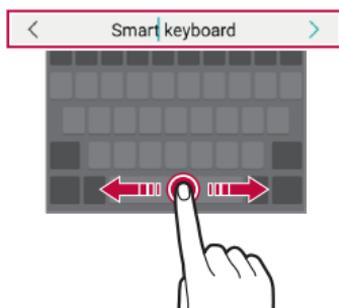


- 此選項僅在 QWERTY 鍵盤中可用。

建議的字詞

智能鍵盤會自動分析您的使用模式，以在您鍵入時建議常用的字詞。您使用裝置的時間越長，建議將越精確。

輸入文本，然後點擊建議的字詞。


- 此時將自動輸入所選的字詞。您無需手動鍵入字詞的每個字元。

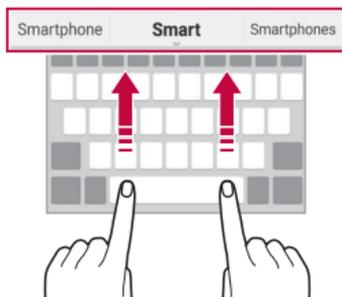

變更 QWERTY 鍵盤佈局

您可以在鍵盤底部的行中添加、刪除或重新排列按鈕。

- 1 點擊 **○ > 設定 > 一般 > 語言及鍵盤 > LG 鍵盤 > 鍵盤高度和版面 > QWERTY 配置**。
您亦可在鍵盤點按 ，然後點按 **鍵盤高度和版面 > QWERTY 鍵盤配置**。
- 2 點選底部行中的一個按鍵，然後將其拖到其他位置。

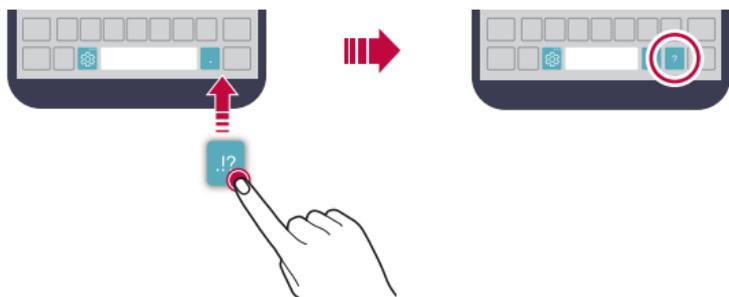




- 此選項僅在 QWERTY、QWERTZ 和 AZERTY 鍵盤中可用。
- 某些語言可能不支援此功能。

自訂鍵盤高度

您可以自訂鍵盤高度，從而最大限度地提高鍵入時手部的舒適度。

- 1 點擊 **○ > 設定 > 一般 > 語言及鍵盤 > LG 鍵盤 > 鍵盤高度和版面 > 鍵盤高度**。
或您可在鍵盤上點按  然後點擊 **鍵盤高度和版面 > 鍵盤高度**。
- 2 調整鍵盤高度。

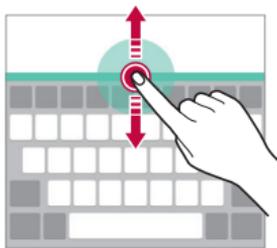

選擇橫向鍵盤模式

您可以從幾個選項中選擇橫向鍵盤模式。

- 1 點擊 **○ > 設定 > 一般 > 語言及鍵盤 > LG 鍵盤 > 鍵盤高度和版面 > 橫向鍵盤類型**。
您亦可在鍵盤上點按 ，然後點擊 **鍵盤高度和版面 > 橫向鍵盤類型**。
- 2 選擇一種鍵盤模式。

拆分鍵盤


螢幕處於橫向模式時，您可以將鍵盤對半拆分，然後將拆分的兩塊放在螢幕兩側。

點擊 **○ > 設定 > 一般 > 語言及鍵盤 > LG 鍵盤 > 鍵盤高度和版面 > 分離鍵盤**。

您亦可在鍵盤上點按 ，然後點擊**鍵盤高度和版面 > 分離鍵盤**。



- 將裝置旋轉至橫向模式以將鍵盤分割到兩側。要合併或分離鍵盤，請在鍵盤上捏合或張開您的手指。

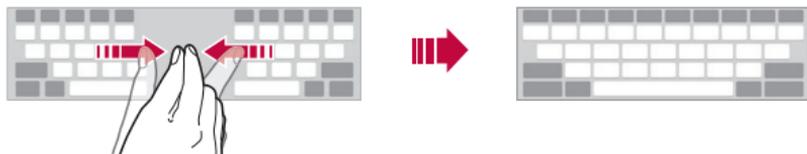

單手操作模式

您可以將鍵盤移至螢幕的一側，以便能夠單手使用鍵盤。

1 點擊 **○ > 設定 > 一般 > 語言及鍵盤 > LG 鍵盤 > 鍵盤高度和版面 > 單手操作**。

您亦可在鍵盤上點按 ，然後點擊**鍵盤高度和版面 > 單手操作**。

2 按下鍵盤旁邊顯示的箭頭，以向所需的方向移動鍵盤。



使用語音輸入文字

在鍵盤上點住 ，然後選擇 。



- 如要充份發揮語音命令辨識的效能，請清楚說話。
- 要使用您的聲音輸入文本，請確保您的裝置已連接到網絡。
- 要選擇語音識別所用語言，請點選語音識別螢幕上的  > **語言**。
- 該功能可能不受支援，或支援語言可能因服務地區而不同。

在鍵盤上加入語言

您可以加入其他鍵盤輸入語言。

- 1 點擊  > **設定** > **一般** > **語言及鍵盤** > **LG 鍵盤** > **選取語言**。
- 2 選擇您所需的語言。

複製與貼上

您可以從應用程式剪切或複製文本，然後粘貼文本到相同的應用程式中。或者，您可以運行其他應用程式，然後將文本粘貼在程式內。

- 1 點住您要複製或剪切的文字週圍。
- 2 拖動  /  以指定要複製或剪切的區域。
- 3 選擇**剪下**或**複製**。
 - 已剪切或複製的文字會自動添加至剪貼簿。
- 4 點按文字輸入視窗，然後選擇**貼上**。



- 如果沒有已複製或已剪切的項目，將不會顯示**貼上**選項。

剪輯工作列

如果您複製或剪切了圖像或文字，該內容會自動儲存到剪貼簿，並可隨時貼到任何空白處。

- 1 在鍵盤上點按着 ，然後選擇 。
或者點按文字輸入視窗，然後選擇**剪輯工作列**。
- 2 從剪貼簿選擇一個項目並貼上。
 - 最多可將 20 個項目儲存到剪貼簿。
 - 點擊  以鎖定儲存的項目，即使超出最大數量時也不會刪除它們。最多可以鎖定十個項目。要刪除鎖定的項目，請首先進行解鎖。
 - 點擊  以刪除儲存在剪貼簿的項目。



• 部分下載的應用程式可能不支援剪輯工作列。

勿干擾

您可以限制通知或將其靜音，以在特定時間段避免打擾。

- 1 點擊  > **設定** > **聲音和通知** > **勿干擾**，然後拖動  即可啟動。
- 2 點擊**響鈴和震動**並選擇您要的模式：
 - **僅優先級**：接收從選擇的應用程式發出的音效或震動通知。即使已打開**僅優先級**，警報仍響起。
 - **全部靜音**：同時停用音效和震動。

內容共享

從另一部裝置播放內容

您可以從電視播放裝置上儲存的照片、視訊或音樂。

- 1 連接電視和您的裝置至同一 Wi-Fi 網絡。
- 2 查看**媒體匣**或**音樂**應用程式時，點按 **⋮ > 在其他裝置上播放**。
- 3 選擇您想要連接的電視機。



- 如果與 Chromecast 同時使用，Google Play 服務應為最新版本。

檢視附近裝置的內容

您可以透過使用**媒體匣**或**音樂**應用程式，查看不同裝置的內容，例如電腦、NAS 或流動裝置。

連接裝置

連接您的裝置和另一支援 DLNA 功能的裝置至同一個無線網絡。



- 確保該裝置和所連接的裝置中的內容共享 (DLNA) 已啟動。

搜尋附近的裝置

您可以選擇應用程式的**附近裝置**選單，以查看同一網絡內的 DLNA 裝置清單。

就如以同一方式在您的裝置上使用附近裝置的內容。

傳送或接收檔案

您可以在您的裝置與其他 LG 裝置或平板電腦或電腦之間共用檔案。

傳送檔案

從**媒體匣**、**檔案管理員**或**音樂**應用程式點按 **：** > **分享** 或 ，然後在共用檔案清單中選擇裝置。

接收檔案

向下拖動狀態列並點按 ，然後點按**檔案共享**。

如果您的裝置不支援檔案共享功能，請點按 **○** > **設定** > **網絡** > **共用與連線** > **檔案共享** > **SmartShare Beam** 。



- 確保您的裝置已連接到與檔案傳輸目標裝置相同的無線網絡。
- 確保該裝置和目標裝置中的檔案共享已啟動。

傳送檔案到電腦

您可以迅速地傳送大型檔案到您的電腦。

- 1 在您的電腦上安裝 LG Bridge。
- 2 在電腦上啟動 LG Bridge，然後使用您的 LG 帳戶登入。
- 3 點按 **○** > **設定** > **網絡** > **共用與連線** > **LG AirDrive**，然後使用您的 LG 帳戶登入。



- 您可以從 LG Mobile 網站 (www.lg.com) 下載 LG Bridge。



03

有用的應用程式

安裝及解除安裝應用程式

安裝應用程式

瀏覽應用程式商店以搜索和下載應用程式。

- 您可以使用 **Play Store** 及應用程式商店，或由服務供應商提供的應用程式商店。



- 有些應用程式商店可能要求您建立帳戶並登入。
- 有些應用程式可能會收取費用。
- 如果您使用流動數據，可能會依據您的服務計劃收取數據費用。

解除安裝應用程式

在裝置上解除安裝您不再使用的應用程式。

透過點住手勢解除安裝

在主螢幕中，點按着要解除安裝的應用程式，然後將其拖到螢幕頂部的**解除安裝**。

您亦可以點按着應用程式，然後點選附有  的應用程式或小工具，以解除安裝。

- 從現在起計算，如果應用程式的卸載時間未超過 24 小時，則您可以對其重新安裝。參閱[已解除安裝應用程式](#)瞭解詳細資訊。

透過使用設定功能表解除安裝

點擊  > **設定** > **一般** > **應用程式**，選擇應用程式，然後點選**解除安裝**。

解除安裝從應用程式商店獲取的應用程式

要解除安裝應用程式，請存取您下載的應用程式商店並解除安裝。



- 有些應用程式不能由使用者解除安裝。

已解除安裝應用程式

您可以在主螢幕上查看未安裝的應用程式。您還可以重新安裝自現在起卸載時間未超過 24 小時的應用程式。

- 1 點擊 > 已解除安裝應用程式。
- 2 啟動預期功能：
 - **重新安裝**：重新安裝選定應用程式。
 - ：永久性地從裝置中移除未安裝應用程式。



- 已卸載的應用程式將在解除安裝 24 小時後自動移除。如果您想重新安裝已解除安裝的應用程式，您必須從應用程式商店中重新下載。
- 該特性僅可在預設主螢幕上啟動。如果您在使用 EasyHome 螢幕或其他啟動欄時卸載了應用程式，則這些程式將立即且永久地從裝置中移除。

手機

語音通話

請使用以下方法撥打電話，例如手動輸入電話號碼，或從通訊錄清單或最近通話清單中選擇電話號碼。

用鍵台撥打電話

- 1 點擊  >  > **撥號**。
- 2 使用您選擇的方法撥打電話：
 - 輸入電話號碼，然後點擊 。
 - 點按着一個快速撥號號碼。
 - 在聯絡人清單中點選聯絡人名稱的初始字母來搜尋聯絡人，然後再點擊 。



- 撥打國際長途電話時，要輸入「+」，請點按着數字 0。
- 如需進一步瞭解如何將電話號碼新增至快速撥號清單，請參閱 [添加聯絡人](#)。

用聯絡人清單撥打電話

- 1 點擊  >  > **通訊錄**。
- 2 在聯絡人清單中點選聯絡人，然後再點擊 。

接聽電話

要接聽電話，請拖動  至來電螢幕的圈子之外。

- 立體聲耳機連線後，您可以使用耳機上的通話/結束按鈕打電話。

要結束通話，只需按下電源/鎖定鍵，點擊  > **設定** > **網絡** > **通話** > **接聽和結束通話**，然後開啟 **使用電源鍵結束通話**。

拒接電話

如要拒絕來電，請在來電螢幕上滑動 。

- 如要傳送拒絕訊息，請在螢幕上拖動拒絕訊息選項 。
- 如要加入或編輯拒絕訊息，點擊 **○ > 設定 > 網絡 > 通話 > 阻止通話和拒絕訊息 > 用訊息拒絕**。
- 收到來電時，按下音量提升 (+)、音量降低 (-) 或電源/鎖定鍵，以停止鈴聲聲音或震動，或保留來電。

檢視未接來電

如有未接來電，則螢幕頂部的狀態列顯示 。

要檢視未接來電的詳細資料，請向下拖曳狀態列。或者，點擊 **○ >  > 通話記錄**。

通話期間可使用的功能

在通話期間，您可以點選螢幕按鈕存取各種功能：

- **通訊錄**：在通話時檢視聯絡人清單。
- **結束**：結束通話。
- **撥號鍵盤**：顯示或隱藏撥號鍵盤。
- **揚聲器**：開啟免提聽筒功能。
- **靜音**：靜音使對方不能聽到您的聲音。
- **藍牙**：將通話轉駁至已配對及連接的藍牙裝置。
- **⋮**：存取其他通話選項。



- 可用設定項可能會有所不同，具體視區域或服務提供商而定。

進行三方通話

在通話時您可以給另一個聯絡人撥打電話。

- 1 在通話時，點擊  > **新增通話**。
- 2 輸入電話號碼，然後點擊 。
 - 兩個連接中的通話會在螢幕同時顯示，並且第一個來電處於保留狀態。
- 3 要啟動電話會議，請點選**合併通話**。



- 每次通話都可能收取費用。請諮詢您的服務提供商瞭解更多資訊。

檢視通話記錄

要檢視最近通話記錄，請點擊  >  > **通話記錄**。然後，您可以使用以下的功能：

要檢視詳細通話記錄，請點選一個聯絡人。要給選擇的聯絡人撥打電話，請點擊 。

- 要刪除通話記錄，請點擊  > **刪除全部**。



- 顯示的通話持續時間可能不同於通話費用。請諮詢您的服務提供商瞭解更多資訊。

設定通話選項

您可以配置各種各樣的選項。

- 1 點擊  >  > **撥號**或**通話記錄**。
- 2 點擊  > **通話設定**，然後設置選項以應用您的喜好選項。

訊息

傳送訊息

您可以使用訊息應用程式，建立並發送訊息給聯絡人。



- 傳送訊息至國外可能需要支付額外的費用。請諮詢您的服務提供商瞭解更多資訊。

- 1 點擊  > 。
- 2 點擊 。
- 3 指定接收者並建立訊息。
 - 要附加檔案，請點選 。
 - 要存取可選功能表項目，請點選 。
- 4 點選  來傳送訊息。

閱讀訊息

您可以查看按聯絡人排序的交換資訊。

- 1 點擊  > 。
- 2 從訊息清單中選擇聯絡人。

設定訊息選項

您可以根據您的喜好更新訊息設定。

- 1 點擊  > 。
- 2 點按訊息列表的  > **設定**。

相機

啟動相機


您可以拍攝照片或錄製影片，以留住值得紀念的瞬間。
點擊 。



- 拍攝照片或錄製影片前，使用柔軟布擦拭相機鏡頭。
- 請勿以手指或其他外來物質沾污相機鏡頭。
- 如果剩餘電力低於 5%，使用相機前要給電池充電。
- 本使用指南包含的影像可能不同於裝置實際的顯示。
- 可以從媒體匣檢視或編輯相片和影片。
參閱媒體匣概覽以了解詳細資訊。

自動模式

您可以透過選擇不同的拍攝模式和選項來拍照或錄製視訊。

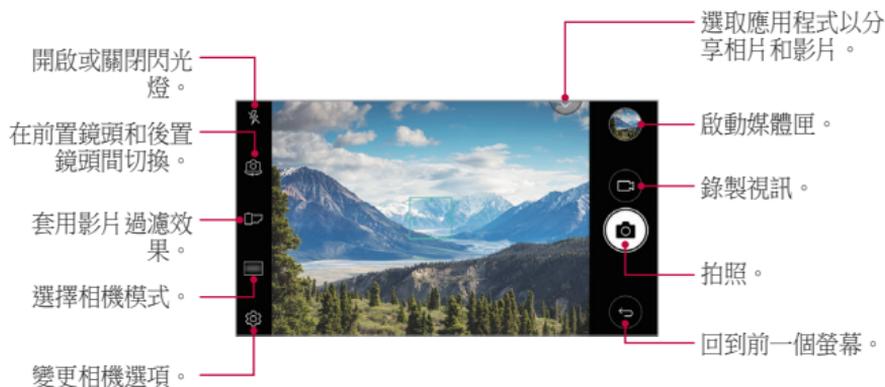

拍照

- 1 點按相機的對焦主體。
- 2 點擊  來拍照。
 - 您亦可以按下音量降低 (-) 或音量提升 (+) 鍵以拍攝照片。



- 螢幕關閉或鎖定时，通過按音量減小 (-) 鍵兩次啟動相機。要啟動這項功能，點擊  > **設定** > **一般** > **快捷鍵**，然後啟動 **打開 Capture+/相機**。

錄製視訊

- 1 點按相機的對焦主體。
- 2 點擊 。
 - 要在錄製視頻的同時拍攝照片，請點擊 。
 - 要暫停視頻錄製，請點擊 。要恢復視頻錄製，請點擊 。
- 3 點擊  以結束視頻錄製。

自訂相機選項

您可以根據您的喜好自訂各種相機選項。
在螢幕上點擊 。



- 可用選項視乎所選鏡頭 (前置或後置) 和相機模式而定。

相片大小	選取長寬比和大小的數值，以拍攝照片。
視訊解析度	選取解像度，以錄製影片。
HDR	獲得色彩飽滿的照片，即使在背光拍攝時也能獲得補償效果。這些功能由裝置相機所配備的高動態範圍（HDR）技術提供。
計時器	設定計時器在指定時段後自動拍照。
Cheese 快門	使用語音命令來拍照。
標籤位置	同時儲存影像和 GPS 位置資料。
縮圖	顯示指導網格，以便您基於水準和垂直輔助線拍攝照片或錄製影片。
儲存裝置	選取內置儲存空間和 SD 卡。 (適用於已插入記憶卡。)
簡單視圖	隱藏相機螢幕上的所有功能表。

前置相機的其他選項

自拍	<p>自訂自拍設定。</p> <ul style="list-style-type: none"> 手勢拍攝：使用手勢拍照功能來拍照。 自動拍攝：相機偵測到面孔時會拍照。
手勢檢視	將行動電話靠近拍照之後查看您的自拍
另存為翻轉	自拍後另存為翻轉照片。

全景

透過朝一個方向移動相機拍攝並將寬廣視野的連續拍攝拼接起來，可以製作一張全景照片。

- 1 在自動模式螢幕中，點擊**模式** >  **超廣角**。
- 2 點擊 ，然後緩慢地向單一方向移動相機。
 - 按照指南的箭頭方向移動裝置。
- 3 點擊  以結束拍攝。



相機應用程式內的其他實用功能

連續高速攝影

您可以用連續拍攝的照片來建立動畫。

在相機畫面上，按住 。

- 按下  的同時快速連續拍攝照片。



- 最多可連續拍攝 30 張照片。

簡單視圖

點擊  > **簡單視圖**，以隱藏相機畫面上的選單。點選  以顯示選單。

自動曝光/自動對焦鎖定

您可以按住相機畫面的螢幕，以調整目前的曝光水平及對焦位置。如要關閉功能，點選螢幕的空白處。



放大或縮小

您可以在拍攝照片或錄製視頻時將相機螢幕放大或縮小。

- 如要放大或縮小，可在相機螢幕中張開或捏合兩隻手指，然後在右方 +/- 滑桿顯示來調整大小。




- 使用前置相機和自拍模式時，縮放功能無法使用。

在相機之間切換

您可以按照拍攝環境切換前置相機或後置相機。

在相機螢幕中，點選 ，或隨意拖動螢幕，以切換前置相機或後置相機。

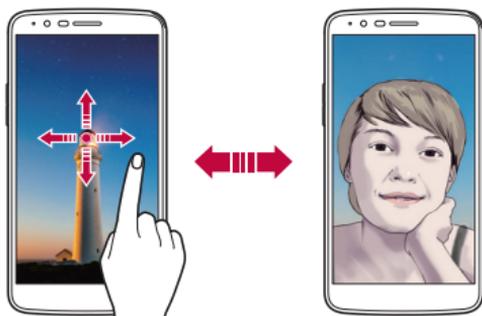

- 使用前置相機自拍。參閱 [自拍](#) 瞭解詳細資訊。

自拍

您可以使用前置相機來檢視您在螢幕上的臉部並自拍。


手勢拍攝

您可以使用手勢自拍。

在前端相機顯示您的手掌，然後握緊您的拳頭。

您亦可以向著前置相機握緊拳頭，然後放開。

- 照片會在三秒內拍攝。

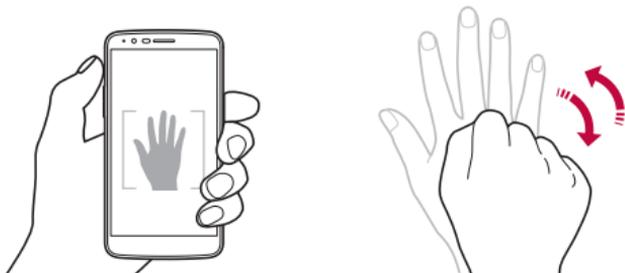

- 如要使用此功能，切換至前置相機模式，然後點擊 **設定 > 自拍 > 手勢拍攝**。
- 請確認您的手掌和拳頭是在參考框線內，使相機能偵測到它們。
- 使用部分相機功能時，此功能可能無法使用。

自動拍攝

您可以使用臉部偵測特性使簡單而方便地進行自拍。您可以設置裝置讓前攝錄機在您看著螢幕時會偵測您的臉部並自動拍下自拍照片。

- 前置相機偵測到您的臉孔後，螢幕會顯示白色指示框。若拍攝對象在指示框內停止移動，指示框便會轉為藍色，相機會自動拍攝照片。




- 點擊 **設定 > 自拍 > 自動拍攝**，以啟用自動拍攝功能。

間隔攝影

您可以在特定間距內自拍。


使用前置攝錄機時，點住 。或者在前端相機顯示您的手掌，然後快速握緊您的拳頭兩次。

- 計時器延遲三秒後，相機會在約兩秒間距內拍攝四張照片。

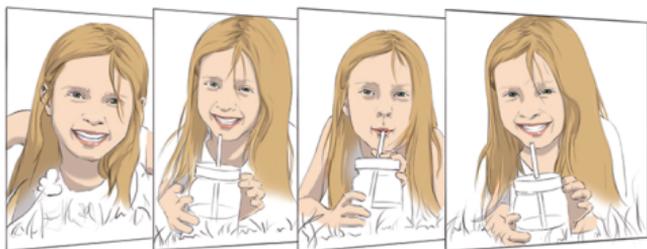

手勢視圖

以前置相機自拍後，只要把螢幕放近面前即可立刻預覽自拍照片。

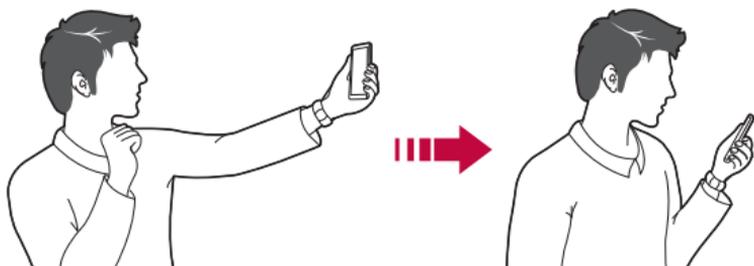

- 點擊  > **手勢檢視** 以啟用手勢視圖功能。
- 每次拍攝照片時僅會顯示一個預覽。
- 如果您在預覽螢幕中旋轉裝置，螢幕將切換到相機模式。

另存為翻轉

使用前置相機拍攝照片前，點擊  > **另存為翻轉**。影像會水平翻轉。



- 使用前置相機時，您可以透過相機選項更改自拍方式。參閱 [自訂相機選項](#) 了解詳細資訊。

媒體匣

媒體匣概覽

您可以檢視並管理儲存在您裝置上的照片及視訊。

- 1 點擊  > 。
 - 儲存的照片及影片將按資料夾顯示。
- 2 點選資料夾並選擇檔案。
 - 在全螢幕模式下檢視選擇的檔案。
 - 檢視照片時，向左或向右滑動以檢視上一張或下一張照片。
 - 檢視影片時，向左或向右滑動以倒轉或快進影片。



- 依據安裝的軟體，有些檔案格式可能不受支援。
- 有些檔案可能因為編碼而無法開啟。
- 超過大小限制的檔案可能會導致錯誤。

檢視照片




- 如要顯示功能表項目，輕輕點按螢幕。如要隱藏功能表項目，再次點按螢幕。

編輯照片

- 1 拍攝照片時，請點擊 。
- 2 使用各種效果和工具來編輯照片。
- 3 點選**儲存**來儲存變更。
 - 變更會覆蓋初始檔案。
- 4 要儲存編輯的照片為另一檔案，點擊 **⋮** > **儲存複本**。

播放視訊

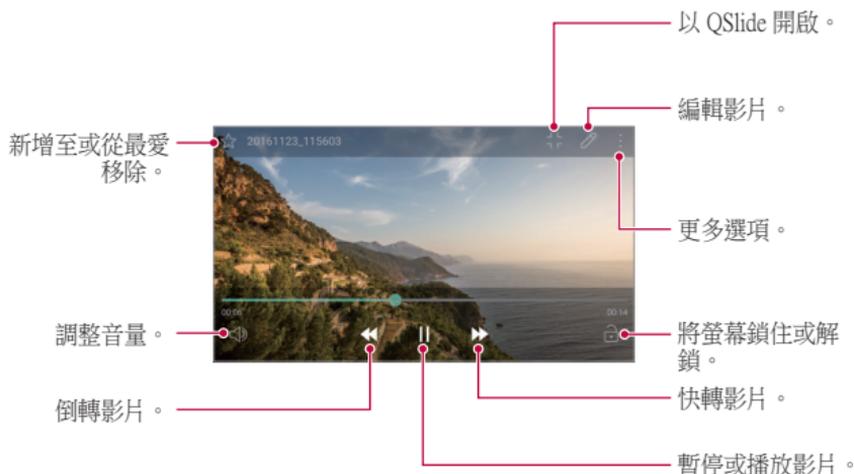

- 要調整音量，請將視訊螢幕靠右側向上或向下拖曳。
- 要調節螢幕亮度，請在螢幕靠左側向上或向下拖動以調節。

刪除檔案

您可以使用以下選項來刪除檔案：

- 在檔案清單內點住一個檔案，然後點選**刪除**。
- 從檔案清單點選 ，然後刪除所選的檔案。
- 刪除的檔案會自動移至**垃圾桶**，並可於 7 日內復原至媒體匣。
- 在媒體匣中，點擊  > **垃圾桶**。點擊  並選**清空**即可以完全刪除檔案。在這個情況下，檔案將無法復原。

共用檔案


您可以使用以下選項來共用檔案：

- 在檢視相片或影片時，點擊  以選擇想用的方法分享檔案。
- 從檔列表點擊  以選擇一個或多個檔案，然後使用所需的方式共用檔案。

音樂

您可以播放和管理歌曲或音樂專輯。

- 1 點擊  > **LG** > **音樂**。
- 2 選擇一個類別。
- 3 選擇一個音樂檔案。

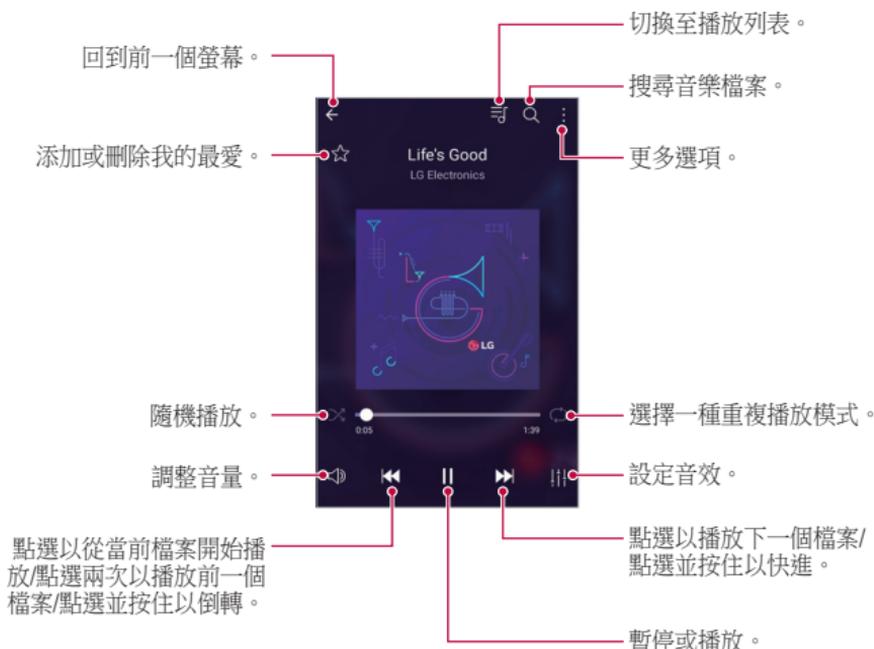



- 依據安裝的軟體，有些檔案格式可能不受支援。
- 超過大小限制的檔案可能會導致錯誤。
- 音樂檔案可能會受國際版權擁有人或版權法律的保護。複製音樂檔案之前，您可能需要取得法律權限。要下載或複製音樂檔案，請首先查看相關國家/地區的版權法律。

電子郵件

電子郵件概覽

您可以在您的裝置上註冊您的電子郵件帳戶，然後您可以從您的裝置查看及傳送電子郵件。



- 如果您使用流動數據，可能會依據您的服務計劃收取數據費用。請諮詢您的服務提供商瞭解更多資訊。

電子郵件帳戶註冊

您第一次用電子郵件應用程式時，請註冊您的電子郵件帳戶。

- 1 點擊 **○ > 電子郵件**。
- 2 選擇一個電子郵件服務供應商。
- 3 輸入您的電子郵件地址及密碼，然後點選**下一頁**來註冊您的帳戶。
 - 要手動註冊電子郵件帳戶，點按**手動設定**。

管理電子郵件帳戶

要檢視或編輯您的電子郵件帳戶設定，點擊  > **設定**。

- 要添加一個帳戶，請點選**新增帳號**。
- 要刪除一個帳戶，點擊  > **移除帳號**。

開啟另一個電子郵件帳戶

如果已註冊多個電子郵件帳戶而您想檢視另一個帳戶，點擊  並從帳戶清單選擇另一個帳戶。

查看電子郵件

- 1 點擊 ，然後選擇一個郵箱。
- 2 從電子郵件清單選擇一封電子郵件。
 - 電子郵件訊息顯示。

傳送電子郵件

- 1 點擊 。
- 2 輸入收件者的電子郵件地址。
- 3 輸入主題和訊息。
 - 要附加檔案，點擊 。
 - 要存取可選功能表項目，點擊 。
- 4 點擊  來傳送電子郵件。

日曆

日曆概覽

您可以使用日曆來管理事件和任務。

添加事件

- 1 點擊  > 日曆。
- 2 選擇一個日期然後點選 。
- 3 輸入事件詳細資料並點選**儲存**。
 - 如果您從日曆點選日期而該日期包含事件，將會出現彈出視窗並顯示事件清單。在彈出視窗點選一個事件來檢視其詳細資料。

同步事件

點擊  : > **將同步的日曆**，然後選取要同步的日曆。



- 當從裝置保存您的事件至您的 Google 帳戶時，事件也將自動與 Google 日曆同步。隨後，您可以將其他裝置與 Google 日曆同步以便這些裝置擁有您的裝置一樣的事件，從而讓您可以在其他裝置上管理這些事件。

事件匣

您可以使用事件匣來建立事件。

點擊  來開啟事件匣然後拖動內容至日曆內的一個日期。

- ：管理影像、文字、記事 and 暫時儲存的事件。您亦可以共用其他應用程式的文字、影像和備忘錄，並將其儲存至事件簿。如果您在建立事件時點選**事件簿**，該事件會暫時儲存至事件簿。
- ：管理沒有截止日期的任務，如事件。

計算機

您可以使用兩種類型的計算器：普通計算器及科學計算器。

- 1 點擊  > 工具 > 計算機。
- 2 使用鍵台來進行計算。
 - 如要使用科學計算器，將螢幕右方的綠色滑桿拖動至左方。
 - 如要重新啟動計算機，點按着 DEL 按鈕。

時鐘

鬧鐘

您可以設定在指定時間啟動鬧鐘。

- 1 點擊  > 時鐘 > 鬧鐘。
- 2 點擊  來添加一個新的鬧鐘。
- 3 設定鬧鐘選項，然後點選**儲存**。



- 如果您擇選先前設定的鬧鐘，您可以編輯該鬧鐘。
- 要刪除鬧鐘，請在螢幕的頂部點選 。或者點按着鬧鐘。

世界時鐘

您可以查看世界各地城市的當地時間。

- 1 點擊  > 時鐘 > 世界時鐘。
- 2 點擊  並添加一個城市。

計時器

您可以設定計時器在指定時段後會有鬧鐘聲提示。

- 1 點擊 **○** > **時鐘** > **計時器**。
- 2 設定時間，然後點選**開始**。
 - 如要暫停計時器，點選**暫停**。要繼續計時器，請點選**恢復**。
 - 要重新設定計時器設定，請點選**重新設定**。
- 3 點按**停止**以停止計時器鬧鐘。

秒錶

您可以使用秒錶來記錄單圈時間。

- 1 點擊 **○** > **時鐘** > **秒錶**。
- 2 點選**開始**來啟動秒錶。
 - 要記錄單圈時間，請點選**單圈計時**。
- 3 點選**暫停**，以暫停秒錶。
 - 要繼續秒錶，請點選**恢復**。
 - 如要清除所有記錄，並重新啟動秒錶，點選**重新設定**。

下載

您可以查看、刪除或共用那些是通過互聯網或應用程式下載的檔案。

點擊 **○** > **工具** > **下載**。

檔案管理員

您可查看和管理儲存在裝置上的 **LG AirDrive** 檔案。

- 1 點擊 **○** > **工具** > **檔案管理員**。
- 2 點擊 **☰**，然後選擇想要儲存或檢視的位置。

語音備忘錄

您可以錄製及儲存您或其他人在重要事件期間的語音。可以播放或共用錄製的語音檔案。

- 1 點擊  > 工具 > 語音備忘錄。
- 2 點擊 。
 - 要暫停錄音，點擊 。
 - 要儲存錄音的詳細地點資料，點按位置。
 - 要新增事件，點按事件然後添加事件至所需的日期。
- 3 點擊  以結束錄音。
 - 檔案將會自動儲存，並顯示預聽螢幕。
- 4 點擊  以播放錄製的語音。
 - 如您點擊 ，系統會顯示錄製的語音檔案。您可以從清單播放錄製的語音檔案。

FM 收音機

您可以收聽 FM 收音機廣播。

點擊  > 工具 > FM 收音機。



- 要使用這個應用程式，必須先在裝置連接耳機。耳機會用作天線功能。
- 此選項可能不受支援，具體視區域而定。

通訊錄

聯絡人概覽

您可以儲存及管理聯絡人。

點擊 ○ > LG > 通訊錄。

添加聯絡人

添加新的聯絡人

- 1 在聯絡人清單螢幕點擊 **+**。
- 2 輸入聯絡人的詳細資料並點按**儲存**。

匯入聯絡人

您可以從其他存放裝置導入聯絡人。

- 1 在聯絡人清單螢幕，點擊 **:** > **管理通訊錄** > **匯入**。
- 2 選擇要匯入聯絡人的來源和目標位置、然後點按**確定**。
- 3 選擇所需聯絡人，然後點按**匯入**。

添加聯絡人至快速撥號清單

- 1 在聯絡人清單螢幕點擊 **:** > **快速撥號**。
- 2 從快速撥號的號碼，點按**更新通訊錄**。
- 3 選擇聯絡人。

搜尋聯絡人

您可以使用下列選項來搜尋聯絡人：

- 在聯絡人清單螢幕，於搜尋方塊內輸入聯絡人的名稱。
- 向上或向下滾動聯絡人列表。
- 在聯絡人清單螢幕的索引中，點選聯絡人的首字母。

聯絡人清單

編輯聯絡人

- 1 在聯絡人清單螢幕中，選擇一個聯絡人。
- 2 在聯絡人詳細資料螢幕，點擊  並編輯詳細資料。
- 3 點按**儲存**以儲存變更。

刪除聯絡人

您可使用以下選項以刪除聯絡人：

- 在通訊錄清單螢幕中，點按着您想刪除的通訊錄，然後點按**刪除通訊錄**。
- 在通訊錄清單螢幕中點擊 **：** > **刪除**。

添加我的最愛

您可以註冊常用聯絡人為我的最愛。

- 1 在聯絡人清單螢幕中，選擇一個聯絡人。
- 2 在聯絡人詳細資料螢幕點擊 ☆。

建立群組

- 1 在聯絡人清單螢幕點按**群組** > **：** > **新群組**。
- 2 輸入一個群組名稱。
- 3 點按**新增會員**，選擇聯絡人，然後點按**新增**。
- 4 點按**儲存**以儲存新群組。

工作

您可以把任務註冊至您的裝置來輕鬆管理排程。

- 1 點擊 **○** > **LG** > **工作**。
- 2 點擊 **+** 來添加一項任務。
- 3 輸入任務詳細資料然後點選**儲存**。

LG Backup

您可以備份、還原和移動裝置上保存的資料。

- 1 點擊 **○** > **管理** > **LG Backup**。
您亦可點擊 **○** > **設定** > **一般** > **備份與重設** > **LG Backup**。
- 2 按照螢幕上的說明選擇將資料備份到預設資料夾內或是將資料複製到其他裝置中。



- 重設裝置可能會刪除儲存在內部儲存空間的備份檔案。要盡量減少資料遺失，請將重要備份檔案從 LG 內部存放區的備份資料夾複製到電腦或外部儲存裝置。



- Google 帳戶中的資料不進行備份。當您同步 Google 帳戶時，Google 應用程式、Google 聯絡人、Google 日曆、Google 備忘錄應用程式資料以及從 Play Store 下載的應用程式將自動儲存在 Google 雲端硬碟應用中。
- 備份檔案的副檔名是 *.lbf，儲存在記憶卡或內部存放區的 LG Backup 資料夾下。
- 備份或還原資料之前，將電池充飽電以避免在備份或還原過程中意外斷電。

RemoteCall Service

可以對您的裝置進行遠端診斷以解決問題。首先，致電 LG 客戶服務中心，如下所示：



- 要使用這功能，首先您必須同意該功能的使用。
- 如果您使用流動數據，可能會依據您的服務計劃收取數據費用。

- 1 點擊 **○ > 管理 > RemoteCall Service**。
- 2 將通話轉接至 LG 客戶服務中心。
- 3 電話接通後，遵循服務人員的指示輸入六位數的存取號碼。
 - 您的裝置已從遠端連線，遠端支援服務開始。

Chrome

登入 Chrome 瀏覽器，並從電腦匯入已開啟的標籤頁、書籤和地址列的資料到您的裝置。

Google 應用程式

您可以透過設定一個 Google 帳戶來使用 Google 應用程式。當您第一次使用 Google 應用程式時，會自動顯示 Google 帳戶註冊視窗。如果您沒有 Google 帳戶，請從您的裝置建立一個帳戶。有關如何使用應用程式的詳細資訊，請參閱該應用程式的說明。



- 有些應用程式可能無法正常運作，具體視地區或服務供應商而定。

文件

建立檔案或編輯在線建立或來自其他裝置的檔案。與其他使用者共用及編輯檔案。

雲端硬碟

從您的裝置上載、儲存、開啟、共用和組織檔案。應用程式可存取的檔案可以從任何地方進行存取，包括在線和離線環境。

Duo

與家人、朋友及任何使用該應用程式的人士進行視像通話。

Gmail

在您的裝置上註冊您的 Google 電子郵件帳戶以查看及傳送電子郵件。

Google

輸入或說出關鍵字，透過 Google 搜尋網頁、圖片、新聞和其他內容。

地圖

在地圖上尋找您的所在位置或某個地方的位置。檢視地理資料。

相簿

檢視或分享儲存在您的裝置的照片或相簿。

播放電影

使用您的 Google 帳戶來租看或購買電影。購買內容及隨處播放。

Play 音樂

從 **Play商店** 購買音樂檔案。播放儲存在您的裝置上的音樂檔案。

試算表

建立試算表或編輯線上建立或來自其他裝置的試算表。與其他用戶共用及編輯試算表。

簡報

建立試算表或編輯線上建立或來自其他裝置的試算表。與其他用戶共用及編輯試算表。

YouTube

搜尋及播放視訊。上傳視訊至 YouTube，與世界各地的人分享。



04

電話設定

設定

您可以根據偏好自訂裝置設置。

點擊  > 設定。



- 點擊  並在搜尋方塊輸入關鍵字來存取設定項目。
- 點擊 ：以變更檢視模式。本用戶指南假設您在使用**選項卡視圖**。

網絡

雙智能咭

您可以進行雙智能咭設定。

- 1 在設定功能表畫面，點選**網絡 > 雙智能咭**。
- 2 自訂以下功能：
 - **SIM 卡 1**：變更 SIM 卡 1 的名稱和圖示。
 - **SIM 卡 2**：變更 SIM 卡 2 的名稱和圖示。
 - **SIM 卡顏色主題**：變更 SIM 卡的顏色主題。
 - **成本節省模式**：啟動或停用成本節省模式。在成本節省模式下，若您指定某張 SIM 卡與聯絡人通話，則即使另一張 SIM 卡為啟動狀態 (例如其正使用流動數據)，操作也僅通過該指定 SIM 卡完成。
 - **流動數據**：選擇您想使用流動數據服務的 SIM 卡。該功能亦可關閉。
 - **數據漫遊**：當您在本地網絡範圍以外漫遊時，可選擇此選項以使裝置使用流動數據。

Wi-Fi

您可以透過 Wi-Fi 網絡連接到附近的裝置。

連接 Wi-Fi 網絡

- 1 在設定功能表畫面，點選**網絡** > **Wi-Fi**。
- 2 拖動  以啟動該功能。
 - 會自動顯示可用的 Wifi 網絡。
- 3 選擇一個網絡。
 - 您可能需要輸入網絡的密碼。
 - 對以前存取過的 WiFi 網絡，裝置會跳過這一程序。如果您不想自動連接到某一 Wifi 網絡，點住該網絡然後點選**忽略網絡**。

WiFi 網絡設定

在設定功能表畫面，點選**網絡** > **Wi-Fi**。

- **切換至行動數據**：如果移動數據連接功能已啟動，但裝置卻無法通過 Wi-Fi 連接至互聯網，則裝置將自動通過移動資料連接至互聯網。
- ：自訂 Wi-Fi 網絡設定。

Wi-Fi Direct

您可以將您的裝置連接到其他支援 Wi-Fi Direct 的裝置，與其共用資料。您不需要存取點。您可以透過 Wi-Fi Direct 連接到兩個以上的裝置。

- 1 在設定功能表畫面，點選**網絡** > **Wi-Fi** >  > **進階的 Wi-Fi** > **Wi-Fi Direct**。
 - 會自動顯示附近支援 Wi-Fi Direct 的裝置。
- 2 選擇一個裝置。
 - 該裝置接受連接請求時，連線便發生。



- 使用 Wi-Fi Direct 時，電池可能耗盡較快。

藍牙

您可以將您的裝置連接到附近支援藍牙的裝置，以便與其交換資料。將您的裝置連接到藍牙耳機和鍵盤。這可讓您更容易地控制裝置。

與另一裝置配對

- 1 在設定功能表畫面，點選**網絡 > 藍牙**。
- 2 拖動 以啟動該功能。
 - 可用的裝置會自動顯示。
 - 要重新整理裝置清單，請點選**搜尋**。



- 設定為可見的裝置才會顯示在清單上。

- 3 從清單選擇一個裝置。
- 4 遵循螢幕上的說明來執行驗證。



- 對以前存取過的裝置，這一步驟會被跳過。

透過藍牙傳送資料

- 1 擇選一個檔案。
 - 您可以傳送多媒體檔案或聯絡人。
- 2 點擊 > **藍牙**。
- 3 選擇此檔案的目標裝置。
 - 只要目標裝置接受，檔案會即時傳送。



- 檔案共用過程可能會因檔案而異。

流動數據

您可以開啟或關閉流動數據。您亦可以管理流動資料的使用量。

開啟流動數據

- 1 在設定功能表畫面，點選**網絡** > **流動數據**。
- 2 拖動 以啟動該功能。

自訂流動數據設定

- 1 在設定功能表畫面，點選**網絡** > **流動數據**。
- 2 自訂以下設置：
 - **流動數據**：設置以使用流動網絡的數據連接。
 - **限制流動數據使用量**：設定流動數據的上限，並在達到上限時封鎖流動數據。
 - **⋮**：其他設定。

通話

您可以自訂通話設定，例如語音電話及國際長途電話選項。



- 某些功能可能不受支援，具體視地區或服務提供商而定。

- 1 在設定功能表畫面，點選**網絡** > **通話**。
- 2 自訂設置。

共用與連線

NFC

您可以將裝置作為交通卡或信用卡使用。您亦可以與其他裝置共用資料。

- 1 在設定功能表畫面，點選**網絡 > 共用與連線 > NFC**。
- 2 拖動  以啟動該功能。
 - 將您的裝置使靠近其他支援 NFC 的裝置以允許資料共用。



• NFC 天線可能位於不同的位置，具體視裝置類型而定。參閱**零件概覽**，以進一步瞭解 NFC 天線區域。

Android Beam

您可以通過讓裝置背部使靠近其他裝置來共用檔案。您還可以共用包括音樂、視頻或聯絡人在內的檔案，打開其他裝置的網頁或啟動其他裝置的應用程式。

- 1 在設定功能表畫面，點選**網絡 > 共用與連線 > Android Beam**。
- 2 讓裝置背部靠近另一部裝置。



• NFC 天線可能位於不同的位置，具體視裝置類型而定。

檔案共享

您可以在您的裝置和其他裝置或平板電腦之間傳送及接收檔案。

- 1 在設定功能表畫面中，點按**網絡 > 共用與連線 > 檔案共享**。
- 2 自訂以下設定：
 - **LG Stylus 3**：更改裝置的名稱。

- **儲存至**：設定目標位置以儲存從其他裝置發送的檔案。
- **檔案共享**：允許接收從其他裝置發送的檔案。
- **SmartShare Beam**：透過 SmartShare Beam 與其他裝置共用檔案。
- **說明**：您可查閱共用檔案的說明。

媒體伺服器

您可以與附近支援 DLNA 的裝置共用您裝置上的媒體內容。

- 1 在設定功能表畫面中，點按**網絡 > 共用與連線 > 媒體伺服器**。
- 2 自訂以下設定：
 - **內容共享**：與附近的裝置共用您裝置上的內容。
 - **LG Stylus 3**：設定您裝置的名稱。
 - **我的共享內容**：選擇與其他裝置共用的媒體內容種類。
 - **已允許的裝置**：檢視允許存取您裝置上之內容的裝置清單。
 - **非允許裝置**：檢視未獲允許存取您裝置上之內容的裝置清單。

LG AirDrive

您可以在電腦上使用您的 LG 帳戶來管理儲存在裝置中的檔案。您不需要有 USB 連線。

- 1 於設定螢幕點按**網絡 > 共用與連線 > LG AirDrive**。
- 2 在電腦上使用一個單一 LG 帳戶登入 LG Bridge，並於裝置上開啟 **LG AirDrive**。
 - LG Bridge 軟體可以從 www.lg.com 下載。
- 3 從電腦管理裝置上的檔案。

列印

您可以將您的裝置連接到無線印表機，並列印儲存在裝置上的照片及文件。

- 1 在設定功能表畫面中，點按**網絡** > **共用與連線** > **列印**。



• 如果清單上沒有想使用的印表機，請透過應用程式商店下載印表機驅動程式。

- 2 拖動 以啟動功能。
- 3 從印表機清單螢幕選擇一部印表機。
 - 要添加印表機，點擊 **：** > **新增印表機**。
 - 從印表機清單畫面點擊 **：** > **設定**。
- 4 選擇檔案，然後點擊 **：** > **列印**。
 - 文件列印。



• 如果您沒有 Google 帳戶，點按**新增帳號**以建立一個帳戶。

網絡共享

USB 網絡連線

您可以透過 USB 把裝置連接到另一裝置，並共用流動數據。

- 1 透過 USB 數據線連接您的裝置與其他裝置。
- 2 在設定功能表畫面中，點按**網絡** > **網絡共享** > **USB 網絡連線**，然後拖動 以啟動功能。



- 此選項使用流動數據，並可能會根據您的服務計劃收取數據使用。請諮詢您的服務提供商瞭解更多資訊。
- 連接電腦時，請前往 www.lg.com 下載 USB 驅動程式並安裝到電腦。
- 開啟 USB 共享網絡功能時，您不能發送或接收檔案。要傳送或接收檔案，請關閉 USB 共享網絡。
- 支援互聯網共用的操作系統是 Windows XP 或更高版本，或 Linux。

Wi-Fi 熱點

您可以將裝置設為無線路由器，這樣其他裝置便可通過您裝置的流動數據連接到互聯網。

- 1 在設定功能表畫面中，點按**網絡 > 網絡共享 > Wi-Fi 熱點**，然後拖動 以啟動功能。
- 2 點按**設定 Wi-Fi 熱點**，然後輸入 Wi-Fi 名稱 (SSID) 及密碼。
- 3 開啟其他裝置的 Wi-Fi，然後在 Wi-Fi 清單中選擇裝置網絡的名稱。
- 4 輸入網絡密碼。



- 此選項使用流動數據，並可能會根據您的服務計劃收取數據使用費用。請諮詢您的服務提供商瞭解更多資訊。
- 要了解更多資訊，請瀏覽以下網站：<http://www.android.com/tether#wifi>

藍牙數據連線

通過藍牙連接的裝置，可透過您裝置的流動數據連接到互聯網。

- 1 在設定功能表畫面中，點按**網絡** > **網絡共享** > **藍牙數據連線**，然後拖動  以啟動功能。
- 2 開啟兩台裝置的藍牙功能，並進行配對。



- 此選項使用流動數據，並可能會根據您的服務計劃收取數據使用。請諮詢您的服務提供商瞭解更多資訊。
- 要了解更多資訊，請瀏覽以下網站：http://www.android.com/tether#Bluetooth_tethering

說明

您可以通過查看幫助來使用網絡共用或熱點。

在設定功能表畫面中，點按**網絡** > **網絡共享** > **說明**。

更多

飛航模式

您可以關閉電話及流動數據功能。此模式開啟時，遊戲和音樂播放等不涉及資料的功能仍然可用。

- 1 在設定功能表畫面中，點按**網絡** > **更多** > **飛航模式**。
- 2 在確認螢幕點按**開啟**。

流動網絡

您可以自訂流動數據設定。

- 1 在設定功能表畫面中，點按**網絡** > **更多** > **流動網絡**。
- 2 自訂以下設定：
 - **網絡模式**：選擇網絡類型。
 - **存取點名稱**：檢視或變更使用流動數據服務的存取點。要變更存取點，請從存取點清單選擇一個存取點。
 - **電訊網絡商**：搜尋網絡運營商並自動連接網絡。

VPN

您可以連接到一個安全的虛擬網絡，例如內部網絡。您亦可以管理連線的虛擬私人網絡。

添加 VPN

- 1 在設定功能表畫面中，點按**網絡** > **更多** > **VPN**。



- 請注意，如果螢幕鎖定已解除，則保存在裝置上的有 VPN 資訊都將被清除。

- 2 點按**新增 VPN**。



- 此功能僅在已啟用螢幕鎖定的情況下可供使用。如果螢幕鎖定未啟用，將顯示通知螢幕。點選通知螢幕上的**設定**以啟用螢幕鎖定。參閱[配置螢幕鎖定設置](#)瞭解詳細資訊。

- 3 輸入 VPN 詳細資料並點按**儲存**。

設置 VPN 設定

- 1 點按 **VPN** 列表內的其中一個 VPN。
- 2 輸入 VPN 使用者帳戶詳情，然後點按**連接**。
 - 要儲存帳戶的詳細資料，選擇**儲存帳戶資訊**的核取方塊。

聲音和通知

您可以自訂聲音、震動和通知設定。

在設定功能表畫面中，點擊**聲音和通知**，然後自訂以下設置：

- **聲音設定檔**：將音效模式變更為**聲音**、**震動**或**靜音**。
- **音量**：調節不同類別項目的音量。
- **智能咭 1 鈴聲 / 智能咭 2 鈴聲**：選擇來電的鈴聲。添加或刪除鈴聲。
- **個人來電鈴聲**：創建特定聯絡人來電的鈴聲。
- **聲音與震動**：將裝置設定為同時震動及播放鈴聲。
- **智能咭 1 震動類型 / 智能咭 2 震動類型**：您可以選擇震動類型。
- **勿干擾**：設定接收訊息的時間、範圍及程式類型。只在一週的特定日子接收訊息。
- **鎖定螢幕**：在鎖定螢幕顯示或隱藏通知訊息。您還可以隱藏個人資訊。
- **應用程式**：選擇在畫面顯示相關通知的應用程式，以及設定這些應用程式顯示相關通知的先後次序。
- **通知 LED 燈**：透過 LED 燈顯示裝置狀態。
- **更多 > 智能咭 1 通知聲音 / 智能咭 2 通知聲音**：選擇通知鈴聲。設定儲存在裝置的音樂作為通知鈴聲。
- **更多 > 點選震動**：設定裝置在點按畫面上某些項目時震動。

- **更多 > 音效**：選擇點按撥號鍵盤、選取選項、鎖定或解鎖螢幕的聲效。
- **更多 > 訊息/通話聲音通知**：將裝置設為透過語音讀取來電人資料或訊息內容。

顯示

您可以自訂每種螢幕類型的詳細設定。

在設定功能表畫面中，點擊**顯示**，然後自訂以下設置：

- **桌面**：設置主螢幕的個人化設定。參閱**主頁螢幕設定**瞭解詳細資訊。
- **鎖定螢幕**：自訂鎖定螢幕設定。參閱**鎖定螢幕設定**瞭解詳細資訊。
- **主題**：選擇裝置的螢幕主題。
- **主頁觸控按鈕**：重新排列主螢幕觸控按鈕或更改按鈕的背景顏色。在螢幕中隱藏主頁觸摸按鈕。
- **字體類型**：更改字體類型。
- **字體大小**：變更字體大小。
- **粗體**：在螢幕上使用粗體文字。
- **亮度**：使用滑桿改變裝置畫面的亮度。要根據環境光線強度自動調整畫面亮度，點按**自動**開關。
- **自動**：設定裝置以因應環境光線的強度自動調整畫面亮度。
- **舒適的觀感**：減少螢幕上的藍光以舒緩眼睛疲勞。
- **自動旋轉螢幕**：根據裝置的方向自動旋轉螢幕。
- **螢幕逾時**：在指定時間內並無操作裝置，螢幕會自動關閉。
- **更多 > 顯示大小**：放大或縮小螢幕。
- **更多 > 開啟螢幕**：點按螢幕兩次以開啟或關閉螢幕。

- **更多 > 屏幕保護程式**：當裝置連接至底座或充電時，顯示螢幕保護程式。選擇想顯示的螢幕保護程式類型。
- **更多 > 迷你檢視**：您可縮小螢幕的尺寸以便單手使用裝置。向左或右拖動螢幕底部的主螢幕觸控按鈕。
- **更多 > 運動感應器校正**：調校動作感應器的角度和速度，以改善感應器的傾斜準確度和速度。



- 校正運動感測器時，確保將裝置置於平坦的表面。不執行這項操作可能會導致動作感應器出現誤差，例如自動螢幕旋轉。

一般

語言及鍵盤

您可以自訂裝置的語言和鍵盤設定。

- 1 在設定功能表畫面中，點按**一般 > 語言及鍵盤**。
- 2 自訂以下設定：
 - **語言**：選擇應用於裝置的語言。
 - **通用鍵盤**：查看目前使用的鍵盤輸入法。選擇用作輸入文字的鍵盤。
 - **LG 鍵盤**：自訂 LG 鍵盤設定。
 - **Google 語音輸入**：設定 Google 文字讀寫功能的選項。
 - **文字轉換語音輸出**：設置文字轉換語音輸出功能的設定。
 - **指標速度**：調整滑鼠或觸控板的游標移動速度。
 - **更改按鈕**：反轉滑鼠右鍵以執行主要操作。

位置

您可以自訂特定應用程式使用地點資訊的方法。

- 1 在設定功能表畫面中，點按**一般** > **位置**。
- 2 自訂以下設定：
 - **模式**：選擇一個方法以提供您的地點資訊。
 - **最近定位請求**：檢視最近要求位置資訊的應用程式。
 - **定位服務**：設置 Google 位置記錄設定。

帳戶及同步處理

您可以添加或管理帳戶，包括 Google 帳戶。您亦可以自動同步特定的應用程式和使用者資訊。

- 1 在設定功能表畫面中，點按**一般** > **帳戶及同步處理**。
- 2 自訂以下設定：
 - **自動同步處理數據**：自動同步處理所有已註冊的帳戶。
 - **帳戶**：檢視註冊帳戶清單。要檢視或變更一個帳戶的詳細資料，請點選該帳戶。
 - **新增帳號**：新增帳戶。

協助工具

您可以管理安裝在裝置上的協助性外掛程式。

- 1 在設定功能表畫面中，點按**一般** > **協助工具**。
- 2 自訂以下設定：
 - **視覺** > **TalkBack**：將裝置設為透過語音通知螢幕狀態或操作。
 - **視覺** > **訊息/通話聲音通知**：將裝置設置為通過語音讀取來電人資訊或短信內容。
 - **視覺** > **字體大小**：變更字型大小。
 - **視覺** > **粗體**：在螢幕上使用粗體文字。
 - **視覺** > **顯示大小**：放大或縮小螢幕。

- **視覺 > 觸控縮放**：要拉近或拉遠，請點選螢幕三次。
- **視覺 > 視窗縮放**：放大或反轉部分螢幕。
- **視覺 > 大滑鼠指標**：放大滑鼠指標。
- **視覺 > 高對比螢幕**：將背景顏色轉換為黑色以塑造高對比螢幕。
- **視覺 > 螢幕顏色反轉**：為視力低下人士提高顯示幕色彩對比度。
- **視覺 > 螢幕顏色調整**：調整顯示色彩。
- **視覺 > 灰度**：將螢幕切換至灰階模式。
- **視覺 > 使用電源鍵結束通話**：要結束通話，請按電源/鎖定鍵。
- **聽覺 > 標題**：向聽障人士播放影片時開啟字幕服務。
- **聽覺 > 通知 LED 燈**：透過 LED 燈顯示裝置狀態。
- **聽覺 > 閃光提示**：將裝置設為通過閃爍的指示燈以通知您來電和鬧鐘提示。
- **聽覺 > 關閉所有聲音**：將所有聲音設為靜音，並降低接收器的音量。
- **聽覺 > 音效類型**：選擇音效類型。
- **聽覺 > 聲音平衡**：調整音效輸出平衡。使用滑動列來變更平衡。
- **電機與認識能力 > Touch assistant**：開啟觸控板以便更容易使用按鈕和手勢。
- **電機與認識能力 > 觸摸輸入**：點住螢幕以輸入文字，或輕點螢幕以修改文字。
- **電機與認識能力 > 實體鍵盤**：自訂鍵盤設定。
- **電機與認識能力 > 自動滑鼠按一下**：沒有移動時自動按一下滑鼠指標。

- **電機與認識能力 > 輕觸並按住以進行通話**：點選並按住通話按鈕來接聽或拒接來電，而不是拖曳它。
- **電機與認識能力 > 螢幕逾時**：當裝置處於閒置狀態超過指定時段之後，自動關閉螢幕。
- **電機與認識能力 > 觸控控制區域**：限制觸控區域，以便只有螢幕的特定部分能夠透過觸控輸入進行控制。
- **協助工具捷徑**：點擊  三次即可快速存取所選功能。
- **自動旋轉螢幕**：因應裝置的實際轉向自動改變畫面的顯示方向。
- **按擊功能**：自創組合按鍵以控制您的裝置。

快捷鍵

使用電源鍵

您可使用電源鍵擷取螢幕擷圖或拍攝相片。

- 1 在設定功能表畫面中，點擊**一般 > 快捷鍵**。
- 2 自訂以下設定：
 - **在相機中進行自拍**：輕按電源鍵以拍攝相片。



- 您必須將手指放在電源鍵上直至完成拍攝相片。
- 此功能只適用於前置相機。

- **螢幕擷取螢幕**：輕按電源鍵兩下以擷取螢幕擷圖。



- 您必須將手指放在電源鍵上直至完成擷取螢幕擷圖。

使用音量鍵

當螢幕被關閉或鎖定時，您可以使用音量鍵來直接啟動應用程式。

- 1 在設定功能表畫面中，點按**一般 > 快捷鍵 > 打開 Capture+ 相機**。

2 拖動  以啟動功能。

- 螢幕鎖定或關閉時，按音量減小 (-) 鍵兩次以啟動**相機**應用程式。按音量增加 (+) 鍵兩次以啟動**擷取+**。

Google 服務

您可以使用 Google 設定來管理您的 Google 應用程式和帳戶設置。

在設定功能表畫面中，點按**一般** > **Google 服務**。

指紋及安全

1 在設定功能表畫面中，點按**一般** > **指紋及安全**。

2 自訂以下設定：

- **指紋**：使用您的指紋解鎖螢幕或內容。參閱**指紋辨識概覽**瞭解詳細資訊。
- **內容鎖定**：設定在媒體匣和 QuickMemo+ 中鎖定檔案的方式。
- **加密 SD 卡儲存器**：將記憶卡加密以避免在另一裝置使用。參閱**記憶卡加密**瞭解詳細資訊。
- **安全設定**：在啟動時以密碼鎖定以保障裝置安全。參閱**安全啟動設定**瞭解詳細資訊。
- **設定 SIM 卡鎖定**：鎖定或解鎖 SIM 卡，或更改密碼 (PIN)。
- **密碼輸入為可見**：在輸入時顯示密碼。
- **裝置管理員**：允許限制裝置控制或使用特定應用程式的權限。
- **未知的來源**：允許安裝非 Play Store 來源的應用程式。
- **憑據保護**：檢視將儲存安全憑證位置的存儲類型。
- **證書管理**：管理儲存在裝置的安全性憑證。
- **Trust agents**：檢視並使用安裝在裝置的信任代理程式。
- **螢幕固定**：修復應用程式螢幕，以便只可以使用當前處

於活動狀態的應用程式。

- **使用量存取**：檢視裝置上應用程式的使用詳細資料。

觸控筆

拔出觸控筆後，使用觸控筆設定來設置選項。

參閱 *Pen Pop* 瞭解詳細資訊。

在設定功能表畫面中，點按**一般** > **觸控筆**。

- **在移除時開啟**：選取一項功能，並在從裝置拔出觸控筆後自動開啟。
- **應用程式捷徑**：設定常用的應用程式。
- **Screen-off memo**：在拔出觸控筆並於螢幕關閉時建立筆記。
- **觸控筆偵測**：拔出或插入觸控筆時，發出音效和震動通知。
- **Pen Keeper**：在拔出觸控筆的情況下移動裝置時，發出音效和視覺通知。

日期及時間

您可以為您的裝置自訂日期及時間設定。

- 1 在設定功能表畫面中，點按**一般** > **日期及時間**。
- 2 自訂設置。

儲存裝置

您可以檢視及管理裝置的內部存放區或記憶卡的儲存空間。

- 1 在設定功能表畫面中，點按**一般** > **儲存裝置**。
- 2 自訂以下設定：
 - **裝置儲存體**：檢視裝置內部儲存設備的總儲存空間和可用空間。檢視在使用的應用程式清單及每個應用程式的儲存容量。

- **可攜式儲存體**：檢視記憶卡的總儲存空間和可用空間。此選項僅在插入記憶卡時顯示。要卸載記憶卡，點擊 。

電池與省電

您可以檢視當前的電池資訊或開啟節電模式。

- 1 在設定功能表畫面中，點按**一般** > **電池與省電**。
- 2 自訂以下設定：
 - **電池使用狀況**：檢視電池的使用詳細資料。要檢視更多詳細資料，請選擇特定項目。
 - **狀態列上之電量百分比**：在狀態列上顯示剩餘電力比例。
 - **省電**：透過停用某些裝置設定（例如顯示亮度、速度和震動強度）以減少電池消耗。省電模式開啟後，狀態列會顯示 。

記憶體

您可以檢視在某段時間內的平均記憶體使用量和某應用程式所佔用的記憶體。

- 1 在設定功能表畫面中，點按**一般** > **記憶體**。
- 2 點擊  以設定擷取資料的時段。

應用程式

您可以檢視已安裝的應用程式清單。在需要時停止運行或刪除應用程式。

- 1 在設定功能表畫面中，點按**一般** > **應用程式**。
- 2 選擇一個應用程式並執行動作。

點選支付

您可以使用您的裝置，而非信用卡來付款。
在設定功能表畫面，點選**一般** > **點選支付**。

備份與重設

您可以將儲存在您的裝置上的資料備份到另一個裝置或帳戶。如有必要，重設裝置。

- 1 在設定功能表畫面中，點按**一般** > **備份與重設**。
- 2 自訂以下設定：
 - **LG Backup**：備份或還原封鎖的發件人清單、訊息、圖像、主螢幕，以及其他儲存於裝置上的資料。
參閱 **LG Backup** 瞭解詳細資訊。
 - **備份我的數據**：將您的應用程式資料、Wi-Fi 密碼及其他設定備份到 Google 伺服器。
 - **備份帳戶**：檢視目前使用的備份帳戶。
 - **自動還原功能**：在重新安裝應用程式時，自動還原備份的設定和數據。
 - **網絡設定重設**：重設 Wi-Fi、藍牙及流動數據設定。
 - **重設為原廠設定**：重設裝置的所有設定並刪除資料。



- 重設您的裝置會刪除裝置上的所有資料。再次輸入您的裝置名稱、Google 帳戶和其他初始資訊。

關於手機

您可以檢視您的裝置資訊，例如名稱、狀態、軟體的詳細資料和法律資訊。

在設定功能表畫面中，點按**一般** > **關於手機**並檢視資訊。



05

附錄

LG 語言設定

選擇用於裝置的語言。

- 點按 **○** > **設定** > **一般** > **語言及鍵盤** > **語言** > **新增語言**，然後選取語言。
- 點按 **☰** 然後拖動至語言清單頂部，以將該語言設定為預設語言。

LG Bridge

LG Bridge 概覽

LG Bridge 是一個應用程式，用於協助您在電腦上方便管理保存在 LG 智慧手機上的照片、音樂、影片和文件。您可以將聯絡人、照片和其他備份到電腦上，或者更新裝置的軟體。



- 請參閱 LG Bridge 說明以瞭解詳細資訊。
- 受支援的特性視裝置而定。
- LG USB 驅動器是連接您的 LG 智慧手機和電腦的必要程式，該驅動器隨您安裝 LG Bridge 時便一同安裝。

LG Bridge 功能

- 通過 Wi-Fi 連接或移動數據連接從電腦上管理裝置檔。
- 通過 USB 連接線從裝置上將資料備份到電腦或從電腦上將資料還原到裝置。
- 通過 USB 連接線從電腦上更新裝置軟體。

在電腦上安裝 LG Bridge

- 1 通過電腦瀏覽 www.lg.com。
- 2 在搜索欄中，輸入您的裝置名稱。
- 3 點擊 **PC Sync > LG Bridge**，然後下載安裝文件。

手機軟體更新

從互聯網更新 LG 流動電話軟體

如需更多有關使用此功能的資訊，請瀏覽 <http://www.lg.com/common/index.jsp>，選擇您的國家/地區和語言。

此功能可讓您從互聯網方便地將電話中的軟體更新為較新版本而無需到服務中心。此功能僅當 LG 為您的裝置提供較新的軟體版本時可用。

由於流動電話軟體更新要求使用者在更新過程期間全神貫注，因此請確保查看每一步顯示的所有說明和備註，然後再繼續。請注意，更新期間拔下 USB 連接線可能會嚴重損壞您的手機。



- LG 保留自行決定提供僅適用於所選型號軟體更新的權利，不保證軟體的較新版本可用於所有手機型號。

透過 Over-the-Air (OTA) 進行 LG 流動電話軟體更新

此功能讓您透過 OTA 輕鬆將手機軟體更新為較新版本，無需使用 USB 連接線。此功能僅當 LG 為您的裝置提供較新的軟體版本時可用。

要執行手機軟件更新，點擊 **○ > 設定 > 一般 > 關於手機 > 通用 > 更新中心 > 軟體更新 > 現在檢查更新**。



- 更新手機軟體的過程中，內部電話存儲中您的個人資料（包括關於 Google 帳戶和任何其他帳戶的資訊、您的系統/應用程式資料和設定、任何下載的應用程式以及您的 DRM 許可證）可能會遺失。因此，LG 建議您備份個人資料，然後再更新手機。LG 對任何個人資料遺失概不負責。
- 此功能視地區或服務提供商而定。

常見問題

本章列出您使用手機時可能會遇到的一些問題。某些問題需要您致電服務提供商，但大多數問題您可以輕鬆地自行解決。

訊息	可能的原因	可能的糾正措施
SIM 卡錯誤	手機中沒有 SIM 卡或 SIM 卡沒有正確插入。	確保正確插入 SIM 卡。
無網絡連接/網絡掉線	訊號弱或不在運營商網絡範圍內。	朝向窗口或開闊的區域中移動。檢查網絡運營商覆蓋範圍地圖。
	運營商提供了新服務。	聯絡您的服務提供商。
密碼不匹配	要變更安全密碼，請重新輸入以確認新密碼。	如果忘記該密碼，請聯絡您的服務提供商。
	您輸入的兩個密碼不匹配	
沒有可設定的應用程式	服務提供商不支援或需要註冊。	聯絡您的服務提供商。
下載的應用程式導致很多錯誤。	移除應用程式。	<ol style="list-style-type: none">1. 點擊 ○ > 設定。2. 點擊 一般 > 應用程式。3. 點按所需應用程式 > 解除安裝。

訊息	可能的原因	可能的糾正措施
無法通話	撥號錯誤	新網絡未授權。
	插入了新SIM卡。	查看新限制。
	預付費用達到上限。	聯絡服務供應商或使用PIN2重設上限。
無法開啟電話	電源/鎖定鍵按得太短暫。	按電源/鎖定鍵最少兩秒鐘。
	電池並未充電。	為電池充電。查看螢幕上的充電指示燈。
充電錯誤	電池並未充電。	為電池充電。
	外界溫度太熱或太冷。	請確定電話是在常溫下進行充電。
	接觸問題	檢查充電器及其與電話的連接。
	無電壓	將充電器插入其他插座中。
	充電器故障	更換充電器。
	錯誤的充電器	只使用原裝LG配件。
號碼不允許。	固定撥號功能已開啟。	查看設定功能表並關閉此功能。
無法接收/傳送SMS和照片	記憶體已滿	刪除某些資料，例如手機上的應用程式或訊息，以便得到更多可用的記憶體。
無法開啟檔案	檔案格式不受支援	查看支援的檔案格式。

訊息	可能的原因	可能的糾正措施
當接聽電話時螢幕沒有開啟。	距離感測器問題	如果使用保護帶或外殼，確保其不會覆蓋距離感測器週圍的區域。確保接近感測器週圍的區域無遮擋。
沒有聲音	震動模式	查看音效功能表的設定狀態，確定您不是使用震動或免干擾的模式。
掛斷或者凍結	間歇性的軟體問題	如果螢幕凍結或您嘗試操作電話時沒有回應，請取出電池並重新插入它。然後重新開啟電話。 或者，嘗試透過網站執行軟體更新。

防盜指南

如果未經您的許可裝置被重置為出廠設定，請設定裝置以阻止其他人使用。例如，如果您的裝置遺失、被盜或被擦除，則只有具有您的 Google 帳戶或鎖定螢幕資訊的人員可以使用該裝置。

確保您的裝置受到保護所需的一切操作如下：

- 設定螢幕鎖定：如果您的裝置遺失或遭竊而您設定了螢幕鎖定，除非您的螢幕被解除鎖定，無人能夠使用設定功能表擦除裝置。
- 在您的裝置上添加 Google 帳戶：如果您的裝置被刪除但裝置上有 Google 帳戶，則裝置無法完成設定過程，直到再次輸入 Google 帳戶資訊。

您的裝置受到保護後，如果您需要進行出廠重置，則需要解鎖螢幕或輸入 Google 帳戶密碼。這可確保由您或您信任的人員來進行重置。



- 重設為原廠設定之前，不要忘記您已添加到您的裝置的 Google 帳戶和密碼。如果您不能在設定時提供帳戶資訊，在重設為原廠設定之後，您將無法使用裝置。

更多資訊

開放來源程式碼軟件

若要獲取此產品所包含的 GPL、LGPL、MPL 來源程式碼和其他開放來源程式碼認證，請瀏覽 <http://opensource.lge.com>。

除了來源程式碼，所有涉及到的授權條款、免責聲明和版權聲明可供下載。

LG Electronics 亦可以透過收費 CD-ROM 提供開放來源程式碼，費用包括 CD-ROM 成本（例如媒體成本、運費以及處理費），您可透過 opensource@lge.com 索取。此服務由購買產品日期起計算三年內有效。

商標

- Copyright© 2017 LG Electronics, Inc. 保留所有權利。LG 及 LG 標誌均為 LG 集團及其相關公司的註冊商標。
- Google™、Google Maps™、Gmail™、Duo™、Google Calendar™、YouTube™ 及 Play Store™ 均為 Google, Inc. 的商標。
- Bluetooth® 是屬於 Bluetooth SIG, Inc. 全球的註冊商標。
- Wi-Fi® 及 Wi-Fi 標誌均為 Wi-Fi Alliance 的註冊商標。
- 所有其他商標與版權均屬於其擁有者。

確認聲明

LG Electronics 在此聲明 **LG-M400n** 產品符合對 **2014/53/EU** 指示的基本要求和和其他相關規定。

確認聲明副本請見：<http://www.lg.com/global/declaration>

关于本用户指南

感谢您选择此 LG 产品。初次使用设备之前，请仔细阅读本用户指南，以确保安全和正确使用。

- 务必使用原装 LG 配件。提供的物件仅针对本设备设计，可能与其他设备不兼容。
- 本设备采用触摸屏键盘，不适合视障人士使用。
- 说明基于设备默认设置。
- 设备上的默认应用程序会随时更新，并且对这些应用程序的支持可能会撤消，恕不另行通知。如果您对设备提供的应用程序有任何疑问，请联系 LG 服务中心。对于用户安装的应用程序，请联系相关的服务供应商。
- 修改设备的操作系统，或从非官方来源安装软件可能会损坏设备以及导致数据损坏或数据丢失。这类操作将违反您的 LG 许可协议，并使您的保修失效。
- 某些内容和插图可能与您设备上的有所不同（具体视区域、服务供应商、软件版本或操作系统版本而定），并会随时更改，恕不另行通知。
- 设备提供的软件、音频、壁纸、图像和其他媒体授权为有限使用。如果您出于商业或其他目的提取和使用这些材料，则可能会侵犯版权法。作为用户，您对媒体的非法使用负全责。
- 数据服务（例如收发短信、上传、下载、自动同步和位置服务等）可能会产生额外的费用。为避免额外的费用，请选择适合您需要的流量套餐。联系您的服务供应商以获取更多详细信息。

说明通知



警告：可能会导致用户和第三方受伤的情况。



小心：可能会导致轻微人身伤害或设备损坏的情况。



注：注意事项或其他信息。

目录

5 安全及有效使用准则

01

自定义设计功能

- 13 指纹识别
- 16 Pen Pop
- 17 快速共享
- 18 Quick备忘录+
- 20 多任务处理功能
- 21 Quick多任务

02

基本功能

- 23 产品组件和配件
- 24 零件概览
- 26 打开或关闭电源
- 27 安装 SIM 卡和电池
- 29 插入储存卡
- 30 拔出储存卡
- 30 为电池充电
- 32 触摸屏
- 35 主屏
- 42 屏幕锁定
- 45 存储卡加密
- 46 截图
- 47 输入文本
- 52 请勿打扰
- 53 内容共享

03

有用的应用程序

- 56 安装和卸载应用程序
- 57 卸载的应用程序
- 58 手机
- 61 信息
- 62 相机
- 70 图片库
- 73 音乐
- 74 电子邮件
- 75 日历
- 76 计算器
- 77 时钟
- 78 下载
- 78 文件管理器
- 79 语音备忘录
- 79 FM 收音机
- 80 联系人
- 82 任务
- 82 LG Backup
- 83 RemoteCall Service
- 83 Chrome
- 83 Google 应用程序

04

手机设置

- 87 设置
- 87 网络
- 97 声音和通知
- 98 显示屏
- 99 常规

05

附录

- 108 LG 语言设置
- 108 LG Bridge
- 109 手机软件更新
- 111 FAQ
- 114 防盗指南
- 115 更多信息

安全及有效使用准则

请阅读以下简单的准则。违反这些准则可能造成危险或者触犯法律。如果发生故障，设备内置的软件工具会收集故障记录。此工具仅收集特定于故障的数据，如信号强度、呼叫突然掉线时的 cell ID position 和加载的应用程序。该记录仅用于帮助确定故障原因。该类记录已加密，如果您需要将设备退回以进行维修，仅 LG 授权维修中心可查看它们。

关于设备的重要信息

- 根据提供商的情况和软件版本，设备应用程序和服务会在未通知的情况下更改或取消。
- 第一次打开设备时，会进行初始配置。第一次启动时间可能比平时启动时间要长。

使用前阅读

- 要购买可选配件，请通过 LG 客户信息中心联系合适的经销商。
- 设备的外观和规格会在未通知的情况下更改。
- 请勿将 LG 产品用于这些原始设计之外的其他用途。使用未认证的应用程序或软件可能会损坏设备，相应后果不属于保修范围。

暴露在射频能量之下

无线电波暴露和“特定吸收率”（SAR）信息。

本设备已设计为遵守适用的无线电波暴露安全要求。此要求基于相关的科学准则，其中包括为确保所有人员（无论年龄和健康状况）安全而设计的安全裕量。

- 无线电波暴露准则采用一种称为“特定吸收率（SAR）”的测量单位。SAR 测试是在所有用到的频带中以设备的最高认可功率电平进行发射时使用标准化方法执行的。
- 不同的 LG 设备型号可能有不同的 SAR 能级，但它们均符合相关的无线电波暴露准则。
- 国际非游离辐射防护委员会（ICNIRP）建议的 SAR 上限值为：每 10 克重的人体组织吸收的能量平均值不超过 2 W/kg。

- 经对该型号装置进行的测试得知，本型号装置在耳边使用的最高 SAR 值为 0.471 W/kg(10克)，戴在身体上时，其值为 1.130 W/kg(10克)。
- 本设备在靠近耳朵的正常使用位置使用或放置在距人体至少 5 毫米的位置时符合 RF 暴露标准。当使用便携盒、皮带夹或皮套进行身体佩戴操作时，不得包含金属并且产品应至少距身体 5 毫米。为了发送数据文件或信息，此设备需要高质量的网络连接。在某些情况下，数据文件或信息的发送可能被延迟，直到有这样的连接可用。确保遵照以上间隔距离说明直到完成发送。

产品保养和维护

- 务必使用经核准用于此特定设备型号的正品 LG 电池、充电器和配件。使用任何其它类型可能导致适用于此设备的许可或保修失效，并可能造成危险。
- 某些内容和插图可能与您的设备有所差异，恕不提前通知。
- 不要拆解本机。当需要维修时，请将装置送往合格的服务技术人员处。
- 保修（由 LG 决定）可能包括使用新的或返修的更换部件或板，只要其功能与更换的部件等效。
- 远离诸如电视、收音机或个人计算机之类的电器。
- 远离诸如暖气片或厨灶之类的热源。
- 小心不要让装置摔落。
- 不要让装置受到机械振动或撞击。
- 在任何有特殊条例要求的区域关闭设备。例如，请勿在医院使用该设备，因为它可能影响敏感的医疗装置。
- 设备充电时，请勿用湿手操作设备。这可能会导致电击或设备严重受损。
- 请勿在靠近易燃物体的位置充电，因为装置可能因加热而引发火灾。
- 使用干布清洁装置外壳（不要使用如苯、稀释剂或酒精之类的溶剂）。
- 如果本设备置于柔软物体之上，请不要充电。
- 应将设备放在完全通风的位置充电。

- 不要在烟雾或灰尘过多的环境中使用或存放装置。
- 不要将设备放在信用卡或卡式车票旁边，它可能会影响磁条上的信息。
- 请勿用尖锐物体敲击屏幕，这可能会损坏设备。
- 不要将设备暴露在液体或潮气中。
- 谨慎使用诸如耳机之类的配件。在不必要的情况下，不要触摸天线。
- 请勿使用、触摸或试图取下或修复破碎或破裂的玻璃。由于滥用或误用造成的玻璃显示屏损坏不在保修范围内。
- 您的设备属于电子设备，正常运行时会产生热量。在缺乏足够通风的条件下过长时间直接接触皮肤时，可能导致不舒服或轻微灼伤。因此，在操作的过程中或操作之后立即处理您的装置时，应特别小心。
- 如果设备变湿，请立即拔下其电源插头，并让它完全晾干。请勿试图使用烤炉、微波炉或电吹风等外部热源加快干燥处理。
- 请确保本产品不会接触任何液体。在本产品潮湿时，请勿使用或充电。如果产品不慎弄湿，液体损坏指示器会变色。请注意，这将限制您接受保修提供的任何免费维修服务。

有效的设备操作

电子设备

所有设备都可能受到干扰，这种干扰会对性能造成影响。

- 在未经允许的情况下，不得在医疗装置附近使用设备。请咨询您的医生以确定本设备的操作是否会干扰医疗设备的操作。
- 起搏器制造商建议您确保起搏器与其他设备之间至少保持 15 厘米的距离，以避免干扰起搏器。
- 此设备可能发出一道亮光或闪光。
- 设备可能会对某些助听器造成干扰。
- 微弱的干扰可能会影响电视、收音机、个人计算机等。
- 如果可能，请在介于 0°C 与 40°C 温度之间使用设备。将设备放置在过低或过高温度的环境下可能会导致损坏、故障，甚至爆炸。

行车安全

查阅有关在驾驶时使用设备的本地法律法规。

- 不要在驾驶时使用手持式设备。
- 将注意力完全集中在驾驶上。
- 如果行驶条件需要，请在拨打或接听电话之前将车辆驶离道路并停车。
- 射频能量可能影响车辆内的电子系统，例如立体声音响、安全设备等。
- 当车辆配备气囊时，不要让安装的便携式的无线设备阻挡气囊。这样做可能因性能不当而导致气囊无法释放或导致严重受伤。
- 如果您在外出时使用耳机收听音乐，请确保将音量设置为合理的音量级别，以便注意周围的情况。在靠近马路时，尤其要注意这一点。

防止损伤您的听力



为防止听力可能受损，请勿长时间高音量倾听。

如果您长时间置于高音环境中，那么您的听力可能会遭到伤害。因此，我们建议您在开机或关机时不要将装置置于耳边。同时，我们还建议您将音乐和通话音量设置为合理的音量级别。

- 使用耳机时，如果您不能听到附近的人说话，或者坐在您旁边的人能听到您在听的内容，则将音量调低。



- 耳机声音压力过大可能导致听力受损。

玻璃部分

设备的某些零件由玻璃制成。如果设备跌落到坚硬的表面，或受到非常大的撞击，玻璃可能会破裂。如果玻璃破碎，请勿触摸或尝试取出玻璃碎片。停止使用您的设备，直到授权服务供应商为您更换玻璃为止。

爆破区域

请勿在正进行爆破的地区使用设备。请依照有关限制，并遵守任何规章或规定。

易爆环境

- 请勿在加油站内使用设备。
- 不要在靠近燃料或化学制品处使用装置。
- 不要在放有设备和配件的车厢内运输或存放可燃气体、液体或爆炸品。

在飞机上

无线设备可能对飞机造成干扰。

- 登机前，请关闭您的设备。
- 未经机务人员允许，在地面停驻时也请勿使用装置。

儿童

将设备放在儿童接触不到的安全地方。装置中包含细小零件，如果脱落可能导致窒息危险。

紧急电话

并非在所有装置网络中均可使用紧急电话。因此，您不应仅依赖于设备的紧急呼叫功能。请向本地的服务提供商核准。

电池信息及保养

- 您无需在再次充电前对电池进行完全放电。与其它电池系统不同，本机电池不具有可能影响电池性能的记忆效应。
- 只能使用 LG 电池和充电器。LG 充电器设计为最大程度地延长电池使用寿命。
- 不要拆解电池或将其短路。
- 保持电池的金属触点清洁。
- 当电池不再提供合乎要求的性能时，请更换电池。在需要更换之前，电池组可以反复充电数百次。
- 如果很长一段时间都没用过电池，请将电池再次进行充电以保持最佳使用状态。
- 不要将电池充电器暴露在直射阳光下，也不要再在诸如浴室之类的高湿环境中使用。
- 不要将电池存放在过热或过冷的地方，这可能损害电池的性能。
- 如果用不适当类型的电池进行替换，可能有爆炸危险。请按说明处理用过的电池。
- 如果要更换电池，请将它就近送至 LG Electronics 授权服务点或经销商处以寻求帮助。
- 充好电后，请务必将充电器从墙上插座拔下，以避免不必要的耗电。
- 实际的电池寿命将取决于网络配置、产品设置、使用方式、电池和环境条件。
- 确保没有细尖的物体，如动物牙齿、指甲等进入装置内触碰电池。这可能引发火灾。

使用 SIM 卡时的注意事项

- 请勿将贴有标签或封条的 SIM 卡插入设备中。这可能会造成损坏。
- 使用设备时请勿取出 SIM 卡。这可能会损坏 SIM 卡或系统。
- 特别注意确保 SIM 卡未刮擦、弯曲或受磁铁损坏。这可能会删除 SIM 卡上保存的文件，或造成设备故障。

使用内存卡时的注意事项

- 确保插入内存卡时方向正确。以错误的方向插入可能会损坏内存卡。

保护个人信息

- 务必保护您的个人信息，防止数据泄漏或滥用敏感信息。
- 在使用设备时，务必备份重要的数据。LG 不对任何数据丢失负责。
- 在废弃设备时务必备份所有数据并重置设备，防止对敏感信息的任何滥用。
- 在下载应用程序时，请仔细阅读权限屏幕。
- 在使用对多个功能或您的个人信息具有访问权限的应用程序时请小心。
- 定期检查您的个人帐户。如果您发现任何滥用您个人信息的迹象，请要求您的服务提供商删除或更改您的帐户信息。
- 如果您的设备丢失或失窃，请更改您的帐户密码以保护个人信息。
- 请勿使用来源未知的应用程序。



01

自定义设计功能

指纹识别

指纹识别概述

使用指纹识别功能之前，您必须先和设备中注册您的指纹。

您可以在以下情况下使用指纹识别功能：

- 解锁屏幕。
- 查看**图片库**或**Quick备忘录+**中的锁定内容。
- 通过登录应用程序或使用您的指纹自我识别来确认购买。



- 设备可以将您的指纹用于用户识别。指纹传感器可能会将不同用户的相似指纹识别为相同指纹。要增强设备安全性，将屏幕锁定设为图案、PIN 或密码。

指纹识别注意事项

指纹识别的准确性可能因多个原因而降低。要最大程度地提升识别的准确性，使用设备前，先检查以下几点。

- 设备的电源/锁定键具有指纹传感器。确保电源/锁定键未受到金属物体（如硬币或钥匙）的损坏。
- 如果电源/锁定键或您的手指上有水、灰尘或其它异物，指纹注册或识别功能可能无法运行。识别指纹之前，先清洁并擦干手指。
- 如果手指表面有疤痕或因浸在水中而不平滑，指纹可能不可正确识别。
- 如果弯曲手指或仅使用指尖，您的指纹可能无法识别。确保手指覆盖电源/锁定键的整个表面。
- 仅为每次注册扫描一个手指。扫描多个手指可能影响指纹注册和识别。
- 如果周围空气干燥，设备可能产生静电。如果周围空气干燥，避免扫描指纹，或在扫描指纹前先碰触金属物体（如硬币或钥匙），以去除静电。

注册指纹

您可以在设备中注册并保存您的指纹，以使用指纹识别功能。

1 点击 **○ > 设置 > 常规 > 指纹 & 安全性 > 指纹**。




- 此功能将在安全锁定激活时可用。
 - 使用轻敲解码、图案、PIN 或密码锁定设备。
- 如果屏幕锁定未处于活动状态，按照屏幕说明配置锁定屏幕。请参阅[配置屏幕锁定设置](#)以了解详细信息。

2 找到设备背面的电源/锁定键，然后将手指轻轻放在上面以注册指纹。



- 轻按电源/锁定键，使传感器可以识别您的指纹。如果按下电源/锁定键时用力过大，屏幕锁定功能可能无法启动或屏幕可能关闭。
- 确保您的指尖覆盖电源/锁定键上传感器的整个表面。

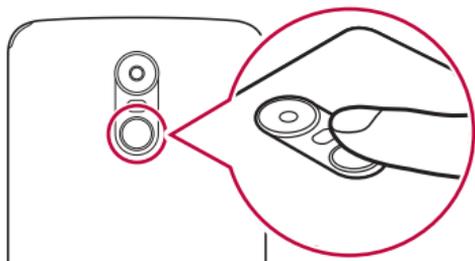

3 按照屏幕上的说明操作。

- 稍微移动手指以重复扫描指纹，直到指纹注册完成为止。

4 完成指纹注册后，轻触**确定**。

- 轻触**添加更多**以注册其它指纹。如果仅注册一个指纹且对应的手指状态不理想，指纹识别可能无法正常运行。为预防此类情况发生，请注册多个指纹。

管理指纹

您可以编辑或删除已注册的指纹。

- 1 点击  > **设置** > **常规** > **指纹 & 安全性** > **指纹**。
- 2 根据指定的锁定方式解锁。
- 3 从指纹列表中，轻触指纹以进行重命名。要将其删除，点击 。

使用指纹解锁屏幕

您可以通过指纹解锁屏幕或查看锁定内容。激活所需功能：

- 1 点击  > **设置** > **常规** > **指纹 & 安全性** > **指纹**。
- 2 根据指定的锁定方式解锁。
- 3 在指纹设置屏幕上，激活所需功能：
 - **屏幕锁定**：使用指纹解锁屏幕。
 - **内容锁定**：使用指纹解锁内容。要执行此操作，确保已设置内容锁定。

Pen Pop

Pen Pop 功能让您可以轻松快速地访问选项以创建备忘录。拔出笔即可打开 Pen Pop。

设置 Pen Pop

点击  > **设置** > **常规** > **画笔**。

Pen Pop 选项

-  : 隐藏/显示 Pen Pop 选项。
-  : 打开 Pop Memo 以编写备忘录。
-  : 打开捕获+ 并在备忘录中使用当前屏幕图像。
-  : 打开 Pop Scanner 以使用照相机拍照，并将照片用在备忘录中。
-  : 打开 Quick备忘录+ 并查看当前备忘录。
-  : 为您选择的应用程序添加快捷方式。

Quick备忘录+

Quick备忘录+ 概述

您可以使用此高级记事本功能上传传统记事本不支持的多种选项（例如图像管理和屏幕截图）来制作创意备注。

创建备注

- 1 点击  > Quick备忘录+。
- 2 点击  创建备注。
 - ：保存备注。
 - ：撤消上一次操作。
 - ：重新执行撤销的上一次操作。
 - ：使用键盘输入备注。
 - ：手动编写备注。
 - ：清除手写备注。
 - ：放大或缩小、旋转或清除部分手写备注。
 - ：访问其它选项，包括删除和插入、分享、更改类别、锁、纸张样式、使用自动链接和Quick多任务。
- 3 点击  保存备注。

在照片上编写备注

- 1 点击  > Quick备忘录+。
- 2 点击  拍照，然后轻触**完成**。
- 3 点击  或 ，为照片编写备注。
 - 为照片手动编写备注。
 - 在照片下方输入文字。
- 4 点击  保存备注。

在屏幕截图上编写备注

- 1 查看想捕捉的屏幕时，将状态栏向下拖，然后点击 。
 - 屏幕截图将显示为记事本背景主题。备忘录工具将在屏幕顶部显示。
- 2 根据需要进行备注。
 - 为照片手动编写备注。
- 3 点击  并将备注保存至所需位置。
 - 可以在 **Quick备忘录+** 或**图片库**中查看已保存的备注。
 - 要始终将备注保存到相同位置，选择**设为默认选择**复选框并选择应用程序。

管理文件夹

您可以查看按备注类型分组的备注。

- 1 点击  > **Quick备忘录+**。
- 2 在屏幕顶部，点击  并选择菜单项：
 - **所有备忘录**：查看保存在 **Quick备忘录+** 中的所有备注。
 - **我的备忘录**：查看 **Quick备忘录+**创建的备注。
 - **Pop Scanner**：查看 Pop Scanner 创建的备注。
 - **捕获+**：查看  创建的备注。
 - **已删除**：查看已删除备注。
 - **新类别**：添加类别。
 -  ：重新布置、添加或删除类别。要更改类别的名称，轻触此类别。



- 首次启动 **Quick备忘录+** 时，某些文件夹不会显示。已停用文件夹至少包含一个相关备注时，其将被启用并显示。



多任务处理功能

多窗口

您可以将屏幕分为多个窗口，以同时使用两个应用程序。

使用应用程序时，触摸并按住主页触摸按钮中的 ，然后从最近使用的应用程序列表中选择应用程序。

- 您可以同时使用主屏幕上显示的两个应用程序。
- 要停止多窗口功能，触摸并按住 。

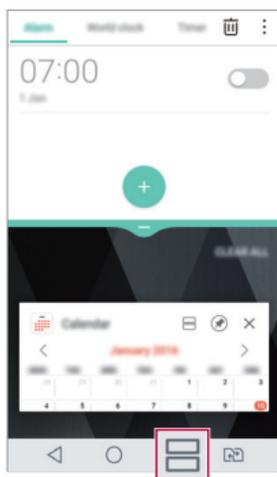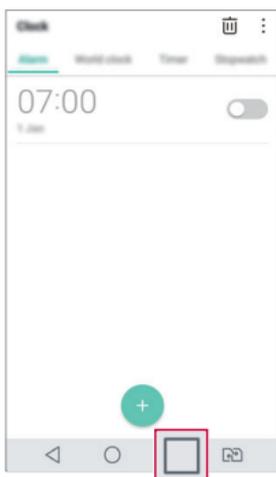

- 您可以在支持多窗口功能的应用程序中使用此功能。
- 多窗口功能不受某些应用程序支持，包括下载的应用程序。

概览屏幕

概览屏幕提供最近使用的应用程序的预览。

要查看最近使用的应用程序的列表，轻触主页上的 ，然后轻触显示的应用程序。

- 触摸并按住应用程序，然后将其拖放到屏幕顶部，以使用多窗口启动应用程序。您可以轻触每个应用程序顶部的 。

Quick多任务

您可以使用Quick多任务启动应用程序，以与其它运行的应用程序一起使用。例如，在播放视频时使用日历。

当正在运行某个应用程序时，点击  > **Quick多任务**。



• 某些应用程序不支持此功能。

- ：关闭 Quick 多任务模式以切换至全屏模式。
- ：调整 Quick 多任务窗口的不透明度。如果 Quick 多任务窗口透明，其不会响应触摸输入。
- ：关闭 Quick 多任务窗口。
- ：调整 Quick 多任务窗口的大小。



02

基本功能

产品组件和配件

您的设备有以下项目。

- 设备
- 电池
- 耳机
- USB 数据线
- 充电器
- 快速入门指南




- 上述项目有可能是可选项目。
- 设备随附的项目和任何可用的配件可能需视地区和服务供应商而定。
- 务必使用正品 LG Electronics 配件。使用由其他制造商制造的配件可能会影响设备的通话性能或导致故障。这种情况可能无法由 LG 维修服务所承担。



- 如果缺少任何这些基本物件，请联系您购买设备的经销商。
- 若要购买其他基本项目，请联系 LG 客户服务中心。
- 如需购买可选项目，请联系 LG 客户服务中心了解可以提供商品的经销商。
- 产品包装盒中的某些物件可能会随时更改，恕不另行通知。
- 设备的外观和规格可能会随时更改，恕不另行通知。
- 设备规格可能会有所不同，具体视区域或服务供应商而定。
- 请务必使用 LG Electronics 提供的正品配件。使用第三方配件将可能损坏设备或导致故障。

零件概览

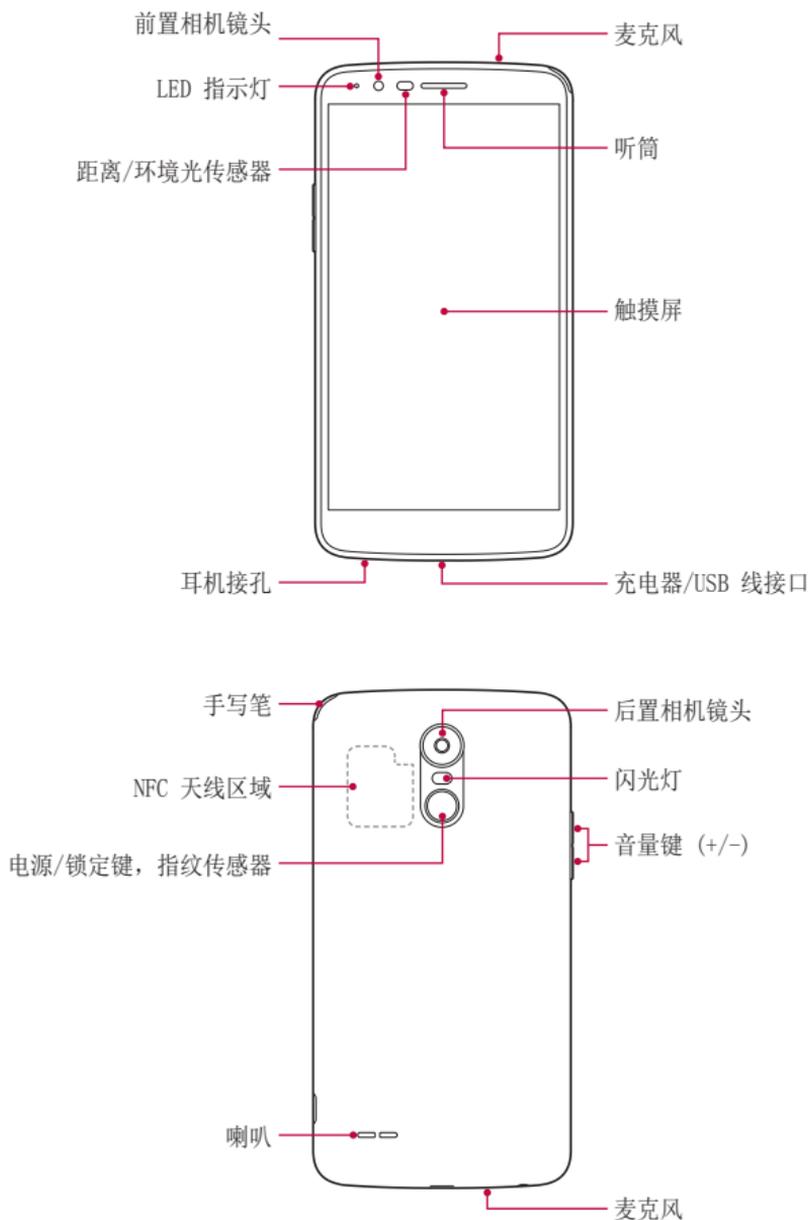

- 距离/环境光传感器
 - 距离传感器：通话期间，当设备接近人体时，距离传感器会关闭屏幕并禁用触屏功能。当设备位于特定范围以外时，该传感器会重新打开屏幕并启用触屏功能。
 - 环境光传感器：环境光传感器在开启自动亮度控制模式时分析环境光强度。
- 音量键
 - 调整铃声、呼叫或通知的音量。
 - 在使用照相机时，轻轻按下音量键可拍摄照片。若要连续拍摄照片，请按住音量键。
 - 屏幕锁定或关闭时，按音量减小 (-) 键两次以启动**照相机**应用程序。按音量增加 (+) 键两次以启动**捕获+**。
- 电源/锁定键（指纹传感器）
 - 需要打开或关闭屏幕时，短按该键。
 - 需要选择电源控制选项时，按住此键。
 - 打开指纹识别功能可简化解锁屏幕的过程。请参阅[指纹识别概述](#)以了解详细信息。
 - 使用前置相机镜头时，轻触按键拍摄照片。
 - 轻触按键两次可进行屏幕截图。



- 某些功能可能无法访问，具体取决于设备规格。
- 请勿在设备上放置重物或坐在上面。否则，可能会损坏触摸屏。
- 屏幕保护膜或配件可能会对近程传感器产生干扰。
- 如果设备进水或在潮湿场所使用，触摸屏或按钮可能无法正常运行。

打开或关闭电源

打开电源

电源关闭后，按住电源/锁定键。



- 初次打开设备时，将进行初始配置。智能手机的初次启动时间可能比平时更长。

关闭电源

按住电源/锁定键，然后选择**关机**。

电源控制选项


点住电源/解锁键，然后选择选项。

- **关机**：关闭设备。
- **重启手机**：重新启动设备。
- **打开飞行模式**：阻止通信相关功能，包括进行电话呼叫、收发短信和上网浏览。其他功能仍然可用。


安装 SIM 卡和电池

先插入设备服务提供商提供的 SIM 卡，然后插入随附的电池。


- 1 要卸下后盖，请用手抓紧设备。如图所示，用另一只手的大拇指指甲卸下后盖。

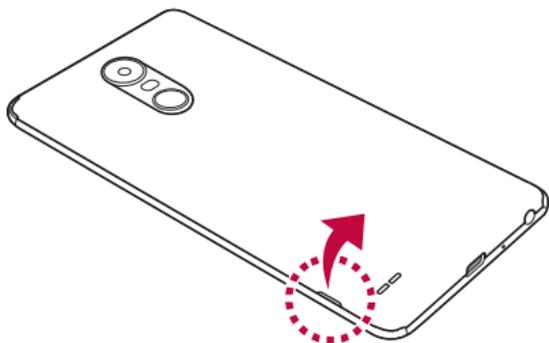

- 2 将 SIM 卡滑入 SIM 插槽中，如图所示。确保卡的金属接触区域朝下。

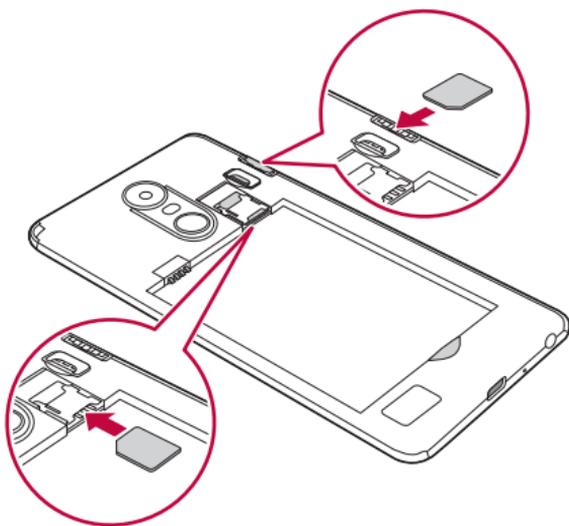

3 插入电池。

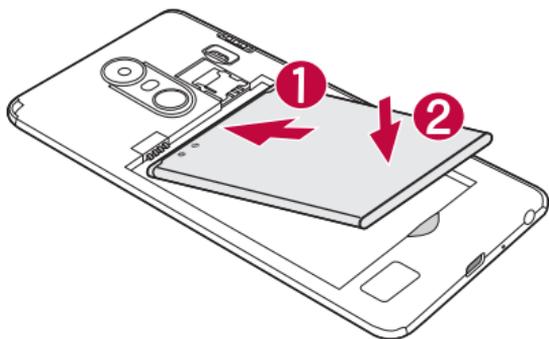

4 要装回设备后盖，请在电池仓上对齐后盖，向下按直至其卡入到位。



- 本设备仅支持 Nano SIM 卡。
- 为实现无故障性能，建议将电话与正确类型的 SIM 卡一起使用。务必使用运营商提供的原厂制造 SIM 卡。

使用 SIM 卡时的注意事项


- 请勿丢失 SIM 卡。LG 对于丢失或转移 SIM 卡导致的损坏和其他问题概不负责。
- 插入或拔出 SIM 卡时，小心不要损坏该卡。

插入储存卡

将储存卡插入设备。

设备最多支持 2 TB 的 microSD 卡。根据存储库制造商和类型，某些储存卡可能和您的设备不兼容。

- 1 取下后盖。
- 2 将金色接触区朝下，插入储存卡。

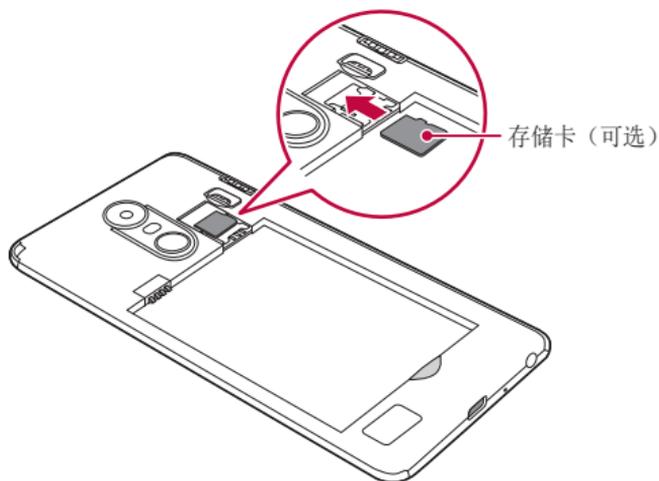

- 3 盖上后盖。



- 有些储存卡可能无法与此设备完全兼容。如果你使用了不兼容的卡，可能会损害设备或储存卡，或破坏其中存储的数据。



- 频繁写入和删除数据可能缩短储存卡的使用寿命。

拔出储存卡

先卸载储存卡，然后再将其移出，以确保安全。

- 1 点击 **○** > **设置** > **常规** > **存储** > **△**。
- 2 拆下背盖并拉出储存卡。




- 当设备正在传送或存取信息时，请勿拔出储存卡。这可能会导致数据丢失或损坏，或者可能毁坏储存卡或设备。LG 对滥用或不合理使用储存卡造成的损失（包括数据丢失）概不负责。

为电池充电

使用设备之前，请将电池充满电。

将充电电缆的一端连接到充电器，而另一端插入电缆端口，然后将充电器插入电源插座。

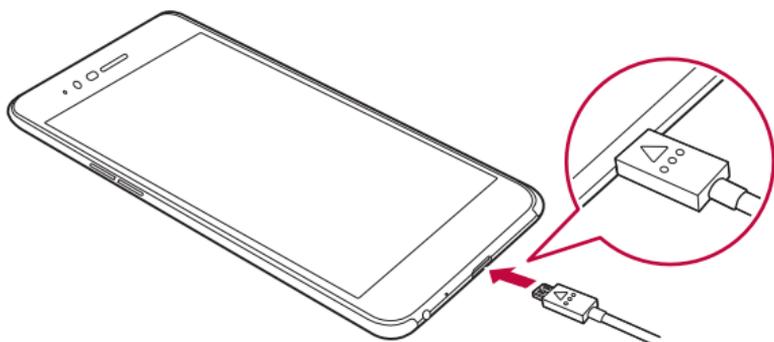

- 务必使用设备附带的 USB 数据线。
- 确保使用经 LG 认证的充电器、电池和充电电缆。用第三方充电器对电池充电将可能导致电池爆炸或损坏设备。
- 在设备充电时使用设备将可能导致电击。若要使用设备，请停止对它充电。



- 设备充满电后，从电源插座中拔下充电器。这可避免不必要的功耗。
- 对电池充电的另一种途径是在设备与台式机或笔记型电脑之间连接 USB 数据线。此方式可能会比常用的电池充电方式花费更长时间。
- 请勿使用无法保持额定电压的 USB 集线器为电池充电。充电可能会失败或意外停止。

使用设备时的注意事项

- 更换电池时，应格外小心以确保不会有异物或水进入设备。
- 确保设备内部不会接触金属物体或水。
- 确保使用设备自带的 USB 线；不要在您的设备上使用第三方 USB 线或充电器。LG 有限保修未涵盖第三方配件的使用。
- 不遵守本指南内的指示以及使用不当都有可能损坏设备。

有效地使用电池

如果您一直同时连续运行许多应用程序和功能，则电池的使用时间可能会减少。

取消后台操作可延长电池使用时间。

若要最大限度地减少电池消耗，请遵循以下提示：


- 不使用时关闭蓝牙或 WLAN 网络功能。
- 尽可能将屏幕待机时间缩短。
- 最大限度地降低屏幕亮度。
- 不使用设备时设置屏幕锁定。
- 查看电池使用详细信息并关闭耗电量的所有下载的应用程序。

触摸屏

您可以通过使用触摸屏手势自行熟悉如何控制设备。

点击

用您的指尖轻轻点击以选择或运行应用程序或选项。

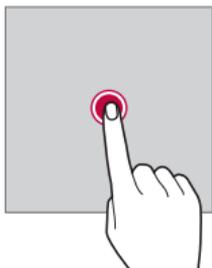


点住

点住数秒以显示具有可用选项的菜单。




双击

快速点击两次以放大或缩小网页和放大地图。

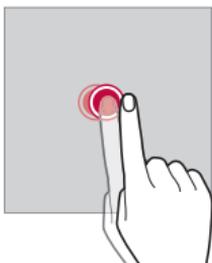


拖动

触摸项目，例如应用程序或小组件，然后以受控动作将您的手指移动至另一个位置。您可以使用此手势来移动一个项目。

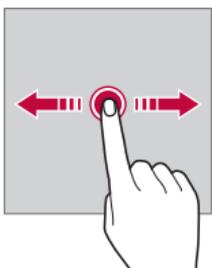


滑动

用您的手指触摸屏幕，并没有停顿地快速移动它。您可使用该手势在列表、网页、相片、屏幕等中滚动。

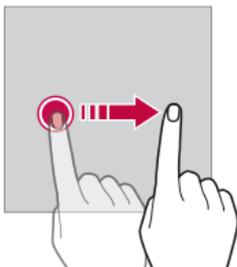

捏合与张开

将两根手指捏合以缩小，例如图片或地图。要放大，请张开手指。

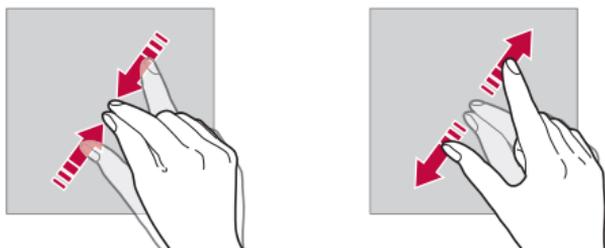

- 切勿让触摸屏遭受过度的物理撞击。您将可能损坏触摸传感器。



- 如果在磁性、金属或导电材料附近使用设备，则可能会发生触摸屏故障。
- 如果在明亮光线（如阳光直射）下使用设备，可能会看不见屏幕，具体视您的位置而定。请在阴凉的位置或环境光线不太明亮但亮度足以阅读书籍的位置使用设备。
- 请勿过度用力按压屏幕。
- 用指尖轻轻点击所需的选项。
- 如果在戴手套时或用指甲尖端点击，触摸控制可能无法正常操作。
- 如果屏幕潮湿，触摸控制可能无法正常操作。
- 如果将屏幕保护膜或购自在线或线下商店的配件连接到设备，触摸屏可能无法正常工作。

主屏

主屏幕概览

主屏幕是进入设备上各种功能和应用程序的起点。在屏幕上点击  以直接转至主屏幕。

您可以在主屏幕管理所有应用和小部件。向左或向右滑动接口以快速查看所有安装的应用程序。

主屏幕布局

可以查看主屏幕上的所有应用程序并管理小部件和文件夹。



- 主屏幕可能会有所不同，具体视服务供应商或软件版本而定。

- **状态栏：**查看状态图标、时间和电池电量。
- **天气小部件：**查看特定区域的天气和时间信息。
- **Google 搜索小组件：**通过输入说出或写下的关键字，执行 Google 搜索。


- **文件夹：**按您的喜好创建文件夹来对应用程序进行分组。
- **页面图标：**显示主屏幕画布总数。点击所需的页面图标，转到所选的页面。将突出显示反映当前画布的图标。
- **快速访问区：**将主要应用程序固定在屏幕底部，以便可从任何任意主屏幕画布进入。
- **主屏幕触摸按钮**
 - ◀：返回到上一屏幕。关闭键盘或弹出窗口。
 - ○：点击以转至主屏幕。要启动 Google 搜索，请点住。
 - □：点击该项可查看最近使用的应用程序列表或从该列表运行应用程序。要删除所有最近使用的应用程序，点击**全部清除**。要通过多窗口功能同时使用两个应用程序，可在使用应用程序时点住图标。
 - ↻：选择您要使用的 SIM 卡。点按配置双 SIM 卡设置。

编辑主屏幕触摸按钮

您可以重新排列主屏幕触摸按钮或将常用功能添加到主屏幕触摸按钮区域。

点击 ○ > **设置** > **显示屏** > **主页触摸按钮** > **按钮组合**，然后自定义设置。

- 本设备提供了多项功能，包括Quick多任务、通知和捕获+。最多可添加 5 个项目。

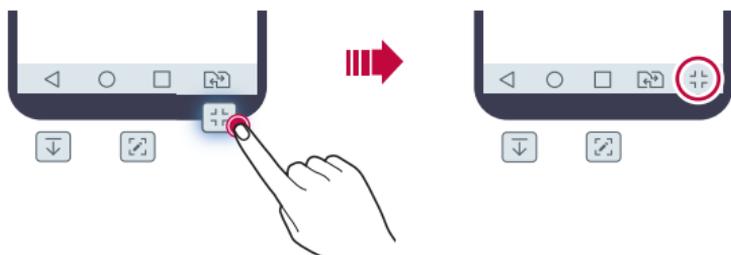

状态图标

当有未读消息、日历事件或报警的通知时，状态栏将显示相应的通知图标。通过查看状态栏中显示的通知图标，检查设备的状态。

	无信号
	数据正在通过网络传输中
	闹钟已设置
	振动模式开启
	蓝牙开启
	通过 USB 连接到计算机
	电池电量
	飞行模式开启
	未接来电
	WLAN已连接
	静音模式开启
	GPS 开启
	热点开启
	无 SIM 卡
	NFC 开启




- 某些图标可能会显示不同或可能根本未显示，具体视设备状态而定。根据您使用设备的实际环境参阅图标。
- 显示的图标可能会有所不同，具体视区域或服务供应商而定。

通知面板

通过在主屏幕上向下拖动状态栏，您可以打开通知面板。


- 要打开快速访问图标列表，可向下拖动通知面板或点击 。
- 要重新排列、添加或删除图标，可点击**编辑**。
- 如果您点住图标，将显示相应功能的设置屏幕。

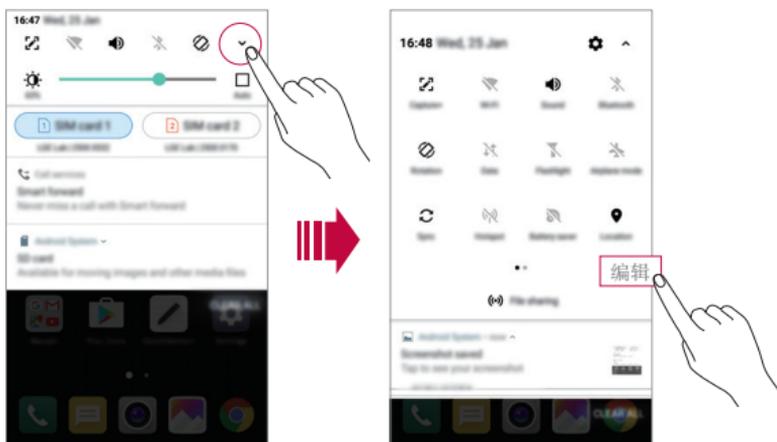

切换屏幕方向

您可以根据设备的实际方向将屏幕方向设为自动切换。
在通知面板上，从快速访问图标列表中轻触**旋转**。

也可以点击 **○ > 设置 > 显示屏** 然后启用**自动旋转屏幕**。

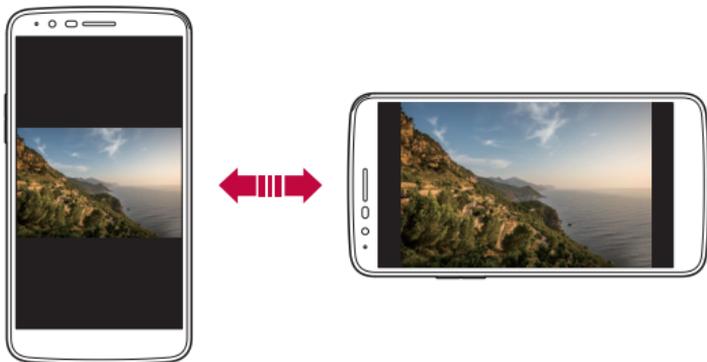

编辑主屏幕


在主屏幕中，点住空白处，然后从下面选择所需的操作。

- 若要重新排列主屏幕画布，请点住一个画布，然后将其拖到其他位置。
- 要将小组件添加至主屏幕，可点住主屏幕的空白处，然后选择**窗口小部件**。
- 要更换主题，可点住主屏幕的空白处，然后选择**主题**。
或者，点击 **○ > 设置 > 显示屏 > 主题**，然后选择要应用至设备的主题。
要配置主屏幕设置，可点住主屏幕的空白处，然后选择**主屏幕设置**。请参阅**主屏幕设置**以了解详细信息。
- 要查看或重新安装卸载的应用程序，可点住主屏幕的空白处，然后选择**卸载的应用程序**。请参阅**卸载的应用程序**以了解详细信息。

查看背景主题

您可以隐藏主屏上的应用程序和小工具，仅查看背景图像。在主屏上张开两根手指。

- 若要返回到显示应用程序和小部件的原始屏幕，请在主屏幕中捏合您的手指或点击 ◀。

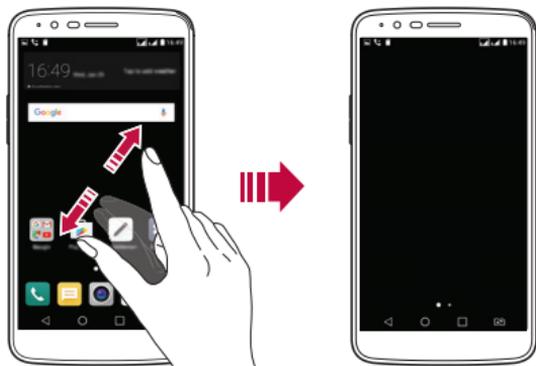

在主屏幕中移动应用程序

在主屏幕中，点住一个应用程序，然后将其拖到其他位置。

- 若要在主屏幕底部保留常用的应用程序，请点住一个应用程序，然后将其拖到底部的快速访问区。
- 若要从快速访问区域中删除图标，请将该图标拖到主屏幕。

从主屏使用文件夹

创建文件夹

在主屏上，触摸并按住应用程序，然后将其拖放至其它应用程序上。

- 新的文件夹将被创建，相关应用程序将被添加至此文件夹。

编辑文件夹

在主屏上，轻触文件夹，然后执行以下操作之一。

- 要编辑文件夹名称和颜色，轻触文件夹名称。
- 要添加应用程序，触摸并按住应用程序，然后将其拖放到文件夹上，然后松开。
- 要删除文件夹中的应用程序，触摸并按住此应用程序，然后将其拖放至文件夹外面。如果删除的应用程序是文件夹中现有的唯一应用程序，则会自动移除文件夹。
- 您还可以在文件夹中点击 **+** 后添加或删除应用程序。

主屏幕设置

您可以自定义主屏幕设置。

1 点击 **○ > 设置 > 显示屏 > 主屏**。

2 自定义以下设置：

- **选择主页：**选择主屏模式。
- **壁纸：**更改主屏背景壁纸。
- **屏幕点击效果：**选择主屏画布切换时应用的效果。
- **应用程序：**设置应用程序在主屏上的排序方式。
- **网格：**更改主屏的应用程序排列模式。
- **隐藏应用：**选择要在主屏中隐藏哪些应用程序。

屏幕锁定

屏幕锁定概述

如果按“电源/锁定键”，设备屏幕将自行关闭并锁定。设备闲置指定时间后，也会发生这种情况。

如果在未设置屏幕锁定时按下电源/锁定键，主屏将立即显示。

要确保安全并防止对设备的非法访问，设置屏幕锁定。



- 屏幕锁定可防止设备屏幕上不必要的触摸输入并降低电池耗电量。我们建议，在不使用设备时激活屏幕锁定。

配置屏幕锁定设置

可以使用多个选项配置屏幕锁定设置。

- 1 点击 **○ > 设置 > 显示屏 > 锁定屏幕 > 选择屏幕锁定**，然后选择喜欢的方式。
- 2 自定义以下设置：
 - **无**：停用屏幕锁定功能。
 - **滑动**：滑动屏幕以解锁屏幕。
 - **轻敲解码**：按照一种方式轻触屏幕空格，以解锁屏幕。
 - **图案**：绘制图案以解锁屏幕。
 - **PIN**：输入数字密码以解锁屏幕。
 - **密码**：输入字母数字组成的密码以解锁屏幕。
 - **指纹**：通过指纹解锁屏幕。



- 如果您尝试错误解锁设备 5 次，则屏幕会被锁定 30 秒。

安全启动设置

选择轻敲解码、图案、PIN 码或密码作为屏幕锁定方式时，您可以将设备配置为在打开设备时锁定，以保护您的数据。

- 除紧急呼叫以外，您不能使用所有功能，直至解锁设备。
- 如果您忘记了解密密码，将无法恢复加密数据和个人信息。

锁定屏幕设置

您可以自定义以下锁定屏幕设置。

1 点击 **○ > 设置 > 显示屏 > 锁定屏幕**。

2 自定义设置：

- **选择屏幕锁定：**选择屏幕锁定方式。
- **Smart Lock：**选择受信任的项目，因此，如果其中一个出现，设备将自动解锁。
- **壁纸：**更改锁定屏幕背景壁纸。
- **时钟：**选择时钟的显示类型，以在锁定屏幕上显示。
- **快捷方式：**添加应用程序快捷方式，然后通过拖动屏幕上的应用程序快捷方式，直接从锁定屏幕上访问应用程序。
- **手机丢失时的联系人信息：**在锁定屏幕上显示紧急联系人信息。
- **锁定计时器：**设置闲置时间，这段时间过去后，设备将自动锁定。
- **电源按钮立即锁定：**按下电源/锁定键后，立即锁定屏幕。



- 可用设置项目可能有所不同，具体取决于选定屏幕锁定方式。

轻敲唤醒

您可以通过双击屏幕打开或关闭屏幕。



- 此选项仅在 LG 提供的主屏上可用。其可能在自定义启动器或用户安装的主屏上无法正常运行。
- 轻触屏幕时，使用指尖。不要使用指甲。
- 要使用轻敲唤醒功能，确保近程/光传感器未被贴纸或任何其它异物挡住。

打开屏幕

双击屏幕中间。

- 轻触屏幕顶部或底部可能会降低识别率。

关闭屏幕

双击主屏的空白区域。

也可以双击状态栏的空白区域。

轻敲解码

您可以通过创建自己的轻敲解码来解锁屏幕。当屏幕关闭时，您可以按指定顺序轻触屏幕直接访问主屏幕。



- 您可以将轻敲解码与轻敲唤醒功能一起使用。
- 确保在轻触屏幕时使用指尖。

创建轻敲解码

- 1 点击 **○** > **设置** > **显示屏** > **锁定屏幕** > **选择屏幕锁定** > **轻敲解码**。
- 2 按自己选择的方式轻触方格以创建轻敲解码，然后轻触**下一步**。
- 3 再次输入创建的轻敲解码以进行验证，然后轻触**确认**。

使用轻敲解码解锁屏幕

输入创建的轻敲解码以解锁屏幕。

屏幕关闭时，在触摸屏上输入您的轻敲解码。

- 还可在锁定屏幕打开时输入轻敲解码。

存储卡加密

您可以对存储卡上保存的数据进行加密和保护。不能从其它设备访问存储卡中的加密数据。

- 1 点击 **○** > **设置** > **常规** > **指纹 & 安全性** > **加密 SD 卡存储**。
- 2 阅读存储卡加密的屏幕概览，然后轻触**继续**以继续操作。
- 3 选择选项并轻触**现在加密**：
 - **新文件加密**：仅加密在加密后保存在存储卡上的数据。
 - **完全加密**：加密当前保存在存储卡上的所有数据。
 - **排除媒体文件**：加密所有文件，但音乐、照片和视频等媒体文件除外。



- 要加密存储卡，确保已使用 PIN 或密码设置屏幕锁定。
- 存储卡加密开始后，某些功能将不可用。
- 如果正在加密时设备关闭，加密过程将失败，某些数据可能损坏。因此，开始加密之前，务必检查电池电量是否充足。
- 只能从文件加密所在的设备访问加密文件。
- 不能在其它 LG 设备上使用加密存储卡。要在其它移动设备上使用加密存储卡，请格式化此卡。
- 甚至在设备没有安装存储卡时，也可以激活存储卡加密。加密后安装的任何存储卡将自动加密。

截图

您可以对查看的当前屏幕进行截图。

通过快捷键

- 同时按住电源/锁定键和音量调低 (-) 键至少两秒。
- 轻触电源/锁定键一次，然后立即将其按住。您的手指必须一直放在电源键上，直到完成屏幕截图。



- 可以从**图片库**下的 **Screenshots** 文件夹中查看屏幕截图。

通过捕获+

在要截图的屏幕上，向下拖动状态栏，然后点击 。



- 屏幕关闭或锁定时，您可以按下音量调高 (+) 键两次以访问**捕获+**。要使用此功能，点击  > **设置** > **常规**，然后打开**快捷键**。
- 请参阅 [在屏幕截图上编写备注](#) 以了解详细信息。

输入文本

使用智能键盘


您可以使用智能键盘输入和编辑文本。

借助智能键盘，您可以在键入时查看文本，而不必在屏幕与传统键盘之间来回切换。这使您可以在键入时轻松发现并纠正错误。



移动光标

借助智能键盘，您可以将光标移至所需位置。键入文本时，触摸并按住空格键，然后向左或向右拖动。

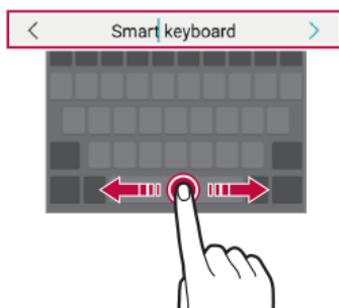


• 此选项仅在 QWERTY 键盘上可用。

建议的字词

智能键盘将自动分析您的使用方式，并在您键入时建议常用字词。您使用设备的时间越长，建议就越准确。

输入文本，然后轻触建议的字词。


- 选定字词将自动输入。您无需手动键入该字词的每个字母。

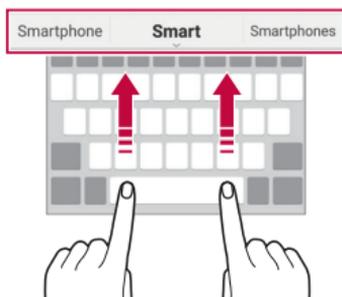

更改 QWERTY 键盘布局

您可以添加、删除或重新布置键盘的底行。

- 1 点击 **○ > 设置 > 常规 > 语言和键盘 > LG 键盘 > 键盘高度和布局 > QWERTY 布局**。
您也可以轻触键盘上的 ，然后轻触 **键盘高度和布局 > QWERTY 布局**。
- 2 轻触底行上的键，然后将其拖放至其它位置。

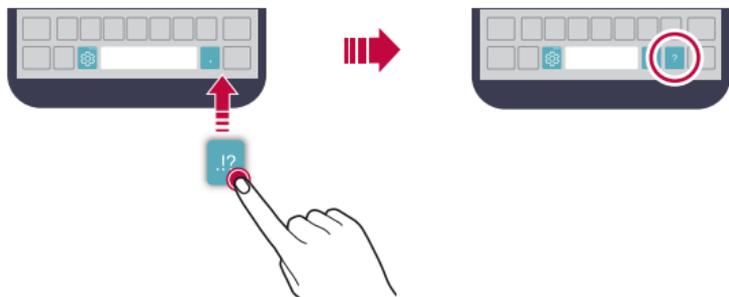




- 此选项在 QWERTY、QWERTZ 和 AZERTY 键盘上可用。
- 某些语言不支持此功能。

自定义键盘高度

您可以自定义键盘高度，以在键入时最大程度地提升手部舒适度。

- 1 点击 **○ > 设置 > 常规 > 语言和键盘 > LG 键盘 > 键盘高度和布局 > 键盘高度**。
或者，轻触键盘上的 ，然后轻触**键盘高度和布局 > 键盘高度**。
- 2 调整键盘高度。

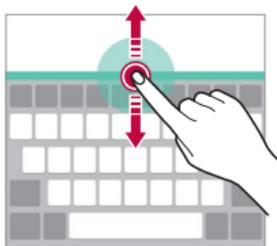

选择横向键盘模式

您可以从多个选项中选择横向键盘模式。

- 1 点击 **○ > 设置 > 常规 > 语言和键盘 > LG 键盘 > 键盘高度和布局 > 横向键盘类型**。
您也可以轻触键盘上的 ，然后轻触**键盘高度和布局 > 横向键盘类型**。
- 2 选择键盘模式。

分离键盘

您可以在屏幕处于横向模式时将键盘分为两半，然后将每个部分置于屏幕的各侧。

点击 **○ > 设置 > 常规 > 语言和键盘 > LG 键盘 > 键盘高度和布局 > 分离键盘**。

您也可以轻触键盘上的 ，然后轻触**键盘高度和布局 > 分离键盘**。



- 将设备旋转至横向模式，以将键盘分离至两侧。要合并或分离键盘，在键盘上并拢或分开手指。



单手操作模式

您可以将键盘移至屏幕一侧，以便单手使用键盘。

1 点击 **○ > 设置 > 常规 > 语言和键盘 > LG 键盘 > 键盘高度和布局 > 单手操作**。

您也可以轻触键盘上的 ，然后轻触**键盘高度和布局 > 单手操作**。

2 按下键盘旁边显示的箭头，按照所需方向移动键盘。



使用语音输入文本

在键盘上，触摸并按住 ，然后选择 。



- 要最大程度地进行语音命令识别，请说话保持清晰。
- 要用语音输入文本，确保设备连接至网络。
- 要选择语音识别语言，轻触语音识别屏幕上的  > **语言**。
- 此功能可能不受支持或支持的语言可能有所不同，具体取决于服务区。

在键盘中添加语言

您可以为键盘输入添加更多语言。

- 1 点击  > **设置** > **常规** > **语言和键盘** > **LG 键盘** > **选择语言**。
- 2 选择要添加的语言。

复制和粘贴

您可以从应用程序中剪切或复制文本，然后将其粘贴到相同应用程序中。或者，可以运行其它应用程序，然后将文本粘贴到其中。

- 1 触摸并按住要复制或剪切的文本周围。
- 2 拖动  /  以指定要复制或剪切的区域。
- 3 选择**剪切**或**复制**。
 - 剪切或复制的文本会自动添加到剪贴板。
- 4 触摸并按住文本输入窗口，然后选择**粘贴**。



- 如果没有复制或剪切项目，**粘贴**选项不会显示。

剪切任务栏

如果您复制或剪切图像或文本，它会自动保存至剪切任务栏，且您可随时将其粘贴到任意区域。

- 1 在键盘上，触摸并按住 ，然后选择 。
您也可以触摸并按住文本输入窗口，然后选择**剪切任务栏**。
- 2 从剪切任务栏中选择一个项目，然后进行粘贴。
 - 最多可将 20 个项目保存至剪切任务栏。
 - 点击  以锁定已保存项目，以防将其删除，即便已超过最大数量。最多可以锁定十个项目。要删除已锁定项目，首先为其解锁。
 - 点击  可删除保存至剪切任务栏的项目。



• 某些下载的应用程序可能不支持剪切任务栏。

请勿打扰

您可以在特定时间范围内限制通知或静音通知，以免打扰。

- 1 点击  > **设置** > **声音和通知** > **请勿打扰**，然后拖动  以将其激活。
- 2 轻触**声音和振动**，然后选择所需模式：
 - **仅优先级**：接收选定应用程序的声音或振动通知。即便已启用**仅优先级**，闹钟仍会响起。
 - **全部静音**：禁用声音和振动。

内容共享

从其它设备播放内容

您可以从电视播放保存在设备上的照片、视频或歌曲。

- 1 将电视与您的设备连接到相同的 WLAN 网络。
- 2 从**图片库**或**音乐**应用程序查看项目时，点击 **⋮ > 在其他设备上播放**。
- 3 选择要连接的电视。



• 要使用 Chromecast，Google Play 服务应保持为最新。

在附近设备上查看内容

您可以从多种设备上查看内容，例如计算机、NAS 或移动设备，方法是使用**图片库**或**音乐**应用程序。

连接设备

将您的设备及其它设备（支持 DLNA 功能）连接至相同无线网络。



• 确保设备和已连接设备上均已激活文件共享（DLNA）。

搜索附近设备

您可以在应用程序中选择**附近设备**菜单，以查看相同网络中 DLNA 设备的列表。

如同在设备上使用一样，使用附近设备中的内容。

收发文件

您可以在设备与其它 LG 设备、平板电脑或计算机之间共享文件。

发送文件

从**图片库**、**文件管理器**或**音乐**应用程序中，点击  > **分享**或 ，然后在文件分享列表中选择设备。

接收文件

向下拖动状态栏，点击 ，然后轻触**文件共享**。

如果您的设备不支持文件共享功能，点击  > **设置** > **网络** > **共享与连接** > **文件共享** > **SmartShare Beam** 。



- 确保设备已连接至与文件传输目标设备相同的无线网络。
- 确保在设备和目标设备上均已激活文件共享功能。

将文件发送至计算机

您可以快速将大量文件发送至计算机。

- 1 在计算机上安装 LG Bridge。
- 2 在计算机上启动 LG Bridge，然后使用您的 LG 帐户登录。
- 3 点击  > **设置** > **网络** > **共享与连接** > **LG AirDrive**，然后使用您的 LG 帐户登录。



- 您可以从 LG 手机网站 (www.lg.com) 下载 LG Bridge。



03

有用的应用程序

安装和卸载应用程序

安装应用程序

访问应用程序商店，以搜索和下载应用程序。

- 您可以使用 **Play 商店** 和应用程序商店或服务提供商提供的应用程序商店。



- 某些应用程序商店可能需要您创建帐户并登入。
- 某些应用程序可能收费。
- 如果您使用移动数据，可能按数据使用情况收费，具体取决于定价方案。

卸载应用程序

从设备上卸载不再使用的应用程序。

使用触摸并按住手势卸载

在主屏上，触摸并按住要卸载的应用程序，然后将其拖放到屏幕顶部的**卸载**上。

您也可以触摸并按住应用程序，然后轻触带有  的应用程序或小工具以进行卸载。

- 如果应用程序的卸载时间未满 24 小时，则可重新安装。请参阅[卸载的应用程序](#)以了解详细信息。

通过设置菜单卸载

点击  > **设置** > **常规** > **应用程序**，选择应用程序，然后轻触**卸载**。

从应用程序商店卸载应用程序

要卸载应用程序，请访问从中下载应用程序的应用程序商店并加以卸载。



- 某些应用程序不可由用户卸载。

卸载的应用程序

您可以在主屏上查看卸载的应用程序。也可以重新安装卸载时间未满 24 小时的应用程序。

1 点击  > **卸载的应用程序**。

2 激活所需功能：

- **重新安装**：重新安装选定应用程序。
- ：从设备上永久删除卸载的应用程序。



- 卸载 24 小时后，卸载的应用程序将自动从设备中删除。如果您需要重新安装卸载的应用程序，必须再次从应用程序商店下载。
- 此功能仅在默认主屏上激活。如果在使用 EasyHome 屏幕或其它启动器时卸载应用程序，这些应用程序将立即从设备上永久删除。

手机

语音通话

使用可用方式之一进行呼叫，例如手动输入电话号码或者从联系人列表或最近呼叫列表中拨打电话。

从键盘拨打电话

- 1 点击  >  > **拨号**。
- 2 使用选择的方式拨打电话：
 - 输入电话号码并点击 。
 - 触摸并按住快速拨号号码。
 - 轻触联系人列表中某联系人姓名的首字母以搜索联系人，然后点击 。



- 要输入“+”以拨打国际电话，触摸并按住 0。
- 请参阅[添加联系人](#)，了解有关如何将电话号码添加至快速拨号列表中的详情。

从联系人列表拨打电话

- 1 点击  >  > **联系人**。
- 2 从联系人列表中选择联系人，然后点击 。

接听电话

要接听电话，将  拖放至来电屏幕的圆圈外。

- 连接有立体声耳机时，您可以使用耳机上的呼叫/结束按钮进行呼叫。
- 要通过按下电源/锁定键结束呼叫，点击  > **设置** > **网络** > **通话** > **接听和结束呼叫**，然后启用**使用电源键结束呼叫**。

拒接来电

要拒绝来电，在来电屏幕中拖动 。

- 要发送拒接信息，在屏幕中拖动拒接信息选项 。
- 要添加或编辑拒接信息，点击  > **设置** > **网络** > **通话** > **拦截来电和拒绝信息** > **用消息拒绝**。
- 有来电时，按音量调高 (+)、音量调低 (-) 或电源/锁定键可静音铃声、振动或保持通话。

查看未接来电

如果有未接来电，屏幕顶部的状态栏将显示 。

要查看未接来电详情，向下拖动状态栏。您也可以点击  >  > **通话记录**。

通话时的可访问功能

通话时，您可以通过轻触屏幕按钮访问各种功能：

- **联系人**：通话时查看联系人列表。
- **结束**：结束通话。
- **拨号键盘**：显示或隐藏拨号键盘。
- **扬声器**：启用扬声器电话功能。
- **静音**：将您的语音静音，使他人听不到您的语音。
- **蓝牙**：将呼叫切换至已配对和连接的蓝牙设备。
- **⋮**：访问更多呼叫选项。



- 可用设置项目可能会因地区或服务提供商的不同而异。

进行三方通话

您可以在通话时向其他联系人拨打电话。

- 1 通话时，点击  > **添加通话**。
- 2 输入电话号码并点击 。
 - 屏幕上将同时显示两个通话，第一个通话将被保持。
- 3 要开始电话会议，轻触**合并通话**。



- 您可能需要为每个通话付费。有关详细信息，请咨询您的服务提供商。

查看呼叫记录

要查看最近的呼叫记录，点击  >  > **通话记录**。然后，您可以使用下列功能：

- 要查看详细的通话记录，选择联系人。要向选定联系人拨打电话，点击 。
- 要删除呼叫记录，点击  > **删除**。



- 显示的呼叫持续时间可能与呼叫费用有所不同。有关详细信息，请咨询您的服务提供商。

配置呼叫选项

您可以配置多种呼叫选项。

- 1 点击  >  > **拨号或通话记录**。
- 2 点击  > **通话设置**，然后根据您的偏好配置选项。

信息

发送信息

您可以使用信息应用程序，创建信息并将其发送给您的联系人。



- 在国外发送信息可能会产生额外费用。有关详细信息，请咨询您的服务提供商。

- 1 点击  > 。
- 2 点击 。
- 3 指定收件人并创建信息。
 - 要附加文件，点击 。
 - 要访问可选菜单项，点击 。
- 4 轻触**发送**以发送信息。

读取信息

您可以查看按联系人整理的交流信息。

- 1 点击  > 。
- 2 从信息列表中选择联系人。

配置信息设置

您可以根据喜好更改信息设置。

- 1 点击  > 。
- 2 从信息列表中点击  > **设置**。

相机

打开相机

您可以拍照或录制视频，以记录所有难忘时刻。

点击  > .



- 拍照或录制视频之前，使用软布擦拭相机镜头。
- 注意不要用手指或其它异物弄脏相机镜头。
- 如果电池电量低于 5%，使用相机前，先为电池充电。
- 用户手册中的图片可能与实际设备有所不同。
- 可以从 **图片库** 查看或编辑照片和视频。
请参阅 **图片库概述** 以了解详细信息。

自动模式

您可以选择多种拍摄模式和选项，拍照或录制视频。



拍照

- 1 轻触拍摄对象以使相机对焦。
- 2 点击  拍照。
 - 您也可以按音量调低 (-) 或音量调高 (+) 键拍照。



- 当屏幕关闭或锁定时，通过按下音量调低 (-) 键两次可打开相机。要激活此功能，点击  > **设置** > **常规** > **快捷键**，然后启用**打开捕获+/相机**。

录制视频

- 1 轻触拍摄对象以使相机对焦。
- 2 点击 。
 - 要拍照并同时录制视频，点击 。
 - 要暂停视频录制，点击 。要继续录制视频，点击 。
- 3 点击  结束视频录制。

自定义相机选项

您可以根据自己的偏好自定义各种相机选项。
轻触屏幕上的 。



- 可用选项可能有所不同，具体取决于选定的相机（前置相机镜头或后置相机镜头）及选定的照相机模式。

照片尺寸	为照片拍摄选择宽高比和大小值。
视频分辨率	为视频录制选择分辨率和大小值。
HDR	即使是逆光拍摄，也能获取色彩鲜活的照片和补偿效果。这些功能通过设备相机中的高动态范围（HDR）技术提供。
计时器	将计时器设为指定时间后自动拍照。
语音快门	通过语音命令拍照。
标签位置	使用 GPS 位置数据保存图像。
网格	显示导向网格，以便您可以根据水平和垂直参考线拍照或录制视频。
存储	选择任何内部存储器和 SD 卡。 (存储卡插入时可用)。
简单视图	从相机屏幕隐藏所有菜单。

前置相机镜头上的附加选项

自拍	自定义自拍设置。 <ul style="list-style-type: none"> • 手势拍摄：使用手势拍摄功能拍照。 • 人脸自拍：相机检测到脸部时拍照。
手势视图	将手机靠近拍照之后查看您的自拍。
另存为翻转	自拍后另存为翻转图像。

全景

您可以按一个方向移动相机，为宽景拍照并拼接连拍，以创建全景照片。

- 1 在自动模式屏幕中，点击**模式** > .
- 2 点击 ，然后按一个方向缓慢移动相机。
 - 按照指导线中的箭头方向移动设备。
- 3 点击  结束拍摄。



相机应用程序中的其它有用功能

连拍

您可以连续拍摄照片以创建动态影像。

在相机屏幕中，触摸并按住 .

- 按下  时，连拍将快速进行。



- 最多可拍摄三十（30）张连续照片。

简单视图

点击  > **简单视图** 可隐藏相机屏幕中的菜单。点击  可显示这些菜单。

AE/AF 卡锁

您可以通过点触并按住相机屏幕来修复当前曝光级别和对焦位置。要关闭此功能，轻触屏幕上的空白区域。



放大或缩小

拍照或录制视频时，可在相机屏幕上进行放大或缩小。

- 在相机屏幕上，并拢或张开双指可进行放大或缩小，然后使用显示的 +/- 滑动条。




- 在自拍模式下使用前置相机镜头时，缩放功能将不可用。

在相机之间切换

您可以在前置相机镜头与后置相机镜头之间切换，以适应环境。

在相机屏幕中，点击  或按任何方向拖动屏幕，可在前置相机镜头与后置相机镜头之间切换。

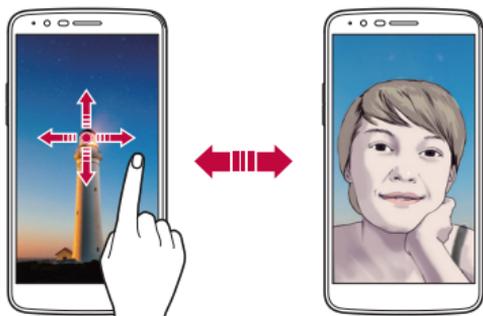

- 使用前置相机镜头可进行自拍。有关详细信息，请参阅[自拍](#)。

自拍

您可以使用前置相机镜头在屏幕上查看脸部并进行自拍。


手势拍摄

您可以使用手势进行自拍。

向前置相机镜头显示您的手掌，然后握紧拳头。

也可以握紧拳头，然后朝前置相机镜头打开拳头。

- 三秒后，照片将拍摄。

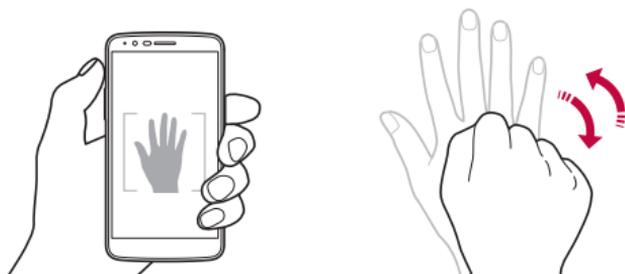



- 要使用此功能，切换至前置相机镜头模式，然后点击  > **自拍** > **手势拍摄**。
- 确保您的手掌和拳头位于参考线内，以便摄像头可以检测到它们。
- 使用部分相机功能时，此功能可能不可用。

人脸自拍

您可以使用人脸检测功能轻松便利地进行自拍。您可以设置设备，以便在看到屏幕时，前置相机镜头检测到您的脸并自动进行自拍。

- 前置相机镜头检测到您的脸部时，白色引导框将显示。如果引导框中的物体停止移动，引导框颜色将变蓝，然后相机将拍照。




- 点击  > **自拍** > **人脸自拍** 以启用“人脸自拍”功能。

间隔拍摄

您可以按一定间隔进行自拍。


使用前置相机镜头时，触摸并按住 。也可以向摄像头展示您的手掌，然后迅速握紧拳头两次。

- 在三秒的计时器延迟后，四张照片将以约两秒的时间间隔拍摄。

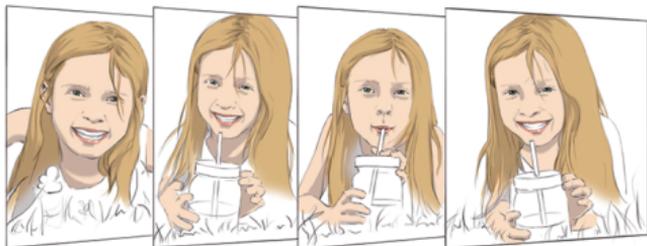

手势视图

使用前置相机镜头进行自拍后，您可以将屏幕靠近脸部，以立即预览自拍。

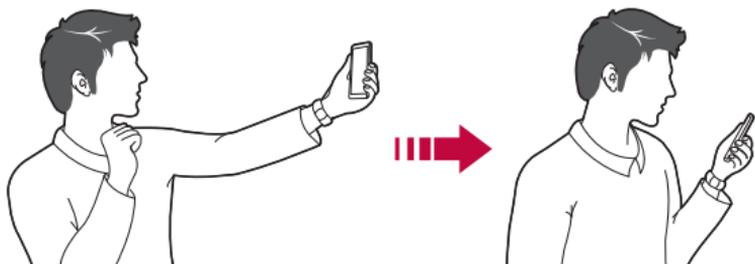

- 点击  > **手势视图** 以启用手势视图功能。
- 每次拍摄一张照片时，只有一个预览可用。
- 如果在预览屏幕中旋转设备，屏幕将切换为相机模式。

另存为翻转

使用前置相机镜头拍照之前，点击  > **另存为翻转**。图像将水平翻转。



- 使用前置相机镜头时，您可以在相机选项中更改自拍方式。请参阅 [自定义相机选项](#) 以了解详细信息。

图片库

图片库概述

您可以查看和管理本设备上保存的照片和视频。

- 1 点击  > 。
 - 保存的照片和视频将按文件夹显示。
- 2 轻触文件夹并选择文件。
 - 在全屏模式下查看选定文件。
 - 查看照片时，向左或向右滑动可查看上一张或下一张照片。
 - 查看视频时，向左或向右滑动可后退或快进视频。



- 某些文件格式可能不受支持，具体取决于安装的软件。
- 由于编码原因，一些文件可能无法打开。
- 超过大小限制的文件可能会引起错误发生。

查看照片




- 要显示菜单项，轻触屏幕。要隐藏菜单项，再次轻触屏幕。

编辑照片

- 1 查看照片时，点击 。
- 2 使用各种效果和工具编辑照片。
- 3 轻触**保存**以保存更改。
 - 更改将覆盖原始文件。
 - 要将已编辑照片另存为其它文件，点击 **⋮ > 保存副本**。

播放视频

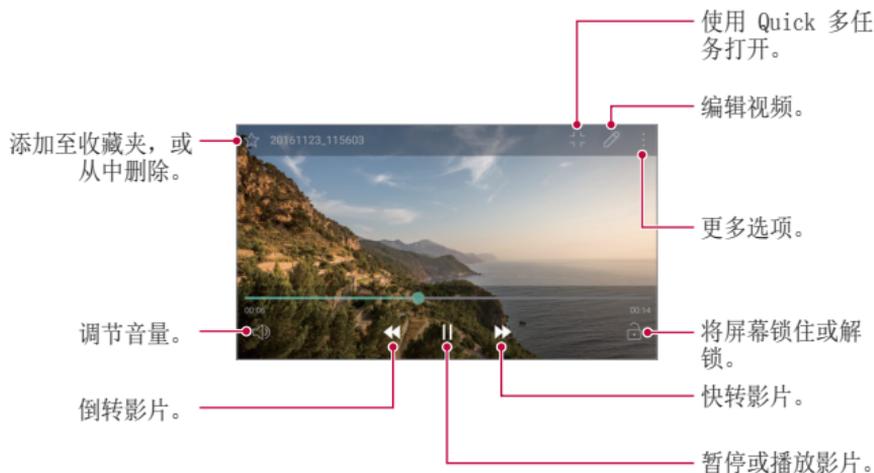

- 若要调节音量，请向上或向下拖动视频屏幕的右侧。
- 若要调节屏幕亮度，请向上或向下拖动视频屏幕的左侧。

删除文件

您可以通过以下选项删除文件：

- 触摸并按住文件列表中的文件，然后轻触**删除**。
- 轻触文件列表中 ，然后删除所需文件。
- 已删除文件将自动移至**已删除**，您可以在 7 天内将其恢复至图片库。
- 在图片库中，点击  > **已删除**。点击  可完全删除文件。此时，文件将无法恢复。

分享文件


您可以使用以下选项来分享文件：

- 在查看照片或视频时，可以点击 ，然后按您需要的方法分享文件。
- 从文件列表点击 ，以选择文件，然后使用所需的方式分享文件。

音乐

您可以播放和管理歌曲或音乐专辑。

- 1 点击  > **LG** > **音乐**。
- 2 选择一个类别。
- 3 选择一个音乐文件。

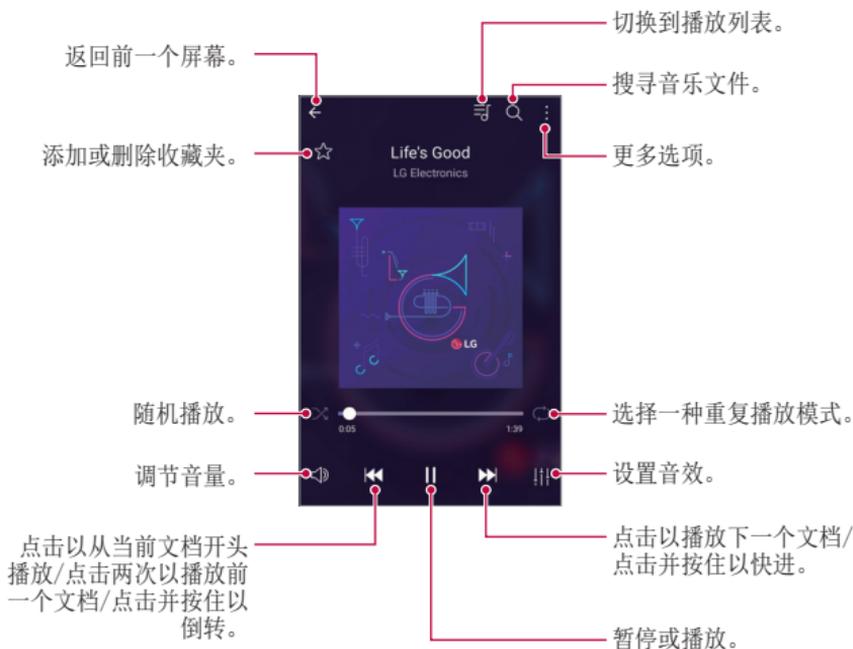

- 某些文件格式可能不受支持，具体视安装的软件而定。
- 超出大小限制的文件可能会导致错误。
- 音乐文件可能受到国际版权所有者或版权法的保护。您可能必须获得法律许可，然后才能复制音乐文件。若要下载或复制音乐文件，请首先查看相关国家/地区的版权法。

电子邮件

电子邮件概述

您可以在设备中注册电子邮件帐户，然后从您的设备查看和发送电子邮件。



- 如果您使用移动数据，可能按数据使用情况收费，具体取决于定价方案。有关详细信息，请咨询您的服务提供商。

注册电子邮件帐户

首次使用电子邮件应用程序时，注册您的电子邮件帐户。

- 1 点击  > **电子邮件**。
- 2 选择电子邮件服务提供商。
- 3 输入您的电子邮件地址和密码，然后轻触**下一步**注册您的帐户。
 - 要手动注册电子邮件帐户，轻触**手动设置**。

管理电子邮件帐户

要查看或编辑您的电子邮件帐户设置，点击  > **设置**。

- 要添加帐户，轻触**添加帐户**。
- 要删除账户，点击  > **删除帐户**。

打开其它电子邮件帐户

如果已注册多个电子邮件帐户，并且您希望查看其它帐户，点击  并从帐户列表中选择其它帐户。

查看电子邮件

- 1 点击  并选择邮箱。
- 2 从电子邮件列表中选择电子邮件。
 - 电子邮件信息将显示。

发送电子邮件

- 1 点击 。
- 2 输入收件人的电子邮件地址。
- 3 输入主题和信息。
 - 要附加文件，点击 。
 - 要访问可选菜单项，点击 。
- 4 点击  发送电子邮件。

日历

日历概述

您可以使用日历来管理事件和任务。

添加事件

- 1 点击  > 日历。
- 2 选择一个日期，然后点击 。
- 3 输入活动详细信息并轻触**保存**。
 - 如果从日历中轻触一个日期且该日期包含事件，则会出现一个显示事件列表的弹出窗口。轻触弹出窗口中的事件，以查看事件详情。

同步事件

点击  > **需同步的日历**，然后选择要同步的日历。



- 当从设备保存您的事件至您的 Google 帐户时，事件也将自动与 Google 日历同步。随后，您可以将其他设备与 Google 日历同步以便这些设备拥有您的设备一样的事件，从而让您可以在其他设备上管理这些事件。

事件袋

您可以使用事件袋创建事件。

点击  以打开事件袋，然后将内容拖放至日历中的某个日期。

- ：管理图像、文本、备忘录和临时保存的事件。您也可以共享其它应用程序中的文本、图像和备忘录，并将其保存至事件袋。如果在创建事件时轻触**事件袋**，事件将临时保存到事件袋中。
- ：管理没有截止期限的任务，例如事件。

计算器

您可以使用两种类型的计算器：简单计算器和科学计算器。

1 点击  > **工具** > **计算器**。

2 使用键盘进行计算。

- 要使用科学计算器，将位于屏幕右侧的绿色滑块拖动至左侧。
- 要重新启动计算，触摸并按住 **DEL** 按钮。

时钟

闹钟

您可以将闹钟设为在指定时间触发。

- 1 点击  > **时钟** > **闹钟**。
- 2 点击  以添加新闹钟。
- 3 配置闹钟设置并轻触**保存**。



- 如果选择以前设置的闹钟，可以编辑闹钟。
- 要删除闹钟，在屏幕顶部点击 。您也可以触摸并按住闹钟。

世界时钟

您可以查看世界各地城市的当前时间。

- 1 点击  > **时钟** > **世界时钟**。
- 2 点击  并添加城市。

计时器

您可以将计时器设为指定时间后触发闹钟。

- 1 点击  > **时钟** > **计时器**。
- 2 设置时间并轻触**启动**。
 - 要暂停计时器，轻触**暂停**。要恢复计时器，轻触**继续**。
 - 要重置计时器设置，轻触**重置**。
- 3 轻触**停止**以停止计时器闹钟。

秒表

您可以使用秒表记录每圈时间。

- 1 点击 **○ > 时钟 > 秒表**。
- 2 轻触**启动**以启动秒表。
 - 要记录每圈时间，轻触**记录**。
- 3 轻触**暂停**以暂停秒表。
 - 要恢复秒表，轻触**继续**。
 - 要清除所有记录并重新启动秒表，轻触**重置**。

下载

您可以查看、删除或共享通过互联网或应用程序下载的文件。

点击 **○ > 工具 > 下载**。

文件管理器

您可以查看和管理设备 **LG AirDrive** 上保存的文件。

- 1 点击 **○ > 工具 > 文件管理器**。
- 2 点击 **≡** 并选择所需存储位置。

语音备忘录

您可以记录和保存重要事件中的您的语音或他人的语音。录音文件可以播放或共享。

- 1 点击  > **工具** > **录音机**。
- 2 点击 。
 - 要暂停录音，点击 。
 - 要保存录音的位置详情，轻触位置。
 - 要添加活动，轻触活动并在所需日期中添加事件。
- 3 点击  结束录音。
 - 文件将自动保存且试听屏幕将显示。
- 4 点击  以播放录音。
 - 如果点击 ，录音文件将显示。您可以从列表中播放录音文件。

FM 收音机

您可以收听 FM 收音机。

点击  > **工具** > **FM 收音机**。



- 要使用此应用程序，首先将耳机连接到设备。耳机将充当收音机天线。
- 根据具体地区，此功能可能不受支持。

联系人

联系人概述

您可以保存和管理联系人。

点击  > LG > 联系人。

添加联系人

添加新联系人

- 1 在联系人列表屏幕上，点击 。
- 2 输入联系人详细资料并点击**保存**。

导入联系人

您可以从其它存储设备导入联系人。

- 1 在联系人列表屏幕上，点击  > **管理联系人** > **导入**。
- 2 选择要导入的联系人的源位置和目标位置，然后点击**确定**。
- 3 选择联系人并轻触**导入**。

将联系人添加至快速拨号列表

- 1 在联系人列表屏幕上，点击  > **快速拨号**。
- 2 从快速拨号号码中轻触**添加联系人**。
- 3 选择联系人。

搜索联系人

您可以通过以下选项搜索联系人：

- 在联系人列表屏幕上，在搜索框中输入联系人姓名。
- 在联系人列表中上下滚动浏览。
- 从联系人列表屏幕的索引中，轻触联系人的第一个字母。

联系人列表

编辑联系人

- 1 在联系人列表屏幕上，选择联系人。
- 2 在联系人详细资料屏幕上，点击  并编辑详情。
- 3 轻触**保存**以保存更改。

删除联系人

您可以通过以下选项删除联系人：

- 在联系人列表屏幕上，触摸并按住要删除的联系人，然后轻触**删除联系人**。
- 在联系人列表屏幕上，点击  > **删除**。

添加收藏夹

您可以将常用联系人注册为收藏夹。

- 1 在联系人列表屏幕上，选择联系人。
- 2 在联系人详细资料屏幕上，点击 。

创建群组

- 1 在联系人列表屏幕上，点击**群组** >  > **新群组**。
- 2 输入新群组的名称。
- 3 轻触**新增成员**，选择联系人，然后轻触**添加**。
- 4 轻触**保存**以保存新群组。

任务

您可以将任务注册到您的设备，方便日程表管理。

- 1 点击  > **LG** > **任务**。
- 2 点击  添加任务。
- 3 输入任务详细信息，然后点击**保存**。

LG Backup

您可以备份、恢复或移动设备上保存的数据。

- 1 点击  > **手机管理** > **LG Backup**。
也可以点击  > **设置** > **常规** > **备份与重置** > **LG 备份**。
- 2 按照屏幕说明，选择是在设备的预设备份文件夹中备份数据还是将数据复制到其它设备。



- 重置设备可能会删除内部存储器中保存的备份文件。要最大程度地减少数据丢失，将内部存储器中 LG 备份文件夹中的重要备份文件复制到计算机或外部存储器中。



- Google 帐户中的数据不进行备份。当您同步 Google 帐户时，Google 应用程序、Google 联系人、Google 日历、Google 备忘录应用程序数据以及从 Play Store 下载的应用程序将自动存储在驱动器应用程序中。
- 备份文件以文件扩展名 *.lbf 保存在储存卡或内部存储器中的 LG Backup 文件夹下。
- 备份或还原数据之前，将电池充满电，以免在该过程中意外断电。

RemoteCall Service

您的设备可进行远程诊断以解决问题。首先，拨打如下 LG 客户服务中心的电话：



- 要使用此功能，首先必须同意该功能的使用。
- 如果您使用移动数据，可能会根据您购买的套餐收取数据流量费用。

- 1 点击 **○ > 手机管理 > RemoteCall Service**。
- 2 接通到 LG 客户服务中心的通话。
- 3 通话接通后，按照客户服务专员的指示进行操作，输入六位接入码。
 - 您的设备将远程连接并远程支持服务启动。

Chrome

登录 Chrome，然后将打开的选项卡、书签和地址栏数据从计算机导入到您的设备。

Google 应用程序

通过设置 Google 帐户，您可以使用 Google 应用程序。初次使用 Google 应用程序时，将自动显示 Google 帐户注册窗口。如果您没有 Google 帐户，请从您的设备创建一个帐户。请参阅应用程序中的帮助以查看有关如何使用应用程序的详细信息。



- 某些应用程序可能无法操作，具体视区域或服务供应商而定。

文档

创建文档，或者编辑在线创建或来自其他设备的文档。与其他人一起共享和编辑文档。

云端硬盘

上传、保存、打开、共享及整理来自您设备的文件。从应用程序可进入的文件可从任意位置进入，包括在线和离线环境。

Duo

与您的家人、朋友和任何使用此应用的其他人进行视频通话。

Gmail

将您的 Google 电子邮件帐户注册到设备以检查或发送电子邮件。

Google

通过输入文字或说出关键字，使用 Google 来搜索网页、图像、新闻等。

地图

找出您的位置或地图上某个地点的位置。查看地理信息。

照片

查看或共享设备上保存的照片或相册。

Play 电影

使用您的 Google 帐户租借或购买电影。购买内容，然后在任意位置进行播放。

Play 音乐

从 Play 商店购买音乐文件。播放设备上保存的音乐文件。

表格

创建电子表格，或者编辑在线创建或来自其他设备的电子表格。与其他人一起共享和编辑电子表格。

幻灯片

创建演示材料，或者编辑在线创建或来自其他设备的演示材料。与其他人一起共享和编辑演示材料。

YouTube

搜索和播放视频。上传视频，与世界各地的人们共享。



04

手机设置

设置

您可以按照自己的偏好自定义设备设置。

点击  > **设置**。



- 点击 ，然后在搜索框中输入关键字以访问设置项目。
- 点击 ：以更改视图模式。本用户指南假设您使用**标签视图**。

网络

双 SIM 卡

您可以配置 SIM 双卡设置。

1 在设置屏幕上，点击**网络** > **双 SIM 卡**。

2 自定义以下功能：

- **SIM 卡 1**：更改 SIM 卡 1 的名称和图标。
- **SIM 卡 2**：更改 SIM 卡 2 的名称和图标。
- **SIM 卡颜色主题**：更改 SIM 卡的颜色主题。
- **成本节省模式**：激活或停用成本节省模式。在成本节省模式中，如果您向被指定特定 SIM 的联系人拨打电话，此 SIM 将用于通话，即使其它 SIM 处于活动状态，例如其正在使用移动数据。
- **移动数据**：选择要用于移动数据服务的 SIM 卡。您还可以关闭此功能。
- **数据漫游**：选择此选项可以使设备在您位于家庭网络覆盖区域之外漫游时使用移动数据。

WLAN

您可以通过 WLAN 网络连接至附近设备。

连接到 WLAN 网络

- 1 在设置屏幕上，点击**网络** > **WLAN**。
- 2 拖动  以将其激活。
 - 可用 WLAN 网络将自动显示。
- 3 选择网络。
 - 您可能需要输入网络的 WLAN 密码。
 - 对于以前访问过的 WLAN 网络，设备将跳过此过程。如果您不希望自动连接至特定 WLAN 网络，触摸并按住网络，然后轻触**忘记网络**。

WLAN 网络设置

在设置屏幕上，点击**网络** > **WLAN**。

- **切换至移动数据**：如果移动数据连接功能已激活，但是设备无法通过 WLAN 连接至互联网，设备将通过移动数据连接自动连接至互联网。
- ：自定义 WLAN 网络设置。

WLAN 直连

您可以将设备连接至支持直连的其它设备，以与这些设备直接共享数据。您无需使用接入点。您可以通过 WLAN 直连与两个以上的设备连接。

- 1 在设置屏幕上，点击**网络** > **WLAN** >  > **高级 WLAN** > **WLAN 直连**。
 - 支持 WLAN 直连的附近设备将自动显示。
- 2 选择设备。
 - 设备接受连接请求后，连接将进行。



- 使用 WLAN 直连时，电池耗电更快。

蓝牙

您可以将设备连接至支持蓝牙的附近设备，以与这些设备直接交换数据。将您的设备连接至蓝牙耳机和键盘。这可方便控制设备。

与其它设备配对

- 1 在设置屏幕上，点击**网络 > 蓝牙**。
- 2 拖动 以将其激活。
 - 可用的设备将自动显示。
 - 要刷新设备列表，轻触**搜索**。



- 只有设为可见的设备才会显示在列表中。

- 3 从列表选择一个设备。
- 4 按照屏幕说明执行验证。



- 对于以前访问过的设备，此步骤将被跳过。

通过蓝牙发送数据

- 1 选择文件。
 - 您可以发送多媒体文件或联系人。
- 2 点击  **> 蓝牙**。
- 3 选择文件的目标设备。
 - 目标设备接受后，文件将被立即发送。



- 根据文件，文件共享过程可能有所不同。

移动数据

您可以打开或关闭移动数据。您也可以管理移动数据使用。

启用移动数据

- 1 在设置屏幕上，轻触**网络** > **移动数据**。
- 2 拖动 以将其激活。

自定义移动数据设置

- 1 在设置屏幕上，轻触**网络** > **移动数据**。
- 2 自定义以下设置：
 - **移动数据**：设置为在移动网络中使用数据连接。
 - **限制移动数据使用量**：设置移动数据使用限制以便在达到限制时阻止移动数据。
 - **⋮**：自定义移动数据设置。

通话

您可以自定义通话设置，例如语音通话或国际电话选项。



- 某些功能可能不受支持，具体取决于您所在的地区或您的服务提供商。

- 1 在设置屏幕上，轻触**网络** > **通话**。
- 2 自定义设置。

共享与连接

NFC

您可以将设备作为交通卡或信用卡使用。您可以与其他设备共享数据。

- 1 在设置屏幕中，**点击网络 > 共享与连接 > NFC。**
- 2 拖动  以启动该功能。
 - 将您的设备触碰其他支持 NFC 的设备以允许数据共享。



- NFC 天线可能位于不同的位置，具体视设备类型而定。请参阅 [零件概览](#) 了解有关 NFC 天线区域的详细信息。

Android Beam

您可以通过让设备背部触碰其他设备来共享文件。您还可以共享包括音乐、视频或联系人在内的文件，打开其他设备的网页或启动其他设备的应用程序。

- 1 在设置屏幕中，**点击网络 > 共享与连接 > Android Beam。**
- 2 让设备背部触碰其他设备。



- NFC 天线可能位于不同的位置，具体视设备类型而定。

文件共享

您可以在设备与其它 LG 设备或平板电脑之间收发文件。

- 1 在设置屏幕上，轻触**网络 > 共享与连接 > 文件共享。**
- 2 自定义以下设置：
 - **LG Stylus 3:** 更改设备名称。
 - **保存位置:** 设置目标位置，以将其它设备发送的文件保存到其中。

- **文件共享**：允许接收其它设备发送的文件。
- **SmartShare Beam**：通过 SmartShare Beam 与其它设备共享文件。
- **帮助**：您可以查看共享文件的帮助。

媒体服务器

您可以与支持 DLNA 的附近设备共享设备上的媒体内容。

- 1 在设置屏幕上，轻触**网络 > 共享与连接 > 媒体服务器**。
- 2 自定义以下设置：
 - **内容共享**：与附近设备共享设备上的内容。
 - **LG Stylus 3**：设置设备名称。
 - **我的共享内容**：选择要与其它设备共享的媒体内容的类型。
 - **允许设备**：查看可以访问设备内容的设备的列表。
 - **非允许设备**：查看不可以访问设备内容的设备的列表。

LG AirDrive

您可以使用 LG 帐户通过计算机管理设备上保存的文件。您无需 USB 连接。

- 1 在设置屏幕上，点击**网络 > 共享与连接 > LG AirDrive**。
- 2 使用一个 LG 帐户在计算机上登录至 LG Bridge并在设备上登录至 **LG AirDrive**。
 - LG Bridge软件可从 www.lg.com 下载。
- 3 通过计算机管理设备上的文件。

打印

您可以将设备连接至蓝牙打印机，然后打印保存在设备上的照片或文档。

1 在设置屏幕上，轻触**网络** > **共享与连接** > **正在打印**。



- 如果所需打印机不在列表中，从应用程序商店安装打印机驱动程序。

2 拖动 以将其激活。

3 从打印机列表屏幕选择打印机。

- 要添加打印机，点击 **⋮** > **添加打印机**。
- 从打印机列表屏幕点击 **⋮** > **设置**。

4 选择文件，然后点击 **⋮** > **打印**。

- 文件将打印。



- 如果您没有 Google 帐户，轻触**添加帐户**创建帐户。

绑定

USB 绑定

您可以通过 USB 将设备连接至其它设备，然后共享移动数据。

1 使用 USB 数据线将设备与其它设备相连。

2 在设置屏幕上，点击**网络** > **绑定** > **USB 绑定**，然后拖动 以将其激活。



- 此选项将使用移动数据，并可能产生数据使用费用，具体取决于您的定价方案。有关详细信息，请咨询您的服务提供商。
- 连接至计算机时，从 www.lg.com 下载 USB 驱动程序，然后将其安装到计算机上。
- USB 绑定启用时，您不能在设备与计算机之间收发文件。关闭 USB 绑定以收发文件。
- 支持绑定的操作系统是 Window XP 或更高版本，或者 Linux。

WLAN 热点

您可以将设备设为无线路由器，以便其它设备可以通过设备的移动数据连接至互联网。

- 1 在设置屏幕上，点击**网络 > 绑定 > WLAN 热点**，然后拖动  以将其激活。
- 2 轻触**设置 WLAN 热点**，然后输入 WLAN 名称 (SSID) 和密码。
- 3 在其它设备上启用 WLAN，然后在 WLAN 列表中选择设备网络的名称。
- 4 输入网络密码。



- 此选项将使用移动数据，并可能产生数据使用费用，具体取决于您的定价方案。有关详细信息，请咨询您的服务提供商。
- 更多信息请参阅此网站：
<http://www.android.com/tether#wifi>

蓝牙绑定

已连接蓝牙的设备可以通过设备的移动数据连接至互联网。

- 1 在设置屏幕上，点击**网络 > 绑定 > 蓝牙绑定**，然后拖动  以将其激活。
- 2 打开两台设备上的蓝牙，然后将其配对。



- 此选项将使用移动数据，并可能产生数据使用费用，具体取决于您的定价方案。有关详细信息，请咨询您的服务提供商。
- 更多信息请参阅此网站：
http://www.android.com/tether#Bluetooth_tethering

帮助

您可以查看关于使用绑定和热点的帮助。

在设置屏幕上，点击**网络 > 绑定 > 帮助**。

更多

飞行模式

您可以关闭通话和移动数据功能。此模式启用时，不涉及数据的功能（例如游戏和音乐播放）将仍可用。

- 1 在设置屏幕上，点击**网络 > 更多 > 飞行模式**。
- 2 轻触确认屏幕中的**打开**。

移动网络

您可以自定义移动数据设置。

- 1 在设置屏幕上，轻触**网络** > **更多** > **移动网络**。
- 2 自定义以下设置：
 - **网络模式**：选择网络类型。
 - **接入点名称**：查看或更改接入点，以使用移动数据服务。要更改接入点，从接入点列表中选择一个选项。
 - **网络运营商**：搜索网络运营商，然后自动连接至网络。

VPN

您可以连接至安全虚拟网络，例如内联网。您也可以管理连接的虚拟私人网络。

添加 VPN

- 1 在设置屏幕上，点击**网络** > **更多** > **VPN**。



- 请注意，如果屏幕锁定已解锁，保存在设备上的所有 VPN 信息将被清除。

- 2 点击**添加虚拟专用网**。



- 此功能仅在屏幕锁定激活时可用。如果屏幕锁定停用，会出现通知屏幕。在通知屏幕上轻触**设置**以激活屏幕锁定。请参阅[配置屏幕锁定设置](#)以了解详细信息。

- 3 输入 VPN 详细信息并轻触**保存**。

配置 VPN 设置

- 1 从 **VPN** 列表轻触 VPN。
- 2 输入 VPN 用户帐户详细信息并轻触**连接**。
 - 要保存帐户详细信息，选择**保存帐户信息**复选框。

声音和通知

您可以自定义声音、振动和通知设置。

在设置屏幕上，点击**声音和通知**并自定义以下设置：

- **声音模式**：将声音模式更改为**声音**、**仅振动**或**静音**。
- **音量**：调节各种配件的音量。
- **SIM 卡1铃声/SIM 卡2铃声**：选择来电的铃声。添加或删除铃声。
- **铃声 ID**：创建特定联系人的来电铃声。
- **声音和振动**：将设备设置为同时振动和响铃。
- **SIM 卡1振动类型/SIM 卡2振动类型**：您可以选择振动类型或制作自己的振动方式。
- **请勿打扰**：设置要接收通知消息的时间、范围和应用程序类型。仅在一周特定日期接收通知消息。
- **锁定屏幕**：在锁定屏幕上显示或隐藏通知消息。您也可以隐藏私人信息。
- **应用程序**：选择可在屏幕上显示其通知消息的应用程序，并设置与通知消息相关的应用程序的优先级。
- **LED 通知灯**：通过 LED 指示设备状态。
- **更多 > SIM 卡1 通知声音/SIM 卡2 通知声音**：选择通知铃声。将保存在设备上的音乐设为通知铃声。
- **更多 > 点击振动**：将设备设为轻触屏幕上的特定项目时振动。
- **更多 > 音效**：选择轻触拨号键盘、选择选项、锁定或解锁屏幕时播放的音效。
- **更多 > 消息/呼叫声音通知**：将设备设为通过语音读取来电者信息或消息内容。

显示屏

您可以自定义每个屏幕类型的详细设置。

在设置屏幕上，轻触**显示**并自定义以下设置：

- **主屏**：自定义主屏的设置。请参阅**主屏幕设置**以了解详细信息。
- **锁定屏幕**：自定义锁屏设置。请参阅**锁定屏幕设置**以了解详细信息。
- **主题**：选择设备的屏幕主题。
- **主页触摸按钮**：重新布置主页触摸按钮或更改其背景颜色。隐藏屏幕上的主页触摸按钮。
- **字体类型**：更改字体类型。
- **字体大小**：更改字体大小。
- **粗体**：将屏幕上的文本设为粗体。
- **亮度**：使用滑块更改设备的屏幕亮度。要根据环境光照强度自动调整屏幕亮度，轻触**自动**开关。
- **自动**：设置设备，以使屏幕亮度自动根据环境光线强度进行调节。
- **舒适的视图**：将设备设为减少屏幕蓝光量，从而减轻眼睛疲劳。
- **自动旋转屏幕**：根据设备的方向自动旋转屏幕。
- **屏幕超时**：设备待机一段时间后自动关闭屏幕。
- **更多 > 显示大小**：放大或缩小屏幕。
- **更多 > 轻敲唤醒**：轻触屏幕两次以打开或关闭屏幕。
- **更多 > 屏幕保护**：设备连接至托架或充电器时，显示屏幕保护。选择要显示的屏保类型。
- **更多 > 迷你视图**：您可以缩小屏幕大小，以便单手使用设备。将屏幕底部的主页触摸按钮拖放到左侧或右侧。
- **更多 > 运动传感器校准**：修正运动传感器的角度和速度以提高倾斜精确度和传感器速度。



- 校正运动传感器时，确保将设备置于平坦表面。否则，可能导致运动传感器功能出错，例如自动屏幕旋转。

常规

语言和键盘

您可以自定义设备的语言和键盘设置。

- 1 在设置屏幕上，点击**常规** > **语言和键盘**。
- 2 自定义以下设置：
 - **语言**：选择要应用于设备的语言。
 - **当前键盘**：查看当前正在使用的键盘。选择要在输入文本时使用的键盘。
 - **LG 键盘**：自定义 LG 键盘设置。
 - **Google 语音输入**：配置由 Google 录制的文本选项。
 - **文本-语音输出**：配置文本-语音输出设置。
 - **指针速度**：调节鼠标或轨道盘的指针速度。
 - **更改按钮**：更改鼠标右键，以执行主要的直接操控操作。

位置

您可以自定义特殊应用程序使用的位置信息。

- 1 在设置屏幕上，点击**常规** > **位置**。
- 2 自定义以下设置：
 - **模式**：选择一种方式，以提供位置信息。
 - **最近定位请求**：查看最近请求位置信息的应用程序。
 - **定位服务**：配置 Google 位置历史记录设置。

帐户与同步

您可以添加或管理帐户，包括 Google 帐户。也可以自动同步特殊应用程序或用户信息。

- 1 在设置屏幕上，点击**常规** > **帐户与同步**。
- 2 自定义以下设置：
 - **自动同步数据**：自动同步所有注册帐户。
 - **帐户**：查看注册帐户的列表。要查看或更改帐户详情，轻触帐户。
 - **添加帐户**：添加帐户。

辅助功能

您可以管理设备上安装的辅助功能插件。

- 1 在设置屏幕上，点击**常规** > **辅助工具**。
- 2 自定义以下设置：
 - **视觉** > **语音菜单**：将设备设为通过语音通知屏幕状态或操作。
 - **视觉** > **消息/呼叫声音通知**：将设备设为通过语音读取来电者信息或消息内容。
 - **视觉** > **字体大小**：更改字体大小。
 - **视觉** > **粗体**：将屏幕上的文本设为粗体。
 - **视觉** > **显示大小**：放大或缩小屏幕。
 - **视觉** > **触摸缩放**：通过轻触屏幕三次放大或缩小。
 - **视觉** > **窗口缩放**：放大或缩小部分屏幕。
 - **视觉** > **放大鼠标指针**：放大鼠标指针。
 - **视觉** > **高对比度屏幕**：将背景颜色变为黑色，以获得高对比度屏幕。
 - **视觉** > **屏幕颜色反转**：为视力低下的人员增加显示屏颜色对比度。
 - **视觉** > **屏幕颜色调整**：调整显示屏颜色。

- **视觉 > 灰度**：将屏幕切换为灰度模式。
- **视觉 > 使用电源键结束呼叫**：通过按下电源/锁定键结束通话。
- **听觉 > 标题**：为听力受损人士播放视频时，打开字幕服务。
- **听觉 > LED 通知灯**：通过 LED 指示设备状态。
- **听觉 > 闪光灯提醒**：将设备设为通过闪光通知您来电和闹钟。
- **听觉 > 关闭所有声音**：将所有声音静音或调低接收器音量。
- **听觉 > 音频类型**：选择音频类型。
- **听觉 > 声音平衡**：调节音频输出平衡。使用滑块更改平衡。
- **电机与认识能力 > 触控助手**：启用触控板，使按钮和手势易于使用。
- **电机与认识能力 > 触摸输入**：触摸并按住屏幕以输入文本，或触摸屏幕修改文本。
- **电机与认识能力 > 物理键盘**：自定义键盘设置。
- **电机与认识能力 > 自动鼠标单击**：没有活动时，自动单击鼠标。
- **电机与认识能力 > 触摸并按住进行呼叫**：通过触摸并按住呼叫按钮（而非拖动），接听或拒听来电。
- **电机与认识能力 > 屏幕超时**：设备闲置一段时间后自动关闭屏幕。
- **电机与认识能力 > 触摸控制区域**：限制触摸区域，以便触摸输入只能控制屏幕的特殊部分。
- **辅助功能快捷方式**：点击  三次，即可快速访问常用功能。
- **自动旋转屏幕**：根据设备的物理位置自动更改屏幕方向。
- **开关控制**：创建用于控制设备的键组合。

快捷键

使用电源键

您可以使用电源键进行屏幕截图或拍照。

- 1 在设置屏幕上，点击**常规** > **快捷键**。
- 2 自定义以下设置：
 - **在“相机”中进行自拍**：轻触电源键拍照。



- 您的手指必须一直放在电源键上，直到拍完照片。
- 此功能只适用于前置相机镜头。

- **屏幕截图**：轻触电源键两次进行屏幕截图。



- 您的手指必须一直放在电源键上，直到完成屏幕截图。

使用音量按键

您可以使用音量键，在屏幕关闭或锁定时直接启动应用程序。

- 1 在设置屏幕上，点击**常规** > **快捷键** > **打开捕获+/相机**。
- 2 拖动 以将其激活。
 - 当屏幕锁定或关闭时，按下音量调低 (-) 键两次可启动**相机**应用程序。按音量调高 (+) 键两次可启动**捕获+**。

Google 服务

您可以使用 Google 设置管理您的 Google 应用程序和帐户设置。

在设置屏幕上，点击**常规** > **Google 服务**。

指纹 & 安全性

- 1 在设置屏幕上，点击**常规 > 指纹 & 安全性**。
- 2 自定义以下设置：
 - **指纹**：使用指纹解锁屏幕或内容。请参阅[指纹识别概述](#)以了解详细信息。
 - **内容锁定**：设置锁定**图片库**或**Quick 备忘录+**中文件的方式。
 - **加密 SD 卡存储**：加密存储卡以防在其它设备上使用。请参阅[存储卡加密](#)以了解详细信息。
 - **安全启动**：设备开机时，使用锁定功能保护设备。请参阅[安全启动设置](#)以了解详细信息。
 - **设置 SIM 卡锁定**：锁定或解锁 SIM 卡，或更改密码 (PIN)。
 - **密码键入为可见**：在您输入时，显示密码。
 - **设备管理器**：允许权限限制设备对特定应用程序的控制或使用。
 - **未知源**：允许安装非 Play Store 应用程序。
 - **凭据保护**：查看将保存安全证书的存储器的类型。
 - **证书管理**：管理保存在设备上的安全证书。
 - **Trust agents**：查看并使用设备上安装的 Trust agents。
 - **屏幕固定**：固定应用程序屏幕，因此，仅可使用目前激活的应用程序。
 - **使用记录访问**：查看设备上应用程序使用情况的详细信息。

画笔

使用笔设置以配置笔被卸下时的选项。

请参阅 *Pen Pop* 以了解详细信息。

在设置屏幕上，点击**常规** > **画笔**。

- **取出时打开**：选择当笔从设备卸下时会自动打开的功能。
- **应用程序快捷方式**：设置常用应用程序。
- **Screen-off memo**：当笔被卸下时在关闭屏幕上创建备注。
- **笔检测**：当笔被卸下或插入时，您将通过声音或振动收到通知。
- **Pen Keeper**：当设备随着笔的卸下而被移动时，您将通过声音或视觉通知收到通知。

日期和时间

您可以自定义您设备的日期和时间设置。

- 1 在设置屏幕上，点击**常规** > **日期和时间**。
- 2 自定义设置。

存储

您可以查看和管理设备上的内部存储器或存储卡的存储空间。

- 1 在设置屏幕上，点击**常规** > **存储**。
- 2 自定义以下设置：
 - **设备存储器**：查看设备内部存储器上的总存储空间和可用空间。查看使用中的应用程序的列表和每个应用程序的存储容量。
 - **便携式存储器**查看存储卡上的总存储空间和可用空间。只有在插入存储卡后才会出现该选项。要取出存储卡，点击 。

电池和省电

您可以查看当前电池信息，或者开启节电模式。

- 1 在设置屏幕上，点击**常规** > **电池和省电**。
- 2 自定义以下设置：
 - **电池使用情况**：查看电池使用详情。要查看更多详情，选择特定项目。
 - **状态栏上的电量百分比**：在状态栏上以百分比形式显示剩余电池电量。
 - **省电**：减小部分设备设置，例如显示屏亮度、速度和振动强度，降低电池耗电量。开启节电模式后，状态栏将显示 。

内存

您可以查看特定时间内的平均内存使用量，以及应用程序占用的内存。

- 1 在设置屏幕上，点击**常规** > **内存**。
- 2 点击  以设置检索数据的时隙。

应用程序

您可以查看已安装应用程序的列表。停止运行应用程序并删除应用程序（如果必要）。

- 1 在设置屏幕上，点击**常规** > **应用程序**。
- 2 选择应用程序并执行相关操作。

点击支付

您可以使用设备代替信用卡进行支付。
在设置屏幕中，点击**常规** > **点击支付**。

备份与重置

您可以将设备上保存的数据备份至其它设备或帐户。如果必要，重置设备。

1 在设置屏幕上，点击**常规** > **备份与重置**。

2 自定义以下设置：

- **LG 备份：**备份或恢复已阻止发送人列表、消息、图像、主屏及保存在设备上的其它数据。请参阅 *LG Backup* 以了解详细信息。
- **备份我的数据：**将应用程序数据、WLAN 密码及其他设置备份到 Google 服务器。
- **备份帐户：**查看正在使用的当前备份帐户。
- **自动还原：**重新安装应用程序时，自动还原备份设置和数据。
- **网络设置重置：**重置 WLAN、蓝牙及其它网络设置。
- **重设出厂数据：**重置设备的所有设置并删除数据。



- 重置设备将删除其中的所有数据。再次输入设备名称、Google 帐户及其它初始信息。

关于手机

您可以查看设备的相关信息，如名称、状态、软件详情和法律信息。

在设置屏幕上，点击**常规** > **关于手机**并查看信息。



05

附录

LG 语言设置

选择用于设备的语言。

- 点击  > **设置** > **常规** > **语言和键盘** > **语言** > **添加语言**，然后选择语言。
 - 触摸并按住 ，并将其拖动至语言列表的顶部，把它设置为默认语言。

LG Bridge

LG Bridge 概览

LG Bridge 是一款应用程序，用于协助您从计算机上方便地管理保存到 LG 智能手机上的照片、音乐、视频和文件。您可以将联系人、照片和其他备份到计算机上，或者更新设备的软件。



- 请参阅 LG Bridge 帮助以了解详细信息。
- 受支持的特性视设备而定。
- LG USB 驱动器是连接您的 LG 智能手机和计算机的必要程序，该驱动器随您安装 LG Bridge 时便一同安装。

LG Bridge 功能

- 通过 WLAN 连接或移动数据连接从计算机上管理设备文件。
- 通过 USB 连接数据线从设备上将数据备份到计算机或从计算机上将数据还原到设备。
- 通过 USB 连接数据线从计算机上更新设备软件。

在计算机上安装 LG Bridge

- 1 通过计算机浏览 www.lg.com。
- 2 点击售后服务中心，软件&固件升级，输入您产品的型号。
- 3 点击**电脑同步软件** > **LG Bridge**，然后下载安装文件。

手机软件更新

从互联网更新 LG 移动电话软件

欲知有关如何使用此功能的更多信息，请浏览 <http://www.lg.com/common/index.jsp>，选择您的国家/地区和语言。

此功能可让您从互联网方便地将手机中的固件更新为较新版本而无需到服务中心寻求协助。此功能仅当 LG 为您的设备提供较新的固件版本时可用。

由于移动电话固件更新要求用户在更新过程全神贯注，因此请确保查看每一步显示的所有说明和备注，然后再继续。请注意，更新期间拔下 USB 数据线可能会严重损坏您的移动电话。



- LG 保留自行决定提供仅适用于所选型号固件更新的权利，不保证固件的较新版本可用于所有手持型号。

通过 Over-the-Air (OTA) 进行 LG 移动电话软件更新

此功能可让您通过 OTA 方便地将手机软件更新为较新版本，而无需使用 USB 数据线。此功能仅当 LG 为您的设备提供较新的固件版本时可用。

要执行手机软件更新，点击 **○ > 设置 > 常规 > 关于手机 > 常用 > 更新中心 > 软件更新 > 现在检查更新**。



- 更新手机软件的过程中，内部手机存储中您的个人数据（包括关于 Google 帐户和任何其他帐户的信息、您的系统/应用程序数据和设置、任何下载的应用程序以及您的 DRM 许可证）可能将遗失。因此，LG 建议您备份个人数据，然后再更新手机软件。LG 对任何个人数据遗失概不负责。
- 此功能视区域或服务供应商而定。

FAQ

本章列出了您在使用手机过程中可能遇到的一些问题。有些问题可能需要您致电服务提供商，但大多数问题您可自行解决。

信息	可能的原因	可能的纠正措施
SIM 卡错误	手机中没有 SIM 卡或没有将 SIM 卡正确插入。	确保正确插入 SIM 卡。
无网络连接/ 网络掉线	信号弱或不在运营商网络范围内。	朝窗口或开阔的区域中移动。检查网络运营商覆盖范围地图。
	运营商提供了新服务。	联系您的服务供应商。
密码不配对	若要更改安全密码，请重新输入以确认新密码。	如果忘记该密码，请联系您的服务供应商。
	您输入的两个密码不配对	
没有可设置的应用程序	服务供应商不支持或需要注册。	联系您的服务供应商。
下载应用程序导致许多错误。	删除应用程序。	<ol style="list-style-type: none">1. 点击 ○ > 设置。2. 点击 常规 > 应用程序。3. 轻触应用程序 > 卸载。

信息	可能的原因	可能的纠正措施
通话不可用	拨号错误	新网络未获授权。
	新 SIM 卡已插入。	检查新限制。
	已达到预付费上限。	请联系服务供应商或使用 PIN2 重置限制。
手机无法开启	按下电源/锁定键过快。	按下电源/锁定键至少两秒。
	电池未充电。	为电池充电。查看显示屏中的充电指示灯。
充电错误	电池未充电。	为电池充电。
	外界温度过热或过冷。	确保手机在正常温度下充电。
	接触问题	检查充电器及其与手机的连接。
	无电压	将充电器插入其他插座中。
	充电器故障	更换充电器。
	错误的充电器	仅使用原厂 LG 配件。

信息	可能的原因	可能的纠正措施
不允许该号码。	固定拨号号码功能已开启。	检查设置菜单并关闭该功能。
无法接收/发送短信和照片	内存已满	从您的手机删除一些数据（例如应用程序或短信等）以使更多内存可用。
文件无法打开	不支持的文件格式	检查支持的文件格式。
当接听电话时屏幕没有开启。	接近传感器问题	如果使用保护带或外壳，确保其不会覆盖接近传感器周围的区域。确保接近传感器周围的区域无遮挡。
没有声音	振动模式	查看声音菜单中的设置状态，确保您并未处于振动或免打扰模式。
挂机或档机	间歇性软件问题	如果您尝试操作时屏幕死机或手机没有响应，请取出电池然后重新插入。将手机重新开机。或者，尝试通过网站执行软件更新。

防盗指南

设置设备以阻止其他人使用（未经您的许可无法重置为出厂设置）。例如，如果您的设备丢失、被盗或被擦除，则只有具有您的 Google 帐户或锁定屏幕信息的人可以使用该设备。

确保您的设备受到保护所需的一切操作，如下：

- **设置屏幕锁定：**如果您的设备丢失或被盗但设置了屏幕锁定，则除非屏幕解锁，否则无法使用设置菜单擦除设备。
- **在您的设备上添加 Google 帐户：**如果您的设备被擦除但设备上有 Google 帐户，则设备无法完成设置过程，直到再次输入 Google 帐户信息为止。

您的设备受到保护后，如果您需要进行出厂重置，则需要将屏幕解锁或输入 Google 帐户密码。这可确保由您或您信任的人员来进行重置。



- 执行出厂重置之前，切勿忘记您添加到设备的 Google 帐户和密码。如果您在设置过程中无法提供帐户信息，则执行出厂重置后根本无法使用设备。

更多信息

开源软件提示信息

为取得本产品内搭载的 GPL、LGPL、MPL 及其他开源证书下的源代码，请您访问 <http://opensource.lge.com>。

除源代码以外，所有相关的许可条款、免责声明和版权通知均可供下载。

LG Electronics 在收到发送至 opensource@lge.com 的电子邮件请求后，也可以 CD-ROM 的形式为您提供源代码，仅收取执行配送的费用（如介质费用、运输费和手续费）。此报价从您购买该产品之日起，三年内有效。

商标

- 版权所有© 2017 LG Electronics Inc. 保留所有权利。LG 和 LG 徽标是 LG 集团及其相关实体的注册商标。
- Google™、Google Maps™、Gmail™、Duo™、Google Calendar™、YouTube™ 和 Play Store™ 是 Google, Inc. 的商标。
- Bluetooth® 是 Bluetooth SIG, Inc. 在全球的注册商标。
- Wi-Fi® 和 Wi-Fi 徽标是 Wi-Fi Alliance 的注册商标
- 所有其他商标和版权是其各自所有者的财产。

确认声明

LG Electronics 特此宣布此 **LG-M400n** 产品符合指令 **2014/53/EU** 的核心要求和其它相关规定。

有关《确认声明》的副本，请访问

<http://www.lg.com/global/declaration>

About this user guide

Thank you for choosing this LG product. Please carefully read this user guide before using the device for the first time to ensure safe and proper use.

- Always use genuine LG accessories. The supplied items are designed only for this device and may not be compatible with other devices.
- This device is not suitable for people who have a visual impairment due to the touchscreen keyboard.
- Descriptions are based on the device default settings.
- Default apps on the device are subject to updates, and support for these apps may be withdrawn without prior notice. If you have any questions about an app provided with the device, please contact a LG Service Centre. For user-installed apps, please contact the relevant service provider.
- Modifying the device's operating system or installing software from unofficial sources may damage the device and lead to data corruption or data loss. Such actions will violate your LG licence agreement and void your warranty.
- Some content and illustrations may differ from your device, depending on the area, service provider, software version, or OS version, and are subject to change without prior notice.
- Software, audio, wallpaper, images, and other media supplied with your device are licenced for limited use. If you extract and use these materials for commercial or other purposes, you may be infringing copyright laws. As a user, you are fully responsible for the illegal use of media.
- Additional charges may incur for data services, such as messaging, uploading, downloading, auto-syncing and location services. To void additional charges, select a data plan suitable to your needs. Contact your service provider to obtain additional details.

Instructional notices



WARNING: Situations that could cause injury to the user and third parties.



CAUTION: Situations that may cause minor injury or damage to the device.



NOTE: Notices or additional information.

Table of contents

5 Guidelines for safe and efficient use

01

Custom-designed Features

- 14 Fingerprint recognition
- 17 Pen Pop
- 18 quick share
- 19 QuickMemo+
- 21 Multi-tasking feature
- 22 QSlide

02

Basic Functions

- 24 Product components and accessories
- 25 Parts overview
- 27 Turning the power on or off
- 28 Installing the SIM card and battery
- 30 Inserting the memory card
- 31 Removing the memory card
- 31 Charging the battery
- 33 Touch screen
- 36 Home screen
- 44 Screen lock
- 47 Memory card encryption
- 48 Taking screenshots
- 49 Entering text
- 55 Do not disturb
- 56 Content sharing

03

Useful Apps

- 59 Installing and uninstalling apps
- 60 Uninstalled apps
- 60 Phone
- 64 Messaging
- 65 Camera
- 74 Gallery
- 77 Music
- 78 E-mail
- 79 Calendar
- 80 Calculator
- 81 Clock
- 82 Downloads
- 82 File Manager
- 83 Voice Recorder
- 83 FM Radio
- 84 Contacts
- 86 Tasks
- 86 LG Backup
- 87 RemoteCall Service
- 87 Chrome
- 87 Google apps

04

Phone Settings

- 91 Settings
- 91 Networks
- 101 Sound & notification
- 102 Display
- 103 General

05

Appendix

- 113 LG Language Settings
- 113 LG Bridge
- 114 Phone software update
- 116 FAQ
- 119 Anti-Theft Guide
- 120 More information

Guidelines for safe and efficient use

Please read these simple guidelines. Not following these guidelines may be dangerous or illegal.

Should a fault occur, a software tool is built into your device that will gather a fault log. This tool gathers only data specific to the fault, such as signal strength, cell ID position in sudden call drop and applications loaded. The log is used only to help determine the cause of the fault. These logs are encrypted and can only be accessed by an authorised LG Repair centre should you need to return your device for repair.

Important information about the device

- Device apps and services are subject to change or cancellation without notice, depending on the provider's situation and the software version.
- When the device is turned on for the first time, an initial configuration takes place. The first booting time may be longer than usual.

Read before use

- To purchase optional items, contact the LG Customer Information Centre for available dealers.
- The appearance and specifications of the device are subject to change without notice.
- Do not use LG products for other purposes than those originally intended. Using non-certified apps or software may damage the device and this is not covered by warranty.

Exposure to radio frequency energy

Radio wave exposure and Specific Absorption Rate (SAR) information.

This device has been designed to comply with applicable safety requirements for exposure to radio waves. These requirements are based on scientific guidelines that include safety margins designed to assure the safety of all persons, regardless of age and health.

- The radio wave exposure guidelines employ a unit of measurement known as the Specific Absorption Rate, or SAR. Tests for SAR are conducted using standardised methods with the device transmitting at its highest certified power level in all used frequency bands.
- While there may be differences between the SAR levels of various LG device models, they are all designed to meet the relevant guidelines for exposure to radio waves.
- The SAR limit recommended by the International Commission on Non-Ionizing Radiation Protection (ICNIRP) is 2 W/kg averaged over 10 g of tissue.
- The highest SAR value for this model tested for use at the ear is 0.471 W/kg (10 g) and when worn on the body is 1.130 W/kg (10 g).
- This device meets RF exposure guidelines when used either in the normal use position against the ear or when positioned at least 5 mm away from the body. When a carry case, belt clip or holder is used for body-worn operation, it should not contain metal and should position the product at least 5 mm away from your body. In order to transmit data files or messages, this device requires a quality connection to the network. In some cases, transmission of data files or messages may be delayed until such a connection is available. Ensure the above separation distance instructions are followed until the transmission is completed.

Product care and maintenance

- Always use genuine LG batteries, chargers and accessories approved for use with this particular device model. The use of any other types may invalidate any approval or warranty applying to the device and may be dangerous.
- Some contents and illustrations may differ from your device without prior notice.
- Do not disassemble this unit. Take it to a qualified service technician when repair work is required.
- Repairs under warranty, at LG's discretion, may include replacement parts or boards that are either new or reconditioned, provided that they have functionality equal to that of the parts being replaced.
- Keep away from electrical appliances such as TVs, radios and personal computers.
- The unit should be kept away from heat sources such as radiators or cookers.
- Do not drop.
- Do not subject this unit to mechanical vibration or shock.
- Switch off the device in any area where you are required to by special regulations. For example, do not use your device in hospitals as it may affect sensitive medical equipment.
- Do not handle the device with wet hands while it is being charged. It may cause an electric shock and can seriously damage your device.
- Do not charge a handset near flammable material as the handset can become hot and create a fire hazard.
- Use a dry cloth to clean the exterior of the unit (do not use solvents such as benzene, thinner or alcohol).
- Do not charge the device when it is on soft furnishings.
- The device should be charged in a well ventilated area.
- Do not subject this unit to excessive smoke or dust.
- Do not keep the device next to credit cards or transport tickets. It can affect the information on the magnetic strips.
- Do not tap the screen with a sharp object as it may damage the device.

- Do not expose the device to liquid or moisture.
- Use accessories like earphones cautiously. Do not touch the antenna unnecessarily.
- Do not use, touch or attempt to remove or fix broken, chipped or cracked glass. Damage to the glass display due to abuse or misuse is not covered under the warranty.
- Your device is an electronic device that generates heat during normal operation. Extremely prolonged, direct skin contact in the absence of adequate ventilation may result in discomfort or minor burns. Therefore, use care when handling your device during or immediately after operation.
- If your device gets wet, immediately unplug it to dry off completely. Do not attempt to accelerate the drying process with an external heating source, such as an oven, microwave or hair dryer.
- Please ensure that the product does not get in contact with liquid. Do not use or recharge the product if it is wet. Once the product becomes wet, the liquid damage indicator changes color. Please note that this will limit you from receiving any free-of-charge repair services provided under warranty.

Efficient device operation

Electronics devices

All devices may receive interference, which could affect performance.

- Do not use your device near medical equipment without requesting permission. Please consult your doctor to determine if operation of your device may interfere with the operation of your medical device.
- Pacemaker manufacturers recommend that you leave at least 15 cm of space between other devices and a pacemaker to avoid potential interference with the pacemaker.
- This device may produce a bright or flashing light.
- Some hearing aids might be disturbed by devices.
- Minor interference may affect TVs, radios, PCs etc.
- Use your device in temperatures between 0 °C and 40 °C, if possible. Exposing your device to extremely low or high temperatures may result in damage, malfunction, or even explosion.

Road safety

Check the laws and regulations on the use of devices in the area when you drive.

- Do not use a hand-held device while driving.
- Give full attention to driving.
- Pull off the road and park before making or answering a call if driving conditions so require.
- RF energy may affect some electronic systems in your vehicle such as car stereos and safety equipment.
- When your vehicle is equipped with an air bag, do not obstruct with installed or portable wireless equipment. It can cause the air bag to fail or cause serious injury due to improper performance.
- If you are listening to music whilst out and about, please ensure that the volume is at a reasonable level so that you are aware of your surroundings. This is of particular importance when near roads.

Avoid damage to your hearing



To prevent possible hearing damage, do not listen at high volume levels for long periods.

Damage to your hearing can occur if you are exposed to loud sound for long periods of time. We therefore recommend that you do not turn on or off the handset close to your ear. We also recommend that music and call volumes are set to a reasonable level.

- When using headphones, turn the volume down if you cannot hear the people speaking near you, or if the person sitting next to you can hear what you are listening to.



- Excessive sound pressure from earphones and headphones can cause hearing loss.

Glass Parts

Some parts of your device are made of glass. This glass could break if your device is dropped on a hard surface or receives a substantial impact. If the glass breaks, do not touch or attempt to remove it. Stop using your device until the glass is replaced by an authorised service provider.

Blasting area

Do not use the device where blasting is in progress. Observe restrictions and follow any regulations or rules.

Potentially explosive atmospheres

- Do not use your device at a refueling point.
- Do not use near fuel or chemicals.
- Do not transport or store flammable gas, liquid or explosives in the same compartment of your vehicle as your device or accessories.

In aircraft

Wireless devices can cause interference in aircraft.

- Turn your device off before boarding any aircraft.
- Do not use it on the ground without permission from the crew.

Children

Keep the device in a safe place out of the reach of small children. It includes small parts which may cause a choking hazard if detached.

Emergency calls

Emergency calls may not be available on all mobile networks. Therefore you should never depend solely on your device for emergency calls. Check with your local service provider.

Battery information and care

- You do not need to completely discharge the battery before recharging. Unlike other battery systems, there is no memory effect that could compromise the battery's performance.
- Use only LG batteries and chargers. LG chargers are designed to maximise the battery life.
- Do not disassemble or short-circuit the battery.
- Keep the metal contacts of the battery clean.
- Replace the battery when it no longer provides acceptable performance. The battery pack may be recharged hundreds of times before it needs replacing.
- Recharge the battery if it has not been used for a long time to maximise usability.
- Do not expose the battery charger to direct sunlight or use it in high humidity, such as in the bathroom.
- Do not leave the battery in hot or cold places, as this may deteriorate battery performance.
- Risk of explosion if battery is replaced by an incorrect type. Dispose of used batteries according to the instructions.
- If you need to replace the battery, take it to the nearest authorised LG Electronics service point or dealer for assistance.
- Always unplug the charger from the wall socket after the device is fully charged to save unnecessary power consumption of the charger.
- Actual battery life will depend on network configuration, product settings, usage patterns, battery and environmental conditions.
- Make sure that no sharp-edged items such as animal's teeth or nails, come into contact with the battery. This could cause a fire.

Precautions when using SIM cards

- Do not insert the SIM card into the device with the label or seal attached. This may cause damage.
- Do not remove the SIM card while using the device. This may damage the SIM card or the system.
- Take extra care to ensure that the SIM card is not scratched, bent, or damaged by magnet. This may delete files saved on the SIM card or cause device malfunctions.

Precautions when using memory cards

- Make sure that the orientation is correct when inserting the memory card. Inserting using the wrong orientation may damage the card.

Securing personal information

- Make sure to protect your personal information to prevent data leakage or misuse of sensitive information.
- Always back up important data while using the device. LG is not responsible for any data loss.
- Make sure to back up all data and reset the device when disposing of the device to prevent any misuse of sensitive information.
- Read the permission screen carefully while downloading applications.
- Be cautious using the applications that have access to multiple functions or to your personal information.
- Check your personal accounts regularly. If you find any sign of misuse of your personal information, ask your service provider to delete or change your account information.
- If your device is lost or stolen, change the password of your account to secure your personal information.
- Do not use applications from unknown sources.



01

Custom-designed Features

Fingerprint recognition

Fingerprint recognition overview

You must register your fingerprint on your device first before using the fingerprint recognition function.

You can use the fingerprint recognition function in the following cases:

- To unlock the screen.
- To view the locked content in the **Gallery** or **QuickMemo+**.
- Confirm a purchase by signing in to an app or identifying yourself with your fingerprint.



- Your fingerprint can be used by the device for user identification. Very similar fingerprints from different users may be recognised by the fingerprint sensor as the same fingerprint. To enhance the device security, set the screen lock to a pattern, PIN or password.

Precautions for fingerprint recognition

Fingerprint recognition accuracy may decrease due to a number of reasons. To maximise the recognition accuracy, check the following before using the device.

- The device's Power/Lock key has a fingerprint sensor. Ensure that the Power/Lock key is not damaged by a metallic object, such as coin or key.
- When water, dust or other foreign substance is on the Power/Lock key or your finger, the fingerprint registration or recognition may not work. Clean and dry your finger before having the fingerprint recognised.
- A fingerprint may not be recognised properly if the surface of your finger has a scar or is not smooth due to being soaked in water.
- If you bend your finger or use the fingertip only, your fingerprint may not be recognised. Make sure that your finger covers the entire surface of the Power/Lock key.

- Scan only one finger for each registration. Scanning more than one finger may affect fingerprint registration and recognition.
- The device may generate static electricity if the surrounding air is dry. If the surrounding air is dry, avoid scanning fingerprints, or touch a metallic object such as coin or key before scanning fingerprints to remove static electricity.

Registering fingerprints

You can register and save your fingerprint on the device to use fingerprint identification.

- 1 Tap  > **Settings** > **General** > **Fingerprints & security** > **Fingerprints**.




- This feature is available when the secured lock is activated.
 - Lock the device with Knock Code, Pattern, PIN, Password and more.
- If the screen lock is not active, configure the lock screen by following the on-screen instructions. See *Configuring screen lock settings* for details.

- 2 Locate the Power/Lock key on the back of the device and gently put your finger on it to register the fingerprint.



- Gently press the Power/Lock key so that the sensor can recognise your fingerprint. If you press the Power/Lock key with an excessive force, the screen lock function may start or the screen may be turned off.
- Ensure that your fingertip covers the entire surface of the sensor of the Power/Lock key.

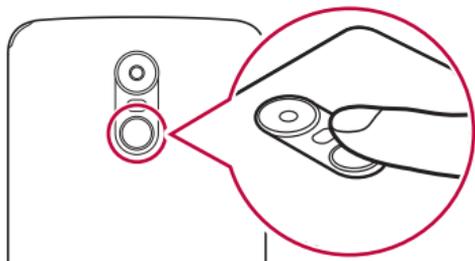

- 3 Follow the on-screen instructions.
 - Repeat scanning the fingerprint by moving your finger little by little until the fingerprint registers.
- 4 When the fingerprint registration is done, tap **OK**.
 - Tap **ADD MORE** to register another fingerprint. If you register only one fingerprint and the corresponding finger is not in a good condition, the fingerprint recognition may not work well. As the preventive measure against this kind of situation, register multiple fingerprints.

Managing fingerprints

You can edit or delete registered fingerprints.

- 1 Tap  > **Settings** > **General** > **Fingerprints & security** > **Fingerprints**.
- 2 Unlock according to the specified lock method.
- 3 From the fingerprint list, tap a fingerprint to rename it. To delete it, tap .

Unlocking the screen with a fingerprint

You can unlock the screen or view the locked content by using your fingerprint. Activate the desired function:

- 1 Tap  > **Settings** > **General** > **Fingerprints & security** > **Fingerprints**.
- 2 Unlock according to the specified lock method.
- 3 On the fingerprint settings screen, activate the desired function:
 - **Screen lock:** Unlock the screen with a fingerprint.
 - **Content lock:** Unlock content with a fingerprint. To do this, make sure that the content lock is set.

Pen Pop

The Pen Pop feature allows you to quickly and easily access options to create a memo. Pull the pen out and Pen Pop opens.

Setting up Pen Pop

Tap  > **Settings** > **General** > **Pen**.


Pen Pop options

-  : Hide/display the Pen Pop options.
-  : Open the Pop Memo to write a memo.
-  : Open the Capture+ and use the current screen image in a memo.
-  : Open the Pop Scanner to capture a photo with the camera and use it in a memo.
-  : Open the QuickMemo+ and view current memos.
-  : Add a shortcut to the app of your choice.

quick share

You can share a photo or video to the app you want immediately after taking it.

- 1 Tap  > , then take a photo or record a video.
- 2 Tap the app icon that appears on the screen to share it using that app. You can also swipe the icon towards the opposite direction to see what other apps you can use to share your photos and videos.

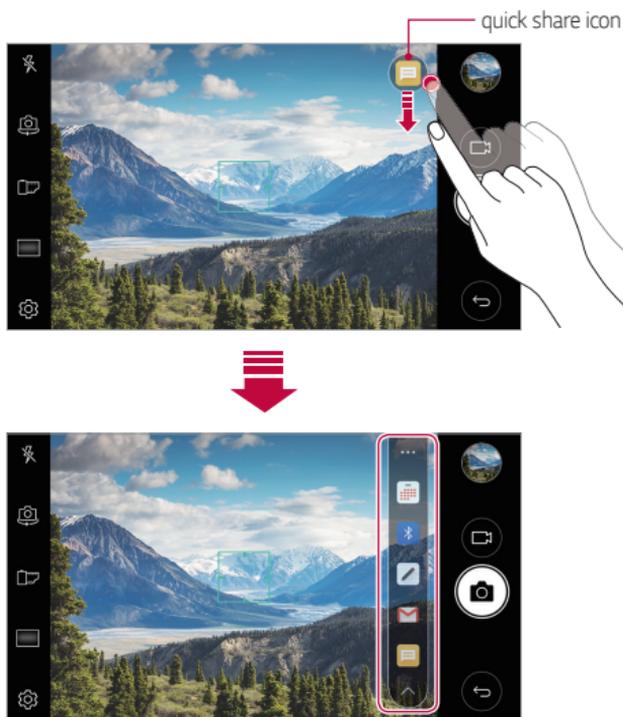

- The app displayed by the quick share icon may vary, depending on the type and frequency of access to the apps installed on the device.

QuickMemo+

QuickMemo+ overview

You can make creative notes by using a variety of options on this advanced notepad feature, such as image management and screenshots, which are not supported by the conventional notepad.

Creating a note

- 1 Tap  > **QuickMemo+**.
- 2 Tap  to create a note.
 -  : Save a note.
 -  : Undo the last action.
 -  : Redo the last action you undid.
 -  : Enter a note by using the keypad.
 -  : Write notes by hand.
 -  : Erase handwritten notes.
 -  : Zoom in or out, rotate or erase the parts of a handwritten note.
 -  : Access additional options, including Delete ,Insert ,Share,Change category,Lock,Paper style ,Stop all auto-links,QSlide.
- 3 Tap  to save the note.

Writing notes on a photo

- 1 Tap  > **QuickMemo+**.
- 2 Tap  to take a photo, then tap **DONE**.
- 3 Tap  or  to write notes on the photo.
 - Write notes by hand on the photo.
 - Enter text below the photo.
- 4 Tap  to save the note.

Writing notes on a screenshot

- 1 While viewing the screen you want to capture, drag the status bar downwards and then tap .
 - The screenshot appears as the notepad background theme. Memo tools appear at the top of the screen.
- 2 Take notes as desired.
 - Write notes by hand on the photo.
- 3 Tap  and save the notes to the location you want.
 - Saved notes can be viewed in either **QuickMemo+** or **Gallery**.
 - To save notes in the same location all the time, select the **Use as default app** checkbox and select an app.

Managing folders

You can view notes grouped by the type of the notes.

- 1 Tap  > **QuickMemo+**.
- 2 At the top of the screen, tap  and select a menu item:
 - **All memos**: View all notes saved in **QuickMemo+**.
 - **My memos**: View notes created by **QuickMemo+**.
 - **Pop Scanner**: View notes created by Pop Scanner.
 - **Capture+**: View notes created by .
 - **Trash**: View deleted notes.
 - **New category**: Add categories.
 -  : Rearrange, add or delete categories. To change the name of a category, tap the category.



- Some folders do not appear when launching QuickMemo+ for the first time. Disabled folders are enabled and appear when they contain at least one related note.


Multi-tasking feature

Multi Window

You can use two apps at the same time by separating the screen into the multiple windows.

While using an app, touch and hold  from the Home touch buttons, then select an app from the recently used apps list.

- You can use two apps displayed on the main screen at the same time.
- To stop the Multi Window feature, touch and hold .

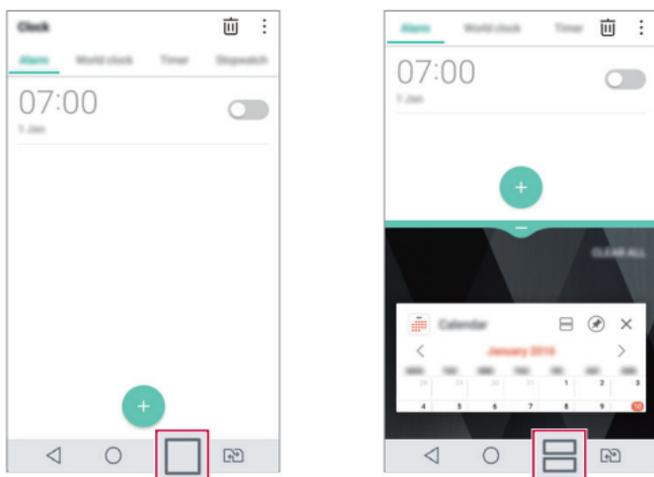

- You can use this feature in an app that supports the Multi Window feature.
- The Multi Window feature is not supported by some apps, including downloaded apps.

Overview screen

The Overview screen provides a preview of your recently used apps.

To view the list of recently used apps, tap  on the Home, then tap the displayed app.

- Touch and hold an app and drag it to the top of the screen to start the app with the Multi Window. You can also tap  at the top of each app.

QSlide

You can start apps by using QSlide to use them while other apps are running. For example, use the calendar when a video is playing.

When an app is running, tap  > **QSlide**.



• This feature may not be supported by some apps.

-  : Turn off the QSlide mode to switch to full-screen mode.
-  : Adjust the opacity of the QSlide window. If the QSlide window is transparent, it will not respond to touch inputs.
-  : Close the QSlide window.
-  : Adjust the size of the QSlide window.



02

Basic Functions

Product components and accessories

The following items are included with your device.

- Device
- Battery
- Headset
- USB cable
- Charger
- Quick Start Guide





- The items described above may be optional.
- The items supplied with the device and any available accessories may vary depending on the area and service provider.
- Always use genuine LG Electronics accessories. Using accessories made by other manufacturers may affect your device's call performance or cause malfunctions. This may not be covered by LG's repair service.



- If any of these basic items are missing, contact the dealer from which you purchased your device.
- To purchase additional basic items, contact an LG Customer Service Centre.
- To purchase optional items, contact an LG Customer Service Centre for available dealers.
- Some items in the product box are subject to change without notice.
- The appearance and specifications of your device are subject to change without notice.
- Device specifications may vary depending on the area or service provider.
- Be sure to use authentic accessories provided by LG Electronics. Using third-party accessories may damage the device or cause malfunctions.

Parts overview

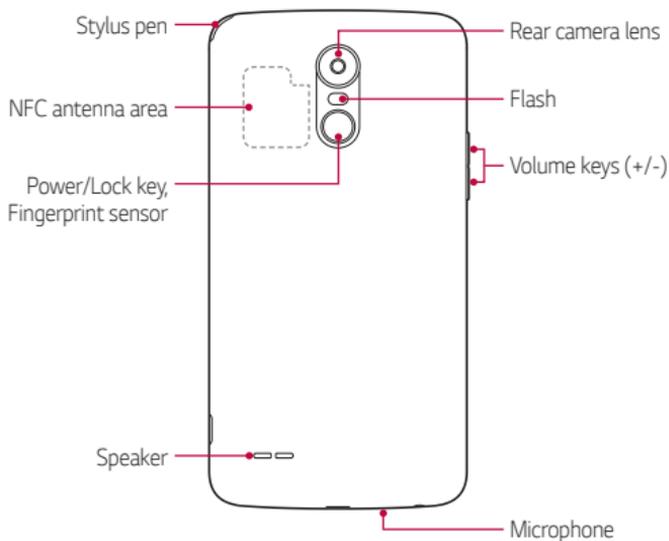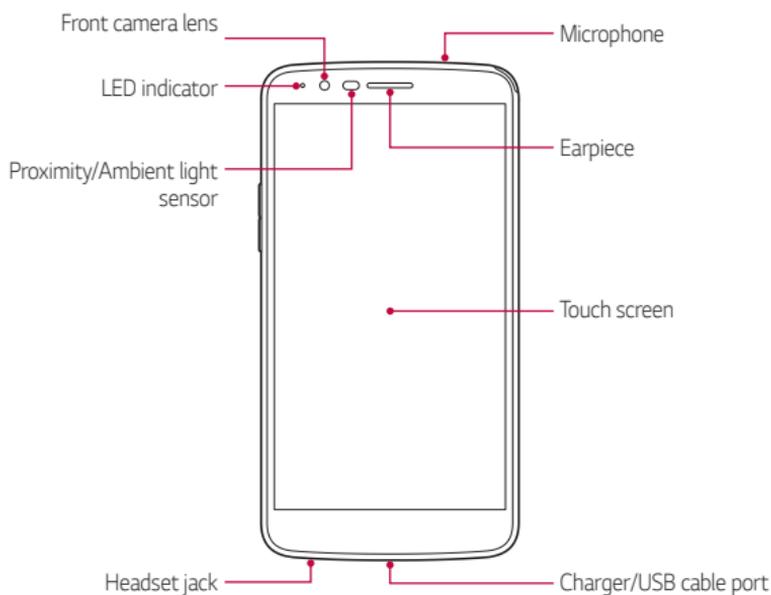

- Proximity/Ambient light sensor
 - Proximity sensor: During a call, the proximity sensor turns off the screen and disables touch functionality when the device is in close proximity to the human body. It turns the screen back on and enables touch functionality when the device is outside a specific range.
 - Ambient light sensor: The ambient light sensor analyses the ambient light intensity when the auto-brightness control mode is turned on.
- Volume keys
 - Adjust the volume for ringtones, calls or notifications.
 - While using the Camera, gently press a Volume key to take a photo. To take continuous shots of photos, press and hold the Volume key.
 - Press the Volume Down (-) key twice to launch the **Camera** app when the screen is locked or turned off. Press the Volume Up (+) key twice to launch **Capture+**.
- Power/Lock key (Fingerprint sensor)
 - Briefly press the key when you want to turn the screen on or off.
 - Press and hold the key when you want to select a power control option.
 - Turn on the fingerprint recognition feature to simplify the process of unlocking the screen. See *Fingerprint recognition overview* for details.
 - Tap the key to take a photo when using the front camera.
 - Tap the key twice to take a screenshot.



- Some functions may be restricted for access, depending on the device specifications.
- Do not put heavy objects on the device or sit on it. Failure to do so may damage the touch screen.
- Screen-protective film or accessories may interfere with the proximity sensor.
- If your device is wet or is being used in a humid place, the touch screen or buttons may not function properly.

Turning the power on or off

Turning the power on

When the power is turned off, press and hold the Power/Lock key.



- When the device is turned on for the first time, initial configuration takes place. The first booting time for the smart phone may be longer than usual.

Turning the power off

Press and hold the Power/Lock key, then select **Power off**.

Power control options


Press and hold the Power/Lock key, then select an option.

- **Power off:** Turn off the device.
- **Power off and restart:** Restart the device.
- **Turn on Airplane mode:** Block telecommunication-related functions, including making phone calls, messaging and browsing the Internet. Other functions remain available.


Installing the SIM card and battery

Insert the SIM card provided by the device service provider, and the included battery.


- 1 To remove the back cover, hold the device firmly in one hand. With your other hand, lift off the back cover with your thumbnail as shown in the figure.

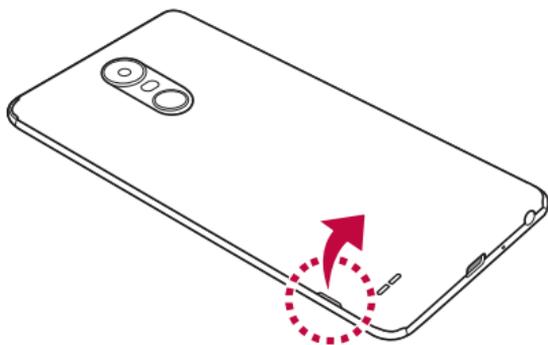


- 2 Slide the SIM card into the SIM card slot as shown in the figure. Make sure the gold contact area on the card is facing downward.

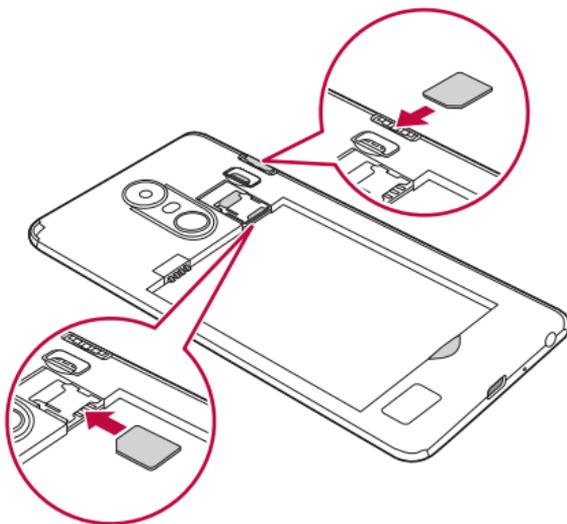

3 Insert the battery.

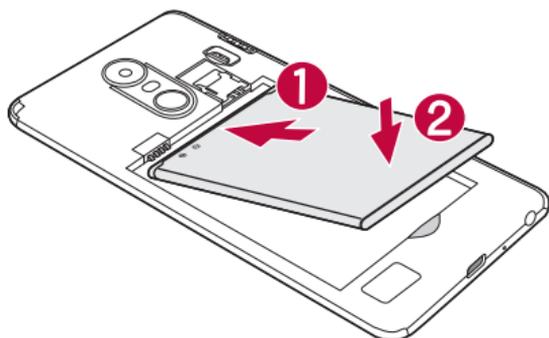

4 To replace the cover onto the device, align the back cover over the battery compartment and press it down until it clicks into place.

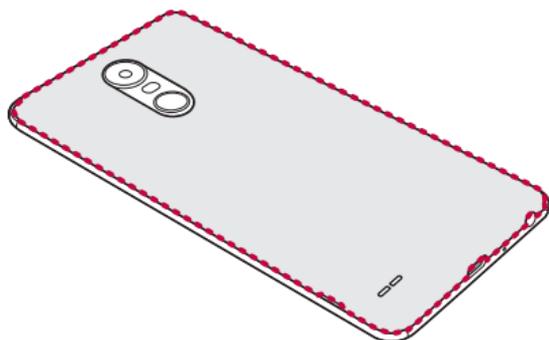

- This device supports only Nano SIM cards.
- For problem-free performance, it is recommended to use the phone with the correct type of SIM card. Always use a factory-made SIM card supplied by the operator.

Precautions when using the SIM card


- Do not lose your SIM card. LG is not responsible for damage and other issues caused by loss or transfer of a SIM card.
- Be careful not to damage the SIM card when you insert or remove it.

Inserting the memory card

Insert the memory card into your device.

The device can support up to a 2 TB microSD card. Depending on the memory card manufacturer and type, some memory card may not be compatible with your device.

- 1 Remove the back cover.
- 2 Insert a memory card with the gold-colored contacts facing downwards.

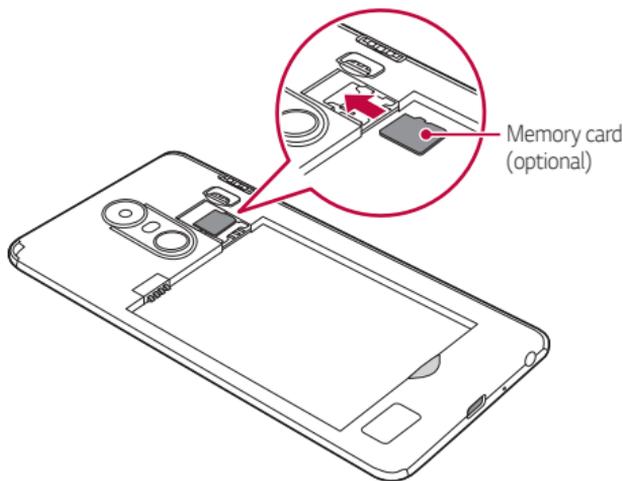

- 3 Replace the back cover.



- Some memory cards may not be fully compatible with the device. If you use an incompatible card, it may damage the device or the memory card, or corrupt the data stored in it.



- Frequent writing and erasing of data may shorten the memory card lifespan.

Removing the memory card

Unmount the memory card before removing it for safety.

- 1 Tap **○** > **Settings** > **General** > **Storage** > **△**.
- 2 Remove the back cover and pull out the memory card.




- Do not remove the memory card while the device is transferring or accessing information. This may cause data to be lost or corrupted, or may damage the memory card or the device. LG is not responsible for losses that result from the abuse or improper use of memory cards, including the loss of data.

Charging the battery

Before using the device, fully charge the battery.

Connect one end of the charging cable to the charger, insert the other end of the cable into the cable port, and then plug the charger into a power socket.

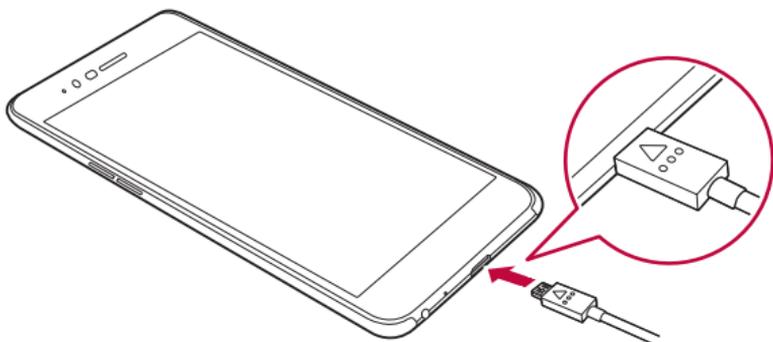



- Make sure to use the USB cable provided with your device.
- Make sure to use an LG-approved charger, battery and charging cable. Charging the battery with a third-party charger may cause the battery to explode or may damage the device.
- Using the device when it is charging may cause electric shock. To use the device, stop charging it.



- Remove the charger from the power socket after the device is fully charged. This prevents unnecessary power consumption.
- Another way to charge the battery is by connecting a USB cable between the device and a desktop or laptop computer. This may take a longer time than charging the battery in the common way.
- Do not charge the battery by using a USB hub that is unable to maintain the rated voltage. Charging may fail or unintentionally stop.

Precautions when using the device

- When replacing the battery, take extra care to ensure that no foreign substances or water enter the device.
- Ensure that the inside of the device does not make contact with a metallic object or water.
- Make sure to use the USB cable provided; do not use third party USB cables or chargers with your device. The LG limited warranty does not cover the use of third party accessories.
- Failure to follow the instructions in this guide and improper use may damage the device.

Using the battery efficiently

Battery lifespan may decrease if you keep many apps and functions running simultaneously and continuously.

Cancel background operations to increase battery life.

To minimise battery consumption, follow these tips:


- Turn off the Bluetooth® or Wi-Fi network function when not using them.
- Set the screen timeout to as short a time as possible.
- Minimise the screen brightness.
- Set a screen lock when the device is not used.
- Check the battery usage details and close any downloaded apps that are draining the battery.

Touch screen

You can familiarise yourself with how to control your device by using touch screen gestures.

Tapping

Lightly tap with your fingertip to select or run an app or option.

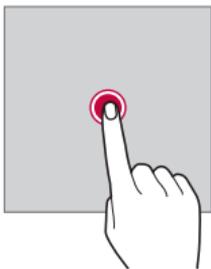


Touching and holding

Touch and hold for several seconds to display a menu with available options.




Double-tapping

Tap twice quickly to zoom in or out on a web page.

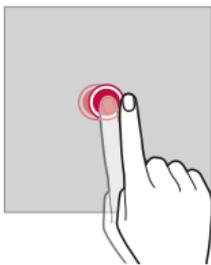


Dragging

Tap an item, such as an app or widget, then move your finger to another location in a controlled motion. You can use this gesture to move an item.

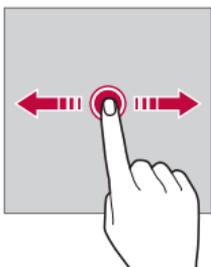



Swiping

Tap the screen with your finger and move it quickly without pausing. You can use this gesture to scroll through a list, a web page, photos, screens, and more.

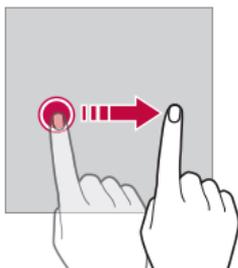

Pinching and spreading

Pinch two fingers to zoom out such as on a photo or map. To zoom in, spread your fingers apart.

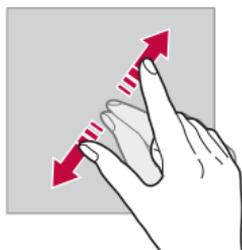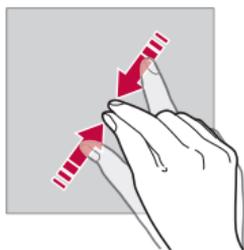

- Do not expose the touch screen to excessive physical shock. You might damage the touch sensor.



- A touch screen failure may occur if you use the device near a magnetic, metallic or conductive material.
- If you use the device under bright lights, such as direct sunlight, the screen may not be visible, depending on your position. Use the device in a shady location or a location with an ambient light that is not too bright and bright enough to read books.
- Do not press the screen with excessive force.
- Gently tap with your fingertip on the option you want.
- Touch control may not work properly if you tap while wearing a glove or by using the tip of your fingernail.
- Touch control may not work properly if the screen is moist or wet.
- The touch screen may not function properly if a screen-protective film or accessory purchased from a third party store is attached to the device.

Home screen

Home screen overview

The Home screen is the starting point for accessing various functions and apps on your device. Tap  on any screen to directly go to the Home screen.

You can manage all apps and widgets on the Home screen. Swipe the screen left or right to view all installed apps at a glance.

Home screen layout

You can view all apps and organise widgets and folders on the Home screen.



- The Home screen may vary, depending on the service provider or software version.

- **Status bar:** View status icons, the time and the battery level.
- **Weather widget:** View the information of weather and time for a specific area.
- **Google search widget:** Perform a Google search by inputting spoken or written keywords.
- **Folder:** Create folders to group apps by your preferences.
- **Page icon:** Display the total number of Home screen canvases. Tap the desired page icon to go to the page you selected. The icon reflecting the current canvas will be highlighted.
- **Quick access area:** Fix main apps at the bottom of the screen so that they can be accessed from any Home screen canvas.

• Home touch buttons


- ◀: Return to the previous screen. Close the keypad or pop-up windows.
- ○: Tap to go to the Home screen. To launch Google search, tap and hold.
- □: Tap to view a list of recently used apps or run an app from the list. To delete all the recently used apps, tap **CLEAR ALL**. To use two apps at the same time with the Multi Window feature, touch and hold the button while using an app.
- ↻: Choose which SIM card you are going to use. Touch and hold to configure the Dual SIM card settings.

Editing the Home touch buttons

You can rearrange the Home touch buttons or add frequently used functions to the Home touch buttons area.

Tap ○ > **Settings** > **Display** > **Home touch buttons** > **Button combination** and customise the settings.

- Several functions, including QSlide, Notification and Capture+, are provided. A maximum of five items can be added.

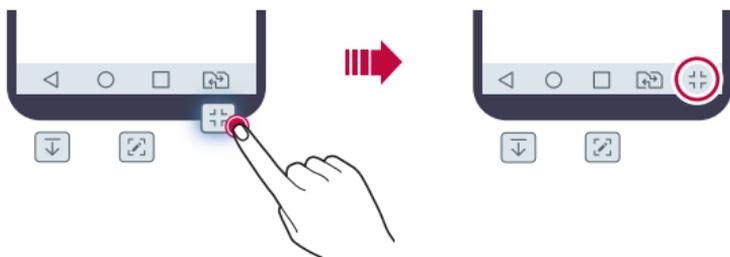

Status icons

When there is a notification for an unread message, calendar event or alarm, the status bar displays the corresponding notification icon. Check your device's status by viewing notification icons displayed on the status bar.

	No signal
	Data is being transmitted over the network
	Alarm is set
	Vibrate mode is on
	Bluetooth is on
	Connected to a computer via USB
	Battery level
	Airplane mode is on
	Missed calls
	Wi-Fi is connected
	Mute mode is on
	GPS is on
	Hotspot is on
	No SIM card
	NFC is on




- Some of these icons may appear differently or may not appear at all, depending on the device's status. Refer to the icons according to the actual environment in which you are using the device.
- Displayed icons may vary, depending on the area or service provider.

Notifications panel

You can open the notifications panel by dragging the status bar downward on the main screen.

- To open the quick access icons list, drag the notifications panel downwards or tap .
- To rearrange, add, or remove icons, tap **EDIT**.
- If you touch and hold the icon, the settings screen for the corresponding function appears.

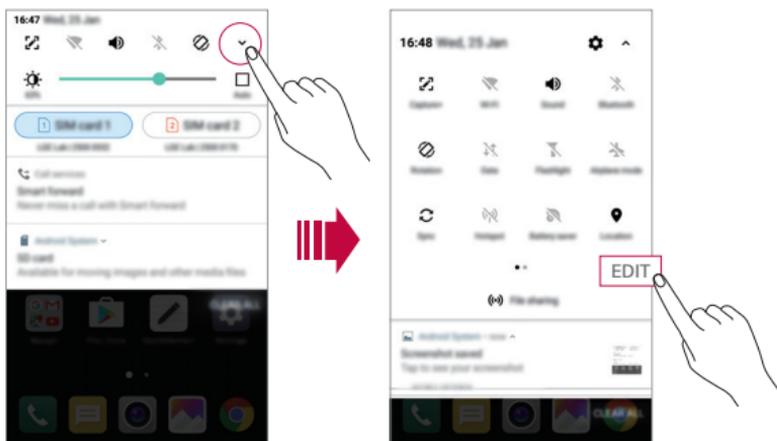


Switching the screen orientation

You can set the screen orientation to automatically switch, according to the device's physical orientation.

On the notification panel, tap **Rotation** from the quick access icon list.

You can also tap  > **Settings** > **Display** and activate **Auto-rotate screen**.

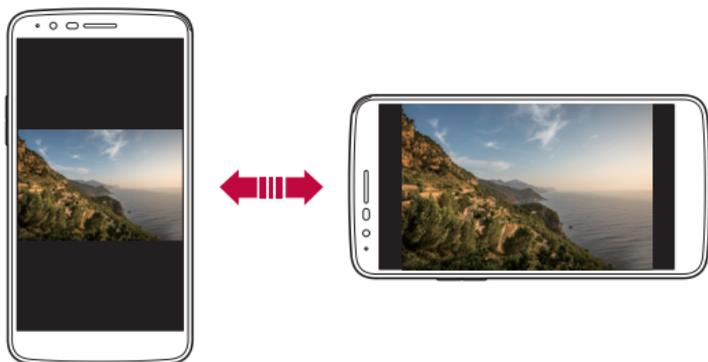

Editing the Home screen

On the Home screen, touch and hold on an empty space, then select the desired action from below.

- To rearrange the Home screen canvases, touch and hold on a canvas, then drag it to another location.
- To add a widget to the Home screen, touch and hold on a blank area of the Home screen, then select **Widgets**.
- To change a theme, touch and hold on a blank area of the Home screen, then select **Theme**.

You can also tap  > **Settings** > **Display** > **Theme**, then select a theme to apply to the device.

- To configure the Home screen settings, touch and hold on a blank area of the Home screen, then select **Home screen settings**. See *Home screen settings* for details.


- To view or reinstall the uninstalled apps, touch and hold on a blank area of the Home screen, then select **Uninstalled apps**. See *Uninstalled apps* for details.

Viewing the background theme

You can view only the background image by hiding the apps and widgets on the Home screen.

Spread two fingers apart on the Home screen.

- To return to the original screen, which displays apps and widgets, pinch your fingers on the Home screen or tap ◀.

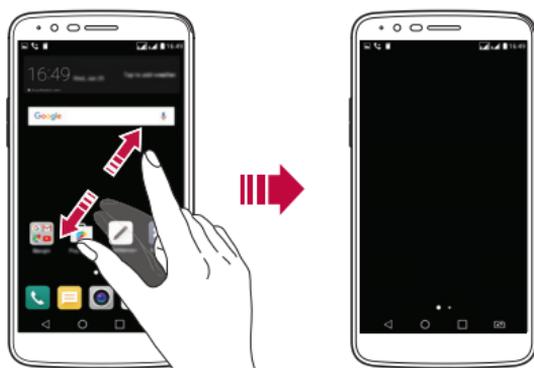

Moving apps on the Home screen

On the Home screen, touch and hold an app, then drag it to another location.

- To keep frequently used apps at the bottom of the Home screen, touch and hold an app, then drag it to the quick access area at the bottom.
- To remove an icon from the quick access area, drag the icon to the Home screen.

Using folders from the Home screen

Creating folders

On the Home screen, touch and hold an app, then drag it over another app.

- A new folder is created and the apps are added to the folder.

Editing folders

On the Home screen, tap a folder and do one of the following actions.

- To edit the folder name and color, tap the folder name.
- To add apps, touch and hold an app, then drag it over the folder and release it.
- To remove an app from the folder, touch and hold the app and drag it to outside the folder. If there is only one app in the folder, the folder is removed automatically.
- You can also add or remove apps after tapping **+** in the folder.

Home screen settings

You can customise Home screen settings.

- 1 Tap **○ > Settings > Display > Home screen.**
- 2 Customise the following settings:
 - **Select Home:** Select a Home screen mode.
 - **Wallpaper:** Change the Home screen background wallpaper.
 - **Screen swipe effect:** Select an effect to apply when the Home screen canvas switches.
 - **Sort apps by:** Set how apps are sorted on the Home screen.
 - **Grid:** Change the app arrangement mode for the Home screen.
 - **Hide apps:** Select which apps you want to hide from the Home screen.

Screen lock

Screen lock overview

Your device's screen turns off and locks itself if you press the Power/Lock key. This also happens after the device is left idle for a specified period of time.

If you press the Power/Lock key when a screen lock is not set, the Home screen appears immediately.

To ensure security and prevent unwanted access to your device, set a screen lock.



- Screen lock prevents unnecessary touch input on the device screen and reduces battery consumption. We recommend that you activate the screen lock while not using the device.

Configuring screen lock settings

There are several options available for configuring the screen lock settings.

- 1 Tap **○ > Settings > Display > Lock screen > Select screen lock** and then select the method you prefer.
- 2 Customise the following settings:
 - **None:** Deactivate the screen lock function.
 - **Swipe:** Swipe on the screen to unlock the screen.
 - **Knock Code:** Tap the spaces of the screen in accordance with a pattern to unlock the screen.
 - **Pattern:** Draw a pattern to unlock the screen.
 - **PIN:** Enter a numeric password to unlock the screen.
 - **Password:** Enter an alphanumeric password to unlock the screen.
 - **Fingerprints:** Unlock the screen by using your fingerprint.



- If you incorrectly attempt to unlock the device 5 times, the screen is blocked for 30 seconds.

Secure start-up settings

When you select Knock Code, Pattern, PIN or Password as a screen lock method, you can configure your device to be locked whenever turning on the device in order to secure your data.

- You cannot use all functions, except for emergency calls until you unlock the device.
- If you forget your decryption password, you cannot restore encrypted data and personal information.

Lock screen settings

You can customise the following lock screen settings.

- 1 Tap  > **Settings** > **Display** > **Lock screen**.
- 2 Customise settings:
 - **Select screen lock:** Select a screen lock method.
 - **Smart Lock:** Select trusted items so that if one of them occurs, the device is automatically unlocked.
 - **Wallpaper:** Change the lock screen background wallpaper.
 - **Clock:** Select the display type of the clock to display on the locked screen.
 - **Shortcuts:** Add an app shortcut and directly access the app from the lock screen by dragging the app shortcut on the screen.
 - **Contact info for lost phone:** Display emergency contact information on the lock screen.
 - **Lock timer:** Set the amount of idle time after which the device automatically locks.
 - **Power key instantly locks:** Instantly lock the screen when the Power/Lock key is pressed.



- Available setting items may vary, depending on the selected screen lock method.

KnockON

You can turn the screen on or off by double-tapping the screen.



- This option is available only on the Home screen provided by LG. It may not function properly on a custom launcher or on the Home screen installed by the user.
- When tapping the screen, use your fingertip. Do not use a fingernail.
- To use the KnockON feature, make sure that the proximity/light sensor is not blocked by a sticker or any other foreign substance.

Turning on the screen

Double-tap the middle of the screen.

- Tapping the top or bottom of the screen may decrease the recognition rate.

Turning off the screen

Double-tap on an empty space on the Home screen.

You can also double-tap an empty space on the status bar.

Knock Code

You can unlock the screen by creating your own Knock Code. When the screen is off, you can directly access the Home screen by tapping the screen in a specified sequence.



- You can use your Knock Code together with the KnockOn feature.
- Make sure to use your fingertip when tapping the screen.

Creating a Knock Code

- 1 Tap  > **Settings** > **Display** > **Lock screen** > **Select screen lock** > **Knock Code**.
- 2 Tap the squares in a pattern of your choice to create a Knock Code and tap **NEXT**.
- 3 Input the created Knock Code again for verification, then tap **CONFIRM**.

Unlocking the screen with a Knock Code

Unlock the screen by inputting the Knock Code you have created.

Input your Knock Code on the touch screen when the screen is turned off.

- It is also possible to enter a Knock Code when the lock screen is turned on.

Memory card encryption

You can encrypt and protect data saved on the memory card. The encrypted data in the memory card cannot be accessed from another device.

- 1 Tap  > **Settings** > **General** > **Fingerprints & security** > **Encrypt SD card**.
- 2 Read the on-screen overview of memory card encryption and then tap **CONTINUE** to continue.
- 3 Select an option and tap **ENCRYPT NOW**:
 - **New data encryption**: Encrypt only data that is saved on the memory card after encryption.
 - **Full encryption**: Encrypt all the data currently saved on the memory card.
 - **Exclude media files**: Encrypt all files, except for media files such as music, photos and videos.



- To encrypt the memory card, make sure that a screen lock is set using a PIN or password.
- Once memory card encryption starts, some functions are not available.
- If the device is turned off while encryption is underway, the encryption process will fail, and some data may be damaged. Therefore, be sure to check if the battery level is sufficient before starting encryption.
- Encrypted files are accessible only from the device where the files were encrypted.
- The encrypted memory card cannot be used on another LG device. To use the encrypted memory card on another mobile device, format the card.
- You can activate memory card encryption even when no memory card is installed into the device. Any memory card that is installed after encryption will automatically be encrypted.

Taking screenshots

You can take screenshots of the current screen you are viewing.

Via a shortcut

- Press and hold the Power/Lock key and the Volume Down (-) key at the same time for at least two seconds.
- Tap the Power/Lock Button once, then immediately press and hold it after. Your finger must remain on the Power key until the screenshot is taken.



- Screenshots can be viewed from the **Screenshots** folder in the **Gallery**.

Via Capture+

On the screen where you want to take a screenshot, drag the status bar downwards, then tap .



- When the screen is turned off or locked, you can access **Capture+** by pressing the Volume Up (+) key twice. To use this feature, tap  **Settings > General** and turn on **Shortcut keys**.
- See *Writing notes on a screenshot* for details.

Entering text

Using the Smart keyboard


You can use the Smart keyboard to enter and edit text.

With the Smart keyboard, you can view text as you type without bothering to alternate between the screen and a conventional keyboard. This allows you to easily find and correct errors when typing.



Moving the cursor

With the Smart keyboard, you can move the cursor to the exact position you want. When typing text, touch and hold on the space bar and then drag left or right.

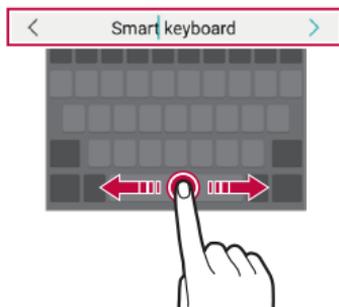


- This option is available only on the QWERTY keyboard.

Suggesting words

Smart keyboard automatically analyses your usage patterns to suggest frequently used words as you type. The longer you use your device, the more precise the suggestions are.

Enter text, then tap a suggested word .

- The selected word is automatically entered. You do not need to manually type every letter of the word.

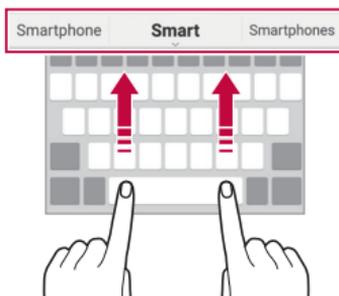


Changing the QWERTY keyboard layout

You can add, delete or rearrange keys on the bottom row of the keyboard.

- 1 Tap  > **Settings** > **General** > **Language & keyboard** > **LG Keyboard** > **Keyboard height and layout** > **QWERTY keyboard layout**.

You can also tap  on the keyboard and tap **Keyboard height and layout** > **QWERTY keyboard layout**.

- 2 Tap a key on the bottom row, then drag it to another position.

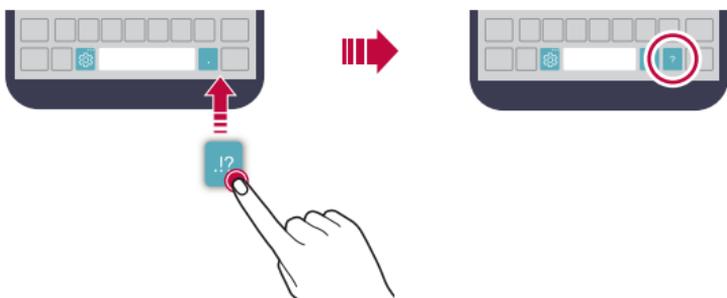

- This option is available on the QWERTY, QWERTZ and AZERTY keyboards.
- This function may not be supported for some languages.


Customising the keyboard height

You can customise the keyboard height to maximise hand comfort when typing.

- 1 Tap  > **Settings** > **General** > **Language & keyboard** > **LG Keyboard** > **Keyboard height and layout** > **Keyboard height**.

Alternatively, tap  on the keyboard and tap **Keyboard height and layout** > **Keyboard height**.

- 2 Adjust the keyboard height.

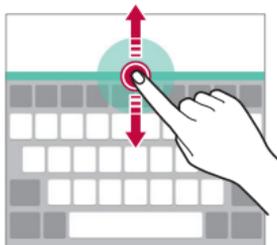

Selecting a landscape keyboard mode

You can select a landscape keyboard mode from several choices.

- 1 Tap  > **Settings** > **General** > **Language & keyboard** > **LG Keyboard** > **Keyboard height and layout** > **Keyboard type in landscape**.
You can also tap  on the keyboard and tap **Keyboard height and layout** > **Keyboard type in landscape**.
- 2 Select a keyboard mode.

Splitting the keyboard


You can split the keyboard in half and place each piece on either side of the screen when the screen is in landscape mode.

Tap  > **Settings** > **General** > **Language & keyboard** > **LG Keyboard** > **Keyboard height and layout** > **Split keyboard**.

You can also tap  on the keyboard and tap **Keyboard height and layout** > **Split keyboard**.



- Rotate the device to landscape mode to split the keyboard to both sides. To merge or split the keyboard, pinch together or spread apart your fingers on the keyboard.



One-handed operation mode

You can move the keyboard to one side of the screen so that you can use the keyboard with one hand.

- 1 Tap  > **Settings** > **General** > **Language & keyboard** > **LG Keyboard** > **Keyboard height and layout** > **One-handed operation**.

You can also tap  on the keyboard and tap **Keyboard height and layout** > **One-handed operation**.

- 2 Press the arrow displayed next to the keyboard to move the keyboard in the direction you want.



Entering text by using voice

On the keyboard, touch and hold  and then select .



- To maximise the voice command recognition, speak clearly.
- To enter text with your voice, make sure that your device is connected to a network.
- To select the language for voice recognition, tap  > **Languages** on the voice recognition screen.
- This function may be not supported, or the supported languages may differ depending on the service area.

Adding languages to the keyboard

You can make additional languages available for keyboard input.

- 1 Tap  > **Settings** > **General** > **Language & keyboard** > **LG Keyboard** > **Select languages**.
- 2 Select the languages you want to make available.

Copy and Paste

You can cut or copy text from an app, and then paste the text into the same app. Or, you can run other apps and paste the text into them.

- 1 Touch and hold around the text you want to copy or cut.
- 2 Drag  /  to specify the area to copy or cut.
- 3 Select either **CUT** or **COPY**.
 - Cut or copied text is automatically added to the clipboard.
- 4 Touch and hold the text input window, then select **PASTE**.



- If there is no item that has been copied or cut, the **PASTE** option will not appear.

Clip Tray

If you copy or cut an image or text, it is automatically saved to the clip tray and can be pasted to any space at any time.

- 1 On the keyboard, touch and hold  and select .
You can also touch and hold the text input window, then select **CLIP TRAY**.
- 2 Select and paste an item from the clip tray.
 - A maximum of 20 items can be saved to the clip tray.
 - Tap  to lock saved items in order not to delete them, even when the maximum quantity is exceeded. A maximum of ten items can be locked. To delete locked items, unlock them first.
 - Tap  to delete the items saved to the clip tray.



- The clip tray may not be supported by some downloaded apps.

Do not disturb

You can limit or mute notifications to avoid disturbances for a specific period of time.

- 1 Tap  > **Settings** > **Sound & notification** > **Do not disturb** and then drag  to activate it.
- 2 Tap **Sounds and vibrations** and select the mode you want:
 - **Priority only**: Receive sound or vibrate notifications for the selected apps. Even when **Priority only** is turned on, alarms still sound.
 - **Total silence**: Disable both the sound and vibration.

Content sharing

Playing content from another device

You can play photos, videos or songs saved on your device from a TV.

- 1 Connect the TV and your device to the same Wi-Fi network.
- 2 While viewing the items from the **Gallery** or **Music** app, tap **⋮ > Play on other device**.
- 3 Select the TV you want to connect to.



- For use with Chromecast, Google Play services should be up to date.

Viewing content from nearby devices

You can view content from various devices, such as a computer, NAS or mobile device, by using the **Gallery** or **Music** apps.

Connecting the devices

Connect both your device and another device that support DLNA function to the same wireless network.



- Make sure that Content sharing (DLNA) is activated on both the device and the connected device.

Searching for nearby devices

You can view a list of DLNA devices on the same network by selecting the **Nearby devices** menu in apps.

Use content from nearby devices as if you were using it on your device.

Sending or receiving files

You can share files between your device and another LG device, or a tablet or computer.

Sending files

From the **Gallery**, **File Manager** or **Music** app, tap **⋮** > **Share** or **🔗** then select a device on the file sharing list.

Receiving files

Drag the status bar downward and tap **∨**, then tap **File sharing**.

If your device does not support the file sharing feature, tap **○** > **Settings** > **Networks** > **Share & connect** > **File sharing** > **SmartShare Beam** .



- Make sure that your device is connected to the same wireless network as the file transfer target device.
- Make sure that File sharing is activated on both the device and the target device.

Sending files to a computer

You can quickly send large files to your computer.

- 1 Install LG Bridge on your computer.
- 2 Start LG Bridge on the computer, then sign in using your LG account.
- 3 Tap **○** > **Settings** > **Networks** > **Share & connect** > **LG AirDrive**, then sign in using your LG account.



- You can download LG Bridge from the LG Mobile website (www.lg.com).



03

Useful Apps

Installing and uninstalling apps

Installing apps

Access an app store to search and download apps.

- You can use **Play Store** and the app store or the app store provided by your service provider.



- Some app stores may require you to create an account and sign in.
- Some apps may charge fees.
- If you use mobile data, you may be charged for data usage, depending on your pricing plan.

Uninstalling apps

Uninstall apps that you no longer use from your device.

Uninstalling with the touch and hold gesture

On the Home screen, touch and hold the app to uninstall, then drag it over **Uninstall** at the top of the screen.

You can also touch and hold the app, then tap an app or widget that  is attached to uninstall.

- If apps were uninstalled within 24 hours from now, you can reinstall them. See *Uninstalled apps* for details.

Uninstalling by using the settings menu

Tap  > **Settings** > **General** > **Apps**, select an app, then tap **Uninstall**.

Uninstalling apps from the app store

To uninstall an app, access the app store from which you download the app and uninstall it.



- Some apps cannot be uninstalled by users.

Uninstalled apps

You can view the uninstalled apps on the Home screen. You can also reinstall apps which were uninstalled within 24 hours from now.

- 1 Tap  > **Uninstalled apps**.
- 2 Activate the desired function:
 - **Reinstall**: Reinstall the selected app.
 - : Remove the uninstalled apps permanently from the device.



- Uninstalled apps are automatically removed from the device 24 hours after they were uninstalled. If you want to reinstall the uninstalled apps, you must download them again from the app store.
- This feature is activated on the default Home screen only. If you uninstall apps while using the EasyHome screen or other launcher, they are immediately and permanently removed from the device.

Phone

Voice call

Make a phone call by using one of the available methods, such as manually entering a phone number and making a call from the contact list or the list of recent calls.

Making a call from the keypad

- 1 Tap  >  > **Dial**.
- 2 Make a call by using a method of your choice:
 - Enter a phone number and tap .
 - Touch and hold a speed dial number.
 - Search for a contact by tapping the initial letter of a contact name in the contact list, and then tap .



- To enter “+” when making an international call, touch and hold number 0.
- See *Adding contacts* for details on how to add phone numbers to the speed dial list.

Making a call from the contact list

- 1 Tap > > **Contacts**.
- 2 From the contact list, select a contact and tap .

Answering a call

To answer a call, drag to the outside of the circle on the incoming call screen.

- When the stereo headset is connected, you can make calls by using the call/end button on the headset.
- To end a call simply by pressing the Power/Lock Key, tap > **Settings** > **Networks** > **Call** > **Answer and end calls**, then turn on **End calls with the Power key**.

Rejecting a call

To reject an incoming call, drag across the incoming call screen.

- To send a rejection message, drag the rejection message option across the screen.
- To add or edit a rejection message, tap > **Settings** > **Networks** > **Call** > **Call blocking & Decline with message** > **Decline with message**.
- When a call is coming in, press the Volume Up (+), Volume Down (-) or Power/Lock key to mute ringtone or vibration, or to hold the call.

Viewing missed calls

If there is a missed call, the status bar at the top of the screen displays . To view missed call details, drag the status bar downwards. You can also tap  >  > **Call logs**.

Functions accessible during a call

During a call, you can access a variety of functions by tapping on-screen buttons:

- **Contacts**: View the contact list during a call.
- **End**: End a call.
- **Dialpad**: Display or hide the dial pad.
- **Speaker**: Turn on the speakerphone function.
- **Mute**: Mute your voice so that your voice cannot be heard by the other party.
- **Bluetooth**: Switch the call to a Bluetooth device that is paired and connected.
- : Access additional call options.



• Available settings items may vary depending on the area or service provider.

Making a three-way calling

You can make a call to another contact during a call.

- 1 During a call, tap  > **Add call**.
- 2 Enter a phone number and tap .
 - The two calls are displayed on the screen at the same time, and the first call is put on hold.
- 3 To start a conference call, tap **Merge calls**.



- You may be charged a fee for each call. Consult with your service provider for more information.

Viewing call records

To view recent call records, tap > > **Call logs**. Then, you can use the following functions:

- To view detailed call records, select a contact. To make a call to the selected contact, tap .
- To delete call records, tap > **Delete**.



- The displayed call duration may differ from the call charge. Consult with your service provider for more information.

Configuring call options

You can configure various call options.

- 1 Tap > > **Dial** or **Call logs**.
- 2 Tap > **Call settings** and then configure the options to suit your preferences.

Messaging

Sending a message

You can create and send messages to your contacts using the Messaging app.



- Sending messages abroad may incur additional charges. Consult with your service provider for more information.

- 1 Tap > .
- 2 Tap .
- 3 Specify a recipient and create a message.
 - To attach files, tap .
 - To access optional menu items, tap .
- 4 Tap **Send** to send the message.

Reading a message

You can view exchanged messages organised by contact.

- 1 Tap > .
- 2 Select a contact from the message list.

Configuring messaging settings

You can change messaging settings to suit your preferences.

- 1 Tap > .
- 2 Tap > **Settings** from the message list.

Camera

Starting the camera

You can take a photo or record a video to cherish all of your memorable moments.


Tap  > .



- Before taking a photo or recording a video, wipe the camera lens with a soft cloth.
- Be careful not to stain the camera lens with your fingers or other foreign substance.
- If the battery level is lower than 5%, charge the battery before using the camera.
- Images included in this user guide may be different from the actual device.
- Photos and videos can be viewed or edited from the **Gallery**. See *Gallery overview* for details.

Auto mode

You can take photos or record videos by selecting a variety of shooting modes and options.

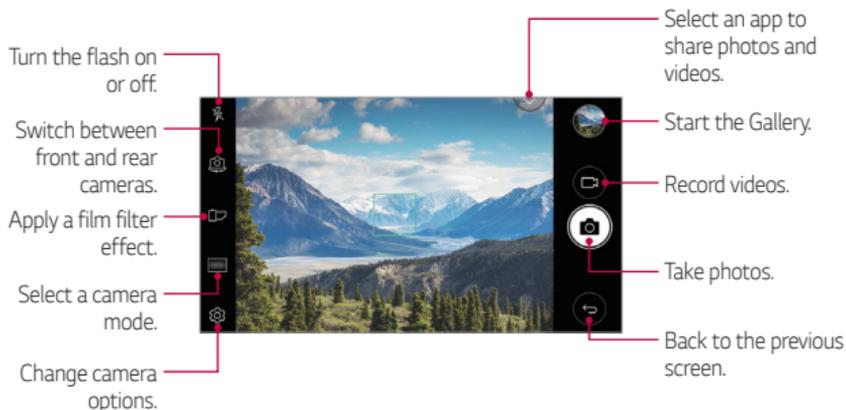

Taking a photo

- 1 Tap the subject to focus the camera on.
- 2 Tap  to take a photo.
 - You can also press the Volume Down (-) or Volume Up (+) key to take a photo.



- When the screen is turned off or locked, start the camera by pressing the Volume Down (-) key twice. To activate this function, tap  > **Settings** > **General** > **Shortcut keys** and turn on **Open Capture+/Camera**.

Recording a video

- 1 Tap the subject to focus the camera on.
- 2 Tap 
 - To take a photo while recording a video, tap .
 - To pause the video recording, tap . To resume the video recording, tap .
- 3 Tap  to end the video recording.

Customising the camera options

You can customise a variety of camera options to suit your preferences.

Tap  on the screen.



- Available options vary depending on the selected camera (front or rear camera) and the selected camera mode.

Photo size	Select values for aspect ratio and size for taking photos.
Video resolution	Select values for resolution and size for recording videos.
HDR	Obtain photos in vivid colors, and get compensated effects even when they are taken against the light. These functions are provided by the high dynamic range (HDR) technology equipped in the camera of the device.
Timer	Set the timer to automatically take photos after a specified period of time.
Cheese shutter	Take photos with voice commands.
Tag locations	Save the image with GPS location data.
Grid	Display guide grids so that you can take photos or record videos based on the horizontal and vertical reference lines.
Storage	Select any of Internal storage and SD card. (Available when the memory card is inserted.)
Simple view	Hide all menus from the camera screen.

Additional options on the front camera

Selfie shot	<p>Customise selfie shot settings.</p> <ul style="list-style-type: none"> • Gesture shot: Shoot using the Gesture shot feature. • Auto shot: Shoot when the camera detects a face.
Gesture view	Check your selfie after you take it by bringing your phone closer.
Save as flipped	Save as flipped images after taking selfies.

Panorama

You can create a panoramic photo by moving the camera in one direction to photograph and stitch continuous shots of a wide view.

- 1 On the auto mode screen, tap **MODE** > .
- 2 Tap  and then slowly move the camera in one direction.
 - Move the device by following the direction of the arrow in the guideline.
- 3 Tap  to end shooting.



Other useful features in the Camera app

Burst shot

You can take continuous shots of photos to create moving pictures.

On the camera screen, touch and hold .

- Continuous shots are taken at a fast speed while  is held down.



- Up to thirty (30) continuous photos can be taken.

Simple view

Tap  > **Simple view** to hide menus on the camera screen. Tap  to display them.

AE/AF lock

You can fix the current exposure level and focus position by touching and holding the screen on the camera screen. To turn off the feature, tap a blank area on the screen.



Zoom in or out

You can use zoom in or out on the camera screen while taking a photo or recording a video.

- On the camera screen, pinch or spread two fingers to zoom in or out, then use the displayed +/- slide bar.




- The zoom feature is not available when using the front camera in selfie mode.

Switching between cameras

You can switch between the front and rear cameras to suit your environment.

On the camera screen, tap  or drag the screen in any direction to switch between the front and rear cameras.

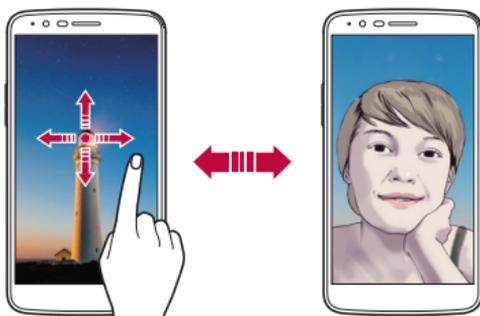

- Use the front camera to take selfies. See *Selfie shot* for details.

Selfie shot

You can use the front camera to view your face on the screen and take selfies.


Gesture shot

You can take selfies by using gestures.

Show your palm to the front camera and then clench your fist.

You can also clench your fist and then open it towards the front camera.

- In three seconds, a photo is taken.

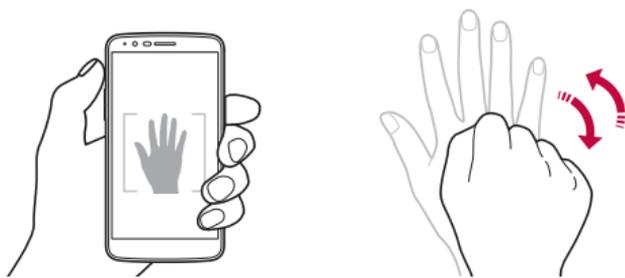

- To use this feature, switch to the front camera mode, then tap  > **Selfie shot > Gesture shot**.
- Make sure that your palm and fist are within the reference line so that the camera can detect them.
- This feature may not be available while using some of the camera features.

Auto shot

You can use the face detection feature to take selfies easily and conveniently. You can set the device so that, when you look at the screen, the front camera detects your face and takes a selfie automatically.

- The white colored guide frame appears when the front camera detects your face. If the subject within the guide frame stops moving, the guide frame color turns blue, then the camera takes a photo.




• Tap  > **Selfie shot** > **Auto shot** to enable the Auto shot feature.

Interval shot

You can take selfies at an interval.


While using the front camera, touch and hold . You can also show your palm to the camera, then clench your fist twice quickly.

- Four photos are taken at about two seconds interval after a timer delay of three seconds.

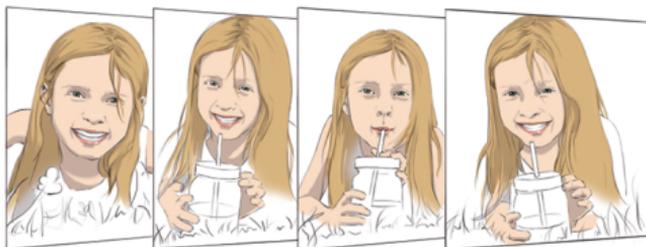

Gesture view

After taking a selfie with the front camera, you can preview the selfie immediately by placing the screen close to your face.

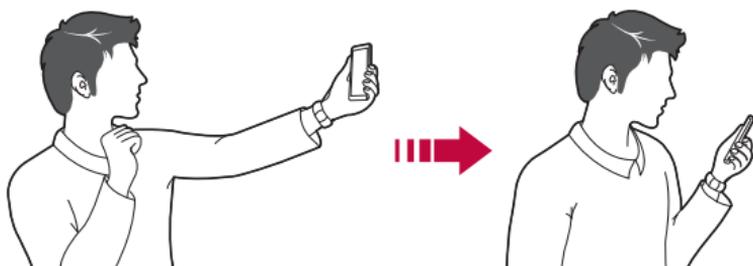

- Tap  > **Gesture view** to enable the Gesture view feature.
- Only one preview is available each time a photo is taken.
- If you rotate the device while in preview screen, the screen switches to camera mode.

Save as flipped

Before taking a photo with the front camera, tap  > **Save as flipped**. The image is flipped horizontally.



- When using the front camera, you can change how selfies are taken in the camera options. See *Customising the camera options* for details.

Gallery

Gallery overview

You can view and manage photos and videos saved on your device.

- 1 Tap  > .
 - Saved photos and videos are displayed by folder.
- 2 Tap a folder and select a file.
 - View the selected file in full-screen mode.
 - While viewing a photo, swipe left or right to view the previous or next photo.
 - While viewing a video, swipe left or right to rewind or fast-forward the video.



- Some file formats may not be supported, depending on the installed software.
- Some files may not be opened due to encoding.
- Files that exceed the size limit may cause an error.

Viewing photos




- To display the menu items, gently tap the screen. To hide the menu items, tap the screen again.

Editing photos

- 1 While viewing a photo, tap .
- 2 Use a variety of effects and tools to edit the photo.
- 3 Tap **SAVE** to save changes.
 - The changes are overwritten to the original file.
 - To save the edited photo as another file, tap  > **Save copy**.

Playing a video

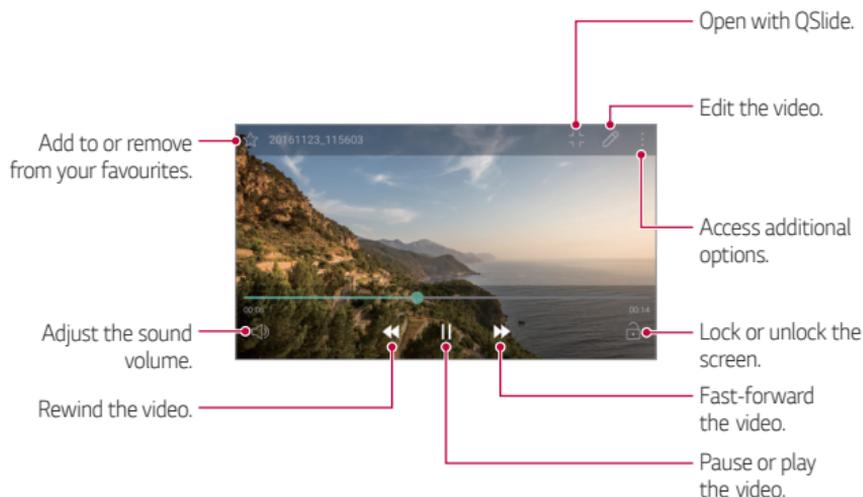

- To adjust the sound volume, drag the right side of the video screen up or down.
- To adjust the screen brightness, drag the left side of the video screen up or down.

Deleting files

You can delete files by using one of the following options:

- Touch and hold a file from the file list, then tap **Delete**.
- Tap  from the file list and delete the desired files.
- Deleted files are automatically moved to **Trash** and they can be restored to the Gallery within 7 days.
- On the Gallery, tap  > **Trash**. Tap  to completely delete the files. In this case, the files cannot be restored.

Sharing files


You can share files by using one of the following options:

- While viewing a photo or video, tap  to share the file by using the method you want.
- Tap  from the file list to select files and share them using the method you want.

Music

You can play and manage songs or music albums.

- 1 Tap  > **LG** > **Music**.
- 2 Select a category.
- 3 Select a music file.

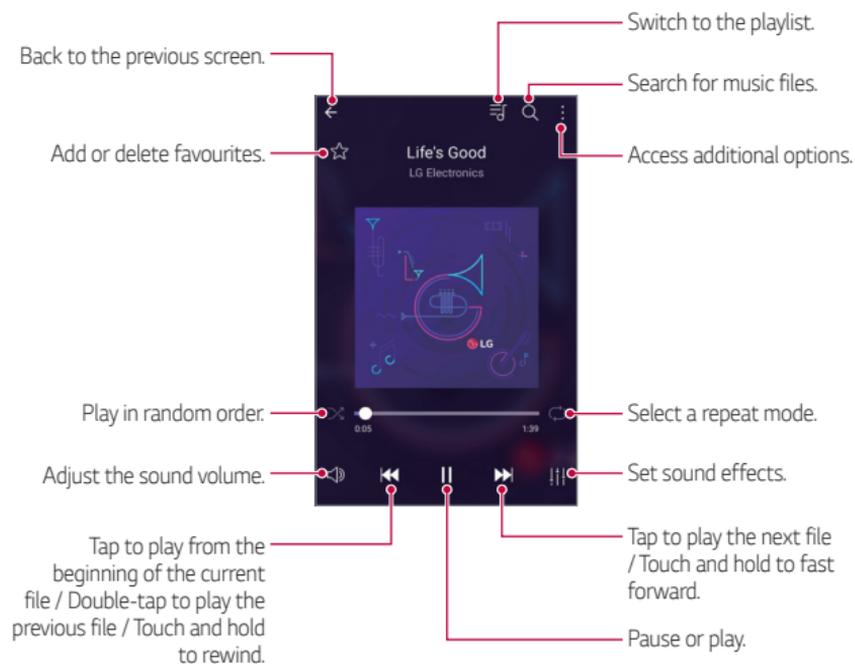

- Some file formats may not be supported, depending on the installed software.
- Files that exceed the size limit may cause an error.
- Music files may be protected by international copyright owners or copyright laws. You may have to obtain legal permission before copying a music file. To download or copy a music file, first check the copyright law for the relevant country.

E-mail

E-mail overview

You can register an email account to your device and then you can check and send emails from your device.



- If you use mobile data, you may be charged for data usage depending on your pricing plan. Consult with your service provider for more information.

Registering email accounts

When you use the email app for the first time, register your email account.

- 1 Tap  > **E-mail**.
- 2 Select an email service provider.
- 3 Enter your email address and password and then tap **NEXT** to register your account.
 - To manually register an email account, tap **MANUAL SETUP**.

Managing email accounts

To view or edit your email account settings, tap  > **Settings**.

- To add an account, tap **Add account**.
- To delete an account, tap  > **Remove account**.

Opening another email account

If several email accounts are registered and you want to view another account, tap  and select another one from the account list.

Checking email

- 1 Tap  and select a mail box.
- 2 Select an email from the email list.
 - The email message appears.

Sending email

- 1 Tap .
- 2 Enter the recipient's email address.
- 3 Enter a subject and message.
 - To attach files, tap .
 - To access optional menu items, tap .
- 4 Tap  to send the email.

Calendar

Calendar overview

You can use the calendar to manage events and tasks.

Adding events

- 1 Tap  > **Calendar**.
- 2 Select a date and then tap .
- 3 Enter event details and tap **SAVE**.
 - If you tap a date from the calendar and the date contains events, a pop-up window appears showing a list of the events. Tap an event from the pop-up window to view the event details.

Syncing events

Tap  > **Calendars to sync**, and select a calendar to sync.



- When your events are saved from the device to your Google account, they are automatically synced with the Google calendar, too. Then, you can sync other devices with the Google calendar in order to make those devices have the same events that your device has and to manage your events on those devices.

Event pocket

You can use the event pocket to create events.

Tap  to open the event pocket and then drag content to a date in the calendar.

-  : Manage images, text, memos and temporarily saved events. You can also share text, images and memos from another app and save them to the pocket. If you tap **POCKET** when creating an event, the event is temporarily saved to the pocket.
-  : Manage tasks that have no deadline, such as events.

Calculator

You can use two types of calculators: the simple calculator and the scientific calculator.

- 1 Tap  > **Tools** > **Calculator**.
- 2 Use the keypad to make a calculation.
 - To use scientific calculator, drag the green colored slide bar located in the right side of the screen to the left.
 - To restart a calculation, touch and hold the **DEL** button.

Clock

Alarm

You can set an alarm to trigger it at a specified time.

- 1 Tap  > **Clock** > **Alarm**.
- 2 Tap  to add a new alarm.
- 3 Configure the alarm settings and tap **SAVE**.



- If you select a previously set alarm, you can edit the alarm.
- To delete an alarm, tap  at the top of the screen. You can also touch and hold the alarm.

World clock

You can view the current time in cities around the world.

- 1 Tap  > **Clock** > **World clock**.
- 2 Tap  and add a city.

Timer

You can set the timer to trigger an alarm after a specified period of time.

- 1 Tap  > **Clock** > **Timer**.
- 2 Set the time and tap **Start**.
 - To suspend the timer, tap **Pause**. To resume the timer, tap **Resume**.
 - To reset the timer settings, tap **Reset**.
- 3 Tap **Stop** to stop the timer alarm.

Stopwatch

You can use the stopwatch to record a lap time.

- 1 Tap  > **Clock** > **Stopwatch**.
- 2 Tap **Start** to initiate the stopwatch.
 - To record a lap time, tap **Lap**.
- 3 Tap **Pause** to suspend the stopwatch.
 - To resume the stopwatch, tap **Resume**.
 - To clear all the records and newly start the stopwatch, tap **Reset**.

Downloads

You can view, delete or share files downloaded via the Internet or apps.

Tap  > **Tools** > **Downloads**.

File Manager

You can view and manage files saved on your device **LG AirDrive**.

- 1 Tap  > **Tools** > **File Manager**.
- 2 Tap  and select the desired storage location.

Voice Recorder

You can record and save your voice or others' voices from important events. Recorded voice files can be played back or shared.

- 1 Tap  > **Tools** > **Voice Recorder**.
- 2 Tap 
 - To pause recording, tap .
 - To save the location details of recording, tap Location.
 - To add an event, tap Event and add an event to the date you want.
- 3 Tap  to end recording.
 - The file is saved automatically and the pre-listen screen appears.
- 4 Tap  to play the recorded voice.
 - If you tap , recorded voice files appear. You can play a recorded voice file from the list.

FM Radio

You can listen to FM radio.

Tap  > **Tools** > **FM Radio**.



- To use this app, first connect earphones to the device. The earphones function as the radio antenna.
- This function may not be supported depending on the area.

Contacts

Contacts overview

You can save and manage contacts.

Tap  > **LG** > **Contacts**.

Adding contacts

Adding new contacts

- 1 On the contact list screen, tap .
- 2 Enter contact details and tap **SAVE**.

Importing contacts

You can import contacts from another storage device.

- 1 On the contact list screen, tap  > **Manage contacts** > **Import**.
- 2 Select the source and target locations of the contact you want to import, and then tap **OK**.
- 3 Select the contacts and tap **IMPORT**.

Adding contacts to the speed dial list

- 1 On the contact list screen, tap  > **Speed dial**.
- 2 Tap **Add contact** from a speed dial number.
- 3 Select a contact.

Searching for contacts

You can search for contacts by using one of the following options:

- On the contact list screen, enter a contact name in the search box.
- Scroll the contact list up or down.
- From the index of the contact list screen, tap the initial letter of a contact.

Contacts list

Editing contacts

- 1 On the contact list screen, select a contact.
- 2 On the contact detail screen, tap  and edit details.
- 3 Tap **SAVE** to save changes.

Deleting contacts

You can delete contacts by using one of the following options:

- On the contact list screen, touch and hold a contact you want to delete, then tap **Delete contact**.
- Tap  > **Delete** on the contact list screen.

Adding favourites

You can register frequently used contacts as favourites.

- 1 On the contact list screen, select a contact.
- 2 On the contact detail screen, tap .

Creating groups

- 1 On the contact list screen, tap **Groups** >  > **New group**.
- 2 Enter a new group name.
- 3 Tap **Add members**, select contacts, then tap **ADD**.
- 4 Tap **SAVE** to save the new group.

Tasks

You can register tasks to your device to easily manage schedules.

- 1 Tap  > **LG** > **Tasks**.
- 2 Tap  to add a task.
- 3 Enter task details and then tap **SAVE**.

LG Backup

You can back up, restore and move the data saved on your device.

- 1 Tap  > **Management** > **LG Backup**.
You can also tap  > **Settings** > **General** > **Backup & reset** > **LG Backup**.
- 2 Follow the on-screen instructions to select whether to back up data in the preset backup folder on the device or to copy data to other devices.



- Resetting your device may delete backup files saved in internal storage. To minimise data loss, copy important backup files from the LG Backup folder in the internal storage to a computer or external storage.



- Data in a Google account will not be backed up. When you synchronise your Google account, Google apps, Google contacts, Google calendar, Google memo app data and apps downloaded from Play store are stored on the Drive app automatically.
- Backup files are saved with the file extension *.lbf under the LG Backup folder on the memory card or internal storage.
- Fully charge the battery before backing up or restoring data to avoid unintentional powering off during the process.

RemoteCall Service

Your device can be remotely diagnosed for resolving issues. First, make a phone call to an LG Customer Service Centre as follows:



- To use this function, first you must agree to usage of the function.
- If you use mobile data, you may be charged for data usage depending on your pricing plan.

- 1 Tap **○ > Management > RemoteCall Service**.
- 2 Connect a call to an LG Customer Service Centre.
- 3 After the call connects, follow the service associate's instructions to enter a six-digit access number.
 - Your device is remotely connected and the remote support service starts.

Chrome

Sign in to Chrome and import opened tabs, bookmarks and address bar data from a computer to your device.

Google apps

You can use Google apps by setting a Google account. The Google account registration window appears automatically when you use a Google app for the first time. If you do not have a Google account, create one from your device. For details on how to use an app, see the Help in the app.



- Some apps may not work depending on the area or service provider.

Docs

Create documents or edit documents created online or from another device. Share and edit documents together with others.

Drive

Upload, save, open, share and organise files from your device. Files accessible from apps can be accessed from anywhere, including online and offline environments.

Duo

Make a video call with your family, friends and anyone else who uses the app.

Gmail

Register your Google email account to your device to check or send email.

Google

Use the Google to search for web pages, images, news and more by entering or speaking keywords.

Maps

Find your location or the location of a place on the map. View geographical information.

Photos

View or share photos or albums saved on your device.

Play Movies & TV

Use your Google account to rent or purchase movies. Purchase content and play it anywhere.

Play Music

Purchase music files from the **Play Store**. Play music files saved on your device.

Sheets

Create spreadsheets or edit spreadsheets created online or from another device. Share and edit spreadsheets together with others.

Slides

Create presentation material or edit presentation material created online or from another device. Share and edit presentation material together with others.

YouTube

Search and play videos. Upload videos on YouTube to share them with people around the world.



04

Phone Settings

Settings

You can customise the device settings in accordance with your preferences.

Tap  > **Settings**.



- Tap  and enter a keyword in the search box to access a setting item.
- Tap  to change the view mode. This user guide assumes that you are using the **Tab view**.

Networks

Dual SIM card

You can configure Dual SIM settings.

- 1 On the settings screen, tap **Networks > Dual SIM card**.
- 2 Customise the following functions:
 - **SIM card 1**: Change the name and icon of the SIM card 1.
 - **SIM card 2**: Change the name and icon of the SIM card 2.
 - **SIM card colour theme**: Change the colour themes for the SIM cards.
 - **Cost save mode**: Activate or deactivate the cost save mode. In the cost save mode, if you make a call to a contact to which a specific SIM is assigned, this SIM is used for the call even if the other SIM is active, for example, it is using mobile data.
 - **Mobile data**: Select a SIM card you want to use for mobile data service. You can also turn off this function.
 - **Data roaming**: Select this option to enable the device to use mobile data when you are roaming outside your home network area.

Wi-Fi

You can connect to nearby devices over a Wi-Fi network.

Connecting to a Wi-Fi network

- 1 On the settings screen, tap **Networks > Wi-Fi**.
- 2 Drag  to activate it.
 - Available Wi-Fi networks appear automatically.
- 3 Select a network.
 - You may need to enter the network's Wi-Fi password.
 - The device skips this process for previously accessed Wi-Fi networks. If you do not want to automatically connect to a certain Wi-Fi network, touch and hold the network and then tap **Forget network**.

Wi-Fi network settings

On the settings screen, tap **Networks > Wi-Fi**.

- **Switch to mobile data:** If the mobile data connection function is activated but the device cannot connect to the Internet via Wi-Fi connection, the device automatically connects to the Internet via the mobile data connection.
-  : Customise Wi-Fi network settings.

Wi-Fi Direct

You can connect your device to other devices that support Wi-Fi Direct to share data directly with them. You do not need an access point. You can connect with more than two devices by using Wi-Fi Direct.

- 1 On the settings screen, tap **Networks > Wi-Fi >  > Advanced Wi-Fi > Wi-Fi Direct**.
 - Nearby devices that support Wi-Fi Direct automatically appear.
- 2 Select a device.
 - Connection occurs when the device accepts the connection request.



- The battery may drain faster when using Wi-Fi Direct.

Bluetooth

You can connect your device to nearby devices that support Bluetooth to exchange data with them. Connect your device to a Bluetooth headset and a keyboard. This makes it easier to control the device.

Pairing with another device

- 1 On the settings screen, tap **Networks > Bluetooth**.
- 2 Drag  to activate it.
 - Available devices appear automatically.
 - To refresh the device list, tap **SEARCH**.



- Only devices set as visible are displayed on the list.

- 3 Select a device from the list.
- 4 Follow the on-screen instructions to perform authentication.



- This step is skipped for previously accessed devices.

Sending data via Bluetooth

- 1 Select a file.
 - You can send multimedia files or contacts.
- 2 Tap  > **Bluetooth**.
- 3 Select a target device for the file.
 - The file is sent as soon as the target device accepts it.



- File sharing processes may differ, depending on the file.

Mobile data

You can turn on or off mobile data. You can also manage mobile data usage.

Turning on mobile data

- 1 On the settings screen, tap **Networks > Mobile data**.
- 2 Drag  to activate it.

Customising mobile data settings

- 1 On the settings screen, tap **Networks > Mobile data**.
- 2 Customise the following settings:
 - **Mobile data:** Set to use data connections on mobile networks.
 - **Limit mobile data usage:** Set a limit for mobile data usage to block mobile data if the limit is reached.
 -  : Customise mobile data settings.

Call

You can customise call settings, such as voice call and international call options.



- Some features may not be supported depending on the area or service provider.

- 1 On the settings screen, tap **Networks > Call**.
- 2 Customise the settings.

Share & connect

NFC

You can use the device as a transportation card or credit card. You can also share data with the other device.

- 1 On the setting screen, tap **Networks > Share & connect > NFC**.
- 2 Drag  to activate it.
 - Touch your device with other device that supports NFC to allow sharing data.



- NFC antenna may be located differently depending on the device type. See [Parts overview](#) for details about the NFC antenna area.

Android Beam

You can share files by touching the back of the device to other device. You can also share files including music, videos or contacts and open a web page or launch an app from the other device.

- 1 On the settings screen, tap **Networks > Share & connect > Android Beam**.
- 2 Touch the back of the device with another device.



- NFC antenna may be located differently depending on the device type.

File sharing

You can send and receive files between your device and other LG devices or tablets.

- 1 On the settings screen, tap **Networks > Share & connect > File sharing**.
- 2 Customise the following settings:
 - **LG Stylus 3:** Change the device name.
 - **Save to:** Set the destination to save files sent from other devices in.
 - **File sharing:** Permit receipt of files sent from other devices.
 - **SmartShare Beam:** Share files with other devices via SmartShare Beam.
 - **Help:** You can view help on sharing files.

Media server

You can share media content on your device with nearby devices that support DLNA.

- 1 On the settings screen, tap **Networks > Share & connect > Media server**.
- 2 Customise the following settings:
 - **Content sharing:** Share content on your device with nearby devices.
 - **LG Stylus 3:** Set your device's name.
 - **Content to share:** Select the type of media content to share with other devices.
 - **Allowed devices:** View a list of devices permitted to access content on your device.
 - **Not-allowed devices:** View a list of devices not permitted to access content on your device.

LG AirDrive

You can use your LG account to manage files saved on the device from a computer. You do not need a USB connection.

- 1 On the settings screen, tap **Networks > Share & connect > LG AirDrive**.
- 2 Use a single LG account to sign in to LG Bridge on the computer and **LG AirDrive** on the device.
 - LG Bridge software can be downloaded from www.lg.com.
- 3 Manage files on the device from the computer.

Printing

You can connect your device to a Wireless printer and print photos or documents saved on the device.

- 1 On the settings screen, tap **Networks > Share & connect > Printing**.



- If the desired printer is not in the list, install the printer driver from the app store.

- 2 Drag to activate it.
- 3 Select a printer from the printer list screen.
 - To add a printer, tap **⋮ > Add printer**.
 - Tap **⋮ > Settings** from the printer list screen.
- 4 Select a file and tap **⋮ > Print**.
 - The document prints.



- If you do not have a Google account, tap **ADD ACCOUNT** to create an account.

Tethering

USB tethering

You can connect the device to another device via USB and share mobile data.

- 1 Connect your device and other devices via USB cable.
- 2 On the settings screen, tap **Networks > Tethering > USB tethering** and then drag  to activate it.



- This option uses mobile data and may incur data usage fees, depending on your pricing plan. Consult with your service provider for more information.
- When connecting to a computer, download the USB driver from www.lg.com and install it on the computer.
- You cannot send or receive files between your device and a computer while USB tethering is turned on. Turn off USB tethering to send or receive files.
- Operating systems that support tethering are Window XP or higher, or Linux.

Wi-Fi hotspot

You can set the device as a wireless router so that other devices can connect to the internet by using your device's mobile data.

- 1 On the settings screen, tap **Networks > Tethering > Wi-Fi hotspot** and then drag  to activate it.
- 2 Tap **Set up Wi-Fi hotspot**, and enter the Wi-Fi name (SSID) and password.
- 3 Turn on Wi-Fi on the other device, and select the name of the device network on the Wi-Fi list.
- 4 Enter the network password.



- This option uses mobile data and may incur data usage fees, depending on your pricing plan. Consult with your service provider for more information.
- More information is available at this web site:
<http://www.android.com/tether#wifi>

Bluetooth tethering

A Bluetooth-connected device can connect to the internet by using your device's mobile data.

- 1 On the settings screen, tap **Networks > Tethering > Bluetooth tethering** and then drag to activate it.
- 2 Turn on Bluetooth on both devices, and pair them.



- This option uses mobile data and may incur data usage fees, depending on your pricing plan. Consult with your service provider for more information.
- More information is available at this web site:
http://www.android.com/tether#Bluetooth_tethering

Help

You can view help on using tethering and hotspots.

On the settings screen, tap **Networks > Tethering > Help**.

More

Airplane mode

You can turn off the call and mobile data functions. When this mode is on, functions that do not involve data, such as games and music playback, remain available.

- 1 On the settings screen, tap **Networks > More > Airplane mode**.
- 2 Tap **TURN ON** in the confirmation screen.

Mobile networks

You can customise mobile data settings.

- 1 On the settings screen, tap **Networks** > **More** > **Mobile networks**.
- 2 Customise the following settings:
 - **Mobile data:** Turn mobile data on or off.
 - **Access Point Names:** View or change the access point for using mobile data services. To change the access point, select a choice from the access point list.
 - **Network operators:** Search for network operators and connect automatically to a network.

VPN

You can connect to a safe virtual network, such as an intranet. You can also manage connected virtual private networks.

Adding VPN

- 1 On the settings screen, tap **Networks** > **More** > **VPN**.



- Be cautious that if the screen lock is unlocked, all VPN information saved on the device are erased.

- 2 Tap **Add VPN**.



- This feature is available only when the screen lock is activated. If the screen lock is deactivated, a notification screen appears. Tap **SETTINGS** from the notification screen to activate the screen lock. See *Configuring screen lock settings* for details.

- 3 Enter VPN details and tap **SAVE**.

Configuring VPN settings

- 1 Tap a VPN from the **VPNS** list.
- 2 Enter the VPN user account details and tap **CONNECT**.
 - To save the account details, select the **Save account information** checkbox.

Sound & notification

You can customise sound, vibrate and notification settings.

On the settings screen, tap **Sound & notification** and customise the following settings:

- **Sound profile:** Change the sound mode to **Sound, Vibrate only**, or **Silent**.
- **Volume:** Adjust the sound volume for various items.
- **SIM1 ringtone/SIM2 ringtone:** Select a ringtone for incoming calls. Add or delete ringtones.
- **Ringtone ID:** Create a ringtone for an incoming call from a particular contact.
- **Sound with vibration:** Set the device to vibrate and play a ringtone simultaneously.
- **SIM1 vibration type/SIM2 vibration type:** You can select a vibration type or make your own vibration pattern.
- **Do not disturb:** Set the time, range and app type to receive notification messages. Receive notification messages only on particular days of the week.
- **Lock screen:** Display or hide a notification message on the lock screen. You can also hide private information.
- **Apps:** Select the apps that can show their notification messages on the screen, and set the priorities of those apps in regard to notification messages.
- **Notification LED:** Indicate device status via LED.

- **More > SIM1 notification sound/SIM2 notification sound:** Select a notification ringtone. Set music saved on the device as a notification ringtone.
- **More > Vibrate on tap:** Set the device to vibrate when you tap certain items on the screen.
- **More > Sound effects:** Select a sound effect to play when you tap the dial pad, select an option, or lock or unlock the screen.
- **More > Message/call voice notifications:** Set the device to read the caller information or message content via voice.

Display

You can customise detailed settings for each screen type.

On the settings screen, tap **Display** and customise the following settings:

- **Home screen:** Customise settings for the Home screen. See *Home screen settings* for details.
- **Lock screen:** Customise lock screen settings. See *Lock screen settings* for details.
- **Theme:** Select a screen theme for your device.
- **Home touch buttons:** Rearrange Home touch buttons or change their background colors. Hide Home touch buttons on the screen.
- **Font type:** Change the font face.
- **Font size:** Change the font size.
- **Bold text:** Bold the text on the screen.
- **Brightness:** Use the slide bar to change the device's screen brightness. To automatically adjust screen brightness according to ambient light intensity, tap the **Auto** switch.
- **Auto:** Set the device so that the screen brightness is automatically adjusted in accordance with the ambient light intensity.
- **Comfort view:** Set the device to reduce amount of blue light on screen to reduce eye strain.

- **Auto-rotate screen:** Automatically rotate the screen according to the device's orientation.
- **Screen timeout:** Automatically turn off the screen when the device is left idle for a specified period of time.
- **More > Display size:** Zoom in or out the screen.
- **More > KnockON:** Turn on or off the screen by tapping the screen twice.
- **More > Screen saver:** Display a screen saver when the device is connected to the holder or charger. Select a screen saver type to display.
- **More > Mini view:** You can make the screen size smaller to conveniently use the device with one hand. Drag the Home touch button at the bottom of the screen to the left or right.
- **More > Motion sensor calibration:** Correct the angle and speed of the motion sensor to improve the tilt accuracy and speed of the sensor.



- When correcting the motion sensor, make sure to place the device on a flat surface. Failure to do so may cause an error with the motion sensor functions, such as automatic screen rotation.

General

Language & keyboard

You can customise language and keyboard settings for your device.

- 1 On the settings screen, tap **General > Language & keyboard**.
- 2 Customise the following settings:
 - **Language:** Select a language to apply for the device.
 - **Current keyboard:** View the keyboard currently in use. Select a keyboard to use when entering text.
 - **LG Keyboard:** Customise the LG keyboard settings.

- **Google voice typing:** Configure the options for text dictation by Google.
- **Text-to-speech output:** Configure the settings for text-to-speech output.
- **Pointer speed:** Adjust the pointer speed of a mouse or trackpad.
- **Reverse buttons:** Reverse the right mouse button to perform primary direct-manipulation actions.

Location

You can customise how your location information is used by particular apps.

- 1 On the settings screen, tap **General > Location**.
- 2 Customise the following settings:
 - **Mode:** Select a method to provide your location information.
 - **RECENT LOCATION REQUEST:** View apps that recently requested location information.
 - **LOCATION SERVICES:** Configure the Google location history settings.

Accounts & sync

You can add or manage accounts, including a Google account. You can also sync particular apps or user information automatically.

- 1 On the settings screen, tap **General > Accounts & sync**.
- 2 Customise the following settings:
 - **Auto-sync data:** Sync all the registered accounts automatically.
 - **ACCOUNTS:** View a list of registered accounts. To view or change details of an account, tap the account.
 - **ADD ACCOUNT:** Add accounts.

Accessibility

You can manage accessibility plug-ins installed on your device.

- 1 On the settings screen, tap **General > Accessibility**.
- 2 Customise the following settings:
 - **Vision > TalkBack**: Set the device to notify screen status or actions via voice.
 - **Vision > Message/call voice notifications**: Set the device to read the caller information or message content via voice.
 - **Vision > Font size**: Change the font size.
 - **Vision > Bold text**: Bold the text on the screen.
 - **Vision > Display size**: Zoom in or out the screen.
 - **Vision > Touch zoom**: Zoom in or out by tapping the screen three times.
 - **Vision > Window zoom**: Magnify or reverse a part of the screen.
 - **Vision > Large mouse pointer**: Magnify the mouse pointer.
 - **Vision > High contrast screen**: Turn the background color into black for a high contrast screen.
 - **Vision > Screen color inversion**: Increase the display color contrast for people with low vision.
 - **Vision > Screen color adjustment**: Adjust the display color.
 - **Vision > Grayscale**: Switch the screen to grayscale mode.
 - **Vision > End calls with the Power key**: End a call by pressing the Power/Lock Key.
 - **Hearing > Captions**: Turn on the subtitle service when playing videos for the hearing impaired.
 - **Hearing > Notification LED**: Indicate device status via LED.
 - **Hearing > Flash alerts**: Set the device to notify you with a blinking light for incoming calls and alarms.

- **Hearing > Turn off all sounds:** Mute all sounds and lower volume on the receiver.
- **Hearing > Audio type:** Select the audio type.
- **Hearing > Sound balance:** Adjust the audio output balance. Use the slide bar to change the balance.
- **Motor & cognition > Touch assistant:** Turn on the touch board to make buttons and gestures easier to use.
- **Motor & cognition > Touch input:** Enter text by touching and holding the screen or modify it by simply touching the screen.
- **Motor & cognition > Physical keyboard:** Customise the keyboard settings.
- **Motor & cognition > Auto mouse click:** Automatically click the mouse pointer in case of no movement.
- **Motor & cognition > Touch and hold for calls:** Answer or decline calls by touching and holding the call button instead of dragging it.
- **Motor & cognition > Screen timeout:** Turn off the screen automatically when the device is left idle for a specified period of time.
- **Motor & cognition > Touch control areas:** Limit the touch area so that only a particular portion of the screen can be controlled by touch input.
- **Accessibility features shortcut:** Quickly access a frequently used function by tapping  three times.
- **Auto-rotate screen:** Automatically change the screen orientation according to the physical position of the device.
- **Switch Access:** Create key combinations to control your device.

Shortcut keys

Using the Power key

You can use the power key to take a screenshot or a photo.

- 1 On the settings screen, tap **General > Shortcut keys**.
- 2 Customise the following settings:
 - **Take a selfie in Camera:** Tap the Power key to take a photo.



- Your finger must remain on the Power key until the photo is taken.
- This feature is only available in the front camera.

- **Take a screenshot:** Tap the Power key twice to take a screenshot.



- Your finger must remain on the Power key until the screenshot is taken.

Using the Volume keys

You can use the volume keys to directly launch apps when the screen is turned off or locked.

- 1 On the settings screen, tap **General > Shortcut keys > Open Capture+/Camera**.
- 2 Drag to activate it.
 - Press the Volume Down (-) key twice to launch the **Camera** app when the screen is locked or turned off. Press the Volume Up (+) key twice to launch **Capture+**.

Google services

You can use Google settings to manage your Google apps and account settings.

On the settings screen, tap **General > Google services**.

Fingerprints & security

- 1 On the settings screen, tap **General** > **Fingerprints & security**.
- 2 Customise the following settings:
 - **Fingerprints:** Use your fingerprint to unlock the screen or content. See *Fingerprint recognition overview* for details.
 - **Content lock:** Set the method to lock files in **Gallery** or **QuickMemo+**.
 - **Encrypt SD card:** Encrypt the memory card to prevent use on another device. See *Memory card encryption* for details.
 - **Secure start-up:** Protect your device with a lock when it powers on. See *Secure start-up settings* for details.
 - **Set up SIM card lock:** Lock or unlock the SIM card, or change the password (PIN).
 - **Password typing visible:** Display a password as you enter it.
 - **Phone administrators:** Allow privileges to restrict the control or use of the device to particular apps.
 - **Unknown sources:** Allow the installation of apps from non-Play Store apps.
 - **Credential protection:** View the type of the storage where the security certificate will be saved.
 - **Certificate management:** Manage the security certificate saved on the device.
 - **Trust agents:** View and use trust agents installed on the device.
 - **Screen pin:** Fix the app screen so that only the currently active app can be used.
 - **Usage access:** View details on usage of apps on the device.

Pen

Use the Pen settings to configure option when the pen is removed.
See *Pen Pop* for details.

On the settings screen, tap **General > Pen**.

- **Open when pen is removed:** Select a feature that will automatically start when the pen is removed from the device.
- **Pen Pop shortcut:** Set frequently used apps.
- **Screen-off Memo:** Create notes on the turned-off screen when the pen is removed.
- **Pen detection:** Be notified by sound or vibration when the pen is removed or inserted.
- **Pen Keeper:** Be notified by sound or visual notification when the device is moved with the pen removed.

Date & time

You can customise date and time settings for your device.

- 1 On the settings screen, tap **General > Date & time**.
- 2 Customise the settings.

Storage

You can view and manage internal storage on the device or storage space of the memory card.

- 1 On the settings screen, tap **General > Storage**.
- 2 Customise the following settings:
 - **DEVICE STORAGE:** View the total storage space and free space in the device's internal storage. View a list of apps in use and the storage capacity for each app.
 - **PORTABLE STORAGE:** View the total storage space and free space in the memory card. This option appears only when a memory card is inserted. To unmount the memory card, tap .

Battery & power saving

You can view the current battery information or turn on power-saving mode.

- 1 On the settings screen, tap **General > Battery & power saving**.
- 2 Customise the following settings:
 - **Battery usage**: View the battery usage details. To view more details, select a specific item.
 - **Battery percentage on status bar**: Display the remaining battery level as a percentage on the status bar.
 - **Battery saver**: Reduce battery consumption by cutting down some device settings, such as the display brightness, speed and vibration intensity. The status bar displays  when power-saving mode is on.

Memory

You can view the average amount of memory usage over a certain period of time and the memory occupied by an app.

- 1 On the settings screen, tap **General > Memory**.
- 2 Tap  to set a time slot to retrieve data.

Apps

You can view a list of installed apps. Stop apps from running or delete apps, if necessary.

- 1 On the settings screen, tap **General > Apps**.
- 2 Select an app and perform actions.

Tap & pay

You can make payments with your device instead of a credit card.

On the settings screen, tap **General > Tap & pay**.

Backup & reset

You can back up data saved on your device to another device or account. Reset the device, if necessary.

- 1 On the settings screen, tap **General > Backup & reset**.
- 2 Customise the following settings:
 - **LG Backup:** Back up or restore the blocked sender list, messages, images, home screens and other data saved on the device. See [LG Backup](#) for details.
 - **Back up my data:** Back up your app data, Wi-Fi password and other settings to the Google server.
 - **Backup account:** View the current backup account in use.
 - **Automatic restore:** Automatically restore backup settings and data when reinstalling an app.
 - **Network settings reset:** Reset Wi-Fi, Bluetooth and other network settings.
 - **Factory data reset:** Reset all settings for the device and delete data.



- Resetting your device deletes all data on it. Enter your device name, Google account and other initial information again.

About phone

You can view information about your device, such as the name, status, software details and legal information.

On the settings screen, tap **General > About phone** and view information.



05

Appendix

LG Language Settings

Select a language to use on your device.

- Tap  > **Settings** > **General** > **Language & keyboard** > **Language** > **ADD LANGUAGE**, and select a language.
 - Touch and hold  and drag it to the top of the language list to set it as a default language.

LG Bridge

LG Bridge overview

LG Bridge is an app that helps you manage the photos, music, videos and documents saved on your LG smartphone from your computer conveniently. You can back up contacts, photos and more to the computer or update the device software.



- See LG Bridge help for details.
- The supported features may vary depending on the device.
- LG USB driver is a necessary program to connect your LG smartphone with the computer and is installed when you install LG Bridge.

LG Bridge functions

- Manage the files on the device from a computer via Wi-Fi connection or mobile data connection.
- Back up data from the device to a computer or restore data from a computer to the device via USB cable connection.
- Update the device software from a computer via USB cable connection.

Installing LG Bridge on a computer

- 1 Go to *www.lg.com* from your computer.
- 2 In the search bar, enter the name of your device.
- 3 Click **PC Sync > LG BRIDGE**, and download the setup file.

Phone software update

LG Mobile phone software update from the Internet

For more information about using this function, please visit <http://www.lg.com/common/index.jsp>, select your country and language.

This feature allows you to conveniently update the firmware on your phone to a newer version from the Internet without needing to visit a service centre. This feature will only be available if and when LG makes a newer firmware version available for your device.

Because the mobile phone firmware update requires the user's full attention for the duration of the update process, please make sure you check all instructions and notes that appear at each step before proceeding. Please note that removing the USB cable during the upgrade may seriously damage your mobile phone.



- LG reserves the right to make firmware updates available only for selected models at its own discretion and does not guarantee the availability of the newer version of the firmware for all handset models.

LG Mobile Phone software update via Over-the-Air (OTA)

This feature allows you to conveniently update your phone's software to a newer version via OTA, without connecting a USB cable. This feature will only be available if and when LG makes a newer firmware version available for your device.

To perform the phone software update, tap  > **Settings** > **General** > **About phone** > **Common** > **Update Center** > **Software Update** > **Check now for update**.



- Your personal data from internal phone storage—including information about your Google account and any other accounts, your system/application data and settings, any downloaded applications and your DRM licence—might be lost in the process of updating your phone's software. Therefore, LG recommends that you backup your personal data before updating your phone's software. LG does not take responsibility for any loss of personal data.
- This feature depends on the area or service provider.

FAQ

This chapter lists some problems you might encounter when using your phone. Some problems require you to call your service provider, but most are easy to fix yourself.

Message	Possible causes	Possible corrective measures
SIM card error	There is no SIM card in the phone or it is inserted incorrectly.	Make sure the SIM card is correctly inserted.
No network connection/ Dropped network	Signal is weak or you are outside the carrier network.	Move toward a window or into an open area. Check the network operator coverage map.
	Operator applied new services.	fContact your service provider.
Codes do not match	To change a security code, confirm the new code by re-entering it.	If you forget the code, contact your service provider.
	The two codes you entered do not match.	
No applications can be set	Not supported by service provider or registration required.	Contact your service provider.
Downloaded application causes a lot of errors	Remove the application.	<ol style="list-style-type: none">1. Tap  > Settings.2. Tap General > Apps.3. Tap the app > Uninstall.

Message	Possible causes	Possible corrective measures
Calls not available	Dialling error	New network not authorised.
	New SIM card inserted	Check for new restrictions.
	Pre-paid charge limit reached	Contact service provider or reset the limit with PIN2.
Phone cannot be turned on	On/Off key pressed too briefly.	Press the On/Off key for at least two seconds.
	Battery is not charged.	Charge battery. Check the charging indicator on the display.
Charging error	Battery is not charged	Charge battery.
	Outside temperature is too hot or cold.	Make sure phone is charging at a normal temperature.
	Contact problem	Check the charger and its connection to the phone.
	No voltage	Plug the charger into a different outlet.
	Charger defective	Replace the charger.
	Wrong charger	Use only original LG accessories.
Number not allowed	The Fixed dialling number function is on.	Check the Settings menu and turn the function off.
Impossible to receive/ send SMS & photos	Memory full	Delete some data, such as applications or messages from your phone to make more memory available.

Message	Possible causes	Possible corrective measures
Files do not open	Unsupported file format	Check the supported file formats.
The screen does not turn on when I receive a call.	Proximity sensor problem	If you use a protection tape or case, make sure it has not covered the area around the proximity sensor. Make sure that the area around the proximity sensor is clean.
No sound	Vibration mode	Check the settings status in the sound menu to make sure you are not in vibration or no interruptions mode.
Hangs up or freezes	Intermittent software problem	If the screen freezes or the phone does not respond when you try to operate it, remove the battery and reinsert it. Then power the phone back on. Alternatively, try to perform a software update through the website.

Anti-Theft Guide

Set up your device to prevent other people from using it if it's been reset to factory settings without your permission. For example, if your device is lost, stolen, or wiped, only someone with your Google account or screen lock information can use the device.

All you need to make sure your device is protected is:

- Set a screen lock: If your device is lost or stolen but you have a screen lock set, the device can't be erased using the Settings menu unless your screen is unlocked.
- Add your Google account on your device: If your device is wiped but you have your Google account on it, the device can't finish the setup process until your Google account information is entered again.

After your device is protected, you'll need to either unlock your screen or enter your Google account password if you need to do a factory reset. This ensures that you or someone you trust is doing the reset.



- Do not forget your Google account and password you had added to your device prior to performing a factory reset. If you can't provide the account information during the setup process, you won't be able to use the device at all after performing the factory reset.

More information

Open Source Software Notice Information

To obtain the source code under GPL, LGPL, MPL, and other open source licenses, that is contained in this product, please visit <http://opensource.lge.com>.

In addition to the source code, all referred license terms, warranty disclaimers and copyright notices are available for download.

LG Electronics will also provide open source code to you on CD-ROM for a charge covering the cost of performing such distribution (such as the cost of media, shipping, and handling) upon email request to opensource@lge.com. This offer is valid for three (3) years from the date on which you purchased the product.

Trademarks

- Copyright© 2017 LG Electronics, Inc. All rights reserved. LG and the LG logo are registered trademarks of LG Group and its related entities.
- Google™, Google Maps™, Gmail™, Duo™, Google Calendar™, YouTube™ and Play Store™ are trademarks of Google, Inc.
- Bluetooth® is a registered trademark of Bluetooth SIG, Inc. worldwide.
- Wi-Fi® and the Wi-Fi logo are registered trademarks of the Wi-Fi Alliance.
- All other trademarks and copyrights are the property of their respective owners.

DECLARATION OF CONFORMITY

Hereby, **LG Electronics** declares that this **LG-M400n** product is in compliance with the essential requirements and other relevant provisions of Directive **2014/53/EU**.

A copy of the Declaration of Conformity can be found at <http://www.lg.com/global/declaration>



CE