



繁體中文

簡體中文

ENGLISH

USER GUIDE

**LG V10**  
LG-H961N

# 有關本使用者指南

繁體中文

感謝選用 LG！使用產品前請仔細閱讀此用戶指南，以保安全及正確使用。

- 只可使用原裝 LG 配件。所提供的項目僅適用於此裝置，可能不兼容其他裝置。
- 由於使用觸控螢幕鍵盤，此裝置不適合視障人士使用。
- 說明以產品的預設設定為基礎。
- 本產品預載的應用程式需要更新及支援，並可能不再支援而無須事前通知。如對裝置預載的應用程式有任何疑問，請與 LG 服務中心聯絡。有關用戶自行安裝之應用程式，請與相關服務供應商聯絡。
- 修改裝置的操作系統或安裝非官方來源提供的軟件，可能導致裝置故障及資料損毀或遺失。此等行為違反 LG 授權協議，並導致保養失效。
- 一些內容和圖片視乎您地區、服務供應商、軟件版本或 OS 版本可能與您的裝置有所不同，並可能有所更改而不須事前通知。
- 於裝置中的軟件、音效、牆紙、圖像及其他媒體乃被授權作為有限度使用。如您抽取及使用這些項目作為商業用途，則可能已侵犯版權法。作為用戶，您對於已非法形式使用媒體附上全部責任。
- 如使用數據服務例如訊息、上載、下載、自動同步或使用位置服務時，可能被收取額外費用。如要避免產生額外收費，請選擇符合所需的數據計劃。聯絡您的服務供應商以獲取更額外詳細資料。

## 教學通知

 <b>警告：</b>	可能構成自身/他人傷害，或對電話/其他財產造成損毀的情況。
 <b>注意</b>	通知或其他資訊。

# 目錄

安全及有效使用準則 .....	5	安裝 Nano SIM 卡及電池 .....	25
為您而設的功能 .....	10	充電 .....	27
雙視窗 .....	11	充分利用電池壽命 .....	27
開啓雙視窗功能 .....	11	插入記憶卡 .....	28
使用雙視窗功能 .....	11	移除記憶卡 .....	29
指紋 .....	12	觸控螢幕提示 .....	29
記錄您的指紋 .....	12	點按或觸控 .....	29
LG Health .....	13	點按並按住 .....	30
迷你檢視 .....	13	拖拉 .....	30
第二螢幕 .....	14	掃動或滑動 .....	30
第二螢幕的功能 .....	14	點按兩下 .....	31
開啓或關閉第二螢幕功能 .....	15	多點觸控 .....	31
Smart Notice .....	15	Google 帳號設定 .....	32
隨意錄影 .....	16	建立您的 Google 帳戶 .....	32
QSlide .....	17	登入您的 Google 帳戶 .....	32
使用 QSlide .....	17	鎖定及解鎖裝置 .....	33
QuickMemo+ .....	18	指紋 .....	33
使用擷取+ .....	18	開啟螢幕 .....	33
檢視已儲存的備忘錄 .....	18	Knock Code .....	33
QuickRemote .....	19	更換螢幕鎖定方式 .....	34
設定 QuickRemote .....	19	Smart Lock .....	34
通用遙控器 .....	19	桌面 .....	35
使用 QuickRemote .....	19	熟悉桌面運作 .....	35
Quick Share .....	20	返回最近使用的應用程式 .....	36
基本功能 .....	21	自訂桌面 .....	37
配件 .....	22	通知面板 .....	38
手機版面 .....	23	擷取螢幕截圖 .....	40
開啟和關閉手機 .....	25	螢幕鍵盤 .....	41
		使用鍵盤與輸入文字 .....	41
		輸入特殊字元 .....	41
		分割或合併鍵盤 .....	42

<b>在電腦與裝置之間傳送與接收數據</b> .....	42	取景器上的隨意錄影模式	56
使用 USB 連接以傳輸數據。	42	間隔拍攝	57
使用 USB 連接以傳輸數據。	43	連環拍攝	57
<b>LG Bridge</b> .....	43	手勢拍攝	57
LG Bridge 功能	43	手勢檢視	58
下載 LG Bridge 軟件	43	多點自動對焦	58
<b>SmartShare</b> .....	44	8X 縮放	58
使用 SmartShare	44	完成拍照後	58
在手機上觀賞附近裝置的內容	44	錄製影片	59
<b>應用程式</b> .....	45	錄製影片後	59
<b>安裝或解除安裝應用程式</b> .....	46	<b>媒體匣</b> .....	60
打開 Play Store 應用程式	46	檢視圖片	60
打開載有應用程式詳情的畫面	46	編輯相片	60
解除安裝應用程式：	46	設定牆紙	60
<b>通話功能</b> .....	47	放大及縮小	61
撥打電話	47	播放影片	61
從通訊錄中撥打電話	47	編輯影片	62
接聽來電和拒接來電	47	刪除相片/影片	62
通話期間撥打第二個電話	48	<b>電子郵件</b> .....	63
檢視通話記錄	48	新增帳戶	63
變更您的通話設定	48	處理帳號資料夾	63
<b>通訊錄</b> .....	49	編寫及發送電子郵件	63
搜尋通訊錄	49	更改電子郵件一般設定：	64
新增通訊錄	49	刪除電子郵件：	64
最愛通訊錄	50	<b>音樂</b> .....	65
建立群組	50	播放歌曲	65
<b>訊息</b> .....	51	音樂播放器選項。	65
發送訊息	51	<b>時鐘</b> .....	67
查看對話	51	鬧鐘	67
更改訊息設定	51	計時器	67
<b>相機</b> .....	52	世界時鐘	67
拍攝相片	52	秒錶	68
取景器自動模式	53	<b>計算機</b> .....	68
取景器上的相機手動模式	55	<b>日曆</b> .....	68
取景器上的手動影片模式	56	<b>語音備忘錄</b> .....	69
		錄製聲音或語音	69

下載.....	69	一般設定.....	85
FM 收音機.....	69	語言及鍵盤.....	85
LG Backup.....	70	位置.....	85
有關備份以及復原裝置的資料.....	70	帳號及同步處理.....	86
備份裝置的資料.....	70	雲端.....	86
Google 應用程式.....	71	使用者.....	86
設定.....	73	協助工具.....	86
存取設定功能表.....	74	迷你檢視.....	87
網絡設定.....	74	快捷鍵.....	88
雙智能咭.....	74	指紋和安全.....	88
Wi-Fi.....	75	Smart settings.....	89
Wi-Fi Direct.....	75	Quick Cover case.....	89
藍牙.....	75	雙視窗.....	89
流動數據.....	77	日期及時間.....	89
通話.....	77	儲存裝置.....	89
NFC.....	78	電池與省電.....	90
Android Beam.....	78	Smart cleaning.....	90
SmartShare Beam.....	79	應用程式.....	90
媒體伺服器.....	79	預設訊息應用程式.....	90
Miracast.....	79	備份與重設.....	91
LG AirDrive.....	80	關於手機.....	91
正在列印.....	80	附錄.....	92
USB 網絡連線.....	80	手機軟件更新.....	93
Wi-Fi 熱點.....	81	常見問題解答.....	94
藍牙數據連線.....	81	防盜指南.....	96
飛航模式.....	81	更多資訊.....	97
VPN.....	81	開放源碼軟件通知.....	97
流動網絡.....	81	商標.....	97
聲音和通知設定.....	82	DivX HD.....	98
顯示設定.....	83	Dolby Digital Plus.....	98
第二螢幕.....	83	鐳射安全聲明.....	99
桌面.....	83	確認聲明.....	99
鎖定螢幕.....	83	使用皮革背蓋的注意事項.....	100
主頁觸摸按鈕.....	84		
更多顯示設定.....	84		

# 安全及有效使用準則

請讀取以下簡易的使用規則。違反這些準則可能會發生危險或觸犯法律。如果發生故障，您裝置中內置的軟件工具會建立一份故障日誌。此工具只會收集與故障相關的數據，例如訊號強度、通話時突然斷線的手機 ID 位置和載入的應用程式。此日誌只用作協助確定發生故障的原因。這些日誌會被加密，如您需要退回裝置進行維修，只有已授權的 LG 維修中心才可存取其內容。

## 無線電波暴露準則

無線電波暴露及特定吸收比率 (SAR) 資訊。

本型號手機 LG-H961N 之設計符合適用的無線電波暴露安全要求。這些要求基於可確保所有使用者安全的科學指引，範圍涵蓋任何年齡與任何健康狀況的人士。

- 無線電波暴露指引的量度單位叫作特定吸收比率或 SAR。SAR 測試使用標準方法進行，用手機以在所有使用的頻帶最高的合格電源水平傳輸。
- 雖然不同型號 LG 手機的 SAR 水平有所差異，但所有這些手機的設計均符合無線電波暴露的相關指引。
- 國際非離子化輻射保護委員會 (ICNIRP) 建議的 SAR 限制，即平均 10 克組織 2 W/kg。
- 本型號手機在耳朵旁邊使用時的最高 SAR 值為 0.594 瓦特/千克 (10 克)，佩戴在身上時的最高 SAR 值為 0.196 瓦特/千克 (10 克)。
- 在將手機置於耳邊正常使用或使其距身體至少 1.5 厘米遠的情況下，此流動電話符合關於 RF 暴露的指引。如果隨身攜帶手機，所用的手機套或其他裝置中不可包含金屬物品，並應使手機與身體至少保持 1.5 厘米的距離。要傳輸數據檔案或訊息時，該裝置與網絡進行有效的連接。在某些情況下，數據檔案或訊息的傳送可能會延遲，直至這類連接可用為止。請確保遵守以上的特別距離指示，直到傳輸完成為止。

## 產品保護及維護

- 請僅使用經認可適用於此特定型號手機的原裝 LG 電池、充電器及配件。使用其他種類的配件可能會導致手機的認可或保養失效，並可能引致危險。
- 一些內容和圖片可能與您的裝置有所不同，並可能有所更改而不須事前通知。
- 請勿拆開此裝置。如手機需要維修，請由合資格的維修技師進行維修。
- 根據 LG 的政策，保養期內的維修可能會包括更換部件或主板，這些用於更換的部件或主板可能全新的或是經過翻新的，但其功能與被更換的部件相同。
- 請遠離如電視、收音機或個人電腦等電器產品而使用手機。
- 裝置需遠離發熱來源，如散熱器或烹調器具。
- 請勿摔落手機。
- 請勿讓此裝置遭機械震動或衝擊。
- 請於任何有特殊限制的地方關閉手機。例如，請勿在醫院內使用手機，否則它可能會對敏感的醫療設備造成影響。
- 請勿以潮濕的雙手對充電中的手機進行操作。這可能會引致觸電和造成手機嚴重損壞。
- 請不要在易燃材料附近為手機充電，因為充電期間手機會發熱並導致火災。
- 使用乾布清潔裝置表面（請勿使用苯、稀釋劑或酒精等溶劑）。
- 切勿在布質家具上為手機充電。
- 手機應在通風良好的環境中充電。
- 請勿讓此裝置接觸過多煙霧或塵埃。
- 請勿將手機置於信用咭或車票附近，這可能會影響磁帶上的資料。
- 請勿以尖銳物件敲打螢幕，否則可能會對手機造成損毀。
- 請勿將手機暴露於液體或濕氣中。
- 請小心使用配件，例如耳機。如非必要，請勿觸及天線。
- 如果玻璃螢幕碎裂，請勿使用、接觸或嘗試移除或修補玻璃。因妄用或不正確使用而導致玻璃螢幕受損並不在保養範圍內。

- 您的手機是一部電子裝置，在正常操作期間，會產生熱力。在沒有足夠通風的環境下，長時間與皮膚直接接觸可能導致不適或輕度灼傷。因此，操作期間或操作之後處理手機時，請謹慎使用。
- 如果手機受潮，請立即拔下手機電源線並立即擦乾。請勿嘗試用烤爐、微波爐或風筒等外部加熱裝置加快變乾的過程。
- 手機如果潮溼，液體會改變手機內產品標籤的顏色。因設備暴露於液體而做成的損壞並不受保養條款覆蓋。

## 有效地操作手機

### 電子裝置

所有手機均可能受訊號干擾，這可能會影響手機效能。

- 請勿在未得到批准下在醫療儀器附近使用您的手機。避免將手機放置在心臟起搏器附近，例如您胸口上的口袋。
- 一些助聽器可能會受手機干擾。
- 手機可能會輕微干擾電視、收音機、個人電腦等。
- 如可能，請在介乎 0°C 與 40°C 的溫度中使用手機。將手機暴露在極低或極高的溫度下可能會導致手機損壞、故障或甚至爆炸。

## 道路安全

檢查您駕駛時所在地區使用手機的法例及規則。

- 駕駛時切勿使用手持手機。
- 請專心一致駕駛。
- 請視乎駕駛情況，駛離馬路並停泊好汽車後才撥打或接聽電話。
- RF 能量可能會影響車內某些電子系統，例如車載立體聲音響及安全設備等。
- 如果您的汽車配有氣囊，切勿讓已安裝的無線設備或手提無線設備阻擋氣囊。這可能會導致氣袋無法正常彈出，使其失去保護作用或造成嚴重人身傷害。
- 如果在外出時聆聽音樂，請確保將音量設定至合適水平，以便可以對周圍環境產生警覺。這在路邊時特別重要。

## 避免損害您的聽覺



避免聽力受損，請不要長時間在高音量下聆聽。

如果長時間以較大音量收聽，可能會對聽覺造成損害。所以我們建議開啟或關閉手機時，不要將它放於太近耳朵。我們亦建議將音樂及通話音量設定至合適水平。

- 使用耳機時，如果您未能聽見附近的人說話，或者坐在您身邊的人能聽見您正在聆聽的聲音，就應將聆聽音量調低。

### 注意

- 耳機的過大聲音壓力可能導致聽覺受損。

## 玻璃部件

您的手機的部分部件以玻璃製造。如您的手機摔在堅硬的表面上或受猛烈撞擊，玻璃部件可能會破裂。如玻璃破裂，請勿接觸或嘗試移除碎片。請停止使用您的手機，直至授權的服務供應商為您更換玻璃部件。

## 爆破地區

請勿在進行爆破時使用手機。請嚴格遵守相關限制、規定或條例。

## 潛在爆炸氣壓

- 請勿在加油站使用手機。
- 請勿在燃料或化學物質附近使用手機。
- 請勿在放置了手機及配件的汽車車廂運送或擺放易燃氣體、液體或爆炸物。

## 在飛機上

無線裝置可引致飛機干擾。

- 登機前，請先關掉手機。
- 未經地勤人員批准，請勿在機艙內使用手機。

## 兒童

請將手機放在兒童接觸不到的安全地方。手機包含微細零件，如果拆開，可能造成哽咽危險。

## 緊急通話

某些流動網絡可能無法使用緊急通話。因此，您不應僅倚賴手機作為緊急通話的方式。請向您本地的服務供應商查詢。

## 電池資料及保護

- 充電前，您無須完全放電。跟其他電池系統不同，它不會產生可降低電池效能的記憶效應。
- 只使用 LG 電池及充電器。LG 充電器是為將電池壽命擴至最大而設。
- 請勿拆解電池或造成電池短路。
- 請保持電池的金屬接點清潔。
- 當電池不再提供可接受的效能，請更換電池。電池組在必須更換前可重新充電數百次。
- 如果電池很久沒有使用，則需重新充電，以擴展其用量。
- 請勿直接將充電器暴露於日光下或高濕度環境（如浴室）中。
- 請勿將手機置於過熱或過冷的地方，因為這可能降低您的手機性能。
- 如果以錯誤方式放置電池，可能引起爆炸。請根據相關指示處理廢棄電池。
- 如果需要更換電池，請帶同手機前往最近的授權 LG 電子產品服務點或經銷商以尋求協助。
- 請謹記在手機完全充電後從牆壁插座拔出充電器，避免充電器造成不必要的電力損耗。
- 電池的實際壽命將取決於網絡設定、產品設定、使用模式、電池及環境條件。
- 請勿讓如動物牙齒、指甲等尖銳物與電池發生接觸。這可能會引起火災。

A decorative graphic consisting of several sets of horizontal white lines of varying lengths, arranged in a descending staircase pattern from the top left towards the bottom right. The background is a solid, vibrant red. The lines are grouped into sets of three, with each set positioned further to the right and lower than the previous one.

為您而設的功能

# 雙視窗

雙視窗功能分割螢幕以啟用多項工作、拖放互動、自動連結及最近使用應用的程式。

## 開啓雙視窗功能

- 1 點按  >  >  > 一般標籤 > 雙視窗。
- 2 點按  以開啓。
  - 勾選**自動開啓**方格以在全螢幕輕按連結或輕按電郵附件時自動開啓雙視窗功能。

## 使用雙視窗功能

- 1 點按  >  > 雙視窗。

### 注意


- 使用應用程式檢視時，您可點按  > 雙視窗在視窗上方設定應用程式，然後選擇第二個應用程式。
- 2 輕按要使用的應用程式圖示。您首個開啟的應用程式會在螢幕上方的視窗中顯示。您第二個開啟的應用程式會在螢幕下方的視窗中顯示。
  - 3 輕按視窗以選擇並開始使用。
    - 在已選擇的視窗會出現藍色方塊外框，在視窗之間亦會出現一個藍色半圓形手柄式圖樣。
    - 拖曳藍色手柄改變視窗尺寸（一個較大視窗和一個較小視窗）。
  - 4 點按  以使用雙視窗選項。

# 指紋

您可使用指紋功能，將手指置於**電源/鎖定鍵**上以解鎖螢幕或查看鎖定內容。

## 記錄您的指紋

- 1 點按 **○** > **⋮** > **⚙** > **一般標籤** > **指紋和安全** > **指紋**。
- 2 記錄指紋前請先設定安全螢幕鎖定方式。此鎖定方式會用作取代指紋解鎖。
- 3 將手指置於**電源/鎖定鍵**上。

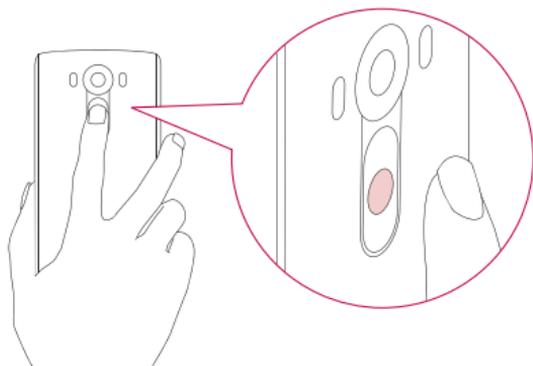

- 4 手機震動時將手指提起並在置於**電源/鎖定鍵**上。使用同一手指重覆此動作直至記錄完成。

### 注意

- 請確保您的手指及電源/鎖定鍵均乾爽清潔。
- 濕氣、潤膚液、汗水、油分、破皮或乾燥肌膚都同影響指紋識別。進行某類活動也會暫時影響指紋辨識效果，如運動、淋浴、游泳、煮食等。
- 按印時完全覆蓋電源/鎖定鍵。不要按得太快，掃描時請盡量不要移開手指。
- 使用指紋識別功能期間，系統會不斷熟悉並完善識別功能。

# LG Health

LG Health 透過追蹤記錄並與朋友進行比賽，以助您管理健康並養成良好的運動習慣。


- 1 點按 ○ > ☰ > 👤。
- 2 閱讀並同意條款及細則。
- 3 在個人檔案與目標頁面，輸入您的個人資料然後按儲存。
- 4 使用下方選項，開始追蹤活動。

## 📌 注意

- 此功能只為方便使用者。僅供參考之用。

# 迷你檢視

將螢幕縮小，方便單手操作並在主頁觸控按鈕之間左右掃動。  
要關閉迷你檢視，請按 X。

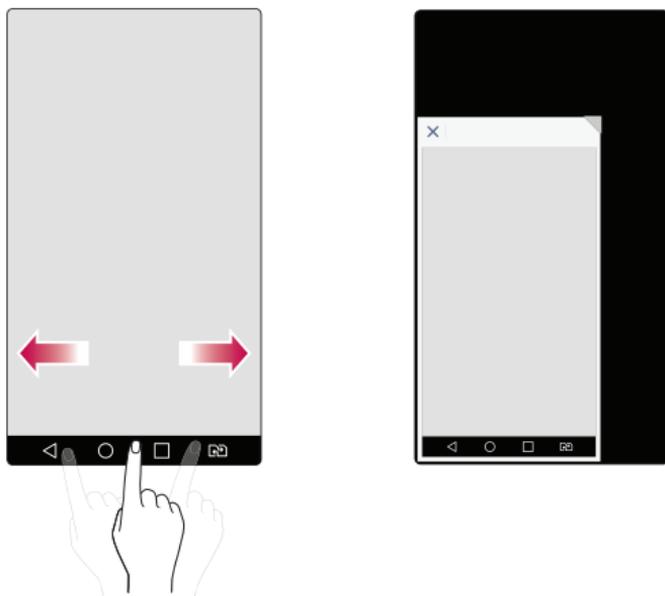


## 第二螢幕

當主畫面處於關閉狀態時，您可檢視天氣、日期、時間、電量狀態及通知等有用資料。

### 第二螢幕的功能

- 當主畫面處於關閉狀態時，您可在第二螢幕設定功能。（最新的應用程式、應用程式捷徑、音樂播放器、快捷通訊錄、最近計劃及簽名）
- 在全螢幕上使用應用程式時，您可透過第二螢幕檢視通知並使用功能。
- 拍照或錄影時也可使用控制台。
- 請將裝置翻轉以開啓或關閉第二螢幕。

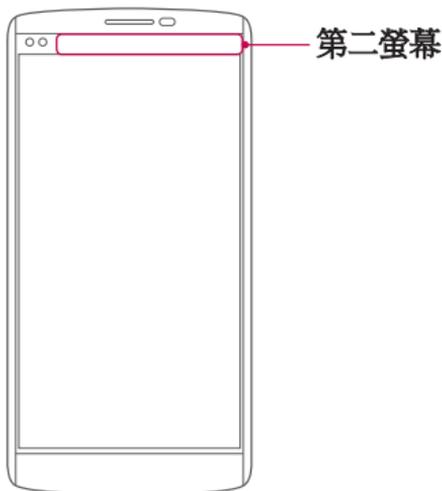

## 開啓或關閉第二螢幕功能

您可開啓或關閉第二螢幕功能並選擇要顯示的內容。

- 點按  >  >  > **顯示標籤** > **第二螢幕**。

---

**在主螢幕開啓時顯示**

為您提供有用功能同時進行多種工作。

**主螢幕關閉時顯示**

請時刻顯示有用資訊並為經常使用的功能提供快捷執行路徑。

---

## Smart Notice

使用 Smart Notice 卡令生活更美好。

這些資訊卡會根據每日時間、所在位置及您使用手機的方法提供個人化建議。

- 按住桌面的空白位置 > **小工具** > **Smart Notice**。

# 隨意錄影

您可以不同的短片製作故事電影。

1 點按  >  >  > 

2 點按  以錄影 3 秒鐘的場景。

或

長按  依照所需時間錄影。

3 重覆此操作。

 **注意**

- 影片的可儲存時間最長為 1 分鐘。

4 完成場景錄影後，請按**儲存**。

 **注意**

- 您可在媒體匣中編輯多種影片效果並加入背景音樂。

# QSlide

從任何畫面，您都可以透過 QSlide 更快存取通知、記事本、日曆、計算機等等。

## 使用 QSlide

1 輕觸並向下滑動狀態欄 > 點按 **QSlide**。

### 注意

- 使用支援 QSlide 的應用程式時，點按  > QSlide。功能將以小視窗顯示於螢幕上。

2 使用以下選項。

- |   |   |                     |
|---|---|---------------------|
| 1 |  | 點選以把視窗轉換成全螢幕。       |
| 2 |  | 點選以更改視窗的透明度。        |
| 3 |  | 點選以關閉 QSlide 視窗。    |
| 4 |  | 拖拉以調整 QSlide 的視窗大小。 |

3 當透明度欄並未全滿時，您亦可使用及點選 **QSlide** 小視窗下的螢幕。 

### 注意

- QSlide 可同時支援最多兩個視窗。

# QuickMemo+

QuickMemo+ 功能可讓您創建備忘錄。

## 使用擷取+

使用擷取+功能在通話期間輕鬆快捷地建立備忘錄，還可附上已儲存圖片或目前手機畫面。

- 1 輕按並向下滑動狀態欄，然後輕按 。
- 2 使用下列選項建立備忘錄。

	點按以儲存您建立的備忘錄。
	點按以復原至最近期執行動作。
	點按以重新執行最近期已刪除的動作。
	點按以在備忘錄插入文字。
	點按以選擇筆型及顏色。
	點按以使用橡皮擦擦除備忘錄的筆跡。
	點按以裁剪備忘錄的影像。
	點按選擇分享或便條紙的方式。
	點按以隱藏或顯示工具列。

### 注意

- 使用 QuickMemo+ 功能時，請使用指尖。請勿使用指甲。

- 3 點按  以儲存現有備忘錄至 QuickMemo+ 或媒體匣。

## 檢視已儲存的備忘錄

點按  >  >  然後選擇 QuickMemo+ 相簿。

# QuickRemote

QuickRemote 讓您的手機化身成您家用電視、機頂盒及音訊系統的通用遙控器。

## 設定 QuickRemote

1 點按並向下滑動狀態欄，然後點按  > **新增遠端**。如無法看見 ，點按  > 勾選 **QuickRemote** 啟用。

或者

點按  >  >  > 點按 **+**。

2 選擇裝置的類型和品牌，然後按照螢幕上的說明設定裝置。

## 通用遙控器

您可自訂通用遙控器並選擇要置放按鈕的位置。

1 點按  >  >  > **+** > **通用遙控器**。

2 輸入遙控器名稱。

3 在遙控器上隨意置放按鈕。

4 按照下一步指示了解並執行。

## 使用 QuickRemote

完成初始設定後，您可從通知控制板輕鬆存取 QuickRemote。開啟通知控制板並使用 QuickRemote 功能。

### 注意

- QuickRemote 與普通遙控及紅外線 (IR) 訊號的相同方式操作。使用 QuickRemote 功能時，請注意不要遮蓋手機頂部的紅外線感應器。視乎型號、製造商或服務供應商而定，此功能可能無法支援。

# Quick Share

您可在拍照或錄製影片後將作品分享。

輕按顯示圖示或按下並滑動至應用程式的左方。然後選擇要使用的應用程式。

- 輕按 ○ > ⋮ >  > 



## 注意

- 視乎種類及使用頻率，應用程式會以 Quick Share 向使用者顯示。

A decorative graphic consisting of several sets of horizontal white lines of varying lengths, arranged in a descending staircase pattern from the top left towards the bottom right. The background is a solid, vibrant red color.

# 基本功能

# 配件



這些配件可搭配手機使用。

- 旅行充電器
- 快速入門指南
- 立體聲耳機
- USB 線
- 電池

## 注意

- （下列配件為可選購配件）
- 只可使用原裝 LG 配件。所提供的項目僅適用於此裝置，可能不兼容其他裝置。
- 裝置隨附的配件及所有可用配件視乎不同地區或服務供應商而可能有所不同。

# 手機版面

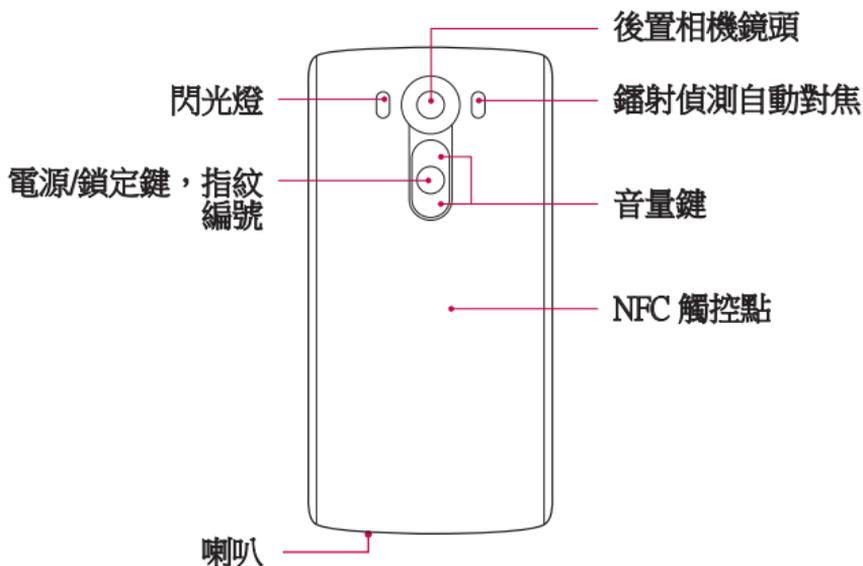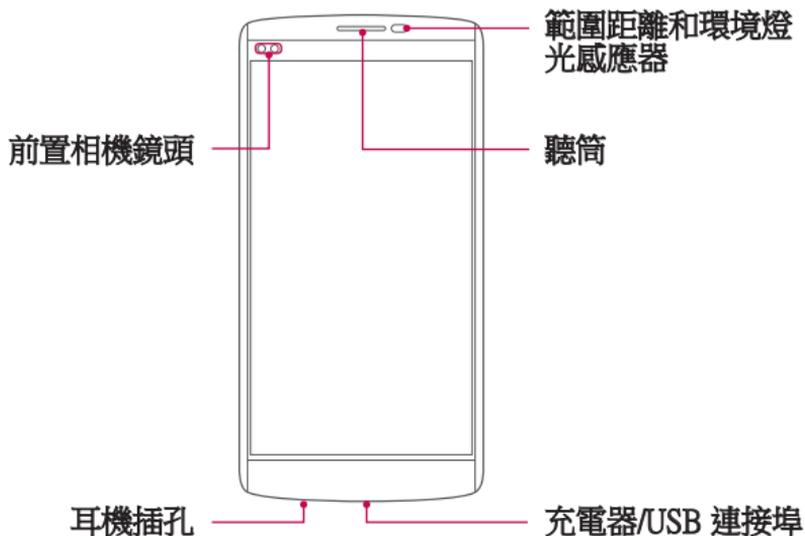

電源/鎖定鍵	<ul style="list-style-type: none"> <li>· 按住此鍵以開啟或關閉手機。</li> <li>· 短按以開啟/關閉螢幕。</li> </ul>
音量鍵	<p><b>螢幕關閉時</b></p> <ul style="list-style-type: none"> <li>· 按<b>音量提升鍵</b>兩次即可啟動 QuickMemo+。</li> <li>· 按<b>音量降低鍵</b>兩次即可啟動相機並拍照。</li> </ul> <p><b>從桌面</b></p> <ul style="list-style-type: none"> <li>· 控制鈴聲。</li> </ul> <p><b>通話中：</b></p> <ul style="list-style-type: none"> <li>· 控制聽筒音量。</li> </ul> <p><b>播放音訊或影片時：</b></p> <ul style="list-style-type: none"> <li>· 控制音量。</li> </ul>

 **注意：距離感應器**

- 當接收及撥出通話時，距離感應器會感應手機接近您的耳朵，並自動關閉畫面背光照明及鎖上觸控螢幕。這將延長電池壽命並且防止通話時不小心啟動觸控畫面。

 **警告：**

- 此型號的 NFC 觸控點設於電池蓋上。請勿破壞手機上的 NFC 觸控點，它是 NFC 天線的一部分。

 **警告：**

- 若將較重物體置於手機上，或坐在手機上，LCD 和觸控畫面功能可能會受到損壞。切勿用螢幕保護貼或任何其他保護貼遮蓋距離感應器。這可能會導致感應器出現故障。

# 開啟和關閉手機

## 開啟手機

按住手機背部的**電源/鎖定鍵**幾秒鐘直至螢幕開啟。

## 關閉手機


- 1 按住手機背部的**電源/鎖定鍵**直至手機選項功能表出現。
- 2 於手機選項功能表按下關機。
- 3 如確認要關機請按確認。

# 安裝 Nano SIM 卡及電池


插入由手提電話服務供應商提供的 Nano SIM 卡和隨附的電池。

### 警告：


- 切勿將記憶卡插入至 Nano SIM 卡插槽。如記憶卡卡在 Nano SIM 卡槽，請攜帶裝置至 LG 服務中心以移除記憶卡。
- 1 要取下電池蓋，請用一隻手握住手機。再用另一隻手，如下圖所示用姆指打開背蓋。

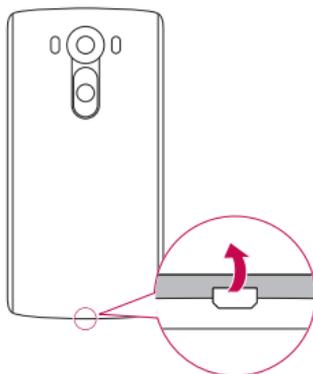


- 2 如圖所示將 Nano SIM 卡推入 Nano SIM 卡插槽。確保卡片的金屬接觸面朝下。

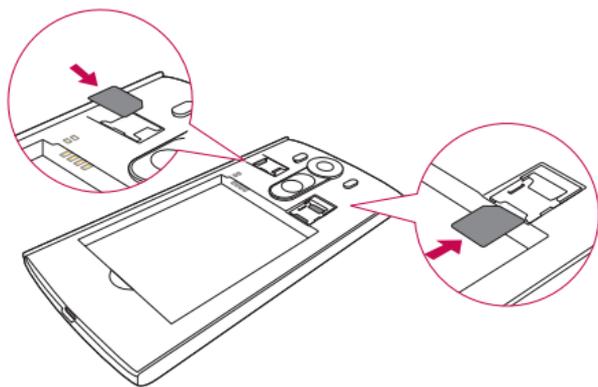

- 3 插入電池。

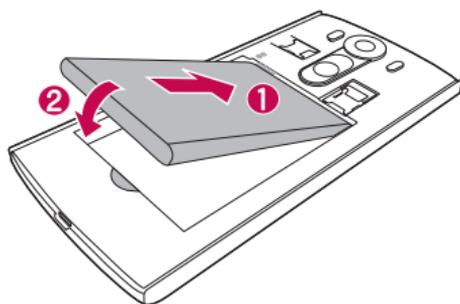

- 4 如要合上電池蓋，將背蓋對準電池盒，並按下背蓋直到卡緊為止。

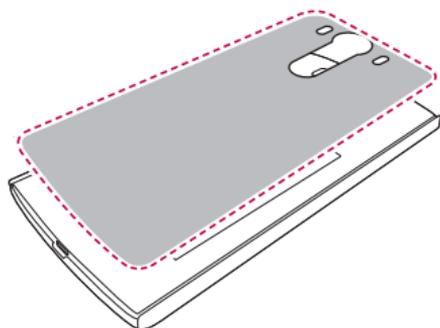


# 充電

首次使用前請為手機充電。請使用充電器為電池充電。亦可使用 USB 纜線將手機連接至電腦，電腦就可為電池充電。

## 警告：

- 只使用 LG 認可的充電器、電池及纜線。如您使用未經認可的充電器、電池或纜線，可能會導致電池充電延遲，又或會導致電池爆炸或裝置損壞，這並不包括於保養範圍。

充電器接頭位於手機底部。插入充電器，並將其連接至電源插座。

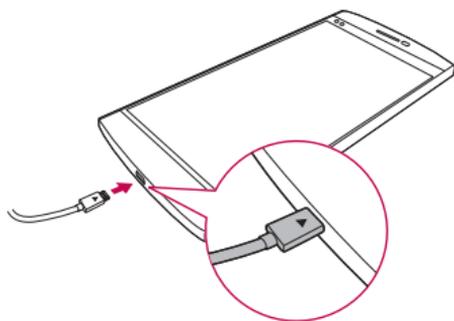

## 注意

- 請勿於充電時打開電池蓋。

# 充分利用電池壽命

關閉無須持續在背景運行的功能，便能延長電池電量。您可檢視應用程式及系統資源的電池電量消耗。

## 延長手機電池壽命

- 不使用無線電通訊時將其關閉。不使用 Wi-Fi、藍牙或 GPS 時，請將其關閉。
- 降低螢幕亮度，並設定較短的螢幕逾時。

- 關閉 Gmail、日曆、通訊錄及其他應用程式的自動同步。
- 您下載的部分應用程式可能會耗用電池壽命。
- 使用已下載的應用程式期間，請檢查電池電量。

## 插入記憶卡

您的裝置支援最多 2TB microSD 卡。視乎記憶卡製造商及種類而定，部份記憶卡可能未能與裝置兼容。


### 警告：

- 部份記憶卡可能未能與裝置完全兼容。使用不兼容的記憶卡可能對裝置或記憶卡造成損毀，或對儲存的資料亦可能造成損壞。

### 注意

- 經常寫入及刪除資料會縮短記憶卡的壽命。

- 1 取下電池蓋。
- 2 插入記憶卡時，請將金屬接觸面朝下。

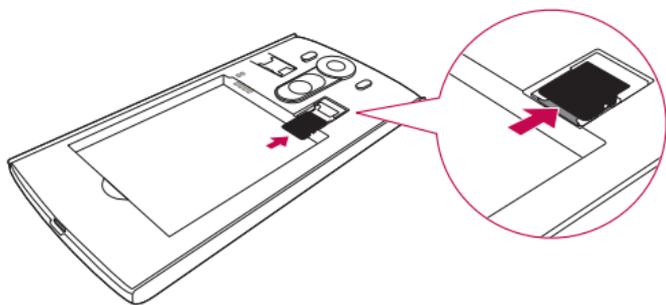

- 3 重新蓋上電池蓋。

# 移除記憶卡

在移除記憶卡前，先將其解除安裝，以安全移除。

1 點按  >  >  > 一般標籤 > 儲存裝置 > 移除 SD 卡。

2 取下電池蓋，然後取出記憶卡。

## 警告：

- 切勿在傳輸或存取資料時取出記憶卡。這會導致資料遺失或損毀，或令記憶卡或裝置受損。製造商不對由於不正確使用記憶卡而造成的損失（包括資料遺失）承擔任何責任。

# 觸控螢幕提示


以下為如何於手機上瀏覽的一些提示。

## 注意

- 請勿過份用力按壓；只需輕力但確切地觸控，觸控螢幕已能感應。
- 使用指尖點按所需選項。請注意不要點按其他按鍵。


# 點按或觸控

用手指單次點按以選擇項目、連結、捷徑及螢幕鍵盤上的字母。

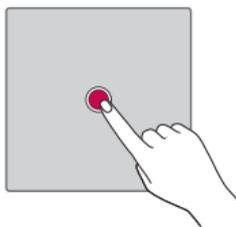


## 點按並按住

用手指按住畫面上的項目，直至有其他動作產生才鬆開手指。

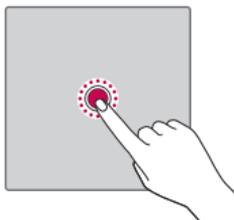


## 拖拉

觸摸並按住項目片刻，然後於螢幕上移動手指但不抬起，直至到達目標位置。您可在桌面拖放項目改變其放置。

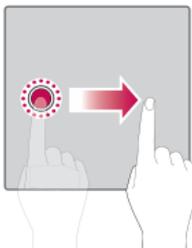


## 掃動或滑動

要掃動或滑動，請快速移動您的手指以橫跨螢幕表面，並於首次接觸螢幕時不停止動作（否則會變成拖拉項目）。

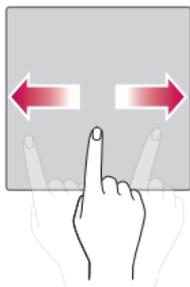


## 點按兩下

輕觸兩下即可放大網頁或地圖。

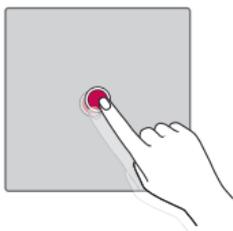

## 多點觸控

使用瀏覽器或地圖，或瀏覽圖片時，捏緊或散開食指及拇指以放大或縮小。

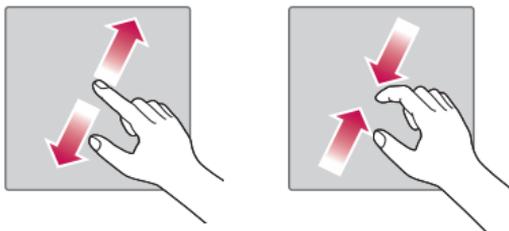

# Google 帳號設定

當您第一次在手機上開啟 Google 應用程式，您需要使用您現有的 Google 帳戶登入。如您沒有 Google 帳戶，手機會提示您建立帳戶。

## 建立您的 Google 帳戶

- 1 點按  >  >  > 一般標籤 > 帳號及同步處理。
- 2 點按新增帳號 > Google > 或建立新帳戶。
- 3 輸入您的姓氏及名字，然後點按繼續。
- 4 輸入您的電話號然後按繼續。
- 5 然後按照指示，輸入與帳戶有關的必填及可填資訊。請等待伺服器建立您的帳戶。

## 登入您的 Google 帳戶

- 1 點按  >  >  > 一般標籤 > 帳號及同步處理。
- 2 點按新增帳號 > Google。
- 3 輸入您的電郵地址並點按繼續。
- 4 輸入密碼，然後點按繼續。
- 5 登入後，您可使用 Gmail 並在手機上使用 Google 服務。
- 6 您在手機上設定 Google 帳戶後，您的手機便會自動與您的 Google 帳戶在互聯網上同步（如有數據連接）。

登入後，手機將會與您的 Google 服務同步，例如 Gmail、通訊錄及 Google 日曆。您亦可以使用地圖、從 Play Store 下載應用程式、將設定備份至 Google 伺服器，以及在手機上使用其他 Google 服務。

# 鎖定及解鎖裝置

按下電源/鎖定鍵以關閉螢幕，並把裝置轉為鎖定模式。若在指定時間內未使用手機，裝置將自動鎖定。這有助防止意外按鍵，並可節省電池電力。

如要解鎖裝置，按下電源/鎖定鍵，並向任何方向滑動螢幕。

## 指紋

您可使用指紋功能，將手指置於**電源/鎖定鍵**上以解鎖螢幕。詳情請見**指紋**內容（於**為您而設的功能**）。

## 開啟螢幕

KnockON 功能可讓您點按兩下螢幕，輕鬆開啟或關閉螢幕。

### 開啟螢幕

- 1 快速點按螢幕中間兩下即可開啟螢幕。
- 2 解鎖螢幕或存取任何可用的捷徑或小工具。

### 關閉螢幕

- 1 點按桌面空白位置或狀態欄兩下。
- 2 螢幕便會關閉。

#### 注意

- 點按螢幕中間。若您點按底部或頂部，辨識度可能下降。

## Knock Code

Knock Code 功能讓您透過螢幕上一系列敲擊建立您的解除鎖定碼。螢幕關閉時，您可在螢幕點按相同次序以存取桌面。

#### 注意

- 如您輸入錯誤的 Knock Code 5 次，系統會強制將您帶到 Google 帳戶登入/後備 PIN。
- 使用指尖而非指甲點按螢幕以開啟或關閉。

## 設定 Knock Code 功能

- 1 點按  >  >  > 顯示標籤 > 鎖定螢幕 > 選擇螢幕鎖定 > Knock Code。
- 2 依自己喜好的圖形點按方格，以設定您的 Knock Code。您的 Knock Code 圖形可以是 3 至 8 次點按。

## 使用 Knock Code 解除鎖定螢幕

當螢幕關閉時，您可以點按已設定的 Knock Code 圖形來解除鎖定螢幕。

## 更換螢幕鎖定方式

您可更換螢幕鎖定方式，以防止其他人存取您的個人資訊。

- 1 點按  >  >  > 顯示標籤 > 鎖定螢幕 > 選擇螢幕鎖定。
- 2 選擇所需的螢幕鎖定：無、揮動、Knock Code、圖形、PIN 碼或密碼。

### 注意

- 請於設定解鎖圖形前建立 Google 帳戶，並緊記您於新增圖形鎖時所設定的備份 PIN 碼。

## Smart Lock

您可使用智能鎖以輕易解鎖手機。您可設定為在有可信的藍牙裝置連接時，位於熟悉的地點時（例如家中或公司），或手機可辨認您的臉時將手機保持解鎖。

## 設定智能鎖定功能

- 1 點按 **○** > **⋮** > **⚙️** > **顯示標籤** > **鎖定螢幕** > **Smart Lock**。
- 2 在您新增任何可信裝置、可信地點或可信臉孔前，您需要選擇螢幕鎖定（Knock Code、圖形、PIN 碼或密碼）。

## 桌面

主桌面是眾多應用程式與功能的起點。讓您可新增例如應用程式捷徑、Google 小工具等項目，以便即時存取資訊及應用程式。此為預設桌布，點按 **○** 即可從任何功能表中存取。

## 熟悉桌面運作



- 1 **第二螢幕** - 使用者可在螢幕上方的第二螢幕設定所需應用程式。設定第二螢幕以快捷執行應用程式。
- 2 **狀態欄** - 顯示手機狀態的資料，包括時間、訊號強度、電池狀態及通知圖示。
- 3 **小工具** - 小工具是自由的應用程式，包含了可透過應用程式列表或桌面存取的應用程式。與捷徑不同，小工具是可於螢幕上運作的應用程式。
- 4 **應用程式圖示** - 點按圖示（應用程式、資料夾等）以開啟並使用它。

- 5 位置指示器 - 指出您正檢視的桌面桌布。
- 6 快速按鍵區 - 在任何桌面桌布提供一觸式功能存取。

## 7 主頁觸控按鈕

◀ 返回按鈕	返回前一畫面。同時，關閉彈出的項目（如功能表、對話方塊和螢幕鍵盤）。
○ 主頁按鈕	從任何畫面返回主頁。
□ 概覽按鈕	顯示最近使用的應用程式。如按住此鍵，會顯示可用選項的功能表。
🔄 SIM 切換 按鍵	選擇要使用的 SIM 卡。按住按鍵以前往雙智能 咕的設定卡設定。

## 檢視其他桌面面板

作業系統提供多個桌面桌布，讓您有更多空間新增圖示、小工具等。

- 將手指在桌面向左或右滑動以轉到更多桌面桌布。

## 返回最近使用的應用程式

有了 Android，多任務處理變得簡易，您可以同時執行多個應用程式。開啟新的應用程式時，您無需退出原來的應用程式。使用及切換數個開啟中的應用程式。

Android 會管理每一個應用程式，根據需要停止及啟動程式，確保閒置的應用程式不會耗用不必要的資源。

- 1 點按 □。將會顯示最近使用的應用程式列表。
- 2 點按要存取的應用程式。此舉不會停止之前的應用程式於背景上執行。確保於使用完畢後點按以離開應用程式。
  - 若要從最近使用的應用程式列表移除應用程式，請於應用程式預覽向左或向右滑動應用程式。若要清除所有應用程式，請點擊**全部清除**。

## 自訂桌面

您可以新增應用程式及小工具和更換牆紙，以自訂您的桌面。

### 於桌面新增項目

- 1 或點按並按住桌面的空白部分。
- 2 於新增模式功能表中，選擇您想新增的項目。您將於桌面上看見已新增的項目。
- 3 將其拖拉至理想的位置，然後放開手指。

#### 注意

- 要將應用程式圖示從應用程式功能表新增至桌面，按住您想新增的應用程式。

### 於桌面移除項目

在桌面按住要移除的圖示 > 將圖示拖放至 。

### 新增應用程式至快速按鍵區

從應用程式畫面或桌面上，按住應用程式圖示並拖曳至快速按鍵區。然後把它放在想要的位置。

### 從快速按鍵區移除應用程式

按住所需快速按鍵，並拖曳至 。

#### 注意

- 應用程式按鍵  無法移除。

### 在桌面上自訂應用程式圖示


- 1 按住應用程式圖示，直至它從目前位置解除鎖定，然後放開手指。編輯圖示  將會顯示於應用程式的右上角。
- 2 再次點按應用程式圖示，並選擇所需的圖示設計及大小。
- 3 點按**確定**以儲存變更。

## 通知面板

通知提醒您收到新訊息、日曆事件和鬧鐘，以及進行中事項（如正在通話）等。

### 開啟通知面板

從狀態欄向下掃動以開啟通知面板。要關閉通知面板，向上撥動畫面或點按 ◀。

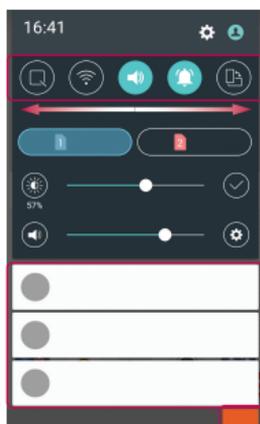

- 1 點按每個快速設定鍵以切換開啟/關閉。按住所需按鍵，以直接存取該功能的設定功能表。要查看更多切換按鍵，向左或右方滑動。點按  以移除、新增或重新整理快速設定鍵。
- 2 連同簡單說明，列出目前的通知。點按通知以進行檢視。
- 3 點按以清除所有通知。

收到通知時，其圖示會顯示於畫面頂部。等候通知的圖示會顯示於左方，而 Wi-Fi 或電力等的系統圖示則顯示於右方。

## 狀態欄上的指示圖示

於畫面頂部的狀態欄上顯示的指示圖示，報告未接來電、新訊息、日曆事件、裝置狀態等。



顯示於畫面頂部的圖示提供有關裝置狀態的資訊。以下圖表所列出的為最常用的圖示。

圖示	說明	圖示	說明
	沒有插入 SIM 卡		目前正在播放歌曲
	沒有可用的網絡訊號		不受干擾，包括鬧鐘
	已開啟飛航模式		已開啟震動模式
	已連接至 Wi-Fi 網絡		電池已完全充電
	已連接有線耳機		電池充電中
	正在通話		手機透過 USB 線連接至電腦
	未接來電		數據下載
	藍牙開啟		數據上載
	系統警告		GPS 開啟
	鬧鐘已設定		正在同步資料
	新語音留言		選取輸入法
	新文字或多媒體訊息		Wi-Fi 熱點已啟動

	NFC 已開啟		已連接 LG AirDrive
	已連接 Miracast		

### 注意

- 狀態欄上的圖示位置根據功能或服務可能有所不同。
- 可用選項視乎不同地區或服務供應商而可能有所不同。

## 擷取螢幕截圖

同時按住**音量降低鍵**及**電源/鎖定鍵**2 秒鐘以影下目前畫面的截圖。  
若要檢視影下的影像，點按  >  >  > **Screenshots** 資料夾。

# 螢幕鍵盤

您可以使用螢幕鍵盤輸入文字。當您點選輸入文字的欄位時，螢幕鍵盤會於螢幕上顯示。

## 使用鍵盤與輸入文字

圖示	說明
	點按一次以將您要輸入的下一個字母大寫。點按兩下即可大寫所有字母。
	點按以前往鍵盤設定。按住以變更文字輸入法。
	點按以輸入一個空格。
	點按以新建一行。
	點按以刪除前一字母。

## 輸入特殊字元

螢幕鍵盤允許您輸入特殊字元。

舉例，如輸入「á」，按住「a」按鈕，直至視窗彈出並顯示相關特殊字元。您無需鬆開手指，只需拖曳手指到想要的特殊字元即可。在字元反白顯示後，鬆開手指。


### 注意

- 注意：鍵右上角的符號表示有其他可用的字元。

## 分割或合併鍵盤

您可在橫向鍵盤上將兩隻手指打平張開以將鍵盤分割。這方式方便使用拇指操控。請確保於設定啟動分割鍵盤以使用此功能。

- 點按  >  >  > 一般標籤 > 語言及鍵盤 > LG 鍵盤 > 鍵盤高度和版面 > 分離鍵盤。

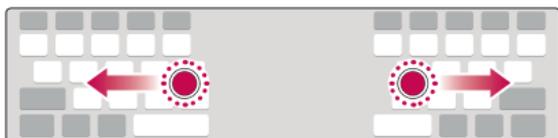

## 在電腦與裝置之間傳送與接收數據

您可在電腦與裝置之間複製或移除數據。

### 使用 USB 連接以傳輸數據。

- 1 使用隨手機附上的 USB 線，將手機連接至電腦。
- 2 開啟通知面板，點按現有的連接類型，並選擇**媒體裝置 (MTP)**。
- 3 您的電腦會出現彈出式視窗，讓您傳送想要的數據。

#### 注意

- 需要在您的電腦上安裝 LG Android Platform Driver 以偵測手機。
- 檢查使用**媒體裝置 (MTP)** 的條件。

項目	要求
OS	Microsoft Windows XP SP3、Vista 或更高版本
Window Media Player 版本	Windows Media Player 10 或更高版本

## 使用 USB 連接以傳輸數據。

有了LG AirDrive 功能，您可透過 WiFi 或流動數據分享或管理手機內容。

### 注意

- 請前往**設定**中的 LG AirDrive 內容。

## LG Bridge

LG Bridge 讓您在電腦上輕鬆管理 LG 流動裝置內的音樂、影片和文件等內容。您同時可將聯絡資料及影像備份至您的電腦，或更新流動裝置的軟件。

### 注意

- 安裝及開啟程式後，您可在說明功能表中查看使用 LG Bridge 的詳細指示。
- 視乎裝置而定，支援的功能可能有異。
- LG USB 聯合驅動程式是連接 LG 手機和電腦的必要程式。安裝 LG Bridge 時會自動安裝。

## LG Bridge 功能

- 透過 WiFi 或流動數據在電腦上管理內容。
- 透過 USB 備份和還原流動裝置的數據
- 透過 USB 在電腦上更新流動裝置的軟件

## 下載 LG Bridge 軟件

- 1 前往 [www.lg.com](http://www.lg.com)。
- 2 點按搜尋按鈕並輸入型號名稱以便搜尋。
- 3 選擇型號資訊，並點選**前往**。
- 4 向下捲動，選擇**電腦同步**標籤 > **Windows** 或 **Mac OS** > **下載**以下載 LG Bridge。

# SmartShare

SmartShare 讓您使用媒體匣及音樂應用程式分享多媒體內容。

## 使用 SmartShare

- 1 查看您想分享的內容，點選 或  > SmartShare 或 
- 2 從列表中點選您想要分享的裝置。
  - 如裝置不在列表上，請確保裝置已開啟 Wi-Fi、Wi-Fi Direct 或藍牙。然後點選**重新掃描**。

## 在手機上觀賞附近裝置的內容

- 1 要與手機附近的裝置連接，在**媒體匣**和**音樂**應用程式上點選**附近裝置**。
  - 請確保您的裝置與附近裝置連接到相同的 Wi-Fi 網絡，而附近裝置上的 DLNA 服務亦已開啟。
- 2 點選您想連接的裝置。如果裝置不在清單上，點選**搜尋附近裝置**。
- 3 建立連接後，您便可享用裝置內的內容。



# 應用程式

# 安裝或解除安裝應用程式

Play Store 讓您瀏覽並搜尋免費及付費應用程式。

## 打開 Play Store 應用程式

點按  >  > 。

## 打開載有應用程式詳情的畫面

您可隨時在 Play Store 內瀏覽時，請按以打開載有詳情的畫面。應用詳情畫面載有說明、評級、評論及應用程式的相關資料。您可在此畫面下載、解除安裝、為應用程式評分等。

## 解除安裝應用程式：

- 1 點按  >  >  > 一般標籤 > 應用程式。
- 2 當所有應用程式出現後，捲動並選擇您想解除安裝的應用程式。
- 3 點按解除安裝。

# 通話功能

跨地區也能享受清晰通話音質

## 撥打電話

- 1 點按  > 。
- 2 使用鍵盤輸入號碼 要刪除數字，點選 。
- 3 輸入想要撥打的號碼後，點按  以打電話。
- 4 要結束通話，點按 。

### 注意

- 要在撥打國際電話時輸入「+」，點按並按住 。

## 從通訊錄中撥打電話

- 1 點按  > 。
- 2 捲動通訊錄以尋找。您也可在搜尋一欄輸入聯絡人的名字，或捲動螢幕右面的字母列尋找。
- 3 在顯示的列表中點按要致電的聯絡人。

## 接聽來電和拒接來電

- 向  任何方向滑動以接聽來電。
- 向  任何方向滑動以拒絕接聽來電。

### 注意

- 向  掃動可拒絕接聽來電並向致電者發送訊息。

## 通話期間撥打第二個電話

- 1 進行第一個通話時，點按  > **新增通話**，然後撥打號碼。
- 2 點按 。
- 3 兩個通話均會在通話螢幕中顯示。您的原來通話會被鎖定及保留。
- 4 點按顯示的號碼，以在通話之間切換。或點按  以開始電話會議。
- 5 要結束所有通話，點按 。

### 注意

- 您撥打的每一個通話均需收費。

## 檢視通話記錄

- 1 點按  >  > **通話記錄** 標籤。
- 2 檢視所有已撥、已接和未接來電的清單。

### 注意

- 點按任何通話記錄項目，檢視通話的日期、時間和持續時間。
- 點按  > **刪除全部** 以刪除所有記錄項目。

## 變更您的通話設定

您可自行設置手機通話設定，例如來電轉接以及其他由供應商提供的特別功能。

- 1 點按  > 。
- 2 點按  > **通話設定** 並設置所需選項。

# 通訊錄

您可在手機上新增通訊錄，並與您的 Google 帳戶或其他帳戶（須支援同步通訊錄）內的通訊錄同步。

## 搜尋通訊錄

- 1 點按  > 。
- 2 點按**搜尋通訊錄**，使用鍵盤輸入該聯絡人姓名。相配結果會在輸入文字時顯示。

## 新增通訊錄

- 1 點按  > 。
- 2 輸入新聯絡人號碼。
- 3 點選  > **新增至通訊錄** > **新增通訊錄**。
- 4 如要為新聯絡人新增圖片，點選圖片圖示。選擇**拍照**或**從媒體匣中選取**。
- 5 輸入所需的聯絡人資料。
- 6 點按**儲存**。

## 最愛通訊錄

您可將常用的聯絡人分類為您的最愛。

### 新增通訊錄至您的最愛

- 1 點按  > 。
- 2 點按聯絡人以檢視詳情。
- 3 點按螢幕右上角的星號。星號變為黃色。

### 從最愛清單移除聯絡人

- 1 點按  >  > **最愛**標籤。
- 2 選擇一個聯絡人以查看詳情。
- 3 點按螢幕右上角的黃色星號。星號會變為原來的顏色，聯絡人將從我的最愛移除。

## 建立群組

- 1 點按  >  > **群組**標籤。
- 2 點按  > **新群組**。
- 3 為新群組輸入一個名稱。您可為新建立的群組設定獨有鈴聲。
- 4 點按**新增會員**將聯絡人新增至群組，然後點按**新增**。
- 5 點按**儲存**以儲存群組。

### 注意

- 若要刪除某群組，指定給該群組的聯絡人將不會遺失。他們仍保留在通訊錄中。

# 訊息

手機將文字和多媒體訊息結合至易用的功能表中。



## 注意

- 每一則文字訊息都可能需要收費。詳情請向您的服務供應商查詢。

## 發送訊息

1 點按  >  > 。

2 點按 ，然後從聯絡人清單中選擇一個或多個條目。

或者

在**收件者**一欄中輸入聯絡人名稱或聯絡人號碼。當您輸入該聯絡人名稱時，會顯示匹配的聯絡人。您可以點按建議收件者，並增加多於一位聯絡人。

3 點按文字欄位，開始輸入訊息。

4 點按  以開啟選項功能表。從任何可用的選項中選擇。

5 點按  將您想分享的檔案附加至訊息。

6 點按 **SIM1/SIM2 發送** 以發送訊息。

## 查看對話

與另一方傳送的訊息會按時間順序顯示，讓您更清楚看到和尋找您的對話。

## 更改訊息設定

您手機的訊息設定預設為讓您即時傳送訊息。您可按偏好更改這些設定。

- 點按  >  >  > **設定**。

# 相機

您可使用相機和攝影機，拍攝並分享相片和影片。

- 點按  >  > 。

## 拍攝相片


- 1 在螢幕上對準拍攝對象以進行取景。
- 2 拍攝對象四周的正方形表示相機已對焦。
- 3 點按  以拍攝相片。您的相片將自動儲存至媒體匣。

## 相機模式選項



- |   |   |
|---|---|
| 1 | <b>SNAP(快照視訊模式)</b> - 讓您製作故事影片。                         |
| 2 | <b>MANUAL(手動視訊模式)</b> - 也可讓您錄製影片。您可以手動方式控制每個選項。         |
| 3 | <b>MANUAL(手動相機模式)</b> - 讓您透過設定擷取影像。您可以手動方式控制每個選項。       |
| 4 | <b>AUTO(自動模式)</b> - 讓您為相片及影片套用通用設定。                     |
| 5 | <b>SIMPLE(建議模式)</b> - 讓您快捷簡易拍下照片。並無其他設定，而此模式並不支援影片攝像功能。 |

## 取景器自動模式

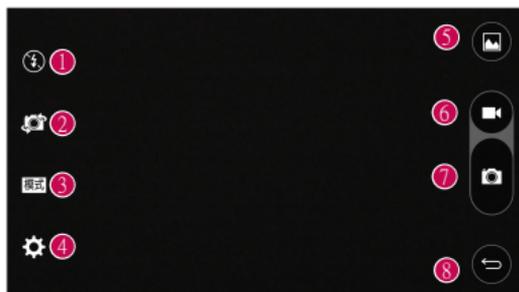

1		讓您管理相機的閃光燈。
2		點按以在前後置鏡頭之間切換拍攝。
3		讓您選擇拍攝模式。
4		點按此圖示以開啟相機設定功能表。
5		點按以觀看您最後拍攝的相片或影片。
6		點按  以開始錄影。
7		點按以拍攝相片。
8		點按以離開相機。

### 注意

- 請確保拍照前以超細纖維布清潔鏡頭護蓋。有手指污跡的鏡頭護蓋可能令模糊的相片出現「暈圈」效果。

## 使用模式設定

在相機取景器，點按 **模式** 以顯示模式選項。點按每個圖示以使用下列模式設定。

	利用前後置鏡頭從多角度拍攝或錄影。
	允許拍攝全景相片。
	錄製影片並以慢動作播放。
	錄製影片並以快鏡播放。

## 使用進階設定

在相機取景器，點按  以顯示進階選項。點按每個圖示以調整下列相機設定。


	將多種曝光的相片合併成一張最佳相片，以於燈光較差的狀態下拍到較好的相片。
	設定相片及影片大小。
	讓您以語音指令拍攝相片。開啟後，您可說「 <b>Cheese</b> 」、「 <b>Smile</b> 」、「 <b>LG</b> 」等以拍攝相片。
	設定相機的計時器。此功能最適合自拍相片或影片時使用。
	透過顯示格線協助對齊，以拍攝較佳的相片及錄製較佳的影片。
	在走路或經常移動的時候輕按以移除動作模糊。
	設定相片及影片的儲存位置。選擇 <b>IN</b> （內置記憶體）或 <b>SD</b> （記憶卡）。此功能表只會在已插入 SD 卡時顯示。
	讓您了解功能如何操作。此圖示會向您提供說明指南。

## 取景器上的相機手動模式




1	JPG	點按以選擇 JPEG 或 DNG 檔案格式。
2	WB	點按以於不同光線環境下提高色彩質素。
3	MF	點按以使用手動對焦模式。
4	+/-	點按以調整亮度。
5	ISO	點按以調整 ISO。
6	S	點按以調整快門速度。
7	AE-L	點按以使用自動曝光鎖定。
8		顯示目前的進階設定值

## 取景器上的手動影片模式

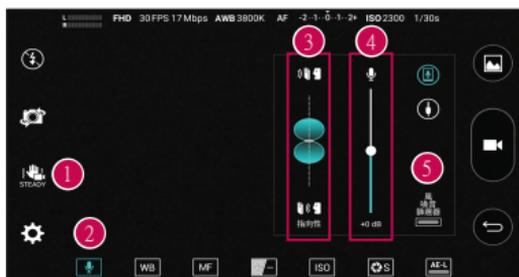

1		在走路或經常移動的時候輕按以移除動作模糊。
2		點按以進行錄製設定。 3 點按以調整聲音方向。 4 點按以調整分貝。 5 點按以調整風聲。 ：連接耳機後可使用此功能。 點按 ，您可在錄製同時收聽錄音。

## 取景器上的隨意錄影模式

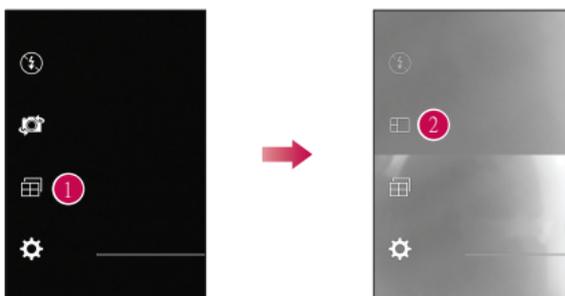

1		點按以變更多視覺模式。
2		相片及影片會於您選擇的版面中集合顯示。請掃動畫面以在相機視覺中切換。

## 間隔拍攝

您在自動模式中可使用前置相機鏡頭進行間隔拍攝。按住  以進行 4 張連環自拍。

## 連環拍攝

您在自動相機模式中可使用後置相機鏡頭進行連環拍攝。按住  以進行連環拍攝直至鬆開捕捉按鈕。取景器會顯示已拍下的相片數目。當於媒體匣檢視連環拍攝時，點按  以按先後次序顯示照片（猶如檢視翻頁相冊）。

## 手勢拍攝

在手勢自拍中，您可在前置相機鏡頭前做手勢來拍攝相片。


### 以手勢拍攝

有兩個方法使用手勢拍攝功能。

- 如要拍照，打開手掌，舉起手直至前鏡頭偵測，而且螢幕上顯示方框為止。然後握拳頭啓動計時器，您會有時間準備拍照。

或者

- 如要拍照，合起拳頭，舉起手直至前鏡頭偵測，而且螢幕上顯示方框為止。然後打開手掌，啓動計時器，您會有時間準備好拍照。

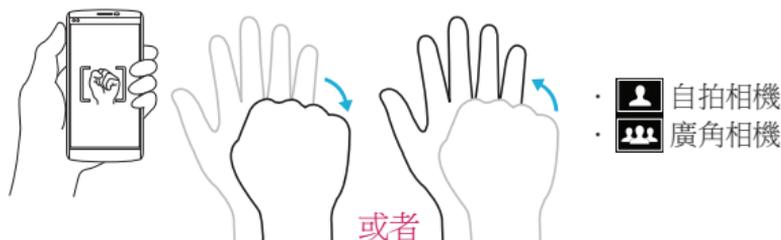

### 注意

- 此功能可能不支援多視覺錄影。

## 手勢檢視

使用前置相機鏡頭拍攝相片後，您將可以此手勢自動檢查拍攝的相片。

- 1 點按  >  > 。
- 2 以前置鏡頭拍一張相片。
- 3 拍照後，把手機靠近臉部。將顯示拍攝的相片。

### 注意

- 根據速度和手勢角度不同，此功能可能無法正常運作。
- 如在快速預覽後拍攝角度有變，系統會跳返至相機模式。您可前往媒體匣再次檢視圖片。

## 多點自動對焦

當您拍照時，多點自動對焦 (AF) 功能可自動操作並讓您看到清晰的圖像。

## 8X 縮放

使用後置相機鏡頭時，您最多可放大 8 倍。

### 注意

- 手要保持穩定。此功能不能與部分功能同時使用。當拍攝快速移動的對象時，物件可能會互相重疊。

## 完成拍照後

點按螢幕的圖像縮圖以檢視您最後拍攝的相片。

	點選以編輯相片。
	點按以立即拍攝新相片。
	點按以開啟可用的分享選項。
	點按以刪除相片。
	點按以存取額外選項。



點按以新增相片至您的最愛。

## 錄製影片

- 1 點按 > > 。
- 2 在螢幕上對準拍攝對象以進行取景。
- 3 輕按 以開始錄製影片。
- 4 錄影長度將顯示於螢幕上方。



### 注意

- 於錄製影片期間可點按 以拍攝照片。
- 5 點按 以暫停錄製影片。您可再次點按 以恢復錄製影片。  
或者  
輕按 以停止錄影。您的影片將自動儲存至媒體匣。

## 錄製影片後

點按螢幕的圖像縮圖以檢視您最後錄製的影片。



點按以編輯相片。



點按以立即拍攝另一段影片。



點選以開啟可用的分享選項（例如訊息或藍芽）。



點按以刪除影片。



點按以存取額外選項。



點按以新增影片至您的最愛。

# 媒體匣

媒體匣應用程式會顯示您儲存的相片及影片，包括您使用相機應用程式拍攝的相片或影片，以及您於網上或其他位置下載的相片或影片。

- 1 點按  >  > 。
- 2 點按相簿以開啟及檢視內容。（相簿的相片及影片按時序顯示。）
- 3 點按相簿相片以檢視。

## 注意

- 視乎安裝的軟件而定，某些檔案格式並不支援。
- 部分檔案可能因為編碼而無法正常顯示。

# 檢視圖片

媒體匣以資料夾形式顯示您的圖片。當其他應用程式（如電子郵件）儲存圖片時，下載資料夾會自動建立以存放該圖片。同樣地，當擷取螢幕截圖時，會自動建立螢幕截圖資料夾。

圖片按建立日期顯示。選擇圖片以進行全螢幕檢視。向左或右捲動以檢視下一個或上一個圖像。

# 編輯相片

觀看相片時，點按 。

# 設定牆紙

檢視相片時，點按  > **將影像設定為** 以將圖片設定為牆紙或通訊錄相片。

## 注意

- 視乎安裝的軟件而定，某些檔案格式並不支援。
- 如果檔案大小超過可用的記憶體，則在開啟檔案時會發生錯誤。

## 放大及縮小


使用以下方法以放大圖像：

- 於任何位置點按兩次以放大。
- 在圖片的任何一處張開兩隻手指以放大圖片。捏緊或點按圖片兩次以縮小。

## 播放影片

- 1 點按  >  > 。
- 2 選擇要收看的影片。

## 影片選項

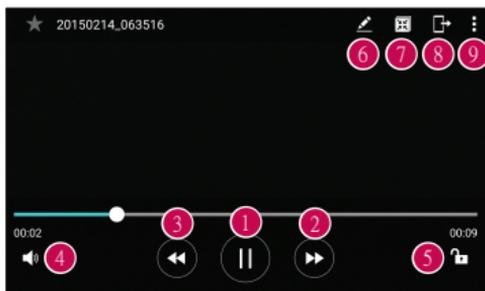


1		點按以暫停/恢復影片播放。
2		按住以大幅度快進。點按以執行 10 秒鐘快轉。
3		觸控並按住以大幅度倒轉。 點按以執行 10 秒鐘倒轉。
4		點按以調整影片音量。
5		點按以鎖定/解除螢幕。
6		點按以設定多種效果。
7		點按以使用影片應用程式的 QSlide 功能。
8		點選以使用 SmartShare 功能分享您的影片。
9		點按以存取額外選項。

## 注意

- 播放影片時，向上或向下滑動螢幕右側以調整音量。
- 播放影片時，向上或向下滑動螢幕左側以調整亮度。
- 播放影片時，從左到右（或相反）滑動手指以快進或倒退。

## 編輯影片

點按 ，以編輯多種效果。

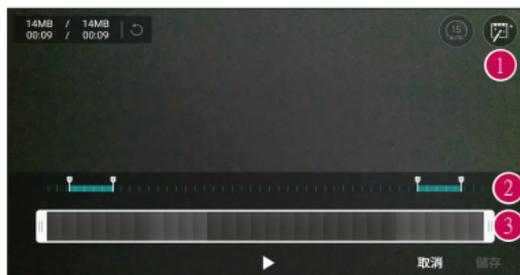

- |   |                  |
|---|------------------|
| 1 | 點按以設定背景音樂、標題或作家。 |
| 2 | 點按以調整影片速度。       |
| 3 | 點按以編輯畫框。         |

## 刪除相片/影片

使用以下方法：

- 在資料夾中點按 ，選擇相片/影片，然後點按刪除。
- 觀看相片時，點按 .

# 電子郵件

您可以使用電郵應用程式讀取 Gmail 以外供應商的電郵。電郵應用程式支援以下帳戶類型：POP3、IMAP 及 Microsoft Exchange（企業使用者適用）及其他帳戶。

- 點按  >  > 。

## 新增帳戶

當您第一次開啟電郵應用程式時，將會開啟設定精靈以協助您新增電郵帳戶。您可使用**設定**應用程式新增電郵帳戶。

- 點按  > **設定** > 。

## 處理帳號資料夾

- 點按  > **顯示所有資料夾**。

每個帳號均有收件匣、重要人士、已發送、草稿和顯示所有資料夾。您可能會有更多資料夾，視乎您的帳戶服務供應商所支援的功能而定。

## 編寫及發送電子郵件

- 1 點按 。
- 2 輸入將會收到訊息的收件者的地址。於輸入文字時，會從您的通訊錄建議匹配的地址。以分號分隔多個地址。
- 3 點按**副本/密件副本**欄位，以複製或隱藏複製至其他聯絡人/電郵地址。
- 4 點按文字欄位，並輸入訊息。
- 5 長按文字欄以編輯文字格式（粗體、斜體、底線、顏色）。
- 6 點按 ，在訊息上附加要發送的檔案。
- 7 點按  **發送電郵**。

## 更改電子郵件一般設定：

- 點按  > 設定 > 一般設定。

## 刪除電子郵件：

- 點按  > 設定 >  > 移除帳號 > 選擇要移除的帳戶 > 移除 > 是。

# 音樂

您的手機設有音樂播放器，讓您播放所有最愛的曲目。

## 注意

- 視乎安裝的軟件而定，某些檔案格式並不支援。
- 如果檔案大小超過可用的記憶體，則在開啟檔案時會發生錯誤。
- 音樂檔案的版權可能受國際公約和國內版權法保護。因此，您或需要取得授權或許可，才可以複寫或複製音樂。在某些國家，國內法律禁止私人複製受版權保護的材料。下載或複製檔案前，先檢查有關國家關於使用這類材料的國家法律。

## 播放歌曲

- 1 點按  >  > 。
- 2 點按**歌曲**標籤。
- 3 選擇要播放的歌曲。
- 4 可使用以下選項。

## 音樂播放器選項。



1		點按以暫停播放。
		點按以繼續播放。
2		點選以跳至專輯、播放列表或隨機播放的下一首曲目。 按住以快進。
3		點選以重新開始播放目前曲目或播放上一首曲目。 觸控並按住以倒轉。
4		點按以調整音量。
5		輕按以設定聲音效果。
6		點按以隨機模式播放目前播放列表（以隨機順序播放曲目）。
7		點按以在重播所有曲目、單曲循環和關閉重播之間切換。
8		點選以使用 SmartShare 功能分享您的音樂。
9		點按以新增歌曲至您的最愛。
10		點按以開啟目前播放列表。
11		點按以存取額外選項。

# 時鐘

時鐘應用程式讓您存取鬧鐘、計時器、世界時鐘及秒錶功能。點選螢幕上方的標籤或以水平滑動畫面，使用這些功能。

- 點按  >  > 。

## 鬧鐘

鬧鐘標籤讓您設定鬧鐘。

- 1 點按**鬧鐘**標籤。
- 2 點按  以新增鬧鐘。
- 3 更改所需設定然後點按**儲存**。

### 注意

- 您亦可點按現有鬧鐘以進行編輯。

## 計時器

計時器標籤可用作發出響鬧訊號，以聲音提示您已過去一段指定的時間。

- 1 點按**計時器**標籤。
- 2 於計時器設定所需時間。
- 3 點按**開始**，以開始使用計時器。
- 4 點按**停止**，以停止計時器。

## 世界時鐘

世界時鐘標籤讓您輕鬆查看世界各地城市的當地時間。

- 1 點按**世界時鐘**標籤。
- 2 點按  並選擇所需城市。

## 秒錶

秒錶標籤讓您將手機作為秒錶使用。

- 1 點按**秒錶**標籤。
- 2 點按**開始**以啟動秒錶。
  - 點按**單圈計時**以記錄單圈時間。
- 3 點按**停止**以停止秒錶。

## 計算機

計算機應用程式讓您使用標準計算機或科學計算機進行計算。

- 1 點按  >  > 。
- 2 點按數字鍵以輸入數字。
- 3 對於簡單計算，請點按所需的功能（+、-、x、÷），然後按「=」。

### 注意

- 對於更複雜的計算，點按 。

## 日曆

日曆應用程式讓您追蹤您的事件日程表。

- 1 點按  >  > 。
- 2 選擇您要新增事件的日期。然後點按 。

# 語音備忘錄

語音備忘錄應用程式為您錄低可於多個用途使用的音訊檔案。

## 錄製聲音或語音

- 1 點按  >  > 。
- 2 點按  開始錄音。
- 3 點按  結束錄音。
- 4 點按  收聽錄音。

### 注意

- 點按  以存取錄音。您可聆聽已儲存的錄音。

## 下載

使用此功能以查看已通過應用程式下載的檔案。

- 點按  >  > 。

## FM 收音機

您的手機備有內置 FM 收音機，只要作出適當調校，即可隨時隨地收聽您最喜愛的電台。

- 點按  >  > 。

### 注意

- 您必須插入耳機作為天線使用。

# LG Backup

## 有關備份以及復原裝置的資料

建議定期於內置儲存記憶體中建立與儲存備份檔案，尤其是更新任何軟件之前。在儲存記憶體保存目前的備份檔案，能讓您在遺失裝置、裝置被盜或突發令裝置損壞之問題的情況下，修復裝置資料。

此 LG 備份應用程式可於 LG 智慧型手機和平板電腦、其他軟體或操作系統版本間提供支援。因此，當您購買新的 LG 智慧型手機和平板電腦時，您可將目前的裝置數據備份至新的裝置。

如果您的智慧型手機和平板電腦已預先安裝 LG 備份應用程式，您可以備份和還原大部份的數據，包括已下載和預先安裝的應用程式、書籤、日曆項目、通訊錄、桌面設定和系統設定等。

### 警告：

- 要防止因電源不足而導致於備份或還原過程中突發關機，您應時常保持電源充足。

### 注意

- 還原備份檔案前，系統將會刪除儲存在智能手機的所有檔案。務必複製粘貼備份檔案至另一位置。
- 請注意，手機資料將被備份的內容覆寫。

## 備份裝置的資料

1 點按  >  > 。

2 選擇所需選項。

- **在裝置間複製資料** - 將數據從舊裝置複製至新裝置。
- **備份和還原** - 備份數據或從備份進行還原。

# Google 應用程式

Google 提供娛樂、社交網絡及商業應用程式。您可能需要 Google 帳戶方可存取某類應用程式。

如需應用程式的詳情，請前往應用程式的說明功能表。



## 注意

- 視地區或服務供應商而定，這個功能可能無法使用。

## Google

在網上或裝置上快速搜尋所需項目。

## Chrome

搜尋資料並瀏覽網頁。

## Gmail

透過 Google Mail 服務發送並接收電郵。

## 地圖

在地圖上搜尋您的位置以及其它位置的資訊。

## YouTube

觀看或建立影片並與他人分享。

## 雲端硬碟

只要雲端儲存內容，即可隨時隨地存取並與他人分享。

## 播放電影

觀看已儲存至裝置的影片並從 Play Store 下載多類內容。

## Hangouts

與個別朋友或在群組中聊天並使用影像、表情符號及視像通話。

## Photos

管理儲存在裝置上的相片、專輯及影片，並尚在至 Google+。

## Google 設定

為 Google 提供的功能進行設定。

## 語音搜尋

說出關鍵字詞或短語進行快速搜尋。



# 設定

# 存取設定功能表

設定應用程式可讓您自訂手機。

## 打開設定應用程式

- 點選  > 點選並按住  > **系統設定**。

或者

- 點按  >  > 。

## 檢視設定

點按  以切換檢視設定。

- **列表檢視** - 上下捲動以檢視清單。
- **選項卡視圖** - 左右掃動以點按所需標籤。

### 注意

- 此指南的工作指引內容乃根據預設檢視設定編寫。

# 網絡設定

## 雙智能咭

您可設定雙智能咭設定。

於設定畫面中點按**網絡標籤** > **雙智能咭**。

- **SIM 卡 1** - 讓您更改 SIM 卡 1 的名稱及圖示。
- **啟動插槽 1** - 勾選以啟動或停用 SIM 卡槽 1。
- **SIM 卡 2** - 讓您更改 SIM 卡 2 的名稱及圖示。
- **啟動插槽 2** - 勾選以啟動或停用 SIM 卡槽 2。
- **SIM 卡顏色主題** - 允許您選擇所需顏色。
- **成本節省模式** - 將聯絡人新增至電話簿時，會同時新增至指定的 SIM 卡。撥打電話時會識別出相符的網絡商 SIM 卡，而操作會透過相符的網絡商 SIM 卡完成。
- **流動數據** - 勾選以啟用流動網絡服務的數據存取。
- **待使用之 SIM 卡** - 您可更改預設數據網絡。所有流動封包服務（網絡、MMS 及電郵等）將會使用預設數據網絡選擇的 SIM

卡。只插入一張 SIM 卡時，預設數據網絡會設定為已插入的 SIM 卡，並不允許進行變更。

- **數據漫遊** - 勾選以讓您在家居網絡範圍以外時，使用流動數據連接。

## Wi-Fi

您可以在無線接入點 (AP) 範圍內使用高速存取互聯網。

於**設定**畫面中點按**網絡**標籤 > **Wi-Fi**。

- 1 點按  以開啟 Wi-Fi，並開始掃描可用的 Wi-Fi 網路。
- 2 點按一個網路進行連接。
  - 如果網路已有鎖定圖示加密，您需要輸入安全密鑰或密碼。
- 3 狀態欄上的圖示會顯示 Wi-Fi 狀態。

### 注意

- 如果您不在 Wi-Fi 範圍或將 Wi-Fi 設為 關閉，裝置可能會自動轉為使用手機數據連接至網路，可能需要收取數據費用。

## Wi-Fi Direct

Wi-Fi Direct 讓 Wi-Fi 裝置直接連接而無需接入點。

- 點按  > **進階的 Wi-Fi** > **Wi-Fi Direct**。

### 注意

- 在此功能表中，附近可見的 Wi-Fi Direct 裝置均可看到您的裝置。

## 藍牙

藍牙是一種短距離無線通訊技術，讓您無線連接多個藍牙裝置，例如耳機及免提車內套件，以及支援藍牙的手提裝置、電腦、打印機及無線裝置。

## 注意

- 對經由藍牙無線功能傳輸或接收的資料之遺失、竊取或不當使用之情況，LG 概不負責。
- 時刻確保僅透過信任且安全的裝置分享和接收數據。
- 若是裝置之間有障礙物，可能需要縮短可運行的距離。
- 某些裝置（特別是經由藍牙 SIG 測試許可的裝置）可能會與您的手機不相容。

## 為手機配對另一個藍牙裝置

- 1 於**設定**畫面中點按**網絡**標籤 > **藍牙**。
- 2 點按  以開啟藍牙，並掃描可用的藍牙裝置。
  - 如要偵測附近可見的裝置，點按**搜尋**。
- 3 從列表中選擇您想配對的裝置。配對成功後，您的手機就會連接到該裝置。

## 注意

- 配對兩個藍牙裝置是一次性的過程。完成配對後，裝置將可持續確認連接並交換資訊。
- 請參閱藍牙裝置隨附的文件，查看配對模式及密碼（通常是 0000 - 四個零）的資訊。

## 透過藍牙傳送資料

- 1 選擇檔案或項目，例如聯絡人或媒體檔案。
- 2 選擇經藍牙傳送資料的選項。
- 3 搜尋和配對已啟動藍牙的裝置。

## 注意

- 由於其他藍牙裝置的規格及功能不同，因此顯示及操作可能有所不同，未必可以與所有藍牙裝置進行傳送或交換等功能。

## 透過藍牙接收資料

- 1 於**設定**畫面中點按**網絡**標籤 > **藍牙**。
- 2 點按  以開啟藍牙功能。
- 3 您會從傳送的裝置收到一個有關接受配對的請求。請選擇**接受**。

## 流動數據

顯示數據用量並設定流動數據用量限制。

- 點按  以開啓或關閉流動數據連接。如此，您可管理您的流動數據使用方法。相反，您也可透過 Wi-Fi 網絡連接使用數據。

## 通話

此功能表讓您進行不同通話設定。

於**設定**畫面中點按**網絡**標籤 > **通話**。

[SIM 卡 1/SIM 卡 2 點按]

- **留言信箱** – 讓您選擇您的服務供應商的語音信箱服務。
- **固定撥號** – 開啟並編譯可從您的手機撥出的號碼列表。需要使用 PIN2，您可以向網絡商索取。僅可從手機撥出固定撥號列表包含的號碼。
- **來電轉接** – 讓您設定來電轉接選項。
- **通話限制** – 鎖定來電、撥出或國際通話。
- **通話時間** – 檢視上次通話、已撥電話、已接來電及所有通話的通話時間。
- **其他設定** – 您可更改以下設定。

**本機號碼**：讓您設定來電顯示選項。

**來電待接**：如已啟動來電等候，當您在通話中接到來電，手機便會通知您（視乎您的網絡供應商而定）。

[通用標籤]

- **顯示一個應用程式內的語音呼叫** – 使用應用程式時，顯示來電語音通話彈出視窗。
- **拒接來電** – 讓您設定拒接來電功能。
- **用訊息拒絕** – 當您想拒接來電時，使用此功能可以快速發送訊息。如果您需要在會議中拒接來電，此功能將十分有用。
- **自動接聽** – 設定時間後，已連接的免提裝置會自動接聽來電。
- **連接震動** – 於另一方接聽來電時手機震動。
- **噪音抑制** – 抑制通話中的背景雜音。

- **語音清晰度** - 可選擇提高語音清晰度。
- **儲存未知號碼** - 通話後將未知號碼新增至通訊錄。
- **電源鍵結束通話** - 允許您選擇結束通話。
- **接聽來電** - 來電期間可將手機放到耳邊以接聽來電。
- **靜音來電** - 來電期間可翻轉手機以靜音。

## NFC

您的手機配備 NFC 功能。NFC（近距離無線通訊）為一種無線連接技術，使得電子裝置之間具有雙向溝通能力。NFC 可於數公分的距離上運作。您可輕鬆以您的裝置觸碰 NFC 標籤或其他 NFC 支援裝置以分享內容。如果您使用裝置接觸一個 NFC 標籤，您的裝置就可以顯示其內容。

於**設定**畫面點按**網絡標籤 > 共用與連線 > NFC**。

- 1 點按  以開啟藍牙功能。
- 2 只要將手機及其他兼容數據傳輸裝置的 NFC 觸點貼近（一般為 20 毫米內），即可輕鬆發送或接收檔案。
  - **點選支付** - 開啟 NFC 時，您可在收銀處將手機觸碰讀取器，以使用點選支付功能以購買項目。如您的裝置沒有預設應用程式，您可瀏覽 Google Play 下載其他付款應用程式。

### 注意

- 由於其他藍牙裝置的規格及功能不同，因此顯示及操作可能有所不同，未必可以與所有藍牙裝置進行傳送或交換等功能。
- 在此功能表中，附近可見的 Wi-Fi Direct 裝置均可看到您的裝置。

## Android Beam

開啟此功能時，只要將裝置貼近另一支援近距離通訊 (NFC) 裝置，即可傳送應用程式內容。只需將兩部裝置貼近（通常為背對背）然後點選螢幕。應用程式會決定需要傳送的項目。

於**設定**畫面點按**網絡標籤 > 共用與連線 > Android Beam**。

- 1 點按  以啟動 Android Beam（於每部裝置上啟動 Android Beam）。
- 2 選擇需要分享的畫面或檔案（例如圖片庫的影像）。
- 3 將裝置緊貼一起。

- 4 縮小畫面後點按您要發送之畫面（發送或接收的內容因應用程式而不同）。

## SmartShare Beam

SmartShare Beam 功能可讓您在 LG 手機或平板電腦之間快速傳送或接收。

### 透過 SmartShare Beam 接收數據

- 1 於**設定**畫面點按**網絡標籤** > **共用與連線** > **SmartShare Beam**。
- 2 點按  以啟動 SmartShare Beam。手機 Wi-Fi 啟動後即可接收檔案。

### 透過 SmartShare Beam 接收數據

- 1 選擇檔案或項目，例如媒體檔案。
- 2 選擇經 SmartShare Beam 傳送資料的選項。
- 3 從列表中選擇您想配對的裝置。

## 媒體伺服器

允許您與附近兼容 DLNA 的裝置共享手機的多媒體內容。

於**設定**畫面點按**網絡標籤** > **共用與連線** > **媒體伺服器**。

- 啟動**內容共享**選項讓附近裝置存取您的內容。

## Miracast

讓您將手機畫面和聲音複製到 Miracast 傳輸器或電視上。

於**設定**畫面點按**網絡標籤** > **共用與連線** > **Miracast**。

- 點按  以開啟 Miracast，並掃描可用的 Miracast 裝置。您的手機會顯示可透過 Miracast 投放的所有裝置內容。

## LG AirDrive

讓您連接至電腦以管理手機。使用前請使用電腦版的 LG Electronics 網頁以建立 LG Bridge。以手機及電腦登入相同的 LG 帳戶時，您可使用 LG AirDrive 功能。

- 1 以流動裝置及電腦登入相同的 LG 帳戶。
- 2 於**設定**畫面點按**網絡**標籤 > **共用與連線** > **LG AirDrive**。
- 3 於電腦執行 LG Bridge 應用程式並使用 **LG AirDrive**。

### 注意

- 如要建立 **LG Bridge**，請參考 **了解您的手機** 的 **LG Bridge** 內容。

## 正在列印

允許您使用連接至與 Android 裝置相同 Wi-Fi 網絡的印表機，列印某些畫面的內容（如 Chrome 顯示的網頁）。

於**設定**畫面點按**網絡**標籤 > **共用與連線** > **正在列印**。

## 以無線印表機打印

- 1 選擇檔案或項目，例如通訊錄或媒體檔案。
- 2 選擇經藍牙傳送資料的選項。
- 3 搜尋和配對已啟動藍牙的裝置。

### 注意

- 由於其他藍牙裝置的規格及功能不同，因此顯示及操作可能有所不同，未必可以與所有藍牙裝置進行傳送或交換等功能。

## USB 網絡連線

讓您透過 USB 線共享電腦的互聯網連線。

- 1 使用 USB 線將手機連接到電腦。
- 2 於**設定**畫面中點按**網絡**標籤 > **網絡共享** > **USB 網絡連線**。
- 3 點按  以啟動 USB 網絡共享。

## Wi-Fi 熱點

您也可使用手機提供流動寬頻連線。建立熱點並分享連接。  
於**設定**畫面中點按**網絡**標籤 > **網絡共享** > **Wi-Fi 熱點**。

- 1 點按  以啓動 Wi-Fi 熱點。
- 2 點按建立 Wi-Fi 熱點已變更 SSID、安全、密碼及其他熱點選項。

## 藍牙數據連線

讓您透過藍牙與其他裝置連接。

- 於**設定**畫面中點按**網絡**標籤 > **網絡共享** > **藍牙數據連線**。
- 點按  以啓動藍牙網絡共享並分享網絡。

## 飛航模式

讓您在不能接撥電話或使用數據的地方使用不少手機上的功能，包括遊戲和音樂。當您將電話轉至飛行模式時，您將不能接收或撥打任何電話，並不能存取網上訊息。

於**設定**畫面點按**網絡**點按 > **更多** > **飛航模式**。

## VPN

您可以在手機上新增、設定或管理虛擬專用網絡 (VPNs)，讓您連接或存取安全的本地網絡的資源，例如您的公司網絡。

於**設定**畫面點按**網絡**點按 > **更多** > **VPN**。

## 流動網絡

此功能表可讓您設定多種網絡設定如**流動數據**、**數據漫遊**等。

於**設定**畫面點按**網絡**點按 > **更多** > **流動網絡**。

# 聲音和通知設定

讓您為裝置進行多種聲音設定。

於設定畫面點按**聲音和通知**標籤。

- **聲音設定檔** - 讓您設定聲音設定檔。
- **音量** - 調整手機的音量設定以配合您的需要及環境。
- **智能咭1 鈴聲 / 智能咭2 鈴聲** - 讓您設定通話鈴聲。您可新增或刪除鈴聲。
- **個人來電鈴聲** - 您可根據來電號碼編寫鈴聲。
- **震動強度** - 讓您可為通話、通知及觸控回饋設定震動強度。
- **聲音與震動** - 啟動以設定手機收到來電時有鈴聲及震動。
- **智能咭 1 震動類型/智能咭 2 震動類型** - 讓您選擇震動的類型。
- **干擾** - 您可設定不被通知干擾的時間表。當設定只限優先時，您可設定允許若干功能。
- **鎖定螢幕** - 讓您選擇是否在鎖定屏幕上顯示或隱藏通知。
- **應用程式** - 讓您為個別應用程式設定通知顯示及優先條件。
- **32 位元 HiFi DAC** - 啟動此功能可配合受支援的耳機提高音訊品質。
- **智能咭 1 通知聲音/智能咭 2 通知聲音** - 允許您設定預設的通知鈴聲，您也可新增或移除鈴聲。
- **點選震動** - 啟動以於點按桌面鍵時及與其他用戶界面互動時震動。
- **音效** - 如要在按撥號鍵盤的數字、選擇螢幕選項等時啟動或關閉音效，請在此功能表上設置。
- **訊息/通話聲音通知** - 讓裝置自動讀出來電及訊息事項。

# 顯示設定

## 第二螢幕

於設定畫面點按顯示標籤 > 第二螢幕。

如需更多資訊，請參考為您而設的功能的第二螢幕。

## 桌面

讓您進行桌面設定。

於設定畫面點按顯示標籤 > 桌面。

- **選擇主頁** - 選擇所需的桌面主題。
- **Smart Bulletin** - 讓您使用另一個桌面顯示自訂資訊。
- **主題** - 為您的裝置設定螢幕主題。您可從 LG SmartWorld 下載新主題。
- **牆紙** - 設定桌面上使用的牆紙。
- **螢幕效果** - 讓您可選擇從一桌面撥動至下一畫面時，顯示的效果類型。
- **允許主頁螢幕循環** - 啟動以允許桌面捲動（於最後一個畫面後返回第一個畫面）。
- **說明** - 顯示桌面的說明資訊。

## 鎖定螢幕

讓您進行鎖定螢幕設定。

於設定畫面點按顯示標籤 > 鎖定螢幕。

- **選擇螢幕鎖定** - 讓您設定螢幕鎖定以保護您的手機。
- **Smart Lock** - 設定以與信任的裝置連線或位於信任的地點時保持手機解鎖。如需更多資訊，請參考了解您的手機中Smart Lock內容。
- **螢幕效果** - 設定撥動鎖定畫面時的效果。
- **牆紙** - 選擇顯示於鎖定畫面的牆紙。
- **捷徑** - 讓您選擇鎖定螢幕的捷徑。
- **天氣動畫** - 啟動以在鎖定畫面上顯示目前位置天氣的動畫。

- **遺失手機的通訊錄資訊** - 遺失電話時，在鎖定螢幕上顯示手機用戶的資料。
- **鎖定時計** - 允許您設定螢幕逾時後自動鎖定螢幕的時限。
- **電源按鈕立即鎖定** - 勾選以在按下電源/鎖定鍵時立即鎖定螢幕。此設定覆蓋安全鎖計時器的設定。

## 主頁觸摸按鈕

設定所有螢幕底部顯示的桌面觸控鍵。設定要顯示哪些鍵、它們在欄上的位置以及樣式。

於設定畫面點按顯示標籤 > 主頁觸摸按鈕。

## 更多顯示設定

容許您進行其他顯示設定。

於設定畫面點按顯示標籤。

- **字體類型** - 選擇想要的字體。
- **字體大小** - 選擇想要的字型大小。
- **亮度** - 使用滑桿調整螢幕亮度。
- **自動旋轉螢幕** - 設定當您旋轉手機時自動切換方向。
- **螢幕逾時** - 設定畫面自動關閉的時間。
- **休眠模式** - 選擇在插在機座及/或充電時的休眠期間顯示的螢幕保護。
- **運動感應器校正** - 改善傾斜的精準度及感應器的速度。

# 一般設定

## 語言及鍵盤

讓您變更文字輸入的設定

選擇手機上的文字語言和設定螢幕鍵盤，包括您已新增至字典的字詞。

於**設定**畫面，點按**一般**標籤 > **語言及鍵盤**。

- **語言** - 選擇手機上使用的語言。
- **通用鍵盤** - 讓您選擇其它鍵盤類別。
- **LG 鍵盤** - 變更 LG 鍵盤設定。
- **Google 語音輸入** - 啓動以選擇 Google 語音輸入以輸入資料。點按設定圖示以變更 Google 語音設定。
- **語音搜尋** - 點按以對語音搜尋進行設定。
- **文字轉換語音輸出** - 點按以對文字轉換語音輸出設定首選引擎或進行一般設定。
- **指標速度** - 調整遊標速度。
- **扭轉按鈕** - 轉換滑鼠按鈕以在右方使用主要按鈕。

## 位置

如要開啟定位服務，您的電話會使用 Wi-Fi 和流動網絡判定您大概的所在位置。如選擇此選項，系統會問您是否同意允許 Google 在提供這些服務時，使用您所處的位置。

於**設定**畫面中點按**一般**標籤 > **位置**。

- **模式** - 設定如何判定您現時的位置資訊。
- **我的位置** - 啓動定位住所的位置，進行智能設定。
- **低電源預計位置** - 啓動以使用硬件加速。
- **相機** - 啓動以在相片或影片中新增位置標籤。
- **Google 位置記錄** - 讓您選擇 Google 及其產品存取的位置資訊設定。

## 帳號及同步處理

使用此功能表已新增、移除並管理您的 Google 及其他受支援的帳戶。您亦可使用這些設定來控制全部應用程式是否根據自己的日程表來發送、接收及同步處理資料，以及發送、接收及同步處理資料的方式，以及全部應用程式是否可以自動同步使用者資料。

Gmail™、日曆及其他應用程式亦可能有其設定，以控制其同步資料的方式，請參閱該應用程式的部分以取得詳細資訊。

於**設定**畫面，點按**一般**標籤 > **帳號及同步處理**。

- **自動同步處理數據** - 啟動此選項以自動同步您新增至手機的所有帳戶。
- **帳號** - 顯示所有已新增的帳戶。點按其中一個帳戶並/或進行管理。
- **新增帳號** - 點按以新增帳戶。

## 雲端

您可新增雲端帳戶，讓您更快捷方便使用雲端服務。

於**設定**畫面中點按**一般**標籤 > **雲端**。

## 使用者

新增使用者以與其他人士分享手機。每位使用者可以在私人空間中擁有專屬的應用程式及內容。新使用者必須進行初始設定以使用手機。

於**設定**畫面中點按**一般**標籤 > **使用者**。

- **新增使用者** - 讓您為裝置新增並設定新使用者。

## 協助工具

您可使用可存取性設定，以設定已安裝到手機的可存取性外掛程式。

於**設定**畫面中點按**一般**標籤 > **協助工具**。

- **視覺** - 進行適合視障人士的設定。
- **TalkBack** - 讓您設定 TalkBack 功能，此功能可以透過口語反饋協助視力受損者。

- **訊息/通話聲音通知** - 讓您聽到為來電及訊息自動讀出的警示。
- **螢幕亮度** - 啟動以將螢幕變暗。
- **字體大小** - 設定字體大小。
- **觸控縮放** - 讓您可以點按螢幕三下來縮小或放大螢幕。
- **螢幕顏色反轉** - 啟動以轉換螢幕和內容的色彩。
- **螢幕顏色調整** - 讓你轉換螢幕和內容的色彩。
- **電源鍵結束通話** - 啟動後即可按電源/鎖定鍵結束通話。
- **聽覺** - 進行適合聽障人士的設定。
  - **標題** - 讓您為聽障人士自訂字幕設定。
  - **閃光提示** - 啟動以設定來電及通知的閃光。
  - **關閉所有聲音** - 啟動以關閉所有裝置聲音。
  - **音訊類型** - 設定音頻類型。
  - **聲音平衡** - 設定音頻線路。移動桌面導航上的滑塊，以便對其進行設置。
- **電機與認識能力** - 進行適合運動障礙人士的設定。
  - **觸控回饋時間** - 設定觸碰與回應時間。
  - **Touch assistant** - 顯示輕易存取一般動作的觸控板。
  - **螢幕逾時** - 設定背光燈自動關閉前的時間。
  - **觸控控制區域** - 讓您選擇及限制可觸控的螢幕範圍。
- **協助工具捷徑** - 點按主頁按鈕三次即可快速存取所選功能。
- **自動旋轉螢幕** - 啟動以允許手機自動根據手機方向（縱向或橫向）旋轉螢幕。
- **按擊功能** - 讓您使用一個或多個類似鍵盤按鍵的切換器與裝置互動。此功能對於行動不便而無法直接與裝置互動的使用者非常實用。

## 迷你檢視

打開此功能表以在主頁觸控按鈕左右掃動並以單手縮小畫面。如需更多資訊，請參考**為您而設的功能的迷你檢視**。

於**設定**畫面中點按**一般標籤 > 迷你檢視**。

## 快捷鍵

當螢幕關閉或鎖定時，按下**音量鍵**兩次以快速存取應用程式。  
於**設定**畫面中點按**一般**標籤 > **快捷鍵**。

- 按下**音量提升鍵** 2 次以打開 QuickMemo+ 應用程式。
- 按下**音量降低鍵** 2 次以打開相機應用程式。
- **快速拍照** - 啓動此選項便可連按音量降低鍵 2 次進行即時拍攝。

## 指紋和安全

使用功能表以設置保密您的手機及其資料。

於**設定**畫面，點按**一般** 標籤 > **指紋和安全**。

- **指紋** - 使用指紋解鎖畫面並檢視鎖定內容。如需更多資訊，請參考**為您而設的功能**的**指紋**內容。
- **內容鎖定** - 選擇鎖定類型以鎖定 QuickMemo+ 中的檔案。
- **加密手機** - 讓您可加密手機上的資料，以保安全。每次開機時，您需要輸入 PIN 碼或密碼以解鎖手機。
- **加密 SD 卡儲存器** - 讓您可加密 SD 卡資料儲存裝置，以免資料被其他裝置使用。
- **設定 SIM 卡鎖定** - 設定 PIN 碼鎖定您的 SIM 卡，隨後您可更改 PIN 碼。
- **密碼鍵人為可見** - 啓動以於輸入密碼時簡要地顯示密碼每個字元，讓您可看見正在輸入的內容。
- **裝置管理員** - 查看或撤銷裝置管理員
- **未知的來源** - 允許安裝非 Play Store 的應用程式。
- **確認應用程式** - 在安裝可能會造成危害的應用程式之前禁止或警告。
- **儲存裝置類型** - 顯示使用中的儲存類型。
- **證書管理** - 讓您可管理您的安全認證。
- **Trust agents** - 選擇可於解鎖螢幕上使用的應用程式。
- **螢幕固定** - 您可使用螢幕 PIN 碼以啓動裝置並顯示特定應用程式的螢幕。
- **可以使用的應用程式** - 讓您可檢視手機應用程式的使用資訊。

## Smart settings

讓您根據所在位置或您的行為，開/關、開啟或變更設定，例如 Wi-Fi、音樂、聲音設定檔等。

於**設定**畫面中點按**一般**標籤 > **Smart settings**。

## Quick Cover case

Quick Cover 可讓您在電話套緊合的狀態下檢查來電並停止鬧鈴/計時器。將螢幕解鎖方式設為掃動方可在使用保護套下解鎖。

於**設定**畫面點按**一般**標籤 > **Quick Cover case**。

## 雙視窗

讓您設定雙視窗功能。

於**設定**畫面中點按**一般**標籤 > **雙視窗**。

- **自動開啟** - 勾選後點按全螢幕上的連結或電郵的附件時開啟雙視窗。
- **說明** - 顯示使用雙視窗的提示。

如需更多資訊，請參考**為您而設的功能的雙視窗**。

## 日期及時間

設定您喜好的日期及時間顯示方式。

於**設定**畫面，點按**一般** 標籤 > **日期及時間**。

## 儲存裝置

您可管理裝置內置記憶體上的已用及可用空間。

於**設定**畫面中點按**一般**標籤 > **儲存裝置**。

## 內存空間

- **總空間** - 以棒形圖（未用空間以灰色表示）及文字顯示您手機的內存中的總空間及剩餘空間。相應應用程式及其使用的空間會於裝置使用者下列出。

## SD 卡

- **總空間** - 顯示裝置記憶卡的總空間容量及剩餘可用空間。
- **安裝/移除 SD 卡** - 讓您安裝/移除 SD 卡。
- **清除 SD 卡** - 讓您清除 SD 卡儲存的數據。

## 電池與省電

顯示現時的電量狀態，包括剩餘電量百分比及充電狀態。

於**設定**畫面點按**一般**標籤 > **電池與省電**。

- **電池使用狀況** - 顯示電池用量水平及使用詳情。點選其中一項以查看更詳細資訊。
- **狀態列上之電量百分比** - 勾選以在電池圖示旁的狀態欄顯示電池存量百分比。
- **省電** - 點按省電模式開關以切換至開啟或關閉。設定自動啟動省電模式的電池量百分比。
- **遊戲優化** - 調整遊戲的影像畫紙以節省電量。

## Smart cleaning

顯示您手機的使用空間及剩餘使用量，並選擇要清除的檔案。

於**設定**畫面中點按**一般**標籤 > **Smart cleaning**。

- 1 點選資料夾位置並勾選合適的空格。
- 2 點按**清理** > **是**。

## 應用程式

讓您檢視安裝在手機中的應用程式詳細資訊、管理數據及強制停止。

於**設定**畫面中點按**一般**標籤 > **應用程式**。

## 預設訊息應用程式

此功能表讓您選擇使用什麼訊息應用程式作為預設的訊息應用程式。

於**設定**畫面點按**一般** 標籤 > **預設訊息應用程式**。

## 備份與重設

更改設定以管理設定和數據。

於**設定**畫面，點按**一般**標籤 > **備份與重設**。

- **LG Backup** - 為裝置上的所有資料備份，以便於數據遺失或取代時可進行還原。如需更多資訊，請參考**應用程式**內的 **LG Backup**。
- **備份我的數據** - 備份應用程式數據、Wi-Fi 密碼以及其他設定至 Google 伺服器。
- **備份帳號** - 顯示現時用作備份資訊的帳戶。
- **自動還原功能** - 當重新安裝應用程式時，還原已備份設定及資料。
- **重設為原廠設定** - 將設定重設為原廠預設值並刪除您的所有數據。如果您用此方法重設您的手機，您會被提示重新輸入您第一次啟動 Android 時所輸入的訊息。

## 關於手機

檢視法律資訊、檢視手機狀態及軟件版本，以及執行軟件更新。

於**設定**畫面中點按**一般**標籤 > **關於手機**。

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

# 附錄

# 手機軟件更新

## 從互聯網更新 LG 手機軟件

如需更多有關此功能的資訊，請瀏覽 <http://www.lg.com/common/index.jsp> → 選擇國家/地區及語言。

此功能允許您無須親臨服務中心，即可輕鬆透過互聯網將手機韌體更新為較新版本。LG 為您的手機推出較新版本的韌體時，此功能才可使用。

手機韌體更新要求用戶加倍留意整個更新過程。請確保繼續進行前，已檢查所有在每一個步驟出現的說明和備註。請注意，更新期間若移除 USB 數據線，有可能對您的手機造成嚴重損害。

### 注意

- LG 保留權利，可酌情決定只為選定型號提供韌體更新，並不保證所有手機型號均有韌體的較新版本。

## 透過空中下載 (OTA) 進行 LG 手機軟件更新

此功能讓您無須連接 USB 數據線，亦能輕鬆透過 OTA 將手機軟件更新為較新版本。LG 為您的手機推出較新版本的韌體時，此功能才可使用。

您應該先在手機上檢查軟件版本：**設定 > 一般標籤 > 關於手機 > 通用標籤 > 更新中心 > 軟體更新 > 現在檢查更新。**

### 注意

- 手機內置記憶體的个人資料—包括 Google 帳號及任何其他帳號的資訊、系統/應用程式數據及設定、任何已下載的應用程式及 DRM 授權—在更新手機軟件的程序期間可能會遺失。因此，LG 建議您先備份個人資料，才更新手機軟件。LG 對於個人資料的任何遺失概不負責。
- 此功能視乎網路服務供應商、地區或國家而定。

# 常見問題解答

本章節列出一些使用手機時可能遇上問題。您可能需要就某些問題聯絡您的服務供應商，但多數問題均可輕易自行修正。

訊息	可能起因	可用解決方法
SIM 卡錯誤	手機內無 SIM 咭，或不正確地插入 SIM 咭。	確保已正確地插入 SIM 卡。
無網絡連接/ 失去網絡	訊號較弱或您位於運營商網絡服務範圍外。	移近窗邊或移至空曠範圍。檢查網絡供應商的覆蓋範圍。
	網絡商套用新服務。	檢查 SIM 卡是否多於 6~12 個月。如出現此情況，請於鄰近網絡供應商分行更換 SIM 或 USIM 卡。請聯絡您的服務供應商。
代碼不相符	要更改安全密碼，您需要重新輸入以確認新的安全密碼。	如您忘記密碼，請聯絡您的服務供應商。
	您所輸入的兩個密碼並不相符。	
並無可設定應用程式	服務供應商不支援此功能，或需要註冊使用此功能。	請聯絡您的服務供應商。
已下載的應用程式可能引致許多錯誤。	移除應用程式	<ol style="list-style-type: none"><li>1 點按  &gt;  &gt; 。</li><li>2 點按一般標籤 &gt; 應用程式。</li><li>3 點按應用程式 &gt; 解除安裝。</li></ol>

訊息	可能起因	可用解決方法
無法撥打電話	撥號錯誤	未授權新網絡。
	新 SIM 卡已插入。	請檢查新的限制。
	已達預付費用上限。	聯絡您的服務供應商，或使用 PIN2 重設限額。
手機無法啟動	按開/關鍵時間太快。	按住開啟/關閉鍵至少兩秒。
	電池並無充電。	為電池充電。檢查螢幕上的充電指示器。
充電錯誤	電池並無充電。	為電池充電。
	外界溫度太高或太低。	確保於正常溫度下為手機充電。
	接觸不良	檢查充電器是否正常，以及是否正確地連接至手機。
	無電壓	將充電器插入不同的插座。
	充電器故障	更換充電器。
	使用不當充電器	請只使用原裝 LG 配件。
號碼不允許。	固定撥號功能已開啟。	檢查設定功能表並關閉功能。
無法接收/發送文字訊息和圖片	記憶體已滿	刪除手機內某些數據（如應用程式或訊息）以騰出更多可用記憶。
無法開啟檔案	不支援的檔案格式	檢查支援的檔案格式。

訊息	可能起因	可用解決方法
接收來電時，螢幕並無開啟。	距離感應器問題	如您使用保護邊或保護殼，請確保其並無遮蓋距離感應器四周位置。確保距離感應器附近並無任何障礙物。
沒有聲音	震動模式	檢查聲音功能表的設定狀態以確保您並非使用震動或不允許干擾模式。
死機或停止運作。	軟件間歇性問題	如在嘗試操作手機時屏幕凍結或電話沒有回應，請拆除電池後再安裝。然後重新開啟電話。 <b>或者</b> 透過網站嘗試進行軟件更新。

## 防盜指南

您可設定裝置以避免他人在無許可下將裝置還原至原廠設定。例如，如您遺失裝置，或裝置遭盜用或被清除內容，只有具備 Google 帳戶或螢幕鎖定資訊者可使用此裝置。

您只需確定您裝置的下列事項已妥善保護：

- **設定螢幕鎖定：** 如您遺失裝置，或裝置遭盜用但已設定螢幕鎖定，此情況下裝置內容無法透過設定功能表清除，除非螢幕已解鎖。
- **在裝置上新增 Google 帳戶：** 如您裝置內容不幸被清空但您擁有 Google 帳戶，此情況下別人無法在裝置完成設定程序，除非您再次輸入 Google 帳戶的資訊。

在作出妥善安全措施後，您需要解鎖螢幕或輸入 Google 帳戶密碼方可還原至原廠設定。這可確保重設由您或您信任的人進行。

### 注意

- 進行原廠還原時，不要忘記您新增至您裝置的 Google 帳戶及密碼。如在設定程序期間無法提供帳戶資訊，您將無法在還原後使用裝置。

# 更多資訊

## 開放源碼軟件通知

若要獲取此產品包括的 GPL、LGPL、MPL 開放源碼和其他開放源碼，請瀏覽 <http://opensource.lge.com>。

除了開放源碼外，所有提及的授權條款、保養聲明和版權通知均可供下載。

LG Electronics 亦可以透過收費 CD-ROM 提供開放源碼，費用包括 CD-ROM 成本（例如媒體成本、運費以及處理費），您可透過 [opensource@lge.com](mailto:opensource@lge.com) 索取。此服務由購買產品日起計三 (3) 年內有效。

## 商標

- Copyright ©2015 LG Electronics, Inc. 保留所有權利。LG 及 LG 標誌乃 LG 集團及其相關公司的註冊商標。所有其他商標均屬於其擁有者。
- Google™、Google Maps™、Gmail™、YouTube™、Hangouts™ 及 Play Store™ 均為 Google, Inc 的商標。
- 藍牙® 乃 Bluetooth SIG, Inc. 全球的註冊商標。
- Wi-Fi® 及 Wi-Fi 標誌乃 Wi-Fi Alliance. 的註冊商標。
- 所有其他商標與版權均屬於其擁有者。

## DivX HD

本 DivX Certified® 裝置已通過嚴格的測試，以確保可正常播放 DivX® 影片。

如要播放購買的 DivX 電影，請先在 [vod.divx.com](http://vod.divx.com) 註冊您的裝置。從您裝置的設定選單，在 DivX VOD 區段中找到您的註冊碼。

DivX Certified® 可播放畫質高達 HD 720p 的 DivX® 影片，包括付費內容。

DivX®、DivX Certified® 和相關標誌是 DivX, LLC 的商標，必須取得授權才能使用。

## Dolby Digital Plus DOLBY. DIGITAL PLUS

Dolby Laboratories 授權製造。Dolby、Dolby Digital Plus 及 double-D 符號乃 Dolby Laboratories 的商標。


## 鐳射安全聲明

### 注意！

此產品使用鐳射系統。為確保適當使用產品，請仔細閱讀本用戶手冊，並保留以作日後參考。如產品需要維修，請聯絡授權的服務中心。

如未有根據本文指定的程序控制、調整或操作，可能會導致危險的輻射洩露。

為避免直接暴露鐳射光束，請勿嘗試開啟內部機件，或與鐳射光有直接接觸。

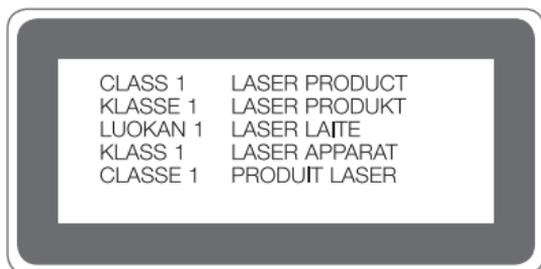

## 確認聲明

**LG Electronics** 在此聲明 **LG-H961N** 產品符合對 **1999/5/EC** 指示的基本要求和相關規定。確認聲明副本請見：

<http://www.lg.com/global/declaration>

## 使用皮革背蓋的注意事項

- 本產品背蓋以牛皮製成，由於天然皮革的特性，可能有不同皺褶和花紋。如本產品因接觸任何液體（水、梳打、海水、雨水、汗水、防曬霜、化妝品、濕氣等）而沾濕，可能導致掉色、變色或變形。
- 如本產品沾濕或沾污，請用乾毛布輕輕將水份吸走，或用皮膏擦拭，然後置於陰涼處待乾。如產品長時間曝露於潮濕環境，可能導致摺紋或發霉。基於皮革特性，清潔後皮革的形狀可能無法復原。如使用普通清潔劑或有機溶劑，可能令污漬或變形情況更嚴重。
- 如皮革被雨水或汗水沾濕，請小心使用並避免與衣物接觸。此情況可能導致染色而變成污漬。
- 由於皮革的特性，長期磨擦或用力過度可能損壞皮革表面。



### 注意

- 部分插圖和電池蓋類型可能與您的裝置不同，視乎您所在的地區、服務供應商而定，如有變更，恕不預先通知。

# 关于本用户指南

简体中文

感谢您选择 LG。首次使用设备前，请仔细阅读本用户指南，确保安全、正确使用。

- 务必使用正品 LG 配件。提供的物品仅为该设备设计，可能与其他设备不兼容。
- 此设备采用触摸屏键盘，因此不适合视障人士使用。
- 说明基于设备的默认设置。
- 设备上的默认应用程序如有更新以及不再受支持，恕不另行通知。如果对设备提供的应用程序有疑问，请联系 LG 服务中心。对于用户安装的应用程序，请联系相关服务提供商。
- 修改设备的操作系统或安装非官方来源的软件可能损坏设备，并导致数据损坏或丢失。这些行为违反 LG 许可协议并将导致保修失效。
- 因地区、服务提供商、软件版本或操作系统版本不同，某些内容和插图可能与您的设备有所不同，如有变化，恕不提前通知。
- 与您的设备一同提供的软件、音频、墙纸、图像及其它媒体均经过许可，可有限使用。如果您将这些材料抽取一部分或整体用于商业或其他用途，您可能会侵犯版权法。此时用户会因非法使用媒体而承担相应的全部法律责任。
- 可能会产生额外的数据服务（如信息、上传、下载、自动同步和定位服务）费用。为避免额外费用，请选择一项适合您自身需求的数据计划。联系您的服务提供商以获取更多详细信息。

## 说明性公告

 <b>警告</b>	可能造成自身和他人人身伤害或者手机或其他财产损失的情况。
 <b>备注</b>	公告或其他信息。

# 目录

关于安全有效使用手机的准则.....	5	安装 Nano SIM 卡和电池.....	25
<b>必将让您爱不释手的功能.....</b>	<b>10</b>	为电池充电.....	27
分屏显示.....	11	优化电池使用寿命.....	27
激活分屏显示功能.....	11	插入内存卡.....	28
使用分屏显示功能.....	11	取出存储卡.....	29
指纹.....	12	触摸屏提示.....	29
注册指纹.....	12	轻触或点触.....	29
LG 健康.....	13	点触并按住.....	30
迷你视图.....	13	拖动.....	30
辅屏.....	14	滑动.....	30
辅屏的功能.....	14	轻触两次.....	31
打开/关闭辅屏功能.....	15	双指缩放.....	31
智能通知.....	15	<b>Google 帐户设置.....</b>	<b>32</b>
微电影.....	16	创建 Google 帐户.....	32
Quick 多任务.....	17	登录 Google 帐户.....	32
Quick 多任务.....	17	<b>设备锁定和解锁.....</b>	<b>33</b>
Quick 备忘录+.....	18	指纹.....	33
使用捕获+.....	18	轻敲唤醒.....	33
查看保存的备忘录.....	18	轻敲解码.....	33
Quick 遥控.....	19	改变屏幕锁定方式.....	34
设置 Quick 遥控.....	19	Smart Lock.....	34
万能遥控器.....	19	<b>主屏.....</b>	<b>35</b>
Quick 遥控.....	19	了解主屏.....	35
Quick Share.....	20	返回到最近使用的应用程序.....	36
<b>基本功能.....</b>	<b>21</b>	自定义主屏.....	37
配件.....	22	通知面板.....	38
手机布局.....	23	<b>抓拍屏幕.....</b>	<b>40</b>
开机和关机.....	25	屏上键盘.....	41
		使用键盘并输入文本.....	41
		输入特殊字符.....	41
		分离或合并键盘.....	42

<b>在 PC 与设备间传输数据</b> .....	42	取景器上的快照视频模式 .....	56
使用 USB 连接传输数据.....	42	间隔拍摄.....	57
使用无线连接传输数据.....	43	连拍.....	57
<b>LG 桥</b> .....	43	手势拍摄.....	57
LG 桥的功能 .....	43	手势视图.....	58
下载 LG 桥软件.....	44	多点自动对焦.....	58
<b>SmartShare</b> .....	44	8 倍变焦.....	58
使用 SmartShare.....	44	拍摄照片后.....	58
在您的手机上分享附近设备的内容 ..	44	录制视频.....	59
<b>应用程序</b> .....	45	录制视频后.....	59
<b>安装或卸载应用程序</b> .....	46	<b>图片库</b> .....	60
打开 Play 商店 应用程序.....	46	查看图片.....	60
打开显示有关应用程序详细信息的屏幕 ..	46	编辑照片.....	60
卸载应用程序.....	46	设置壁纸.....	60
<b>通话</b> .....	47	放大和缩小.....	61
拨打电话.....	47	播放视频.....	61
呼叫联系人.....	47	编辑视频.....	62
接听和拒绝电话.....	47	删除照片/视频.....	62
拨打第二个电话.....	48	<b>电子邮件</b> .....	63
查看通话记录.....	48	添加帐户.....	63
更改通话设置.....	48	使用帐户文件夹.....	63
<b>联系人</b> .....	49	撰写和发送电子邮件.....	63
搜索联系人.....	49	更改电子邮件常规设置.....	64
添加新联系人.....	49	删除电子邮件帐户.....	64
按收藏夹归类联系人.....	50	<b>音乐</b> .....	65
创建群组.....	50	播放歌曲.....	65
<b>信息</b> .....	51	音乐播放器选项.....	65
发送信息.....	51	<b>时钟</b> .....	67
对话视图.....	51	闹钟.....	67
更改信息设置.....	51	计时器.....	67
<b>照相机</b> .....	52	世界时钟.....	67
拍照.....	52	秒表.....	68
取景器上的自动模式.....	53	<b>计算器</b> .....	68
取景器上的手动照相机模式 .....	55	<b>日历</b> .....	68
取景器上的手动视频模式 .....	56	<b>录音机</b> .....	69
		录制声音或语音.....	69

下载内容.....	69	主页触摸按钮.....	85
FM 收音机.....	69	更多显示屏设置.....	86
LG Backup.....	70	更多.....	86
关于备份和恢复设备数据 .....	70	<b>常规设置.....</b>	<b>86</b>
备份设备数据 .....	70	语言和键盘.....	86
Google 应用程序.....	71	位置.....	87
<b>设置.....</b>	<b>73</b>	帐户与同步.....	87
访问“设置”菜单 .....	74	云.....	87
<b>网络设置.....</b>	<b>74</b>	用户.....	88
双SIM卡.....	74	辅助工具.....	88
WLAN.....	75	迷你视图.....	89
WLAN直连.....	75	快捷键.....	89
蓝牙.....	75	指纹 & 安全性.....	90
移动数据.....	77	智能设置.....	90
通话.....	77	Quick Cover 窗口.....	91
NFC.....	78	分屏显示.....	91
Android Beam.....	79	日期和时间.....	91
SmartShare Beam.....	79	存储.....	91
媒体服务器.....	80	电池和省电.....	92
Miracast.....	80	智能清理 .....	92
LG AirDrive.....	80	应用程序.....	92
正在打印.....	81	默认消息应用程序 .....	92
USB 绑定.....	81	备份与重置.....	93
WLAN 热点.....	81	关于手机.....	93
蓝牙绑定.....	82	<b>附录.....</b>	<b>94</b>
帮助.....	82	手机软件更新.....	95
飞行模式.....	82	<b>FAQ.....</b>	<b>96</b>
VPN.....	82	<b>防盗指南.....</b>	<b>98</b>
移动网络.....	82	<b>更多信息.....</b>	<b>99</b>
<b>声音和通知设置.....</b>	<b>83</b>	开源软件提示信息.....	99
更多.....	83	商标.....	99
<b>显示屏设置.....</b>	<b>84</b>	DivX HD .....	100
辅屏.....	84	Dolby Digital Plus .....	100
主屏.....	84	激光安全声明.....	101
锁定屏幕.....	85	确认声明.....	101
		使用皮革后盖的注意事项 .....	102

# 关于安全有效使用手机的准则

请阅读以下简单的准则。违反这些准则可能造成危险或者触犯法律。如果发生故障，设备内置的软件工具会收集故障记录。此工具仅用于收集特定故障的数据，如信号强度、呼叫突然掉线时的 cell ID position 和加载的应用程序。该记录仅用于帮助确定故障原因。该类记录已加密，如果您需要将设备退回以进行维修，仅 LG 授权维修中心可查看它们。

## 关于射频能量的辐射

无线电波辐射和“特定吸收率”（SAR）信息。

此款 LG-H961N 型手机已设计为遵守有关适用的无线电波辐射安全要求。此要求基于相关的科学准则，其中包括为确保所有人员（无论年龄和健康状况）安全而设计的安全裕量。

- 无线电波辐射准则采用一种称为“特定吸收率”或 SAR 的测量单位。SAR 测试是在所有用到的频带中以手机的最高认可功率电平进行发射时使用标准化方法执行的。
- 不同的 LG 手机型号可能有不同的 SAR 能级，但它们均符合相关的无线电波辐射准则。
- 国际非电离辐射防护委员会（ICNIRP）建议的 SAR 上限值为：每 10 克重的人体组织吸收的能量平均值不超过 2 W/kg。
- 经对该型号手机进行的测试得知，在耳边使用时的最高 SAR 值为 0.594 W/kg（10 克），佩戴于身上时，其值为 0.196 W/kg（10 克）。
- 本设备在靠近耳朵的正常使用位置使用或放置在距人体至少 1.5 厘米的位置时符合 RF 辐射标准。当使用便携盒、皮带夹或皮套进行身体佩戴操作时，不得包含金属并且产品应至少距身体 1.5 厘米。为了发送数据文件或信息，此设备需要高质量的网络连接。在某些情况下，数据文件或信息的发送可能被延迟，直到有这样的连接可用。确保遵照以上间隔距离说明直到完成发送。

## 产品保养和维护

- 务必使用经核准用于此特定手机型号的正牌 LG 电池、充电器和配件。使用任何其它类型可能导致适用于此手机的许可或保修失效，并可能造成危险。
- 某些内容和插图可能与您的设备有所差异，恕不提前通知。
- 不要拆解本机。当需要维修时，请将手机送往合格的服务技术人员处。
- 保修（由 LG 决定）可能包括使用新的或返修的更换部件或板，只要其功能与更换的部件等效。
- 远离诸如电视、收音机或个人计算机之类的电器。
- 远离诸如暖气片或厨灶之类的热源。
- 小心不要让手机摔落。
- 不要让手机受到机械振动或撞击。
- 在任何有特殊条例要求的区域关闭手机。例如，请勿在医院使用手机，因为它可能影响敏感的医疗装置。
- 手机充电时，请勿用湿手操作手机。这可能会导致电击或手机严重受损。
- 请勿在靠近易燃物体的位置充电，因为手机可能因加热而引发火灾。
- 使用干布清洁手机外壳（不要使用如苯、稀释剂或酒精之类的溶剂）。
- 如果手机置于柔软物体之上，请不要充电。
- 应将手机放在完全通风的位置充电。
- 不要在烟雾或灰尘过多的环境中使用或存放手机。
- 不要将手机放在信用卡或卡式车票旁边，它可能会影响磁条上的信息。
- 不要用尖锐物体敲击屏幕，这可能会损坏手机。
- 不要将手机暴露在液体或潮气中。
- 谨慎使用诸如耳机之类的配件。在不必要的情况下，不要触摸天线。
- 请勿使用、触摸或试图取下或修复破碎或破裂的玻璃。由于滥用或误用造成的玻璃显示屏损坏不在保修范围内。

- 本手机为正常使用过程中会发热的电子设备。在缺乏足够通风的条件下过长时间直接接触皮肤时，可能导致不舒服或轻微灼伤。因此，在操作的过程中或之后立即处理您的手机时，应特别小心。
- 如果手机变湿，请立即拔下其电源插头，并让它完全晾干。切勿试图使用烤炉、微波炉或电吹风等外部热源加快干燥处理。
- 潮湿手机内的液体会改变手机内产品标签的颜色。由于接触液体而对设备造成的损坏不在保修范围内。

## 有效的手机操作

### 电子设备

所有手机都可能受到干扰，这种干扰会对性能造成影响。

- 在未经允许的情况下，不得在医疗装置附近使用手机。不要将手机放在心脏起搏点上，即胸前的口袋内。
- 手机可能会对某些助听器造成干扰。
- 微弱的干扰可能会影响电视、收音机、个人计算机等。
- 如果可能，请在介于 0°C 与 40°C 温度之间使用手机。将手机放置在过低或过高的温度的环境下可能会导致损坏、故障、甚至爆炸。

## 行车安全

查阅有关在驾驶时使用手机的本地法律法规。

- 不要在驾驶时使用手持式手机。
- 将注意力完全集中在驾驶上。
- 如果行驶条件需要，请在拨打或接听电话之前将车辆驶离道路并停车。
- 射频能量可能影响车辆内的电子系统，例如立体声音响、安全设备等。
- 当车辆配备气囊时，不要让安装的便携式的无线设备阻挡气囊。这样做可能因性能不当而导致气囊无法释放或导致严重受伤。
- 如果您在外出时使用耳机收听音乐，请确保将音量设置为合理的音量级别，以便注意周围的情况。在靠近马路时，尤其要注意这一点。

## 防止损伤您的听力



为防止听力可能受损，请勿长时间高音量倾听。

如果您长时间置于高音环境中，那么您的听力可能会遭到伤害。因此，我们建议您在开机或关机时不要将手机置于耳边。同时，我们还建议您将音乐和通话音量设置为合理的音量级别。

- 使用耳机时，如果您不能听到附近的人说话，或者坐在您旁边的人能听到您在听的内容，则将音量调低。

### 备注

- 耳机声音压力过大可能导致听力受损。

## 玻璃部分

手机某些部分为玻璃材质。如果手机摔落到坚硬表面或受到强烈撞击，玻璃会破碎。如果玻璃破碎，请勿触摸或尝试取出玻璃碎片。停止使用手机，在授权的服务提供商处更换玻璃。

## 爆破区域

不要在正进行爆破的地区使用手机。请依照有关限制，并遵守任何规章或规定。

## 易爆环境

- 不要在加油站内使用手机。
- 不要在靠近燃料或化学制品处使用手机。
- 不要在放有手机和配件的车厢内运输或存放可燃气体、液体或爆炸品。

## 在飞机上

无线设备可能对飞机造成干扰。

- 登机前，请关机。
- 未经机务人员允许，不得在机舱内使用手机。

## 儿童


将手机放在儿童接触不到的安全地方。手机中包含细小零件，如果脱落可能导致窒息危险。

## 紧急电话

并非在所有手机网络中均可使用紧急电话。因此，您不应仅依赖于手机的紧急呼叫功能。 请向本地的服务提供商核准。

## 电池信息及保养

- 您无需在再次充电前对电池进行完全放电。 与其它电池系统不同，本机电池不具有可能影响电池性能的记忆效应。
- 只能使用 LG 电池和充电器。 LG 充电器设计为最大程度地延长电池使用寿命。
- 不要拆解电池或将其短路。
- 保持电池组的金属触点清洁。
- 当电池不再提供合乎要求的性能时，请更换电池。 在需要更换之前，电池组可以反复充电数百次。
- 如果很长一段时间都没用过电池，请将电池再次进行充电以保持最佳使用状态。
- 不要将电池充电器暴露在直射阳光下，也不要再在诸如浴室之类的高湿环境中使用。
- 不要将电池存放在过热或过冷的地方，这可能损害电池的性能。
- 如果用不适当类型的电池进行替换，可能有爆炸危险。 请按说明处理用过的电池。
- 如果要更换电池，请将其携带至 LG Electronics 授权服务点或经销商处以寻求帮助。
- 手机充好电后，请务必将充电器从墙上插座拔下，以避免不必要的耗电。
- 实际的电池寿命将取决于网络配置、产品设置、使用方式、电池和环境条件。
- 确保没有细尖的物体，如动物牙齿、指甲等进入手机内触碰电池。 这可能引发火灾。

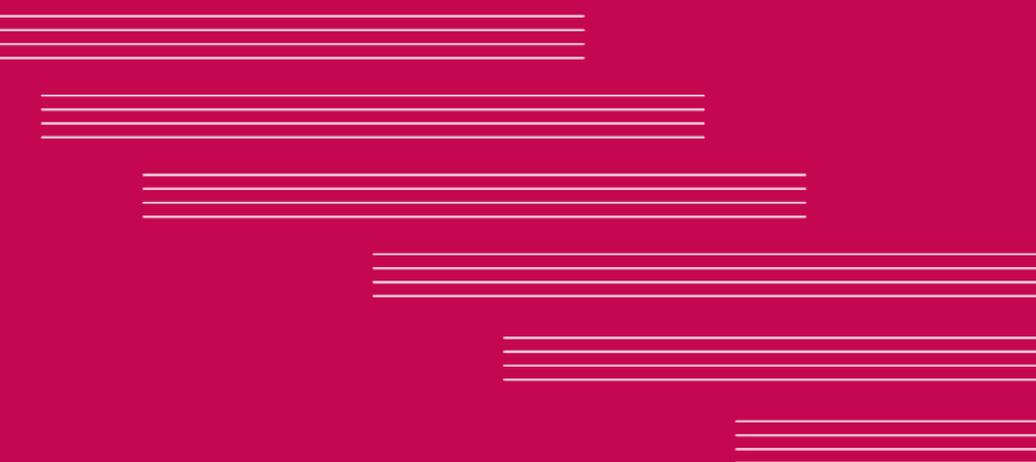

必将让您爱不释手的功能

# 分屏显示

分屏显示功能可拆分屏幕，以支持多任务处理、拖放交互、自动链接和最近使用的应用程序。

## 激活分屏显示功能

1 点击  >  >  > 常规选项卡 > 分屏显示。

2 点击  以将其打开。

- 勾选**自动打开**复选框，可以在全屏模式下点击链接或点击电子邮件附件时自动打开分屏显示功能。

## 使用分屏显示功能

1 点击  >  > 分屏显示。

### 备注


- 查看应用程序时，点击  > 分屏显示可在顶部窗口中自动设置该应用程序，然后再选择第二个应用程序。
- 2 点击要使用的应用程序的图标。 点击的第一个应用程序在屏幕顶部的窗口打开。 第二个应用程序在底部窗口打开。
- 3 点击一个窗口予以选定并使用。
- 此时，一个蓝色框出现在选定窗口周围，一个蓝色半圆手柄位于两个窗口之间。
  - 拖动蓝色手柄以更改窗口尺寸（一个可以增大，一个可以缩小）。
- 4 点击  访问分屏显示选项。

# 指纹

指纹功能允许您将手指放在**电源/锁定键**上解锁屏幕或查看锁定内容。

## 注册指纹

- 1 点击  >  >  > **常规选项卡** > **指纹 & 安全性** > **指纹**。
- 2 注册指纹之前，您需要设置安全屏幕锁定。屏幕锁定将用作指纹的替代方法。
- 3 将手指放在**电源/锁定键**上。

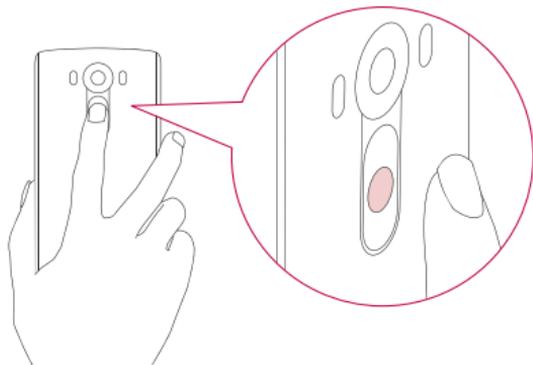

- 4 设备振动时抬起手指，然后将手指再次放在**电源/锁定键**上。使用同一根手指重复此操作，直到指纹注册完成为止。

### 备注

- 确保您的手指和电源/锁定键洁净、干爽。
- 潮气、乳液、汗水、油、切口或干燥皮肤均会影响指纹识别。某些活动也会暂时影响指纹识别，包括锻炼、洗澡、游泳、烹饪或影响指纹的其他条件或变化。
- 完全覆盖住电源/锁定键。不要按得过快，正在扫描手指时切勿移动手指。
- 在您使用指纹期间，系统将不断学习并改进指纹识别效果。

# LG健康

LG 健康通过跟踪日志以及与他人比赛，帮助您管理健康和保持良好的运动习惯。


- 1 轻触  >  > 。
- 2 阅读并同意条款和条件。
- 3 在配置文件和目标页面，输入配置文件信息并轻触“保存”。
- 4 使用下列选项以开始跟踪活动。

## 备注

- 此功能为方便用户使用而提供。 仅供参考。

# 迷你视图

要缩小屏幕便于单手使用，请在主页触摸按钮上向左或向右滑动。  
要关闭迷你视图，请点击 。

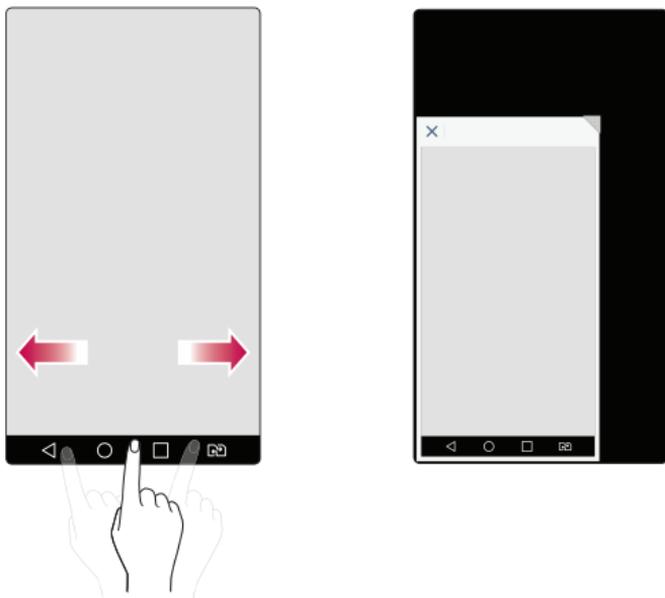


# 辅屏

当主屏关闭时，您可以查看天气、日期、时间、电池状态和通知等有用信息。

## 辅屏的功能

- 您可以设置主屏关闭时辅屏上的功能。（最近运行的应用程序、应用程序快捷方式、音乐播放器、快速联系人、今日计划和签名）。
- 使用全屏应用程序时，您可以通过辅屏查看通知并使用功能。
- 拍照或录像期间，您可以使用控制面板。
- 要打开/关闭辅屏，请翻转设备。

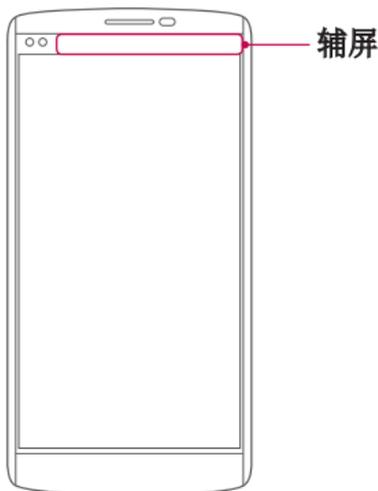

## 打开/关闭辅屏功能

您可以打开和关闭辅屏并选择要显示的内容。

- 点击  >  >  > **显示屏选项卡** > **辅屏**。

主屏打开	提供进行多任务处理的有用功能。
主屏关闭	始终显示有用信息并提供常用功能的快速启动功能。

## 智能通知

通过智能通知卡改善您的生活方式。

这些卡基于当日时间、您的位置以及您使用手机的方式提供定制建议。

- 触摸并按住主屏的空白部分 > **窗口小部件** > **智能通知**。

# 微电影

您可以使用短视频制作故事影片。

1 点击  >  >  > 

2 点击  录制一段三秒的场景。

或

触摸并按住  录制所需时长的场景。

3 重复此操作。

## 备注

- 最多可以存储时长为一分钟的电影。

4 完成场景录制后，请点击**保存**。

## 备注

- 您可以在图片库中进行编辑，使用各种视频效果和背景音乐。

# Quick多任务

从任何屏幕中，使用通知面板即可通过 QSlide 轻松访问和使用记事本、日历、计算器等等。

## Quick多任务

1 点触并向下滑动状态栏 > 点击 **Quick多任务**。

### 备注

- 使用支持 Quick多任务的应用程序时，点击  > Quick多任务。该功能将在屏幕上显示为小窗口。

2 使用下列选项。

1		轻触以最大化窗口。
2		轻触以调整窗口的透明度。
3		轻触以关闭 QSlide 窗口。
4		拖动可调整“Quick多任务”窗口的大小。

3 当透明度栏未滿  时，也可以使用和轻触 **Quick多任务** 窗口下方的屏幕。

### 备注

- Quick多任务最多可同时支持两个窗口。

# Quick备忘录+

Quick备忘录+ 功能用于创建备忘录。

## 使用捕获+

在通话过程中，您可以使用拍摄+ 通过保存的图片或在当前手机屏幕上轻松有效地创建备忘录。

- 1 点触并向下滑动状态栏，然后轻触 。
- 2 使用以下选项创建备忘录：

	轻触可保存已创建的备忘录。
	轻触可撤销最近的操作。
	轻触可重做最近删除的操作。
	轻触可在备忘录中插入文本。
	点击可选择笔型和颜色。
	轻触可选择橡皮擦擦除备忘录上的笔痕。
	点击可裁切备忘录的图像。
	点击可选择共享或纸张样式。
	轻触隐藏或显示工具栏。

### 备注

- 使用快捷备忘录+ 功能时，请使用指尖。不要使用指甲。

- 3 点击  将当前备忘录保存至 Quick备忘录+或图片库。

## 查看保存的备忘录

点击  >  >  并选择Capture+ 相册。

# Quick遥控

Quick遥控将您的手机变成家庭电视、机顶盒及音响系统等适用的万能遥控器。

## 设置 Quick遥控

1 点触并向下滑动状态栏，然后点击  > **添加远程**。如果您无法查看 ，请轻触  > 勾选 **Quick遥控** 可启用。

或者

点击  >  >  > 点击 。

2 选择设备类型和品牌，再按照屏幕上的说明配置设备。

## 万能遥控器

您可以创建自己的万能遥控器并选择所有按钮的放置位置。

1 点击  >  >  >  > **万能遥控器**。

2 输入遥控器名称。

3 将您需要的遥控器按钮放在所需位置。

4 执行下一步并了解说明。

## Quick遥控

完成初始设定后，即可从通知面板轻松访问 Quick遥控。打开通知面板并使用 Quick遥控功能。

### 备注


- QuickRemote 的工作方式与普通遥控器和红外（IR）信号相同。当您使用 QuickRemote 功能时，注意不要遮盖手机顶部的红外传感器。某些型号、制造商或服务公司可能不支持此功能。

# Quick Share

拍照或录制视频后，您可以分享照片和视频。

点击显示的图标或点触并向左滑动该应用程序。然后选择所需的应用程序。

- 点击  >  >  > 

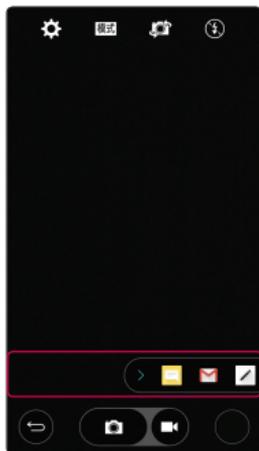

## 备注

- 该应用程序对用户显示，根据类型和频率对 Quick Share 进行排列。

A decorative graphic consisting of several sets of horizontal white lines of varying lengths, arranged in a descending staircase pattern from the top left towards the bottom right. The background is a solid, vibrant red color.

# 基本功能

# 配件

以下配件可与您的手机一起使用。


- 旅行适配器
- 快速入门指南
- 立体声耳机
- USB 数据线
- 电池



## 备注

- 下述配件为可选配件。
- 务必使用正品 LG 配件。提供的物品仅为该设备设计，可能与其他设备不兼容。
- 本设备随附的物品及任何可用配件可能会因您所在区域或服务提供商而有所不同。

# 手机布局

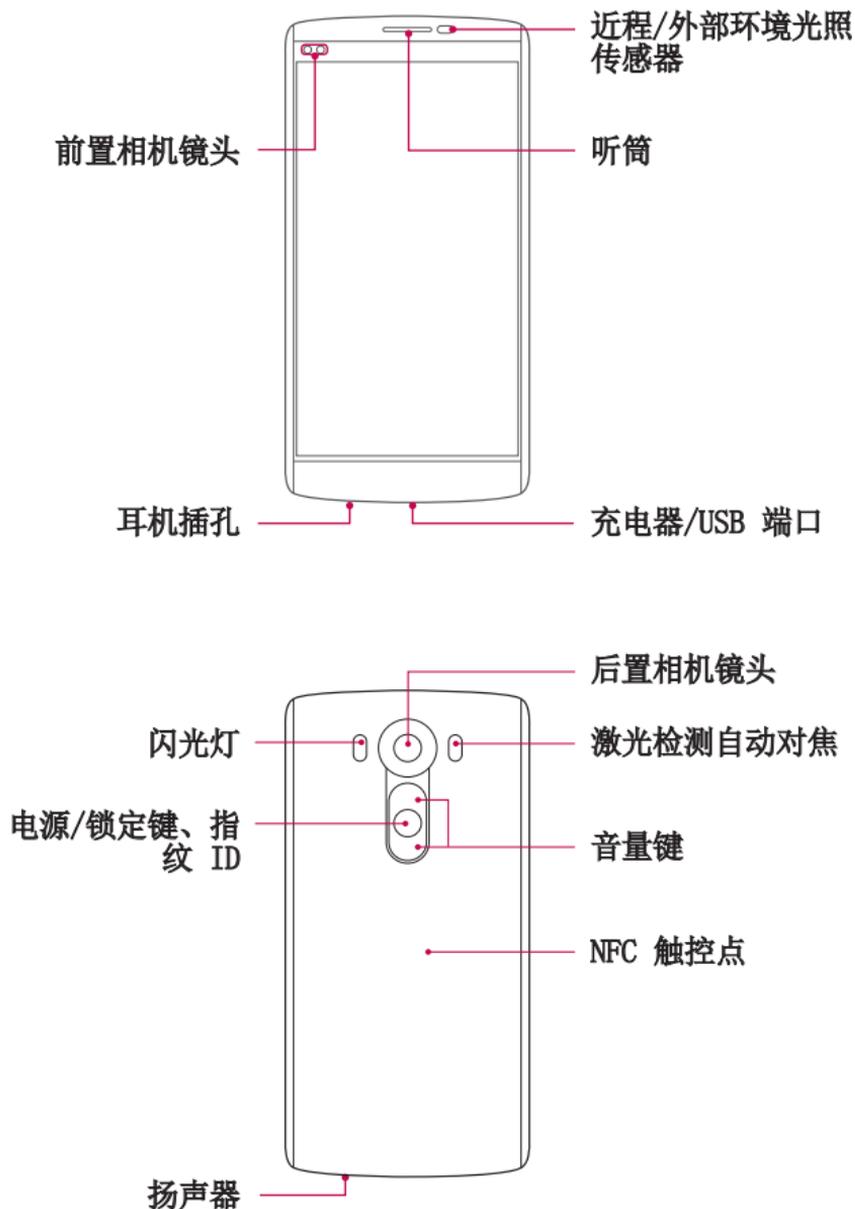

<b>电源/锁定键</b>	<ul style="list-style-type: none"> <li>· 按住此键可开/关机。</li> <li>· 短按可打开/关闭屏幕。</li> </ul>
<b>音量键</b>	<p><b>同时屏幕关闭：</b></p> <ul style="list-style-type: none"> <li>· 按<b>音量调高键</b>两次，启动捕获+。</li> <li>· 按<b>音量调低键</b>两次，启动照相机并拍照。</li> </ul> <p><b>在主屏上：</b></p> <ul style="list-style-type: none"> <li>· 控制铃声音量。</li> </ul> <p><b>呼叫期间：</b></p> <ul style="list-style-type: none"> <li>· 播放音频/视频时 控制听筒音量。</li> <li>· 持续控制音量。</li> </ul>

### **注意：近程传感器**

- 在接听及拨打电话时，若手机位于耳旁，一旦感应到物体，此近程传感器将自动关闭背景灯并锁定触摸屏。这样有助于延长电池寿命，并避免在通话期间无意中激活触摸屏。

### **警告**

- 此型号的 NFC 天线在后盖上。注意不要损坏手机上的 NFC 触控点，这是 NFC 天线的一部分。

### **警告**

- 在手机上放置重物或坐在手机上可能会损坏手机的显示屏幕及触摸屏的功能。不要在近程传感器上使用屏幕保护膜或任何其他类型的保护膜。这可能会影响传感器的感应度。

# 开机和关机

## 开机

按住手机背面的**电源/锁定键**几秒钟，直到屏幕打开。

## 关机


- 1 按住手机背面的**电源/锁定键**，直到显示手机选项菜单。
- 2 点击手机选项菜单中的“关机”。
- 3 点击“确定”确认您要关机。

# 安装 Nano SIM 卡和电池


先插入移动电话服务提供商提供的 Nano SIM 卡，然后插入随附的电池。

## ⚠ 警告


- 请勿将内存卡插入到 Nano SIM 卡插槽。如果内存卡不小心卡入 Nano SIM 卡插槽，请将设备送往 LG 服务中心取出内存卡。
- 1 要卸下后盖，请用手抓紧手机。如下图所示，用另一只手的大拇指指甲卸下后盖。

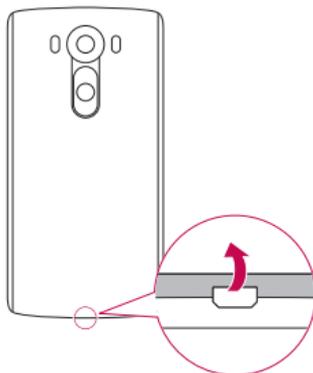


- 2 将 Nano SIM 卡滑入 Nano SIM 卡插槽中，如图所示。确保卡的金色接触区域朝下。

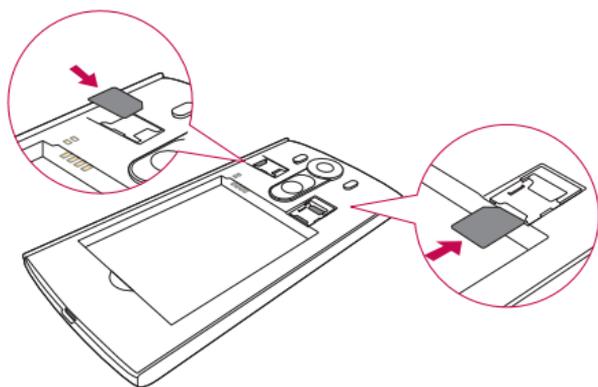

- 3 插入电池。

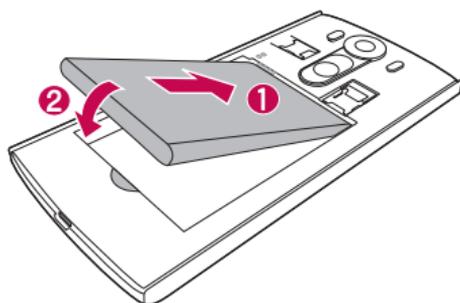

- 4 要装回设备后盖，请在电池仓上对齐后盖，向下按直至其卡入到位。

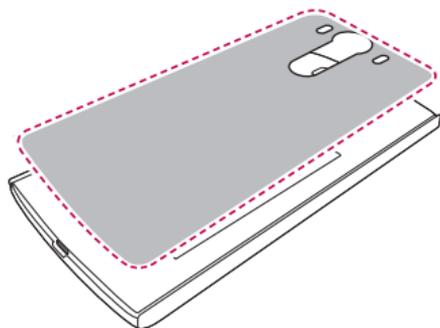


# 为电池充电

第一次使用电池前，请为电池充电。使用充电器为电池充电。也可使用电脑为电池充电，方法是使用 USB 数据线将手机连接到电脑。

## 警告

- 只能使用已获得 LG 许可的充电器、电池和电缆。如果您使用未获许可的充电器、电池或数据线，可能会导致电池充电缓慢。未获许可的充电器可导致电池爆炸或损坏设备，相应后果不属于 LG 保修范围。

充电器接口位于手机底部。插入充电器并插入电源插座。

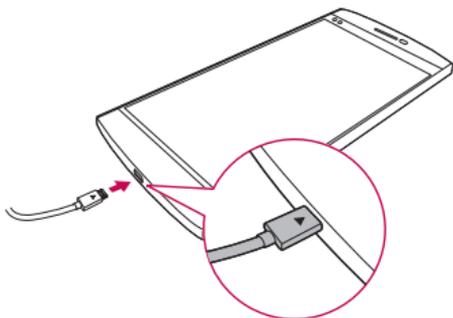

## 备注

- 手机正在充电时不要打开后盖。

# 优化电池使用寿命

通过禁用无需在后台持续运行的功能来延长电池电量可支持的时间。您可以监视应用程序和系统资源如何消耗电池电量。

## 延长手机电池的使用寿命：

- 如果您未使用无线电通信，请关闭它。如果不使用 Wi-Fi、蓝牙或 GPS，请将其关闭。
- 调低屏幕亮度，设置较短的屏幕待机时间。

- 关闭 Gmail、日历、联系人及其他应用程序的自动同步。
- 您下载的一些应用程序可能会消耗电池电量。
- 使用下载的应用程序时，检查电池电量水平。

## 插入内存卡

您的设备支持高达 2TB 的 microSD 卡。根据存储卡制造商和类型，某些存储卡可能与您的设备不兼容。


### 警告

- 某些存储卡可能与您的设备不完全兼容。使用不兼容的卡可能损坏设备、存储卡、或卡中存储的数据。

### 备注

- 频繁的写入和清除数据会缩短存储卡的寿命。

- 1 取下后盖。
- 2 将金色接触区朝下，插入存储卡。

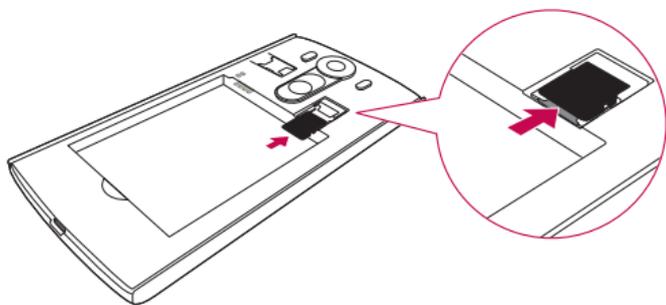

- 3 盖上后盖。

# 取出存储卡

取出存储卡之前，先进行卸载以实现安全移除。

1 轻触  >  >  > **常规选项卡** > **存储** > **卸载 SD 卡**。

2 取下后盖并拔出存储卡。

## 警告

- 在设备传输或访问信息时，请勿取出存储卡。这样做会导致数据丢失和损坏，也可能损坏存储卡或设备。我们对因不当使用损坏存储卡造成的损失（包括数据丢失）概不负责。

# 触摸屏提示


以下是关于如何浏览手机的一些提示。

## 备注

- 无需大力按，触摸屏非常敏感，轻轻点触即可。
- 使用指尖轻触所需选项。 请注意不要触碰到任何其他按钮。


# 轻触或点触

手指轻触一下，选择项目、链接、屏上键盘的快捷方式和字母。

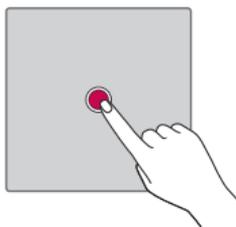


## 点触并按住

触摸并按住项目，方法是点击屏幕上的某个项目，并且在动作发生前不抬起手指。

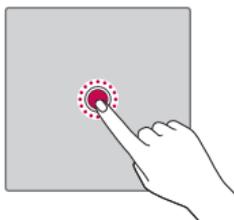


## 拖动

点触项目并短暂按住，不要抬起手指，在屏幕上移动手指，直至达到目标位置。在主屏上，可拖动项目进行重新定位。

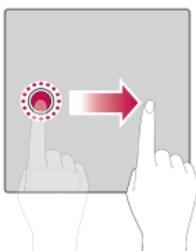


## 滑动

滑动的方法是手指单击屏幕后不要停顿（因而避免拖动项目），在屏幕表面迅速移动。

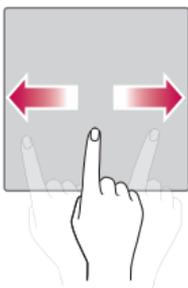


## 轻触两次

轻触两次可放大网页或地图。

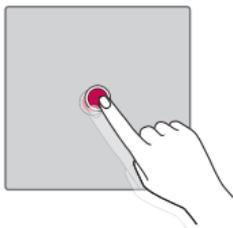

## 双指缩放

使用浏览器、地图或者在浏览图片时，将食指和拇指并拢或张开，即可放大或缩小。

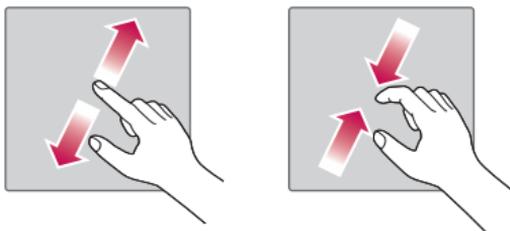

# Google 帐户设置

当第一次在手机上打开 Google 应用程序时，需要使用现有的 Google 帐户登录。如果您没有 Google 帐户，则会提示您创建一个帐户。

## 创建 Google 帐户

- 1 轻触  >  >  > 常规选项卡 > 帐户与同步。
- 2 点击**添加帐户** > Google > **或创建新帐户**。
- 3 输入您的姓名，然后点击**下一步**。
- 4 出于安全考虑，请输入手机号码，然后点击**下一步**。
- 5 按照说明输入有关帐户的必需和可选信息。服务器正在创建您的帐户，请稍候。

## 登录 Google 帐户

- 1 轻触  >  >  > 常规选项卡 > 帐户与同步。
- 2 点击**添加帐户** > Google。
- 3 输入电子邮件地址，然后点击**下一步**。
- 4 输入密码并点击**下一步**。
- 5 登录后，您可在手机上使用 Gmail 收发邮件和利用 Google 服务。
- 6 一旦设置了 Google 帐户，您的手机将自动与网络上的 Google 帐户同步（如果数据连接可用）。

登录后，您的手机将同步 Google 服务，如 Gmail、联系人、Google 日历等。您可以使用地图，从 Play Store 下载应用程序，将设置备份到 Google 服务器，或利用手机上的其他 Google 服务。

# 设备锁定和解锁

按电源/锁定键可关闭屏幕，并将设备置于锁定模式。如果一段时间不用，设备将自动锁定。这有助于防止意外点触，节省电池电量。

如要解锁设备，请按电源/锁定键并向任意方向滑动屏幕。

## 指纹

指纹功能允许您将手指放在**电源/锁定键**上解锁屏幕。请参阅“**必将让您爱不释手的功能**”中的“**指纹**”。

## 轻敲唤醒

使用 **轻敲唤醒** 功能可通过轻触两次屏幕来轻松开关屏幕。

### 打开屏幕

- 1 双击锁定屏幕中心可开启屏幕。
- 2 解锁屏幕或访问任何可用快捷方式或小工具。

### 关闭屏幕

- 1 双击主屏或状态栏的空白区域。
- 2 屏幕将关闭。

#### 备注

- 点击屏幕的中心区域。如果您轻触顶部或底部区域，识别率会降低

## 轻敲解码

轻敲代码功能允许您通过在屏幕上轻敲（或轻触）的动作组合创建自己的解锁代码。当屏幕关闭时，您可以通过轻触相同的顺序，接访问主屏。

#### 备注

- 如果轻敲代码输错 5 次，将强制把您带到您的 Google 帐户登录/备份 PIN。
- 使用指尖，而不是指甲，轻触屏幕予以开关。

## 设置轻敲解码功能

- 1 轻触  >  >  > **显示屏选项卡** > **锁定屏幕** > **选择屏幕锁定** > 。
- 2 轻触图案中的正方形以设置您的轻敲代码。您的轻敲代码图案可包含 3 到 8 次轻触。

## 使用轻敲代码解锁屏幕

当屏幕关闭时，您可以通过轻触您设置的轻敲代码图案来为屏幕解锁。

## 改变屏幕锁定方式

您可以改变屏幕锁定方式，防止他人访问您的个人信息。

- 1 轻触  >  >  > **显示屏选项卡** > **锁定屏幕** > **选择屏幕锁定**。
- 2 从“无”、“滑动”、“轻敲解码”、“图案”、“PIN”及“密码”等方式中选择需要的屏幕锁定。

### 备注

- 设置解锁图案之前，请先创建一个 Google 帐户，并记住创建图案锁定时设置的备份 PIN。

## Smart Lock

您可以使用智能锁定更轻松地解锁手机。当有受信任的蓝牙设备连接到手机、或处于家中或工作场所等熟悉位置时，或者手机能识别您脸部时，您可以设置为保持手机处于不锁定状态。

## 设置智能锁定功能

- 1 点击  >  >  > 显示屏选项卡 > 锁定屏幕 > 智能锁定。
- 2 在添加任何受信任的设备、受信任的位置或受信任的人脸之前，您需要设置屏幕锁定（轻敲解码、图案、PIN 或密码）。

## 主屏

主屏是许多应用程序和功能的起点，使您可以添加应用程序快捷方式、Google 小工具等项目，从而直接访问信息和应用程序。这是默认的画布，可从任何菜单中轻触  访问画布。

## 了解主屏



- 1 **辅屏** - 位于屏幕顶部且用户可以配置所需应用程序的辅屏。通过设置辅屏，尝试快速、轻松地运行您收藏的应用程序。
- 2 **状态栏** - 显示手机的状态信息，包括时间、信号强度、电池状态和通知图标。
- 3 **窗口小部件** - 窗口小部件是独立应用程序，可以通过应用程序抽屉或主屏上访问。与快捷方式不同，小工具可用作屏幕应用程序。

- ④ **应用程序图标** - 点击图标（应用程序、文件夹等）可打开并使用它。
- ⑤ **位置指示器** - 指示您当前正在查看的主屏画布。
- ⑥ **快捷按钮区** - 可让您一键访问任何主屏画布上的功能。
- ⑦ **主页触摸按钮**

 <b>上一步按钮</b>	返回上一个屏幕。同时关闭弹出项目，如菜单、对话框和屏上键盘等。
 <b>主页按钮</b>	从任何屏幕返回到主屏。
 <b>概览按钮</b>	显示近期使用的应用程序。如果您触摸并按住该按钮，将打开可用选项菜单。
 <b>SIM 卡切键</b>	选择您要使用的 SIM 卡。点触并按住以转到 SIM 双卡设置。

## 查看其他主屏面板

操作系统提供多个主屏画布，为添加图标、小工具等提供更大的空间。

- 在主屏上向左或向右滑动手指可访问其他画布。

## 返回到最近使用的应用程序

多任务可在 Android 中轻松实现；您可同时运行多个应用程序。打开其他应用程序之前，无需退出当前应用程序。使用多个打开的应用程序，并在这些应用程序之间切换。

Android 管理各个应用程序、根据需要停止和启动应用程序，从而确保闲置应用程序不会不必要地耗费资源。

- 1 轻触 。屏幕将显示最近使用的应用程序列表。
- 2 轻触要访问的应用程序。但这不会让上一个应用程序在后台停止运行。使用完应用程序后，请确保点击退出应用程序。
  - 要关闭最近的应用程序列表中的应用程序，向左或向右滑动应用程序预览。要清除所有应用程序，轻触**全部清除**。

## 自定义主屏

您可以通过添加应用程序、小工具或更改墙纸来自定义主屏。

### 在主屏上添加项目

- 1 点触并按住主屏的空白部分。
- 2 在“添加模式”菜单中，选择要添加的项目。您会在主屏上看到此添加的项目。
- 3 将它拖到您想要的位置，然后抬起手指。

#### 备注

- 要将应用程序图标添加到主屏，请在“应用程序”屏幕上点触并按住要添加的应用程序。

### 从主屏上删除项目

位于主屏时，点触并按住要移除的图标 > 将其拖到 。

### 为快捷按钮区添加应用程序

从应用程序屏幕或主屏，点触并按住应用程序图标并将其拖动到快捷按钮区。然后，将其放到指定位置。

### 从快捷按钮区删除应用程序

触摸并按住目标快速按钮，将其拖动至 。

#### 备注

- 无法删除**应用程序按钮** 。

### 自定义主屏上的应用程序图标


- 1 触摸并按住一个应用程序图标，直至将其从当前位置解锁，然后松开。该应用程序的右上角将显示编辑图标 。
- 2 再次轻触应用程序图标并选择所需的图标设计和大小。
- 3 轻触**确定**以保存更改。

## 通知面板

通知可提醒您接收到新信息、日历事件和闹钟，以及正在进行的事件，如正在通话。

### 打开通知面板

从状态栏向下滑动可打开通知面板。要关闭通知面板，向上滑动屏幕或轻触 。

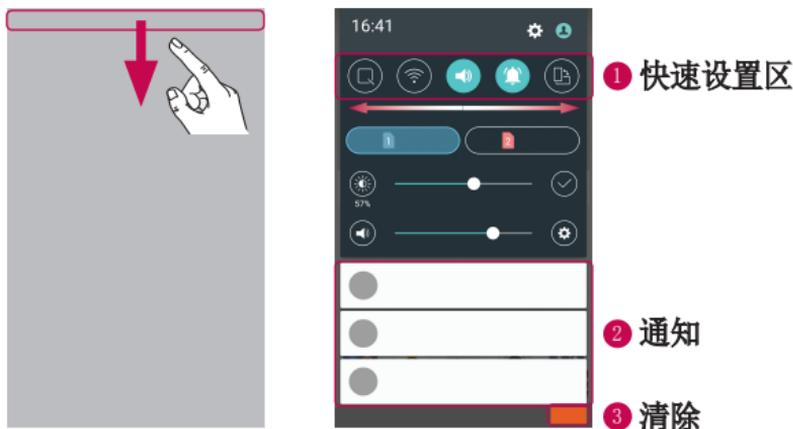


- 1 快速点击每个设置按钮，将其打开或关闭。触摸并按住相应按钮以直接访问功能设置菜单。要查看更多切换按钮，请向左或向右滑动。点击  以删除、添加或重新设定快速设置按钮。
- 2 列出了当前通知，每个通知都带有简短的说明。轻触通知以查看。
- 3 轻触以清除所有通知。

当收到通知时，屏幕顶部将出现其图标。未读通知的图标会显示在左侧，WLAN 强度和电池电量等系统图标会显示在右侧。

## 状态栏上的指示器图标

指示器图标显示在屏幕顶部的状态栏上，可报告未接来电、新信息、日历事件、设备状态等。

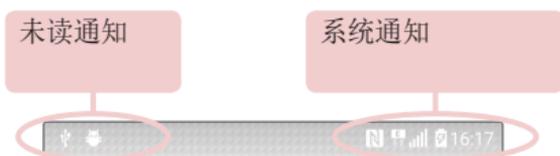

屏幕顶部显示的图标可提供有关设备状态的信息。下表仅列示了最常见的图标。

图标	说明	图标	说明
	未插入 SIM 卡		当前正在播放歌曲
	无可用网络信号		禁止打扰，甚至禁止闹钟打扰
	已打开飞行模式		已打开振动模式
	已连接到 Wi-Fi 网络		电池已充满电
	已连接有线耳机		电池正在充电
	正在通话		手机通过 USB 数据线连接至 PC
	未接来电		正在下载数据
	蓝牙开启		正在上载数据
	系统警告		已打开 GPS
	闹钟已设置		正在同步数据
	收到新语音邮件		选择输入法

	收到新文本消息或彩信		Wi-Fi 热点已激活
	已打开 NFC		已连接 LG AirDrive
	已连接 Miracast		

### 备注

- 图标在状态栏中的位置可能会因功能或服务而异。
- 可用选项可能会因地区或服务提供商而异。

## 抓拍屏幕

同时按住**音量调低键**和**电源/锁定键**约 2 秒钟，可拍摄当前屏幕的屏幕截图。

要查看截取的图像，请点击  >  >  > **Screenshots** 文件夹。

# 屏上键盘

您可以使用屏上键盘输入文本。当您轻触可用的文本输入字段时，屏上键盘会显示在屏幕上。

## 使用键盘并输入文本

图标	说明
	点击一次以使键入的下一字母变为大写字母。轻触两次表示全部为大写字母。
	轻触以转到键盘设置。触摸并按住以更改文本输入方法。
	轻触以输入空格。
	轻触以新建一行。
	轻触以删除上一字符。

## 输入特殊字符

使用屏上键盘可输入特殊字符。

例如，要输入“á”，点触并按住“a”按钮，直到显示一个弹出菜单，然后显示相关的特殊字符。不移开手指，将手指拖到所需的特殊字符上。一旦突出显示，即抬起手指。

### 备注

- 键右上角处的符号表示该键有其他字符。

## 分离或合并键盘

通过在横向键盘上水平张开两指，您可以将键盘一分为二。这更便于使用拇指键入。要使用此功能，确保启用分离键盘设置。

- 点击  >  >  > 常规选项卡 > 语言和键盘 > LG 键盘 > 键盘高度和布局 > 分离键盘。



## 在 PC 与设备间传输数据

您可以在 PC 与设备间复制或移动数据。

### 使用 USB 连接传输数据

- 1 使用手机随附的 USB 数据线将手机连接到 PC。
- 2 打开“通知”面板，点击当前的连接类型，然后选择**媒体设备 (MTP)**。
- 3 PC 上将弹出一个窗口，供您传输所需数据。

#### 备注

- PC 上需要安装 LG Android 平台驱动程序，才能检测到手机。
- 检查**媒体设备 (MTP)** 的使用要求。

项目	要求
操作系统	Microsoft Windows XP SP3、Vista 或更高版本
Window Media Player 版本	Windows Media Player 10 或更高版本

## 使用无线连接传输数据

使用 **LG AirDrive** 功能，您可以通过 WLAN 或移动数据在 PC 上共享或管理手机中的内容。

### 备注

- 如果要使用 LG AirDrive，请参阅“**设置**”中的 **LG AirDrive** 部分。

## LG 桥

LG 桥这款应用程序可方便您在 PC 上管理 LG 移动设备保存的图像、音乐、视频和文档等。此外，您还可以将联系人和图像等文件备份到您的 PC 或更新移动设备的软件。

### 备注

- 安装并打开程序后，您可以在“帮助”菜单中查看有关如何使用 LG 桥的详细说明。
- 支持的功能可能会因设备而异。
- LG 通用 USB 驱动程序是将 LG 手机连接至 PC 的必备程序。它将在安装 LG 桥时自动安装。

## LG 桥的功能

- 通过 WLAN 或移动数据在 PC 上管理手机中的内容。
- 通过 USB 备份和恢复移动设备的数据。
- 通过 USB 在 PC 上更新移动设备软件。

## 下载 LG 桥软件

- 1 转至 [www.lg.com](http://www.lg.com)。
- 2 点击“搜索”按钮，然后输入型号名称搜索该型号。
- 3 选择型号信息并单击**开始**。
- 4 向下滚动，选择 **PC 同步**选项卡 > **Windows** 或 **Mac 操作系统** > **下载**，然后即可下载 LG 桥。

## SmartShare

SmartShare 允许您使用图片库和音乐应用程序共享多媒体内容。

### 使用 SmartShare

- 1 在查看您要共享的内容时，点击  > **SmartShare** 或 。
- 2 从列表中轻触您要共享的设备。
  - 如果设备未显示在列表上，请确保设备的 WLAN、WLAN 直连或蓝牙已开启。然后点击**重新扫描**。

### 在您的手机上分享附近设备的内容

- 1 要将附近的设备连接到您的设备，请在**图片库**和**音乐**应用程序上轻触**附近设备**选项。
  - 请确保您的设备和附近设备连接到相同的 WLAN 网络，并且附近设备上的 DLNA 服务已开启。
- 2 轻触要连接到的设备。如果设备不在列表中，请点击**搜索附近设备**。
- 3 建立连接后，您可以在设备上分享附近设备上的内容。



# 应用程序

# 安装或卸载应用程序

Play 商店 允许您浏览和搜索免费和付费应用程序。

## 打开 Play 商店 应用程序

轻触  >  > 。

## 打开显示有关应用程序详细信息的屏幕

无论何时在 Play 商店 中浏览，点击某个应用程序均可打开它的详细信息屏幕。

应用程序详细信息屏幕包括说明、评分、评论以及该应用程序的相关信息。在此屏幕中，您可以下载、安装、卸载、对应用程序评分等等。

## 卸载应用程序

- 1 轻触  >  >  > **常规选项卡** > **应用程序**。
- 2 所有应用程序都显示后，请滚动并选择要卸载的应用程序。
- 3 轻触**卸载**。

# 通话

您可以在整个地区享受清晰的通话质量。

## 拨打电话

- 1 轻触  > 。
- 2 使用拨号器输入号码。要删除数字，请轻触 。
- 3 输入所需的数字之后，轻触  拨打电话。
- 4 要结束通话，请轻触 。

### 备注

- 要输入“+”以拨打国际电话，请点触并按住 。

## 呼叫联系人

- 1 轻触  > 。
- 2 滚动浏览联系人列表。您还可以在搜索字段中输入联系人的姓名，或沿屏幕右边上的字母顺序滚动浏览。
- 3 在显示的列表中，轻触要呼叫的联系人。

## 接听和拒绝电话

- 向任意方向滑动  以接听来电。
- 向任意方向滑动  以拒绝来电。

### 备注

- 如果要拒绝来电并向主叫方发送短信，请滑动 。

## 拨打第二个电话

- 1 在第一次通话过程中，轻触  > **添加通话**，然后输入号码。
- 2 轻触 。
- 3 此时呼叫屏幕上显示两个呼叫。初始呼叫被锁定，通话方进入保持状态。
- 4 轻触显示的数字可在不同的通话间切换。或轻触  以启动电话会议。
- 5 要结束所有呼叫，请轻触 。

### 备注

- 您需要对每通电话付费。

## 查看通话记录

- 1 点击  >  > **通话记录**选项卡。
- 2 查看所有已拨电话、已接来电和未接来电的列表。

### 备注

- 轻触任意通话记录条目，以查看通话日期、时间和时长。
- 点击  > **全部删除**以删除所有记录项目。

## 更改通话设置

您可以配置通话设置（如呼叫转移）以及运营商提供的其他特殊功能。

- 1 轻触  > 。
- 2 点击  > **通话设置**并配置所需的选项。

# 联系人

您可以在手机上添加联系人，并将其与 Google 帐户或其他支持同步联系人的帐户中的联系人同步。

## 搜索联系人

- 1 轻触  > 。
- 2 轻触**搜索联系人**，使用键盘输入联系人姓名。随着您开始键入，手机会显示匹配项。

## 添加新联系人

- 1 轻触  > 。
- 2 输入新联系人的号码。
- 3 轻触  > **添加至“联系人”** > **新建联系人**。
- 4 如果要为新联系人添加图片，请轻触图像图标。选择**拍照**或从**图片库中进行选择**。
- 5 输入所需的联系人信息。
- 6 点击**保存**。

## 按收藏夹归类联系人

您可以按收藏夹归类经常呼叫的联系人。

### 将联系人添加到收藏夹

- 1 轻触  > 。
- 2 轻触联系人以查看其详细信息。
- 3 轻触屏幕右上方的星号。星号将变为黄色。

### 从收藏夹列表中删除联系人

- 1 点击  >  > **收藏**选项卡。
- 2 选择联系人以查看其详细信息。
- 3 轻触屏幕右上方的黄色星号。星号变为深色，联系人已从收藏夹中删除。

## 创建群组

- 1 点击  >  > **群组**选项卡。
- 2 点击  > **新群组**。
- 3 为新群组输入名称。您也可以为新建的群组设置一个独特铃声。
- 4 点击**新增成员**将联系人添加到群组并点击**添加**。
- 5 点击**保存**以保存群组。

### 备注

- 备注：如果您删除一个群组，分配至该群组的联系人将不会被删除。他们将保留在您的联系人列表中。

# 信息

您的手机将短信和彩信结合到一个直观易用的菜单中。

## 备注

- 您可能要为所发送的每条短信付费。 请向您的服务提供商咨询。

## 发送信息

- 1 轻触  >  > 。
- 2 点击 ，然后从“联系人”列表选择一个或多个条目。  
或者  
在**收件人**字段中输入联系人姓名或电话号码。 随着您输入联系人姓名，匹配的联系人将会显示。 您可以轻触建议的联系人，并且可以添加多个联系人。
- 3 轻触文本字段，开始输入信息。
- 4 轻触  以打开选项菜单。 选择任意可用选项。
- 5 点击  以附加想要在信息中共享的文件。
- 6 轻触**SIM1/SIM2 发送**以发送信息。

## 对话视图

与另一方交流的信息将以时间顺序显示，以使您方便查看和查找对话。

## 更改信息设置

您的手机已预定义信息设置，因此您可以立即发送信息。 您可以根据喜好更改设置。

- 点击  >  >  > **设置**。

# 照相机

您可以使用照相机或摄像机拍摄和共享照片及视频。

· 点击  >  > 。

## 拍照

- 1 在屏幕上选景。
- 2 景物周围出现方框表示相机已完成对焦。
- 3 轻触  以拍照。拍摄的图片将自动保存到“图片库”。

## 照相机模式选项



- |  |   |
|--|---|
|   | <b>快拍视频模式</b> - 用于制作故事短片。                         |
|   | <b>手动视频模式</b> - 也用于录制视频。您可以手动控制每个详细信息选项。          |
|   | <b>手动照相机模式</b> - 用于使用专业类型设置准确地拍照。您可以手动控制每个详细信息选项。 |
|   | <b>自动模式</b> - 用于向照片和视频应用常用设置。                     |
|  | <b>简单模式</b> - 用于简单、快速地拍照。此模式中没有其他设置，且视频拍摄不可用。     |

## 取景器上的自动模式



1		用于管理照相机的闪光灯。
2		点击以在后置摄像头与前置摄像头之间切换。
3		用于选择拍摄模式进行拍照。
4		点击此图标可打开照相机设置菜单。
5		点击以查看最近拍摄的照片或视频。
6		点击以开始录制。
7		轻触以拍照。
8		点击以退出照相机。

### 备注

- 拍照前，务必使用超细纤维布清洁镜头保护盖。镜头盖沾染指印可导致照片模糊，产生晕轮效应。

## 使用模式设置

在照相机取景器中，点击 **模式** 显示模式选项。 点击每个图标以使用以下模式设置。

	使用前置和后置摄像头在不同视图中拍摄照片或视频。
	允许您拍摄全景图片。
	录制视频以通过慢动作查看。
	录制视频以通过快动作查看。

## 使用高级设置

在照相机取景器中，轻触  打开高级选项。 轻触每个图标以调整以下照相机设置。

	将以不同曝光度拍摄的照片合并为一张最佳照片，获得一张采用复杂光线条件的、更好的照片。
	设置照片比例和视频质量。
	您可以通过语音命令拍照。 开启该功能时，只需说出“Cheese”、“Smile”或“LG”即可拍照。
	设置照相机的计时器。 该功能适合自拍照片或视频时使用。
	您可以通过显示网格线帮助对齐，改善拍照或录制视频的效果。
	尤其是在走路或移动幅度较大时，点击可消除运动模糊。
	设置照片和视频的存储位置。 从 <b>IN</b> （内存）和 <b>SD</b> （内存卡）中进行选择。 只有在插入 SD 卡后才会出现该菜单。




您可以了解某一功能的使用方法。此图标将为您提供帮助指南。

## 取景器上的手动照相机模式




1		点击以在 JPEG 和 DNG 之间选择文件格式。
2		点击以提高不同光照条件下的颜色质量。
3		点击以使用手动对焦模式。
4		点击以调整亮度。
5		点击以调整 ISO。
6		点击以调整快门速度。
7		点击以使用自动曝光锁定。
8		显示当前高级设置的值。

## 取景器上的手动视频模式

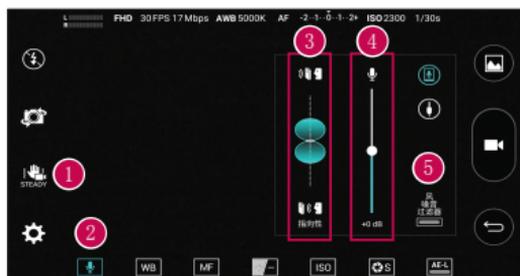

1		尤其是在走路或移动幅度较大时，点击可消除运动模糊。
2		点击以设置录制设置。 3 点击以调整声音方向。 4 点击以调整分贝。 5 点击以调整风向。  ：您可以在连接耳机后使用此功能。 点击  ，您可以在录制期间听到录制声音。

## 取景器上的快照视频模式

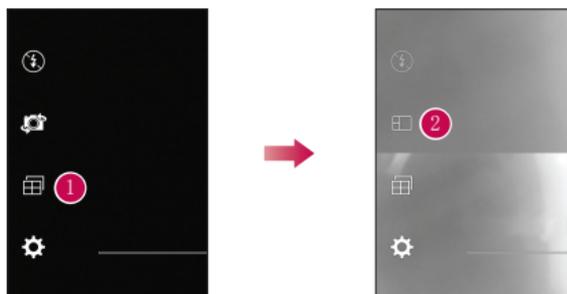

1		点击以更改多视图模式。
2		照片和视频组合到您所选择的布局中。要切换每个摄像头视图，请滑动该视图。

## 间隔拍摄

您可以使用前置摄像头通过自动模式进行间隔拍摄。 触摸并按住  可自动连续拍摄 4 张自拍照。

## 连拍

您可以使用后置摄像头通过自动模式进行连拍。 在松开“拍摄”按钮之前，按住  可连续拍摄大量照片。 取景器会显示拍摄的照片数。 在图片库中查看连拍时，点击  可依次显示每张照片（类似于浏览翻页画册）。

## 手势拍摄

“手势拍摄”功能可让您通过手势使用前置摄像头拍照。

### 使用手势拍照

“手势拍摄”功能有两种使用方法。

- 举起手，五指张开，直到前置相机检测到手掌且屏幕上出现一个框。 然后手掌合拢成拳头启动定时器，留出准备时间。

或者

- 举起手并握拳，直到前置相机检测到手掌且屏幕上出现一个框。 然后松开拳头启动定时器，留出准备时间。



### 备注

- 多视图录制中可能不支持此功能。

## 手势视图

用前置相机镜头拍照后，您可自动查看通过此手势拍摄的照片。

- 1 轻触  >  > 。
- 2 通过前置摄像头拍照。
- 3 拍照后，将手机靠近您的脸部。将显示拍摄的照片。

### 备注

- 视手势的速度和角度而定，此功能可能无法正常运行。
- 当角度在快速预览后有所变化，将返回至相机模式。您应转到“图片库”以再次查看图片。

## 多点自动对焦

拍照时，多点自动对焦（AF）功能自动工作，使您可以看到清晰的图像。

## 8 倍变焦

使用后置摄像头镜头时，您可以放大或缩小最高 8 倍。

### 备注

- 手用力要稳。该特性不适合某些功能。拍摄快速移动物体的照片时，会出现重影。

## 拍摄照片后

轻触屏幕上的图像缩略图可查看您拍摄的最后一张照片。

	轻触可编辑照片。
	轻触可以立即拍摄其它照片。
	点击可打开可用的共享选项。
	轻触以删除照片。
	轻触以访问更多选项。
	轻触以将照片添加至收藏夹。

## 录制视频

- 1 轻触  >  > 。
- 2 在屏幕上选景。
- 3 轻触  可开始视频录制。
- 4 录制时长显示在屏幕顶部。

### 备注

- 点击  可在录制视频时拍照。
- 5 轻触  可暂停视频录制。再次轻触  可继续录制。  
或者  
轻触  以停止录制。录制的视频将自动保存到“图片库”。

## 录制视频后

轻触屏幕上的视频缩略图可查看您录制的最后一个视频。

	点击可编辑视频。
	轻触以立即录制其他视频。
	轻触可打开可用的共享选项（如信息或蓝牙）以进行共享。
	轻触以删除视频。
	轻触以访问更多选项。
	点击可将视频添加至收藏夹。

# 图片库

图片库应用程序展示存储器中的图片和视频，包括使用照相机应用程序拍摄的照片以及从网络或其他位置下载的图片。

- 1 轻触  >  > 。
- 2 轻触一个相册以打开并查看其内容。（相册中的图片和视频以时间顺序显示。）
- 3 轻触相册中的图片即可查看。

## 备注

- 根据所安装的软件，一些文件格式可能不受支持。
- 由于编码原因，一些文件可能无法正确播放。

## 查看图片

图片库以文件夹的形式显示您的图片。 当一个应用程序（如电子邮件）保存一张图片时，系统会自动创建下载文件夹以包含该图片。 同样，抓拍屏幕后，会自动创建抓拍图片文件夹。

照片将按其创建日期显示。 选择一张要全屏查看的图像。 向左或向右滚动以查看下一张或上一张图像。

## 编辑照片

查看照片时，轻触 。

## 设置壁纸

查看照片时，轻触  > **将图像设置为** 可将图像设置为壁纸或将其分配给联系人。

## 备注

- 根据所安装的软件，一些文件格式可能不受支持。
- 如果文件大小超过可用内存，打开文件时可能会发生错误。

## 放大和缩小


使用以下一种方法放大图像：

- 在任何位置轻触两下以放大。
- 在图片中的任何位置张开两根手指可实现放大。 捏拢手指或轻触两次图像可实现缩小。

## 播放视频

- 1 轻触  >  > 。
- 2 选择要观看的视频。

## 视频选项

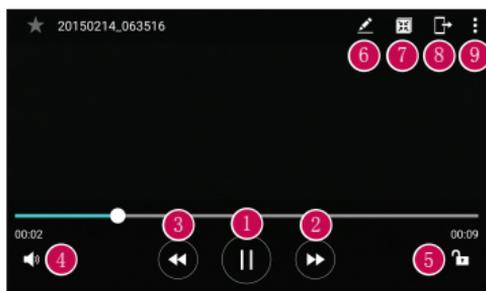


1		轻触可以暂停/继续视频播放。
2		触摸并按住可渐进性快进。轻触一次快进 10 秒。
3		触摸并按住可渐进性后退。 轻触一次后退 10 秒。
4		点击以调节视频音量。
5		轻触以锁定/解锁屏幕。
6		点击可设置各种效果。
7		点击以使用视频应用程序的 Quick 多任务。
8		轻触可以使用 SmartShare 功能共享视频。
9		轻触以访问更多选项。

## 备注

- 播放视频时，在屏幕右侧向上或向下滑动可调整音量。
- 播放视频时，在屏幕左侧向上或向下滑动可调整亮度。
- 播放视频时，从左到右（或反方向）滑动手指可快进和快退。

## 编辑视频

点击  可设置各种效果。

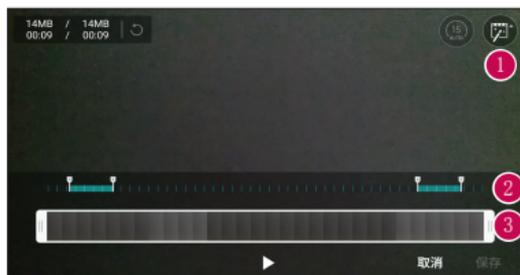

- |   |                  |
|---|------------------|
| ① | 点击可设置背景音乐、标题或作者。 |
| ② | 点击可调整视频速度。       |
| ③ | 点击可编辑帧。          |

## 删除照片/视频

使用以下一种方法：

- 在文件夹中，点击 ，选择照片/视频，然后点击**删除**。
- 查看照片时，轻触 .

# 电子邮件

您可以使用电子邮件应用程序读取 Gmail 以外其他提供商的电子邮件。电子邮件应用程序支持下列帐户类型：POP3、IMAP 和 Microsoft Exchange（用于企业用户）以及其他帐户。

- 轻触  >  > .

## 添加帐户

首次打开电子邮件应用程序时，屏幕上将打开一个设置向导，帮助您添加电子邮件帐户。您还可以使用**设置**应用程序添加电子邮件帐户。

- 点击  > **设置** > .

## 使用帐户文件夹

- 点击  > **显示所有文件夹**。

每个帐户均有“收件箱”、“重要人士”、“已发送”、“草稿箱”和“显示所有文件夹”。取决于您帐户的服务提供商支持的功能，您可能具有其他文件夹。

## 撰写和发送电子邮件

- 1 轻触 .
- 2 输入邮件目标收件人的地址。输入文字时，相匹配的地址将从您的联系人中给出。用分号分隔多个地址。
- 3 轻触**抄送/密送**字段，以便抄送或密件抄送至其他联系人/电子邮件地址。
- 4 轻触文本字段并输入信息。
- 5 长按文本字段选择选定的文字（粗体/斜体/下划线/颜色）。
- 6 轻触  以附加想要随信息发送的文件。
- 7 轻触  发送信息。

## 更改电子邮件常规设置

- 点击 **⋮** > **设置** > **常规设置**。

## 删除电子邮件帐户

- 点击 **⋮** > **设置** > **⋮** > **删除帐户** > 选择要删除的帐户 > **删除** > **是**。

# 音乐

手机中有音乐播放器，您可以播放所有喜爱的曲目。


## 备注

- 根据所安装的软件，一些文件格式可能不受支持。
- 如果文件大小超过可用内存，打开文件时可能会发生错误。
- 音乐文件的版权可能受国际条约和国家版权法保护。因此，可能需要获得许可或许可证才能复制音乐。在某些国家/地区，国际法禁止私人复制版权所有的材料。在下载或复制文件之前，请检查相应国家/地区关于使用此类材料的国家立法。

## 播放歌曲

- 1 轻触  >  > 。
- 2 轻触**歌曲**选项卡。
- 3 选择您要播放的歌曲。
- 4 以下选项可用。

## 音乐播放器选项

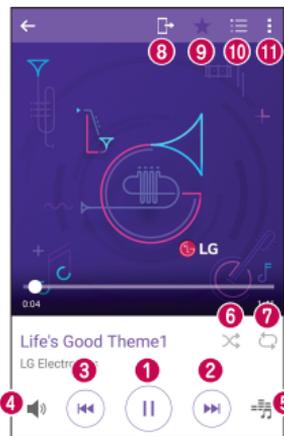

1		轻触可暂停播放。
		轻触可继续播放。
2		轻触可跳到专辑、播放列表或随机曲目中的下一曲目。 触摸并按住可快进。
3		轻触可重新开始播放当前曲目或跳至专辑、播放列表或随机曲目中的上一曲目。轻触并按住可后退。
4		轻触可调节音量。
5		轻触可设至音效。
6		轻触以采用随机播放模式（按随机顺序播放曲目）播放当前的播放列表。
7		轻触以在重复播放所有歌曲、重复播放当前歌曲或关闭重复之间切换。
8		点击可使用 SmartShare 功能共享照片。
9		轻触可将歌曲添加至收藏夹。
10		轻触可打开当前播放列表。
11		轻触以访问更多选项。

# 时钟

通过“时钟”应用程序可访问“闹钟”、“计时器”、“世界时钟”和“秒表”功能。轻触屏幕顶部的选项卡或水平滑过屏幕，可访问这些功能。

· 轻触  >  > .

## 闹钟

“闹钟”选项卡允许您设置闹钟。

- 1 点击**闹钟**选项卡。
- 2 轻触  以添加新窗口。
- 3 根据需要调整设置，然后点击**保存**。

### 备注

· 您还可以点击现有闹钟对其进行编辑。

## 计时器

“计时器”选项卡可用于在设定时间过后发出声音提示。

- 1 点击**计时器**选项卡。
- 2 在计时器上设置所需的时间。
- 3 轻触**启动**以启动计时器。
- 4 轻触**停止**以停止计时器。

## 世界时钟

世界时钟选项卡允许您轻松查看全球其他城市的当前时间。

- 1 点击**世界时钟**选项卡。
- 2 轻触  并选择所需城市。

## 秒表

“秒表”选项卡可将您的手机用作秒表。

- 1 点击**秒表**选项卡。
- 2 点击**启动**以启动秒表。
  - 点击**记录**以录制记录次数。
- 3 点击**停止**以停止秒表。

## 计算器

使用“计算器”应用程序的标准计算器或科学计算器，可执行数学计算。

- 1 轻触  >  > .
- 2 点击数字按钮以输入数字。
- 3 对于简单的计算，请轻触要执行的函数（+、-、x 或 ÷），然后点触 =。

### 备注

- 有关更复杂的计算，点击 .

## 日历

“日历”应用程序允许您跟踪您的事件日程表。

- 1 轻触  >  > .
- 2 轻触您要添加事件的日期。然后轻触 .

# 录音机

“录音机”应用程序可为您录制各种用途的音频文件。

## 录制声音或语音

- 1 轻触  >  > 。
- 2 点击  以开始录音。
- 3 点击  以结束录音。
- 4 点击  以收听录音。

### 备注

- 点击  以访问您的录音。 您可以收听您保存的录音。

## 下载内容

使用此应用程序可查看您通过此应用程序下载的具体文件。

- 轻触  >  > 。

## FM 收音机

手机内置了 FM 收音机，因此您在路上也能转到喜爱的电台并收听无线广播。

- 轻触  >  > 。

### 备注

- 必须插入耳机作为天线方可使用。

# LG Backup

## 关于备份和恢复设备数据

建议您定期在内部存储器上创建和保存备份文件，尤其是在更新任何软件之前。当设备丢失、被盗或因无法预料的问题受损时，在存储卡上保留最新备份文件也许能让您恢复设备数据。

此 LG 备份应用程序受 LG 智能手机和平板电脑、其他软件或操作系统版本的支持。因此，当购买新的 LG 智能手机和平板电脑后，可以将当前设备的数据备份到新设备中。

如果在智能手机和平板电脑上预加载了 LG 备份应用程序，则可以备份和恢复大多数的数据，包括下载的和预安装的应用程序、书签、日历条目、联系人、主屏设置及系统设置。

### 警告

- 要预防在备份或恢复操作中出现因电池电量不足引起的意外关机，您应始终为电池充满电。

### 备注

- 在恢复备份文件之前，存储在设备上的所有文件都将被删除。务必将备份文件复制到其他位置。
- 请注意，您的设备数据将被备份内容覆盖。

## 备份设备数据

1 轻触  >  > 。

2 选择您所需的模式。

- **在设备间复制数据** - 将旧设备上的数据复制到新设备。
- **备份与恢复** - 备份数据或从备份恢复。

# Google 应用程序

Google 提供娱乐、社交网络和业务应用程序。访问某些应用程序可能需要使用 Google 帐户。

要查看更多应用程序信息，请访问每个应用程序的帮助菜单。

## 备注

- 某些应用程序可能无法使用，具体取决于您所在的地区或您的服务提供商。

## Google

在互联网上或您的设备上快速搜索项目。

## Chrome

搜索信息和浏览网页。

## Gmail

通过 Google Mail 服务发送或接收电子邮件。

## 地图

在地图上查找您的位置，搜索位置，以及查看各个位置的位置信息。

## YouTube

观看或创建视频并与他人共享。

## 云端硬盘

将您的内容存储在云端，随时随地访问，并与其他人共享。

## Play 电影

观看您的设备上存储的视频，并从 **Play 商店** 下载要观看的各种内容。

## 环聊

与朋友单聊或群聊，并在聊天时使用图像、图释和视频通话。

## Google 相册

管理设备上存储的或已上传到 Google+ 的照片、专辑和视频。

## 文档

## Google 设置

配置 Google 提供的部分功能的设置。

## 幻灯片

## 语音搜索

通过说出一个关键字或短语快速搜索项目。



設置

# 访问“设置”菜单

“设置”应用程序用于对您的手机进行自定义和个性化。

## 打开设置应用程序

· 轻触  > 触摸并按住  > **系统设置**。

或者

· 轻触  >  > 。

## 查看设置

点击  可切换视图模式。

- **列表视图** - 上下滚动查看列表。
- **标签视图** - 左右滑动或点击需要的选项卡。



### 备注

- 本指南中的任务执行说明基于默认视图设置。

# 网络设置

## 双SIM卡

您可以配置 SIM 双卡设置。

在**设置**屏幕上，点击**网络**选项卡 > **双SIM卡**。

- **SIM 卡1** - 可以更改 SIM 卡 1 的 SIM 卡名称和 SIM 卡图标。
- **激活卡槽1** - 勾选以激活或停用 SIM 卡槽 1。
- **SIM 卡2** - 可以更改 SIM 卡 2 的 SIM 卡名称和 SIM 卡图标。
- **激活卡槽2** - 勾选以激活或停用 SIM 卡槽 2。
- **SIM 卡颜色主题** - 可以选择所需的颜色。
- **成本节省模式** - 在联系人中，各联系人可分配至特定 SIM。呼叫分配至可用 SIM 的联系人时，SIM 将用于呼叫，即使其它 SIM 已激活。
- **移动数据** - 勾选以在移动网络上启用数据访问。

- **要使用的 SIM 卡** - 您可以更改默认数据网络。所有移动分组服务（Web、彩信、电子邮件等）将会使用已在此值中选择的 SIM 卡。当只有一张 SIM 卡插入，默认数据网络则被设置为已插入的 SIM 卡且不能更改。
- **数据漫游** - 勾选此选项以允许您在漫游至家庭网络覆盖区域之外时使用移动数据连接。

## WLAN

您可以在无线接入点（AP）覆盖区内使用高速互联网访问。

在**设置**屏幕上，点击**网络**选项卡 > **WLAN**。

1 轻触  以打开 Wi-Fi 并开始扫描可用的 Wi-Fi 网络。

2 轻触某个网络进行连接。

- 如果网络有锁图标保护，则您需要输入安全密钥或密码。

3 状态栏显示了可指明 WLAN 状态的图标。

### 备注

- 如果您在 WLAN 区域之外，或者将 WLAN 设为关闭，则设备可能使用移动数据自动连接到网络，这可能产生额外的数据费用。

## WLAN直连

WLAN 直连在启用了 WLAN 的设备之间提供直接连接，无需借助接入点。

- 轻触  > **高级 WLAN** > **WLAN直连**。

### 备注

- 在此菜单中时，附近的其他可见 WLAN 直连设备可以看到您的设备。

## 蓝牙

蓝牙是一种短距离通信技术，允许您以无线方式连接多个蓝牙设备，如耳机、免提式车载套件设备、启用蓝牙的手持设备、电脑、打印机和无线设备。

## 备注

- LG 对经蓝牙功能发送或接收的数据的丢失、拦截或误用不承担任何责任。
- 始终确保您用于共享和接收数据的设备可信且安全。
- 如果设备间存在障碍物，则需要缩短操作距离。
- 某些未经 Bluetooth SIG 测试或认可的设备可能与您的设备不兼容。

## 将您的手机与其他蓝牙设备配对

- 1 在**设置**屏幕上，点击**网络**选项卡 > **蓝牙**。
- 2 点击  启动蓝牙并开始扫描可用的蓝牙设备。
  - 如果还希望检测搜索范围内的可见设备，请点击**搜索**。
- 3 从列表中选择您要配对的设备。一旦配对成功，您的手机将连接到另一个设备。

## 备注

- 两个蓝牙设备间的配对只需进行一次。一旦创建配对，设备将持续识别配对设备并交换信息。
- 有关配对模式和通行码（通常为 0 0 0 0 - 四个零）的信息，请参阅蓝牙设备附带的文档。

## 通过蓝牙发送数据

- 1 选择一个文件或项目，如联系人或媒体文件。
- 2 选择选项以通过蓝牙发送数据。
- 3 搜索并配对已启用蓝牙的设备。

## 备注

- 由于其他蓝牙兼容设备的规格和功能不同，显示和操作可能有所不同，传输或交换也许不适用于所有蓝牙兼容设备。

## 通过蓝牙接收数据

- 1 在**设置**屏幕上，点击**网络**选项卡 > **蓝牙**。
- 2 轻触  将蓝牙打开。
- 3 您将收到接受来自发送设备的配对尝试的请求。请务必选择**接受**。

## 移动数据

显示数据使用情况和移动数据使用限制。

- 点击  可打开或关闭移动数据连接。此功能用于管理您的移动数据使用情况。您也可以改为使用 WLAN 网络连接访问数据。

## 通话

用于配置通话各种通话设置。

在**设置**屏幕上，点击**网络**选项卡 > **通话**。

[SIM 卡1/SIM 卡2]

- **语音邮件中心** - 允许您选择运营商的语音信箱服务。
- **固定拨号** - 打开并汇集一个号码列表，可从手机拨打此列表中的号码。您需要提供 PIN2 码，此代码由运营商提供。仅可以使用手机拨打此号码列表中的号码。
- **呼叫转接** - 允许您设置来电转接选项。
- **呼叫限制** - 锁定来电、拨出电话或国际电话。
- **通话时间** - 查看通话时间，包括“最后通话”、“已拨电话”、“已接来电”和“所有通话”。
- **其他设置** - 此菜单允许您更改以下设置。

**本机号码：**允许您设置本机号码选项。

**来电等待：**如果激活了来电等待功能，在通话过程中，手机将提醒您有新来电（取决于网络提供商）。

[常用]

- **在应用程序中显示语音呼叫** - 正在使用应用程序时，显示来电弹出窗口。
- **拒接来电** - 允许您设置拒接来电功能。
- **用消息拒绝** - 拒接来电时，可使用此功能快速发送一条信息。此选项可用于在会议期间拒接来电。
- **自动应答** - 设置在连接的免提设备自动接听来电前的时间。
- **连接振动** - 当对方接听电话后，您的手机会振动。
- **噪音抑制** - 在通话期间，抑制我方的背景噪音。

- **语音清晰** - 增强语音清晰度，以便听得更清晰。
- **保存未知号码** - 通话后将未知号码添加至联系人。
- **电源键结束呼叫** - 通话时，按下“电源”将结束通话而不是关闭屏幕。
- **接听来电** - 如有来电，将手机拿至耳旁即可接听。
- **等待接听的来电** - 翻转手机即可使来电静音。

## NFC

您的手机启用了 NFC。NFC (Near Field Communication, 近场通讯) 是一项无线连接技术，它可使电子设备之间实现双向通信。它能在几厘米的距离内工作。只需通过设备轻触，即可与 NFC 标签或其他 NFC 支持设备共享内容。如果您通过设备点击 NFC 标签，则将在设备上显示标签内容。

在**设置**屏幕上，点击**网络**选项卡 > **共享与连接** > **NFC**。

1 点击  打开 NFC。

2 只需在 NFC 触控点将您的手机与其他数据兼容的设备放在一起（通常相距 20 毫米内），即可发送或接收文件。

- **点击支付** - 当 NFC 开启时，可以使用“点击支付”功能为商品付款，只需让手机接触收银机中的读卡器即可。如果您的手机没有默认应用程序，则可以浏览 Google Play Store 找到其他支付应用程序。

### 备注

- 由于其他蓝牙兼容设备的规格和功能不同，显示和操作可能有所不同，传输或交换也许不适用于所有蓝牙兼容设备。
- 在此菜单中时，附近的其他可见 WLAN 直连设备可以看到您的设备。

## Android Beam

开启此功能时，您可以通过将多台设备紧靠，将应用程序内容传输至其他具有 NFC 功能的设备。只需将设备放在一起（一般采用背靠背的方式），然后轻触屏幕即可。此应用程序将确定播送的内容。

在**设置**屏幕上，点击**网络**选项卡 > **共享与连接** > **Android Beam**。

- 1 点击  打开 Android Beam（打开每台设备上的 Android Beam）。
- 2 选择要共享的屏幕或文件（例如，图片库中的图像）。
- 3 将设备紧靠在一起。
- 4 缩小屏幕后点击要发送的屏幕（每个应用程序确定要发送或接收的内容）。

## SmartShare Beam

SmartShare Beam 允许您在 LG 手机或平板电脑中快速发送和接收文件。

### 通过 SmartShare Beam 接收数据

- 1 在**设置**屏幕上，点击**网络**选项卡 > **共享与连接** > **SmartShare Beam**。
- 2 点击  打开 SmartShare Beam。您手机上的 WLAN 将自动开启，并准备接收文件。

### 通过 SmartShare Beam 发送数据

- 1 选择一个文件或项目，如媒体文件。
- 2 选择选项以通过 SmartShare Beam 发送数据。
- 3 从列表中选择您要配对的设备。

## 媒体服务器

可让您与附近的 DLNA 兼容设备共享手机的多媒体内容。

在**设置**屏幕上，点击**网络**选项卡 > **共享与连接** > **媒体服务器**。

- 启用**内容共享**选项以允许附近的设备访问您的内容。

## Miracast

用于以无线方式将手机屏幕和声音镜像到 Miracast 适配器或电视上。

在**设置**屏幕上，点击**网络**选项卡 > **共享与连接** > **Miracast**。

- 点击  可开启 Miracast 并开始扫描可用的 Miracast 设备。您的手机会显示可以通过 Miracast 投射内容的所有设备。

## LG AirDrive

允许连接到 PC 以管理您的手机。使用前，在 PC 上通过 LG Electronics 网站设置 LG 桥。当您在手机和 PC 上登录同一 LG 帐户时，您可以使用 LG AirDrive 功能。

- 1 在移动设备和 PC 上登录同一 LG 帐户。
- 2 在**设置**屏幕上，点击**网络**选项卡 > **共享与连接** > **LG AirDrive**。
- 3 在您的 PC 上运行 LG 桥应用程序，然后选择 **LG AirDrive**。

### 备注

- 如果需要设置 **LG 桥**，请参阅“**开始了解您的手机**”中的 **LG 桥**部分。

## 正在打印

您可以将某些屏幕的内容（如 Chrome 浏览器显示的网页）通过打印机打印，此打印机须与您的 Android 设备连接的 Wi-Fi 网络相同。

在**设置**屏幕上，点击**网络**选项卡 > **共享与连接** > **正在打印**。

## 通过无线打印机打印

- 1 选择一个文件或项目，如联系人或媒体文件。
- 2 选择选项以通过蓝牙发送数据。
- 3 搜索并配对已启用蓝牙的设备。

### 备注

- 由于其他蓝牙兼容设备的规格和功能不同，显示和操作可能有所不同，传输或交换也许不适用于所有蓝牙兼容设备。

## USB 绑定

允许您通过 USB 数据线与计算机共享互联网连接。

- 1 使用 USB 数据线将手机连接到 PC。
- 2 在**设置**屏幕上，点击**网络**选项卡 > **绑定** > **USB 绑定**。
- 3 点击  开启 USB 绑定。

## WLAN 热点

您也可以使用手机提供移动宽带连接。创建热点，共享连接。

在**设置**屏幕上，点击**网络**选项卡 > **绑定** > **WLAN 热点**。

- 1 点击  开启 WLAN 热点。
- 2 点击“设置 WLAN 热点”更改 SSID、安全类型、密码和其他热点选项。

## 蓝牙绑定

允许您通过蓝牙连接其他设备。

- 在**设置**屏幕上，点击**网络**选项卡 > **绑定** > **蓝牙绑定**。
- 点击  开启蓝牙绑定，以通过蓝牙绑定共享您的连接。

## 帮助

## 飞行模式

允许您在禁止拨打或接听电话或使用数据的区域使用手机的许多功能，例如游戏和音乐。将手机设置为飞行模式时，它无法发送或接收任何电话，也无法访问在线数据。

在**设置**屏幕上，点击**网络**选项卡 > **更多** > **飞行模式**。

## VPN

从您的手机中，您可以添加、设置和管理虚拟专用网（VPN），以允许您连接和访问受保护的本地网络（如您的公司网络）中的资源。

在**设置**屏幕上，点击**网络**选项卡 > **更多** > **VPN**。

## 移动网络

此菜单用于配置各种移动网络设置，如**移动数据**、**数据漫游**。

在**设置**屏幕上，点击**网络**选项卡 > **更多** > **移动网络**。

# 声音和通知设置

用于更改设备上的各种声音设置。

在**设置**屏幕上，点击**声音和通知**选项卡。

- **声音模式** - 允许您设置手机的声音配置文件。
- **音量** - 调节手机的音量设置，以便适合您的需要和环境。
- **SIM 卡1 铃声/SIM 卡2 铃声** - 允许您设置呼叫铃声。您还可以添加和删除铃声。
- **铃声ID** - 用于根据来电电话号码新建铃声。
- **振动强度** - 允许您设置来电、通知和触摸反馈的振动强度。
- **声音和振动** - 启用以将手机设为接到来电时既响铃又振动。
- **SIM 卡1 振动类型/SIM 卡2 振动类型** - 允许您选择振动类型。
- **请勿打扰** - 允许您设置何时阻止通知打扰您的日程表。如果设置了“仅优先级”，可设置为允许特定功能打扰。
- **锁定屏幕** - 用于选择希望在锁定屏幕上显示还是隐藏通知。
- **应用程序** - 允许您设置各个应用程序的通知，包括阻止它们显示通知和设置优先级。
- **32 位 高保真 DAC** - 启用此功能可提高受支持耳机的音频质量。

## 更多

- **SIM 卡1 通知声音/SIM 卡2 通知声音** - 用于设置通知声音。您还可以添加和删除通知声音。
- **点击振动** - 启用以在点击主页触摸按钮以及其他用户界面互动期间振动。
- **音效** - 此菜单允许您选择在拨号盘上轻触数字、选择屏幕选项等情况下是否发出声音。
- **消息/呼叫声音通知** - 允许您的设备自动读出来电和消息事件。

# 显示屏设置

## 辅屏

在**设置**屏幕上，点击**显示屏**选项卡 > **辅屏**。

如果您需要更多信息，请参阅“**必将让您爱不释手的功能**”中的“**辅屏**”部分。

## 主屏

用于设置主屏设置。

在**设置**屏幕上，点击**显示屏**选项卡 > **主屏**。

- **选择主页** - 选择所需主页主题。
- **智能小秘** - 启用以使用显示自定义信息的其他主屏。
- **主题** - 设置设备的屏幕主题。您可以从 LG SmartWorld 中下载新主题。
- **壁纸** - 设置用于主屏上的壁纸。
- **屏幕点击效果** - 选择从主屏界面向下一屏滑动时显示效果的所需类型。
- **允许主屏幕循环** - 启用以允许主屏连续滚动（最后一屏后循环回第一屏）。
- **帮助** - 显示主屏的帮助信息。

## 锁定屏幕

用于设置锁定屏幕设置。

在**设置**屏幕上，点击**显示屏**选项卡 > **锁定屏幕**。

- **选择屏幕锁定** - 允许您设置屏幕锁定类型以确保设备的安全。
- **Smart Lock** - 设置此选项使手机与受信任的设备或地点处于已解锁状态。 如果需要更多信息，请参阅“**开始了解您的手机**”中的“**Smart Lock**”部分。
- **屏幕点击效果** - 设置滑动锁定屏幕时使用的效果。
- **壁纸** - 选择锁定屏幕显示的壁纸。
- **快捷方式** - 允许您选择在锁定屏幕上可用的快捷方式。
- **天气动画** - 启用可在锁定屏幕上显示当前位置的天气动画。
- **手机丢失时的联系人信息** - 允许您在手机丢失时，在锁定屏幕上显示所有者信息。
- **锁定计时器** - 可让您设置屏幕超时后屏幕自动锁定前的时间。
- **电源按钮立即锁定** - 勾选后，可在按下电源/锁定键后立即锁定屏幕。 此设置将覆盖锁定计时器设置。

## 主页触摸按钮

设置在所有屏幕底部显示的主页触摸按钮。 设置要显示的按钮、其在栏中的位置和外观。

在**设置**屏幕上，点击**显示屏**选项卡 > **主页触摸按钮**。

- 按钮组合
- 颜色
- 隐藏主页触摸按钮

## 更多显示屏设置

用于设置其他显示设置。

在**设置**屏幕上，点击**显示屏**选项卡。

- **字体类型** - 选择所需的字体类型。
- **字体大小** - 选择所需的字体大小。
- **亮度** - 使用滑块调节屏幕亮度。
- **自动旋转屏幕** - 设置为在旋转手机时自动切换方向。
- **屏幕超时** - 设置屏幕自动关闭前的延迟时间。

## 更多

- **互动屏保** - 选择在手机在插接时和/或充电时处于睡眠状态期间要显示的屏保。
- **运动传感器校准** - 可让您提高倾斜精确度和传感器速度。

## 常规设置

### 语言和键盘

允许您更改文本输入设置。

选择手机上的文本语言，并配置屏上键盘，包括您添加到其字典中的字词。

在**设置**屏幕上，点击**常规**选项卡 > **语言和键盘**。

- **语言** - 选择要在手机上使用的语言。
- **当前键盘** - 允许您选择其他键盘类型。
- **LG 键盘** - 更改 LG 键盘设置。
- **Google 语音输入** - 启用以选择 Google 语音输入来输入数据。轻触设置图标以更改 Google 语音设置。
- **语音搜索** - 轻触以配置语音搜索设置。
- **文本-语音输出** - 轻触以设置偏好的引擎或文本转语音输出的常规设置。
- **指针速度** - 调节指针速度。
- **更改按钮** - 扭转鼠标按钮以使用右侧主要按钮。

## 位置

打开位置服务，您的手机将使用 WLAN 和移动网络确定您的大概位置。选择此选项时，将询问您在提供这些服务时是否允许 Google 使用您的位置。

在**设置**屏幕上，点击**常规**选项卡 > **位置**。

- **模式** - 设置您当前位置的确定方式。
- **我的位置** - 启用以定位家庭地址，从而进行智能设置。
- **低电源预计位置** - 启用以使用硬件加速。
- **使用照相机** - 启用以在照片或视频中添加位置标签。
- **Google 位置记录** - 允许选择将您的位置信息设置为可供 Google 及其产品访问。

## 帐户与同步

使用此菜单添加、删除和管理您的 Google 以及其他支持的帐户。您也可以使用这些设置控制所有应用程序如何及是否根据各自的计划发送、接收和同步数据，以及是否所有应用程序可以自动同步用户数据。

Gmail™、日历和其他应用程序可能还具有自有设置以控制数据同步方式，请参阅有关这些应用程序的部分获得详细信息。

在**设置**屏幕上，点击**常规**选项卡 > **帐户与同步**。

- **自动同步数据** - 启用此选项可自动同步您在手机上添加的所有帐户。
- **帐户** - 显示您添加的所有帐户。点击一个帐户可查看和/或管理它。
- **添加帐户** - 点击以添加新帐户。

## 云

允许您添加云帐户以快速轻松地使用云服务。

在**设置**屏幕上，点击**常规**选项卡 > **云**。

## 用户

添加用户以便与他人共用手机。每个用户在自己的空间内都有自己的应用程序和内容。新用户若要使用手机，必须进行初始设置。

在**设置**屏幕上，点击**常规**选项卡 > **用户**。

- **添加用户** - 允许您为设备添加和配置新用户。

## 辅助工具

使用辅助工具设置可配置您在手机上安装的辅助功能插件。

在**设置**屏幕上，点击**常规**选项卡 > **辅助工具**。

- **视觉** - 设置针对视障人士的选项。
  - **语音菜单** - 用于设置语音菜单功能，来通过言语反馈协助视觉有障碍的人。
  - **消息/呼叫声音通知** - 启用以允许您听到来电和信息的自动语言提醒。
  - **屏幕亮度** - 启用以将屏幕设置为更暗的对比度。
  - **字体大小** - 设置字体大小。
  - **触摸缩放** - 允许您通过三点轻触屏幕来进行缩放。
  - **屏幕颜色反转** - 启用以反转屏幕和内容的颜色。
  - **屏幕颜色调整** - 用于调整屏幕和内容的颜色。
  - **电源键结束呼叫** - 启用此选项以便通过按电源/锁定键结束语音通话。
- **听觉** - 设置针对听障人士的选项。
  - **标题** - 用于为有听力障碍的人自定义字幕设置。
  - **闪光灯提醒** - 启用此选项以设置闪光灯在有来电和通知时闪光。
  - **关闭所有声音** - 启用此选项以关闭所有设备声音。
  - **音频类型** - 设置音频类型。
  - **声音平衡** - 设置音频线路。在滑动条上移动滑块进行设置。

- **电机与认识能力** - 设置针对运动障碍人士的选项。
  - **触摸反馈时间** - 设置触摸反馈时间。
  - **触控助手** - 显示触控板以便于访问常用操作。
  - **屏幕超时** - 设置背景灯自动关闭前的时间。
  - **触摸控制区域** - 可选择一个屏幕区域，仅将触控激活限制在该屏幕区域内。
- **辅助功能快捷方式** - 点击三次主页按钮后，可快速访问选定功能。
- **自动旋转屏幕** - 启用此选项以允许手机根据实体手机方向（纵向或横向）旋转屏幕。
- **开关控制** - 允许您使用一个或多个如键盘按键一样的开关与设备进行交互。此菜单可帮助行动受限的用户避免直接与设备进行交互。

## 迷你视图

通过在主页触摸按钮上向左或向右滑动，打开此菜单缩小屏幕以便单手使用。如果您需要更多信息，请参阅“必将让您爱不释手的功能”中的“迷你视图”部分。

在**设置**屏幕上，点击**常规**选项卡 > **迷你视图**。

## 快捷键

当屏幕关闭或锁定时，按两次**音量键**，即可快速访问应用程序。

在**设置**屏幕上，点击**常规**选项卡 > **快捷键**。

- **按音量调高键**两次可打开**捕获+**应用程序。
- **按音量调低键**两次可启动**照相机**应用程序。
- **快速拍照** - 启用此选项可在按音量调低键两次后自动拍照。

## 指纹 & 安全性

使用此菜单配置手机及其数据的保护方式。

在**设置**屏幕上，点击**常规**选项卡 > **指纹 & 安全性**。

- **指纹** - 使用指纹解锁屏幕或查看锁定内容。如果您需要更多信息，请参阅“**必将让您爱不释手的功能**”中的“**指纹**”部分。
- **内容锁定** - 选择锁定类型可锁定 Quick备忘录+ 中的备忘录。
- **加密手机** - 允许加密手机数据以保护安全性。您需要在每次开机时输入 PIN 或密码才能解密手机。
- **加密 SD 卡存储** - 加密 SD 卡存储并使其他设备无法使用数据。
- **设置 SIM 卡锁定** - 设置 PIN 以锁定 SIM 卡并允许您更改 PIN。
- **密码键入为可见** - 启用此选项以在您输入密码时短时间显示每个字符，以便您看到自己的输入内容。
- **设备管理器** - 查看或停用手机管理器。
- **未知源** - 允许安装非 Play Store 应用程序。
- **验证应用程序** - 安装可能引起危害的应用程序之前进行拒绝或警告。
- **存储器类型** - 显示当前存储器类型。
- **证书管理** - 允许您管理自己的安全证书。
- **Trust agents** - 选择可在不解锁屏幕的情况下使用的应用程序。
- **屏幕固定** - 通过屏幕 PIN，可以使您的设备仅显示某个应用程序的屏幕。
- **可以使用的应用程序** - 用于查看手机上应用程序的使用信息。

## 智能设置

用于根据您的所在地点或执行的操作开启/关闭、打开或更改 WLAN、音乐、声音模式等。

在**设置**屏幕上，点击**常规**选项卡 > **智能设置**。

## Quick Cover 窗口

借助 Quick Cover 窗口，关闭皮套时您可以查看来电并阻止闹钟/计时器。要使用皮套解锁，必须将屏幕锁定设置为“滑动”。

在**设置**屏幕上，点击**常规**选项卡 > **Quick Cover 窗口**。

## 分屏显示

允许您配置“分屏显示”功能。

在**设置**屏幕上，点击**常规**选项卡 > **分屏显示**。

- **自动打开** - 勾选此选项后，点击全屏上的链接或电子邮件的附件可打开“分屏显示”。
- **帮助** - 显示分屏显示使用技巧。

如果您需要更多信息，请参阅“**必将让您爱不释手的功能**”中的“**分屏显示**”部分。

## 日期和时间

设置日期和时间显示方式的首选项。

在**设置**屏幕上，点击**常规**选项卡 > **日期和时间**。

## 存储

您可以监控设备的已用和可用内存。

在**设置**屏幕上，点击**常规**选项卡 > **存储**。

## 内部存储器

- **空间总量** - 以文本显示您的手机内存中的空间总量和可用空间，并带有彩色条形图（未用空间为灰色）。各设备用户下方列出相应的应用程序及其所占用的空间。

## 外置 SD 卡

- **空间总量** - 显示内存卡中的空间总量和剩余可用空间。
- **安装/卸载 SD 卡** - 允许您安装或卸载 SD 卡。
- **格式化 SD 卡** - 允许您擦除 SD 卡上的所有数据。

## 电池和省电

显示当前电池状态，包括剩余电量百分比和充电状态。

在**设置**屏幕上，点击**常规选项卡** > **电池和省电**。

- **电池使用情况** - 显示电池使用水平和电量使用详情。轻触某个项目以查看更多详情。
- **状态栏上的电量百分比** - 勾选以在电池图标旁边的状态栏上显示电池使用量百分比。
- **省电** - 轻触省电开关以将其切换为“开启”或“关闭”。设置将自动开启省电功能的电池电量百分比。
- **游戏优化** - 调整游戏的视频质量以节省电量。

## 智能清理

显示您手机中的已用空间和可用空间，并允许您选择性地清除文件。

在**设置**屏幕上，点击**常规选项卡** > **智能清理**。

- 1 点击一个文件夹位置，然后设置相应的框。
- 2 点击**清理** > **是**。

## 应用程序

可以查看手机上安装的应用程序的详细信息，管理其数据和强行停止。

在**设置**屏幕上，点击**常规选项卡** > **应用程序**。

## 默认消息应用程序

此菜单允许您选择用作默认信息应用程序的信息应用程序。

在**设置**屏幕上，点击**常规选项卡** > **默认消息应用程序**。

## 备份与重置

更改设置以管理您的设置和数据。

在**设置**屏幕上，点击**常规**选项卡 > **备份与重置**。

- **LG备份** - 备份设备上的所有信息并在出现数据丢失或更换时进行恢复。如果需要更多信息，请参阅“应用程序”中的“LG备份”部分。
- **备份我的数据** - 将应用程序数据、WLAN 密码及其他设置备份到 Google 服务器。
- **备份帐户** - 显示当前用于备份信息的帐户。
- **自动还原** - 重新安装应用程序时，恢复备份的设置和数据。
- **重设出厂数据** - 将您的设置重置为出厂默认值，然后删除所有数据。如果以此方式重置手机，首次启动 Android 时，将提示您重新输入相同的信息。

## 关于手机

查看法律信息，检查手机状态和软件版本，并执行软件更新。

在**设置**屏幕上，点击**常规**选项卡 > **关于手机**。

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

# 附录

# 手机软件更新

## 从互联网的 LG 手机软件更新

有关使用此功能的更多信息，请访问 <http://www.lg.com/common/index.jsp> →，选择您所在的国家/地区和语言。

此功能帮助您方便地从互联网将手机固件更新为最新版本，而无需访问服务中心。只有当 LG 为您的设备提供了更新的固件版本时，此功能才可用。

由于手机固件更新要求用户在更新过程期间保持全部注意力，因此在继续执行操作之前，请确保留意每一个步骤中出现的所有说明和提示。请注意，在升级过程中移除 USB 数据线或取出电池将严重损坏您的手机。

### 备注

- LG 保留根据自行判断决定固件更新仅可用于指定型号的权利，不保证所提供的固件更新版本可供所有手机型号使用。

## 通过空中下载 (OTA) 的 LG 手机软件更新

此功能使您可以通过 OTA 方便地将手机的软件更新为较新的版本，而无需连接 USB 数据线。只有当 LG 为您的设备提供了更新的固件版本时，此功能才可用。

首先，您应在手机上检查软件版本：**设置** > **常规选项卡** > **关于手机** > **常用选项卡** > **更新中心** > **软件更新** > **现在检查更新**。

### 备注

- 手机内存中您的个人数据（包括有关您 Google 帐户、其他任何帐户、您的系统/应用程序数据和设置、下载的任何应用程序和 DRM 许可信息）可能会在手机软件的更新过程中遗失。因此，LG 建议您在更新手机软件之前，先备份个人数据。对于任何个人数据的遗失，LG 概不负责。
- 此功能取决于网络服务提供商、所在区域和国家/地区。

# FAQ

本章列出了您在使用手机过程中可能遇到的一些问题。有些问题可能需要您致电服务提供商，但大多数问题您可自行解决。

信息	可能原因	可行解决措施
SIM 卡错误	手机中没有安装 SIM 卡或 SIM 卡插入不正确。	请确保正确插入 SIM 卡。
没有网络连接/网络断开	信号弱，或者您在运营商网络范围之外。	将手机移到窗边或开放的区域中。检查网络运营商覆盖地图。
	运营商应用了新服务。	检查 SIM 卡使用时间是否超过 6~12 个月。如果是，请前往最近的网络提供商处更换 SIM 或 USIM 卡。请与服务提供商联系。
代码不匹配	要更改安全码，必须再次输入以确认新代码。	如果忘记代码，请联系您的服务提供商。
	两次输入的代码不匹配。	
无应用程序可供设置	服务提供商不支持或需要注册。	请与服务提供商联系。
下载的应用程序导致大量错误。	请删除该应用程序。	<ol style="list-style-type: none"><li>1 轻触  &gt;  &gt; .</li><li>2 点击<b>常规</b>选项卡 &gt; <b>应用程序</b>。</li><li>3 点击该应用程序 &gt; <b>卸载</b>。</li></ol>

信息	可能原因	可行解决措施
无法拨打电话	拨号错误	新网络未获得授权。
	已插入新 SIM 卡。	查看新的限制。
	达到预付费上限。	与服务提供商联系或重新设置 PIN 2 的限制。
手机无法打开	按开/关键时间过短。	请按开/关键至少两秒钟。
	电池未充电。	为电池充电。 检查显示屏上的充电指示灯。
充电错误	电池未充电。	为电池充电。
	外部温度太热或太冷。	确保手机在正常温度下充电。
	触点问题	检查充电器以及到手机的连接。
	无电压	请将充电器插入其他插座。
	充电器故障	更换充电器。
	错误充电器	请仅使用原装 LG 配件。
不允许使用号码。	已打开固定拨号功能。	检查“设置”功能表并关闭该功能。
无法接收/发送短信和照片	内存已满	从手机中删除一些数据（如应用程序或信息），以释放出更多可用内存。
文件无法打开	不受支持的文件格式	检查受支持的文件格式。

信息	可能原因	可行解决措施
我收到来电时，屏幕未打开。	近程传感器问题	如果使用保护带或保护套，请确保其未盖住近程传感器周围的区域。确保近程传感器周围的区域干净。
无声音	振动模式	检查声音菜单的设置状态，确保您不处于振动或禁止打扰模式下。
挂机或死机	间歇性软件问题	如果尝试操作时，屏幕冻结或手机不响应，请取出并重新插入电池。然后重启手机。 <b>或者</b> 尝试通过网站执行软件更新。

## 防盗指南

您可以设置设备，以防他人在未经您许可的情况下将手机恢复出厂设置，从而盗用您的手机。例如，如果您的设备丢失、被盗或被擦除，只有使用您的 Google 帐户或屏幕锁定信息才能使用设备。要确保您的设备受到保护，您只需要采取如下措施：

- **设置屏幕锁定：**如果您的设备丢失或被盗，但您设置了屏幕锁定，除非解锁屏幕，否则无法使用“设置”菜单格式化设备。
- **在设备上添加您的 Google 帐户：**如果您的设备内容被擦除，但设备上有 Google 帐户，则只有在输入 Google 帐户信息之后才能完成设置过程。

对设备进行保护之后，如果需要恢复出厂设置，您需要解锁屏幕或输入 Google 帐户密码。此举确保只有您或您信任的人才能执行重置。

### 备注

- 执行恢复出厂设置之前，请务必牢记您添加至设备的 Google 帐户和密码。如果您在设置过程中无法提供帐户信息，那么您在执行恢复出厂设置之后将根本无法使用设备。

# 更多信息

## 开源软件提示信息

要获取本产品所包含的 GPL、LGPL、MPL 及其他开源证书下的源代码，请访问 <http://opensource.lge.com>。

除源代码以外，所有相关的许可条款、免责声明和版权通知均可供下载。

LG Electronics 在收到发送至 [opensource@lge.com](mailto:opensource@lge.com) 的电子邮件请求后，也可以 CD-ROM 的形式为您提供源代码，仅收取执行配送的费用（如介质费用、运输费和手续费）。此报价从您购买该产品之日起，三（3）年内有效。

## 商标

- 版权所有 © 2015 LG Electronics Inc. 保留所有权利。LG 和 LG 徽标是 LG 集团及其相关实体的注册商标。所有其他商标是其各自所有者的财产。
- Google™、Google Maps™、Gmail™、YouTube™、Hangouts™ 和 Play Store™ 是 Google, Inc. 的商标。
- Bluetooth® 是 Bluetooth SIG, Inc. 在全球的注册商标。
- Wi-Fi® 和 Wi-Fi 徽标是 Wi-Fi Alliance 的注册商标。
- 所有其他商标和版权是其各自所有者的财产。

## DivX HD

该 DivX Certified® 认证设备已通过严格测试，确保能播放 DivX® 视频。

为播放购买的 DivX 电影，需首先在 [vod.divx.com](http://vod.divx.com) 注册设备。在设备设置菜单中的 DivX VOD 部分找到注册码。

通过 DivX Certified® 认证，能播放 DivX® 视频，最高可达 HD 720p，包括付费内容。

DivX®, DivX Certified® 以及相关标志是 DivX, LLC 的商标，经授权使用。

## Dolby Digital Plus DOLBY DIGITAL PLUS

由 Dolby Laboratories 许可生产。Dolby、Dolby Digital Plus 和 double-D 符号是 Dolby Laboratories 的商标。

## 激光安全声明


### 警告!

该产品带有激光系统。要确保正确使用该产品，请仔细阅读此用户手册并保留以供将来参考。

如果装置需要维护，请联系授权服务中心。

未按此处指定程序进行控制、调整或操作，可能会引起有害的辐射外露。

要避免直接被激光束照射，请勿尝试打开外壳，或直接与激光接触。

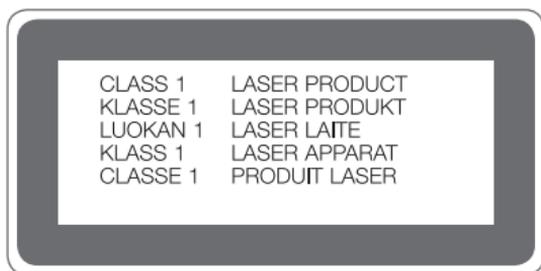

## 确认声明

LG Electronics 特此宣布此 LG-H961N 产品符合指令 1999/5/EC 的核心要求和其它相关规定。有关《确认声明》的副本，请访问 <http://www.lg.com/global/declaration>

## 使用皮革后盖的注意事项

- 此产品采用牛皮制成，可能因天然皮革的特性而具有不同的褶皱和形态。如果此产品被任何液体（水、汽水、海水、雨水、汗水、防晒霜、化妆品、湿气等）弄湿，它可能会褪色、变色或变形。
- 若此产品打湿或弄脏，请用干毛巾轻轻擦拭去除水渍，或用皮革膏擦除，并将其置于阴凉处晾干。当产品长期暴露在潮湿环境中时，可能会起皱或发霉。由于皮革的特性原因，在清洁后皮革形状可能无法恢复原状，并且当使用普通洗涤剂或有机溶剂进行清洁时，皮革可能会更加受污或变形。
- 当皮革被雨水或汗水打湿时，请谨慎使用并避免与衣物接触。否则可能会被染色，形成污迹。
- 由于皮革的性质原因，长时间的摩擦或过度用力可能会损坏皮革表面。



### 备注

- 因地区、服务提供商不同，某些插图和后盖类型可能与您的设备有所不同，如有更改，恕不提前通知。

# About this user guide

ENGLISH

Thank you for choosing LG. Please carefully read this user guide before using the device for the first time to ensure safe and proper use.

- Always use genuine LG accessories. The supplied items are designed only for this device and may not be compatible with other devices.
- This device is not suitable for people who have a visual impairment due to the touchscreen keyboard.
- Descriptions are based on the device default settings.
- Default apps on the device are subject to updates and support for these apps may be withdrawn without prior notice. If you have any questions about an app provided with the device, please contact a LG Service Centre. For user-installed apps, please contact the relevant service provider.
- Modifying the device's operating system or installing software from unofficial sources may damage the device and lead to data corruption or data loss. Such actions will violate your LG licence agreement and void your warranty.
- Some contents and illustrations may differ from your device depending on the region, service provider, software version, or OS version, and are subject to change without prior notice.
- Software, audio, wallpaper, images, and other media supplied with your device are licensed for limited use. If you extract and use these materials for commercial or other purposes, you may be infringing copyright laws. As a user, you are fully and entirely responsible for the illegal use of media.
- Additional charges may apply for data services, such as messaging, uploading, downloading, auto-syncing and location services. To avoid additional charges, select a data plan suitable to your needs. Contact your service provider to obtain additional details.

## Instructional notices



### WARNING

Situations that could cause injury to yourself and others, or damage to phone or other property.



### NOTE

Notices or additional information.

# Table of contents

Guidelines for safe and efficient use.....	6	Installing the Nano SIM card and battery.....	28
<b>Features you will love .....</b>	<b>13</b>	Charging the battery .....	30
Dual window.....	14	Optimizing battery life.....	30
Activating the Dual window.....	14	Inserting the memory card .....	31
Using the Dual window .....	14	Removing the memory card .....	32
<b>Fingerprint .....</b>	<b>15</b>	<b>Touch screen tips .....</b>	<b>32</b>
Registering your fingerprint.....	15	Tap or touch.....	32
<b>LG Health .....</b>	<b>16</b>	Touch and hold.....	33
<b>Mini view .....</b>	<b>16</b>	Drag.....	33
<b>Second screen .....</b>	<b>17</b>	Swipe or slide.....	33
Feature of Second screen.....	17	Double-tap.....	34
Turning on and off Second screen feature..	18	Pinch-to-Zoom.....	34
<b>Smart Notice.....</b>	<b>18</b>	<b>Google account setup .....</b>	<b>35</b>
<b>Snap movie .....</b>	<b>19</b>	Creating your Google account.....	35
<b>QSlide .....</b>	<b>20</b>	Signing into your Google account.....	35
Using QSlide.....	20	<b>Locking and unlocking the device.....</b>	<b>36</b>
<b>QuickMemo+ .....</b>	<b>21</b>	Fingerprint.....	36
Using Capture+ .....	21	KnockON.....	36
Viewing the saved memo.....	21	Knock Code .....	36
<b>QuickRemote.....</b>	<b>22</b>	Changing the screen lock method.....	37
Set up QuickRemote.....	22	Smart Lock.....	37
Universal remote.....	22	<b>Home screen .....</b>	<b>38</b>
Using QuickRemote.....	22	Getting to Know the Home Screen.....	38
<b>Quick Share .....</b>	<b>23</b>	Returning to recently-used applications .....	39
<b>Basics .....</b>	<b>24</b>	Customizing the Home screen .....	40
Accessories .....	25	Notifications panel.....	41
Phone layout .....	26	<b>Capturing a screenshot.....</b>	<b>43</b>
Turning Your Phone On and Off .....	28	<b>On-screen keyboard.....</b>	<b>44</b>
		Using the keypad and entering text.....	44
		Entering special characters.....	44
		To split or merge the keyboard.....	45

<b>Transferring data between a PC and the device .....</b>	<b>45</b>	Auto Mode on the viewfinder.....	56
Transferring data using USB connection.....	45	Manual Camera Mode on the viewfinder....	58
Transferring data using wireless connection .	46	Manual Video Mode on the viewfinder .....	59
<b>LG Bridge.....</b>	<b>46</b>	Snap Video Mode on the viewfinder.....	59
Features of LG Bridge .....	46	Interval shot.....	60
To download the LG Bridge software.....	47	Burst shot.....	60
<b>SmartShare .....</b>	<b>47</b>	Gesture shot.....	60
Using SmartShare .....	47	Gesture View.....	61
Enjoying content from nearby devices on your phone.....	47	Multi-point Auto Focus.....	61
<b>Apps .....</b>	<b>48</b>	8X Zooming.....	61
<b>Installing or uninstalling apps.....</b>	<b>49</b>	Once you have taken a photo.....	61
To open the Play Store app.....	49	Recording a video.....	62
To open a screen with details about an app.	49	After recording a video.....	62
To uninstall applications.....	49	<b>Gallery .....</b>	<b>63</b>
<b>Calls .....</b>	<b>50</b>	Viewing pictures.....	63
Making a call.....	50	Editing photos .....	63
Calling your contacts.....	50	Setting wallpaper.....	63
Answering and rejecting a call.....	50	Zooming in and out .....	64
Making a second call.....	51	Playing a video.....	64
Viewing your call logs.....	51	Editing videos.....	65
Change your call settings .....	51	Deleting photos/videos .....	65
<b>Contacts .....</b>	<b>52</b>	<b>E-mail.....</b>	<b>66</b>
Searching for a contact.....	52	Adding an account .....	66
Adding a new contact.....	52	Working with account folders.....	66
Favourites contacts.....	53	Composing and sending email.....	66
Creating a group.....	53	Changing an email general settings .....	67
<b>Messaging .....</b>	<b>54</b>	Deleting an email account.....	67
Sending a message.....	54	<b>Music .....</b>	<b>68</b>
Conversation view .....	54	Playing a song.....	68
Changing your messaging settings.....	54	Music player options.....	68
<b>Camera .....</b>	<b>55</b>	<b>Clock.....</b>	<b>70</b>
Taking a photo .....	55	Alarms .....	70
		Timer.....	70
		World clock.....	70
		Stopwatch.....	71
		<b>Calculator .....</b>	<b>71</b>

<b>Calendar</b> .....	<b>71</b>	<b>Display settings</b> .....	<b>87</b>
<b>Voice Recorder</b> .....	<b>72</b>	Second screen.....	87
Recording a sound or voice.....	72	Home screen.....	87
<b>Downloads</b> .....	<b>72</b>	Lock screen.....	88
<b>FM Radio</b> .....	<b>72</b>	Home touch buttons.....	88
<b>LG Backup</b> .....	<b>73</b>	More display settings.....	89
About backing up and restoring device data.....	73	<b>General settings</b> .....	<b>89</b>
To backup your device data .....	73	Language & keyboard.....	89
<b>Google apps</b> .....	<b>74</b>	Location .....	90
<b>Settings</b> .....	<b>76</b>	Accounts & sync.....	90
<b>Access the Settings menu</b> .....	<b>77</b>	Cloud .....	91
<b>Networks Settings</b> .....	<b>77</b>	Users.....	91
Dual SIM card.....	77	Accessibility.....	91
Wi-Fi.....	78	Mini view.....	92
Wi-Fi Direct.....	78	Shortcut key.....	93
Bluetooth.....	79	Fingerprints & security.....	93
Mobile data.....	80	Smart settings.....	94
Call.....	80	Quick Cover case.....	94
NFC .....	81	Dual window.....	94
Android Beam .....	82	Date & time .....	94
SmartShare Beam .....	83	Storage.....	94
Media server .....	83	Battery & power saving.....	95
Miracast.....	83	Smart cleaning .....	95
LG AirDrive.....	84	Apps.....	96
Printing.....	84	Default message app .....	96
USB tethering .....	85	Backup & reset.....	96
Wi-Fi hotspot.....	85	About phone.....	96
Bluetooth tethering.....	85	<b>Appendix</b> .....	<b>97</b>
Airplane mode.....	85	<b>Phone software update</b> .....	<b>98</b>
VPN .....	85	<b>FAQ</b> .....	<b>99</b>
Mobile networks .....	86	<b>Anti-Theft Guide</b> .....	<b>102</b>
<b>Sound &amp; notification settings</b> .....	<b>86</b>	<b>More information</b> .....	<b>103</b>
		Open source software notice information..	103
		Trademarks.....	103
		DivX HD .....	104

Dolby Digital Plus .....	104
Laser safety statement.....	105
Declaration of conformity .....	105
Precautions for use of leather back cover.	106

# Guidelines for safe and efficient use

Please read these simple guidelines. Not following these guidelines may be dangerous or illegal.

Should a fault occur, a software tool is built into your device that will gather a fault log. This tool gathers only data specific to the fault, such as signal strength, cell ID position in sudden call drop and applications loaded. The log is used only to help determine the cause of the fault. These logs are encrypted and can only be accessed by an authorised LG Repair centre should you need to return your device for repair.

## Exposure to radio frequency energy

Radio wave exposure and Specific Absorption Rate (SAR) information. This mobile phone model LG-H961N has been designed to comply with applicable safety requirements for exposure to radio waves. These requirements are based on scientific guidelines that include safety margins designed to assure the safety of all persons, regardless of age and health.

- The radio wave exposure guidelines employ a unit of measurement known as the Specific Absorption Rate, or SAR. Tests for SAR are conducted using standardised methods with the phone transmitting at its highest certified power level in all used frequency bands.
- While there may be differences between the SAR levels of various LG phone models, they are all designed to meet the relevant guidelines for exposure to radio waves.
- The SAR limit recommended by the International Commission on Non-ionizing Radiation Protection (ICNIRP) is 2 W/kg averaged over 10 g of tissue.
- The highest SAR value for this model phone tested for use at the ear is 0.594 W/kg (10 g) and when worn on the body is 0.196 W/Kg (10 g).

- This device meets RF exposure guidelines when used either in the normal use position against the ear or when positioned at least 1.5 cm away from the body. When a carry case, belt clip or holder is used for body-worn operation, it should not contain metal and should position the product at least 1.5 cm away from your body. In order to transmit data files or messages, this device requires a quality connection to the network. In some cases, transmission of data files or messages may be delayed until such a connection is available. Ensure the above separation distance instructions are followed until the transmission is completed.

## Product care and maintenance

- Always use genuine LG batteries, chargers and accessories approved for use with this particular phone model. The use of any other types may invalidate any approval or warranty applying to the phone and may be dangerous.
- Some contents and illustrations may differ from your device without prior notice.
- Do not disassemble this unit. Take it to a qualified service technician when repair work is required.
- Repairs under warranty, at LG's discretion, may include replacement parts or boards that are either new or reconditioned, provided that they have functionality equal to that of the parts being replaced.
- Keep away from electrical appliances such as TVs, radios and personal computers.
- The unit should be kept away from heat sources such as radiators or cookers.
- Do not drop.
- Do not subject this unit to mechanical vibration or shock.
- Switch off the phone in any area where you are required to by special regulations. For example, do not use your phone in hospitals as it may affect sensitive medical equipment.
- Do not handle the phone with wet hands while it is being charged. It may cause an electric shock and can seriously damage your phone.

- Do not charge a handset near flammable material as the handset can become hot and create a fire hazard.
- Use a dry cloth to clean the exterior of the unit (do not use solvents such as benzene, thinner or alcohol).
- Do not charge the phone when it is on soft furnishings.
- The phone should be charged in a well ventilated area.
- Do not subject this unit to excessive smoke or dust.
- Do not keep the phone next to credit cards or transport tickets; it can affect the information on the magnetic strips.
- Do not tap the screen with a sharp object as it may damage the phone.
- Do not expose the phone to liquid or moisture.
- Use accessories like earphones cautiously. Do not touch the antenna unnecessarily.
- Do not use, touch or attempt to remove or fix broken, chipped or cracked glass. Damage to the glass display due to abuse or misuse is not covered under the warranty.
- Your phone is an electronic device that generates heat during normal operation. Extremely prolonged, direct skin contact in the absence of adequate ventilation may result in discomfort or minor burns. Therefore, use care when handling your phone during or immediately after operation.
- If your phone gets wet, immediately unplug it to dry off completely. Do not attempt to accelerate the drying process with an external heating source, such as an oven, microwave or hair dryer.
- The liquid in your wet phone, changes the colour of the product label inside your phone. Damage to your device as a result of exposure to liquid is not covered under your warranty.

## Efficient phone operation

### Electronics devices

All mobile phones may receive interference, which could affect performance.

- Do not use your mobile phone near medical equipment without requesting permission. Avoid placing the phone over pacemakers, for example, in your breast pocket.
- Some hearing aids might be disturbed by mobile phones.
- Minor interference may affect TVs, radios, PCs etc.
- Use your phone in temperatures between 0 °C and 40 °C, if possible. Exposing your phone to extremely low or high temperatures may result in damage, malfunction, or even explosion.

### Road safety

Check the laws and regulations on the use of mobile phones in the area when you drive.

- Do not use a hand-held phone while driving.
- Give full attention to driving.
- Pull off the road and park before making or answering a call if driving conditions so require.
- RF energy may affect some electronic systems in your vehicle such as car stereos and safety equipment.
- When your vehicle is equipped with an air bag, do not obstruct with installed or portable wireless equipment. It can cause the air bag to fail or cause serious injury due to improper performance.
- If you are listening to music whilst out and about, please ensure that the volume is at a reasonable level so that you are aware of your surroundings. This is of particular importance when near roads.

## Avoid damage to your hearing



To prevent possible hearing damage, do not listen at high volume levels for long periods.

Damage to your hearing can occur if you are exposed to loud sound for long periods of time. We therefore recommend that you do not turn on or off the handset close to your ear. We also recommend that music and call volumes are set to a reasonable level.

- When using headphones, turn the volume down if you cannot hear the people speaking near you, or if the person sitting next to you can hear what you are listening to.

### **NOTE**

- Excessive sound pressure from earphones and headphones can cause hearing loss.

## Glass Parts

Some parts of your mobile device are made of glass. This glass could break if your mobile device is dropped on a hard surface or receives a substantial impact. If the glass breaks, do not touch or attempt to remove it. Stop using your mobile device until the glass is replaced by an authorised service provider.

## Blasting area

Do not use the phone where blasting is in progress. Observe restrictions and follow any regulations or rules.

## Potentially explosive atmospheres

- Do not use your phone at a refueling point.
- Do not use near fuel or chemicals.
- Do not transport or store flammable gas, liquid or explosives in the same compartment of your vehicle as your mobile phone or accessories.

## In aircraft

Wireless devices can cause interference in aircraft.

- Turn your mobile phone off before boarding any aircraft.
- Do not use it on the ground without permission from the crew.

## Children

Keep the phone in a safe place out of the reach of small children. It includes small parts which may cause a choking hazard if detached.

## Emergency calls

Emergency calls may not be available on all mobile networks. Therefore you should never depend solely on your phone for emergency calls. Check with your local service provider.

## Battery information and care

- You do not need to completely discharge the battery before recharging. Unlike other battery systems, there is no memory effect that could compromise the battery's performance.
- Use only LG batteries and chargers. LG chargers are designed to maximise the battery life.
- Do not disassemble or short-circuit the battery.
- Keep the metal contacts of the battery clean.
- Replace the battery when it no longer provides acceptable performance. The battery pack may be recharged hundreds of times before it needs replacing.
- Recharge the battery if it has not been used for a long time to maximise usability.
- Do not expose the battery charger to direct sunlight or use it in high humidity, such as in the bathroom.
- Do not leave the battery in hot or cold places, as this may deteriorate battery performance.

- Risk of explosion if battery is replaced by an incorrect type. Dispose of used batteries according to the instructions.
- If you need to replace the battery, take it to the nearest authorised LG Electronics service point or dealer for assistance.
- Always unplug the charger from the wall socket after the phone is fully charged to save unnecessary power consumption of the charger.
- Actual battery life will depend on network configuration, product settings, usage patterns, battery and environmental conditions.
- Make sure that no sharp-edged items such as animal's teeth or nails, come into contact with the battery. This could cause a fire.



**Features you will love**

# Dual window

The Dual window function splits the screen to enable multi-tasking, drag and drop interaction, auto-linking, and recently used apps.

## Activating the Dual window

- 1 Tap  >  >  > **General** tab > **Dual window**.
- 2 Tap  to toggle it On.
  - Checkmark the **Auto-open** checkbox to automatically open the Dual window function when you tap a link on the full screen or tap an email image attachment.

## Using the Dual window

- 1 Tap  >  > **Dual window**.

### NOTE


- While viewing an app, you can tap the  > **Dual window** to automatically set that app in the top window, then select the second app.
- 2 Tap the app icon you want to use. The first app you tap opens in a window at the top of the screen. The second app opens in the bottom window.
  - 3 Tap a window to select and use it.
    - A blue box appears around the selected window with a blue semicircle handle between the windows.
    - Drag the blue handle to change the window sizes (one larger and one smaller).
  - 4 Tap  to access the Dual window options.

# Fingerprint

The Fingerprint feature allows you to place a finger on the **Power/Lock Key** to unlock screen or see locked content.

## Registering your fingerprint

- 1 Tap  >  >  > **General tab** > **Fingerprints & security** > **Fingerprints.**
- 2 You need to set the secure screen lock before registering fingerprint. The lock will be used as an alternative method for fingerprints.
- 3 Place your finger on the **Power/Lock Key.**

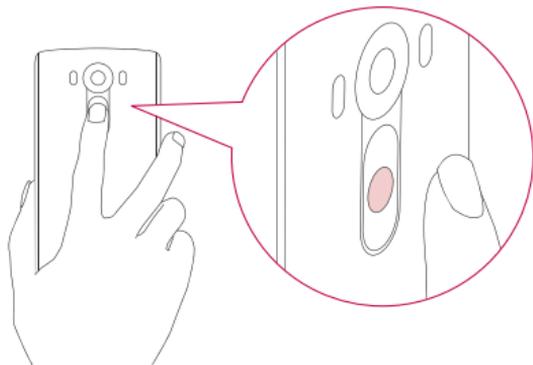

- 4 Lift your finger when the device vibrates and then place it on the **Power/Lock Key** again. Repeat this action using the same finger until the fingerprint is registered.

### **NOTE**

- Make sure that your fingers and the Power/Lock Key are clean and dry.
- Moisture, lotions, sweat, oils, cut or dry skin might affect fingerprint recognition. Certain activities can also temporarily affect fingerprint recognition, including exercising, showering, swimming, cooking or other conditions or changes that affect your fingerprint.
- Cover the Power/lock Key completely. don't press too quickly, hardly move your finger while finger is scanning.
- As you use the fingerprint, it will continue to learn and improve recognition of your fingerprint.

# LG Health

The LG Health helps you manage your health and maintain good exercise habits by tracking logs and competing with people.

- 1 Tap  >  > .
- 2 Read and agree to the terms and conditions.
- 3 On the Profile and goal page, enter your profile information and tap Save.
- 4 Use the options below to begin tracking activity.


## NOTE

- This feature is provided for user convenience. Please use for reference only.

## Mini view

To shrink the screen for use with one hand, swipe left or right across the Home touch buttons.

To close the Mini view, tap .

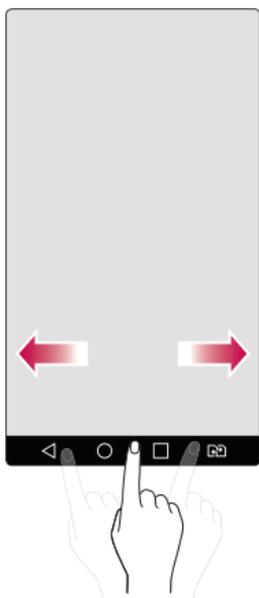


# Second screen

When the home main is turned off, you can see the useful information such as weather, date, time, battery status and notifications.

## Feature of Second screen

- You can set the function on the second screen when main screen is turned on. (Recent apps, App shortcuts, Music Player, Quick contacts, Upcoming plans and Signature)
- You can see notifications and use the function via second screen while you are use the entire screen apps.
- You can use the control panel during take a picture or recording.
- To turn on/off the second screen, filp over the device.

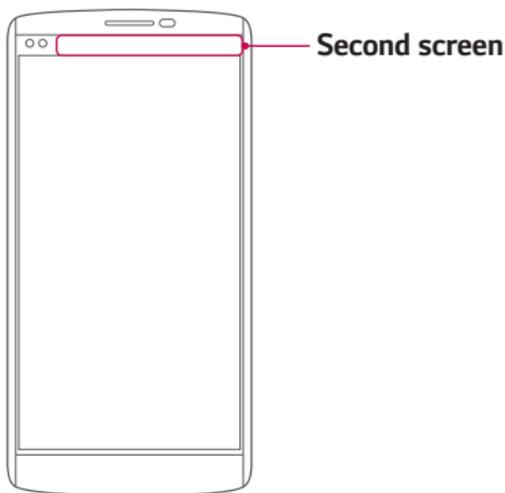

## Turning on and off Second screen feature

You can turn on and off the Second screen feature and select what to display.

- Tap  >  >  > **Display** tab > **Second screen.**

<b>Main screen is ON</b>	Provide the useful function for multi tasking.
<b>Main screen is OFF</b>	Always show the useful information and provide quick launch of frequently used functions.

## Smart Notice

Improve your lifestyle with Smart Notice cards.

These cards provide customized suggestions based on the time of day, your location, and how you use your phone.

- Touch and hold the empty part of the Home screen > **Widgets** > **Smart Notice.**

# Snap movie

You can make a story movie using short videos.

1 Tap  >  >  > 

2 Tap  to record for three seconds scene.

OR

Touch and hold  to record for desired time.

3 Repeat this action.

## NOTE

- Movies can be stored for up to one minute.

4 After you are done scene, tap **SAVE**.

## NOTE

- You can edit for various video effects and background music in Gallery.

# QSlide

From any screen, use the Notification panel to easily access and use the Notepad, Calendar, Calculator, and more with QSlide.

## Using QSlide

1 Touch and slide the status bar downward > tap **QSlide**.

### NOTE

- While using applications that support QSlide, tap  > QSlide. The function is displayed as a small window on your screen.

2 Using the following options.

1		Tap to expand the window to full window size.
2		Tap to adjust the window's transparency.
3		Tap to close the QSlide window.
4		Drag to adjust the size of the QSlide window.

3 You can use and tap the screen under the **QSlide** windows when the transparency bar is not full .

### NOTE

- QSlide can support up to two windows at the same time.

# QuickMemo+

The QuickMemo+ feature allows you to create memos.

## Using Capture+

You can use Capture+ function to easily and efficiently create memos during a call, with a saved picture or on the current phone screen.

- 1 Touch and slide the status bar downward and tap .
- 2 Create a memo using the following options:

	Tap to save the memo you've created.
	Tap to undo the most recent action.
	Tap to redo the most recently deleted action.
	Tap to insert text into your memo.
	Tap to select the pen type and colour.
	Tap to use the eraser to erase the pen marks on the memo.
	Tap to crop the image of memo.
	Tap to select the share or paper style.
	Tap to hide or display the toolbar.

### NOTE

- Please use a fingertip while using the QuickMemo+ feature. Do not use your fingernail.

- 3 Tap  to save the current memo to the QuickMemo+ or the Gellary.

## Viewing the saved memo

Tap  >  >  and select the **Capture+** album.

# QuickRemote

QuickRemote turns your phone into a Universal Remote for your home TV, set-top box and audio system, and more.

## Set up QuickRemote

- 1 Touch and slide the status bar downward and tap  > **ADD REMOTE**.  
If you can not see , tap  > checkmark **QuickRemote** to enable.

OR

Tap  >  >  > tap .

- 2 Select the type and brand of the device, then follow the on-screen instructions to configure the device.

## Universal remote

You can create your own personalized universal remote and choose where to place all of the buttons.

- 1 Tap  >  >  >  > **Universal remote**.
- 2 Enter the remote name.
- 3 Place the buttons you want on the remote at the desired location.
- 4 Follow the next step and learn the instructions.

## Using QuickRemote

Once you have completed the initial set up, you can easily access the QuickRemote from the Notification panel. Open the Notification panel and use the QuickRemote functions.


### NOTE

- The QuickRemote operates the same way as an ordinary remote control infrared (IR) signals. Be careful not to cover the infrared sensor at the top of the phone when you use the QuickRemote function. This function may not be supported depending on the model, the manufacturer or service company.

# Quick Share

After take a photo or recroding a video, you can share photos and videos. Tap the appears icon or touch and slide to left the app. Then select the desired apps.

- Tap  >  >  > 

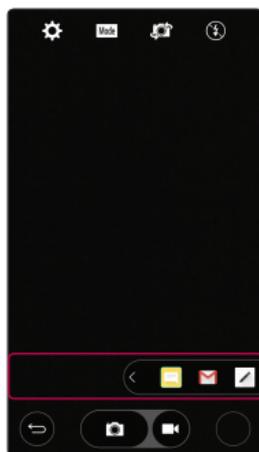

## NOTE

- The app appears to the user, arranged as a quick share, depending on the type and frequency.



**Basics**

# Accessories



These accessories are available for use with the your phone.

- Travel Adaptor
- Quick Start Guide
- Stereo Headset
- USB Cable
- Battery

## NOTE

- Items described below may be optional.
- Always use genuine LG accessories. The supplied items are designed only for this device and may not be compatible with other devices.
- The items supplied with the device and any available accessories may vary depending on the region or service provider.

# Phone layout

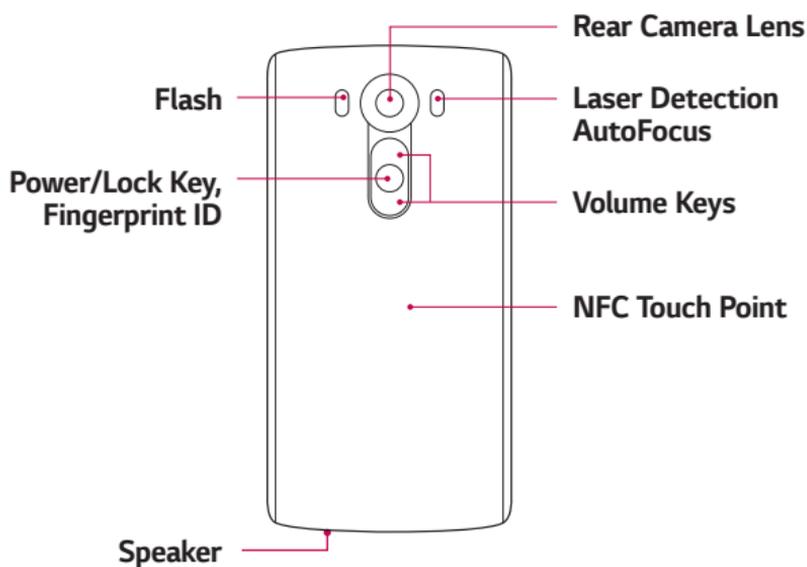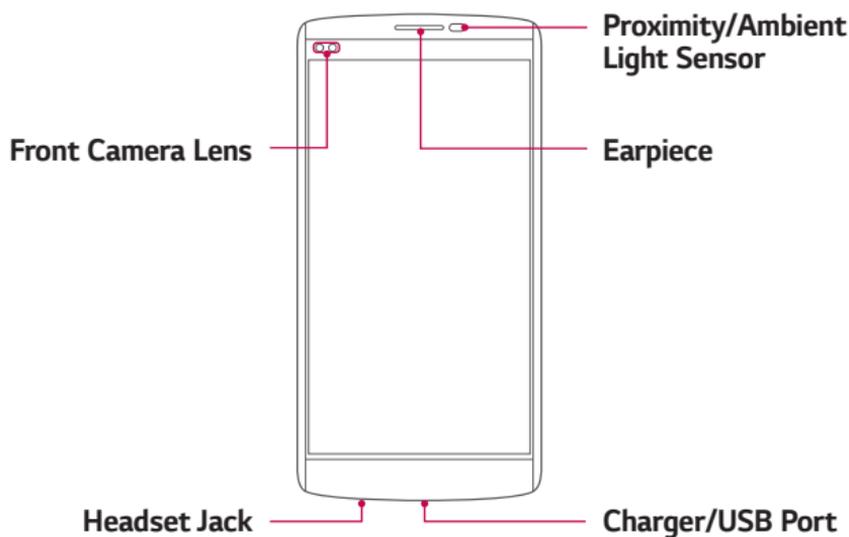

<b>Power/Lock Key</b>	<ul style="list-style-type: none"><li>· Turn your phone on/off by pressing and holding this key.</li><li>· Short press to turn on/off the screen.</li></ul>
<b>Volume Keys</b>	<p><b>While screen is off:</b></p> <ul style="list-style-type: none"><li>· Press <b>Volume Up Key</b> twice to launch Capture+.</li><li>· Press <b>Volume Down Key</b> twice to launch Camera and take a picture.</li></ul> <p><b>On the Home screen:</b></p> <ul style="list-style-type: none"><li>· Control ringer volume.</li></ul> <p><b>During a call:</b></p> <ul style="list-style-type: none"><li>· Control your earpiece volume when playing audio/video.</li><li>· Control volume continuously.</li></ul>

 **NOTE : Proximity Sensor**

- When receiving and making calls, the proximity sensor automatically turns the backlight off and locks the touch screen by sensing when the phone is near your ear. This extends battery life and prevents you from unintentionally activating the touch screen during calls.

 **WARNING**

- The NFC antenna for this model is on the back cover. Be careful not to damage the NFC touch point on the phone, which is part of the NFC antenna.

 **WARNING**

- Placing a heavy object on the phone or sitting on it can damage the display and touch screen functions. Do not cover the proximity sensor with screen protectors or any other type of protective film. This could cause the sensor to malfunction.

# Turning Your Phone On and Off

## Turning your phone on

Press and hold the **Power/Lock Key** on the back of the phone for a couple of seconds until the screen turns on.

## Turning your phone off


- 1 Press and hold the **Power/Lock Key** on the back of the phone until the Phone options menu appears.
- 2 Tap Power off in the Phone options menu.
- 3 Tap OK to confirm that you want to turn off the phone.

# Installing the Nano SIM card and battery


Insert the Nano SIM card provided by the mobile telephone service provider, and the included battery.

## WARNING


- Do not insert a memory card into the Nano SIM card slot. If a memory card happens to be lodged in the Nano SIM card slot, take the device to a LG Service Centre to remove the memory card.
- 1 To remove the back cover, hold the phone firmly in one hand. With your other hand, lift off the back cover with your thumbnail as shown in the figure below.

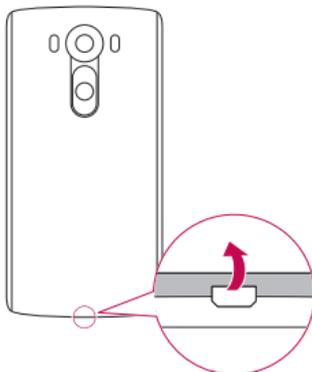


- 2** Slide the Nano SIM card into the Nano SIM card slot as shown in the figure. Make sure the gold contact area on the card is facing downward.

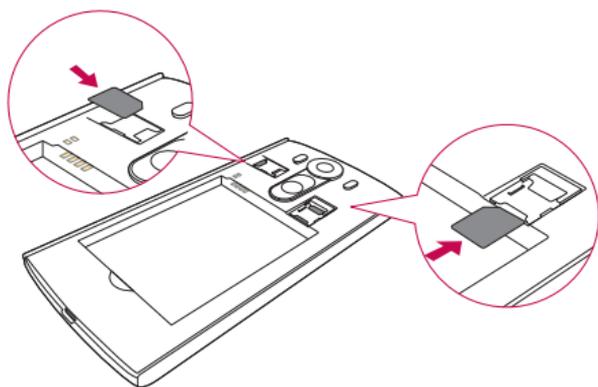

- 3** Insert the battery.

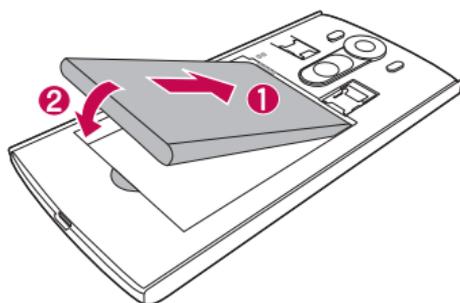

- 4** To replace the cover onto the device, align the back cover over the battery compartment and press it down until it clicks into place.

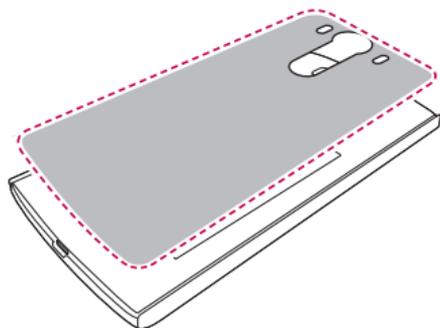


# Charging the battery

Charge the battery before using it for first time. Use the charger to charge the battery. A computer can also be used to charge the battery by connecting the phone to it using the USB cable.

## **WARNING**

- Use only LG-approved chargers, batteries and cables. If you use unapproved chargers, batteries or cables, it may cause battery charging delay. Or this can cause the battery to explode or damage the device, which are not covered by the warranty.

The charger connector is located at the bottom of the phone. Insert the charger and plug it into a power outlet.

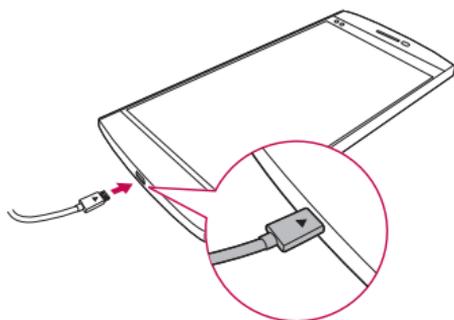

## **NOTE**

- Do not open the back cover while your phone is charging.

# Optimizing battery life

Extend your battery's power by turning off features that you do not need to run constantly in the background. You can monitor how applications and system resources consume battery power.

## Extending your phone's battery life:

- Turn off radio communications when you are not using. If you are not using Wi-Fi, Bluetooth or GPS, turn them off.
- Reduce screen brightness and set a shorter screen timeout.

- Turn off automatic syncing for Gmail, Calendar, Contacts and other applications.
- Some applications you download may consume battery power.
- While using downloaded applications, check the battery charge level.

## Inserting the memory card

Your device supports up to a 2TB microSD card. Depending on the memory card manufacturer and type, some memory cards may not be compatible with your device.


### **WARNING**

- Some memory cards may not be fully compatible with the device. Using an incompatible card may damage the device or the memory card, or corrupt the data stored in it.

### **NOTE**

- Frequent writing and erasing of data shortens the lifespan of memory cards.

- 1 Remove the back cover.
- 2 Insert a memory card with the gold-coloured contacts facing downwards.

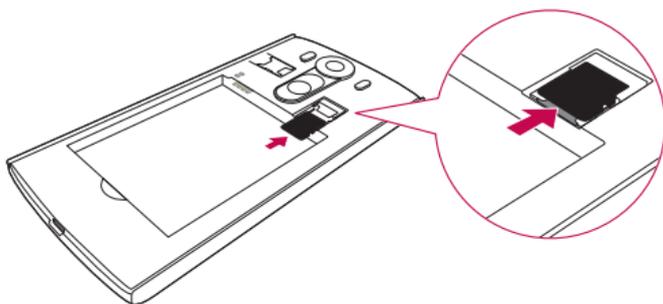

- 3 Replace the back cover.

# Removing the memory card

Before removing the memory card, first unmount it for safe removal.

1 Tap  >  >  > **General tab** > **Storage** > **Unmount SD card**.

2 Remove the back cover and pull out the memory card.

## **WARNING**

- Do not remove the memory card while the device is transferring or accessing information. Doing so can cause data to be lost or corrupted or damage to the memory card or device. It is not responsible for losses that result from the misuse of damaged memory cards, including the loss of data.

# Touch screen tips


Here are some tips on how to navigate on your phone.

## **NOTE**

- Do not press too hard; the tap screen is sensitive enough to pick up a light, yet firm tap.
- Use the tip of your finger to tap the option you want. Be careful not to tap any other buttons.


## Tap or touch

A single finger tap selects items, links, shortcuts and letters on the on-screen keyboard.

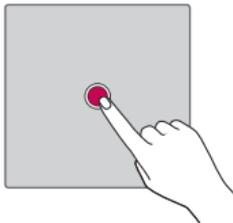


## Touch and hold

Touch and hold an item on the screen by tapping it and not lifting your finger until an action occurs.

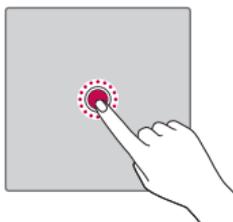


## Drag

Touch and hold an item for a moment and then, without lifting your finger, move your finger on the screen until you reach the target position. You can drag items on the Home screen to reposition them.

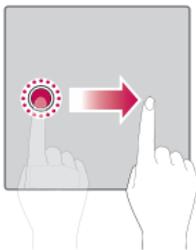


## Swipe or slide

To swipe or slide, quickly move your finger across the surface of the screen, without pausing when you first tap it (so you don't drag an item instead).

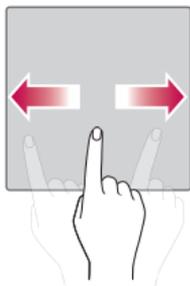


## Double-tap

Double-tap to zoom on a webpage or a map.

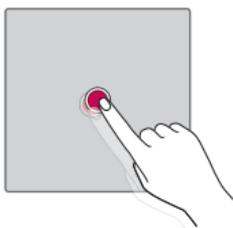

## Pinch-to-Zoom

Use your index finger and thumb in a pinching or spreading motion to zoom in or out when using the browser, Maps, or when viewing pictures.

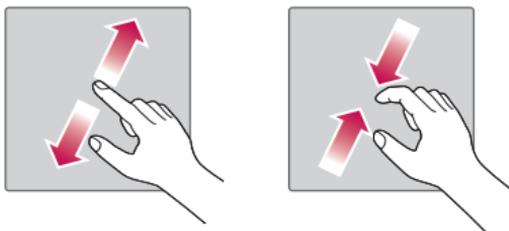

# Google account setup

The first time you open a Google application on your phone, you will be required to sign in with your existing Google account. If you do not have a Google account, you will be prompted to create one.

## Creating your Google account

- 1 Tap  >  >  > **General tab** > **Accounts & sync**.
- 2 Tap **ADD ACCOUNT** > **Google** > **Or create a new account**.
- 3 Enter your first and last name, then tap **NEXT**.
- 4 Enter your phone number for security tap **NEXT**.
- 5 Follow the instructions and enter the required and optional information about the account. Wait while the server creates your account.

## Signing into your Google account

- 1 Tap  >  >  > **General tab** > **Accounts & sync**.
- 2 Tap **ADD ACCOUNT** > **Google**.
- 3 Enter your email address and tap **NEXT**.
- 4 Enter your password and tap **NEXT**.
- 5 After signing in, you can use Gmail and take advantage of Google services on your phone.
- 6 Once you have set up your Google account, your phone will automatically synchronise with your Google account on the web (if a data connection is available).

After signing in, your phone will sync with your Google services, such as Gmail, Contacts, and Google Calendar. You can also use Maps, download applications from Play Store, back up your settings to Google servers, and take advantage of other Google services on your phone.

# Locking and unlocking the device

Pressing the Power/Lock Key turns off the screen and puts the device into lock mode. The device automatically gets locked if it is not used for a specified period. This helps to prevent accidental taps and saves battery power.

To unlock the device, press the Power/Lock Key and swipe the screen in any direction.

## Fingerprint

The Fingerprint feature allows you to place a finger on the **Power/Lock Key** to unlock screen. Refer to **Fingerprint** in **Features you will love**.

## KnockON

The KnockON feature allows you to double-tap the screen to easily turn it on or off.

### Turning the screen on

- 1 Double-tap the centre of the Lock screen to turn the screen on.
- 2 Unlock the screen or access any of the available shortcuts or widgets.

### Turning the screen off

- 1 Double-tap an empty area of the Home screen or the status bar.
- 2 The screen will turn off.

#### NOTE

- Tap on the centre area of the screen. If you tap on the bottom or the top area, the recognition rate may decrease.

## Knock Code

The Knock Code feature allows you to create your own unlock code using a combination of knocks on the screen. You can access the Home screen directly when the screen is off by tapping the same sequence on the screen.

## NOTE

- If you enter the wrong Knock Code 5 times, it will compulsorily take you to your Google account log in/backup PIN.
- Use the fingertip instead of finger nail to tap the screen for turning it on or off.

## Setting up the Knock Code feature

- 1 Tap  >  >  > **Display** tab > **Lock screen** > **Select screen lock** > **Knock Code**.
- 2 Tap the squares in a pattern to set your Knock Code. Your Knock Code pattern can be 3 to 8 taps.

## Unlocking the screen using the Knock Code

You can unlock the screen by tapping the Knock Code pattern you already set, when the screen turns off.

## Changing the screen lock method

You can change the way that you lock the screen to prevent others accessing your personal information.

- 1 Tap  >  >  > **Display** tab > **Lock screen** > **Select screen lock**.
- 2 Select a desired screen lock from None, Swipe, Knock Code, Pattern, PIN and Password.

## NOTE

- Create a Google account before setting an unlock pattern and remember the Backup PIN you created when creating your pattern lock.

## Smart Lock

You can use Smart Lock to make unlocking your phone easier. You can set it to keep your phone unlocked when you have a trusted Bluetooth device connected to it, when it's in a familiar location like your home or work, or when it recognises your face.


## Setting up Smart Lock feature

- 1 Tap  >  >  > **Display** tab > **Lock screen** > **Smart Lock**.
- 2 Before you add any trusted devices, trusted places, or trusted face, you need to set up a screen lock (Knock Code, Pattern, PIN or Password).

## Home screen

The Home screen is the starting point for many applications and functions. It allows you to add items like app shortcuts and Google widgets to give you instant access to information and applications. This is the default canvas and accessible from any menu by tapping .

## Getting to Know the Home Screen

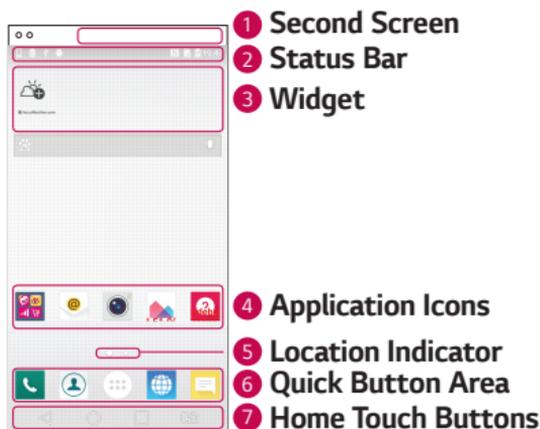

- 1 **Second Screen** - Second screen at the top of the screen the user can configure the desired app. Try to quickly and easily run your favorite app by setting the second screen.
- 2 **Status Bar** - Shows the phone's status information, including the time, signal strength, battery status and notification icons.
- 3 **Widget** - Widgets are self-contained applications that can be accessed through the Apps drawer or on the Home screen. Unlike a shortcut, a Widget can function as an on-screen application.

- 4 **Application Icons** - Tap an icon (application, folder, etc.) to open and use it.
- 5 **Location Indicator** - Indicates which Home screen canvas you are currently viewing.
- 6 **Quick Button Area** - Provides one-touch access to the function in any Home screen canvas.

## 7 Home Touch Buttons

 <b>Back Button</b>	Returns to the previous screen. Also closes pop-up items, such as menus, dialog boxes and the on-screen keyboard.
 <b>Home Button</b>	Return to the Home screen from any screen.
 <b>Overview Button</b>	Displays recently used applications. If you touch and hold this button, it opens a menu of available options.
 <b>SIM Switch Button</b>	Choose which SIM card you're going to use. Touch and hold to go to Dual SIM card settings.

## To view other Home screen panels

The operating system provides multiple Home screen canvases to provide more space for adding icons, widgets and more.

- Slide your finger left or right across the Home screen to access additional canvases.

## Returning to recently-used applications

Multitasking is easy with Android; you can keep more than one application running at the same time. There is no need to quit an application before opening another. Use and switch between several open applications.

Android manages each application, stopping and starting them as needed to make sure that idle applications don't consume resources unnecessarily.

- 1 Tap . A list of recently used applications will be displayed.

- 2 Tap the application you want to access. This does not stop the previous app from running in the background. Make sure to tap to back out of an app after using it.
  - To close an app from the recent apps list, swipe the app preview to the left or right. To clear all apps, tap **Clear all**.

## Customizing the Home screen

You can customise your Home screen by adding apps and widgets and changing wallpapers.

### Adding items on your Home screen

- 1 Touch and hold the empty part of the Home screen.
- 2 In the Add Mode menu, select the item you want to add. You then see this added item on the Home screen.
- 3 Drag it to the desired location and lift your finger.

#### NOTE

- To add an application icon to the Home screen from the Apps screen, touch and hold the application you want to add.

### Removing an item from the Home screen

While on the Home screen, touch and hold the icon you want to remove > drag it to .

### Adding an app to the Quick Button Area

From the Apps screen or on the Home screen, touch and hold an application icon and drag it to the Quick Button Area. Then release it in the desired location.

### Removing an app from the Quick Button Area

Touch and hold the desired Quick Button, drag it to .

#### NOTE

- The **Apps Button**  cannot be removed.

## Customizing app icons on the Home screen


- 1 Touch and hold an application icon until it unlocks from its current position, then release it. The editing icon  appears in the upper-right corner of the application.
- 2 Tap the application icon again and select the desired icon design and size.
- 3 Tap **OK** to save the change.

## Notifications panel

Notifications alert you to the arrival of new messages, calendar events and alarms, as well as ongoing events, such as when you are on a call.

### Opening the notifications panel

Swipe down from the status bar to open the notifications panel. To close the notifications panel, swipe the screen upwards or tap .

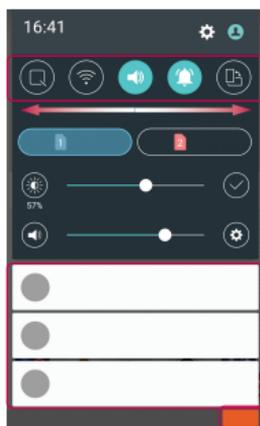


- 1 Tap each quick setting button to toggle it on/off. Touch and hold the desired button to directly access the settings menu for the function. To see more toggle buttons, swipe left or right. Tap  to remove, add or rearrange quick setting buttons.
- 2 Current notifications are listed, each with a brief description. Tap a notification to view it.

- 3 Tap to clear all the notifications.

When a notification arrives, its icon appears at the top of the screen. Icons for pending notifications appear on the left, and system icons, such as Wi-Fi and battery strength are shown on the right.

## Indicator icons on the Status Bar

Indicator icons appear on the status bar at the top of the screen to report missed calls, new messages, calendar events, device status and more.

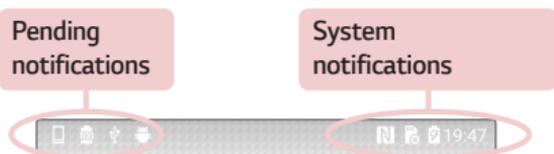

The icons displayed at the top of the screen provide information about the status of the device. The icons listed in the table below are some of the most common ones.

Icon	Description
	No SIM card inserted
	No network signal available
	Airplane mode is on
	Connected to a Wi-Fi network
	Wired headset connected
	Call in progress
	Missed call

Icon	Description
	A song is currently playing
	No interruptions, not even alarms
	Vibrate mode is on
	Battery fully charged
	Battery is charging
	The phone is connected to a PC via a USB cable
	Downloading data

	Bluetooth is on		Uploading data
	System warning		GPS is on
	An alarm is set		Data is synchronizing
	New voicemail available		Choose input method
	New text or multimedia message		Wi-Fi hotspot is active
	NFC is on		LG AirDrive connected
	Miracast connected		

### NOTE

- The icon's location in the status bar may differ according to the function or service.
- The available options may vary depending on the region or service provider.

## Capturing a screenshot

Press and hold the **Volume Down Key** and the **Power/Lock Key** at the same time for 2 seconds to capture a screenshot of the current screen. To view the captured image, tap the  >  >  > the **Screenshots** folder.

# On-screen keyboard

You can enter text using the on-screen keyboard. The on-screen keyboard appears on the screen when you tap an available text entry field.

## Using the keypad and entering text

Icon	Description
	Tap once to capitalise the next letter you type. Double-tap for all caps.
	Tap to go to the keyboard settings. Touch and hold to change entering text method.
	Tap to enter a space.
	Tap to create a new line.
	Tap to delete the previous character.

## Entering special characters

The on-screen keyboard allows you to enter special characters.

For example, to input "á", touch and hold the "a" button until the pop-up appears and displays related special characters. Without lifting the finger, drag your finger to the desired special character. Once it's highlighted, lift your finger.

### NOTE

- A symbol at the top right corner of a key indicates that additional characters are available for that key.

## To split or merge the keyboard

You can split the keyboard in half by spreading two fingers horizontally on the landscape keyboard. This makes it easier to type using your thumbs. Make sure the Split keyboard setting is enabled to use this feature.

- Tap  >  >  > **General tab** > **Language & keyboard** > **LG Keyboard** > **Keyboard height and layout** > **Split keyboard**.



## Transferring data between a PC and the device

You can copy or move data between a PC and the device.

### Transferring data using USB connection

- 1 Connect your device to a PC using the USB cable that came with your phone.
- 2 Open the Notifications panel, tap the current connection type, and select **Media device (MTP)**.
- 3 A window will pop-up on your PC, allowing you to transfer the desired data.

#### **NOTE**

- The LG Android Platform Driver is required to be installed on your PC to be able to detect the phone.
- Check the requirements for using **Media device (MTP)**.

Items	Requirement
OS	Microsoft Windows XP SP3, Vista or higher
Window Media Player version	Windows Media Player 10 or higher

## Transferring data using wireless connection

You can share or manage content from your phone on PC via Wi-Fi or mobile data using **LG AirDrive** function.

### NOTE

- If you want to use the LG AirDrive, please refer to **LG AirDrive** section in **Settings**.

## LG Bridge

LG Bridge is an application that helps you conveniently manage images, music, videos, documents, etc. saved on a LG mobile device on your PC. Also, you can back up your files such as contacts and images to your PC or update software of a mobile device.

### NOTE

- You can see detailed instructions on how to use LG Bridge in Help menu after installing and opening the program.
- Supported features may vary depending on the device.
- The LG unified USB driver is a program required to connect an LG mobile phone to a PC. It is automatically installed when installing LG Bridge.

## Features of LG Bridge

- Manage contents from your phone on PC via Wi-Fi or mobile data.
- Back up and restore the data of your mobile device via USB.
- Update software of a mobile device on your PC via USB.

## To download the LG Bridge software

- 1 Go to [www.lg.com](http://www.lg.com).
- 2 Tap the Search button and enter the model name to search for the model.
- 3 Select the model information and click **GO**.
- 4 Scroll down, select the **PC SYNC** tab > **Windows** or **Mac OS** > **DOWNLOAD** to download LG Bridge.

## SmartShare

SmartShare allows you to share multimedia content using Gallery and Music Apps.

### Using SmartShare

- 1 While viewing the content you want to share, tap  > **SmartShare** or .
- 2 Tap the device you want to share from the list.
  - If the device is not displayed on the list, make sure that Wi-Fi, Wi-Fi Direct, or Bluetooth is turned on. Then tap **RESCAN**.

### Enjoying content from nearby devices on your phone

- 1 To connect nearby devices to your device, tap the **Nearby devices** option on the **Gallery** and **Music** apps.
  - Make sure that your device and nearby devices are connected to the same Wi-Fi network and that the DLNA service on the nearby device is turned on.
- 2 Tap the device you wish to connect to.  
If the device is not listed, tap **Search nearby devices**.
- 3 After a connection is established, you can enjoy the content on your device.

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

**Apps**

# Installing or uninstalling apps

Play Store allows you to browse and search for free and paid applications.

## To open the Play Store app

Tap  >  > .

## To open a screen with details about an app

At any time while browsing in Play Store, tap an app to open its details screen.

The App details screen includes a description, ratings, comments, and related information about the app. From this screen, you can download, install, uninstall, rate the app, and more.

## To uninstall applications

- 1 Tap  >  >  > **General** tab > **Apps**.
- 2 Once all applications appear, scroll to and select the application you want to uninstall.
- 3 Tap **Uninstall**.

# Calls

You can enjoy clear calling across the region.

## Making a call

- 1 Tap  > .
- 2 Enter the number using the dialer. To delete a digit, tap .
- 3 After entering the desired number, tap  to place the call.
- 4 To end the call, tap .

### NOTE

- To enter "+" to make international calls, touch and hold .

## Calling your contacts

- 1 Tap  > .
- 2 Scroll through the contact list. You can also enter the contact's name in the Search field or scroll along the alphabet letters on the right edge of the screen.
- 3 In the list that is displayed, tap the contact you want to call.

## Answering and rejecting a call

- Swipe  in any direction to answer an incoming call.
- Swipe  in any direction to decline an incoming call.

### NOTE

- Swipe  if you want to decline a call and send a message to the caller.

## Making a second call

- 1 During your first call, tap  > **Add call** and enter the number.
- 2 Tap .
- 3 Both calls are displayed on the call screen. Your initial call is locked and put on hold.
- 4 Tap the displayed number to toggle between calls. Or tap  to start a conference call.
- 5 To end all calls, tap .

### **NOTE**

- You are charged for each call you make.

## Viewing your call logs

- 1 Tap  >  > **Call logs** tab.
- 2 View a list of all dialed, received and missed calls.

### **NOTE**

- Tap any call log entry to view the date, time and duration of the call.
- Tap  > **Delete all** to delete all of the recorded items.

## Change your call settings

You can configure phone call settings, such as call forwarding, as well as other special features offered by your carrier.

- 1 Tap  > .
- 2 Tap  > **Call settings** and configure the desired options.

# Contacts

You can add contacts on your phone and synchronise them with the contacts in your Google Account or other accounts that support syncing contacts.

## Searching for a contact

- 1 Tap  > .
- 2 Tap **Search contacts** and enter the contact name using the keyboard. Matches are displayed as you begin to type.

## Adding a new contact

- 1 Tap  > .
- 2 Enter the new contact's number.
- 3 Tap  > **Add to Contacts** > **New contact**.
- 4 If you want to add a picture to the new contact, tap the image icon. Choose **Take photo** or **Select from Gallery**.
- 5 Enter the desired information for the contact.
- 6 Tap **SAVE**.

## Favourites contacts

You can classify frequently called contacts as favourites.

### Adding a contact to your favourites

- 1 Tap  > .
- 2 Tap a contact to view its details.
- 3 Tap the star at the top right of the screen. The star turns yellow.

### Removing a contact from your favourites list

- 1 Tap  >  > **Favourites** tab.
- 2 Choose a contact to view its details.
- 3 Tap the yellow star at the top right of the screen. The star turns a dark colour and the contact is removed from your favourites.

## Creating a group

- 1 Tap  >  > **Groups** tab.
- 2 Tap  > **New group**.
- 3 Enter a name for the new group. You can also set a distinct ringtone for the newly created group.
- 4 Tap **Add members** to add contacts to the group and tap **ADD**.
- 5 Tap **SAVE** to save the group.

### **NOTE**

- If you delete a group, the contacts assigned to that group will not be lost. They will remain in your contact list.

# Messaging

Your phone combines text and multimedia messaging into one intuitive, easy to use menu.

## NOTE

- You may be charged for each message you send. Please consult with your service provider.

## Sending a message

1 Tap  >  > .

2 Tap , then select one or more entries from your Contacts list.

OR

Enter a contact name or contact number into the **To** field. As you enter the contact name, matching contacts appear. You can tap a suggested recipient and add more than one contact.

3 Tap the text field and start entering your message.

4 Tap  to open the options menu. Choose from any of the available options.

5 Tap  to attach the file that you want to share with message.

6 Tap **SIM1/SIM2 Send** to send your message.

## Conversation view

Messages exchanged with another party are displayed in chronological order so that you can conveniently see and find your conversations.

## Changing your messaging settings

Your phone's messaging settings are predefined to allow you to send messages immediately. You can change the settings based on your preferences.

- Tap  >  >  > **Settings**.

# Camera

You can use the camera or camcorder to take and share pictures and videos.

- Tap  >  > .

## Taking a photo


- 1 Frame your subject on the screen.
- 2 A square around the subject indicates that the camera has focused.
- 3 Tap  to take a photo. Your picture will be automatically saved to the Gallery.

## Camera mode options



- |   |   |
|---|---|
| 1 | <b>Snap Video mode</b> – Allows you to make a story video.  |
| 2 | <b>Manual Video Mode</b> – Allows you to record video as well. You can control every detail option manually.  |
| 3 | <b>Manual Camera Mode</b> – Allows you to use professional-type settings to capture exactly the shot. You can control every detail option manually. |
| 4 | <b>Auto Mode</b> – Allows you to apply commonly-used settings for your photos and videos.   |
| 5 | <b>Simple Mode</b> – Allows you to take simple, quick photos. There are no additional settings and video capture is not available in this mode.     |

## Auto Mode on the viewfinder

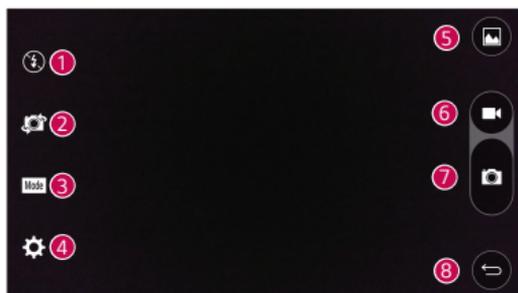

1		Allows you to manage the camera's flash.
2		Tap to swap between the rear camera lens and the front camera lens.
3		Allows you to select the shot mode for the picture.
4		Tap this icon to open the camera settings menu.
5		Tap to view the last photo or video you recorded.
6		Tap to start recording.
7		Tap to take a photo.
8		Tap to exit the camera.

### NOTE

- Be sure to clean the protective lens cover with a microfiber cloth before taking pictures. A lens cover with smudges from fingers can cause blurry pictures with a "halo" effect.

## Using the mode settings

In the camera viewfinder, tap  to show the mode options. Tap each icon to use the following mode settings.

	Taking photos or videos in different views with the front and rear cameras.
	Allows you to take a panoramic picture.
	Recording a video for viewing it in slow motion.
	Recording a video for viewing it in fast motion.

## Using the advanced settings

In the camera viewfinder, tap  to show the advanced options. Tap each icon to adjust the following camera settings.

	Combines photos taken at multiple exposures into one optimal photo to get a better photo in difficult lighting situations.
	Set the ratio of your picture and the quality of video.
	Allows you to take pictures with voice commands. When on, you just say " <b>Cheese</b> ", " <b>Smile</b> ", " <b>LG</b> ", etc. to take a picture.
	Set your camera's timer. This is ideal if you want to be a part of the picture or video.
	Allows you to take better pictures and record better videos by displaying a grid line for help with alignment.
	Tap to remove motion blur especially when you are walking or moving a lot.
	Set the storage location for your pictures and videos. Choose from <b>IN</b> (internal memory) and <b>SD</b> (memory card). This menu appears only when the SD card is inserted.




Allows you to learn how a function works. This icon will provide you with a help guide.

## Manual Camera Mode on the viewfinder




1		Tap to select a file format between the JPEG and the DNG.
2		Tap to improve colour quality in various lighting conditions.
3		Tap to use the manual focus mode.
4		Tap to adjust the brightness.
5		Tap to adjust the ISO.
6		Tap to adjust the shutter speed.
7		Tap to use the auto expose lock.
8		Displays the current Advanced settings values.

## Manual Video Mode on the viewfinder

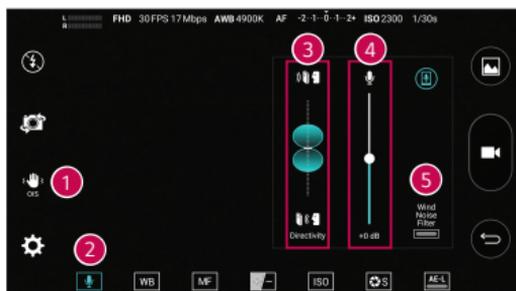

1		Tap to remove motion blur especially when you are walking or moving a lot.
2		<p>Tap to set the recording settings.</p> <p>3 Tap to adjust the sound direction.</p> <p>4 Tap to adjust the decibel.</p> <p>5 Tap to adjust the wind sound.</p> <p> : You can use this function after connected the earphone.</p> <p>Tap  , you can hear the recording sound during a record.</p>

## Snap Video Mode on the viewfinder

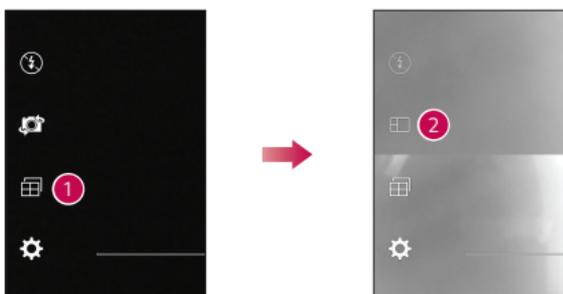

1		Tap to change the Multi-View mode.
2		Photos and videos are assembled into the layout you choose. To switch the each camera view, swipe the view.

## Interval shot

You can take Interval shots from the Auto mode using the front camera lens. Touch and hold  to automatically take 4 selfies in a row.

## Burst shot

You can take Burst shots from the Auto camera mode using the rear camera lens. Touch and hold  to take a barrage of photos in a row until the Capture button is released. The viewfinder displays the number of shots taken. When viewing Burst shots in the Gallery, tap  to display each shot in sequence (similar to a viewing flipbook).

## Gesture shot

The Gesture shot feature allows you to take a picture with a hand gesture using the front camera.


### Taking the photos with a gesture

There are two methods for using the Gesture shot feature.

- Raise your hand, with an open palm, until the front camera detects it and a box appears on the screen. Then close your hand into a fist to start the timer, allowing you time to get ready.

OR

- Raise your hand, in a clenched fist, until the front camera detects it and a box appears on the screen. Then unclench your fist to start the timer, allowing you time to get ready.

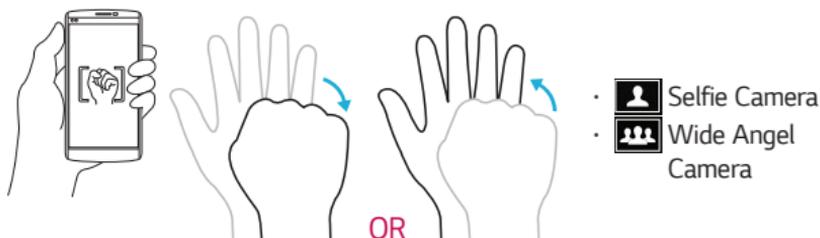

### NOTE

- This function may not be supported in Multi-View Recording.

## Gesture View

After taking a photo with the front camera lens, you can automatically check the captured photo with this gesture.

1 Tap  >  > .

2 Take a picture with the front camera.

3 After taking the picture, bring the phone close to your face. The captured photo will be displayed.

### NOTE

- Depends on the speed and angle of the gesture, this feature may not work properly.
- When the angle is changed after Quick preview, it will go back to the camera mode. You should go to Gallery to view the picture again.

## Multi-point Auto Focus

When you take a picture, the Multi-point Auto Focus (AF) function operates automatically and will allow you to see a clear image.

## 8X Zooming

When using the rear camera lens, you can zoom in or out to 8x.

### NOTE

- Use a steady hand. This feature does not work with some functions. Objects may be overlapped when taking a picture of fast-moving subjects.

## Once you have taken a photo

Tap the image thumbnail on the screen to view the last photo you took.

	Tap to edit the photo.
	Tap to take another photo immediately.
	Tap to open the available sharing options.
	Tap to delete the photo.

	Tap to access additional options.
	Tap to add the photo to your favourites.

## Recording a video

- 1 Tap  >  > .
- 2 Frame your subject on the screen.
- 3 Tap  to start recording the video.
- 4 The length of the recording is displayed on the top of the screen.

### NOTE

- Tap  to take pictures while recording video.
- 5 Tap  to pause recording video. You can resume recording again by tapping .

OR

Tap  to stop recording. Your video will be automatically saved to the Gallery.

## After recording a video

Tap the video thumbnail on the screen to view the last video you recorded.

	Tap to edit the video.
	Tap to record another video immediately.
	Tap to open the available sharing options (such as Messaging or Bluetooth) to share.
	Tap to delete the video.
	Tap to access additional options.
	Tap to add the video to your favourites

# Gallery

The Gallery application presents the pictures and videos in your storage, including those you've taken with the Camera application and those you downloaded from the web or other locations.

- 1 Tap  >  > .
- 2 Tap an album to open it and view its contents. (The pictures and videos in the album are displayed in chronological order.)
- 3 Tap a picture in an album to view it.

## NOTE

- Depending on the software installed, some file formats may not be supported.
- Some files may not play properly due to their encoding.

## Viewing pictures

The Gallery displays your pictures in folders. When an application, such as E-mail, saves a picture, the download folder is automatically created to contain the picture. Likewise, capturing a screenshot automatically creates the Screenshots folder.

Pictures are displayed by the date they were created. Select a picture to view it full screen. Scroll left or right to view the next or previous image.

## Editing photos

While viewing a photo, tap .

## Setting wallpaper

While viewing a photo, tap  > **Set image as** to set the image as wallpaper or assign it to a contact.

## NOTE

- Depending on the software installed, some file formats may not be supported.
- If the file size exceeds the available memory, an error can occur when you open files.

## Zooming in and out


Use one of the following methods to zoom in on an image:

- Double-tap anywhere to zoom in.
- Spread two fingers apart on any place in the picture zoom in. Pinch in or double-tap the image to zoom out.

## Playing a video

- 1 Tap  >  > .
- 2 Select the video you want to watch.

### Video options

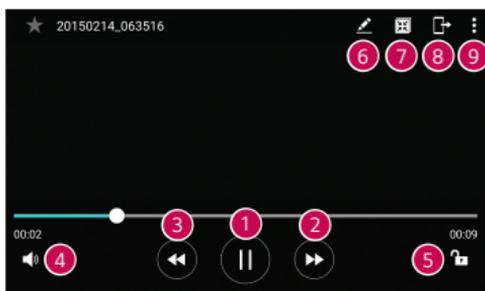


1		Tap to pause/resume video playback.
2		Touch and hold to fast-forward incrementally. Tap to fast-forward 10 seconds.
3		Touch and hold to rewind incrementally. Tap to rewind 10 seconds.
4		Tap to adjust the video volume.
5		Tap to lock/unlock the screen.
6		Tap to set the various effects.
7		Tap to use QSlide for the Video app.
8		Tap to share your video using the SmartShare function.
9		Tap to access additional options.

## NOTE

- While playing a video, slide the right side of the screen up or down to adjust the sound.
- While playing a video, slide the left side of the screen up or down to adjust the brightness.
- While playing a video, slide your finger from left to right (or vice versa) to fast-forward and rewind.

## Editing videos

Tap , to edit the various effects.

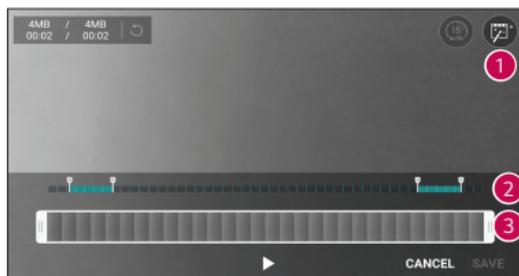

- |   |   |
|---|---|
| 1 | Tap to set the background music, title or author. |
| 2 | Tap to adjust the video speed.                    |
| 3 | Tap to edit the frame.                            |

## Deleting photos/videos

Use one of the following methods:

- While in a folder, tap , select the photos/videos and then tap **DELETE**.
- While viewing a photo, tap .

# E-mail

You can use the Email application to read email from providers other than Gmail. The Email application supports the following account types: POP3, IMAP, Microsoft Exchange (for Enterprise users) and other accounts.

- Tap  >  > .

## Adding an account

The first time you open the Email application, a setup wizard opens to help you add an email account. You can also add your email account using the **Settings** app.

- Tap  > **Settings** > .

## Working with account folders

- Tap  > **Show all folders**.

Each account has Inbox, VIP, Sent, Drafts and Show all folders. Depending on the features supported by your account's service provider, you may have additional folders.

## Composing and sending email

- 1 Tap .
- 2 Enter an address for the message's intended recipient. As you enter text, matching addresses will be offered from your contacts. Separate multiple addresses with semicolons.
- 3 Tap the **Cc/Bcc** field to copy or blind copy to other contacts/email addresses.
- 4 Tap the text field and enter your message.
- 5 Longpress the text field to edit selected words (**Bold/Italic/Underline/Color**).
- 6 Tap  to attach the file you want to send with your message.
- 7 Tap  to send the message.

## Changing an email general settings

- Tap  > **Settings** > **General settings**.

## Deleting an email account

- Tap  > **Settings** >  > **Remove account** > Select the account to delete > **REMOVE** > **YES**.

# Music

Your phone has a music player that lets you play all your favourite tracks.


## NOTE

- Depending on the software installed, some file formats may not be supported.
- If the file size exceeds the available memory, an error can occur when you open files.
- Music file copyrights may be protected by international treaties and national copyright laws. Therefore, it may be necessary to obtain permission or a licence to reproduce or copy music. In some countries, national laws prohibit private copying of copyrighted material. Before downloading or copying the file, please check the national laws of the relevant country concerning the use of such material.

## Playing a song

- 1 Tap  >  > .
- 2 Tap the **Songs** tab.
- 3 Select the song you want to play.
- 4 The following options are available.

## Music player options

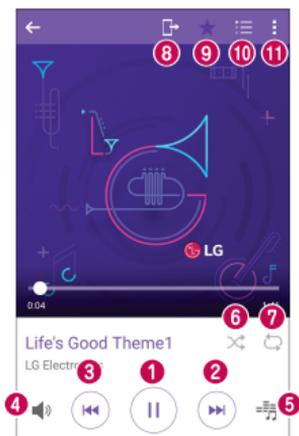

1		Tap to pause playback.
		Tap to resume playback.
2		Tap to skip to the next track in the album, playlist or shuffle list. Touch and hold to fast-forward.
3		Tap to restart the current track or skip to the previous track in the album, playlist or shuffle list. Touch and hold to rewind.
4		Tap to adjust the volume.
5		Tap to set audio effects.
6		Tap to play the current playlist in shuffle mode (tracks are played in random order).
7		Tap to toggle through repeat all songs, repeat current song and repeat off.
8		Tap to share your music using the SmartShare function.
9		Tap to add the song to your favourites.
10		Tap to open the current playlist.
11		Tap to access additional options.

# Clock

The Clock app gives you access to the Alarms, Timer, World clock and Stopwatch functions. Access these functions by tapping the tabs across the top of the screen or swiping horizontally across the screen.

- Tap  >  > .

## Alarms

The Alarms tab allows you to set alarms.

- 1 Tap **Alarms** tab.
- 2 Tap  to add a new alarm.
- 3 Adjust the settings as necessary and tap **SAVE**.

### NOTE

- You can also tap an existing alarm to edit it.

## Timer

The Timer tab can alert you with an audible signal when a set amount of time has passed.

- 1 Tap **Timer** tab.
- 2 Set the desired time on the timer.
- 3 Tap **Start** to start the timer.
- 4 Tap **Stop** to stop the timer.

## World clock

The World clock tab allows you to easily check the current time in other cities around the world.

- 1 Tap **World clock** tab.
- 2 Tap  and select the desired city.

## Stopwatch

The Stopwatch tab allows you to use your phone as a stopwatch.

- 1 Tap **Stopwatch** tab.
- 2 Tap **Start** to initiate the stopwatch.
  - Tap **Lap** to record lap times.
- 3 Tap **Stop** to stop stopwatch.

## Calculator

The Calculator app allows you to perform mathematical calculations using a standard or scientific calculator.

- 1 Tap  >  > .
- 2 Tap the number buttons to enter numbers.
- 3 For simple calculations, tap the function you want to perform (+, -, x or ÷) followed by =.

### NOTE

- For more complex calculations, tap .

## Calendar

The Calendar app allows you to track your schedule of events.

- 1 Tap  >  > .
- 2 Tap the date you want to add an event to. Then tap .

# Voice Recorder

The Voice Recorder app records audible files for you to use in a variety of ways.

## Recording a sound or voice

- 1 Tap  >  > .
- 2 Tap  to begin recording.
- 3 Tap  to end the recording.
- 4 Tap  to listen to the recording.

### NOTE

- Tap  to access your recordings. You can listen to your saved recordings.

# Downloads

Use this application to see what files have been downloaded through the applications.

- Tap  >  > .

# FM Radio

Your phone has a built-in FM Radio so you can tune in to your favourite stations and listen on the go.

- Tap  >  > .

### NOTE

- You must plug in your earphones in order to use them as an antenna.

# LG Backup

## About backing up and restoring device data

It is recommended that you regularly create and save a backup file on the internal storage, especially before updating any software. Maintaining a current backup file in storage memory may allow you to recover device data if your device is lost, stolen, or corrupted by an unforeseen issue.

This LG Backup application is supported between LG smartphones and tablets, other software or operating system versions. As a result, when you buy the new LG smartphones and tablets, you can backup the current device data to your new device.

If you have the LG Backup application preloaded on your smartphones and tablets, you can backup and restore most of your data, including downloaded and pre-installed applications, bookmarks, calendar entries, contacts, home screen settings, and system settings.

### WARNING

- To protect against an unexpected power off during backup or restore operations, due to insufficient battery power, you should always keep your battery fully charged.

### NOTE

- All files that are stored on your device are deleted before the backup file is restored. Make sure to copy the backup file to another location.
- Please note that your device data will be overwritten with the content of your backup.

## To backup your device data

1 Tap  >  > .

2 Select the desired options.

- **Copy data between devices** – Copy data from old device to new device.
- **Back up & restore** – Back up data or restore from backup.

# Google apps

Google provides entertainment, social network, and business apps. You may require a Google account to access some apps.

To view more app information, access each app's help menu.

## NOTE

- Some apps may not be available depending on the region or service provider.

## Google

Search quickly for items on the Internet or your device.

## Chrome

Search for information and browse webpages.

## Gmail

Send or receive emails via the Google Mail service.

## Maps

Find your location on the map, search for locations, and view location information for various places.

## YouTube

Watch or create videos and share them with others.

## Drive

Store your content on the cloud, access it from anywhere, and share it with others.

## Play Music

Discover, listen to, and share music on your device.

## Play Movies & TV

Watch videos stored on your device and download various content to watch from the Play Store.

## Hangouts

Chat with your friends individually or in groups and use images, emoticons, and video calls while you are chatting.

## Photos

Manage photos, albums, and videos that you have saved on the device and uploaded to Google+.

## Google Settings

Configure settings for some features provided by Google.

## Voice Search

Search quickly for items by saying a keyword or phrase.



# Settings

# Access the Settings menu

The Settings app allows you to customize and personalize your phone.

## Opening the settings app

- Tap  > touch and hold  > **System settings**.

OR

- Tap  >  > .

## Viewing settings

Tap  to switch the view mode.

- **List view** – Scroll up and down through the list.
- **Tab view** – Swipe left and right or tap the tab you want.

### NOTE

- The instructions to perform tasks in this guide are based on the default view setting.

# Networks Settings

## Dual SIM card

You can configure Dual SIM settings.

On the **Settings** screen, tap **Networks** tab > **Dual SIM card**.

- **SIM card 1** – Allows you to change the SIM card name and SIM card icon for SIM card 1.
- **Activate slot 1** – Checkmark to activate or deactivate the SIM card slot 1.
- **SIM card 2** – Allows you to change the SIM card name and SIM card icon for SIM card 2.
- **Activate slot 2** – Checkmark to activate or deactivate the SIM card slot 2.
- **SIM card colour theme** – Allows you to select your desired colors.
- **Cost save mode** – Each contact can be assigned to specific SIM in Contacts. When call is made to contact assigned to available SIM, the

SIM is used for the call even if other SIM is active.

- **Mobile data** – Checkmark to enable data access over the mobile network.
- **SIM card to use** – You can change the default data network. All mobile packet services (Web, MMS, Email, etc) will use SIM selected on this value. When only one SIM card is inserted, the default data network is set as the inserted SIM and it is not allowed to change.
- **Switch to network** – Checkmark to connect to mobile network automatically when no Wi-Fi is available.
- **Data roaming** – Checkmark to allow you to use mobile data connections when you're roaming outside your home network area.

## Wi-Fi

You can use high-speed Internet access while within the coverage of the wireless access point (AP).

On the **Settings** screen, tap **Networks** tab > **Wi-Fi**.

- 1 Tap  to turn Wi-Fi on and start scanning for available Wi-Fi networks.
- 2 Tap a network to connect to it.
  - If the network is secured with a lock icon, you will need to enter a security key or password.
- 3 The status bar displays icons that indicate Wi-Fi status.

### NOTE

- If you are out of the Wi-Fi zone or have set Wi-Fi to Off, the device may automatically connect to the Web using mobile data, which may incur data charges.

## Wi-Fi Direct

Wi-Fi Direct provides a direct connection between Wi-Fi enabled devices without requiring an access point.

- Tap  > **Advanced Wi-Fi** > **Wi-Fi Direct**.

## NOTE

- When in this menu, your device is visible to other visible Wi-Fi Direct devices nearby.

## Bluetooth

Bluetooth is a short-range communications technology that allows you to connect wirelessly to a number of Bluetooth devices, such as headsets and hands-free car kits, and Bluetooth-enabled handhelds, computers, printers, and wireless devices.

## NOTE

- LG is not responsible for the loss, interception or misuse of data sent or received via the Bluetooth feature.
- Always make sure that you share and receive data with devices that are trusted and properly secured.
- If there are obstacles between the devices, the operating distance may be reduced.
- Some devices, especially those that are not tested or approved by Bluetooth SIG, may be incompatible with your device.

## Pairing your phone with another Bluetooth device

- 1 On the **Settings** screen, tap **Networks** tab > **Bluetooth**.
- 2 Tap  to turn Bluetooth on and start scanning for available Bluetooth devices.
  - If you want to detect the visible devices in range additionally, tap **SEARCH**.
- 3 Choose the device you want to pair with from the list. Once the pairing is successful, your phone connects to the other device.

## NOTE

- Pairing between two Bluetooth devices is a one-time process. Once a pairing has been created, the devices will continue to recognise their partnership and exchange information.
- Please consult documentation included with Bluetooth device for information on pairing mode and passcode (typically 0 0 0 0 – four zeroes).

## Sending data via Bluetooth

- 1 Select a file or item such as a contact or media file.
- 2 Select the option for sending data via Bluetooth.
- 3 Search for and pair with a Bluetooth-enabled device.

### NOTE

- Due to different specifications and features of other Bluetooth-compatible devices, display and operations may be different, and functions such as transfer or exchange may not be possible with all Bluetooth compatible devices.

## Receiving data via Bluetooth

- 1 On the **Settings** screen, tap **Networks** tab > **Bluetooth**.
- 2 Tap  to turn Bluetooth on.
- 3 You will receive a request to accept a pairing attempt from the sending device. Be sure to select **ACCEPT**.

## Mobile data

Displays the data usage and mobile data usage limit.

- Tap  to toggle your mobile data connection On or Off. This allows you to manage your mobile data usage. You can use a Wi-Fi network connection for data instead.

## Call

Allows you to configure various call settings.

On the **Settings** screen, tap **Networks** tab > **Call**.

### [SIM card 1/SIM card 2 Tab]

- **Voicemail** – Allows you to select your carrier's voicemail service.
- **IP code list** – Manage IP code list.
- **Fixed dialing numbers** – Turn on and compile a list of numbers that can be called from your phone. You need your PIN2, which is available from your operator. Only numbers in the fixed dial list can be called from your phone.
- **Call forwarding** – Allows you to choose when to forward calls.
- **Call barring** – Locks incoming, outgoing or international calls.

- **Additional settings** – Allows you to change the following settings such as **Caller ID** or **Call waiting**, etc.

### [Common Tab]

- **Phone number locator settings** – Manage phone number locator.
- **Show voice calls while in an app** – Display incoming voice call pop-up when an app is in use.
- **Decline with message** – When you want to decline a call, you can send a quick message using this function. This is useful if you need to decline a call during a meeting.
- **Auto answer** – Set the time before a connected hands-free device automatically answers an incoming call.
- **Connection vibration** – Vibrates your phone when the other party answers the call.
- **Noise suppression** – Suppress background noise on my end during a call.
- **Voice clarity** – Enhance voice clarity to hear more clearly.
- **Save unknown numbers** – Allows you to add unknown numbers to contacts after a call.
- **Power key ends call** – Allows you to use the Power key to end calls.
- **Answer an incoming call** – During an incoming call, bring the phone to your ear to answer the call.
- **Silence incoming calls** – Enable to allow you to flip the device to silence incoming calls.

## NFC

Your phone is an NFC-enabled cell mobile phone. NFC (Near Field Communication) is a wireless connectivity technology that enables two-way communication between electronic devices. It operates over a distance of a few centimetres. You can share your content with an NFC tag or another NFC support device by simply tapping it with your device. If you tap an NFC tag with your device, it displays the tag content on your device.

On the **Settings** screen, tap **Networks** tab > **Share & connect** > **NFC**

- 1 Tap  to turn NFC on.
- 2 Allows you to send or receive files simply by bringing your phone and another data compatible device together (typically within 20mm of each other) at the NFC touchpoint.
  - **Tap & pay** – When NFC is turned on, you can use the Tap & pay feature to pay for items just by touching your phone to a reader at a register. If your phone doesn't have a default app, you can browse Google Play Store for other payment apps.

### **NOTE**

- Due to different specifications and features of other Bluetooth-compatible devices, display and operations may be different, and functions such as transfer or exchange may not be possible with all Bluetooth compatible devices.
- When in this menu, your device is visible to other visible Wi-Fi Direct devices nearby.

## Android Beam

When this feature is turned on, you can transfer app content to another NFC-capable device by holding the devices close together. Just bring the device together (typically back to back) and then tap your screen. The app determines what gets beamed.

On the **Settings** screen, tap **Networks** tab > **Share & connect** > **Android Beam**

- 1 Tap  to turn Android Beam on (Turn on Android Beam on each device).
- 2 Select the screen or files to share (e.g. images from Gallery).
- 3 Hold devices together.
- 4 Tap the screen that you want to send after shrinking the screen (Each app determines what is sent or received).

## SmartShare Beam

SmartShare Beam lets you send and receive files between LG phones or tablets quickly.

### Receiving data via SmartShare Beam

- 1 On the **Settings** screen, tap **Networks** tab > **Share & connect** > **SmartShare Beam**.
- 2 Tap  to turn SmartShare Beam on. Wi-Fi will be turned on automatically on your phone and it's ready to receive files.

### Sending data via SmartShare Beam

- 1 Select a file or item such as a media file.
- 2 Select the option for sending data via SmartShare Beam.
- 3 Choose the device you want to pair with from the list.

## Media server

Allows you to share the phone's multimedia content with nearby DLNA-compatible devices.

On the **Settings** screen, tap **Networks** tab > **Share & connect** > **Media server**

- Enable **Content sharing** option to allow nearby devices to access your content.

## Miracast

Allows you to wirelessly mirror the phone screen and sound onto a Miracast dongle or TV.

On the **Settings** screen, tap **Networks** tab > **Share & connect** > **Miracast**

- Tap  to turn Miracast on and start scanning for available Miracast devices. Your phone displays all of the devices that can project your content via Miracast.

## LG AirDrive

Allows you to connect to PC to manage your phone. Set up LG Bridge from LG Electronics website on a PC before use. When you sign in to the same LG Account on your phone and PC, you can use the LG AirDrive function.

- 1 Log in to the same LG account on a mobile devices and a PC.
- 2 On the **Settings** screen, tap **Networks** tab > **Share & connect** > **LG AirDrive**.
- 3 Run the LG Bridge application on your PC and select **LG AirDrive**.

### NOTE

- If you need to set up **LG Bridge**, please refer to **LG Bridge** section in **Getting to know your phone**.

## Printing

Allows you to print the content of certain screens (such as web pages displayed in Chrome) to a printer connected to the same Wi-Fi network as your Android device.

On the **Settings** screen, tap **Networks** tab > **Share & connect** > **Printing**.

### Printing via wireless printer

- 1 Select a file or item such as a contact or media file.
- 2 Select the option for sending data via Bluetooth.
- 3 Search for and pair with a Bluetooth-enabled device.

### NOTE

- Due to different specifications and features of other Bluetooth-compatible devices, display and operations may be different, and functions such as transfer or exchange may not be possible with all Bluetooth compatible devices.

## USB tethering

Allows you to share the internet connection with your computer via a USB cable.

- 1 Connect your phone to your PC with a USB cable.
- 2 On the **Settings** screen, tap **Networks** tab > **Tethering**.
- 3 Tap  to turn USB tethering on.

## Wi-Fi hotspot

You can also use your phone to provide a mobile broadband connection. Create a hotspot and share your connection.

On the **Settings** screen, tap **Networks** tab > **Tethering**

- 1 Tap  to turn Wi-Fi hotspot on.
- 2 Tap Set up Wi-Fi hotspot to change the SSID, security type, password, and other hotspot options.

## Bluetooth tethering

Allows you to connect to other devices via Bluetooth.

- On the **Settings** screen, tap **Networks** tab > **Tethering**.
- Tap  to turn Bluetooth tethering on to share your connection via Bluetooth tethering.

## Airplane mode

Allows you to use many of your phone's features, such as games, and music, when you are in an area where making or receiving calls or data use is prohibited. When you set your phone to Airplane Mode, it cannot send or receive any calls or access online data.

On the **Settings** screen, tap **Networks** tab > **More** > **Airplane mode**.

## VPN

From your phone, you can add, set up, and manage virtual private networks (VPNs) that allow you to connect and access resources inside a secured local network, such as your corporate network.

On the **Settings** screen, tap **Networks** tab > **More** > **VPN**.

## Mobile networks

This menu allows you to configure various mobile network settings such as **Mobile data**, **Data roaming**, etc.

On the **Settings** screen, tap **Networks** tab > **More** > **Mobile networks**.

## Sound & notification settings

Allows you to change settings for various sounds on the device.

On the **Settings** screen, tap **Sound & notification** tab.

- **Sound profile** – Allows you to set your phone's sound profile.
- **Volume** – Adjust the phone's volume settings to suit your needs and environment.
- **SIM1 ringtone / SIM2 ringtone** – Allows you to set the ringtones for calls. You can also add and delete ringtones.
- **Rintone ID** – Allows you to compose ringtones based on phone number of incoming call.
- **Vibration strength** – Allows you to set the vibration strength for calls, notifications and touch feedback.
- **Sound with vibration** – Enable to set the phone to vibrate in addition to the ringtone when you receive calls.
- **SIM1 vibration type / SIM2 vibration type** – Allows you to choose the type of vibration.
- **Interruptions** – Allows you to set a schedule when to prevent interruptions from notifications. You can set to allow certain features to interrupt when Priority only is set.
- **Lock screen** – Allows you to choose if you want to show or hide notifications on the lock screen.
- **Apps** – Allows you to set notifications for individual apps including preventing them from displaying notifications and setting priority.
- **32 bit Hi-Fi DAC** – Enable this feature increase audio quality with supported headphone.

- **SIM1 notification sound/ SIM2 notification sound** – Allows you to set the notification sound. You can also add and delete notification sounds.
- **Vibrate on tap** – Enable to vibrate when tapping the Home touch buttons and during other UI interactions.
- **Sound effects** – This menu lets you select whether you hear tones when tapping numbers on the dial pad, selecting on-screen options, and more.
- **Message/call voice notifications** – Allows your device to read out incoming calls and message events automatically.

## Display settings

### Second screen

On the **Settings** screen, tap **Display** tab > **Second screen**.

If you need more information, please refer to **Second screen** in **Features you will love**.

### Home screen

Allows you to set your home screen settings.

On the **Settings** screen, tap **Display** tab > **Home screen**.

- **Select Home** – Select the desired Home theme.
- **Smart Bulletin** – Enable to use an additional Home screen showing customised information.
- **Theme** – Sets the screen theme for your device. You can download new themes from LG SmartWorld.
- **Wallpaper** – Sets the wallpaper to use on your Home screen.
- **Screen swipe effect** – Choose the desired type of effect to display when you swipe from one Home screen canvas to the next.
- **Allow Home screen looping** – Enable to allow continuous Home screen scrolling (loop back to first screen after last screen).
- **Help** – Displays help information for the Home screen.

## Lock screen

Allows you to set your lock screen settings.

On the **Settings** screen, tap **Display** tab > **Lock screen**.

- **Select screen lock** – Allows you to set a screen lock type to secure your phone.
- **Smart Lock** – Sets to keep your phone unlocked with trusted device or a place. If you need more information, please refer to **Smart Lock** section in **Getting to know your phone**.
- **Screen swipe effect** – Sets the effect used when swiping the lock screen.
- **Wallpaper** – Select the wallpaper to display for your lock screen.
- **Shortcuts** – Allows you to choose the shortcuts available on the lock screen.
- **Weather animation** – Enable to show weather animation on the lock screen for the current location.
- **Contact info for lost phone** – Allows you to display the owner information on the lock screen in case the phone is lost.
- **Lock timer** – Allows you to set the amount of time before the screen automatically locks after the screen has timed-out.
- **Power button instantly locks** – Checkmark to instantly lock the screen when the Power/Lock Key is pressed. This setting overrides the lock timer setting.

## Home touch buttons

Set the Home touch buttons displayed at the bottom of all screens. Set which buttons are displayed, their position on the bar and what they look like.

On the **Settings** screen, tap **Display** tab > **Home touch buttons**.

## More display settings

Allows you to set other display settings.

On the **Settings** screen, tap **Display** tab.

- **Font type** – Select the desired font type.
- **Font size** – Select the desired font size.
- **Brightness** – Adjust the screen brightness by using the slider.
- **Auto-rotate screen** – Set to switch orientation automatically when you rotate the phone.
- **Screen timeout** – Set the time delay before the screen automatically turns off.
- **Daydream** – Select the screen saver to be displayed when the phone is sleeping while docked and/or charging.
- **Motion sensor calibration** – Allows you to improve the accuracy of the tilt and speed of the sensor.

## General settings

### Language & keyboard

Allows you to change the text input settings.

Select the language for the text on your phone and for configuring the on-screen keyboard, including words that you've added to its dictionary.

On the **Settings** screen, tap **General** tab > **Language & keyboard**.

- **Language** – Choose a language to use on your phone.
- **Current keyboard** – Allows you to select the other keyboard type.
- **LG Keyboard** – Change the LG Keyboard settings.
- **Google voice typing** – Enable to select Google voice typing to enter data. Tap the Settings icon to change the Google voice settings.
- **Voice Search** – Tap to configure the Voice Search settings.
- **Text-to-speech output** – Tap to set the preferred engine or general settings for text-to-speech output.
- **Pointer speed** – Adjust the pointer speed.

- **Reverse buttons** – Reverse the mouse buttons to use primary button on right.

## Location

Turn on location service, your phone determines your approximate location using Wi-Fi and mobile networks. When you select this option, you're asked whether you consent to allowing Google to use your location when providing these services.

On the **Settings** screen, tap **General** tab > **Location**.

- **Mode** – Sets the how your current location information is determined.
- **My place** – Enable to locate your home for smart settings.
- **Low power location estimation** – Enable to use hardware acceleration.
- **Camera** – Enable to tag photos or videos with their locations.
- **Google Location History** – Allows you to choose your location information settings as accessed by Google and its products.

## Accounts & sync

Use this menu to add, remove, and manage your Google and other supported accounts. You also use these settings to control how and whether all applications send, receive, and sync data on their own schedules and whether all applications can synchronize user data automatically.

Gmail™, Calendar, and other applications may also have their own settings to control how they synchronize data; see the sections on those applications for details.

On the **Settings** screen, tap **General** tab > **Account & sync**.

- **Auto-sync data** – Enable this option to automatically sync all accounts you've added on your phone.
- **ACCOUNTS** – Displays all of your added accounts. Tap one to view and/ or manage it.
- **ADD ACCOUNT** – Tap to add new account.

## Cloud

Allows you to add a cloud account to quickly and easily use a cloud service.

On the **Settings** screen, tap **General** tab > **Cloud**.

## Users

Add user to share the phone with other people. Each user can have their own apps and content in their own space. Initial setup is required for new users to use phone.

On the **Settings** screen, tap **General** tab > **Users**.

- **ADD USER** – Allows you to add and configure a new user for the device.

## Accessibility

Use the Accessibility settings to configure accessibility plug-ins you have installed on your phone.

On the **Settings** screen, tap **General** tab > **Accessibility**.

- **Vision** – Sets options for people with impaired sight.
  - **TalkBack** – Allows you to set up the TalkBack function which assists people with impaired vision by providing verbal feedback.
  - **Message/call voice notifications** – Enable to allows you to hear automatic spoken alerts for incoming calls and messages.
  - **Screen shade** – Enable to set the screen to a darker contrast.
  - **Font size** – Sets the font size.
  - **Touch zoom** – Allows you to zoom in and out by triple-tapping the screen.
  - **Screen colour inversion** – Enable to invert the colours of the screen and content.
  - **Screen colour adjustment** – Allows you to adjust the colours of screen and content.
  - **Power key ends call** – Enable so that you can end voice calls by pressing the Power/Lock Key.
- **Hearing** – Sets options for people with impaired hearing.

- **Captions** – Allows you to customise caption settings for those with hearing impairments.
- **Flash alerts** – Enable to set the flash to blink for incoming calls and notifications.
- **Turn off all sounds** – Enable to turn off all device sounds.
- **Audio type** – Sets the audio type.
- **Sound balance** – Sets the audio route. Move the slider on the slide bar to set it.
- **Motor & cognition** – Sets options for people with impaired motor skills.
  - **Touch feedback time** – Sets the touch feedback time.
  - **Touch assistant** – Show a touch board with easy access to common actions.
  - **Screen timeout** – Sets the amount of time before the backlight turns off automatically.
  - **Touch control areas** – Allows you to select an area of the screen to limit touch activation to just that area of the screen.
- **Accessibility features shortcut** – Allow you to access selected features quickly when triple-tapping the Home button.
- **Auto-rotate screen** – Enable to allow the phone to rotate the screen depending on the physical phone orientation (portrait or landscape).
- **Switch Access** – Allows you to interact with your device using one or more switches that work like keyboard keys. This menu can be helpful for users with mobility limitations that prevent them from interacting directly with the your device.

## Mini view

Turn on this menu to shrink the screen for use with one hand by swiping left or right across the Home touch buttons. If you need more information, please refer to **Mini view** section in **Features you will love**.

On the **Settings** screen, tap **General** tab > **Mini view**.

## Shortcut key

Get quick access to apps by pressing the **Volume Keys** twice when the screen is off or locked.

On the **Settings** screen, tap **General** tab > **Shortcut key**.

- Press the **Volume Up Key** twice to open the Capture+ app.
- Press the **Volume Down Key** twice to launch the Camera app.
- **Quick shot** – Enable this option to immediately take a photo when the Volume Down Key is pressed twice.

## Fingerprints & security

Use this menu to configure how to help secure your phone and its data.

On the **Settings** screen, tap **General** tab > **Fingerprints & security**.

- **Fingerprints** – Unlock screen or see locked content with your fingerprint. If you need more information, please refer to **Fingerprints** section in **Features you will love**.
- **Content lock** – Select lock types to lock memos for QuickMemo+.
- **Encrypt phone** – Allows you to encrypt data on the phone for security. You will be required to enter a PIN or password to decrypt your phone each time you power it on.
- **Encrypt SD card storage** – Encrypt SD card storage and keep data unavailable for other devices.
- **Set up SIM card lock** – Sets the PIN to lock your SIM card and allows you to change the PIN.
- **Password typing visible** – Enable to briefly show each character of passwords as you enter them so that you can see what you enter.
- **Phone administrators** – View or deactivate phone administrators.
- **Unknown sources** – Allow installation of non-Play Store applications.
- **Verify apps** – Disallow or warn before installation of apps that may cause harm.
- **Storage type** – Displays the current storage type.
- **Certificate management** – Allows you to manage your security certificates.
- **Trust agents** – Select apps to use without unlocking screen.

- **Screen pin** – You can enable your device to only show a certain app's screen using screen pin.
- **App usage access** – Allows you to view usage information of apps on your phone.

## Smart settings

Allows you to turn on/off, open or change something such as Wi-Fi, Music, Sound profile according to where you are or what you do.

On the **Settings** screen, tap **General** tab > **Smart settings**.

## Quick Cover case

With Quick Cover case, you can check incoming calls and stop alarm/timer when the cover is closed. To unlock with the cover, screen lock must be set to Swipe.

On the **Settings** screen, tap **General** tab > **Quick Cover case**.

## Dual window

Allows you to configure the Dual Window feature.

On the **Settings** screen, tap **General** tab > **Dual window**.

- **Auto-open** – Checkmark to allow you to tap a link on the full screen or attachments from emails to open Dual window.
- **Help** – Display tips for using Dual window.

If you need more information, please refer to **Dual window** section in **Features you will love**.

## Date & time

Set your preferences for how the date and time is displayed.

On the **Settings** screen, tap **General** tab > **Date & time**.

## Storage

You can monitor the used and available internal memory in the device.

On the **Settings** screen, tap **General** tab > **Storage**.

## INTERNAL STORAGE

- **Total space** – Displays the total amount of space and the available space in your phone's internal memory in text and with a color-coded bar graph (unused space is gray). Corresponding apps and the amount of space they use is listed under each device user.

## SD CARD

- **Total space** – Displays the total amount of space and the remaining available space in your memory card.
- **Mount/Unmount SD card** – Allows you to mount or unmount your SD card.
- **Erase SD card** – Allows you to erase all of the data on your SD card.

## Battery & power saving

Displays the current battery status including the percentage of remaining charge and charging state.

On the **Settings** screen, tap **General** tab > **Battery & power saving**.

- **Battery usage** – Displays the battery usage level and battery use details. Tap one of the items to see more detailed information.
- **Battery percentage on status bar** – Checkmark to display the battery level percentage on the status bar next to the Battery icon.
- **Battery saver** – Tap the Battery Saver switch to toggle it on or off. Sets the battery charge percent level that automatically turns on Battery Saver.
- **Game optimizer** – Adjusts the video quality in games to save battery.

## Smart cleaning

Displays the space in use and free space in your phone and allows you to selectively clean up your files.

On the **Settings** screen, tap **General** tab > **Smart cleaning**.

- 1 Tap a folder location, then set the appropriate boxes.
- 2 Tap **CLEAN** > **YES**.

## Apps

Allows you to view details about the apps installed on your phone, manage their data, and force them to stop.

On the **Settings** screen, tap **General** tab > **Apps**.

## Default message app

This menu allows you to choose what messaging app to use as your default messaging app.

On the **Settings** screen, tap **General** tab > **Default message app**.

## Backup & reset

Change the settings for managing your settings and data.

On the **Settings** screen, tap **General** tab > **Backup & reset**.

- **LG Backup** – Backs up all information on the device and restores it in the event of data loss or replacement. If you need more information, please refer to **LG Backup** section in **Apps**.
- **Back up my data** – Back up app data, Wi-Fi passwords, and other settings to Google servers.
- **Backup account** – Displays the account that is currently being used to back up information.
- **Automatic restore** – When reinstalling an app, restore backed up settings and data.
- **Factory data reset** – Reset your settings to the factory default values and delete all your data. If you reset the phone this way, you are prompted to re-enter the same information as when you first started Android.

## About phone

View legal information, check phone status and software versions, and perform a software update.

On the **Settings** screen, tap **General** tab > **About phone**.

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

# Appendix

# Phone software update

## LG Mobile phone software update from the Internet

For more information about using this function, please visit <http://www.lg.com/common/index.jsp> → select your country and language.

This feature allows you to conveniently update the firmware on your phone to a newer version from the Internet without needing to visit a service centre. This feature will only be available if and when LG makes a newer firmware version available for your device.

Because the mobile phone firmware update requires the user's full attention for the duration of the update process, please make sure you check all instructions and notes that appear at each step before proceeding. Please note that removing the USB data cable during the upgrade may seriously damage your mobile phone.

### NOTE

- LG reserves the right to make firmware updates available only for selected models at its own discretion and does not guarantee the availability of the newer version of the firmware for all handset models.

## LG Mobile Phone software update via Over-the-Air (OTA)

This feature allows you to conveniently update your phone's software to a newer version via OTA, without connecting using a USB data cable. This feature will only be available if and when LG makes a newer firmware version available for your device.

You should first check the software version on your mobile phone:

**Settings > General tab > About phone > Common tab > Update Center > Software Update > Check now for update.**

 **NOTE**

- Your personal data from internal phone storage—including information about your Google account and any other accounts, your system/application data and settings, any downloaded applications and your DRM licence—might be lost in the process of updating your phone's software. Therefore, LG recommends that you backup your personal data before updating your phone's software. LG does not take responsibility for any loss of personal data.
- This feature depends on your network service provider, region and country.

## FAQ

This chapter lists some problems you might encounter when using your phone. Some problems require you to call your service provider, but most are easy to fix yourself.

Message	Possible causes	Possible corrective measures
SIM card error	There is no SIM card in the phone or it is inserted incorrectly.	Make sure that the SIM card is correctly inserted.
No network connection/ Dropped network	Signal is weak or you are outside the carrier network.	Move toward a window or into an open area. Check the network operator coverage map.
	Operator applied new services.	Check whether the SIM card is more than 6-12 months old. If so, change your SIM or USIM card at your network provider's nearest branch. Contact your service provider.

Message	Possible causes	Possible corrective measures
Codes do not match	To change a security code, must need to confirm the new code by re-entering it.	If you forget the code, contact your service provider.
	The two codes you entered do not match.	
No applications can be set	Not supported by service provider or registration required.	Contact your service provider.
Downloaded application causes a lot of errors.	Remove the application.	<ol style="list-style-type: none"> <li>1 Tap  &gt;  &gt; .</li> <li>2 Tap <b>General</b> tab &gt; <b>Apps</b>.</li> <li>3 Tap the app &gt; <b>Uninstall</b>.</li> </ol>
Calls not available	Dialing error	New network not authorised.
	New SIM card inserted.	Check for new restrictions.
	Pre-paid charge limit reached.	Contact service provider or reset limit with PIN2.
Phone cannot be turned on	On/Off key pressed too briefly.	Press the On/Off key for at least two seconds.
	Battery is not charged.	Charge battery. Check the charging indicator on the display.

<b>Message</b>	<b>Possible causes</b>	<b>Possible corrective measures</b>
Charging error	Battery is not charged.	Charge battery.
	Outside temperature is too hot or cold.	Make sure phone is charging at a normal temperature.
	Contact problem	Check the charger and its connection to the phone.
	No voltage	Plug the charger into a different outlet.
	Charger defective	Replace the charger.
	Wrong charger	Use only original LG accessories.
Number not allowed.	The Fixed dialling number function is on.	Check the Settings menu and turn the function off.
Impossible to receive/send SMS & photos	Memory full	Delete some data, such as applications or messages from your phone to make more memory available.
Files do not open	Unsupported file format	Check the supported file formats.
The screen does not turn on when I receive a call.	Proximity sensor problem	If you use a protection tape or case, make sure it has not covered the area around the proximity sensor. Make sure that the area around the proximity sensor is clean.
No sound	Vibration mode	Check the settings status in the sound menu to make sure you are not in vibration or no interruptions mode.

Message	Possible causes	Possible corrective measures
Hangs up or freezes	Intermittent software problem	If the screen freezes or the phone does not respond when you try to operate it, remove the battery and reinsert it. Then power the phone back on. <b>OR</b> Try to perform a software update through the website.

## Anti-Theft Guide

You can set up your device to prevent other people from using it if it's been reset to factory settings without your permission. For example, if your device is lost, stolen, or wiped, only someone with your Google account or screen lock information can use the device.

All you need to make sure your device is protected is:

- **Set a screen lock:** If your device is lost or stolen but you have a screen lock set, the device can't be erased using the Settings menu unless your screen is unlocked.
- **Add your Google account on your device:** If your device is wiped but you have your Google account on it, the device can't finish the setup process until your Google account information is entered again.

After your device is protected, you'll need to either unlock your screen or enter your Google account password if you need to do a factory reset. This ensures that you or someone you trust is doing the reset.

### NOTE

- Do not forget your Google account and password you had added to your device prior to performing a factory reset. If you can't provide the account information during the setup process, you won't be able to use the device at all after performing the factory reset.

# More information

## Open source software notice information

To obtain the source code under GPL, LGPL, MPL, and other open source licenses, that is contained in this product, please visit

<http://opensource.lge.com>.

In addition to the source code, all referred license terms, warranty disclaimers and copyright notices are available for download.

LG Electronics will also provide open source code to you on CD-ROM for a charge covering the cost of performing such distribution (such as the cost of media, shipping, and handling) upon email request to [opensource@lge.com](mailto:opensource@lge.com). This offer is valid for three (3) years from the date on which you purchased the product.

## Trademarks

- Copyright ©2015 LG Electronics, Inc. All rights reserved. LG and the LG logo are registered trademarks of LG Group and its related entities. All other trademarks are the property of their respective owners.
- Google™, Google Maps™, Gmail™, YouTube™, Hangouts™ and Play Store™ are trademarks of Google, Inc.
- Bluetooth® is a registered trademark of Bluetooth SIG, Inc. worldwide.
- Wi-Fi® and the Wi-Fi logo are registered trademarks of the Wi-Fi Alliance.
- All other trademarks and copyrights are the property of their respective owners.



This DivX Certified® device has passed rigorous testing to ensure it plays DivX® video.

To play purchased DivX movies, first register your device at [vod.divx.com](http://vod.divx.com). Find your registration code in the DivX VOD section of your device setup menu.

**DivX Certified® to play DivX® video up to HD 720p, including premium content.**

**DivX®, DivX Certified® and associated logos are trademarks of DivX, LLC and are used under license.**




**Manufactured under license from Dolby Laboratories. Dolby, Dolby Digital Plus, and the double-D symbol are trademarks of Dolby Laboratories.**

## Laser safety statement

### Caution!

This product employs a laser system. To ensure proper use of this product, please read this owner's manual carefully and retain for future reference. Should the unit require maintenance, contact an authorised service centre. Use of controls, adjustments, or the performance of procedures other than those specified herein may result in hazardous radiation exposure. To prevent direct exposure to laser beam, do not try to open the enclosure or make direct contact with the laser.

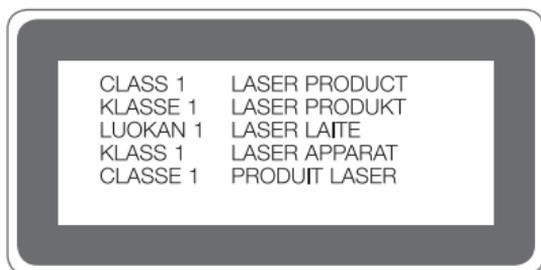

## Declaration of conformity

Hereby, **LG Electronics** declares that this **LG-H961N** product is in compliance with the essential requirements and other relevant provisions of Directive **1999/5/EC**. A copy of the Declaration of Conformity can be found at <http://www.lg.com/global/declaration>

## Precautions for use of leather back cover

- This product is made of cattle hide and may have different creases and patterns due to the properties of natural leather. If the product gets wet with any liquid (water, soda, seawater, rain, sweat, sunscreen, cosmetics, moisture, etc.), it may lose colour, change colour, or deform in shape.
- When this product gets wet or contaminated, get rid of the water by pressing it gently with a dry towel, or wipe it with leather cream and leave it to dry in shade. When the product is exposed to a wet environment for a long time, it may cause creases or mould. The shape of the leather may not be restored to its original state after cleaning because of the properties of leather, and any contamination or deformity may get worse when using regular detergent or an organic solvent.
- When the leather is wet with rain or sweat, use caution and avoid contact with clothes. It can cause any dye to become a stain.
- Due to the nature of leather, friction for long periods of time or excessive force may damage the surface of the leather.

### **NOTE**

- Some illustrations and the back cover type may differ from your device depending on the region, service provider without prior notice.



CE0168ⓘ