



LG

Life's Good

繁體中文
簡體中文
ENGLISH

使用手冊

LG-P715

MFL67862711 (1.0)

www.lg.com



繁體中文

使用手冊

- 畫面顯示及插圖可能與實際手機上顯示的有所不同。
- 此手冊中的部份內容可能會因手機程式有更新和改良或不同網絡商提供的服務而令實際情況有所不同。此文件中所有資訊如有更改，恕不另行通知。
- 由於使用觸控螢幕鍵盤，此手機不適合視障人士使用。
- Copyright ©2013 LG Electronics, Inc. 保留所有權利。LG 及 LG 標誌乃 LG 集團及其相關公司的註冊商標。所有其他商標均屬於其擁有者。
- Google™、Google Maps™、Gmail™、YouTube™、Google Talk™ 及 Android Market™ 均為 Google, Inc. 的商標。



目錄

安全及有效使用準則	5	啓用 Wi-Fi Direct 透過 SmartShare 進行分享	34
了解您的手機	12	使用 SmartShare	34
裝置組件	16	通話功能	38
安裝 SIM 卡及電池	18	撥打電話	38
為手機充電	20	從通訊錄中撥打電話	38
使用記憶卡	20	接聽來電和拒接來電	38
將螢幕鎖定及解鎖	22	調節通話音量	39
鎖定螢幕保安	22	通話期間撥打第二個電話	39
您的桌面	23	檢視通話記錄	39
觸控螢幕提示	23	通話設定	39
桌面	23	通訊錄	41
自訂桌面	24	搜尋聯絡人	41
返回最近使用的應用程式	24	新增聯絡人	41
通知	25	常用的聯絡人	41
快速設定	25	訊息	43
檢視狀態列	26	發送訊息	43
螢幕鍵盤	27	訊息串連方塊	44
輸入重音字母	28	使用表情符號	44
Google 帳戶設定	29	更改訊息設定	44
連接到網絡及裝置	30	電子郵件	45
Wi-Fi	30	管理電子郵件帳號	45
連接至 Wi-Fi 網絡	30	電子郵件帳號畫面	45
開啓 Wi-Fi 並連接至 Wi-Fi 網絡	30	處理帳號資料夾	46
藍牙	31	編寫及發送電子郵件	46
共享手機的數據連接	32		
要重新命名或保護可攜式熱點	33		
使用 Wi-Fi Direct	33		

相機.....47

了解取景器	47
快速拍照	48
拍攝相片後	48
使用進階設定	48

視像攝錄機.....50

了解取景器	50
錄製影片	51
錄製影片後	51
使用進階設定	52
觀看影片時調整音量	52

多媒體.....53

媒體匣	53
檢視圖片	53
播放影片	53
刪除相片/影片	53
設定為牆紙	54
影片	54
播放影片	54
音樂	55
FM收音機	57

LG SmartWorld.....58

如何從手機進入 LG SmartWorld	58
如何使用 LG SmartWorld	58

On-Screen Phone.....60

On-Screen Phone 圖示	60
On-Screen Phone 功能	60

如何在電腦上安裝 On-Screen Phone	61
--------------------------------	----

實用程式.....62

QuickMemo	62
設定鬧鐘	63
使用計算機	63
新增事件至日曆	63
Polaris Viewer 4	64
QuickTranslator	64

網絡功能.....66

互聯網	66
使用網路工具列	66
檢視網頁	66
開啓頁面	66
以語音搜尋網站	67
書籤	67
歷史記錄	67
Chrome	68
檢視網頁	68
開啓頁面	68
以語音搜尋網站	68
與其他裝置同步	68

設定.....69

存取設定功能表	69
無線及網絡	69
裝置	70
個人	72
系統	73

目錄

PC 軟件 (LG PC Suite).....	75
手機軟件更新.....	78
手機軟件更新.....	78
有關本使用者指南.....	79
有關本使用者指南	79
Trademarks	79
DivX 手機.....	80
配件	81
疑難排解.....	82

安全及有效使用準則

請閱讀下列簡要原則。若未遵守這些原則可能會違反法令或造成危險。

無線電波暴露準則

無線電波暴露及特定吸收比率 (SAR) 資訊。

此手機型號 LG-P715 的設計符合有關暴露於無線電波所適用的安全要求。這些要求乃基於可確保所有使用者安全的科學指引，範圍涵蓋任何年齡與任何健康狀況的人士。

- 無線電波暴露指引的量度單位叫作特定吸收比率 (SAR)。SAR 測試使用標準方法進行，用手機以在所有使用的頻帶最高的合格電源水平傳輸。
- 雖然不同型號 LG 手機的 SAR 水平有所差異，但所有這些手機的設計均符合無線電波暴露的相關指引。
- 國際非離子化輻射保護委員會 (ICNIRP) 建議的 SAR 限制，即平均 10 克組織 2 W/kg。
- 經 DASY4 測試，於耳邊使用本型號手機的最高 SAR 值為 0.495 W/kg (10g)，而隨身攜帶手機則為 0.689 W/Kg (10g)。
- 在將手機置於耳邊正常使用或使其距身體至少 1.5 厘米遠的情況下，此流動電話符合關於 RF 暴露的指引。如果隨身攜帶手機，所用的手機套或其他裝置中不可包含金屬物品，並應使手機與身體至少保持 1.5 厘米的距離。要傳輸數據檔案或訊息時，該裝置與網絡進行有效的連接。在某些情況下，數據檔案或訊息的傳送可能會延遲，直至這類連接可用為止。請確保遵守以上的特別距離指示，直到傳輸完成為止。

安全及有效使用準則

產品保護及維護

警告：

請僅使用經認可適用於此特定型號手機的電池、充電器及配件。使用其他種類的配件可能會導致手機的認可或保養失效，並可能引致危險。

- 請勿拆開此裝置。如手機需要維修，請由合資格的維修技師進行維修。
- 根據 LG 的政策，保養期內的維修可能會包括更換部件或主板，這些用於更換的部件或主板可能全新的或是經過翻新的，但其功能與被更換的部件相同。
- 請遠離如電視、收音機或個人電腦等電器產品而使用手機。
- 裝置需遠離發熱來源，如散熱器或烹調器具。
- 請勿摔落手機。
- 請勿讓此裝置遭機械震動或衝擊。
- 請於任何有特殊限制的地方關閉手機。例如，請勿在醫院內使用手機，否則它可能會對敏感的醫療設備造成影響。
- 請勿以潮濕的雙手對充電中的手機進行操作。這可能會引致觸電和造成手機嚴重損壞。
- 請不要在易燃材料附近為手機充電，因為充電期間手機會發熱並導致火災。
- 使用乾布清潔裝置表面（請勿使用苯、稀釋劑或酒精等溶劑）。
- 切勿在布質家具上為手機充電。
- 手機應在通風良好的環境中充電。
- 請勿讓此裝置接觸過多煙霧或塵埃。
- 請勿將手機置於信用咭或車票附近，這可能會影響磁帶上的資料。
- 請勿以尖銳物件敲打螢幕，否則可能會對手機造成損毀。
- 請勿將手機暴露於液體或濕氣中。

- 請小心使用配件，例如耳機。如非必要，請勿觸及天線。
- 如果玻璃螢幕碎裂，請勿使用、接觸或嘗試移除或修補玻璃。因妄用或不正確使用而導致玻璃螢幕受損並不在保養範圍內。
- 您的手機是一部電子裝置，在正常操作期間，會產生熱力。在沒有足夠通風的環境下，長時間與皮膚直接接觸可能導致不適或輕度灼傷。因此，操作期間或操作之後處理手機時，請謹慎使用。
- 如果手機受潮，請立即拔下手機電源線並立即擦乾。請勿嘗試用烤爐、微波爐或風筒等外部加熱裝置加快變乾的過程。
- 手機如果潮溼，液體會改變手機內產品標籤的顏色。因電腦暴露於液體而造成的損壞並不受保養條款覆蓋。

有效地操作手機

電子裝置

所有手機均可能受訊號干擾，這可能會影響手機效能。

- 請勿在未得到批准下在醫療儀器附近使用您的手機。避免將手機放置在心臟起搏器附近，例如您胸口上的口袋。
- 一些助聽器可能會受手機干擾。
- 手機可能會輕微干擾電視、收音機、個人電腦等。

道路安全

檢查您駕駛時所在地區使用手機的法例及規則。

- 駕駛時切勿使用手持手機。
- 請專心一致駕駛。
- 請視乎駕駛情況，駛離馬路並停泊好汽車後才撥打或接聽電話。
- RF 能量可能會影響車內某些電子系統，例如車載立體聲音響及安全設備等。

安全及有效使用準則

- 如果您的汽車配有氣囊，切勿讓已安裝的無線設備或手提無線設備阻擋氣囊。這可能會導致氣袋無法正常彈出，使其失去保護作用或造成嚴重人身傷害。
- 如果在外出時聆聽音樂，請確保將音量設定至合適水平，以便可以對周圍環境產生警覺。這在路邊時特別重要。

避免損害您的聽覺



避免聽力受損，請不要長時間在高音量下聆聽。

如果長時間以較大音量收聽，可能會對聽覺造成損害。所以我們建議開啓或關閉手機時，不要將它放於太近耳朵。我們亦建議將音樂及通話音量設定至合適水平。

- 使用耳機時，如果您未能聽見附近的人說話，或者坐在您身邊的人能聽見您正在聆聽的聲音，就應將聆聽音量調低。

注意：耳機的過大聲音壓力可能導致聽覺受損

玻璃部件

您的手機的部分部件以玻璃製造。如您的手機摔在堅硬的表面上或受猛烈撞擊，玻璃部件可能會破裂。如玻璃破裂，請勿接觸或嘗試移除碎片。請停止使用您的手機，直至授權的服務供應商為您更換玻璃部件。

爆破地區

請勿在進行爆破時使用手機。請嚴格遵守相關限制、規定或條例。

潛在爆炸氣壓

- 請勿在加油站使用手機。
- 請勿在燃料或化學物質附近使用手機。
- 請勿在放置了手機及配件的汽車車廂運送或擺放易燃氣體、液體或爆炸物。

在飛機上

無線裝置可引致飛機干擾。

- 登機前，請先關掉手機。
- 未經地勤人員批准，請勿在陸上使用手機。

兒童

請將手機放在兒童接觸不到的安全地方。手機包含微細零件，如果拆開，可能造成哽咽危險。

緊急通話

某些流動網絡可能無法使用緊急通話。因此，您不應僅倚賴手機作為緊急通話的方式。請向您本地的服務供應商查詢。

電池資料及保護

- 充電前，您無須完全放電。跟其他電池系統不同，沒有記憶影響可降低電池的效能。
- 只使用 LG 電池及充電器。LG 充電器是為將電池壽命擴至最大而

安全及有效使用準則

設。

- 請勿拆解電池或造成電池短路。
- 當電池不再提供可接受的效能，請更換電池。電池組在必須更換前可重新充電數百次。
- 如果電池很久沒有使用，重新充電以擴展其用量。
- 請勿直接將充電器暴露於日光下或高濕度環境（如浴室）中。
- 請勿將電池置於過熱或過冷的地方，此類場合可能會損害電池效能。
- 若使用類型不當的電池，則有發生爆炸的危險。
- 請根據製造商的指示來處理廢棄電池。盡量回收利用。請勿作為家庭廢棄物處理。
- 如果需要更換電池，請帶同手機前往最近的授權 LG 電子產品服務點或經銷商以尋求協助。
- 請謹記在手機完全充電後從牆壁插座拔出充電器，避免充電器造成不必要的電力損耗。
- 電池的實際壽命將取決於網絡設定、產品設定、使用模式、電池及環境條件。
- 請勿讓如動物牙齒、指甲等尖銳物與電池發生接觸。這可能會引起火災。

確認聲明

LG Electronics 在此聲明 LG-P715 產品符合對 1999/5/EC 指示的基本要求和
其他相關規定。確認聲明副本請見：[http://www.lg.com/global/support/cedoc/
RetrieveProductCeDOC.jsp](http://www.lg.com/global/support/cedoc/RetrieveProductCeDOC.jsp)

環境溫度

最高：+50°C（放電時），+45°C（充電時）**最低：**-10°C

注意：公開原始碼軟件

若要取得 GPL、LGPL、MPL 或其他公開來源授權的相應原始碼，請瀏覽
<http://opensource.lge.com/>

所有授權條款、免責聲明及通知均可連同原始碼一同下載。

聯絡本公司以取得產品的符合性：

LG Electronics Inc.

EU Representative, Krijgsman 1,
1186 DM Amstelveen, The Netherlands

了解您的手機

使用手機前請閱讀此重要通知！

在您將手機送往維修或致電服務人員前，請檢查您手機出現的問題有否在此部分描述。

1. 手機記憶體

當手機記憶體的可用空間少於 10%，手機便無法接收新訊息。您需要檢查您的手機記憶體，並刪除一些數據如應用程式或訊息，以騰出更多可用記憶。

要解除安裝應用程式：

- 1 點按  > **應用程式** 標籤 > **設定** > 裝置中的**應用程式**。
- 2 當所有應用程式出現後，捲動並選擇您想解除安裝的應用程式。
- 3 點按**解除安裝**。

2. 優化電池壽命

關閉無須持續在背景運行的功能，便能延長兩次充電之間的電池壽命。您可監控應用程式及系統資源的電池電量消耗。

延長手機電池壽命

- 關閉不使用的無線電通訊。不使用 Wi-Fi、藍牙或 GPS 時，請關閉這些應用程式。
- 降低螢幕亮度，並設定較短的螢幕逾時。
- 關閉 Gmail、日曆、通訊錄及其他應用程式的自動同步。
- 您下載的部分應用程式可能會減少電池壽命。

要檢查電池充電量：

- 點按  > **應用程式** 標籤 > **設定** > 系統中的**關於手機** > **通用** 標籤 > **電池**。

電池狀態（充電、未充電）及電池存量（電量的百分比）。

要監控與控制使用的電池電力：

- 點按  > 應用程式標籤 > 設定 > 系統中的關於手機 > 通用標籤 > 電池 > 電池使用狀況。

可顯示剩餘電量之電量曲線。電池使用已使用和預期使用時間。并檢視使用電量最多的元件和應用程式。

3. 使用資料夾

您可將應用程式圖標合併至一個資料夾內。要合併應用程式圖標，只需在主頁用圖標覆蓋另一個。

4. 在安裝開放原始碼的應用程式及操作系統前



警告：

如果您安裝及使用並非由製造商提供的作業系統，可能會造成您的手機故障。此外，您的手機不再受保養。



警告：

爲了保護您的手機和您的個人資料，請只從受信任的來源下載應用程式，例如 Play Store™。如不正確安裝應用程式，手機可能無法正常運作，或出現嚴重錯誤。您必須從手機解除安裝該應用程式及其所有相關數據和設定。

5. 使用硬性重新設定（原廠設定）

如果手機需要還原成爲本來的狀態，使用硬性重新設定重新啓動手機。

了解您的手機

- 1 手機關閉後，按住**音量下鍵 + 快速按鈕 + 電源鍵**。
 - 2 當 LG 標誌出現於螢幕時放開**電源鍵**。
 - 3 當 LG 標誌消失時放開**音量下鍵 + 快速按鈕**。Android 機械人會在稍後顯示，然後將進行恢復。
- 等候至少 1 分鐘，讓手機進行硬性重新設定。然後，您便可以重新開啓手機。



警告：

若進行硬性重新設定，所有用戶應用程式、用戶數據及 DRM 授權將被刪除。請緊記先備份所有重要數據，才進行硬性重新設定。

6. 開啓及切換應用程式

有了 Android，多任務處理變得容易，因為可以同時執行多個應用程式。開啓新的應用程式時，您無需退出原來的應用程式。使用及切換數個開啓中的應用程式。Android 會管理每一個應用程式，根據需要停止及啓動程式，確保閒置的應用程式不會耗用不必要的資源。

返回以檢視最近使用的應用程式列表：

按住**主頁鍵**。

要停止應用程式：

- 1 點按  > **應用程式標籤** > **設定** > 裝置中的**應用程式** > **執行**。
- 2 滑動並點按應用程式，點按**停止**以停止應用程式。

7. 將手機直立

如使用其他電話一樣，垂直握住您的手機。手機備有內置天線。小心不要刮花或損壞手機背部，這可能會影響效能。撥打/接聽電話或傳送/接收資料時，避免握住手機天線所在的部分。這樣做可能影響通話品質。

8. 螢幕凍結時

如果螢幕凍結或當您嘗試操作手機時沒有回應：


取出電池，重新插入，然後開啓手機。

或者按住**電源/鎖定鍵** 10 秒以重啓手機。

如果問題仍然存在，請聯絡服務中心。

了解您的手機

裝置組件

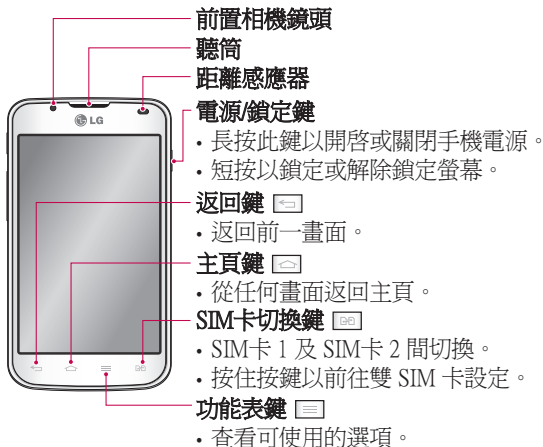


注意：距離感應器

當接收及撥出通話時，距離感應器會感應手機接近您的耳朵，並自動關閉畫面背光照明及鎖上觸控螢幕。這將延長電池壽命並且防止通話時不小心啟動觸控畫面。



警告：

若將較重物體置於手機上，或坐在手機上會損壞 LCD 和觸控畫面功能。請勿將保護貼掩蓋 LCD 的距離感應器。這可能會導致感應器出現故障。

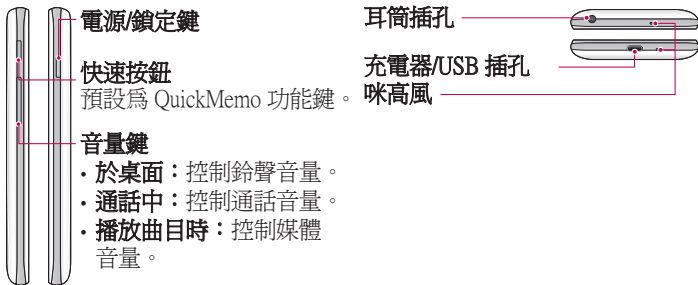


了解您的手機

安裝 SIM 卡及電池


開始使用新手機前，您需要進行設定。要插入 SIM 卡及電池：

- 1 要取下電池蓋，請用一隻手握住手機。再用另一隻手，如圖中所示用姆指推開背蓋。

備註：將拇指指甲插入 USB 插孔以揭開電池蓋。

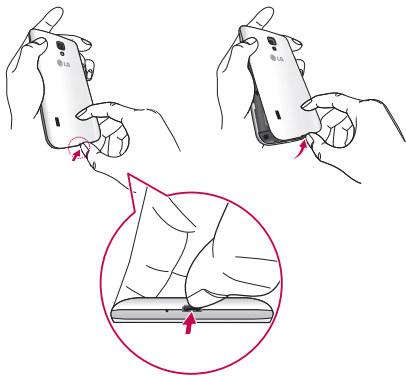

2 將SIM卡滑入SIM卡插槽。確保卡片的金屬接觸面朝下。

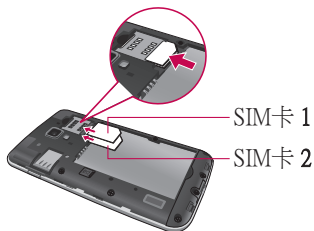

3 對準手機及電池的金屬接觸面插入電池 (1) 並且按下電池直至發出卡嗒聲，放置到位 (2).




4 將電池蓋對準電池格，如圖所示將 6 點向下按以卡入適當位置。



了解您的手機

為手機充電

充電器插孔位於手機底部。插入充電器，並將其連接至電源插座。

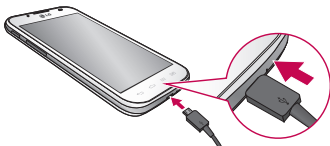

注意：第一次充電時必須將電池完全充電，以提高電池壽命。

注意：手機充電時，請勿取下電池蓋。



警告：

只使用 LG 認可的充電器、電池、及纜線。使用未經認可的充電器或纜線，可能會導致電池充電延遲或彈出關於充電延遲的訊息。由未經認可的充電器或纜線而導致電池爆炸或裝置損壞並不包括於保養範圍。

使用記憶卡

要安裝記憶卡：

將記憶卡插入插槽中。並確保金屬接觸面朝下。

要安全取出記憶卡：

點按  > 應用程式標籤 > 設定 > 裝置下的儲存裝置 > 移除 SD 卡 > 確定。



備註：LG-P715 支援最多 32GB 的記憶卡。



警告：

手機開啓時，請勿插入或移除記憶卡。這樣做可能會損壞您的記憶卡及手機，而記憶卡內儲存的數據亦可能毀損。

要格式化記憶卡：

您的記憶卡可能已格式化。如尚未格式化，您必須在使用前將其格式化。

注意：格式化記憶卡時，所有已儲存在卡上的資料都會被刪除。

- 1 在主頁點按  > **應用程式**標籤，以開啓應用程式功能表。
- 2 捲動並點按**設定**> **儲存裝置**。
- 3 點按**清除 SD 卡**> **清除 SD 卡**> **全部清除**。
- 4 如您已設定圖形鎖定，輸入圖形鎖定，然後選擇**全部清除**。

注意：如您的記憶卡包含其他內容，因為所有舊檔案已經刪除，所以記憶格式化後的資料夾結構可能會改變。

了解您的手機

將螢幕鎖定及解鎖

如果您暫時不使用手機，螢幕會自動關閉及鎖定。這有助防止意外按鍵，並可節省電池電力。

當您不使用 LG-P715 時，請按住**電源/鎖定鍵**以鎖定您的手機。

鎖定螢幕保安

您可鎖定您的螢幕，以確保只有您能解鎖以使用手機。

如是首次設定解鎖圖形、PIN 碼或密碼：

- 1 點按  > 應用程式標籤 > 設定 > 鎖定螢幕 > 選擇螢幕鎖定。
- 2 設定**無、揮動、臉部解除鎖定、圖形、PIN 碼或密碼**。
- 3 輸入所需資料。

注意：使用圖案鎖定的注意事項

請記住您所設定的解鎖圖案，這是非常重要的。如果錯誤輸入圖案的次數達到 5 次，您將無法存取您的手機。您有 5 次輸入解鎖圖案、PIN 或密碼的機會。如果您已使用全部 5 次機會，您可在 30 秒後再次嘗試。

當您記不起您的解鎖圖案：

如果您已用手機登入至您的 Google 帳號但 5 次輸入錯誤的圖形，請按**忘記解鎖圖形？**按鈕。然後，您需要登入您的 Google 帳戶以解鎖您的手機。

如果您尚未在手機上建立 Google 帳號或忘記備份 PIN，您需要進行硬性重新設定。

您的桌面

觸控螢幕提示

以下是一些小秘訣，讓您輕鬆使用觸控螢幕操作手機。

點按 - 要選擇功能表/選項或開啓應用程式，只需點按即可。

點按並按住 - 要開啓選項功能表或抓住要移動的物件，點按並按住該選項。

拖移 - 觸摸並按住項目片刻，然後於螢幕上移動手指但不抬起，直至到達目標位置。您可在桌面拖放項目改變其放置。

滑動 - 快速移動您的手指以橫跨螢幕表面，並於首次接觸螢幕時不停止動作（否則會變成拖拉項目）。例如，您可向上或向下滑動螢幕以捲動列表，或向左或向右掃動以瀏覽不同桌面（反之亦然）。

雙點按 - 雙點按以放大網頁或地圖。例如，快速雙點網頁的一部分以調整至適合螢幕的闊度。您亦可於使用地圖時雙點按以放大或縮小。

多點觸控 - 使用瀏覽器、地圖或瀏覽圖片時，使用食指及拇指的捏緊或展開動作進行放大或縮小。

旋轉螢幕 - 於許多應用程式及功能表，螢幕的方向會根據裝置本身的方向而作出調整。

注意：

- 要選擇某個項目，請觸控圖示中心。
- 請勿過份用力按壓；只需輕力但確切地點按，觸控螢幕已能感應。
- 使用手指尖點按您需要的選項。請注意不要碰到其他按鍵。

桌面

只需將手指左右滑動便可檢視控制板。您可以使用應用程式、下載、小工具及牆紙自訂每個控制板。

注意：視乎您的手機供應商，某些螢幕圖像可能會有差異。

在桌面上，您可檢視螢幕下方的快速按鍵。快速按鍵提供簡易的存取

您的桌面

方法，讓您一按即能使用您最常用的功能。

 點按**手機**圖示開啓觸控撥號鍵盤，撥打電話。

 點按**通訊錄**以開啓您的通訊錄。

 點按**訊息**圖示，進入訊息功能表。在此您可以建立新訊息。

 點按螢幕底部的**應用程式**圖示。您便可檢視您安裝的全部應用程式。要開啓應用程式，只需點按應用程式清單中的圖示。

自訂桌面

您可以新增應用程式、下載、小工具或牆紙，以自訂您的桌面。要更輕鬆使用手機，將您最喜愛的應用程式及小工具新增至桌面。

要將項目新增至桌面：

- 1 點按並按住桌面的空白部分。
- 2 在新增模式功能表，選擇您想新增的項目。然後您將看到桌面上新增的項目。
- 3 將項目拖放至所需位置，然後放開手指。

要從桌面移除項目：

- **桌面** > 點按並按住您想移除的圖示 > 將圖示拖曳至 。

提示！ 要將應用程式圖示從應用程式功能表新增至桌面，觸摸並按住您想新增的應用程式。

返回最近使用的應用程式

- 1 點按並按住**主頁**鍵。畫面會顯示包含您最近使用的應用程式圖示的彈出式視窗。
- 2 點按圖示以開啓應用程式，或者按**返回**鍵以返回上一個畫面。

通知

通告欄顯示於螢幕的頂部。
您可點按並向下滑動通告欄。



下表說明可能在狀態列中看到的圖示含義。
通知面板會於頂部顯示您的所有通知及快速設定。

快速設定

向左或右方滑動快速設定列以查看更多按鍵。

點按  >  以管理您的快速設定。您可在新增或移除管理聲音設定檔、資料、藍牙、GPS、Wi-Fi、旋轉螢幕、飛航模式、熱點、或省電。

您的桌面

檢視狀態列

狀態列使用不同圖示顯示手機資訊，例如訊號強度、新訊息、電池壽命、啟動中的藍牙及數據連接。



圖示	說明
	沒有SIM卡
	無訊號
	飛航模式
	已連接至 Wi-Fi 網絡
	電力節省開啓
	有線耳機
	正在通話
	通話保留
	喇叭開啓
	電話話筒已靜音
	未接來電
	藍牙開啓

圖示	說明
	系統警告
	鬧鐘已設定
	新留言訊息
	鈴聲靜音
	震動模式
	電池已完全充電
	電池充電中
	手機已通過 USB 線連接至電腦
	數據下載
	數據上載
	正在取得 GPS
	從 GPS 接收位置數據

	正在同步數據		FM 收音機已在背景 啟動
	新 Gmail		USB 共享網絡已啟動
	新 Google 語音訊息		可攜式 Wi-Fi 熱點已 啟動
	正在播放歌曲		USB 網絡連線及可攜式 Wi-Fi 熱點已啟動

螢幕鍵盤

您也可以使用螢幕鍵盤輸入文字。當您需要輸入文字時，螢幕鍵盤會自動顯示在螢幕上。要手動顯示鍵盤，只需點按您要輸入文字的文字欄位即可。

使用鍵盤與輸入文字

 點按一下以大寫您輸入的下一個字母。點按兩下即可大寫所有字母。

  點按切換至數字及符號鍵盤。您亦可以點按並按住這個標籤以瀏覽設定功能表。

 點按以輸入一個空格。

 點按以新建一行。

 點按以刪除前一個字母。

輸入重音字母

當您選擇法文或西班牙文作為文字輸入語言，您可輸入特殊的法文或西班牙文字元（例如：「á」）。

例如，要輸入「á」，點按並按住「a」鍵直至放大鍵放大並顯示其他語言的字元。

然後選擇所需的特殊字元。

Google 帳戶設定

第一次開啓您的手機時，您可以啓動網絡，以登入至您的 Google 帳號，並選擇您想如何使用某些 Google 服務。

要設定 Google 帳號：

- 於系統提示的設定畫面登入 Google 帳號。

或者

- 點按  > 應用程式標籤 > 選擇一個 Google 應用程式（如 Gmail） > 選擇 **New** 以建立新帳號。

如果您已有 Google 帳號，點按 **Existing**，輸入您的電郵地址及密碼，然後點按 **完成**。

於手機上設定了您的 Google 帳號後，您的手機會自動於網上與您的 Google 帳號進行同步。

您的通訊錄、Gmail 訊息、日曆事件及其他資訊會從網上的應用程式及服務同步至您的手機。（這視乎您的同步設定）。

登入後，您可使用 Gmail™ 並在手機上使用 Google 服務。

連接到網絡及裝置

Wi-Fi

使用 Wi-Fi，您可以在無線接入點 (AP) 範圍內高速訪問互聯網。使用 Wi-Fi 享用無線互聯網，而不會收取額外費用。

連接至 Wi-Fi 網絡

要於手機上使用 Wi-Fi，您需要存取無線存取點或「熱點」。一些存取點乃開放的存取點，您只需簡單連接便可。其他存取點乃隱藏或使用保安功能；在連接它們前必須先設定您的手機。

要延長電池壽命，請在不使用 Wi-Fi 時將其關閉。

備註：如您並非處於 Wi-Fi 地區或已將 Wi-Fi 設定為關閉，您可能需支付由流動營運商收取的流動數據使用額外收費。

開啓 Wi-Fi 並連接至 Wi-Fi 網絡

- 1 點按  > 應用程式標籤 > 設定 > 無線及網絡下的 **Wi-Fi**。
- 2 將 **Wi-Fi** 設定為 **開啓** 以開啓並搜尋可使用的 Wi-Fi 網絡。
- 3 再次點按 Wi-Fi 功能表以檢視範圍內活動中的 Wi-Fi 網絡列表。
 - 已加密的網絡旁邊會有一個鎖形圖示。
- 4 點按一個網絡以開始連接。
 - 如該網絡已加密，手機會提示您輸入密碼或其他憑證（請向您的網絡管理員查詢詳情）。
- 5 狀態欄上的圖示會顯示 Wi-Fi 狀態。

藍牙

在大部分手機上，您可以透過執行相應應用程式，而非從藍牙功能表，使用藍牙傳送資料。

注意：LG 並不會對經藍牙無線功能傳送或接收資料而造成的資料遺失、攔截或誤用負責。

隨時確保透過信任且安全的裝置分享與接收您的資料。若是裝置之間有障礙物，可能需要縮短可運行的距離。

有些裝置（特別是經由藍牙 SIG 測試許可的裝置）可能會與您的手機不相容。

開啓藍牙並與藍牙裝置配對您的手機

您必需先將裝置跟另一部機器配對，才可將兩者連接。

- 1 點按  > **應用程式標籤** > **設定** > 於無線及網絡將**藍牙**設定為**開啓**。
 - 2 再次點按**藍牙**功能表。確保目標裝置已設定為可偵測性，然後點按畫面底部的**搜尋裝置**。
 - 3 從列表中選擇您想配對的裝置。
- 配對成功後，您的裝置就會連接到該裝置。

備註：部分裝置，特別是耳機或免提車內套件，可能設有固定的藍牙 PIN 碼，例如 0000。如其他裝置設定 PIN 碼，系統將提示您輸入。

使用藍牙傳送圖片

- 1 於**媒體匣**選擇圖片 >  > **藍牙**。
 - 2 選擇要將數據發送至的設備。
- 您可從合適的應用程式或**下載**中，發送一個或多個通訊錄、行事曆事件、或媒體檔案。

連接到網絡及裝置

使用藍牙接收資料

- 1 點按  > 應用程式標籤 > 設定 > 藍牙。
- 2 點按**使手機可見**以可見於其他裝置上。

備註：要選擇您裝置顯示的時間長短，觸控  > 可見性逾時。

- 3 當您收到檔案傳輸訊息，點按**接受**。

共享手機的數據連接

USB 共享網絡及可攜式 Wi-Fi 熱點在沒有可用的無線網絡連線可用時是個非常好的功能。您可以透過 USB 線（USB 網絡連線）與單一電腦共享手機的流動數據連接。您亦可將手機變為可攜式 Wi-Fi 熱點，同時跟多過一部裝置共享手機的數據連線。

當手機正共享數據連接，狀態欄會顯示圖示，而通知欄內也會顯示進行中的通知。

有關共享網絡及可攜式熱點的最新資訊，包括受支援的操作系統及其他詳情，請瀏覽 <http://www.android.com/tether>。

更改可攜式 Wi-Fi 熱點設定：

- 點按  > 應用程式標籤 > 設定 > 無線及網絡下的**更多** > **可攜式 Wi-Fi 熱點** > 選擇需要更改的選項。

提示！如您的電腦運行的為 Windows 7 或最近發行的 Linux 版本（如 Ubuntu），您將無需為共享網絡而預備您的電腦。不過，如您正使用較舊的 Windows 版本或其他作業系統，您可能需要預備您的電腦以經 USB 建立網絡連線。有關支援 USB 共享網絡的操作系統及其設定方式的最新資訊，請瀏覽 <http://www.android.com/tether>。

要重新命名或保護可攜式熱點

您可以更改手機 Wi-Fi 網絡名稱 (SSID)，並保護手機的 Wi-Fi 網絡。

- 1 在主頁點按  > **應用程式** 標籤 > **設定**。
- 2 點按**無線及網絡**中的**更多**，然後選擇**可攜式Wi-Fi熱點**。
- 3 確保已勾選**可攜式 Wi-Fi 熱點**。
- 4 觸控**設定Wi-Fi熱點**。
 - 會開啓**設定Wi-Fi熱點**的對話方塊。
 - 您可以更改當掃描 Wi-Fi 網絡時其他電腦所看見的網絡 SSID（名稱）。
 - 您也可以點按**安全**功能表，使用預先共用的金鑰 (PSK) 設定 Wi-Fi 受保護存取 2 (WPA2) 的網絡。
 - 如果您觸控 **WPA2 PSK** 安全選項，密碼欄會新增至**設定Wi-Fi熱點**的對話方塊上。如果您輸入密碼，使用電腦或其他裝置連接至手機的熱點時則需要輸入該密碼。您可點按**安全**功能表內的**開啓**，從 Wi-Fi 網絡移除安全性。
- 5 點按**儲存**。

注意！ 如果您將安全選項設定為開啓，您不能阻止他人於未經授權下使用網上服務，並可能造成額外收費。要避免未經授權的使用，我們建議您啓用安全選項。

使用 Wi-Fi Direct

您可與使用相同 Wi-Fi 和 Wi-Fi Direct 網絡連接的 Android 手機使用者分享您的音樂、圖片和影片內容。

事先檢查 Wi-Fi 和 Wi-Fi Direct 網絡連接，確保使用者已連接至相同網絡。

- 1 點按  > **應用程式** 標籤 > **設定** > **無線及網絡** 下的 **Wi-Fi**。

連接到網絡及裝置

- 1 點按**功能表鍵**  > **Wi-Fi Direct**。
- 2 從已掃描裝置列表選擇裝置進行連接。
- 3 點按**確定**。

備註：當您開始啓用 Wi-Fi Direct 時，Wi-Fi 連線會被中斷連接。

啓用 Wi-Fi Direct 透過 SmartShare 進行分享

Wi-Fi Direct 自動自動調頻附近的 Wi-Fi Direct 裝置並會列出搜尋到的裝置，您可以選擇指定的裝置，透過 Smart Share 分享多媒體數據。

- 1 點按  > **應用程式標籤** > **設定** > 無線及網絡下的**Wi-Fi**。
- 2 點按**功能表鍵**  > **Wi-Fi Direct**。
- 3 從已掃描裝置列表選擇裝置進行連接。

建立群組 - 點按以啓動群組所有者模式，透過掃描您的手機，讓舊版 Wi-Fi 裝置連接。此時您必須輸入在**密碼**中設定的密碼。

注意：當手機成為群組所有者時，將會較成為用戶時消耗更多電池電量。Wi-Fi Direct 連接並不提供互聯網服務。連接及使用網上服務可能需要額外付費。請向網絡供應商諮詢收費詳情。

使用 SmartShare

SmartShare 使用 DLNA（數碼生活網絡聯盟）技術透過無線網絡分享數碼內容。兩個裝置均必須獲 DLNA 認證以支援此功能。

開啓 SmartShare 及允許共享內容

- 1 點按  > **應用程式 標籤** > **SmartShare**。
- 2 點按  並選擇**設定**。
- 3 點按可偵測性以讓其他裝置可偵測您的裝置。

- 如果您想自動接受來自其他裝置的共享要求，請點按**始終接受請求**。
- 點按 **接收檔案** 如果您想自動允許來自其他裝置上傳至您手機的檔案。
- 4 在共享內容部分下，點按為想共享的內容類型加上核取符號。從 **相片**、**影片** 及 **音樂** 中選擇。
- 5 SmartShare 隨即被啟動並可供分享內容。

注意： 請確保裝置的 DLNA 功能已正確設定（例如：電視及電腦）。

- 1 點按  > **應用程式標籤** > **SmartShare**。
- 2 點按**至按鈕** ，然後從播放裝置清單選擇裝置。
- 3 點按**由按鈕**  並選擇作為遙控內容媒體庫的裝置。
- 4 您可瀏覽資料庫。
- 5 按住內容縮圖，然後使用手指將縮圖撥至上方區域，或點按**功能表鍵**  > **播放**。

要從您的手機將內容分享至播放裝置（例如：電視）

注意： 請確保播放裝置的 DLNA 功能已正確設定。

- 1 使用**音樂**應用程式播放音樂時，點按標題區域的標籤  /  / 。
 - ：需已連接到網絡
 - ：於網絡中選擇裝置
 - ：內容會通過 SmartShare 被分享。
- 2 從播放裝置表選擇裝置以播放檔案。

備註： 根據相同步驟使用音樂播放器、影片播放器及 Polaris Office 分享內容。

連接到網絡及裝置

注意： 確保您的裝置已使用 Wi-Fi 連線連接到您的家居網絡以使用此應用程式。

部分 DLNA 設備（如電視）只支援 DLNA 的 DMP 功能，這些裝置將不會在播放裝置清單上出現。

您的裝置有可能無法播放某些內容。

從遠端內容資料庫下載內容

- 1 點按  > 應用程式標籤 > SmartShare。
- 2 點按至按鈕  並選擇作為遙控內容媒體庫的裝置。
- 3 現在您可瀏覽內容媒體庫。
- 4 點按並按住內容縮圖，然後點按下載。

注意： 某些類型的內容或不支援。

要從遙控內容媒體庫上載內容

- 1 點按  > 應用程式標籤 > SmartShare。
- 2 點按由按鈕 ，然後選擇我的手機。
- 3 您可瀏覽本機內容資料庫。
- 4 點按並按住內容縮圖，然後點按上載。
- 5 選擇要上載的遠方內容資料庫裝置。

注意： 部分 DLNA 裝置不支援 DMS 上載功能並不會上載檔案。某些類型的內容或不支援。

FileShare

FileShare 應用程式讓您可透過 Wi-Fi Direct 分享多媒體檔案及文件至其他裝置。

- 1 點按  > 應用程式標籤 > FileShare。
- 2 選擇您要共享的內容類型。點按**圖像**、**影片**、**音樂**或**文件**。
- 3 點按螢幕右上角的  >，然後勾選您想分享的檔案。
- 4 點按**發送**以開始掃描可用裝置，然後從列表選擇所需裝置。

通話功能

撥打電話

- 1 點按  開啟按鈕。
- 2 使用鍵盤輸入號碼 要刪除數字，點按 。
- 3 點按  撥打電話。
- 4 要結束通話，點按**結束**圖示 。

提示！ 要在撥打國際電話時輸入「+」，點按並按住 。

從通訊錄中撥打電話

- 1 點按  可開啟通訊錄。
- 2 捲動聯絡人清單，或點按**搜尋通訊錄**以輸入您想致電的聯絡人名稱。
- 3 於列表中點按  以撥打電話。

接聽來電和拒接來電

於鎖定狀態接到來電時，向任何方向滑動  以接聽來電。

滑動  以拒絕接聽來電。

如您想發送訊息，於底部向任何方向滑動**用訊息拒絕**圖示。

提示！ 使用訊息拒絕

透過此項功能，您可以迅速傳送訊息。如果您需要在會議中回覆訊息，此功能將十分有用。

調節通話音量

要在通話時調整通話音量，使用手機左側的向上及向下音量鍵。

通話期間撥打第二個電話

- 1 撥打第一個電話時，點按 **功能表** > **新增通話** 然後輸入號碼。您亦可點按  前往最近通話清單或點按  搜尋通訊錄並選擇您想進行通話的聯絡人。
- 2 點按  撥打電話。
- 3 兩個通話均會在通話螢幕中顯示。您的原來通話會被鎖定及保留。
- 4 點按顯示的號碼，在通話之間切換。或點按  **合併通話** 以開始電話會議。要結束使用中通話，點按**結束**，或按**主頁鍵**，並向下滑動通知列，然後選擇**結束通話**圖示 。

注意：您撥打的每一個通話均需收費。

檢視通話記錄

在桌面點按  然後選擇 **通話記錄** 標籤 。
您可檢視所有已撥、已接和未接話音通話的完整清單。

提示！ 點按任何通話記錄項目，檢視通話的日期、時間和持續時間。

提示！ 點按功能表鍵，然後點按刪除全部，刪除所有記錄項目。

通話設定

您可設定由供應商所提供如來電轉接及其他特別功能等的手機通話設定。

通話功能

1 在桌面點按 。

2 點按**功能表**。

3 點按**通話設定**，選擇您要調整的選項。

4 點擊**智能咭 1 或 智能咭 2**以設定以下通話選項。

固定撥號 - 開啓並編輯一份可從您手機撥打的號碼清單。需要使用 PIN2 碼，您可以向網絡商索取此 PIN2 碼。僅可從手機撥出固定撥號列表包含的號碼。

語音留言 - 允許您選擇您服務供應商的語音留言，輸入電話號碼以收聽及管理您的語音留言，並設定通知聲音或震動選項。

來電轉接 - 選擇當忙碌時、無人接聽或無訊號時轉駁所有通話。

通話限制 - 選擇您想要何時限制通話。輸入通話限制密碼。請向您的網絡供應商瞭解此服務詳情。

通話時間 - 檢視最後通話、撥出通話、已接來電及所有通話的通話時間。

其他設定 - 您可更改以下設定：

本機號碼：選擇是否在撥出的電話中顯示您的電話號碼。

來電待接：如已啓動來電等候，當您在通話中接到來電，手機便會通知您（視乎您的網絡供應商而定）。

5 點按**通用**以設定以下通話選項。

拒接來電 - 允許您設定拒接來電功能並管理拒接列表。

用訊息拒絕 - 當您想拒接來電時，您可發送預設訊息。於此功能表中，您可以新增或編輯當您想拒接來電時要發送的訊息。

連接震動 - 於另一方接聽來電時手機震動。

隱私保護工具 - 設定私隱保護工具選項。

電源鍵可結束通話 - 如您想以電源鍵結束通話，勾選此選項。

儲存未知號碼 - 通話後將未知號碼新增至聯絡人。

通訊錄

新增聯絡人至您的手機並與您的 Google 帳號或其他支援通訊錄同步的帳號同步。

搜尋聯絡人

在桌面

- 1 點按  可開啓通訊錄。
- 2 點按**搜尋通訊錄**，使用鍵盤輸入該聯絡人姓名。

新增聯絡人

- 1 點按 ，輸入新聯絡人的號碼，然後點按**功能表鍵**。點按**新增至通訊錄 > 建立新通訊錄**。
- 2 若要為新聯絡人新增圖片，點按新增圖片。
選擇**拍照**或**從媒體匣中選取**。
- 3 點按  選擇通訊錄類型。
- 4 點按一個聯絡資訊類別，然後輸入聯絡人的詳情。
- 5 點按**儲存**。

常用的聯絡人

您可將常用的聯絡人分類為您的最愛。

新增聯絡人至您的最愛

- 1 點按  可開啓通訊錄。
- 2 點按一個聯絡人以檢視詳情。
- 3 點按聯絡人名稱右面的星號。星號變為黃色，聯絡人便新增至您的最愛。

通訊錄

從最愛清單移除聯絡人

- 1 點按  可開啓通訊錄。
- 2 點按  標籤，在清單上方選擇**最愛**，然後選擇聯絡人以檢視詳情。
- 3 點按聯絡人名稱右面的星號。星號會變為灰色並聯絡人將從我的最愛移除。

訊息

LG-P715 會將文字訊息和多媒體訊息結合在一個易用的功能表中。

發送訊息

- 1 點按桌面上的  然後點按  以開啓空白訊息。
- 2 在**收件者**一欄中輸入聯絡人名稱或聯絡人號碼。當您輸入該聯絡人名稱時，會顯示匹配的聯絡人。您可點按一個建議的收件者。您可以新增多個聯絡人。

注意：如訊息有多個收件者，您需要為每一位收件者分別繳付文字訊息費用。

- 3 點按**訊息經由SIM 1 卡發送**訊息欄位以開始編寫訊息。
- 4 點按  以開啓選項功能表。選擇**快捷訊息**、**插入表情符號**、**排程傳送**、**新增主旨**或**捨棄**。
- 5 點按**發送**以發送訊息。
- 6 螢幕會顯示回覆。當您檢視及發送更多訊息，便會建立一個訊息串連。

 **警告：**160 個字元的限制可能會視乎不同國家的文字訊息編碼方式及語言而有所不同。

 **警告：**如您新增圖像、影片或音頻檔案至一個文字訊息，它會自動轉換為多媒體訊息，而您亦會被收取相應費用。

訊息串連方塊

與另一方交換的訊息（文字訊息、多媒體訊息）可按時間順序顯示，讓您方便地查看對話總覽。

使用表情符號

表情符號能使您的訊息更生動。

在編寫新訊息時點按**功能表**鍵，然後選擇**插入表情符號**。

更改訊息設定

LG-P715 已預先定義訊息設定，讓您可立即發送訊息。您可按偏好更改這些設定。

- 於桌面點按  > 點按  > **設定**。

電郵

您可使用電子郵件應用程式以從例如 Gmail 服務等讀取電子郵件。電子郵件應用程式支援以下帳號類型：POP3、IMAP 及 Exchange。您的服務供應商或管理員系統可提供您所需的帳號設定。

管理電子郵件帳號

於首次開啓電子郵件應用程式時，設置精靈將開啓以助您設置電子郵件帳號。

要新增其他電郵帳號：

- 點按  > 應用程式標籤 > 電子郵件 > 點按  > 帳號 > 點按  > 新增帳號。

初次設定完成後，電郵會顯示您的收件匣內容。如果您已新增多於一個帳戶，您可在帳戶間切換。

要更改電子郵件設定：

- 點按  > 應用程式標籤 > 電子郵件 > 點按  > 帳號設定。

要刪除電子郵件：

- 點按  > 應用程式標籤 > 電子郵件 > 點按  > 帳號 > 按住您想刪除的帳號 > 移除帳號。

電子郵件帳號畫面

您可點按某一個帳戶以檢視其收件匣。預設情況下，您發出電子郵件的帳戶以勾選標記表示。

 - 點按資料夾圖示以開啓帳戶資料夾。

只有帳戶內最近期的電郵才會下載至您的手機。

處理帳號資料夾

每個帳戶設有收件匣、寄件匣、已發送及草稿資料夾。您可能會有更多資料夾，視乎您的帳戶服務供應商所支援的功能而定。

編寫及發送電子郵件

要編寫及發送電子郵件

- 1 在**電子郵件**應用程式，點按 。
- 2 輸入將會收到電子郵件的收件者的地址。當您輸入文字時，會從您的通訊錄顯示匹配的地址。以分號分隔多個地址。
- 3 視需要增加副本/密件副本以及加入附件檔案。
- 4 輸入電子郵件的文字。
- 5 點按 。

如您沒有連接至網絡，例如正處於飛航模式，您發送的電子郵件會儲存在寄件匣料夾內，直至您再次連接至網絡。如載有任何有待處理的電子郵件，會於帳戶畫面顯示寄件匣。

提示！ 當新電子郵件到達您的收件匣時，會以聲音或震動進行通知。

相機

了解取景器



- ❶ **切換鏡頭** - 允許您切換至後方鏡頭或前置鏡頭。
- ❷ **Cheese 快門** - 允許您開啓或關閉語音拍攝。開啓時，只需說 Cheese、Smile、Whisky、Kimchi 或 LG即可拍攝相片。
- ❸ **拍攝模式** - 選擇**標準**、**全景拍攝**或**連環拍攝**。
- ❹ **閃光燈** - 選擇**關閉**、**開啓**或**自動**。
- ❺ **設定** - 點按此圖示開啓設定功能表。
- ❻ **切換模式** - 點按此圖示以從相機模式或影片模式切換。
- ❼ **拍攝** - 拍攝相片。
- ❽ **媒體匣** - 點按可觀賞您最後拍攝的相片。這容許您從相機模式存取媒體匣並檢視已儲存的相片。

相機

快速拍照

- 1 開啟**相機**應用程式。
- 2 握住手機，將鏡頭對準拍攝的對象。
- 3 對焦方框將出現於取景器中心。您亦可點按螢幕中任何地方以進行對焦。
- 4 當對焦方塊變綠，則表示相機對焦完成。
- 5 點  以拍攝相片。

拍攝相片後

如自動檢視被設定為開啟（根據進階設定使用），您拍攝的相片會出現於螢幕上。

共享 - 點按以使用**FileShare**、**Gmail**、**Google+**、**Picasa**、**发送给朋友**、**訊息**、**備忘錄**、**電子郵件**、**藍牙** 或其他支援的已下載應用程式分享相片。

設為 - 點按即可使用圖像為**主頁螢幕牆紙**、**通訊錄相片**或**鎖定畫面牆紙**。



- 點按以刪除圖像。



- 點按以立即拍攝新相片。



- 點按以檢視已儲存相片的媒體匣。

使用進階設定

在取景器內點按  以開啟所有進階選項。



輕觸以更改取景器功能表。




放大或縮小。

	決定並控制進入影片的光線量。
	選擇相片解像度。如您選擇高解像度，相片大小將會增加，這代表您可於記憶體中儲存較少相片。
	為目前環境尋找適當的色彩及亮度設定。
	ISO 等級決定相機的光線感應器的感光度。ISO 等級越高，相機對光線越敏感。當您在光線較暗環境下拍照且無法使用補光燈時，此功能非常有用。
	於不同光線環境下提高色彩質數。
	為新相片選擇色調。
	設定於按下拍攝鍵後延遲快門。此功能最適合自拍時使用。
	啓動此功能以使用手機的位置服務。您可隨時隨地拍攝相片，並標籤相片拍攝的位置。如您將已標籤的相片上載至支援地理位置標記的網誌，您的相片便會在地圖上顯示。 注意：此功能只可於 GPS 功能啓用時提供。
	選擇快門聲音。
	自動顯示您剛拍攝的相片。
	選擇儲存圖片的位置。
	還原所有相機預設設定。
	相機說明指南。

視像攝錄機

了解取景器

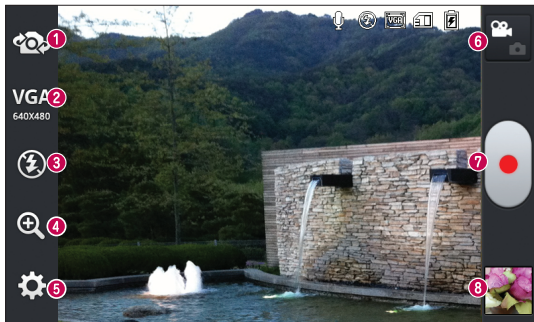

- ❶ **切換鏡頭** - 允許您切換至後方鏡頭或前置鏡頭。
- ❷ **影片大小** - 點按以設定所錄製影片的大小（像素）。選擇影片大小為TV (720x480)、VGA(640x480)、多媒體訊息 (320x240) 及多媒體訊息 (176x144)。
- ❸ **閃光燈** - 允許您於黑暗環境中拍攝影片時開啓閃光燈。
- ❹ **變焦** - 拉近或拉遠鏡頭。
- ❺ **設定** - 點按此圖示開啓設定功能表。
- ❻ **切換模式** - 點按此圖示以從相機模式或影片模式切換。
- ❼ **錄製** - 開始錄製。
- ❽ **媒體匣** - 點按以觀看您最後錄製的影片。這容許您從相機模式存取媒體匣並觀看已保存的影片。

錄製影片

- 1 開啓相機應用程式並點按影片模式按鈕。
- 2 視像攝錄機的取景器會在螢幕上顯示。
- 3 水平握住手機，將鏡頭對準拍攝影片的對象。
- 4 點按錄製  按鈕一下以開始錄影。
- 5 紅光將於取景器頂部閃爍，而計時器會顯示影片錄製的長度。
- 6 點按螢幕上的  以停止攝錄。

錄製影片後

如自動檢視被設置為開啓時代表您影片的靜態圖像將會出現於螢幕上。

播放 - 點按以播放影片。

共享 - 點按以透過 [FileShare](#)、[Gmail](#)、[Google+](#)、[Picasa](#)、[YouTube](#)、[发送给朋友](#)、[訊息](#)、[電子郵件](#)、[藍牙](#)或其他支援的已下載應用程式分享影片。

注意：如在漫遊期間下載多媒體訊息，則可能需額外收費。



- 點按以刪除剛錄製的影片。



- 點按以即時錄製另一段影片。當前影片將會被儲存。



- 點按以檢視已儲存影片的媒體匣。

視像攝錄機

使用進階設定

從取景器中點按  以開啓所有進階選項。

	輕觸以更改取景器功能表。
	決定並控制進入影片的光線量。
	於不同光線環境下提高色彩質數。
	爲新影片選擇要使用的色調。
	啓動此功能以使用手機的位置服務。
	選擇 關閉 以錄製無聲影片。
	自動檢視可顯示您剛拍攝的影片。
	選擇儲存影片的位置。
	還原全部視像攝錄機的預設設定。

觀看影片時調整音量

要在影片播放途中調整音量，您可使用在手機左方的音量鍵。

多媒體

媒體匣

您可在內置記憶體中儲存多媒體檔案，以便存取您所有的多媒體檔案。使用此應用程式以檢視如圖片或影片等多媒體檔案。

- 1 點按  > **應用程式標籤** > **媒體匣**。
開啓儲存多媒體檔案的類別欄列表。

注意：

- 視乎手機的軟件而定，可能不支援部分檔案格式。
- 視乎檔案編碼而定，某些檔案或不能正常播放。

檢視圖片

啓動媒體匣將顯示可提供的文件夾。當其他如電子郵件等應用程式保存圖片時，下載文件夾會自動建立以剩載該圖片。同樣地，當擷取螢幕截圖時螢幕截圖並會建立。選擇文件夾以進行開啓。

圖片會以建立日期顯示於文件夾中。選擇圖片以全螢幕檢視。向左或右捲動以檢視下一個或上一個圖像。

放大及縮小

使用以下方法以放大圖像：

- 於任何位置點按兩次以放大。
- 於任何位置將手指分開以放大。捏緊以縮小或點按兩次以重新放大。

播放影片

影片檔案的  圖示將顯示於預覽中。選擇影片進行觀看並點按 。影片應用程式將隨即啓動。

刪除相片/影片

於文件夾中，點按  並以勾選方式選擇相片/影片，然後點按**刪除**。

多媒體

設定為牆紙

於檢視相片時，點按**功能表鍵**  > **將影像設定為**以將圖像設定為牆紙或設置為聯絡人圖像。

注意：

- 視乎裝置軟件而定，某些檔案格式並不支援。
- 如果檔案大小超過可用的記憶體，則在開啓檔案時會發生錯誤。

影片

手機配備內置影片播放器，可讓您播放所有最愛的影片。要存取影片播放器，點按  > **應用程式標籤** > **影片**。

播放影片

- 1 點按  > **應用程式標籤** > **影片**。
- 2 選擇要播放的影片。

	點按以暫停影片播放。
	點按以恢復影片播放。
	點按即可快轉 10 秒。
	點按即可倒轉 10 秒。
	點按即可控制影片音量。
	點按以開啓 QSlide 功能。
	點按以更改影片螢幕比例。
	點按以通過 SmartShare 功能分享您的影片。
	點按以設定鎖定鍵。

若要在觀看影片時調節音量，請按手機左側的向上及向下音量鍵。

音樂

LG-P715 配備內置音樂播放器，可讓您播放所有最愛的曲目。要存取音樂播放器，點按  > **應用程式標籤** > **音樂**。

使用媒體同步 (MTP) 傳送音樂檔案

- 1 使用 USB 線將 LG-P715 連接至電腦。
- 2 如果您沒有在電腦上安裝 LG Android 平台驅動程式，您需要手動變更設定。選擇**設定** > **PC 連接** > **USB 連接類型**，然後選擇**媒體同步 (MTP)**。
- 3 您可於電腦檢視大容量儲存體的內容並傳送檔案。

播放歌曲

- 1 在桌面點按  > **應用程式標籤** > **音樂**。
- 2 點按**歌曲**。
- 3 選擇要播放的歌曲。

	點按以使用 YouTube 尋找檔案。
	點按以通過 SmartShare 功能分享您的音樂。
	點按設定隨機播放模式。
	點按設定重複播放模式。
	點按以控制歌曲音量。
	點按以暫停播放。
	點按以恢復播放。
	點按以跳至列表的下一首曲目。
	點按以返回歌曲的開首。點按兩次以返回上一首歌曲。

多媒體



點按以設定為最愛。



點按以查看目前播放列表。



連接至耳機插孔時，點按以設定 Dolby 聲音音效。

要在聆聽音樂時調節音量，按手機左方的向上及向下音量鍵。
點按並按住清單上的任何歌曲，**播放**、**新增至播放列表**、**分享**、**設為鈴聲**、**刪除**、**詳細資料**及**搜尋**選項將隨即顯示。

注意：

- 視乎裝置軟件而定，某些檔案格式並不支援。
- 如果檔案大小超過可用的記憶體，則在開啓檔案時會發生錯誤。

注意：音樂檔案的版權可能受國際公約和國內版權法保護。

因此，您或需要取得授權或許可，才可以複寫或複製音樂。

在某些國家，國內法律禁止私人複製受版權保護的材料。下載或複製檔案前，先檢查有關國家關於使用這類材料的國家法律。

FM收音機

LG-P715 具有內置 FM 收音機，只要作出適當調校，就可以隨時隨地聆聽您最愛的電台。

注意：您需要插入耳機才可收聽收音機。請將之插入耳機插孔。

搜尋電台

您可以使用手動或自動搜尋功能調校電台。它們會被儲存至指定的頻道號碼，因此您無需再次進行搜尋。

您可於手機上儲存最多 6 個頻道。

自動調頻

- 1 在桌面點按  > **應用程式** 標籤 > **FM 收音機**。
- 2 點按 ，然後選擇**掃描**。
- 3 在自動掃描的過程中，如您希望停止掃描點按**取消**。只會儲存您停止掃描之前的已掃描頻道。

注意：您亦可使用螢幕轉輪以手動方式調頻。

提示！ 要改善收音機的接收效果，您可延長耳機線，因為耳機線也有收音機天線的功能。

若連接的耳機並非為了接收電台訊號而特製，接收效果或會欠佳。

LG SmartWorld

LG SmartWorld 提供各式各樣的豐富內容 - 遊戲、應用程式、牆紙及鈴聲 - 讓 LG 手機使用者盡享多姿多采的「流動生活」體驗。

如何從手機進入 LG SmartWorld

- 1 點按  圖示以存取 LG SmartWorld。
- 2 輸入 LG SmartWorld 的 ID/PW 並點按“登入”。如果您未註冊，點按註冊可成為 LG SmartWorld 會員。
- 3 下載想要的內容。

備註：如果沒有  圖示該怎麼辦？

- 1 使用手機網絡瀏覽器，存取 LG SmartWorld (www.lgsmartworld.com) 並選擇您的國家/地區。
- 2 下載 LG SmartWorld 應用程式。
- 3 執行並安裝已下載的檔案。
- 4 點按圖示以存取 LG SmartWorld .

如何使用 LG SmartWorld

- 參與 LG SmartWorld 每月推廣。

	搜尋內容。
	以類別搜尋內容（例如：遊戲、教育、娛樂等）。
	已下載/等候更新內容。

- 嘗試使用簡易「功能表」按鍵，快速尋找您正在搬尋的內容。
向您推薦的應用程式 - 根據您以往的選擇為您推薦內容。
設定 - 設定設定檔及顯示。
登入 - 設定您的用戶名及密碼。

- 也嘗試其他實用的功能吧（內容詳細資料螢幕）。

注意： LG SmartWorld 不一定在所有運營商或國家中提供。

On-Screen Phone

On-Screen Phone 讓您透過 USB 或 Wi-Fi 連接從電腦裡檢視手機螢幕。您亦可在電腦上利用滑鼠或鍵盤，控制您的手機。

On-Screen Phone 圖示

	將手機連接到電腦，或中斷連接。
	更改 On-Screen Phone 偏好設定。
	結束 On-Screen Phone 程式。
	將 On-Screen Phone 視窗最大化。
	將 On-Screen Phone 視窗最小化。

On-Screen Phone 功能

- 即時傳送及控制：連接至電腦時，顯示並控制您的手機螢幕。
- 滑鼠操控：讓您在電腦螢幕上使用滑鼠拖動並點按，以控制您的手機。
- 使用鍵盤輸入文字：讓您使用電腦鍵盤編寫文字訊息或備註。
- 檔案傳送（由手機至電腦）：從手機將檔案（如相片、影片、音樂及 Polaris Office 檔案）傳送至電腦內。只須在想傳送至電腦的檔案上按滑鼠右鍵，然後按「儲存到電腦」。
- 檔案傳送（電腦至手機）：從電腦將檔案發送至手機內。只須選擇您想傳送的檔案，然後拖放至 On-Screen 手機視窗內。您傳送的檔案會儲存在內部 SD 卡內。
- 即時事件通知：如有顯示彈出視窗，就任何來電或文字/多媒體訊息向您發出提示通知。

On-Screen Phone

如何在電腦上安裝 On-Screen Phone

- 1 瀏覽 LG 首頁 (www.lg.com) 然後選擇所需國家/語言。
- 2 前往**流動裝置** > **手機** > **產品支援** > **支援** > **輸入型號或名稱** > **搜尋**。
選擇型號 (LG-P715) > **下載**中的OSP。


實用程式

QuickMemo

QuickMemo 功能讓您可建立備忘錄及擷取螢幕截圖。擷取螢幕截圖並進行繪畫，然後以 QuickMemo 功能與家人及朋友分享。



或者



- 1 於您想擷取的畫面上點按快速按鈕，以進入 QuickMemo 畫面。或點按並向下滑動狀態列，然後點按 。
- 2 從**筆型、顏色、橡皮擦**選擇所需功能表選項，然後建立備忘錄。
- 3 點按編輯功能表的 ，選擇以連同目前螢幕儲存備忘錄。要隨時離開 QuickMemo 功能，點按返回鍵。

提示！ 點按  以於螢幕上保留目前備忘錄，並同時使用手機。點按  以選擇是否使用背景畫面。點按  以透過任何現有的應用程式與他人分享備忘錄。

實用程式

設定鬧鐘

1 點按  > 應用程式標籤 > 鬧鐘/時鐘 > 。

設定鬧鐘時間及所需選項。

- 重複、暫停時間、震動、鬧鐘提示音、鬧鐘音量、自動應用程式啟動器、拼圖鎖及備忘錄。

2 點按儲存。

使用計算機

1 點按  > 應用程式 標籤 > 計算機。

2 觸控數字鍵以輸入數字。

3 對於簡單計算，點按所需的運算符號（+、-、x 或 ÷），然後按 =。

4 如要進行更複雜的計算，點按 ，選擇進階面板，然後選擇 sin、cos、tan、log 等。

新增事件至日曆

1 點按  > 應用程式標籤 > 日曆。

2 您可在螢幕中部找到日曆的不同檢視類型（日、星期、議事日程）。

3 輕點您想要新增事件的日期。

4 向上拖動螢幕並輕點您想要新增事件的時間並點按 。

5 點按事件名稱以進入事件名稱。

6 點按位置以進入地點。檢查日期，並輸入事件開始及完結的時間。

7 若要新增備註至您的事件，點按說明，然後輸入詳細資料。

8 若要重複鬧鐘，請設定重複，如有需要亦可設定提醒類型。

9 點按儲存，將事件儲存至日曆。

Polaris Viewer 4

Polaris Viewer 4 是專業的流動辦公室解決方案，讓使用者隨時隨地使用流動裝置輕鬆檢視不同類型的辦公室文件，包括 Word、Excel 和 PowerPoint 檔案。

點按  > 應用程式標籤 > Polaris Viewer 4。


檢視檔案

手機用戶現在可以直接在流動裝置上輕易檢視各式各樣的檔案類型，包括 Microsoft Office 文件和 Adobe PDF。使用 Polaris Office 檢視器檢視文件時，物件和版面會保持與原始文件相同。

QuickTranslator

只需將智能手機相機對準想進行了解的外語句子。您便可隨時隨地取得實時翻譯。

您可從 Google Play Store 購買用作離線翻譯的附加字典。

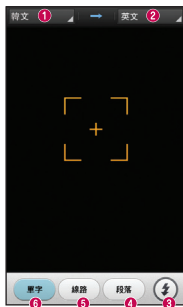

- 1 主頁語言
- 2 目標語言
- 3 閃光燈
- 4 段落翻譯
- 5 句子翻譯
- 6 逐字翻譯

實用程式

- 1 點按  > 應用程式標籤 > QuickTranslator。
- 2 點按單字、線路或段落。
- 3 點按並選擇所需語言。
- 4 手持手機對準您想進行翻譯的主題數秒。

注意：只提供一本免費字典。額外字典需進行購買。請從以下列表選擇您想安裝作為免費贈送的字典。

注意：於辨別需翻譯的字母時所需速度可能因其大小、字型、顏色、亮度、角度而有所不同。

網絡功能

互聯網

使用此功能以瀏覽互聯網。無論您身在何處，有何需求，瀏覽器可讓您快速、盡情享受遊戲、音樂、新聞、運動和娛樂資訊，並直接在手機上載入更多內容。

注意： 连接到這些服務和下載內容需繳交額外費用。請向網絡供應商諮詢收費詳情。

1 點按  > 應用程式標籤 > 互聯網。

使用網絡工具列

點按並按住網絡工具列並以手指向上滑動以開啓。



點按以返回前一頁。



點按以前往您在目前頁面後連接的一頁。此等同當您按**返回**鍵返回上一頁的相反操作方式。



點按以前往主頁。



點按以新增新視窗。



點按即可存取書籤。

檢視網頁

點按地址欄，輸入網址並點按**跳至**。

開啓頁面

要前往新頁面，點按  > 

要前往其他網頁，點按 ，向上或向下捲動並點按頁面以進行選擇。

網絡功能

以語音搜尋網站

點按地址欄，點按 ，說出關鍵字，然後從所出現的建議關鍵字進行選擇。

注意：此功能可能因應地區或服務供應商而未能提供。

書籤

要將目前網頁新增為書籤，點按  > **儲存到書籤** > **確定**。

要開啓已新增書籤的網頁，點按  並進行選擇。

歷史記錄

點按  > **記錄** 以從近期瀏覽的網頁列表中開啓網頁。要清除記錄，點按功能表  > **清除所有記錄**。

Chrome

使用 Chrome 以搜尋資訊及瀏覽網頁。

1 點按  > 應用程式標籤 > Chrome。

注意：此應用程式可能未能提供，視乎個別地區及服務供應商。

檢視網頁

點按地址欄然後輸入網址或搜尋範圍。

開啓頁面

要前往新頁面，點按  → + New tab。

要前往其他網頁，點按 ，向上或向下捲動並點按頁面以進行選擇。

以語音搜尋網站

點按地址欄，點按 ，說出關鍵字，然後從所出現的建議關鍵字進行選擇。

與其他裝置同步

於登入相同 Google 帳號時同步與 Chrome 於其他裝置一同使用的開啓標籤及書籤。

要檢視於其他裝置上的開啓標籤，點按**功能表**  → Other devices。

選擇要開啓的網頁。

要檢視書籤，點按 。

設定

存取設定功能表

在桌面點按  > 應用程式標籤 > 設定。

無線及網絡

< 雙智能咭 >

設定啓用或停用智能卡及數據存取。

< Wi-Fi >

開啓 Wi-Fi 以連接可使用的 Wi-Fi 網絡。

提示！如何取得 MAC 位址

若要在某些設有 MAC 過濾器的無線網絡建立連接，您可能需要在路由器輸入 LG-P715 的 MAC 位址。

您可於以下用戶介面找到 MAC 地址：點按**應用程式標籤 > 設定 > Wi-Fi >  > 進階 > MAC 位址**。

< 藍牙 >

啓動藍牙以連接至藍牙裝置。

< 數據用量 >

顯示數據使用並設定流動數據限制。

< 通話 >

您可設置手機的通話設定，例如來電轉接及服務供應商提供的特別功能。

< 更多... >

飛航模式 - 切換至飛航模式後，所有無線通訊會被停用。

可攜式 Wi-Fi 熱點 - 您可設定可攜式 Wi-Fi 熱點設定。

藍牙數據連線 - 不論是否於分享互聯網連線的情況下均可設定手機。

VPN - 顯示您以前配置的虛擬專用網絡 (VPN) 列表。允許您新增不

同類型的 VPN。

流動網絡 - 設定網絡模式及網絡供應商、存取點名稱 (APNs) 選項。

備註：使用加密儲存前，必須設定螢幕鎖定 PIN 碼或密碼。

裝置

<聲音>

聲音設定檔 - 您可以選擇聲音、僅震動或靜音。

音量 - 您可以管理音樂、影片、遊戲及其他媒體、手機鈴聲、通知聲音及觸控回饋與系統的音量。

靜音時間 - 設定關閉所有音效（除提示和媒體以外）的時間。

鈴聲並震動 - 來電與提醒時手機振動。

SIM 1 卡手機鈴聲 - 允許您為 SIM 1 卡設定來電鈴聲。

SIM 2 卡手機鈴聲 - 允許您為 SIM 2 卡 設定來電鈴聲。

SIM 1 卡通知聲音 - 允許您為 SIM 1 卡設定通知聲音。

SIM 2 卡通知聲音 - 允許您為 SIM 2 卡 設定通知聲音。

SIM 1 來電震動 - 允許您為 SIM 1 卡的來電設定震動類型。

SIM 2 來電震動 - 允許您為 SIM 2 卡 的來電設定震動類型。

撥號鍵盤按鍵音 - 當您使用撥號鍵盤撥號時，允許您設定手機播放按鍵音。

觸控聲音 - 當您點按按鈕、圖示或者其他對您的點按作出反應的螢幕上的項目時，允許您設定您的手機播放按鍵音。

螢幕鎖定聲音 - 允許您設定鎖定或解鎖螢幕時播放聲音。

<顯示>

亮度 - 調校螢幕亮度。

螢幕逾時 - 設定螢幕逾時的時間。

智慧螢幕 - 勾選此以於裝置檢測到您的眼睛正看著螢幕時，使螢幕保

設定

持開啓狀態。

自動旋轉螢幕 - 設定當您旋轉手機時自動切換方向。

字體類型 - 更改字體類型。

字體大小 - 更改顯示字體的大小。

<桌面>

設定主題、螢幕效果、牆紙、循環捲動螢幕及僅爲縱向檢視。選擇選項以設定主頁備份與還原。

<鎖定螢幕>

選擇螢幕鎖定 - 設定解鎖圖案以保護您的手機。開啓一系列畫面，以指導您繪畫螢幕解鎖圖案。您可以設定揮動、臉部解除鎖定、圖形、PIN碼、密碼或不設任何鎖定。

當您開啓手機或喚醒螢幕時，您需要繪製解鎖圖形以解鎖螢幕。

牆紙 - 您可以從圖片集或牆紙圖庫選擇鎖定畫面的牆紙。

時鐘 & 捷徑 - 自訂鎖定螢幕上的時鐘和捷徑。

擁有者資訊 - 於鎖定螢幕上顯示所有者信息。

鎖定時針 - 允許您設定螢幕逾時後自動鎖定螢幕的時限。

電源按鈕立即鎖定 - 勾選以於按下電源/鎖定鍵時即時鎖定螢幕。

<儲存裝置>

內存空間 - 檢視內部儲存佔用。

SD 卡 - 檢視 SD 卡所有可用空間。點按解除安裝 SD 卡以安全移除。如您希望刪除 SD 卡上的所有資料，請清除 SD 卡。

<電池>

您可於此管理電池及檢視省電選項，亦可檢視電池使用。

<應用程式>

您可檢視並管理應用程式。

個人

<帳號及同步處理>

允許應用程式在背景中同步資料，而不論您是否啟動它們。取消勾選此設定會幫助節省電池電力，同時也會降低（但不會完全停止）資料用量。

<位置存取>

存取我的位置 - 開啟以使用來自 Wi-Fi 及流動網絡的資訊，以確定您的大概位置，會於 Google 地圖進行搜尋時及其他應用程式中使用。當您開啟此選項時，您會被問及是否同意匿名地與 Google 定位服務分享您的位置。

GPS 衛星 - 如選擇使用 GPS 衛星定位，手機會確定您所處的位置，準確地找出您身處的街道。

Wi-Fi 與行動網路位置 - 如選擇 Google 定位服務，手機會使用 Wi-Fi 及流動網絡確定您的大概位置。如選擇此選項，系統會問您是否同意允許 Google 在提供這些服務時，使用您所處的位置。

<安全>

設定 SIM 卡鎖定 - 設定 SIM 卡鎖定或更改 SIM 卡 PIN 碼。

密碼鍵入為可見 - 顯示鍵入的密碼。

裝置管理員 - 查看或撤銷裝置管理員。

未知的來源 - 預設設定以安裝非 Play Store 應用程式。

可信認證 - 顯示受信任的 CA 證書。

從存儲裝置中安裝 - 選擇從 SD 卡安裝加密證書。

清除憑證 - 移除所有證書。

<語言與輸入裝置>

使用語言及鍵盤設定以選擇您手機文字的語言，包括您新增至字典的字詞，並設定您的螢幕鍵盤。

設定

<備份與重設>

更改設定以管理設定和數據。

備份我的數據 – 設定在 Google 伺服器上備份您的設定及應用程式數據。

備份帳號 – 設定以備份您的帳號。

自動還原功能 – 設定當應用程式重新安裝在裝置時，還原您的設定及應用程式數據。

重設為原廠設定 – 將設定重設為原廠預設值並刪除您的所有數據。如果您用此方法重設您的手機，您會被提示重新輸入您第一次啟動 Android 時所輸入的訊息。

系統

<快速按鈕>

使用熱鍵選擇您想快速存取的應用程式。

<日期及時間>

使用**日期及時間**設定以設定顯示日期的方式。您還可以使用這些設定來設置您自己的時間和時區，而不只是從流動網絡獲得當前時間。

<可存取性>

您可使用**可存取性**設定，以設定已安裝到手機的可存取性外掛程式。

注意：需要其他外掛程式。

<PC 連接>

USB 連接類型 - 您可設定想要的模式：**僅可充電**、**媒體同步 (MTP)**、**USB 網絡連線**、**LG 軟體或相機 (PTP)**。

連接時詢問 - 連接至電腦時詢問 USB 連接模式。

說明 - USB 連接說明。

PC Suite - 勾選此項即可搭配 LG PC Suite 使用 Wi-Fi 連接。

請注意，Wi-Fi 網絡應透過無線及網絡設定中的 Wi-Fi 連接為 LG PC Suite 進行連接。

On-Screen Phone - 可通過 USB、藍芽或 Wi-Fi 連接顯示畫面及從電腦控設定制手機。

<開發者選項>

請謹記，開啓開發者設定可能導致不正常的裝置行爲。這些開發者設定只建議供進階使用者使用。

<關於手機>

檢視SIM卡1，SIM卡2信息。檢視法律資訊，檢查手機狀態和軟件版本。

PC 軟件 (LG PC Suite)

「LG PC Suite」電腦軟件助您透過 USB 纜線及 Wi-Fi 將裝置連接至電腦。連接後，您可以在電腦使用手機的功能。

使用「LG PC Suite」電腦軟件，您可以...

- 在電腦管理並播放媒體內容（音樂、電影、相片）。
- 向裝置發送多媒體內容。
- 在裝置及電腦上同步數據（日曆、聯絡人及書籤）。
- 備份裝置的應用程式。
- 更新裝置的軟件。
- 備份並還原裝置數據。
- 從裝置播放電腦的多媒體內容。
- 於裝置上備份及建立並編輯備忘錄

注意：您可使用應用程式的說明功能表，了解如何使用「LG PC Suite」電腦應用程式。

安裝「LG PC Suite」電腦軟件

「LG PC Suite」電腦軟件可從 LG 的網頁下載。

- 1 移至 www.lg.com，然後選擇所需國家/語言。
- 2 前往**首頁 > 流動裝置 > 手機 > 產品支援 > 支援 > 輸入型號或名稱 > 點擊搜尋**。
- 3 按一下搜索到的型號名 > **用戶手冊和下載**中的 **電腦同步 > LG PC Suite**，然後按一下**下載**。

「LG PC Suite」PC 軟件的系統需求

- 作業系統：Windows XP (Service pack 3) 32 位元、Windows Vista、Windows 7、Windows 8
- CPU：1GHz 或以上處理器
- 記憶體：512MB 或以上 RAM
- 顯示卡：1024 x 768 解像度、32 位元色彩或以上
- HDD：500 MB 或以上可用磁碟空間（視乎儲存的數據量，可能需要更多可用磁碟空間。）
- 軟體需求：LG 內置驅動程式、Windows Media Player 10 以上版本

備註：LG 內置 USB 驅動程式

將 LG 裝置連接至電腦時，需要 LG 內置 USB 驅動程式，在於安裝「LG PC Suite」電腦軟件時，驅動程式將會自動安裝。

將裝置同步至電腦

裝置及電腦的資料可透過「LG PC Suite」電腦軟件輕鬆同步，簡易便利。通訊錄、日曆及書籤均可作同步處理。

程序如下：

- 1 將裝置連接到電腦。（使用 USB 線或 Wi-Fi 連接）。
- 2 將會顯示 **USB 連線類型**，然後選擇 **LG 軟體**。
- 3 連接後，執行程式，然後從畫面左方的類別選擇裝置部分。
- 4 按**個人資訊**進行選擇。
- 5 選擇要同步內容的取方塊，然後按**同步**按鈕。

注意：要使用 USB 傳輸線與電腦同步您的手機，您需要於 PC 上安裝 LG PC Suite。請參閱之前頁數以安裝 LG PC Suite。

PC 軟件 (LG PC Suite)

將通訊錄從舊裝置移至新裝置

- 1 使用電腦同步程式，將通訊錄以 CSV 檔案格式從舊裝置匯出至電腦。
- 2 先在電腦上安裝「LG PC Suite」。執行該程式，並使用 USB 線將 Android 行動手機連接到電腦。
- 3 在上方功能表中，選擇**裝置 > 匯入個人資訊 > 匯入連絡人**。
- 4 可選擇檔案類型和要匯入檔案的彈出式視窗就會顯示。
- 5 在彈出式視窗中，點擊**選取一個檔案**，Windows Explorer 就會顯示。
- 6 選擇要在 Windows Explorer 中匯入的聯絡人檔案，然後點擊**打開**。
- 7 按一下**確定**。
- 8 可讓您在裝置和新聯絡人資料中連結聯絡人的**欄位映射**彈出式視窗就會顯示。
- 9 如果在電腦聯絡人和裝置聯絡人之間出現衝突，請在 LG PC Suite 中做出必要的選擇或修改。
- 10 點擊**確定**。

手機軟件更新

手機軟件更新

從互聯網更新 LG 手機軟件

更多有關此功能的資訊，請瀏覽 <http://update.lgmobile.com> 或 <http://www.lg.com/common/index.jsp> → 選擇國家及語言。

透過此功能，您無須親臨服務中心，就可透過互聯網將手機軟件更新為較新版本，十分方便。LG 為您的手機推出較新版本的軟件時，此功能才可使用。

手機軟件更新要求用戶密切注意整個更新過程。請確保繼續進行前，已檢查所有在每一個步驟出現的說明和備註。請注意，更新期間若移除 USB 數據線或電池，有可能對您的手機造成嚴重損害。

注意：LG 保留權利，可酌情決定只為選定型號提供軟件更新，並不保證所有手機型號均有軟件的較新版本。

透過空中下載 (OTA) 進行 LG 手機軟件更新

此功能讓您無須連接 USB 數據線，也能輕鬆透過 OTA 將手機軟件更新為較新版本。LG 為您的手機推出較新版本的軟體時，此功能才可使用。

首先，您可以使用手機檢查軟件版本：**設定 > 關於手機 > 通用 > 軟體更新 > 現在檢查更新**。

您亦可延後更新 1 小時、4 小時、8 小時或 1 天。在這種情況下，應用程式會在時間到時通知您更新。您也可以手動重新安排更新。

備註：內部手機儲存體的個人資料—including Google 帳戶及任何其他帳戶的資訊、系統 / 應用程式數據及設定、任何已下載的應用程式及 DRM 授權—in 更新手機軟件的程序期間可能會遺失。因此，LG 建議您先備份個人資料，才更新手機軟件。LG 對於個人資料的任何遺失概不責任。

備註：此功能視網路服務供應商、地區或國家而定。

有關本使用者指南

有關本使用者指南

- 使用裝置前，請細心閱讀本手冊。此可確保您安全及正確運用手機。
- 本指南中某些圖像及螢幕截圖可能與出現於您手機上的有所不同。
- 您的內容可能與最終產品、或來自服務網絡或供應商的軟件有所不同，此內容可能隨時作出更改而不另行通知。如要獲取本手冊的最新版本，請前往 www.lg.com 瀏覽 LG 網站。
- 手機應用程式及功能可能因應國家、地區或硬件規格而有所不同。因使用由非 LG 開發的應用程式而導致任何效能問題，LG 概不負責。
- 因編輯出廠設定或修改操作系統軟件而導致的效能或不兼容問題，LG 概不負責。於任何情況下嘗試對操作系統作出自行改動可導致裝置或應用程式無法運作。
- 於裝置中的軟件、音效、牆紙、圖像及其他媒體乃被授權作為有限度使用。如您抽取及使用這些項目作為商業用途，則可能已侵犯版權法。作為用戶，您對於已非法形式使用媒體附上全部責任。
- 於使用數據服務例如訊息、上載及下載、自動同步或使用位置服務時可能被收取額外費用。要避免產生額外收費，請選擇符合您所需的數據計劃。聯絡您的服務供應商以獲取更額外詳細資料。

Trademarks

- LG 及 LG 標誌乃 LG Electronics 的註冊商標。
- 所有其他商標與版權均屬於其擁有者。

DivX 手機 **DIVX**

關於 DIVX VIDEO：DivX® 是由 Rovi Corporation 的子公司 DivX, LLC 所建立的數碼影片格式。這是官方 DivX Certified® 的裝置，能夠播放 DivX 影片。有關用於將檔案轉換成 DivX 影片的軟件工具的更多資訊，請瀏覽 divx.com。

關於 DIVX VIDEO-ON-DEMAND：這個 DivX Certified® 裝置必須先註冊，才可播放已購買的 DivX Video-on-Demand (VOD) 電影。若要取得註冊編碼，請在您的裝置設定功能表找出 DivX VOD 部分。前往 vod.divx.com 以獲取有關如何完成註冊的更多資訊。

DivX Certified® 可播放高達 640x480 的 DivX® 影片，包括特級內容。可以播放高達 864x480 的 DivX® 影片。DivX®、DivX Certified® 及相關標誌乃 Rovi Corporation 或其子公司的商標並經授權下使用。



Dolby Laboratories 授權製造。Dolby 及 double-D 符號乃 Dolby Laboratories 的商標。

配件

這些配件適用於 LG-P715 。 (下列配件可因應所需自行選購。)

旅行充電器



電池



立體聲耳機



數據線
連接您的
LG-P715 和電
腦。



使用手冊

了解更多有關
LG-P715 。



注意：

- 只可使用原裝 LG 配件。
- 若不使用原裝 LG 配件，則保養可能失效。
- 配件可能會視乎不同地區而有所不同。

疑難排解


本章節列出一些使用手機時可能遇上的問題。您可能需要就某些問題聯絡您的服務供應商，但多數問題均可輕易自行修正。

訊息	可能起因	可用解決方法
SIM 卡錯誤	手機內無SIM 卡，或不正確地插入SIM 卡。	確保已正確地插入 SIM 卡。
無網絡連接/ 失去網絡	訊號較弱或您位於運營商網絡服務範圍外。 網絡商套用新服務。	移近窗邊或移至空曠地方。檢查網絡供應商的覆蓋範圍。 檢聯絡您的網絡供應商。
密碼不相符	要更改安全密碼，您需要重新輸入以確認新的安全密碼。 您所輸入的兩個密碼並不相符。	如您忘記密碼，請聯絡您的服務供應商。
無法設定無任何應用程式	服務供應商不支援此功能，或需要註冊使用此功能。	請聯絡您的服務供應商。
無法撥打電話	撥號錯誤 新 SIM 卡已插入。 已達預付費用上限。	新網絡未獲授權。 請檢查新的限制。 聯絡您的服務供應商，或使用 PIN2 重設限額。

疑難排解

訊息	可能起因	可用解決方法
手機無法啓動	按下開啓/關閉鍵時間太短。 電池尚未充電。 電池接觸面骯髒。	按下開啓/關閉鍵至少兩秒。 爲電池充電。檢查螢幕上的充電指示器。 清潔電池接觸面。
充電錯誤	電池並無充電。	爲電池充電。
	外界溫度太高或太低。	確保於正常溫度下爲手機充電。
	接觸不良	檢查充電器是否正常，以及是否正確地連接電源至手機。檢查電池接觸點，如有髒污則需清潔。
	無電壓	將充電器插入不同的插座。
	充電器故障	重置充電器。
	使用不當充電器	只可使用原廠 LG 配件。
	電池故障	更換電池。
不允許撥打號碼	固定撥號功能已開啓。	檢查設定功能表並關閉功能。
無法接收 / 發送文字訊息和圖片	記憶體已滿	刪除手機的部分訊息。

訊息	可能起因	可用解決方法
無法開啓檔案	不支援的檔案格式	檢查受支援的檔案格式。
SD 卡無法使用	只支援 FAT 16、FAT 32 檔案系統	透過讀卡器檢查 SD 卡檔案系統，或使用手機將 SD 卡格式化。
接收來電時，螢幕並無開啓。	距離感應器問題	如果您使用任何保護貼或保護套，檢查該等配件是否覆蓋距離感應器附近的範圍。確保距離感應器附近並無任何障礙物。
沒有聲音	震動模式	檢查聲音功能表的設定狀態，確保您並非使用震動或靜音模式。
死機或停止運作。	軟件間歇性問題	請取下電池，再次插入電池並開啓手機。 透過網站嘗試進行軟件更新。

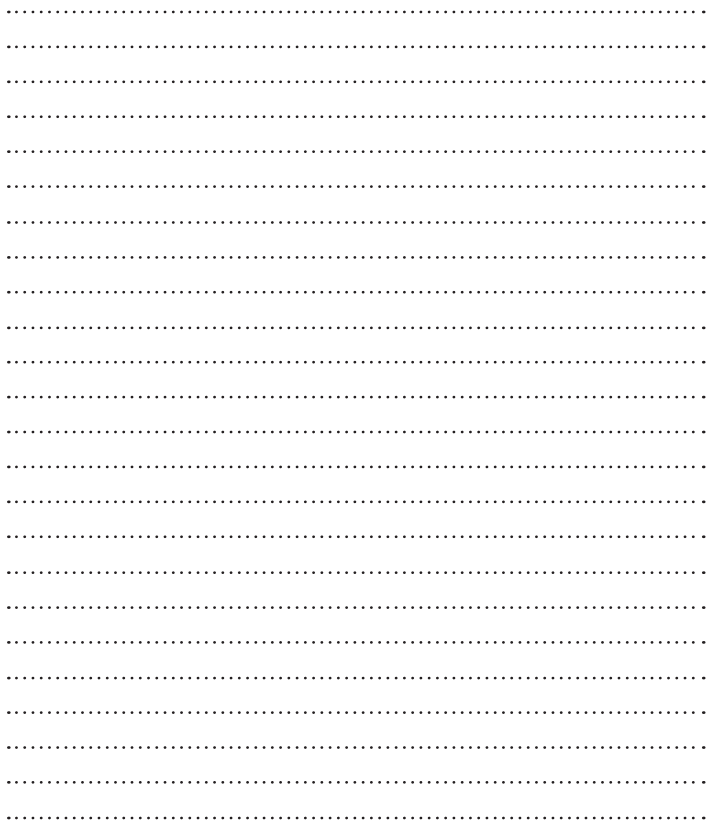



简体中文

用户手册

- 屏幕显示和说明可能与手机实物上看到的不同。
- 本手册中的部分内容可能不适用于您的手机，具体视软件或服务提供商而定。本手册的所有信息如有更改，恕不另行通知。
- 此手机采用触摸屏键盘，不适合视障人士使用。
- 版权所有 ©2013 LG Electronics, Inc. 保留所有权利。LG 和 LG 徽标是 LG 集团及其相关实体的注册商标。所有其他商标是其各自所有者的财产。
- Google™、Google Maps™、Gmail™、YouTube™、Google Talk™ 和 Play Store™ 是 Google, Inc. 的商标。



目录

关于安全有效使用手机的准则.....	5	启用 WLAN Direct, 通过 SmartShare 共享.....	34
开始了解您的手机.....	12	使用 SmartShare.....	35
设备组件.....	16	通话.....	38
安装 SIM 卡和电池.....	18	拨打电话.....	38
为手机充电.....	20	呼叫联系人.....	38
使用存储卡.....	20	接听和拒绝电话.....	38
屏幕锁定和解锁.....	22	调节音量.....	38
保护您的锁定屏幕.....	22	拨打第二个电话.....	39
主屏.....	23	查看通话记录.....	39
触摸屏提示.....	23	通话设置.....	39
主屏.....	23	联系人.....	41
自定义主屏.....	24	搜索联系人.....	41
返回到最近使用的应用程序.....	25	添加新联系人.....	41
通知.....	25	收藏夹联系人.....	41
快速设置.....	25	信息.....	43
查看状态栏.....	26	发送信息.....	43
屏上键盘.....	27	线程框.....	43
输入带注音的字母.....	28	使用笑脸.....	44
Google 帐户设置.....	29	更改信息设置.....	44
连接到网络和设备.....	30	电子邮件.....	45
WLAN.....	30	管理电子邮件帐户.....	45
连接 WLAN 网络.....	30	电子邮件帐户屏幕.....	45
打开 WLAN 并连接 WLAN 网络..	30	使用帐户文件夹.....	46
蓝牙.....	31	撰写和发送电子邮件.....	46
共享手机的数据连接.....	32		
重命名或确保您的便携式热点			
安全.....	33		
使用 WLAN Direct.....	33		

相机.....	47	实用工具.....	62
了解取景器.....	47	QuickMemo.....	62
快速拍照.....	48	设置闹钟.....	63
拍照后.....	48	使用计算器.....	63
使用高级设置.....	48	将事件添加到日历中.....	63
摄像机.....	50	Polaris Viewer 4.....	64
了解取景器.....	50	QuickTranslator.....	64
快速摄像.....	51	网络.....	66
拍摄视频后.....	51	互联网.....	66
使用高级设置.....	52	使用 Web 工具栏.....	66
观看视频时调节音量.....	52	查看网页.....	66
多媒体.....	53	打开网页.....	67
图片库.....	53	使用语音搜索网络.....	67
查看图片.....	53	书签.....	67
播放视频.....	53	历史记录.....	67
删除照片/视频.....	53	Chrome.....	68
设置为墙纸.....	54	查看网页.....	68
视频.....	54	打开网页.....	68
播放视频.....	54	使用语音搜索网络.....	68
音乐.....	55	与其他设备同步.....	68
FM 收音机.....	57	设置.....	69
LG SmartWorld.....	58	访问设置菜单.....	69
如何从手机访问 LG SmartWorld.....	58	无线和网络.....	69
如何使用 LG SmartWorld.....	58	设备.....	70
屏幕手机.....	60	个人.....	72
屏幕手机图标.....	60	系统.....	73
屏幕手机功能.....	60	PC 软件 (LG PC Suite).....	75
如何在 PC 上安装屏幕手机....	61		

目录

手机软件更新.....	78
手机软件更新	78
关于本用户指南.....	79
关于本用户指南	79
商标	79
DivX 移动	80
配件.....	81
故障排除.....	82

关于安全有效使用手机的准则

请阅读以下简单的准则。违反这些准则可能造成危险或者触犯法律。

暴露在射频能量之下

无线电波暴露和“特定吸收率”(SAR) 信息。

此款 LG-P715 型手机已设计为遵守有关适用的无线电波暴露安全要求。此要求基于相关的科学准则，其中包括为确保所有人员（无论年龄和健康状况）安全而设计的安全裕量。

- 无线电波暴露准则采用一种称为“特定吸收率”(SAR) 的测量单位。SAR 测试是在所有用到的频带中以手机的最高认可功率电平进行发射时使用标准化方法执行的。
- 不同的 LG 手机型号可能有不同的 SAR 能级，但它们均符合相关的无线电波暴露准则。
- 国际非电离辐射防护委员会 (ICNIRP) 建议的 SAR 上限值为：每 10g 重的人体组织吸收的能量平均值不超过 2 W/kg。
- 由 DASY4 对该型号手机进行的测试，人耳能够承受的 SAR 最大值为 0.495 W/Kg (10 克)，戴在身体上时，其值为 0.689 W/Kg (10 克)。
- 本设备在靠近耳朵的正常使用位置使用或放置在距人体至少 1.5 厘米的位置时符合 RF 暴露标准。当使用便携盒、皮带夹或皮套进行身体佩戴操作时，不得包含金属并且产品应至少距身体 1.5 厘米。为了发送数据文件或信息，此设备需要高质量的网络连接。在某些情况下，数据文件或信息的发送可能被延迟，直到有这样的连接可用。确保遵照以上间隔距离说明直到完成发送。

关于安全有效使用手机的准则

产品保养和维护



警告

仅使用经核准为用于此特定手机型号的电池、充电器和配件。使用任何其它类型可能导致适用于此手机的许可或保修失效，并可能造成危险。

- 不要拆解本机。当需要维修时，请将手机送往合格的服务技术人员处。
- 保修（由 LG 决定）可能包括使用新的或返修的更换部件或板，只要其功能与更换的部件等效。
- 远离诸如电视、收音机或个人计算机之类的电器。
- 远离诸如暖气片或厨灶之类的热源。
- 小心不要让手机摔落。
- 不要让手机受到机械振动或撞击。
- 在任何有特殊条例要求的区域关闭手机。例如，请勿在医院使用手机，因为它可能影响敏感的医疗装置。
- 手机充电时，请勿用湿手操作手机。这可能会导致电击或手机严重受损。
- 请勿在靠近易燃物体的位置充电，因为手机可能因发热而引发火灾。
- 使用干布清洁手机外壳（不要使用如苯、稀释剂或酒精之类的溶剂）。
- 如果手机置于柔软物体之上，请不要充电。
- 应将手机放在完全通风的位置充电。
- 不要在烟雾或灰尘过多的环境中使用或存放手机。
- 不要将手机放在信用卡或卡式车票旁边，它可能会影响磁条上的信息。
- 不要用尖锐物体敲击屏幕，这可能会损坏手机。
- 不要将手机暴露在液体或潮气中。

- 谨慎使用诸如耳机之类的配件。在不必要的情况下，不要触摸天线。
- 请勿使用、触摸或试图取下或修复破碎或破裂的玻璃。由于滥用或误用造成的玻璃显示屏损坏不在保修范围内。
- 本手机为正常使用过程中会发热的电子设备。在缺乏足够通风的条件下过长时间直接接触皮肤时，可能导致不舒服或轻微灼伤。因此，在操作的过程中或之后立即处理您的手机时，应特别小心。
- 如果手机变湿，请立即拔下其电源插头，并让它完全晾干。切勿试图使用烤炉、微波炉或电吹风等外部热源加快干燥处理。
- 潮湿手机内的液体会改变手机内产品标签的颜色。由于接触液体而对设备造成的损坏不在保修范围内。

有效的手机操作

电子设备

所有手机都可能受到干扰，这种干扰会对性能造成影响。

- 在未经允许的情况下，不得在医疗装置附近使用手机。不要将手机放在心脏起搏点上，即胸前的口袋内。
- 手机可能会对某些助听器造成干扰。
- 微弱的干扰可能会影响电视、收音机、个人计算机等。

行车安全

查阅有关在驾驶时使用手机的本地法律法规。

- 不要在驾驶时使用手持式手机。
- 将注意力完全集中在驾驶上。
- 如果行驶条件需要，请在拨打或接听电话之前将车辆驶离道路并停车。

关于安全有效使用手机的准则

- 射频能量可能影响车辆内的电子系统，例如立体声音响、安全设备等。
- 当车辆配备气囊时，不要让安装的便携式的无线设备阻挡气囊。这样做可能因性能不当而导致气囊无法释放或导致严重受伤。
- 如果您在外出时使用耳机收听音乐，请确保将音量设置为合理的音量级别，以便注意周围的情况。在靠近马路时，尤其要注意这一点。

防止损伤您的听力



为防止听力可能受损，请勿长时间高音量倾听。

如果您长时间置于高音环境中，那么您的听力可能会遭到伤害。因此，我们建议您在开机或关机时不要将手机置于耳边。同时，我们还建议您将音乐和通话音量设置为合理的音量级别。

- 使用耳机时，如果您不能听到附近的人说话，或者坐在您旁边的人能听到您在听的内容，则将音量调低。

备注：耳机声音压力过大可能导致听力受损。

玻璃部分

手机部分为玻璃制。如果手机摔落到坚硬表面或受到强烈撞击，玻璃会破碎。如果玻璃破碎，请勿触摸或尝试取出玻璃碎片。停止使用手机，在授权的服务提供商处更换玻璃。

爆破区域

不要在正进行爆破的地区使用手机。请依照有关限制，并遵守任何规章或规定。

易爆环境

- 不要在加油站内使用手机。
- 不要在靠近燃料或化学制品处使用手机。
- 不要在放有手机和配件的车厢内运输或存放可燃气体、液体或爆炸品。

在飞机上

无线设备可能对飞机造成干扰。

- 登机前，请关机。
- 未经机务人员允许，不得在地面上使用手机。

儿童

将手机放在儿童接触不到的安全地方。手机中包含细小零件，如果脱落可能导致窒息危险。

紧急电话

并非在所有手机网络中均可使用紧急电话。因此，您不应仅依赖于手机的紧急呼叫功能。请向本地的服务提供商核准。

关于安全有效使用手机的准则

电池信息及保养

- 您无需在再次充电前对电池进行完全放电。与其它电池系统不同，本机电池不具有可能影响电池性能的记忆效应。
- 只能使用 LG 电池和充电器。LG 充电器设计为最大程度地延长电池使用寿命。
- 不要拆解电池或将其短路。
- 当电池不再提供合乎要求的性能时，请更换电池。在需要更换之前，电池组可以反复充电数百次。
- 如果很长一段时间都没用过电池，请将电池再次进行充电以保持最佳使用状态。
- 不要将电池充电器暴露在直射阳光下，也不要再在诸如浴室之类的高湿环境中使用。
- 不要将电池存放在过热或过冷的地方，这可能损害电池的性能。
- 如果用不适当的电池进行替换，可能会有爆炸危险。
- 请按制造商的说明处置用过的电池。如果可能，请循环使用电池。不要象处理家用废物一样处理电池。
- 如果要更换电池，请将其携带至 LG Electronics 授权服务点或经销商处以寻求帮助。
- 手机充好电后，请务必将充电器从墙上插座拔下，以避免不必要的耗电。
- 实际的电池寿命将取决于网络配置、产品设置、使用方式、电池和环境条件。
- 确保没有细尖的物体，如动物牙齿、指甲等进入手机内触碰电池。这可能引发火灾。
-

确认声明

特此, LG Electronics 宣布此 LG-P715 产品符合指令 1999/5/EC 的核心要求和其它相关规定。有关《确认声明》的副本, 请访问 <http://www.lg.com/global/support/cedoc/RetrieveProductCeDOC.jsp>

外部环境

最高温度: +50° C (放电), +45° C (充电) **最低温度:** -10° C

注意: 开源软件

要获取 GPL、LGPL、MPL 及其他开源证书下的相应源代码, 请访问 <http://opensource.lge.com/>
可使用源代码下载所有相关许可条款、声明和通知。

本产品合规联系办公室:

LG Electronics Inc.
EU Representative, Krijgsman 1,
1186 DM Amstelveen, The Netherlands

开始了解您的手机

开始使用手机前，请阅读此内容！

请检查以查看本节是否介绍了您手机遇到的任何问题，然后再将手机拿去维修或者致电给服务代表。

1. 手机内存

当手机内存可用空间小于 10% 时，您的手机无法收到新信息。您需要检查手机内存并删除一些数据（如应用程序或信息），以有更多内存可用。

卸载应用程序：

- 1 点触  > **应用程序**选项卡 > **设置** > “设备”类别中的**应用程序**。
- 2 所有应用程序都显示后，请滚动并选择要卸载的应用程序。
- 3 点触**卸载**。

2. 优化电池使用寿命

可以通过禁用无需在后台持续运行的功能来延长电池的使用寿命。您可以监视应用程序和系统资源如何消耗电池电量。

延长手机电池的使用寿命：

- 关闭未使用的无线电通信。如果不使用 WLAN、蓝牙或 GPS，请将其关闭。
- 调低屏幕亮度，设置较短的屏幕待机时间。
- 关闭 Gmail、日历、联系人及其他应用程序的自动同步。
- 您下载的一些应用程序可能会消耗电池电量。

检查电池电量水平：

- 点触  > 应用程序选项卡 > 设置 > “系统”中的关于手机 > 常用选项卡 > 电量使用情况。

电池状态（正在充电或未在充电）和电池级别（电量百分比）。

监视并控制电池电量的使用情况：

- 点触  > 应用程序选项卡 > 设置 > “系统”上的关于手机 > 常用选项卡 > 电量使用情况 > 电量使用情况。

显示剩余电量的曲线，和电池使用及预期使用的时间，并根据耗电量排列显示主要的耗电应用程序。

3. 使用文件夹

您可以将几个应用程序图标组合到一个文件夹中。在主屏上将一个应用程序图标放在另一个应用程序图标上，两个图标将组合在一起。

4. 安装开源应用程序和操作系统之前



警告

如果安装并使用非制造商提供的操作系统，可能导致手机无法正常工作。此外，您的手机也不再享受保修。



警告

为保护您的手机和个人数据，请只从信任的来源（如 Play 商店™）下载应用程序。如果手机上存在未正确安装的应用程序，您的手机可能无法正常工作，甚至可能发生严重错误。您必须从手机中卸载那些应用程序及其所有关联的数据和设置。

开始了解您的手机

5. 使用硬重置（恢复出厂设置）

如果手机需要恢复到它的原始条件，请使用硬重置来重新启动手机。

- 1 手机关机时，同时按住**音量调低键、快捷按钮和电源键**。
- 2 当屏幕上出现 LG 标志时，松开**电源键**。
- 3 按住音量调低键和热键直到LG标志消失时，松开**音量调低键和快捷按钮**。不久后安卓机器人会显示出来，恢复会继续进行。

在执行硬重置时，至少在 1 分钟内不要对手机执行任何操作。然后，您可以再次打开手机。



警告

如果执行硬重置，则所有用户应用程序、用户数据和 DRM 许可将被删除。在执行硬重置之前，请记得备份任何重要数据。

6. 打开和切换应用程序

多任务可在 Android 中轻松实现，因为您可同时运行多个应用程序。打开其他应用程序之前无需退出当前应用程序。使用多个打开的应用程序，并在这些应用程序之间切换。Android 管理各个应用程序、根据需要停止和启动应用程序，从而确保闲置应用程序不会不必要地耗费资源。

停止应用程序：

- 1 点触  > 应用程序选项卡 > 设置 > “设备”中的应用程序 > 正在运行。
- 2 滑动并点触目标应用程序，然后点触**停止**以停止应用程序。

7. 向上持握手机

将手机向普通手机一样竖直持握。LG-P715 具有内置天线。请注意不要刮伤或损坏手机背面，这可能影响性能。

拨打/接听电话或发送/接收数据时，避免持握天线所处的手机部位。这样做可能会影响通话质量。

8. 屏幕冻结时

如果屏幕冻结或您尝试操作时手机无响应：


卸下电池，将它重新插入，然后打开手机。

或者按住**电源/锁定键** 10 秒以重启手机。

如果这仍不起作用，请联系服务中心。

开始了解您的手机

设备组件

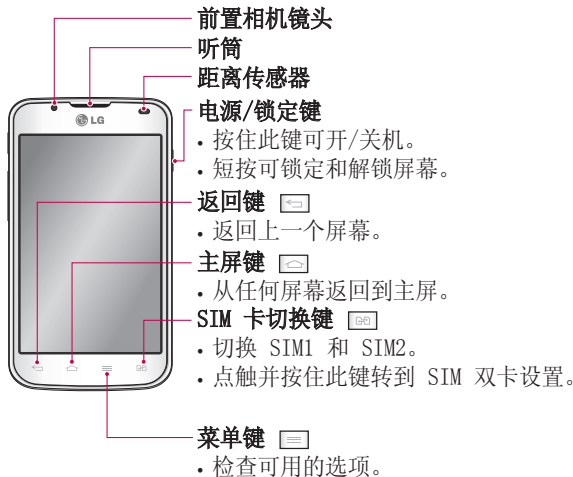


备注：距离传感器

在接听及拨打电话时，若手机位于耳旁，一旦感应到物体，此距离传感器将自动关闭背景灯并锁定触摸屏。这样有助于延长电池寿命，并避免在通话期间无意中激活触摸屏。

警告

在手机上放置重物或坐在手机上可能会损坏手机的 LCD 屏幕及触摸屏的功能。不要在 LCD 距离传感器上使用保护膜。这可能会影响传感器的感应度。

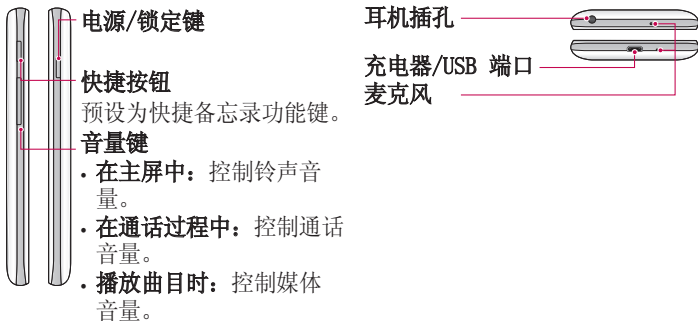


开始了解您的手机

安装 SIM 卡和电池


在开始浏览新手机之前，您需要先进行设置。插入 SIM 卡和电池：

- 1 要卸下电池盖，请用一只手紧握手机。如下图所示，用另一只手的大拇指指尖卸下电池盖。

备注： 将拇指放入 USB 端口孔，然后卸下电池盖。

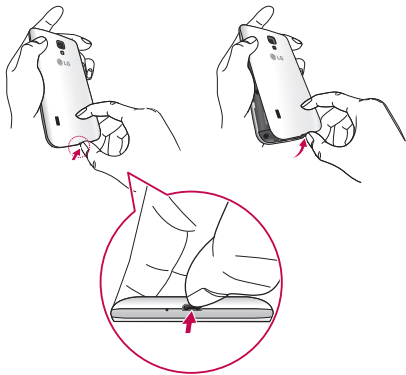

2 将 SIM 卡插入SIM 卡插槽中。确保卡的金色接触区域面朝下。

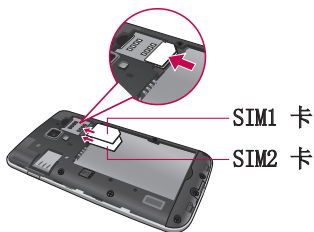

3 对齐手机与电池上的金色接触区域 (1)，向下按电池直到卡入到位 (2)，以插入电池。




4 在电池仓上对齐电池盖，再向下按图示的 6 个位置直到其卡入到位。



开始了解您的手机

为手机充电

充电器接口位于手机底部。插入充电器并插入电源插座。

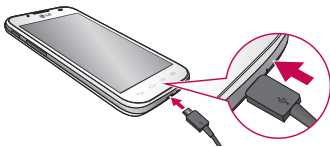

备注： 电池首次充电时必须完全充满，以便延长电池使用寿命。

备注： 手机充电时不要打开电池盖。



警告

只能使用 LG 许可的充电器、电池和电缆。使用未获许可的充电器或电缆时，可能导致充电延迟或有关于充电延迟的消息弹出。未获许可的充电器或电缆还可导致电池爆炸或损坏设备，相应后果不属于 LG 保修范围。

使用存储卡

插入存储卡：

将存储卡插入插槽。 确保金色接触区域面朝下。

安全地取出存储卡：

点触  > 应用程序选项卡 > 设置 > “设备”中的存储 > 卸载 SD 卡 > 确定。



备注： LG-P715 支持高达 32 GB 的存储卡。



警告

请勿在手机开机时插入或取出存储卡。这样做可能会损坏存储卡以及手机，并且存储卡上存储的数据也可能会损坏。

格式化存储卡：

如果已格式化存储卡，您可以开始使用。如果没有，您必须先对其进行格式化才能使用。

备注： 格式化存储卡时，卡上的所有文件将被删除。

- 1 在主屏上，点触  > **应用程序** 选项卡以打开菜单。
- 2 滚动并点触 **设置** > **存储**。
- 3 点触 **格式化 SD 卡** > **格式化 SD 卡** > **清除所有内容**。
- 4 如果设置了图案锁定，请输入图案锁定，然后选择**清除所有内容**。

备注： 如果存储卡中包含内容，由于格式化后将删除所有文件，所以文件夹结构会有所不同。

开始了解您的手机

屏幕锁定和解锁

如果您在一段时间内未使用手机，屏幕将关闭并自动锁定。这有助于防止意外点触，节省电池电量。

不使用 LG-P715 时，按**电源/锁定**键可锁定手机。

保护您的锁定屏幕

您可以锁定屏幕，以便只有您可以将它解锁以访问您的手机。

第一次设置解锁图案、PIN 或密码：

- 1 点触  > **应用程序选项卡** > **设置** > **锁定屏幕** > **选择屏幕锁定**。
- 2 选择**无、滑动、人脸解锁、图案、PIN 或密码**。
- 3 输入所需的信息。

备注： 使用图案锁定时的预防措施

请务必记住您设置的解锁图案。如果有 5 次使用不正确的图案，您将无法访问您的手机。您有 5 次机会输入解锁图案、PIN 或密码。如果您用完 5 次机会，需等待 30 秒方可再次尝试。

在无法调用解锁图案时：

若要在手机上登录 Google 帐户，但连续 5 次输错图案，请点击**忘记了图案？** 按钮。随后，您需要使用 Google 帐户登录才能将手机解锁。

如果未在手机上创建 Google 帐户或者忘记了该帐户，则需要执行硬重置。

主屏

触摸屏提示

以下是关于如何浏览手机的一些提示。

点触 - 要选择菜单/选项或打开应用程序，请点触它。

点触并按住 - 要打开选项菜单或选中要移动的对象，请点触并按住它。

拖动 - 点触项目并短暂按住，不要抬起手指，在屏幕上移动手指，直至达到目标位置。在主屏上，可拖动项目进行重新定位。

滑动 - 滑动的方法是手指点触屏幕后不要停顿（因而避免拖动项目），在屏幕表面迅速移动。例如，将屏幕向上或向下滑动可滚动浏览列表，或从左向右滑动浏览不同的主屏（反之亦然）。

轻触两次 - 轻触两次可缩放网页或地图。例如，快速轻触两次网页的局部，以调整局部来适应屏幕的宽度。您还可轻触两次以在使用地图时放大或缩小地图。

双指缩放 - 使用浏览器、地图或浏览图片时，将食指和拇指并拢或张开，即可放大或缩小。

旋转屏幕 - 可通过多个应用程序和菜单将屏幕的方向调整为设备的实际方向。

备注：

- 要选择项目，请点触图标中心位置。
- 无需大力按，触摸屏非常敏感，仅需点触即可。
- 使用指尖点触所需选项。请注意不要触碰到其它键。

主屏

向左或向右轻轻滑动手指以查看面板。您可以使用应用程序、下载内容、窗口小部件和壁纸，自定义每个面板。

备注：一些屏幕图像可能因手机提供商而不同。

主屏

在主屏中，您可以查看屏幕底部的快速键。通过快速键，您点触一次即可轻松进入经常使用的功能。



点触**手机**图标可打开触摸屏拨号键盘，以拨打电话。



点触**联系人**图标可打开联系人。



点触**信息**图标以访问信息菜单。您可以在此处创建新信息。



点触屏幕底部的**应用程序**图标。然后，您可以查看安装的所有应用程序。要打开所需应用程序，从应用程序列表中点触相应图标即可。

自定义主屏

您可以通过添加应用程序、下载内容、窗口小部件和壁纸来自定义主屏。为更方便地使用手机，请在主屏上添加您喜爱的小工具。

在主屏上添加项目：

- 1 点触并按住主屏的空白部分。
- 2 在添加模式菜单中，选择您要添加的项目。然后，您将在主屏上看到已添加的项。
- 3 将它拖到您想要的位置，然后抬起手指。

从主屏中移除项目：

- **主屏** > 点触并按住您要移除的图标 > 将其拖到 .

提示！ 要将应用程序图标添加到主屏，请在应用程序菜单上点触并按住要添加的应用程序。

返回到最近使用的应用程序

- 1 点触并按住**主页**键。屏幕将显示一个弹出窗口，其中列出了您最近使用的应用程序图标。
- 2 点触某个图标以打开其应用程序。或者，点触**返回**键以返回到当前应用程序。

通知

通知在屏幕顶部运行。
请使用手指点触并滑动通知面板。



下表说明了您可能在状态栏中看到的不同图标的涵义。
通知面板顶部会显示所有通知和快速设置。

快速设置

向左或向右滑动快速设置栏可查看更多键。

点触  >  以管理快速设置。在此您可选择下列项目让其在通知面板上显示，其中包括快捷备忘录、声音模式、已启用数据、蓝牙、GPS、WLAN、自动旋转屏幕、账户与同步、便携式WLAN热点、省电

和飞行模式。

查看状态栏

状态栏使用不同的图标显示手机信息，例如信号强度、新信息、电池使用寿命以及活动的蓝牙和数据连接。



图标	说明
	无 SIM 卡
	无信号
	飞行模式
	已连接到 WLAN 网络
	省电模式已打开
	有线耳机
	正在通话
	呼叫保持
	扬声器
	手机麦克风静音
	未接来电

图标	说明
	系统警告
	已设置闹钟
	新语音邮件
	铃声静音
	振动模式
	电池已充满电
	电池正在充电
	手机已通过 USB 数据线 与 PC 连接
	正在下载数据
	正在上载数据
	GPS 正在采集

	蓝牙开启		正在从 GPS 接收位置数据
	数据正在同步		在后台打开 FM 收音机
	新 Gmail		USB 绑定已激活
	新 Google Talk 信息		便携式 WLAN 热点已激活
	正在播放歌曲		USB 绑定和便携式热点已激活

屏上键盘

您可以使用屏上键盘输入文本。屏上键盘在您需要输入文本时自动在屏幕上显示。要手动显示键盘，只需点触要输入文本的文本字段。

使用键盘并输入文本

 轻触一次以使键入的下一字母变为大写字母。轻触两次表示全部为大写字母。

  轻触以切换为数字和符号键盘。您也可以点触并按住此选项卡以查看“设置”菜单。

 轻触以输入空格。

 点击以新建一行。

 轻触以删除上一字符。

输入带注音的字母

当选择法语或西班牙语作为文本输入语言时，您可以输入特殊的法语或西班牙语字符（如“á”）。

例如，要输入“á”，请点触并按住“a”键，直到放大键变大并显示其他语言的字符。

然后，选择所需特殊字符。

Google 帐户设置

首次打开手机时，您有机会激活网络，登录到 Google 帐户，并选择如何使用某些 Google 服务。

设置您的 Google 帐户：

- 从提示的设置屏幕登录到 Google 帐户。

或者

- 点触  > **应用程序**选项卡 > 选择一个 Google 应用程序（如 Gmail）> 选择**新建**以创建新帐户。

如果您已有 Google 帐户，请点触**现有**，输入您的电子邮件地址和密码，然后点触**完成**。

一旦在手机上设置了 Google 帐户，您的手机将自动与网络上的 Google 帐户同步。

您的联系人、Gmail 信息、日历事件和来自网络上这些应用程序和服务的其他信息将与您的手机同步。（具体取决于您的同步设置）。

登录后，您可在手机上使用 Gmail™ 收发邮件和利用 Google 服务。

连接到网络和设备

WLAN

使用 WLAN，您可在无线接入点（AP）覆盖区内高速访问互联网。使用 WLAN 尽情享受无线互联网，而且无需额外付费。

连接 WLAN 网络

要在手机上使用 WLAN，您需要访问无线接入点或“热点”。一些接入点已打开，您只需连接即可。其他接入点处于隐藏状态或使用安全功能，因此您必须配置手机才能进行连接。

禁用不使用的 WLAN，以延长电池使用寿命。

备注：如果您在 WLAN 区域之外，或者将 WLAN 设为关，则您的移动运营商可能为移动数据使用收取额外的费用。

打开 WLAN 并连接 WLAN 网络

- 1 点触  > **应用程序**选项卡 > **设置** > “无线和网络”选项卡中 **WLAN**。
- 2 将 **WLAN** 设置为**开**，将其打开，开始扫描可用的 WLAN 网络。
- 3 再次轻触 WLAN 菜单，查看范围内的有效 WLAN 网络列表。
 - 锁图标表示受到安全保护的网络
- 4 点触某个网络进行连接。
 - 如果网络受到安全保护，您会收到提示，要求输入密码或其他凭据（请咨询网络管理员获取详细信息）。
- 5 连接到 WLAN 网络后，状态栏会显示用来指示 WLAN 状态的图标。

蓝牙

与大多数其他手机不同，您可以通过运行对应的应用程序来使用蓝牙发送数据。

备注：LG 对经蓝牙无线功能发送或接收的数据的丢失、拦截或误用不承担任何责任。

随时确保您与之共享和接收数据的设备可靠且安全。如果设备间存在障碍物，则需要缩短操作距离。

某些未经 Bluetooth SIG 测试或认可的设备可能与您的设备不兼容。

打开蓝牙，将手机与蓝牙设备配对

您必须将您的设备与另一设备配对方可与其连接。

- 1 点触  > **应用程序**选项卡 > **设置** > 在“无线和网络”项下将**蓝牙**设置为开。
- 2 再次轻触**蓝牙**菜单。确保已将目标设备设置为可检测，再点触屏幕底部的**搜索设备**。
- 3 从列表中选择您要配对的设备。

一旦配对成功，您的设备将连接到另一个设备。

备注：有些耳机或免提式车载套件设备可能有固定的蓝牙 PIN，如 0000。如果配对设备有 PIN，系统会提示您输入 PIN。

使用蓝牙发送图片

- 1 从**图片库**选择图片 >  > **蓝牙**。
- 2 从列表中选择您要向其发送数据的设备。

从合适的应用程序或通过**下载内容**，可发送一个或多个电话本、日程表事件或媒体文件。

连接到网络和设备

使用蓝牙接收文件

1 点触  > 应用程序选项卡 > 设置 > 蓝牙。

2 点触使设备可见以在其他设备上可见。

备注：要选择您设备可见的时间长度，请点触  > 可见超时。

3 当接收文件传输消息时，请点触接受。

共享手机的数据连接

在没有无线连接可用时，USB 绑定和便携式 WLAN 热点功能非常有用。您可以通过 USB 数据线（USB 绑定）将您手机的移动数据连接与一台电脑共享。通过将手机变为便携式 WLAN 热点，您可以一次与多个设备共享手机的数据连接。

当手机共享其数据连接时，状态栏中将出现一个图标，同时通知抽屉中将出现持续的通知。

有关绑定和便携式热点的最新信息，包括支持的操作系统及其他详细信息，请访问 <http://www.android.com/tether>。

更改便携式 WLAN 热点设置：

• 点触  > 应用程序选项卡 > 设置 > 更多（在“无线与网络”项下）> 便携式 WLAN 热点 > 选择要调整的选项。

提示！ 如果您的电脑运行 Windows 7 或部分 Linux 风格的最新分发（例如 Ubuntu），通常无需准备电脑进行绑定。但是如果运行的是较早版本的 Windows 或其他操作系统，则可能先准备您的电脑，才能通过 USB 建立网络连接。如需获得有关哪种操作系统支持 USB 绑定以及如何配置它们的最新信息，请访问 <http://www.android.com/tether>。

重命名或确保您的便携式热点安全

您可以更改手机 WLAN 网络名称 (SSID) 的名称并确保其 WLAN 网络的安全。

- 1 在主屏上点触  > **应用程序**选项卡 > **设置**
- 2 点触“无线和网络”中的**更多**，然后选择**便携式 WLAN 热点**。
- 3 确保已勾选**便携式 WLAN 热点**。
- 4 点触**设置 WLAN 热点**。
 - 这将打开**设置 WLAN 热点**对话框。
 - 您可以更改网络 SSID (名称)，这将是其他电脑在扫描 WLAN 网络时看到的名称。
 - 您也可以点触**安全性**菜单来为网络配置 WLAN 保护访问 2 (WPA2) 安全性以及预共享密钥 (PSK)。
 - 如果点触 **WPA2 PSK 安全性**选项，则密码字段将会添加到**设置 WLAN 热点**对话框。如果输入密码，您将需要在将手机的热点与电脑或其他设备连接时输入密码。您可以在**安全性**菜单中点触**开放**，以从 WLAN 网络中删除安全性。
- 5 点触**保存**。

注意！ 如果将安全性选项设为开放，则不可避免其他人在未经授权的情况下使用在线服务并可能产生额外收费。为避免未授权使用，最好保持激活安全性选项。

使用 WLAN Direct

您可在使用 Android 手机并通过相同 WLAN & WLAN Direct 网络连接的用户之间共享音乐、图片和视频内容。

提前检查您的 WLAN & WLAN Direct 网络，确保用户已连接到相同的网络。

连接到网络和设备

- 1 点触  > **应用程序**选项卡 > **设置** > **WLAN**（在“无线和网络”项下）。
- 2 点触**菜单键**  > **WLAN Direct**。
- 3 在扫描到的设备列表中选择要连接的设备。
- 4 点触**确定**。

备注：启动 WLAN Direct 时，WLAN 连接会断开。

启用 WLAN Direct，通过 SmartShare 共享

WLAN Direct 自动扫描附近的 WLAN Direct 设备，搜索到的设备将按找到的顺序列出，您可以选择特定设备以通过 Smart Share 共享多媒体数据。

- 1 点触  > **应用程序**选项卡 > **设置** > **WLAN**（在“无线和网络”项下）。
- 2 点触**菜单键**  > **WLAN Direct**。
- 3 在扫描到的设备列表中选择要连接的设备。

创建群组 - 点触以激活群组所有者模式，该模式允许您通过扫描手机连接合法的 WLAN 设备。在这种情况下，您必须输入在**密码**中设置的密码。

备注：当手机成为群组所有者时，将比用作客户端时消耗更多电池电量。

WLAN Direct 连接不提供互联网服务。被连接并使用在线服务时可能要花费额外的费用。查看网络提供商要求的数据付费。

使用 SmartShare

SmartShare 使用 DLNA（数字生活网络联盟）技术，通过无线网络共享数字内容。

要支持此功能，双方设备都必须经过 DLNA 认证。

打开 SmartShare 并允许共享内容

- 1 点触  > **应用程序**选项卡 > **SmartShare**。
- 2 点触 ，再选择**设置**。
- 3 点触**可检测性**复选框以允许其他设备检测到您的手机。
 - 如果要自动接受来自其他设备的共享请求，请点触**始终接受请求**。
 - 如果要自动允许从其他设备上传文件到我的手机，请点触**接收文件**。
- 4 在“共享内容”部分，点触以勾选您要共享的内容类型。从**图片**、**视频**和**音乐**中进行选择。
- 5 **SmartShare** 目前已激活，可以开始共享内容。

备注：请确保已正确配置您的设备（如电视和电脑）的 DLNA 功能。

- 1 点触  > **应用程序**选项卡 > **SmartShare**。
- 2 点触**至**按钮 ，从图像生成设备列表中选择设备。
- 3 点触**来自**按钮 ，选择远程内容库的设备。
- 4 您可以浏览远程内容库。
- 5 点触并按住内容缩略图，用手指将其轻弹到顶部，或点触**菜单键**  > **播放**。

连接到网络和设备

共享手机或图像生成设备（如电视）中的内容

备注：请确保已正确配置您的图像生成设备。

- 1 使用**音乐**应用程序播放音乐时，请点触“标题”区域上的  /  / .

：需要连接至网络。

：选择网络中的设备。

：当前正在通过 SmartShare 共享内容。

- 2 从图像生成设备列表中选择设备以播放文件。

备注：遵循相同步骤，使用**图片库**、**视频播放器**或 **Polaris Viewer 4** 来共享内容。

注意：要使用此应用程序，请确保您的设备已通过 **WLAN** 连接到本地网络。部分启用了 DLNA 的设备（如 TV）仅支持 DLNA 的 DMP 功能，将不会显示在图像生成设备列表中。
您的设备可能无法播放某些内容。

从远程内容库下载内容

- 1 点触  > **应用程序**选项卡 > **SmartShare**。
- 2 点触**至**按钮 ，选择远程内容库的设备。
- 3 您现在可以浏览内容库。
- 4 点触并按住内容缩略图，然后点触**下载**。

注意：有几种类型的内容不受支持。

从远程内容库上载内容

- 1 点触  > **应用程序**选项卡 > SmartShare。
- 2 点触**来自按钮** , 然后选择**我的手机**。
- 3 您可以浏览本地内容库。
- 4 点触并按住内容缩略图, 然后点触**上载**。
- 5 选择要上传的远程内容库的设备。

注意: 有些已启用 DLNA 的设备不支持 DMS 上传功能, 因此无法上传文件。 有几种类型的内容不受支持。

FileShare

使用 FileShare 应用程序时, 您可通过 WLAN Direct 向其他设备共享多媒体文件和文档。

- 1 点触  > **应用程序**选项卡 > FileShare。
- 2 选择要共享的内容类型。 点触**图像、视频、音乐或文档**。
- 3 在屏幕右上角点触 , 再勾选您想共享的文件。
- 4 点触**发送**以开始扫描可用设备, 再从列表中选择所需的设备。

通话

拨打电话

- 1 点触  以打开键盘。
- 2 使用键盘输入号码。要删除一个数字，请点触  。
- 3 点触  以拨打电话。
- 4 要结束通话，请点触**结束**图标  。

提示！ 要输入“+”以拨打国际电话，请点触并按住  。

呼叫联系人

- 1 点触  可以打开电话本。
- 2 滚动浏览联系人列表，或点触**搜索联系人**，输入您要呼叫的联系人。
- 3 在列表中，点触  以拨打电话。

接听和拒绝电话

在锁定状态收到来电时，向任何方向滑动  以接听来电。

滑动  以拒接来电。

要发送消息，从底部向任何方向滑动**用消息拒绝**图标。

提示！ 用消息拒绝

您可以使用此功能快速发送信息。此选项可用于在会议时拒接来电并发送信息。

调节音量

要在通话期间调节通话音量，请使用手机左侧的音量调高和调低键。

拨打第二个电话

- 1 在初始呼叫中，点触**菜单键** > **添加通话**，然后拨号。您也可以点触  转到最近的拨出电话列表，或点触  搜索联系人，然后选择您要拨打的号码。
- 2 点触  拨打电话。
- 3 此时呼叫屏幕上显示两个呼叫。初始呼叫被保持，通话方进入通话状态。
- 4 点触显示的数字可在不同的通话间切换。或点触  **合并通话**进行多方通话。要结束当前通话，请点触**结束**或按**主屏键**，向下滑动通知栏，然后选择**挂断通话**图标  。

备注：您需要对每通电话付费。

查看通话记录

在主屏上，点触  并选择**通话记录**选项卡  。
查看所有已拨电话、已接来电和未接来电的完整列表。

提示！ 点触任意通话记录条目，以查看通话日期、时间和时长。

提示！ 点触**菜单键**，然后点触**全部删除**以删除所有记录条目。

通话设置

您可以配置通话设置（例如呼叫转移）以及运营商提供的其他特殊功能。

- 1 在主屏上点触  。
- 2 点触**菜单键**。

通话

3 轻触通话设置****，然后选择要调整的选项。

4 点触 **SIM 卡1 或 **SIM 卡2**** 以设置以下呼叫选项。

固定拨号 - 打开并汇集一个号码列表，可从手机拨打此列表中的号码。 您需要提供 PIN2 码，此密码由运营商提供。仅可以使用手机拨打此号码列表中的号码。

语音邮件中心 - 允许您选择运营商的语音信箱服务，输入用于收听和管理语音信箱的号码，以及设置通知声音或振动选项。

来电转接 - 选择所有来电转接，忙碌，无人接听时转接或无网络或关机时转接。

呼叫限制 - 选择何时限制呼叫。 输入呼叫限制密码。请与您的网络运营商联系，了解有关此服务的信息。

通话时间 - 查看“最后通话”、“已拨电话”、“已接来电”和“所有通话”的通话时间。

其他设置 - 此菜单允许您更改以下设置：

本机号码：选择是否要在拨出电话时显示您的号码。

来电等待：如果激活了来电等待功能，在通话过程中，手机将提醒您有新来电（取决于网络提供商）。

5 点触常用****以配置以下呼叫选项。

拒接来电 - 可让您设置拒接来电功能和管理拒接来电列表。

用消息拒绝 - 当您想拒接来电时，您可发送一条预设消息。 在此菜单中，您可在拒接来电时添加或编辑要发送的消息。

连接振动 - 选择手机是否在对方接听电话时振动。

隐私保护工具 - 设置隐私保护选项。

按“电源”按钮结束通话 - 如果您想按电源按钮来结束通话，请勾选此选项。

保存未知号码 - 通话后将未知号码添加至联系人。

联系人

在手机上添加联系人，并将其与 Google 帐户或其他支持联系人同步的帐户中的联系人同步。

搜索联系人

在主屏中

- 1 点触  可以打开电话本。
- 2 点触**搜索联系人**，使用键盘输入联系人姓名。

添加新联系人

- 1 点触 ，输入新联系人的号码，然后点触**菜单键**。点触**添加至“联系人” > 新建联系人**。
- 2 如果您想为新联系人添加图片，请从**拍照**或**从图片库中进行选择**中选择。
- 3 点触  以选择联系人类型。
- 4 点触联系人信息类别，并输入有关联系人的详细信息。
- 5 点触**保存**。

收藏夹联系人

您可以按收藏夹归类经常呼叫的联系人。

将联系人添加到收藏夹

- 1 点触  可以打开电话本。
- 2 点触联系人以查看详细信息。
- 3 点触联系人姓名右角的星号。星号变为黄色，联系人已添加到收藏夹。

联系人

从收藏夹列表中删除联系人

- 1 点触  可以打开电话本。
- 2 点触  选项卡，选择列表顶部的**收藏夹**，然后选择要查看其详细信息的联系人。
- 3 点触联系人姓名右角的星号。星号变为灰色，联系人已从收藏夹中删除。

信息

LG-P715 将短信和彩信结合到一个直观易用的菜单中。

发送信息

- 1 点触主屏上的  图标，然后点触  打开空白信息。
- 2 在**收件人**字段中输入联系人姓名或电话号码。随着您输入联系人姓名，匹配的联系人将会显示。您可以点触建议的收件人。您可以添加多个联系人。

备注：您将按每个收件人每条文本信息付费。

- 3 点触**通过 SIM1卡管理** 发送信息字段，然后开始撰写信息。
- 4 点触  以打开“选项”菜单。从以下选项选择：**快速信息**、**插入表情符号**、**计划发送**、**添加主题**或**取消**。
- 5 点触**发送**发送信息。
- 6 当您查看并发送附加信息时，将创建信息会话。

 **警告：**160 个字符的限制在不同国家/地区有所不同，具体取决于语言和短信编码方式。

 **警告：**如果在短信中添加图像、视频或音频文件，则短信将自动转换为彩信，您需要支付相应费用。

线程框

与另一方交换的其他信息将以时间顺序显示，以便您方便查看对话概述。

信息

使用笑脸

使用笑脸让您的信息更具趣味性。

写新信息时，点触**菜单**键，然后选择**插入表情符号**。

更改信息设置

LG-P715 已预定义信息设置，因此，您可以立即发送信息。 您可以根据喜好更改设置。

- 在主屏上，点触  > 点触  > **设置**。

电子邮件

您可以使用电子邮件应用程序读取 Gmail 外其它服务的电子邮件。电子邮件应用程序支持以下帐户类型：POP3、IMAP 和 Exchange。您的服务提供商或系统管理员可提供您需要的帐户设置。

管理电子邮件帐户

首次打开**电子邮件**应用程序时，将打开一个设置向导，帮助您设置电子邮件帐户。

添加另一个电子邮件帐户：

- 点触  > **应用程序**选项卡 > **电子邮件** > 点触  > **帐户** > 点触  > **添加帐户**。

初始设置后，电子邮件将显示您的收件箱中的内容。如果添加了多个帐户，您可以在帐户之间切换。

更改电子邮件帐户的设置：

- 点触  > **应用程序**选项卡 > **电子邮件** > 点触  > **帐户设置**。

删除电子邮件帐户：

- 点触  > **应用程序**选项卡 > **电子邮件** > 点触  > **帐户** > 点触并按住您想删除的帐户 > **删除帐户**。

电子邮件帐户屏幕

您可以点触帐户以查看其收件箱。您用于发送电子邮件的默认帐户将以勾选符号表示。

 - 点触文件夹图标以打开帐户文件夹。只会将帐户中最近的电子邮件下载到手机。

电子邮件

使用帐户文件夹

每个帐户均具有收件箱、发件箱、已发送和草稿箱文件夹。取决于您帐户的服务提供商支持的功能，您可能具有其他文件夹。

撰写和发送电子邮件

要撰写和发送邮件

- 1 在**电子邮件**应用程序中，点触 .
- 2 输入邮件目标收件人的地址。输入文字时，匹配的地址从您的联系人中提供。
- 3 添加抄送/密送地址，需要时还添加附件。
- 4 输入邮件的正文。
- 5 点触 .

如果未连接至网络，例如，如果您以飞行模式工作，您发送的邮件将存储到您的“发件箱”文件夹中，直到重新连接至网络。如果包括任何未发送的邮件，发件箱就会显示在帐户屏幕上。

提示！ 收件箱收到新电子邮件时，您将收到声音或振动通知。

了解取景器



- ❶ **切换镜头** - 可让您切换后置相机镜头和前置相机镜头。
- ❷ **语音快门** - 可让您打开或关闭语音拍照。 打开此选项后，您只需说 Cheese、Smile、Whisky、Kimchi 或 LG 即可拍照。
- ❸ **拍摄模式** - 从以下选项选择：**正常**、**全景**或**连环拍摄**。
- ❹ **闪光灯** - 从以下选项中选择：**关闭**、**开启**或**自动**。
- ❺ **设置** - 点触此图标可以打开“设置”菜单。
- ❻ **模式切换** - 点触此图标以切换相机模式和视频模式。
- ❼ **拍照** - 允许您拍照。
- ❽ **图片库** - 点触以查看最近拍摄的照片。 您可以访问“图片库”并查看相机模式下保存的照片。

快速拍照

- 1 打开**相机**应用程序。
- 2 拿稳手机，将镜头对准您要拍摄的物体。
- 3 点触屏幕，取景器屏幕上会出现一个对焦框。此外，您还可以轻触屏幕上的任何位置以在该点上对焦。
- 4 对焦框变绿时，表示相机已对好焦。
- 5 点触  拍照。

拍照后

如果自动查看设为“开启”，拍摄的照片将显示在屏幕上（参阅“使用高级设置”）。

分享 - 点触以使用**FileShare**、**Gmail**、**Google+**、**Picasa**、**备忘录**、**电子邮件**、**蓝牙**、**信息**或其他任何受支持的应用程序来共享照片。

设置为 - 点触以将图像用作联系人照片、主屏墙纸或锁定屏幕墙纸。



- 点触可以删除图像。



- 点触可以立即拍摄更多照片。



- 轻触可查看已保存照片的图片库。

使用高级设置

在取景器中点触  以打开所有高级选项。



如果要更改取景器菜单，请点触此选项。



放大或缩小。




定义并控制进入照片的光量。

	选择照片分辨率。如果您选择高分辨率，文件大小会增大，这意味着内存中可存放的照片数量会减少。
	为当前环境找出合适的颜色和光线设置。
	ISO 评级决定相机的光传感器的感光性。ISO 越高，相机感光性能越好。在您无法使用闪光灯而光线较差的条件下，此功能很有用。
	提高不同光照条件下的颜色质量。
	选择新照片的色彩效果。
	设置按下拍摄按钮后的延迟。如果要为自己拍摄照片，此功能是理想之选。
	激活以使用手机基于位置的服务。拍照并添加所在位置以对其进行标记。如果将标记过的图片上传到支持相片定位功能的博客，您可以在地图上看到此照片。
	备注： 此功能仅在激活了 GPS 时可用。
	选择快门声音。
	将自动向您显示刚捕捉的照片。
	选择照片的保存位置。
	恢复所有相机默认设置。
	为您提供帮助信息。

摄像机

了解取景器

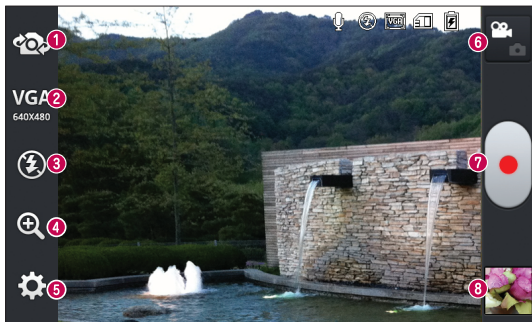

- ❶ **切换镜头** - 可让您切换后置相机镜头和前置相机镜头。
- ❷ **视频大小** - 点触可设置录制的视频的大小（以像素为单位）。
- ❸ **闪光灯** - 您可以在黑暗处拍照时打开闪光灯。
- ❹ **缩放** - 放大或缩小。
- ❺ **设置** - 点触此图标可以打开“设置”菜单。
- ❻ **模式切换** - 点触此图标以切换相机模式和视频模式。
- ❼ **录制** - 可让您开始录制。
- ❽ **图片库** - 点触以查看最近录制的视频。 您可以访问“图片库”并查看摄像机模式下保存的视频。

快速摄像

- 1 点触**相机**模式按钮。
- 2 屏幕上将显示摄像机的取景器。
- 3 拿稳手机，将镜头对准您要摄像的物体。
- 4 点触录制  按钮一次以开始录制。
- 5 取景器的顶部角落红灯闪烁，计时器显示视频长度。
- 6 点触屏幕上的  停止录制。

拍摄视频后

如果将“自动查看”设置为“开启”，屏幕上将显示所拍摄视频的静态图像。

播放 - 点触可以播放视频。

分享 - 点触可以使用**FileShare**、**Gmail**、**Google+**、**Picasa**、**YouTube**、**电子邮件**、**蓝牙**、**信息**或其他任何支持的应用程序来共享视频。



- 点触可删除刚拍摄的视频。



- 点触后可立即录制另一个视频。将保存您的当前视频。



- 点触可查看已保存视频库。

摄像机

使用高级设置

从取景器中点触  以打开所有高级选项。

	如果要更改取景器菜单，请点触此选项。
	定义并控制进入视频的光量。
	提高不同光照条件下的颜色质量。
	选择用于新视频的色调。
	激活以使用手机基于位置的服务。
	选择 关闭 ，可录制无声的视频。
	自动查看开启将自动向您显示刚录制的视频。
	选择视频的保存位置。
	恢复所有摄像机默认设置。

观看视频时调节音量

要在播放视频时调节音量，请使用手机左侧的音量键。

多媒体

图片库

您可以将多媒体文件保存在内存中，以便轻松访问所有多媒体文件。使用此应用程序查看图片和视频等多媒体文件。

1 点触  > **应用程序**选项卡 > **图片库**。

打开存储多媒体文件的目录栏列表。

备注：

- 某些文件格式不受支持，具体取决于设备已安装的软件。
- 某些文件可能无法正常播放，具体取决于它们的编码方式。

查看图片

启动图片库将显示您的可用文件夹。其它应用程序（例如电子邮件）保存图片时，将自动创建下载文件夹以包含此图片。同样，捕捉截屏图将自动创建截屏文件夹。选择文件夹以将其打开。

文件夹中的图片按创建日期显示。选择一张图片以全屏查看。向左或向右滚动以查看下一张或上一张图像。

放大和缩小

使用以下一种方法放大图像：

- 在任何位置轻触两下以放大。
- 在任何位置展开两根手指可放大。双指并拢可以缩小，轻触两次可以还原。

播放视频

视频文件在预览时显示  图标。选择要观看的视频并轻触 .

视频应用程序会启动。

删除照片/视频

在文件夹中，轻触 ，再通过勾选选择照片或视频，最后轻触**删除**。

多媒体

设置为墙纸

浏览照片时，点触**菜单键**  > **将图像设置为**以将图像设置为墙纸或将其分配给联系人。

备注：

- 某些文件格式不受支持，具体取决于设备的软件。
- 如果文件大小超过可用内存，打开文件时可能会发生错误。

视频

您的手机拥有内置的视频播放器，可让您播放所有喜爱的视频。要访问视频播放器，请点触  > **应用程序**选项卡 > **视频**。

播放视频

1 点触  > **应用程序**选项卡 > **视频**。

2 选择您要播放的视频。

	点触可暂停播放视频。
	点触可继续播放视频。
	点触可以前进 10 秒。
	点触可以后退 10 秒。
	点触可以管理视频音量。
	点触可以打开 QSlide 功能。
	点触可以更改视频屏幕的比率。
	点触以使用 SmartShare 功能共享视频。



点触以锁定按键。

要在观看视频时更改音量，请按手机左侧的上下音量键。

音乐

LG-P715 拥有内置的音乐播放器，可让您播放所有喜爱的曲目。要访问视频播放器，请点触  > **应用程序**选项卡 > **音乐**。

使用媒体同步 (MTP) 传输音乐文件

- 1 使用 USB 数据线将 LG-P715 连接至 PC。
- 2 如果您未在 PC 上安装 LG Android 平台驱动程序，则需要手动更改设置。选择**设置** > **PC 连接** > **USB 连接类型**，再选择**媒体同步 (MTP)**。
- 3 您可以在 PC 中查看大容量存储内容，然后传输文件。

播放歌曲

- 1 在主屏中，点触  > **应用程序**选项卡 > **音乐**。
- 2 点触**歌曲**。
- 3 选择您要播放的歌曲。



点触以通过 YouTube 查找文件。



点触以使用 SmartShare 功能共享音乐。



点触以设置随机播放模式。



点触以设置重复模式。



点触以管理音乐的音量。



点触可暂停播放。

多媒体

	点触可恢复播放。
	点触可跳至专辑或播放列表中的下一曲目。
	点触以返回到歌曲的开头。点触两次以返回到上一首歌曲。
	点触可设置收藏夹。
	点触可查看当前播放列表。
	在与耳机插孔连接时，点触可设置杜比音频效果。

要在聆听音乐时更改音量，请按手机左侧的上下音量键。

点触并按住列表中的任何歌曲。将显示**播放**、**添加到播放列表**、**分享**、**设置为铃声**、**删除**、**详细信息**和**搜索**选项。

备注：

- 某些文件格式不受支持，具体取决于设备的软件。
- 如果文件大小超过可用内存，打开文件时可能会发生错误。

备注：音乐文件的版权可能受国际条约和国家版权法保护。

因此，可能需要获得许可或许可证才能复制音乐。

在某些国家/地区，国际法禁止私人复制版权所有的材料。在下载或复制文件之前，请检查相应国家/地区关于使用此类材料的国家/地区立法。

FM 收音机

LG-P715 内置了 FM 收音机，因此您在移动过程中也能转到喜爱的电台并收听无线广播。

备注：要收听收音机，您需要插入耳机。将耳机插入耳机插孔。

搜索电台

您可以手动或自动微调收音机电台。因为之后它们会保存至指定的频道编号下，所以您无需再搜索它们。

您可以在手机中最多保存 6 个频道。

自动微调

- 1 在主屏中，点触  > **应用程序**选项卡 > **FM 收音机**。
- 2 点触 ，然后选择**扫描**。
- 3 在自动扫描期间，若要停止扫描，请点触**取消**。停止扫描前，仅保存已扫描的频道。

备注：您还可以使用屏幕上的转盘手动微调电台。

提示！要提高收音机接收质量，请伸展耳机线，它具有收音机天线的功能。如果连接的耳机不是专门面向收音机接收设计的，则收音机接收质量可能较差。

LG SmartWorld

LG SmartWorld 提供了琳琅满目的精彩内容（游戏、应用程序、壁纸和铃声），将让 LG 手机用户有机会体验到更丰富的“移动生活”。

如何从手机访问 LG SmartWorld

- 1 轻触  图标可访问 LG SmartWorld。
- 2 输入您在 LG SmartWorld 的 ID/密码，然后轻触“登录”。如果尚未注册，请轻触“注册”以获得 LG SmartWorld 会员资格。
- 3 下载所需的内容。

备注：如果没有  图标怎么办？

- 1 使用手机网络浏览器访问 LG SmartWorld (www.lgworld.com)，并选择您所在的国家/地区。
- 2 下载 LG SmartWorld 应用程序。
- 3 执行并安装下载的文件。
- 4 轻触  图标以访问 LG SmartWorld。

如何使用 LG SmartWorld

- 参加 LG SmartWorld 每月的促销活动。

	搜索内容。
	按类别查找内容（例如游戏、教育、娱乐等）。
	列出下载的/需要更新的内容。

- 尝试使用简单的“菜单”按钮，迅速找到您正在寻找的功能。
向您推荐的应用程序 – 根据您以前的选择所建议的内容。
设置 – 设置情景模式和显示。
登录 – 设置您的 ID 和密码。

- 还可以试用其他有用功能。（内容详细资料屏幕）

备注： 在您所在的国家或地区可能无法使用 LG SmartWorld。

屏幕手机

屏幕手机允许您通过 USB 或 WLAN 连接从 PC 查看手机屏幕。您也可以使用鼠标或键盘从您的 PC 控制手机。

屏幕手机图标

	将手机连接至 PC 或断开连接。
	更改屏幕手机首选项。
	退出屏幕手机程序。
	最大化屏幕手机窗口。
	最小化屏幕手机窗口。

屏幕手机功能

- 实时传输和控制：在连接到 PC 时显示并控制您的手机屏幕。
- 鼠标控制：允许您使用鼠标在 PC 屏幕上单击或拖动来控制您的手机。
- 使用键盘输入文本：允许您使用计算机键盘撰写短信或便笺。
- 文件传输（手机到 PC）：从手机发送文件（例如照片、视频、音乐和 Polaris Office 文件）到 PC。只需右键单击您要发送到 PC 的文件并单击“保存到 PC”。
- 文件传输（PC 到手机）：从 PC 发送文件到手机。只需选择您要传输的文件并将其拖放到屏幕手机窗口即可。您发送的文件存储在内置 SD 卡上。
- 实时事件通知：以弹出窗口提示的方式通知您有来电或短信/彩信/多媒体信息。

屏幕手机

如何在 PC 上安装屏幕手机

- 1 访问 LG 主页 (www.lg.com), 然后选择您所在的国家/语言。
- 2 转到 **移动设备** > **手机** > **产品服务** > **服务与支持** > **输入型号名称或数字** > 点击**搜索**。单击搜索到的型号名 > **下载**中的 **On-ScreenPhone**, 然后单击**下载**。

实用工具

QuickMemo

通过 **QuickMemo** 功能，您可创建备忘录和抓拍屏幕。
抓拍屏幕，在上面画图，并使用 QuickMemo 功能与亲朋好友分享。



- 1 在您想抓拍的屏幕上按快捷按钮，进入 **QuickMemo** 屏幕。或者，点触并向下滑动状态栏，然后点触 。
- 2 从**笔型、颜色、橡皮擦**中选择所需的菜单选项，然后创建备忘录。
- 3 在“编辑”菜单单点触  以使用当前屏幕保存备忘录。任何时候想退出 QuickMemo 功能，只需点触返回键即可。

提示！ 点触  以在屏幕上保留当前备忘录，并继续使用手机。轻触  以选择是否使用背景屏幕。轻触 ，通过任何可用的应用程序与他人分享备忘录。

设置闹钟

- 1 点触  > **应用程序**选项卡 > **闹钟/时钟** > 。

设置闹钟时间和任何所需选项。

- **重复**、**再响间隔**、**振动**、**铃声**、**闹钟音量**、**自动应用程序启动器**、**拼图锁**和**备忘录**。

- 2 点触**保存**。

使用计算器

- 1 点触  > **应用程序**选项卡 > **计算器**。
- 2 点触数字键输入数字。
- 3 对于简单的计算，请点触所需的功能（+、-、x 或 ÷），然后点触 =。
- 4 对于更复杂的计算，点触 ，选择**高级面板**，然后选择 sin、cos、tan、log 等。

将事件添加到日历中

- 1 点触  > **应用程序**选项卡 > **日历**。
- 2 在屏幕中部，您可以发现日历的不同视图类型（日、周、日程）。
- 3 轻触要添加事件的日期。
- 4 将视图屏幕向上拖动，并轻触要添加事件的时隙。
- 5 点触**活动名称**，然后输入事件名称。
- 6 点触**位置**，然后输入位置。 查看日期并输入活动开始和结束的时间。
- 7 如果您要为事件添加备注，请点触**说明**，然后输入详细信息。
- 8 如果要重复闹钟，请设置**重复**，必要时设置**提醒**。
- 9 点触**保存**以在日历中保存事件。

Polaris Viewer 4

Polaris Viewer 4 是专业的移动办公解决方案，让用户可使用移动设备随时随地方便地查看各种类型的办公文档，如 Word、Excel 和 PowerPoint 文件。

点触  > 应用程序选项卡 > Polaris Viewer 4。


查看文件

现在，移动用户可在移动设备上轻松查看各种文件类型，包括 Microsoft Office 文档和 Adobe PDF。使用 Polaris Viewer 查看文档时，对象和布局与原始文档相同。

QuickTranslator

只需将智能手机的相机对准您要理解的外语句子。您可以随时随地获得实时翻译。

您可以从 Google Play Store 购买更多字典以用于脱机翻译。

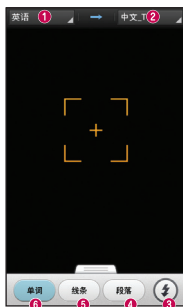

- 1 母语
- 2 目标语言
- 3 闪光灯
- 4 段落翻译
- 5 翻译句子
- 6 翻译每个词语

实用工具

- 1 点触  > **应用程序**选项卡 > QuickTranslator。
- 2 点触**单词、线条或段落**。
- 3 点触并选择所需语言。
- 4 朝您要翻译的对象对准手机几秒。

备注：仅免费提供一个字典。必须购买附加字典。请从下列列表中选择要作为免费字典安装的字典。

备注：识别率可能有所差别，具体取决于需要翻译的字幕的大小、字体、颜色、亮度和角度。

互联网

浏览器为您提供了一个涵盖游戏、音乐、新闻、体育、娱乐和下载的缤纷世界，您可以快速、直接地通过手机访问。随时随地、不受限制。

备注：连接这些服务并下载内容时，可能会产生额外费用。查看网络提供商要求的数据付费。

1 点触  > 应用程序选项卡 > 互联网。

使用 Web 工具栏

点触并按住 Web 工具栏，再用手指将其向上滑动以打开。

	点触可返回上一页。
	点触可前进到当前页之后的下一页。这正好与点触 返回 键的效果相反，按“返回”键将转到上一页。
	点触可返回主页。
	点触可添加新窗口。
	点触可访问书签。

查看网页

点触地址栏，输入网址，再点触**开始**。

网络

打开网页

要转至新网页，请点触  > 。

要转至另一个网页，请点触 ，向上或向下滚动，再点触网页以选择它。

使用语音搜索网络

点触地址栏，点触 ，说一个关键词，然后选择显示的建议关键字之一。

备注：此功能可能无法使用，具体取决于您所在的地区或您的服务提供商。

书签

要对当前网页添加书签，请点触  > **保存至书签** > **确定**。

要打开添加至书签的网页，请点触  并选择一项。

历史记录

点触  > **历史记录**，以从最近访问的网页列表中打开一个网页。要清除历史记录，请点触菜单  > **清除所有历史记录**。

Chrome

使用 Chrome 可搜索信息和浏览网页。

1 点触  > **应用程序**选项卡 > **Chrome**。

备注：此应用程序可能无法使用，具体取决于您所在的地区和服务提供商。

查看网页

轻触“地址”字段，然后输入网址或搜索条件。

打开网页

要转至新页面，轻触  → + **新建标签页**。

要转至另一个网页，请点触 ，向上或向下滚动，然后轻触页面以将其选定。

使用语音搜索网络

点触地址栏，点触 ，说一个关键词，然后选择一个显示的建议关键字。

与其他设备同步

您使用相同 Google 帐户登录时，同步要用于其它设备上的 Chrome 的打开选项卡和书签。

要查看其它设备上的打开选项卡，轻触**菜单**  → **其它设备**。

选择一个网页以打开它。

要查看书签，请点触 。

设置

访问设置菜单

在主屏上，点触  > **应用程序**选项卡 > **设置**。

无线和网络

< 双 SIM 卡 >

配置是否启用或禁用 SIM 卡和数据访问。

<WLAN>

打开 WLAN 可连接到可用的 WLAN 网络。

提示！ 如何获取 MAC 地址

要使用 MAC 筛选器在某些无线网络中建立连接，您可能需要在路由器中输入 LG-P715 的 MAC 地址。

您可以在以下用户界面找到 MAC 地址：点触“**应用程序**”选项卡 > **设置** > **WLAN** >  > 高级 > MAC 地址。

<蓝牙>

打开蓝牙以连接蓝牙设备。

<数据使用情况>

显示数据使用情况并设置移动数据范围。

<通话>

您可以配置通话设置（例如来电转接）以及运营商提供的其他特殊功能。

< 更多... >

飞行模式 - 切换为飞行模式之后，将禁用所有无线连接。

便携式 WLAN 热点 - 您可配置便携式 WLAN 热点设置。

蓝牙绑定 - 允许始终设置手机，无论您是否共享 Internet 连接。

VPN - 显示您之前配置的虚拟专用网 (VPN) 的列表。允许您添加不同类型的 VPN。

移动网络 - 设置网络模式和运营商、接入点名称 (APN) 的选项。

备注：您必须设置锁定屏幕 PIN 或密码才能使用凭据存储。

设备

<声音>

声音模式 - 您可以选择“声音”、“仅振动”或“静音”。

音量 - 您可以管理音乐、视频、游戏及其他媒体、手机铃声、通知声音及“点触反馈与系统”的音量。

静音时间 - 设置关闭除闹钟和媒体外所有声音的时间。

响铃并振动 - 在接到电话和通知时发出振动反馈。

SIM1 卡电话铃声 - 可让您设置 SIM1 卡来电的铃声。

SIM2 卡电话铃声 - 可让您设置 SIM2 卡来电的铃声。

SIM1 卡通知声音 - 可让您设置 SIM1 卡通知声音。

SIM2 卡通知声音 - 可让您设置 SIM2 卡通知声音。

SIM1 来电振动 - 可让您设置 SIM1 卡的来电振动类型。

SIM2 来电振动 - 可让您设置 SIM2 卡的来电振动类型。

拨号盘按键音 - 允许您将手机设置为在使用拨号盘拨号时播放音调。

触摸声音 - 允许您将手机设置为在点触按钮、图标和其他可响应点触的屏上项目时播放声音。

屏幕锁定提示音 - 允许您将手机设置为在锁定和解锁屏幕时播放声音。

<显示屏>

亮度 - 调整屏幕亮度。

屏幕待机时间 - 设置屏幕超时的时间。

设置

智能屏幕 - 勾选此选项后可让屏幕在设备检测到您的双眼看着屏幕时始终打开。

自动旋转屏幕 - 设置为在旋转手机时自动切换方向。

字体类型 - 更改字体类型。

字体大小 - 更改显示字体的大小。

<主屏>

设置主题、屏幕点击效果、壁纸、循环滚动屏幕和仅为纵向视图。选择“主页备份与还原”选项。

<锁定屏幕>

您可以设置滑动、人脸解锁、图案、PIN、密码，或将该设置保留为无。

如果启用了图案锁定类型，当您打开手机或唤醒屏幕时，系统将提示您画出解锁图案，才能将屏幕解锁。

壁纸 - 您可以从“图片库”或“壁纸图库”中选择锁定屏幕的墙纸。

时钟小部件与快捷方式 - 在锁定屏幕上自定义时钟和快捷方式。

拥有者信息 - 在锁定屏幕上显示用户信息。

锁定计时器 - 可让您设置屏幕超时后屏幕自动锁定前的时间。

电源按钮立即锁定 - 勾选后，可在按下电源或锁定键后立即锁定屏幕。

<存储>

内部存储器 - 查看内部存储器使用情况。

外置 SD 卡 - 检查 SD 卡总可用空间。点触卸载SD卡以安全移除。

如果要删除 SD 卡上的所有数据，请格式化 SD 卡。

<电量使用情况>

您可以在此处管理电池并勾选各省电选项。您也可以检查电量使用情况。

〈应用程序〉

您可以查看和管理应用程序。

个人

〈帐户与同步〉

允许应用程序在后台同步数据，无论您当前是否正在操作它们。取消选择此设置可节省电池电量并减少（而非消除）数据使用。

〈位置访问〉

访问我的位置 - 如果您选择 Google 定位服务，您的手机将使用 WLAN 和移动网络确定您的大概位置。选择此选项时，您将被询问在提供这些服务时是否允许 Google 使用您的位置。

GPS 卫星 - 如果选择使用 GPS 卫星，您的手机将确定您的位置并精确到街道级别。

WLAN 与移动网络位置 - 让应用程序使用 WLAN 和移动网络等来源中的数据确定您的大概位置。

〈安全性〉

设置 SIM 卡锁定 - 设置 SIM 卡锁定或更改 SIM PIN。

密码键入为可见 - 在您键入时显示隐藏的密码的最后一个字符。

设备管理器 - 查看或停用设备管理器。

未知源 - 将设置默认为非 Market 应用程序的安装。

可信凭据 - 显示可信 CA 证书。

从存储设备上安装 - 选择从 SD 卡安装加密的证书。

清除存储 - 删除所有证书。

设置

<语言和输入设备>

使用“语言和输入”设置为手机上的文本选择语言并配置屏上键盘（包括已添加到词典中的文字）。

<备份与重置>

更改设置以管理您的设置和数据。

备份我的数据 - 设为将您的设置和应用程序数据备份至 Google 服务器。

备份帐户 - 设为备份您的帐户。

自动还原 - 设为在应用程序重新安装在您的设备上时恢复您的设置和应用程序数据。

重设出厂数据 - 将您的设置恢复为出厂默认值，然后删除所有数据。如果以此方式重置手机，首次启动 Android 时，将提示您重新输入相同类型的信息。

系统

<快捷按钮>

选择您想使用的快捷键以快速使用应用程序。

<日期和时间>

使用**日期和时间**设置可设置日期的显示方式。您还可使用这些设置来设置自己的时间和时区，而非从移动网络获取当前时间。

<辅助功能>

使用**辅助功能**可配置您在手机上安装的辅助功能插件。

备注：需要额外的插件。

<PC 连接>

USB 连接类型 - 您可以设置所需模式：**仅充电**、**媒体同步 (MTP)**、**USB 绑定**、**LG 软件或照相机 (PTP)**。

连接时询问 - 手机连接到电脑时询问 USB 连接模式。

PC Suite - 勾选此项以在具有 WLAN 连接时使用 LG PC Suite。
请注意，应通过无线和网络中的 WLAN 连接来连接 LG PC Suite 的 WLAN 网络。

On-Screen Phone - 您可以通过 USB、蓝牙或 WLAN 连接从 PC 显示屏幕和控制手机。

帮助 - 查看帮助信息。

<开发人员选项>

警告，开启开发商选项可能会导致设备出现异常行为。建议仅由高级用户使用开发人员选项。

<关于手机>

查看SIM卡1，SIM卡2信息，查看法律信息，检查手机状态和软件版本。

PC 软件 (LG PC Suite)

“LG PC Suite” PC 软件是一种可帮助您使用 USB 数据线和 WLAN 将设备连接到 PC 的程序。连接后，您可以在 PC 上使用设备的功能。

借助“LG PC Suite” PC 软件，您可以...

- 在 PC 上管理和播放媒体内容（音乐、电影、图片）。
- 将多媒体内容发送到设备。
- 同步设备和 PC 间的数据（日程表、联系人、书签）。
- 备份设备中的应用程序。
- 更新设备中的软件。
- 备份和恢复设备数据。
- 在您的设备上播放 PC 中的多媒体内容。
- 在设备中备份、创建和编辑备忘录。

备注：您可使用应用程序中的“帮助”菜单，查找如何使用“LG PC Suite” PC 软件。

安装“LG PC Suite” PC 软件

可以从 LG 网页下载“LG PC Suite” PC 软件。

- 1 转到 www.lg.com，选择您所在的国家/语言。
- 2 转到 **首页 > 移动设备 > 产品服务 > 服务与支持 > 输入型号名称或数字 > 点击搜索**。
- 3 单击搜索到的型号名 > **下载中的 电脑同步软件 > LG PC Suite**，然后单击**下载**。

“LG PC Suite” PC 软件的系统要求

- 操作系统: Windows XP (Service pack 3) 32 位、Windows Vista、Windows 7、Windows 8
- CPU: 1 GHz 或更高处理器
- 内存: 512 MB 或更高 RAM
- 图形卡: 1024 x 768 分辨率, 32 位色彩或更高
- 硬盘: 500 MB 或更多的可用硬盘空间 (根据要存储数据的容量, 可能需要更多的可用硬盘空间)。
- 所需软件: LG 集成的驱动程序、Windows Media Player 10 或更高版本

备注: LG 集成的 USB 驱动程序

需要使用 LG 集成的 USB 驱动程序才能连接 LG 设备与 PC。

它将在安装“LG PC Suite”PC 软件时自动安装。

将设备与 PC 同步

可以根据便利轻松使用“LG PC Suite”PC 软件同步设备与 PC 中的数据。您可同步日程表、联系人和书签。

步骤如下:

- 1 将设备连接到 PC (使用 USB 数据线或 WLAN 连接)。
- 2 此时将出现 **USB 连接类型**, 然后选择 **LG 软件**。
- 3 连接后, 运行程序, 然后从屏幕左侧的类别中选择设备部分。
- 4 单击**个人信息**进行选择。
- 5 选择要同步内容的复选框, 然后单击**同步**按钮。

备注: 要使用 USB 数据线将手机与 PC 同步, 需要在 PC 上安装 LG PC Suite。
请参阅前几页安装 LG PC Suite。

将旧设备上的联系人移至新设备

- 1 使用 PC 同步程序将联系人作为 CSV 文件从旧设备导出到 PC。
- 2 首先在 PC 上安装“LG PC Suite”。运行程序，并使用 USB 数据线将您的 Android 手机连接到 PC。
- 3 在顶层菜单中，选择**设备 > 导入个人信息 > 导入联系人**。
- 4 此时会出现一个弹出窗口，可供选择文件类型和要导入的文件。
- 5 在弹出窗口中，单击**选择文件**，此时会出现 Windows Explorer。
- 6 在 Windows Explorer 中选择要导入的联系人文件，然后单击**打开**。
- 7 单击**确定**。
- 8 此时会出现一个**字段映射**弹出窗口，可链接至设备中的联系人和新联系人数据。
- 9 如果 PC 联系人和设备联系人中的数据出现冲突，请在 LG PC Suite 中做出必要选择或修改。
- 10 单击**确定**。

手机软件更新

手机软件更新

从互联网的 LG 手机软件更新

有关使用此功能的详细信息，请访问 <http://update.lgmobile.com> 或 <http://www.lg.com/common/index.jsp> → 选择国家/地区和语言。此功能帮助您方便地从互联网将手机固件更新为最新版本，而无需访问服务中心。只有当 LG 为您的设备提供了更新的固件版本时，此功能才可用。

由于手机固件更新要求用户在更新过程期间保持全部注意力，因此，在继续执行操作之前，请确保留意每一个步骤中出现的所有说明和提示。请注意，在升级过程中移除 USB 数据线或取出电池将严重损坏您的手机。

备注：LG 保留根据自行判断决定固件更新仅可用于指定型号的权利，不保证所提供的固件更新版本可供所有手机型号使用。

通过空中下载 (OTA) 的 LG 手机软件更新

此功能使您可以通过 OTA 方便地将手机的软件更新为较新的版本。只有当 LG 为您的设备提供了更新的固件版本时，此功能才可用。

首先，您可以在手机上检查软件版本：**设置 > 关于手机 > 常用 > 软件更新 > 现在检查更新**。

您还可以将更新延迟 1 小时、4 小时、8 小时或 1 天。在这种情况下，应用程序将在更新时间到达时通知您进行更新。您也可以手动重新设定更新。

备注：手机内存中的您的个人数据（包括有关您 Google 帐户、其他任何帐户、您的系统和应用程序数据及设置、下载的任何应用程序和 DRM 许可信息）可能会在手机软件的更新过程中遗失。因此，LG 建议您在更新手机软件之前，先备份个人数据。对于任何个人数据的遗失，LG 概不负责。

备注：此功能取决于网络服务提供商、所在区域或国家/地区。

关于本用户指南

关于本用户指南

- 使用设备前，请仔细阅读本手册。阅读本手册后，您可安全无误地使用手机。
- 本指南手册中提供的一些图像和抓拍图片可能会在您的手机上显示不同。
- 您的内容可能与最终产品或者服务提供商或运营商提供的软件有所不同。内容如有更改，如不另行通知。要获取本手册的最新版本，请访问 LG 网站 www.lg.com。
- 您手机的应用程序及其功能可能因国家/地区、区域或硬件规格而有所不同。因使用 LG 之外的提供商开发的应用程序而导致任何性能问题，LG 概不负责。
- 因编辑已编辑好的注册表设置或修改操作系统软件而导致性能或不兼容问题，LG 概不负责。一旦尝试自定义操作系统，即可能导致设备或设备的应用程序无法正常运作。
- 与您的设备一同提供的软件、音频、墙纸、图像及其它媒体均经过许可，可有限使用。如果您将这些材料抽取一部分或整体用于商业或其他用途，您可能会侵犯版权法。此时用户会因非法使用媒体而承担相应的全部法律责任。
- 使用信息、上传和下载、自动同步或使用位置服务等数据服务可能需要支付附加费用。为避免费用增多，请选择一项适合您自身需求的数据计划。联系您的服务提供商以获取更多详细信息。

商标

- LG 和 LG 徽标是 LG Electronics 的注册商标。
- 所有其他商标和版权是其各自所有者的财产。

DivX 移动 **DIVX**

关于 DIVX 视频：DivX® 是由 DivX, LLC (Rovi Corporation 的子公司) 开发的一种数码视频格式。本手机是播放 DivX 视频的 DivX Certified® 官方设备。有关详细信息以及要获取将文件转换为 DivX 格式的工具，请访问 divx.com。

关于 DIVX VIDEO-ON-DEMAND：要播放购买的 DivX Video-on-Demand (VOD) 电影，必须先注册此 DivX Certified® 设备。要获取您的注册码，请在设备安装目录下找到 DivX VOD 部分。转到 vod.divx.com 以获取有关如何完成注册的详细信息。

DivX Certified® 可播放高达 640x480 的 DivX® 视频，包括额外付费内容。May play DivX® 视频分辨率高达 864x480。DivX®、DivX Certified® 和相关的徽标是 Rovi Corporation 或其子公司的商标，使用必须经过许可。



由 Dolby Laboratories 许可生产。Dolby 和 double-D 符号是 Dolby Laboratories 的商标。

配件

以下配件适用于 LG-P715。（以下配件为可选配件）。

旅行适配器



电池



立体声耳机



数据线

连接 LG-P715
和 PC。



用户手册

了解更多关于
LG-P715 的信
息。



备注:

- 务必使用正品 LG 配件。
- 否则可能导致保修失效。
- 配件可能根据国家/地区有所不同。

故障排除


本章列出了您在使用手机过程中可能遇到的一些问题。有些问题可能需要您致电服务提供商，但大多数问题您可自行解决。

信息	可能原因	可行解决措施
SIM 卡错误	手机中没有安装 SIM 卡或 SIM 卡插入不正确。	请确保正确插入 SIM 卡。
没有网络连接/网络断开	信号弱，或者您在运营商网络范围之外。 运营商应用了新服务。	将手机移到窗边或开放的区域中。 检查网络运营商覆盖地图。 请与服务提供商联系。
密码不匹配	要更改安全码，您需要在此输入以确认新代码。 两次输入的代码不匹配。	如果忘记密码，请联系您的服务提供商。
不可设置应用程序	服务提供商不支持或需要注册。	请与服务提供商联系。
无法拨打电话	拨号错误 已插入新 SIM 卡。 达到预付费上限。	新网络未获得授权。 查看新的限制。 与服务提供商联系或重新设置 PIN 2 的限制。

故障排除

信息	可能原因	可行解决措施
手机无法打开	按开/关键时间过短。 电池未充满电。 电池触点脏。	请按开/关键至少两秒钟。 为电池充电。检查显示屏上的充电指示灯。 清洁电池触点。
充电错误	电池未充电。	为电池充电。
	外部温度太热或太冷。	确保手机在正常温度下充电。
	触点问题	检查充电器以及到手机的连接。检查电池触点，如果需要，请清洁。
	无电压	将充电器插入其它插座。
	充电器故障	更换充电器。
	错误充电器	请仅使用原装 LG 配件。
	电池故障	替换电池。
不允许输入号码	已打开固定拨号功能。	检查“设置”功能表并关闭该功能。
无法接收/发送短信和图片	内存已满	删除手机中的部分信息。
未打开的文件	不受支持的文件格式	检查支持的文件格式。

信息	可能原因	可行解决措施
存储卡不起作用	仅支持 FAT 16、FAT32 文件格式	通过读卡器检查 SD 卡文件系统，或使用手机格式化 SD 卡。
收到来电时，屏幕未打开。	近程传感器问题	如果使用任何保护带或保护套，请检查其是否盖住近程传感器周围的区域。确保近程传感器周围的区域干净。
无声音	振动模式	检查声音菜单的设置状态以确保您不处于振动或静音模式下。
挂机或死机	间歇性软件问题	卸下电池，将它再次插入并将手机开机。 尝试通过网站执行软件更新。

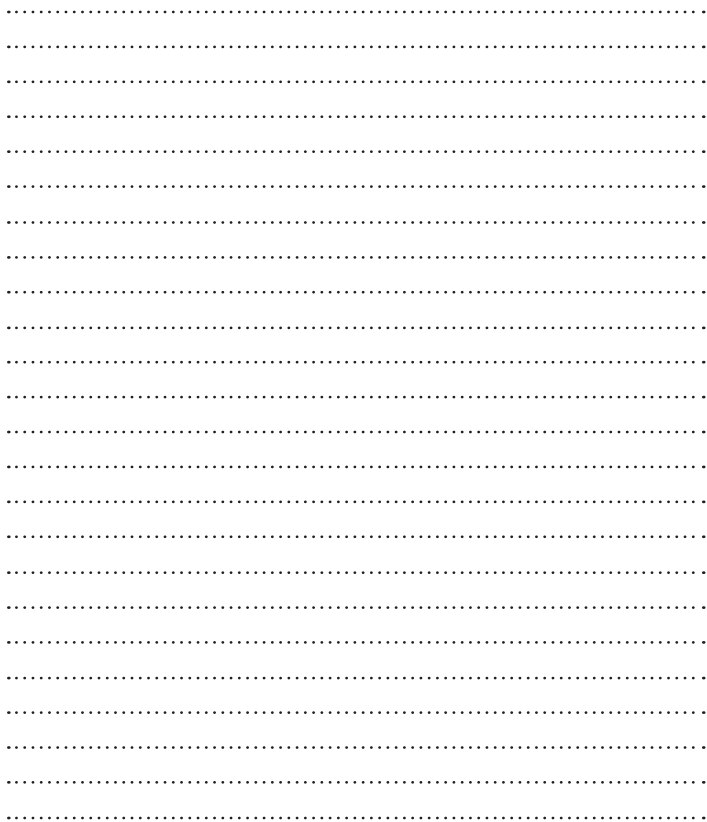



ENGLISH

User Guide

- Screen displays and illustrations may differ from those you see on actual phone.
- Some of the contents of this guide may not apply to your phone, depending on the software and your service provider. All information in this document is subject to change without notice.
- This handset is not suitable for people who have a visual impairment due to the touch screen keyboard.
- Copyright ©2013 LG Electronics, Inc. All rights reserved. LG and the LG logo are registered trademarks of LG Group and its related entities. All other trademarks are the property of their respective owners.
- Google™, Google Maps™, Gmail™, YouTube™, Google Talk™ and Play Store™ are trademarks of Google, Inc.



Table of contents

Guidelines for safe and efficient use	5	Using the Wi-Fi Direct	34
Getting to know your phone	12	Enabling Wi-Fi Direct to share through SmartShare	35
Device components	17	Using SmartShare.....	36
Installing the SIM card and battery.....	19	Calls	39
Charging the phone	21	Making a call	39
Using the memory card.....	21	Calling your contacts	39
Locking and unlocking the screen.....	23	Answering and rejecting a call	39
Secure your lock screen	23	Adjusting call volume.....	40
Your Home screen	24	Making a second call.....	40
Touch screen tips	24	Viewing your call logs	40
Home screen	24	Call settings.....	41
Customising the Home screen	25	Contacts.....	43
Returning to recently-used applications.....	26	Searching for a contact.....	43
Notification drawer	26	Adding a new contact	43
Quick Settings	26	Favourite contacts	43
Viewing the status bar	27	Messaging.....	45
On-screen keyboard	28	Sending a message	45
Entering accented letters	29	Threaded box	46
Google account setup	30	Using Smilies	46
Connecting to Networks and Devices	31	Changing your message settings	46
Wi-Fi	31	E-mail	47
Connecting to Wi-Fi networks	31	Managing an email account.....	47
Turning Wi-Fi on and connecting to a Wi-Fi network.....	31	Email account screen	47
Bluetooth.....	32	Working with account folders.....	48
Sharing your phone's data connection ...	33	Composing and sending email	48
To rename or secure your portable hotspot.....	34	Camera	49
		Getting to know the viewfinder	49

Taking a quick photo.....	50	On-Screen Phone	63
Once you've taken the photo.....	50	On-Screen Phone icons.....	63
Using the advanced settings.....	50	On-Screen Phone features	63
Video camera	53	How to install On-Screen Phone on your PC	64
Getting to know the viewfinder	53	Utilities	65
Shooting a quick video.....	54	QuickMemo	65
After shooting a video.....	54	Setting your alarm	66
Using the advanced settings.....	55	Using your calculator	66
Adjusting the volume when viewing a video	55	Adding an event to your calendar.....	66
Multimedia	56	Polaris Viewer 4	67
Gallery.....	56	QuickTranslator	67
Viewing pictures	56	The Web	69
Playing videos	56	Internet.....	69
Deleting photos/videos.....	56	Using the Web toolbar	69
Setting as wallpaper	57	Viewing webpages.....	69
Videos	57	Opening a page	70
Playing a video	57	Searching the web by voice	70
Music	58	Bookmarks	70
FM Radio	60	History	70
LG SmartWorld	61	Chrome	71
How to Get to LG SmartWorld from Your Phone.....	61	Viewing webpages.....	71
How to use LG SmartWorld	61	Opening a page	71
		Searching the web by voice	71
		Syncing with other devices	71

Table of contents

Settings	72
Accessing the Settings menu.....	72
WIRELESS & NETWORKS	72
DEVICE	73
PERSONAL.....	75
SYSTEM.....	76
PC software (LG PC Suite)	78
Phone software update.....	81
Phone software update	81
About this user guide	83
About this user guide.....	83
Trademarks	83
DivX Mobile	84
Accessories	85
Troubleshooting	86

Guidelines for safe and efficient use

Please read these simple guidelines. Not following these guidelines may be dangerous or illegal.

Exposure to radio frequency energy

Radio wave exposure and Specific Absorption Rate (SAR) information.

This mobile phone model LG-P715 has been designed to comply with applicable safety requirements for exposure to radio waves. These requirements are based on scientific guidelines that include safety margins designed to assure the safety of all persons, regardless of age and health.

- The radio wave exposure guidelines employ a unit of measurement known as the Specific Absorption Rate (SAR). Tests for SAR are conducted using standardised methods with the phone transmitting at its highest certified power level in all used frequency bands.
- While there may be differences between the SAR levels of various LG phone models, they are all designed to meet the relevant guidelines for exposure to radio waves.
- The SAR limit recommended by the International Commission on Non-Ionizing Radiation Protection (ICNIRP) is 2 W/kg averaged over 10g of tissue.
- The highest SAR value for this model phone tested for use at the ear is 0.495 W/kg (10g) and when worn on the body is 0.689 W/Kg (10g).
- This device meets RF exposure guidelines when used either in the normal use position against the ear or when positioned at least 1.5 cm away from the body. When a carry case, belt clip or holder is used for body-worn operation, it should not contain metal and should position the product at least 1.5 cm away from your body. In order to transmit data files or messages, this device requires a quality connection to the network. In some cases, transmission of data files or messages may be delayed until such a connection is available. Ensure the above separation distance instructions are followed until the transmission is completed.

Guidelines for safe and efficient use

Product care and maintenance

WARNING

Only use batteries, chargers and accessories approved for use with this particular phone model. The use of any other types may invalidate any approval or warranty applying to the phone and may be dangerous.

- Do not disassemble this unit. Take it to a qualified service technician when repair work is required.
- Repairs under warranty, at LG's discretion, may include replacement parts or boards that are either new or reconditioned, provided that they have functionality equal to that of the parts being replaced.
- Keep away from electrical appliances such as TVs, radios and personal computers.
- The unit should be kept away from heat sources such as radiators or cookers.
- Do not drop.
- Do not subject this unit to mechanical vibration or shock.
- Switch off the phone in any area where you are required to by special regulations. For example, do not use your phone in hospitals as it may affect sensitive medical equipment.
- Do not handle the phone with wet hands while it is being charged. It may cause an electric shock and can seriously damage your phone.
- Do not charge a handset near flammable material as the handset can become hot and create a fire hazard.
- Use a dry cloth to clean the exterior of the unit (do not use solvents such as benzene, thinner or alcohol).
- Do not charge the phone when it is on soft furnishings.
- The phone should be charged in a well ventilated area.
- Do not subject this unit to excessive smoke or dust.

- Do not keep the phone next to credit cards or transport tickets; it can affect the information on the magnetic strips.
- Do not tap the screen with a sharp object as it may damage the phone.
- Do not expose the phone to liquid or moisture.
- Use accessories like earphones cautiously. Do not touch the antenna unnecessarily.
- Do not use, touch or attempt to remove or fix broken, chipped or cracked glass. Damage to the glass display due to abuse or misuse is not covered under the warranty.
- Your phone is an electronic device that generates heat during normal operation. Extremely prolonged, direct skin contact in the absence of adequate ventilation may result in discomfort or minor burns. Therefore, use care when handling your phone during or immediately after operation.
- If your phone gets wet, immediately unplug it to dry off completely. Do not attempt to accelerate the drying process with an external heating source, such as an oven, microwave or hair dryer.
- The liquid in your wet phone, changes the color of the product label inside your phone. Damage to your device as a result of exposure to liquid is not covered under your warranty.

Efficient phone operation

Electronics devices

All mobile phones may receive interference, which could affect performance.

- Do not use your mobile phone near medical equipment without requesting permission. Avoid placing the phone over pacemakers, for example, in your breast pocket.
- Some hearing aids might be disturbed by mobile phones.
- Minor interference may affect TVs, radios, PCs etc.

Guidelines for safe and efficient use

Road safety

Check the laws and regulations on the use of mobile phones in the area when you drive.

- Do not use a hand-held phone while driving.
- Give full attention to driving.
- Pull off the road and park before making or answering a call if driving conditions so require.
- RF energy may affect some electronic systems in your vehicle such as car stereos and safety equipment.
- When your vehicle is equipped with an air bag, do not obstruct with installed or portable wireless equipment. It can cause the air bag to fail or cause serious injury due to improper performance.
- If you are listening to music whilst out and about, please ensure that the volume is at a reasonable level so that you are aware of your surroundings. This is of particular importance when near roads.

Avoid damage to your hearing



To prevent possible hearing damage, do not listen at high volume levels for long periods.

Damage to your hearing can occur if you are exposed to loud sound for long periods of time. We therefore recommend that you do not turn on or off the handset close to your ear. We also recommend that music and call volumes are set to a reasonable level.

- When using headphones, turn the volume down if you cannot hear the people speaking near you, or if the person sitting next to you can hear what you are listening to.

NOTE: Excessive sound pressure from earphones and headphones can cause hearing loss.

Glass Parts

Some parts of your mobile device are made of glass. This glass could break if your mobile device is dropped on a hard surface or receives a substantial impact. If the glass breaks, do not touch or attempt to remove it. Stop using your mobile device until the glass is replaced by an authorised service provider.

Blasting area

Do not use the phone where blasting is in progress. Observe restrictions and follow any regulations or rules.

Potentially explosive atmospheres

- Do not use your phone at a refueling point.
- Do not use near fuel or chemicals.
- Do not transport or store flammable gas, liquid or explosives in the same compartment of your vehicle as your mobile phone or accessories.

In aircraft

Wireless devices can cause interference in aircraft.

- Turn your mobile phone off before boarding any aircraft.
- Do not use it on the ground without permission from the crew.

Guidelines for safe and efficient use

Children

Keep the phone in a safe place out of the reach of small children. It includes small parts which may cause a choking hazard if detached.

Emergency calls

Emergency calls may not be available on all mobile networks. Therefore you should never depend solely on your phone for emergency calls. Check with your local service provider.

Battery information and care

- You do not need to completely discharge the battery before recharging. Unlike other battery systems, there is no memory effect that could compromise the battery's performance.
- Use only LG batteries and chargers. LG chargers are designed to maximise the battery life.
- Do not disassemble or short-circuit the battery.
- Replace the battery when it no longer provides acceptable performance. The battery pack may be recharged hundreds of times before it needs replacing.
- Recharge the battery if it has not been used for a long time to maximise usability.
- Do not expose the battery charger to direct sunlight or use it in high humidity, such as in the bathroom.
- Do not leave the battery in hot or cold places, as this may deteriorate battery performance.
- There is risk of explosion if the battery is replaced with an incorrect type.
- Dispose of used batteries according to the manufacturer's instructions. Please recycle when possible. Do not dispose as household waste.

- If you need to replace the battery, take it to the nearest authorised LG Electronics service point or dealer for assistance.
- Always unplug the charger from the wall socket after the phone is fully charged to save unnecessary power consumption of the charger.
- Actual battery life will depend on network configuration, product settings, usage patterns, battery and environmental conditions.
- Make sure that no sharp-edged items such as animal's teeth or nails, come into contact with the battery. This could cause a fire.

DECLARATION OF CONFORMITY

Hereby, **LG Electronics** declares that this **LG-P715** product is in compliance with the essential requirements and other relevant provisions of Directive **1999/5/EC**. A copy of the Declaration of Conformity can be found at <http://www.lg.com/global/support/cedoc/RetrieveProductCeDOC.jsp>

Ambient temperatures

Max: +50°C (discharging), +45°C (charging) **Min:** -10°C

Notice: Open Source Software

To obtain the corresponding source code under GPL, LGPL, MPL and other open source licences, please visit <http://opensource.lge.com/>

All referred licence terms, disclaimers and notices are available for download with the source code.

Contact office for compliance of this product :

LG Electronics Inc.

EU Representative, Krijgsman 1,
1186 DM Amstelveen, The Netherlands

Getting to know your phone

Before you start using the phone, please read this!

Please check to see whether any problems you encountered with your phone are described in this section before taking the phone in for service or calling a service representative.

1. Phone memory

When there is less than 10% of space available in your phone memory, your phone cannot receive new messages. You need to check your phone memory and delete some data, such as applications or messages, to make more memory available.

To uninstall applications:

- 1 Touch  > **Apps** tab > **Settings** > **Apps** from the DEVICE category.
- 2 Once all applications appear, scroll to and select the application you want to uninstall.
- 3 Touch **Uninstall**.

2. Optimising battery life

Extend your battery's life between charges by turning off features that you don't need to having running constantly in the background. You can monitor how applications and system resources consume battery power.

Extending your phone's battery life:

- Turn off radio communications when you are not using. If you are not using Wi-Fi, Bluetooth or GPS, turn them off.
- Reduce screen brightness and set a shorter screen timeout.

- Turn off automatic syncing for Gmail, Calendar, Contacts and other applications.
- Some applications you have downloaded may reduce battery power.

To check the battery power level:

- Touch  > **Apps** tab > **Settings** > **About phone** from the SYSTEM > **Common** tab > **Battery**.

The battery status (charging or Not charging) and Battery level (percentage charged).

To monitor and control how battery power is being used:

- Touch  > **Apps** tab > **Settings** > **About phone** from the SYSTEM > **Common** tab > **Battery** > **Battery use**.

Battery use status is include battery usage level display,usage and expected to use time show and view which components and application use the most battery.

3. Using folders

You can combine several app icons in a folder. Drop one app icon over another on a Home screen, and the two icons will be combined.

Getting to know your phone

4. Before installing an open source application and OS



WARNING

If you install and use an OS other than the one provided by the manufacturer it may cause your phone to malfunction. In addition, your phone will no longer be covered by the warranty.



WARNING

To protect your phone and personal data, only download applications from trusted sources, such as Play Store™. If there are improperly installed applications on your phone, it may not work normally or a serious error may occur. You must uninstall those applications and all associated data and settings from the phone.

5. Using the Hard Reset (Factory reset)

If your phone needs to be restored to its original condition, use Hard Reset to reboot your phone.

- 1 When the phone is switched off, press and hold the **Volume down key + QuickButton + Power key**.
- 2 Release the **Power key** when the LG logo appears on the screen.
- 3 Release **Volume down key + QuickButton** when the LG logo disappears. After a while, Android robot will be displayed and recovery will proceed.

Leave your phone for at least a minute while the hard reset is carried out. You will then be able to switch your phone back on.



WARNING

If you perform a Hard Reset, all user applications, user data and DRM licenses will be deleted. Please remember to backup any important data before performing a Hard Reset.

6. Opening and switching applications

Multitasking is easy with Android because you can keep more than one application running at the same time. There is no need to quit an application before opening another. Use and switch between several open applications. Android manages each application, stopping and starting them as needed to ensure that idle applications don't consume resources unnecessarily.

To stop applications:

- 1 Touch  > **Apps** tab > **Settings** > **Apps** from **DEVICE** > **RUNNING**.
- 2 Scroll and touch the desired application and touch **Stop** to stop it.

7. Hold your phone upright

Hold your mobile phone vertically, as you would a regular phone. The LG-P715 has an internal antenna. Be careful not to scratch or damage the back of the phone, as this may affect performance.

While making/receiving calls or sending/receiving data, avoid holding the lower part of the phone where the antenna is located. Doing so may affect call quality.

Getting to know your phone

8. When the screen freezes

If the screen freezes or the phone does not respond when you try to operate it:


Remove the battery, reinsert it, then turn the phone on.

OR

Press and hold the **Power/Lock** key for 10 seconds to turn it off.

If it still does not work, please contact the service centre.

Device components

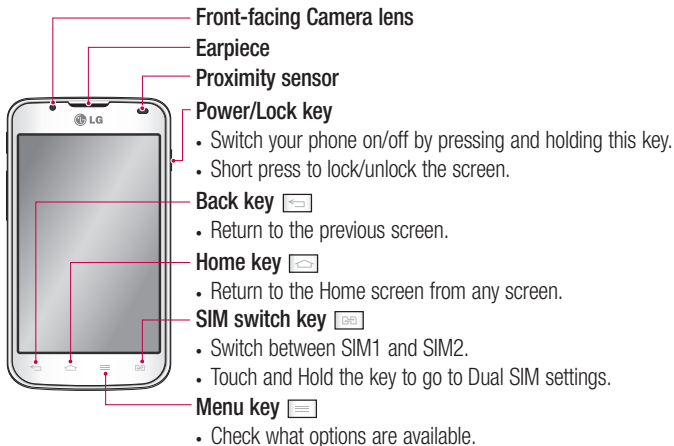

NOTE: Proximity sensor



When receiving and making calls, the proximity sensor automatically turns the backlight off and locks the touch screen by sensing when the phone is near your ear. This extends battery life and prevents you from unintentionally activating the touch screen during calls.



WARNING

Placing a heavy object on the phone or sitting on it can damage the LCD and touch screen functions. Do not cover the LCD proximity sensor with protective film. This could cause the sensor to malfunction.

Getting to know your phone

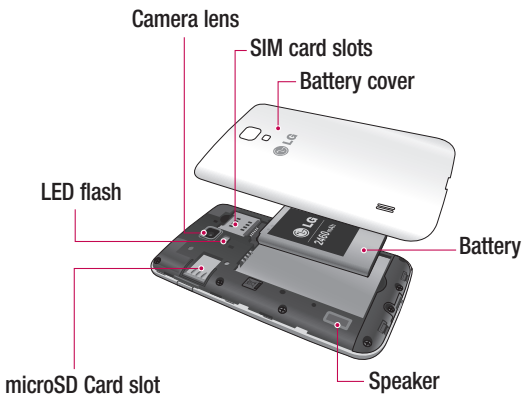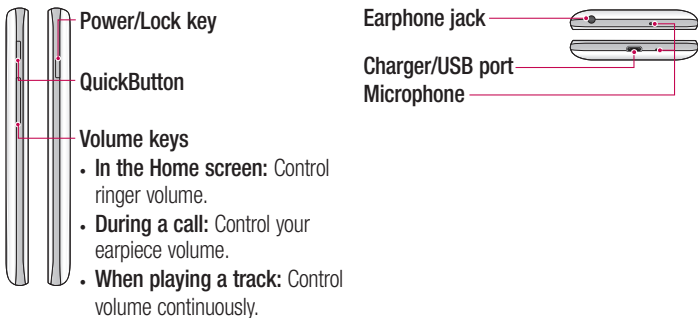


Installing the SIM card and battery

Before you can start exploring your new phone, you'll need to set it up. To insert the SIM card and battery:


- 1 To remove the battery cover, hold the phone firmly in one hand. With your other hand, lift off the battery cover with your thumbnail as shown in figure.

NOTE: Put your thumbnail into the USB port hole and lift off the battery cover.

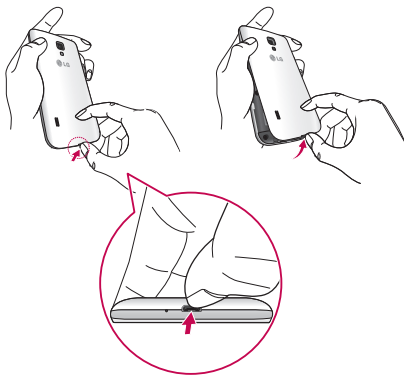

Getting to know your phone

- 2** Slide the SIM cards into its respective slots. Make sure the gold contact area on the SIM card is facing downwards.

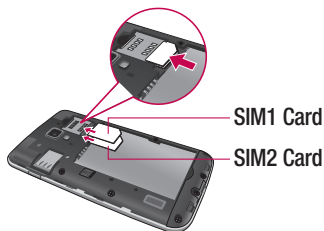

- 3** Insert the battery into place by aligning the gold contacts on the phone and the battery (1) and pressing it down until it clicks into place (2).




- 4** Align the battery cover over the battery compartment and press down each of the 6 points as shown in the figure until it clicks into place.



Charging the phone

The charger connector is at the bottom of the phone. Insert the charger and plug it into an electrical outlet.

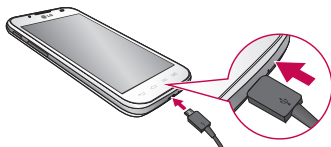

NOTE: The battery must be fully charged initially to improve battery lifetime.

NOTE: Do not open the battery cover during the charging your phone.

WARNING

Use only LG-approved chargers, batteries, and cables. When using unapproved chargers or cables, it may cause battery charging delay or pop up the message regarding charging delay. Or, unapproved chargers or cables can cause the battery to explode or damage the device, which are not covered by the warranty.

Using the memory card

To insert a memory card:

Insert the memory card into the slot. Make sure the gold contact area is facing downwards.

To remove the memory card safely:

Touch  > **Apps** tab > **Settings** > **Storage** from the **DEVICE** > **Unmount SD card** > **OK**.

Getting to know your phone



NOTE: The LG-P715 supports memory cards up to 32 GB.

WARNING

Do not insert or remove the memory card when the phone is ON. Doing so may damage the memory card as well as your phone, and the data stored on the memory card may get corrupted.

To format the memory card:

Your memory card may already be formatted. If it isn't, you must format it before you can use it.

NOTE: All files on your memory card are deleted when it is formatted.

- 1 On the home screen, touch  > **Apps** tab to open the menu.
- 2 Scroll and touch **Settings** > **Storage**.
- 3 Touch **Erase SD card** > **Erase SD card** > **Erase everything**.
- 4 If you have set a pattern lock, input the pattern lock then select **Erase everything**.

NOTE: If there is content on your memory card, the folder structure may be different after formatting as all the files will be deleted.

Locking and unlocking the screen

If you do not use the phone for a while, the screen is turned off and locked automatically. This helps to prevent accidental touches and saves battery power. When you are not using the LG-P715, press the **Power/Lock key** to lock your phone.

Secure your lock screen

You can lock your screen so that only you can unlock it to access your phone.

To set an Unlock Pattern, PIN or Password for the first time:

- 1 Touch  > **Apps** tab > **Settings** > **Lock screen** > **Select screen lock**.
- 2 Choose from **None**, **Swipe**, **Face Unlock**, **Pattern**, **PIN**, or **Password**.
- 3 Enter the desired information.

NOTE: Precautions to take when using pattern lock

It is very important to remember the unlock pattern you set. You will not be able to access your phone if you use an incorrect pattern 5 times. You have 5 opportunities to enter your unlock pattern, PIN or password. If you have used all 5 opportunities, you can try again after 30 seconds.

When you cannot recall your unlock pattern:

If you logged in to your Google account on the phone but failed to enter the correct pattern 5 times, tap the **Forgot pattern?** button. You are then required to log in with your Google account to unlock your phone.

If you have not created a Google account on the phone or you forgot it, you have to perform a hard reset.

Your Home screen

Touch screen tips

Here are some tips on how to navigate around your phone.

Touch – To choose a menu/option or open an application, touch it.

Touch and hold – To open an options menu or grab an object you want to move, touch and hold it.

Drag – To scroll through a list or move slowly, drag across the touch screen.

Swipe or slide – To swipe or slide, quickly move your finger across the surface of the screen, without pausing when you first touch it (so you don't drag an item instead). For example, you can slide the screen up or down to scroll through a list, or browse through the different Home screens by swiping from left to right (and vice versa).

Double-tap – Double-tap to zoom on a web page or a map. For example, quickly double-tap a section of a web page to adjust that section to fit the width of the screen. You can also double-tap to zoom in and out when using Maps.

Pinch-to-Zoom – Use your index finger and thumb in a pinch or spread motion to zoom in or out when using the Browser, Maps, or browsing pictures.

Rotate the screen – From many applications and menus, the orientation of the screen adjusts to the device's physical orientation.

NOTE:

- To select an item, touch the centre of the icon.
- Do not press too hard; the touch screen is sensitive enough to pick up a light, firm touch.
- Use the tip of your finger to touch the option you want. Be careful not to touch any other keys.

Home screen

Simply swipe your finger to the left or right to view the panels. You can customise each panel with Apps, Downloads, Widgets and wallpapers.

NOTE: Some screen images may be different depending on your phone provider.

On your Home screen, you can view quick keys at the bottom of the screen. Quick keys provide easy, one-touch access to the functions you use the most.



Touch the **Phone** icon to bring up the touch screen dialpad to make a call.



Touch the **Contacts** icon to open your contacts.



Touch the **Messaging** icon to access the messaging menu. This is where you can create a new message.



Touch the **Apps** icon at the bottom of the screen. You can then view all your installed applications. To open any application, simply touch the icon in the applications list.

Customising the Home screen

You can customise your Home screen by adding Apps, Downloads, Widgets or Wallpapers. For more convenience using your phone, add your favourite widgets to the Home screen.

To add items on your Home screen:

- 1 Touch and hold the empty part of the Home screen.
- 2 In the Add Mode menu, select items you want to add. You will then see added items on the Home screen.
- 3 Drag it to the location you want and lift your finger.

To remove an item from the Home screen:

- **Home screen** > touch and hold the icon you want to remove > drag it to .

TIP! To add an application icon to the Home screen from the Applications menu, touch and hold the application you want to add.

Your Home screen


Returning to recently-used applications

- 1 Touch and hold the **Home** key. The screen displays a pop-up with icons of applications you used recently.
- 2 Touch an icon to open the application. Or touch the **Back** key to return to your current application.

Notification drawer

The notification drawer runs across the top of your screen.

Touch and slide the notification drawer down with your finger.

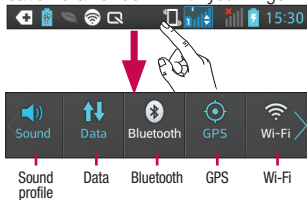

Below is a table explaining the meaning of icons you're likely to see in the status bar. The Notifications Panel displays all your notifications along with the Quick Settings at the top.

Quick Settings

Swipe the Quick Settings bar left or right to see more keys.

Touch > to manage your Quick Settings. Here you can list below items on the notification panel including QuickMemo, Sound, Data, Bluetooth, GPS, Wi-Fi, Rotation, Sync, Hotspot, Power saver, Airplane or Edit.

Viewing the status bar

The status bar uses different icons to display phone information such as signal strength, new messages, battery life, active Bluetooth and data connections.



Icon	Description
	No SIM card
	No signal
	Airplane mode
	Connected to a Wi-Fi network
	Power saver is on
	Wired headset
	Call in progress
	Call hold
	Speakerphone
	Phone microphone is muted
	Missed call
	Bluetooth is on

Icon	Description
	System warning
	Alarm is set
	New voicemail
	Ringer is silenced
	Vibrate mode
	Battery fully charged
	Battery is charging
	Phone is connected to PC via USB cable
	Downloading data
	Uploading data
	GPS is acquiring
	Receiving location data from GPS

Your Home screen

	Data is syncing		FM radio turned on in the background
	New Gmail		USB tethering is active
	New Google Talk message		Portable Wi-Fi hotspot is active
	Song is playing		Both USB tethering and portable hotspot are active

On-screen keyboard

You can enter text using the onscreen keyboard. The onscreen keyboard appears automatically on the screen when you need to enter text. To manually display the keyboard, simply touch a text field where you want to enter text.

Using the keypad & entering text

-  Tap once to capitalise the next letter you type. Double-tap for all caps.
-   Tap to switch to the numbers and symbols keyboard. You can also touch and hold this tab to view the Settings menu.
-  Tap to enter a space.
-  Tap to create a new line.
-  Tap to delete the previous character.

Entering accented letters

When you select French or Spanish as the text entry language, you can enter special French or Spanish characters (e.g. "á").

For example, to input "á", touch and hold the "a" key until the zoom-in key grows bigger and displays characters from different languages.

Then select the special character you want.

Google account setup

When you first turn on your phone, you have the opportunity to activate the network, to sign into your Google Account and how you want to use some Google services.

To set up your Google account:

- Sign into a Google Account from the prompted set up screen.

OR

- Touch  > **Apps** tab > select a Google application, such as **Gmail** > select **New** to create a new account.

If you have a Google account, touch **Existing**, enter your email address and password, then touch **Done**.

Once you have set up your Google account on your phone, your phone automatically synchronises with your Google account on the web.

Your contacts, Gmail messages, Calendar events and other information from these applications and services on the web are synchronised with your phone. (This depends on your synchronisation settings.)

After signing in, you can use Gmail™ and take advantage of Google services on your phone.

Connecting to Networks and Devices

Wi-Fi

With Wi-Fi, you can use high-speed Internet access within the coverage of the wireless access point (AP). Enjoy wireless Internet using Wi-Fi, without extra charges.

Connecting to Wi-Fi networks

To use Wi-Fi on your phone, you need to access a wireless access point or "hotspot". Some access points are open and you can simply connect to them. Others are hidden or use security features; you must configure your phone to be able to connect to them. Turn off Wi-Fi when you're not using it to extend the life of your battery.

NOTE: If you are out of the Wi-Fi zone or set Wi-Fi to **OFF**, additional charges may be applied by your mobile operator for mobile data use.

Turning Wi-Fi on and connecting to a Wi-Fi network

- 1 Touch  > **Apps** tab > **Settings** > **Wi-Fi** from the WIRELESS & NETWORKS.
- 2 Set **Wi-Fi** to **ON** to turn it on and start scanning for available Wi-Fi networks.
- 3 Tap Wi-Fi menu again to see a list of active and in-range Wi-Fi networks.
 - Secured networks are indicated by a lock icon
- 4 Touch a network to connect to it.
 - If the network is secured, you are prompted to enter a password or other credentials. (Ask your network administrator for details)
- 5 The status bar displays icons that indicate Wi-Fi status.

Connecting to Networks and Devices

Bluetooth

You can use Bluetooth to send data by running a corresponding application, not from the Bluetooth menu as on most other mobile phones.

NOTE: LG is not responsible for the loss, interception or misuse of data sent or received via the Bluetooth wireless feature.

Always ensure that you share and receive data with devices that are trusted and properly secured. If there are obstacles between the devices, the operating distance may be reduced.

Some devices, especially those that are not tested or approved by Bluetooth SIG, may be incompatible with your device.

Turning on Bluetooth and pairing up your phone with a Bluetooth device

You must pair your device with another device before you connect to it.

- 1 Touch  > **Apps** tab > **Settings** > Set **Bluetooth** to **ON** from the WIRELESS & NETWORKS.
- 2 Tap **Bluetooth** menu again. Make sure the target device is set to be discoverable, then touch **Search for devices** at the bottom of the screen.
- 3 Choose the device you want to pair up with from the list.

Once the pairing is successful, your device will connect to the other device.

NOTE: Some devices, especially headsets or hands-free car kits, may have a fixed Bluetooth PIN, such as 0000. If the other device has a PIN, you will be asked to enter it.

Sending pictures using Bluetooth

- 1 Select a picture from **Gallery** >  > **Bluetooth**.
- 2 Choose the device you want to send data to from the list.

You can send one or multiple contacts, calendar event, or media file from an appropriate application or from **Downloads**.

Receiving a file using Bluetooth

- 1 Touch  > **Apps** tab > **Settings** > **Bluetooth**.
- 2 Touch **Make phone visible** to be visible on other devices.

NOTE: To select the length of time that your device will be visible, touch  > **Visibility timeout**.

- 3 When you receive a File transfer message, touch **Accept**.

Sharing your phone's data connection

USB tethering and portable Wi-Fi hotspot are great features when there are no wireless connections available. You can share your phone's mobile data connection with a single computer via a USB cable (USB tethering). You can also share your phone's data connection with more than a single device at a time by turning your phone into a portable Wi-Fi hotspot.

When your phone is sharing its data connection, an icon appears in the status bar and as an ongoing notification in the notifications drawer.

For the latest information about tethering and portable hotspots, including supported operating systems and other details, visit <http://www.android.com/tether>.

To change Portable Wi-Fi hotspot settings:

- Touch  > **Apps** tab > **Settings** > **More** from the WIRELESS & NETWORKS > **Portable Wi-Fi hotspot** > Choose options that you want to adjust.

TIP! If your computer is running Windows 7 or a recent distribution of some flavours of Linux (such as Ubuntu), you don't usually need to prepare your computer for tethering. But if you're running an earlier version of Windows or another operating system, you may need to prepare your computer to establish a network connection via USB. For the most current information about which operating systems support USB tethering and how to configure them, visit <http://www.android.com/tether>.

Connecting to Networks and Devices

To rename or secure your portable hotspot

You can change the name of your phone's Wi-Fi network name (SSID) and secure its Wi-Fi network.

- 1 On the Home screen, touch  > **Apps** tab > **Settings**
- 2 Touch **More** from the WIRELESS & NETWORKS and select **Portable Wi-Fi hotspot**.
- 3 Ensure **Portable Wi-Fi hotspot** is checked.
- 4 Touch **Set up Wi-Fi hotspot**.
 - The **Set up Wi-Fi hotspot** dialog box will open.
 - You can change the network SSID (name) that other computers see when scanning for Wi-Fi networks.
 - You can also touch the **Security** menu to configure the network with Wi-Fi Protected Access 2 (WPA2) security using a pre-shared key (PSK).
 - If you touch the **WPA2 PSK** security option, a password field is added to the **Set up Wi-Fi hotspot** dialog. If you enter a password, you will need to enter that password when you connect to the phone's hotspot with a computer or other device. You can set **Open** in the **Security** menu to remove security from your Wi-Fi network.
- 5 Touch **Save**.

ATTENTION! If you set the security option as Open, you cannot prevent unauthorised usage of online services by other people and additional charges can be incurred. To avoid unauthorised usage, you are advised to keep the security option active.

Using the Wi-Fi Direct

You can share your music, picture and video content between users who use Android Phones connected via the same Wi-Fi & Wi-Fi Direct network.

Check your Wi-Fi & Wi-Fi Direct network in advance and make sure the users are connected to the same network.

- 1 Touch  > **Apps** tab > **Settings** > **Wi-Fi** from the WIRELESS & NETWORKS.
- 2 Touch the **Menu** key  > **Wi-Fi Direct**.
- 3 Select a device to connect from the scanned device list.
- 4 Touch **OK**.

NOTE: When you start Wi-Fi Direct, Wi-Fi connection will be disconnected.

Enabling Wi-Fi Direct to share through SmartShare

Wi-Fi Direct automatically scans nearby Wi-Fi Direct devices and the searched devices are listed as they are found and you can select a specific device to share multimedia data through Smart Share.

- 1 Touch  > **Apps** tab > **Settings** > **Wi-Fi** from the WIRELESS & NETWORKS.
- 2 Touch the **Menu** key  > **Wi-Fi Direct**.
- 3 Select a device to connect from the scanned device list.

CREATE GROUP – Touch to activate group owner mode, which enables the legacy Wi-Fi devices to connect by scanning your phone. In this case you must enter the password that is set in **Password**.

NOTE: When your phone becomes a group owner, it will consume more battery power than when it is a client. Wi-Fi Direct connection does not provide Internet service. Additional costs may be incurred when connecting and using online services. Check data charges with your network provider.

Connecting to Networks and Devices

Using SmartShare

SmartShare uses DLNA (Digital Living Network Alliance) technology to share digital content through a wireless network.

Both devices must be DLNA certified to support this feature.

To turn SmartShare on and allow sharing contents

- 1 Touch  > **Apps** tab > **SmartShare**
- 2 Touch  and select **Settings**.
- 3 Touch **Discoverable** checkbox to allow your phone to be detected by other devices.
 - Touch **Always accept request** if you would like to automatically accept sharing requests from other devices.
 - Touch **Receive files** if you would like to automatically allow upload files to my phone from other devices.
- 4 Under the Sharing contents section, touch to checkmark the types of content you would like to share. Choose from **Photos**, **Videos** and **Music**.
- 5 **SmartShare** is now activated and ready to share contents.

NOTE: Make sure that the DLNA function of your devices is properly configured (e.g., for TV and PC).

- 1 Touch  > **Apps** tab > **SmartShare**.
- 2 Touch the **To** button  and select the device from the renderer device list.
- 3 Touch the **From** button  and select the device for the remote content library.
- 4 You can browse the content library.
- 5 Touch and hold a content thumbnail and flick it to the top area with your finger or touch the **Menu Key**  > **Play**.

To share content from your phone to your renderer device (e.g. TV)

NOTE: Make sure that your renderer device is properly configured.

- 1 While playing your music using the **Music** application, touch tab  /  /  on the Title area.

 : Need to be connected to a network

 : Select the device on the network

 : Currently, the content is being shared through SmartShare.

- 2 Select the device from renderer lists to play the files.

NOTE: Follow the same steps to use the **Gallery**, **Video Player** or **Polaris Viewer 4** to share content.

NOTICE: Make sure that your device is connected to your home network using Wi-Fi connection to use this application.

Some DLNA enabled devices (e.g. TV) support only the DMP feature of DLNA and will not appear in the renderer device list.

Your device may not be able to play some content.

To download contents from the remote content library

- 1 Touch  > **Apps** tab > **SmartShare**.
- 2 Touch the **To** button  and select the device for the remote content library.
- 3 You can now browse the content library.
- 4 Touch and hold a content thumbnail and then touch **Download**.

NOTICE: A few types of content are not supported.

To upload content from the remote content library

- 1 Touch  > **Apps** tab > **SmartShare**.
- 2 Touch the **From** button  and select **My phone**.

Connecting to Networks and Devices

- 3 You can browse the local content library.
- 4 Touch and hold a content thumbnail and then touch **Upload**.
- 5 Select the device for the remote content library to be uploaded.

NOTICE: Some DLNA enabled devices do not support the DMS upload functionality and will not upload files. A few types of content are not supported.

FileShare

The FileShare application allows you to share multimedia files and documents to other devices via Wi-Fi Direct.

- 1 Touch  > **Apps** tab > **FileShare**.
- 2 Choose the types of content you would like to share. Touch **Images**, **Videos**, **Music** or **Documents**.
- 3 Touch  > in the upper right corner of the screen, then checkmark the file(s) you want to share.
- 4 Touch **Send** to begin scanning for available devices, then select the device you want from the list.

Calls

Making a call

- 1 Touch  to open the keypad.
- 2 Enter the number using the keypad. To delete a digit, touch the .
- 3 Touch  to make a call.
- 4 To end a call, touch the **End** icon .

TIP! To enter "+" to make international calls, touch and hold .

Calling your contacts

- 1 Touch  to open your contacts.
- 2 Scroll through the contact list or enter the first few letters of the contact you want to call by touching **Search contacts**.
- 3 In the list, touch  to make a call.

Answering and rejecting a call

When you receive a call in Lock state, swipe the  in any direction to answer an incoming call.

Swipe the  to decline an incoming call.

Swipe the **Decline with message** icon in any direction from the bottom if you want to send one.

TIP! Decline with message

You can send a message quickly using this function. This is useful if you need to reply the message during a meeting.

Calls

Adjusting call volume

To adjust the in-call volume during a call, use the Volume up and down keys on the left-hand side of the phone.

Making a second call

- 1 During your first call, touch **Menu** key > **Add call** and dial the number. Also, you can go recent dialled list by touching  or can search contacts by touching  and select the number you want to call.
- 2 Touch  to make the call.
- 3 Both calls are displayed on the call screen. Your initial call is locked and put on hold.
- 4 Touch the displayed number to toggle between calls. Or touch  **Merge call** to make a conference call. To end active calls, touch **End** or touch **Home** Key and slide the notification bar down and select **End call** icon .

NOTE: You are charged for each call you make.

Viewing your call logs

On the Home screen, touch  and choose the **Call logs** tab .

View a complete list of all dialled, received and missed voice calls.

TIP! Touch any call log entry to view the date, time and duration of the call.

TIP! Touch the **Menu** key, then touch Delete all to delete all the recorded items.

Call settings

You can configure phone call settings such as call forwarding and other special features offered by your carrier.

1 On the Home screen, touch .

2 Touch **Menu** key.

3 Tap **Call settings** and choose the options that you want to adjust.

4 Tap **SIM1** or **SIM2** to configure the following call options.

Fixed dialing numbers – To turn on and compile a list of numbers that can be called from your phone. You'll need your PIN2, which is available from your operator. Only numbers within the fixed dial list can be called from your phone.

Voicemail – Allows you to select your carrier's voicemail, enter the phone number to use for listening to and managing your voicemail, and configure the notification sound or vibration option.

Call forwarding – Choose whether to divert all calls, when the line is busy, when there is no answer or when you have no signal.

Call barring – Select when you would like calls to be barred. Enter the call barring password. Please check with your network operator about this service.

Call duration – View the duration of calls including last call, dialled calls, received calls and all calls.

Additional settings – This lets you change the following settings:

Caller ID: Choose whether to display your number on an outgoing call.

Call waiting: If call waiting is activated, the handset will notify you of an incoming call while you are on the phone (depending on your network provider).

5 Tap **Common** to configure the following call options.

Call reject – Allows you to set the call reject function and manage the reject list.

Decline with message – When you want to reject a call, you can send a preset message. In this menu, you can add or edit messages to send instead, when you reject a call.

Calls

Connection vibration – Choose whether to set the phone vibrates or not when the other party answers the call.

Privacy keeper – Configure the privacy keeper option.

Power button ends call – Checkmark this option if you want to press the power button to end a call.

Save unknown numbers – Add unknown numbers to contacts after a call.

Contacts

Add contacts to your phone and synchronise them with the contacts in your Google account or other accounts that support contact syncing.

Searching for a contact

In the Home screen

- 1 Touch  to open your contacts.
- 2 Touch **Search contacts** and enter the contact name using the keyboard.

Adding a new contact

- 1 Touch , enter the new contact's number, then touch the **Menu** key. Touch **Add to contacts** > **Create new contact**.
- 2 If you want to add a picture to the new contact, touch the image area. Choose from **Take photo** or **Select from Gallery**.
- 3 Select the contact type by touching .
- 4 Touch a category of contact information and enter the details about your contact.
- 5 Touch **Save**.

Favourite contacts

You can classify frequently called contacts as favourites.

Adding a contact to your favourites

- 1 Touch  to open your contacts.
- 2 Touch a contact to view their details.
- 3 Touch the star to the right corner of the contact's name. The star turns yellow colour and the contact is added to your favourites.

Contacts

Removing a contact from your favourites list

- 1 Touch  to open your contacts.
- 2 Touch the  tab, select **Favourites** at the top of the list and choose a contact to view its details.
- 3 Touch the star to the right corner of the contact's name. The star turns grey color and the contact is removed from your favourites.

Messaging

Your LG-P715 combines SMS and MMS into one intuitive, easy-to-use menu.

Sending a message

- 1 Touch  on the home screen, and touch  to open a blank message.
- 2 Enter a contact name or contact number in the **To** field. As you enter the contact name, matching contacts appear. You can touch a suggested recipient. You can add multiple contacts.

NOTE: You will be charged for a text message for every person you send the message to.

- 3 Touch **Message via SIM1** field and start to compose your message.
- 4 Touch  to open the Options menu. Choose from **Quick message**, **Insert smiley**, **Schedule sending**, **Add subject** and **Discard**.
- 5 Touch **Send** to send your message.
- 6 The message screen opens, with your message after Recipient Name/Number. Responses appear on the screen. As you view and send additional messages, a message thread is created.

 **WARNING:** The 160-character limit may vary from country to country depending on the language and how the SMS is coded.

 **WARNING:** If an image, video or audio file is added to an SMS message, it is automatically converted into an MMS message and you are charged accordingly.

Messaging

Threaded box

Unread messages (SMS, MMS) are located on the top.

And the others exchanged with another party can be displayed in chronological order so that you can conveniently see an overview of your conversation.

Using Smilies

Liven up your messages using Smilies.

When writing a new message, touch the **Menu** key, then choose **Insert smiley**.

Changing your message settings

Your LG-P715 message settings are predefined, so you can send messages immediately. You can change the settings based on your preferences.

- From the home screen, touch  > touch  > **Settings**.

E-mail

You can use the Email application to read emails from services other than Google Mail. The Email application supports the following account types: POP3, IMAP and Exchange. Your service provider or system administrator can provide the account settings you need.

Managing an email account

The first time you open the **E-mail** application, a setup wizard opens to help you to set up an email account.

To add another email account:

- Touch  > **Apps** tab > **E-mail** > touch  > **Accounts** > touch  > **Add account**.

After the initial setup, Email displays the contents of your inbox. If you have added more than one account, you can switch among accounts.

To change an email account's settings:

- Touch  > **Apps** tab > **E-mail** > touch  > **Account settings**.

To delete an email account:

- Touch  > **Apps** tab > **E-mail** > touch  > **Accounts** > touch and hold an account you want to delete > **Remove account**.

Email account screen

You can touch an account to view its Inbox. The account from which you send email by default is indicated with a tick.

 – Touch the folder icon to open the account folders.

Only the most recent emails in your account are downloaded to your phone.

Working with account folders

Each account has an Inbox, Outbox, Sent and Drafts folder. Depending on the features supported by your account's service provider, you may have additional folders.

Composing and sending email

To compose and send an email

- 1 While in the **E-mail** application, touch the .
- 2 Enter an address for the email's intended recipient. As you enter text, matching addresses are offered from your Contacts. Separate multiple addresses with semicolon.
- 3 Add **Cc/Bcc** and add attachment files if required.
- 4 Enter the text of the email.
- 5 Touch the .

If you aren't connected to a network, for example, if you're working in airplane mode, the email that you send are stored in your Outbox folder until you're connected to a network again. If it contains any pending email, the Outbox is displayed on the **Accounts** screen.

TIP! When a new email arrives in the inbox, you will receive a notification by sound or vibration.

Camera

Getting to know the viewfinder



- ❶ **Swap lens** – Allows you to swap between the rear camera lens and the front camera lens.
- ❷ **Cheese shutter** – Allows you to turn on or off the voice shot. When on, you just say "Cheese" to take a photo.
- ❸ **Shot mode** – Choose from **Normal**, **Panorama** or **Continuous shot**.
- ❹ **Flash** – Choose from **Off**, **On**, or **Auto**.
- ❺ **Settings** – Touch this icon to open the Settings menu.
- ❻ **Mode Switch** – Touch this icon to switch between Camera mode and Video mode.
- ❼ **Capture** – Allows you to take a photo.
- ❽ **Gallery** – Touch to view the last photo you captured. This enables you to access your gallery and view saved photos within camera mode.

Camera

Taking a quick photo

- 1 Open the **Camera** application.
- 2 Hold the phone, point the lens towards the subject you want to photograph.
- 3 Touch the screen, a focus box will appear in the viewfinder screen.
- 4 When the focus box turns green, the camera has focused on your subject.
- 5 Click on the  to capture the image.

Once you've taken the photo

Your captured photo will appear on the screen if Auto review is set to On (refer to Using the advanced settings).

Share – Touch to share your photo using **Bluetooth**, **E-mail**, **FileShare**, **Gmail**, **Google+**, **Memo**, **Messaging**, **Picasa** or any other downloaded applications that is supported.

Set as – Touch to use the image as a **Contact photo**, **Home screen wallpaper** or **Lock screen wallpaper**.



– Touch to delete the image.



– Touch to take another photo immediately.



– Touch to view the Gallery of your saved photos.

Using the advanced settings

In the viewfinder, touch  to open all advanced options.



Touch if you want to change the viewfinder menu.



Zoom in or out.



Defines and controls the amount of sunlight entering the photo.

	Selects photo resolution. If you choose high resolution, file size will increase, which means you will be able to store fewer photos in the memory.
	Finds the appropriate color and light settings for the current environment.
	The ISO rating determines the sensitivity of the camera's light sensor. The higher the ISO, the more sensitive the camera. This is useful in darker conditions when you cannot use the flash.
	Improves color quality in various lighting conditions.
	Choose a color tone for your new photo.
	Sets a delay after the capture button is pressed. This is ideal if you want to be in the photo.
	Activate this to use your phone's location-based services. Take pictures wherever you are and tag them with the location. If you upload tagged pictures to a blog that supports geo tagging, you can see the pictures displayed on a map. NOTE: This function is only available when the GPS function is active.
	Selects a shutter sound.
	Automatically shows you the picture you just took.
	Choose where to save your pictures.
	Restore all camera default settings.
	Touch this whenever you want to know how a function works. This icon will provide you with a quick guide.


Camera

TIP!

- When you exit the camera, some settings return to their defaults, such as white balance, color effect, timer and scene mode. Check these before you take your next photo.
- The setting menu is superimposed over the viewfinder, so when you change photo color or quality elements, you will see a preview of the changed image behind the Settings menu.

Video camera

Getting to know the viewfinder

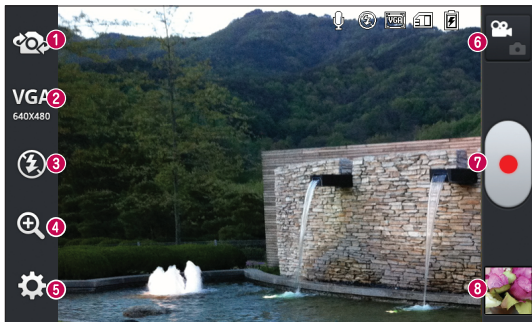

- ❶ **Swap lens** – Allows you to swap between the rear camera lens and the front camera lens.
- ❷ **Video size** – Touch to set the size (in pixels) of the video you record. Select the video size from **TV(720x480)**, **VGA(640x480)**, **MMS(320x240)**, and **MMS(176x144)**.
- ❸ **Flash** – Allows you to turn on the flash when taking a photo in a dark place.
- ❹ **Zoom** – Zoom in or zoom out.
- ❺ **Settings** – Touch this icon to open the settings menu.
- ❻ **Mode switch** – Touch this icon to switch between Camera mode and Video mode.
- ❼ **Record** – Allows you to start recording.
- ❽ **Gallery** – Touch to view the last video you recorded. This enables you to access your gallery and view your saved videos from within video mode.

Video camera

Shooting a quick video

- 1 Touch the **Camera** mode button.
- 2 The video camera viewfinder appears on the screen.
- 3 Holding the phone, point the lens towards the subject you want to capture in your video.
- 4 Touch the Record  button once to start recording.
- 5 A red light appears at the top corner of the viewfinder with a timer showing the length of the video.
- 6 Touch  on the screen to stop recording.

After shooting a video

A still image representing your video will appear on the screen if Auto review is set to On.

Play – Touch to play the video.

Share – Touch to share the video **Bluetooth**, **E-mail**, **FileShare**, **Gmail**, **Google+**, **Messaging**, **Picasa**, **Send to Friends**, **YouTube** or any other downloaded application that is supported.

NOTE: Additional charges may apply when MMS messages are downloaded while roaming.



Touch to delete the video you just made.



– Touch to record another video right away. Your current video will be saved.



– Touch to view the Gallery of your saved videos.

Using the advanced settings

Using the viewfinder, touch  to open all the advanced options.

	Touch if you want to change the viewfinder menu.
	Defines and controls the amount of sunlight entering the video.
	Improves color quality in various lighting conditions.
	Choose a color tone to use for your new video.
	Activate this to use your phone's location-based services.
	Choose Off to record a video without sound.
	Auto review automatically shows you the video you just recorded.
	Choose where to save your videos.
	Restore all video camera default settings.

Adjusting the volume when viewing a video

To adjust the volume of a video while it is playing, use the volume keys on the left-hand side of the phone.

Multimedia

Gallery

You can store multimedia files in internal memory for easy access to all your multimedia files. Use this application to view multimedia files like pictures and videos.

1 Touch  > **Apps** tab > **Gallery**.

Open a list of catalog bars that store your multimedia files.

NOTE:

- Some file formats are not supported, depending on the software installed on the device.
- Some files may not play properly, depending on how they are encoded.

Viewing pictures

Launching Gallery displays your available folders. When another application, such as Email, saves a picture, the download folder is automatically created to contain the picture. Likewise, capturing a screenshot automatically creates the Screenshots folder. Select a folder to open it.

Pictures are displayed by creation date in a folder. Select a picture to view it full screen. Scroll left or right to view the next or previous image.

Zooming in and out

Use one of the following methods to zoom in on an image:

- Double-tap anywhere to zoom in.
- Spread two fingers apart on any place to zoom in. Pinch to zoom out, or double-tap to return.

Playing videos

Video files show the  icon in the preview. Select a video to watch it and tap . The **Videos** application will launch.

Deleting photos/videos

In a folder, tap  and select photos/videos by ticking, and then tap on **Delete**.

Setting as wallpaper

When viewing a photo, touch the **Menu** key  > **Set image as** to set the image as wallpaper or to assign it to a contact.

NOTE:

- Some file formats are not supported, depending on the device software.
- If the file size exceeds the available memory, an error can occur when you open files.

Videos

Your phone has a built-in video player that lets you play all of your favorite videos. To access the video player, touch  > **Apps** tab > **Videos**.

Playing a video

- 1 Touch  > **Apps** tab > **Videos**.
- 2 Select the video you want to play.



Touch to pause video playback.



Touch to resume video playback.



Touch to go 10 seconds forward.



Touch to go 10 seconds backward.



Touch to manage the video volume.



Touch to open the QSlide function.



Touch to change the ratio of the video screen.



Touch to share your video via the SmartShare function.

Multimedia



Touch to lock keys.

To change the volume while watching a video, press the up and down volume keys on the left-hand side of the phone.

Music

Your LG-P715 has a built-in music player that lets you play all your favourite tracks. To access the music player, Touch  > **Apps** tab > **Music**.

Transferring music files using Media sync (MTP)

- 1 Connect the LG-P715 to a PC using a USB cable.
- 2 If you haven't installed LG Android Platform Driver on your PC, you need to change the settings manually. Choose **Settings** > **PC connection** > **USB connection type**, then select **Media sync (MTP)**.
- 3 You can view the mass storage content on your PC and transfer the files.

Playing a song

- 1 In the Home screen, touch  > **Apps** tab > **Music**.
- 2 Touch **Songs**.
- 3 Select the song you want to play.



Touch to find the files with YouTube



Touch to share your music via SmartShare function.



Touch to set shuffle mode



Touch to set repeat mode



Touch to manage the music volume

	Touch to pause playback
	Touch to resume playback
	Touch to skip to the next track on the album or in the, playlist
	Touch to go back to the beginning of the song. Touch twice to return to the previous song
	Touch to set the favourites
	Touch to see the current playlist
	Touch to set Dolby audio effect when connected with a headset jack

To change the volume while listening to music, press the up and down volume keys on the left-hand side of the phone.

Touch and hold any song in the list. The **Play**, **Add to playlist**, **Share**, **Set as ringtone**, **Delete**, **Details** and **Search** options will be displayed.

NOTE:

- Some file formats are not supported, depending on the device software.
- If the file size exceeds the available memory, an error can occur when you open files.

NOTE: Music file copyrights may be protected by international treaties and national copyright laws.

Therefore, it may be necessary to obtain permission or a licence to reproduce or copy music.

In some countries, national laws prohibit private copying of copyrighted material. Before downloading or copying the file, check the national laws of the relevant country concerning the use of such material.

Multimedia

FM Radio

Your LG-P715 has a built-in FM Radio so you can tune in to your favourite stations and listen on the go.

NOTE: You need to use your headphones to listen to the radio. Insert it into the headphone jack.

Searching for stations

You can tune in to radio stations by searching for them manually or automatically. They are then saved to specific channel numbers, so you don't have to find them again. You can store up to 6 channels on your phone.

Tuning in automatically

- 1 In the Home screen, touch  > **Apps** tab > **FM Radio**.
- 2 Touch , then select **Scan**.
- 3 During auto scanning, touch **Cancel** if you want to stop scanning. Only scanned channels are saved before you stop scanning.

NOTE: You can also manually tune in to a station using the on-screen wheel.

TIP! To improve radio reception, extend the headset cord as this also functions as the radio antenna.

If you connect a headset not specifically made for radio reception, radio reception may be poor.

LG SmartWorld

LG SmartWorld offers an assortment of exciting content - games, applications, wallpaper and ringtones - giving LG phone users the chance to enjoy richer "Mobile Life" experiences.

How to Get to LG SmartWorld from Your Phone

- 1 Tap the  icon to access LG SmartWorld.
- 2 Tap Sign in and enter ID/PW for LG SmartWorld. If you have not yet signed up, tap Register and get a LG SmartWorld membership.
- 3 Download the content you want.

NOTE: What if there is no icon?

- 1 Using a mobile Web browser, access LG SmartWorld (www.lgworld.com) and select your country.
- 2 Download LG SmartWorld App.
- 3 Execute and install the downloaded file.
- 4 Access LG SmartWorld by tapping the  icon.

How to use LG SmartWorld

- Participate in monthly LG SmartWorld promotions.

	Search content.
	Find content by category (e.g. Games, Education, Entertainment etc).
	List of downloaded/to-be updated content.

- Try the easy "Menu" buttons to find what you're looking for fast.
Apps for you – Recommended content based on your previous choices.
Settings – Set Profile and Display.
Sign in – Set your ID and Password.

- Try other useful functions as well. (Content Detail screen)

NOTE: LG SmartWorld may not be available from all carriers or in all countries.

On-Screen Phone

On-Screen Phone allows you to view your mobile phone screen from a PC via a USB or Wi-Fi connection. You can also control your mobile phone from your PC, using the mouse or keyboard.

On-Screen Phone icons

	Connects your mobile phone to your PC, or disconnects it.
	Changes the On-Screen Phone preferences.
	Exits the On-Screen Phone programme.
	Maximises the On-Screen Phone window.
	Minimize the On-Screen Phone window.

On-Screen Phone features

- Real-time transfer and control: displays and controls your mobile phone screen when connected to your PC.
- Mouse control: allows you to control your mobile phone by using the mouse to click and drag on your PC screen.
- Text input with keyboard: allows you to compose a text message or note using your computer keyboard.
- File transfer (mobile phone to PC): sends files from your mobile phone (e.g. photos, videos, music and Polaris Office files) to your PC. Simply right-click on the file which you want to send to PC and click on "Save to PC".
- File transfer (PC to mobile phone): sends files from your PC to your mobile phone. Just select the files you wish to transfer and drag and drop them into the On-Screen Phone window. The files sent are stored in internal SD card.
- Real-time event notifications: prompts a pop-up to inform you of any incoming calls or text/multimedia messages.

How to install On-Screen Phone on your PC

- 1 Visit LG Home (www.lg.com) and select a country of your choice.
- 2 Go to **MOBILE > MOBILE PHONES > SUPPORT > Product Support > Enter model number or name > SEARCH** > Select the Model (LG-P715) > Click **OSP** (On-Screen Phone) to download. You can install the On-Screen Phone on your PC.



Utilities

QuickMemo

The **QuickMemo** function allows you to create memos and capture screen shots. Capture screens, draw on them and share them with family and friends with QuickMemo function.



OR



- 1 Enter the **QuickMemo** screen by pressing the QuickButton on the screen you want to capture. Or touch and slide the status bar downwards and touch .
- 2 Select the desired menu option from **Pen type, Colour, Eraser**, and create a memo.
- 3 Touch  in the Edit menu to save the memo with the current screen. To exit QuickMemo function at any time, touch the Back key.

TIP! Touch  to keep the current memo on the screen and use the phone continuously. Tap  to select whether to use the background screen. Tap  to share the memo with others via any of the available applications.

Setting your alarm

- 1 Touch  > **Apps** tab > **Alarm/Clock** > .
- 2 Set the alarm time and any desired options.
 - **Repeat**, **Snooze duration**, **Vibration**, **Alarm sound**, **Alarm volume**, **Auto app starter**, **Puzzle lock**, **Memo**
- 3 Touch **Save**. It will let you know how much time is left before the alarm sounds.

Using your calculator

- 1 Touch  > **Apps** tab > **Calculator**.
- 2 Touch the number keys to enter numbers.
- 3 For simple calculations, touch the function you want (+, -, x or ÷) followed by =.
- 4 For more complex calculations, touch , select the **Advanced panel**, then choose sin, cos, tan, log and so on.

Adding an event to your calendar

- 1 Touch  > **Apps** tab > **Calendar**.
- 2 On the middle of the screen, you can find the different view types of the Calendar (Day, Week, Agenda).
- 3 Tap on the date you want to add event on.
- 4 Drag the view screen upwards and tap on the time slot you want to add event in.
- 5 Touch **Event name** then enter the event name.
- 6 Touch **Location** and enter the location. Check the date and enter the time you want your event to start and finish.
- 7 If you want to add a note to your event, touch **Description** and enter the details.
- 8 If you want to repeat the alarm, set **REPEAT**, and set **REMINDERS**, if necessary.
- 9 Touch **Save** to save the event in the calendar.

Polaris Viewer 4

Polaris Viewer 4 is a professional mobile office solution that lets users conveniently view various types of office documents, including Word, Excel and PowerPoint files, anywhere, anytime, using their mobile devices.

Touch  > **Apps** tab > **Polaris Viewer 4**


Viewing files

Mobile users can now easily view a wide variety of file types, including Microsoft Office documents and Adobe PDF, right on their mobile devices. When viewing documents using Polaris Viewer 4, the objects and layout remain the same as in their original documents.

QuickTranslator

Simply aim the camera of your smartphone at the foreign sentence you want to understand. You can get the real-time translation anywhere and anytime.

You can buy additional dictionaries for offline translation from the Google Play Store.

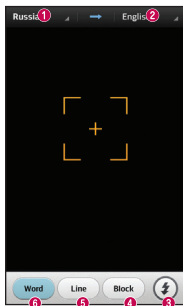

- 1 Home language
- 2 Destination language
- 3 Flash
- 4 Translation of block
- 5 Translation of sentence
- 6 Translation of each word

- 1 Touch  > **Apps** tab > **QuickTranslator**.
- 2 Touch **Word**, **Line** or **Block**.
- 3 Touch and select the desired language.
- 4 Hold the phone toward the subject you want to translate for a few seconds.

NOTE: Only one dictionary is provided free of charge. Additional dictionaries must be purchased. Please select from the list below the dictionary you would like to install as your complimentary dictionary.

NOTE: There may be a difference in the rate of recognition depending on the size, font, color, brightness and angle of the letters that need to be translated.

The Web

Internet

Use this application to browse the Internet. Browser gives you a fast, full-color world of games, music, news, sports, entertainment and much more, right on your mobile phone wherever you are and whatever you enjoy.

NOTE: Additional charges apply when connecting to these services and downloading content. Check data charges with your network provider.

1 Touch  > **Apps** tab > **Internet**.

Using the Web toolbar

Touch and hold the Web toolbar and slide it upwards with your finger to open.

	Touch to go back one page.
	Touch to go forward one page, to the page you connected to after the current one. This is the opposite of what happens when you touch the Back key, which takes you to the previous page.
	Touch to go to the Home page.
	Touch to add a new window.
	Touch to access bookmarks.

Viewing webpages

Touch the address field, enter the web address and touch **Go**.

Opening a page

To go to new page, touch  > 

To go to another webpage, touch , scroll up or down, and touch the page to select it.

Searching the web by voice

Touch the address field, touch , speak a keyword, and then select one of the suggested keywords that appear.

NOTE: This feature may not be available depending on the region or service provider.

Bookmarks

To bookmark the current webpage, touch  > **Save to bookmarks** > **OK**.

To open a bookmarked webpage, touch  and select one.

History

Touch  > **History** to open a webpage from the list of recently-visited webpages. To clear the history, touch Menu key  > **Clear all history**.

The Web

Chrome

Use Chrome to search for information and browse webpages.

1 Touch  > **Apps** tab > **Chrome**.

NOTE: This application may not be available, depending on your region and service provider.

Viewing webpages

Tap the Address field, and then enter a web address or search criteria.

Opening a page

To go to a new page, tap  → + **New tab**.

To go to another webpage, tap , scroll up or down and tap the page to select it.

Searching the web by voice

Tap the address field, tap , speak a keyword and select one of the suggested keywords that appear.

Syncing with other devices

Sync open tabs and bookmarks to use with Chrome on another device when you are logged in with the same Google account.

To view open tabs on other devices, tap **Menu** key  → **Other devices**.

Select a webpage to open.

To view bookmarks, tap  .

Settings

Accessing the Settings menu

In the Home screen, touch  > **Apps** tab > **Settings**.

WIRELESS & NETWORKS

< Dual SIM >

Configure whether to enable or disable SIM cards and data access.

< Wi-Fi >

Turn on Wi-Fi to connect to available Wi-Fi networks.

TIP! How to obtain the MAC address

To set up a connection in some wireless networks with MAC filters, you may need to enter the MAC address of your LG-P715 into the router.

You can find the MAC address in the following user interface: Touch Apps tab > **Settings** > **Wi-Fi** >  > **Advanced** > **MAC address**.

< Bluetooth >

Turns on Bluetooth to connect to Bluetooth devices.

< Data usage >

Displays the data usage and set mobile data usage limit.

< Call >

You can configure phone call settings such as call forwarding and other special features offered by your carrier.

< More.. >

Airplane mode – After switching to Airplane mode mode, all wireless connections are disabled.

Portable Wi-Fi hotspot – You can configure the portable Wi-Fi hotspot settings.

Bluetooth tethering – Allows you to set your phone whether you are sharing the

Settings

Internet connection or not.

VPN – Displays the list of Virtual Private Networks (VPNs) that you've previously configured. Allows you to add different types of VPN.

Mobile networks – Set options for network mode & operators, access point names (APNs).

NOTE: You must set a lock screen PIN or password before you can use credential storage.

DEVICE

< Sound >

Sound profile – You can choose the Sound, Vibrate only or Silent.

Volumes – You can manage the volume of music, video, games and other media, Phone ringtone, notification sound and Touch feedback & system.

Quiet time – Set times to turn off all sounds except alarm and media.

Ringtone with vibration – Vibration feedback for calls and notifications.

SIM1 phone ringtone – Allows you to set the ringtone for incoming calls to SIM1 card.

SIM2 phone ringtone – Allows you to set the ringtone for incoming calls to SIM2 card.

SIM1 notification sound – Allows you to set the notification sound for SIM1 card.

SIM2 notification sound – Allows you to set the notification sound for SIM2 card.

SIM1 incoming call vibration – Allows you to set the vibration type for incoming calls to SIM1 card.

SIM2 incoming call vibration – Allows you to set the vibration type for incoming calls to SIM2 card.

Dial pad touch tones – Allows you to set the phone to play tones when using the dialpad to dial numbers.

Touch sounds – Allows you to set your phone to play a sound when you touch buttons, icons and other onscreen items that react to your touch.

Screen lock sound – Allows you to set your phone to play a sound when locking and unlocking the screen.

< Display >

Brightness – Adjust the screen brightness.

Screen timeout – Set the time for screen timeout.

Smart screen – Checkmark this to keep screen on when device detects your eyes looking at the screen.

Auto-rotate screen – Set to switch orientation automatically when you rotate the phone.

Font type – Change the font type.

Font size – Change the size of the display font.

< Home screen >

Set the **Theme**, **Screen swipe effect**, **Wallpaper**, **Scroll screens circularly** and **Portrait view only**. Select the option to set **Home backup & restore**.

< Lock screen >

Select screen lock – Set an unlock pattern to secure your phone. Opens a set of screens that guide you through drawing a screen unlock pattern. You can set a **Swipe**, **Face Unlock**, **Pattern**, **PIN** instead of a **Password** or leave it as **None**.

When you turn on your phone or wake up the screen, you're asked to draw your unlock pattern to unlock the screen.

Wallpaper – You can select the wallpaper for your lock screen from **Gallery** or **Wallpaper gallery**.

Clocks & shortcuts – Customize clocks and shortcuts on the lock screen.

Owner info – Show owner info on lock screen.

Lock timer – Allows you to set the amount of time before the screen automatically locks after the screen has timed-out.

Power button instantly locks – Checkmark to instantly lock the screen when the **Power/Lock key** is pressed.

Settings

< Storage >

INTERNAL STORAGE – View the internal storage usage.

SD CARD – Check total available SD card space. Touch Unmount SD card for safe removal. Erase SD card if you want to delete all data from the SD card.

< Battery >

Here, you can manage the battery and check the power saving items. Also, you can check the battery use.

< Apps >

You can view and manage the applications.

PERSONAL

< Accounts & sync >

Permits applications to synchronise data in the background, whether or not you are actively working in them. Deselecting this setting can save battery power and lowers (but does not eliminate) data usage.

< Location access >

Access to my location – Turn this on to use information from Wi-Fi and mobile networks to determine your approximate location, used while searching in Google Maps and other applications. When you turn on this option, you're asked whether you consent to sharing your location anonymously with Google's location service.

GPS satellites – If you select GPS satellites, your phone determines your location to street level accuracy.

Wi-Fi & mobile network location – If you select Google's location service, your phone determines your approximate location using Wi-Fi and mobile networks. When you select this option, you're asked whether you consent to allowing Google to use your location when providing these services.

< Security >

Set up SIM card lock – Set up SIM card lock or change the SIM PIN.

Password typing visible – Show password as you type.

Phone administrators – View or deactivate phone administrators.

Unknown sources – Default setting to install non-Play Store applications.

Trusted credentials – Display trusted CA certificates.

Install from storage – Choose to install encrypted certificates from your SD card.

Clear credentials – Remove all certificates.

< Language & input >

Use the Language & input settings to select the language for the text on your phone and for configuring the on-screen keyboard, including words you've added to its dictionary.

< Backup & reset >

Change the settings for managing your settings and data.

Backup my data – Set to backup your settings and application data to the Google server.

Backup account – Set to back up your account.

Automatic restore – Set to restore your settings and application data when the applications are reinstalled on your device.

Factory data reset – Reset your settings to the factory default values and delete all your data. If you reset the phone in this way, you are prompted to reenter the same information as when you first started Android.

SYSTEM

< QuickButton >

Select apps you wish to get quick access to using hotkey.

Settings

< Date & time >

Use **Date & time** settings to set how dates are displayed. You can also use these settings to set your own time and time zone rather than obtaining the current time from the mobile network.

< Accessibility >

Use the **Accessibility** settings to configure accessibility plug-ins you have installed on your phone.

NOTE: Requires additional plug-ins.

< PC connection >

USB connection type – You can set the desired mode (**Charge only**, **Media sync (MTP)**, **USB tethering**, **LG software** or **Camera (PTP)**).

Ask on connection – Ask USB connection mode when connecting to a computer.

PC Suite – Checkmark this to use **LG PC Suite** with Wi-Fi connection.

Please note that Wi-Fi network should be connected for LG PC Suite via Wi-Fi connection from the WIRELESS & NETWORKS.

On-Screen Phone – Displaying the screen and controlling the phone from your PC are available via USB, Bluetooth or Wi-Fi connection.

< Developer options >

Keep in mind that turning on these developer settings may result in irregular device behavior. The developer options are recommended only for advanced users.

< About phone >

View SIM1 and SIM2 information and check general status include legal information, phone status and software version etc.

PC software (LG PC Suite)

"LG PC Suite" PC software is a program that helps you connect your device to a PC via a USB cable and Wi-Fi. Once connected, you can use the functions of your device from your PC.

With your "LG PC Suite" PC Software, You Can...

- Manage and play your media contents (music, movie, picture) on your PC.
- Send multimedia contents to your device.
- Synchronizes data (schedules, contacts, bookmarks) in your device and PC.
- Backup the applications in your device.
- Update the softwares in your device.
- Backup and restore the device data.
- Play multimedia contents of your PC from your device.
- Backup and create and edit the memos in your device

NOTE: You can use the Help menu from the application to find out how to use your "LG PC Suite" PC software.

Installing "LG PC Suite" PC Software

"LG PC Suite" PC software can be downloaded from the webpage of LG.

- 1 Go to www.lg.com and select a country of your choice.
- 2 Go to **Mobile Phones > SUPPORT > Product Support > Enter model number or name > SEARCH > LG Mobile Phones > Download** .
- 3 Click **PC Sync > DOWNLOAD**.

PC software (LG PC Suite)

System Requirements for "LG PC Suite" PC software

- OS: Windows XP (Service pack 3) 32bit, Windows Vista, Windows 7, Windows 8
- CPU: 1 GHz or higher processors
- Memory: 512 MB or higher RAMs
- Graphic card: 1024 x 768 resolution, 32 bit color or higher
- HDD: 500 MB or more free hard disk space (More free hard disk space may be needed depending on the volume of data stored.)
- Required software: LG integrated drivers, Windows Media Player 10 or later

NOTE: LG Integrated USB Driver

LG integrated USB driver is required to connect an LG device and PC and installed automatically when you install "LG PC Suite" PC software application.

Synchronizing your Device to a PC

Data from your device and PC can be synchronized easily with "LG PC Suite" PC software for your convenience. Contacts, schedules and bookmarks can be synchronized.

The procedure is as follows:

- 1 Connect your device to PC. (Use a USB cable or Wi-Fi connection.)
- 2 The **USB connection type** will appear, then select **LG software**.
- 3 After connection, run the program and select the device section from the category on the left side of the screen.
- 4 Click **Personal information** to select.
- 5 Select the checkbox of contents to synchronize and click the **Sync** button.

NOTE: To synchronize your phone with your PC using the USB cable, you need to install LG PC Suite onto your PC. Please refer to previous pages to install LG PC Suite.

Moving contacts from your Old Device to your New Device

- 1 Export your contacts as a CSV file from your old device to your PC using a PC sync program.
- 2 Install "LG PC Suite" on the PC first. Run the program and connect your Android mobile phone to the PC using a USB cable.
- 3 On the top menu, select **Device > Import to device > Import contacts**.
- 4 A popup window to select the file type and a file to import will appear.
- 5 On the popup, click the **Select a file** and Windows Explorer will appear.
- 6 Select the contacts file to import in Windows Explorer and click the **Open**.
- 7 Click **OK**.
- 8 A **Field mapping** popup to link the contacts in your device and new contacts data will appear.
- 9 If there is a conflict between the data in your PC contacts and device contacts, make the necessary selections or modifications in LG PC Suite.
- 10 Click **OK**.

Phone software update

Phone software update

LG Mobile phone software update from the Internet

For more information about using this function, please visit <http://update.lgmobile.com> or <http://www.lg.com/common/index.jsp> → select country and language.

This feature allows you to update the firmware on your phone to a newer version conveniently from the Internet without needing to visit a service centre. This feature will only be available if and when LG makes a newer firmware version available for your device.

As the mobile phone firmware update requires the user's full attention for the duration of the update process, please make sure you check all instructions and notes that appear at each step before proceeding. Please note that removing the USB data cable or battery during the upgrade may seriously damage your mobile phone.

NOTE: LG reserves the right to make firmware updates available only for selected models at its own discretion and does not guarantee the availability of the newer version of the firmware for all handset models.

LG Mobile Phone software update via Over-the-Air (OTA)

This feature allows you to update your phone's software to a newer version conveniently via OTA, without connecting with a USB data cable. This feature will only be available if and when LG makes a newer firmware version available for your device.

First, you can check the software version on your mobile phone: **Settings > About phone > Common > Software update > Check now for update.**

You can also delay the update by 1 hour, 4 hours, 8 hours or 1 day. In this case, the application will notify you to update when the time is up. You can also rearrange an update manually.

NOTE: Your personal data from internal phone storage—including information about your Google account and any other accounts, your system/application data and settings, any downloaded applications and your DRM licence—might be lost in the process of updating your phone's software. Therefore, LG recommends that you back up your personal data before updating your phone's software. LG does not take responsibility for any loss of personal data.

NOTE: This feature depends on your network service provider, region and country.

About this user guide

About this user guide

- Before using your device, please carefully read this manual. This will ensure that you use your phone safely and correctly.
- Some of the images and screenshots provided in this guide may appear differently on your phone.
- Your content may differ from the final product or from software supplied by service providers or carriers. This content may be subject to change without prior notice. For the latest version of this manual, please visit the LG website at www.lg.com.
- Your phone's applications and their functions may vary by country, region or hardware specifications. LG cannot be held liable for any performance issues resulting from the use of applications developed by providers other than LG.
- LG cannot be held liable for performance or incompatibility issues resulting from edited registry settings being edited or operating system software being modified. Any attempt to customize your operating system may cause the device or its applications to not work as they should.
- Software, audio, wallpaper, images and other media supplied with your device are licensed for limited use. If you extract and use these materials for commercial or other purposes is, you may be infringing copyright laws. As a user, you are fully are entirely responsible for the illegal use of media.
- Additional charges may be applied for data services, such as messaging, uploading and downloading, auto-syncing or using location services. To avoid additional charges, select a data plan to is suitable for your needs. Contact your service provider to obtain additional details.

Trademarks

- LG and the LG logo are registered trademarks of LG Electronics.
- All other trademarks and copyrights are the property of their respective owners.

DivX Mobile **DIVX**

ABOUT DIVX VIDEO: DivX® is a digital video format created by DivX, LLC, a subsidiary of Rovi Corporation. This is an official DivX Certified® device that plays DivX video. Visit divx.com for more information and software tools to convert your files into DivX videos.

ABOUT DIVX VIDEO-ON-DEMAND: This DivX Certified® device must be registered in order to play purchased DivX Video-on-Demand (VOD) movies. To obtain your registration code, locate the DivX VOD section in your device setup menu. Go to vod.divx.com for more information on how to complete your registration.

DivX Certified® to play DivX® video up to 640x480, including premium content. May play DivX® video up to 864x480. DivX®, DivX Certified® and associated logos are trademarks of Rovi Corporation or its subsidiaries and are used under license.



Manufactured under license from Dolby Laboratories. Dolby and the double-D symbol are trademarks of Dolby Laboratories.

Accessories

These accessories are available for use with the LG-P715. (Items described below may be optional.)

Travel adaptor



Battery



Stereo headset



Data cable

Connect your LG-P715 and PC.



User Guide

Learn more about your LG-P715.



NOTE:

- Always use genuine LG accessories.
- Failure to do this may void your warranty.
- Accessories may vary in different regions.

Troubleshooting

This chapter lists some problems you might encounter when using your phone. Some problems require you to call your service provider, but most are easy to fix yourself.

Message	Possible causes	Possible corrective measures
SIM error	There is no SIM card in the phone or it is inserted incorrectly.	Make sure that the SIM card is correctly inserted.
No network connection/ Losing network	Signal is weak or you're outside the carrier network. Operator applied new services.	Move towards a window or into an open area. Check the network operator coverage map. Contact your service provider.
Codes do not match	To change a security code, you will need to confirm the new code by re-entering it. The two codes you have entered do not match.	If you forget the code, contact your service provider.

Troubleshooting

Message	Possible causes	Possible corrective measures
Any application cannot be set	Not supported by service provider or registration required.	Contact your service provider.
Calls not available	Dialling error New SIM card inserted. Pre-paid charge limit reached.	New network not authorised. Check for new restrictions. Contact service provider or reset limit with PIN2.
Phone cannot be switched on	On/Off key pressed too briefly. Battery is not charged. Battery contacts are dirty.	Press the On/Off key down for at least two seconds. Charge battery. Check charging indicator on the display. Clean the battery contacts.

Message	Possible causes	Possible corrective measures
Charging error	Battery is not charged.	Charge battery.
	Outside temperature is too hot or cold.	Make sure phone is charging at a normal temperature.
	Contact problem	Check the charger and connection to the phone. Check the battery contacts and clean them if necessary.
	No voltage	Plug the charger into a different socket.
	Charger defective	Replace charger.
	Wrong charger	Only use original LG accessories.
	Battery defective	Replace battery.
Number not permitted	The Fixed dialling number function is on.	Check the Settings menu and turn the function off.
Impossible to receive / send SMS & picture	Memory full	Delete some messages from the phone.
Files not opening	Unsupported file format	Check the file formats that can be supported.

Troubleshooting

Message	Possible causes	Possible corrective measures
SD card not working	FAT16, FAT32 file system supported	Check SD card file system via card reader, or format SD card using the phone.
The screen does not turn on when I receive a call.	Proximity sensor problem	If you use any protection tape or case, check to see if it has covered the area around the proximity sensor. Make sure that the area around the proximity sensor is clean.
No sound	Vibration mode	Check the settings status of the sound menu to make sure you are not in vibrate or silent mode.
Hang up or freeze	Intermittent software problem	Remove the battery, insert it again and switch on the phone. Try to perform a software update via the website.



CE 0168